



• (415) 584-6360 • http://www.pumpkininc.com

# Salvo Compiler Reference Manual – CrossWorks for MSP430



created by Andrew E. Kalman on Mar 21, 2003 updated on Apr 29, 2008 All trademarks mentioned herein are properties of their respective companies.



## Introduction

This manual is intended for Salvo users who are targeting TI's MSP430 ultra-low-power single-chip microcontroller with Rowley Associates' (<u>http://www.rowley.co.uk/</u>) CrossWorks for MSP430 C compiler.

### **Related Documents**

The following Salvo documents should be used in conjunction with this manual when building Salvo applications with Rowley Associates' CrossWorks for MSP430 C compiler:

Salvo User Manual

## **Example Projects**

Example Salvo projects for use with Rowley Associates' CrossWorks for MSP430 C compiler and the CrossStudio IDE can be found in the:

```
\Pumpkin\Salvo\Example\MSP430\MSP430x1xx
\Pumpkin\Salvo\Example\MSP430\MSP430x4xx
```

directories of every Salvo for TI's MSP430 distribution.

**Tip** These example projects can be easily modified for any MSP430 device.

### **Features**

Table 1 illustrates important features of Salvo's port to Rowley Associates' CrossWorks for MSP430 C compiler.



General					
Abbreviated as	RA430				
Available distributions	Salvo Lite, LE & Pro for TI's MSP430				
Supported targets	all MSP430 and MSP430X devices				
Header file(s)	salvoportra430.h				
Other target-specific file(s)	salvoportra430.asm				
salv	vocfg.h				
Compiler auto-detected?	yes <sup>1</sup>				
Include target-specific header file	yes, use				
in salvocfg.h?	<pre>#include <msp430.h></msp430.h></pre>				
Lit	praries				
	Lib\RA430-v1				
Located in	(for v1.x compilers)				
	Lib\RA430-v2				
	(for v2.x compilers)				
Contex	t Switching				
Method	function-based via				
	OSDispatch() & OSCtxSw()				
Labels required?	no				
Size of auto variables and	total size must not exceed 255 8-bit				
Tunction parameters in tasks	bytes				
Interrupt letenov in context	enupis				
switcher	0 cycles				
Interrupts in critical sections controlled via	user hooks				
Default behavior in critical sections	see example user hooks				
Debugging					
Source-level debugging with Pro library builds?	yes				
Compiler					
Bitfield packing support?	no				
printf() / %p support?	yes / yes				
va_arg() support?	yes				

Table 1: Features of Salvo port to Rowley Associates' CrossWorks for MSP430 C compiler

### Libraries

#### Nomenclature

The Salvo libraries for Rowley Associates' CrossWorks for MSP430 C compiler follow the naming convention shown in Figure 1.





**Note** Each successive version of Rowley Associates' CrossWorks for MSP430 C compiler *uses different library formats.* Therefore independent sets of Salvo libraries are available for each compiler Table 1, above.

Туре

Salvo Lite distributions contain *freeware* libraries. All other Salvo distributions contain *standard* libraries. See the *Libraries* chapter of the *Salvo User Manual* for more information on library types.

Target

When targeting the MSP430X (e.g. MSP430FG4619) and wishing to use MSP430X extensions (i.e. 20-bit address space, etc.), 430x Salvo libraries must be selected. 430 Salvo libraries should be used on the MSP430 (e.g. MSP430F1611).

### Option

Salvo Pro users can select between two sets of libraries – standard libraries, and standard libraries incorporating source-level debugging information. The latter have been built with Rowley Associates' CrossWorks for MSP430 C compiler 's -g command-line option. This adds source-level debugging information to the libraries, making them ideal for source-level debugging and stepping in the CrossStudio debugger. To use these libraries, simply select one that includes the debugging information (e.g. libsalvolra430it.hza) instead of one without (e.g. libsalvolra430-t.hza) in your CrossStudio project.



### Configuration

Different library configurations are provided for different Salvo distributions and to enable the user to minimize the Salvo kernel's footprint. See the *Libraries* chapter of the *Salvo User Manual* for more information on library configurations.

### **Build Settings**

Salvo's libraries for Rowley Associates' CrossWorks for MSP430 C compiler are built using the default settings outlined in the *Libraries* chapter of the *Salvo User Manual*. Target-specific settings and overrides are listed in Table 2.

Target-specific Settings				
Delay sizes	8 bits			
Idling hook	dummy, can be overridden			
Interrupt hook	disables then restores GIE bit, can be overridden			
Watchdog hook	clears WDT without other changes, can be overridden			
System tick counter	available, 32 bits			
Task priorities	enabled			
Table O. David a string on the second base for Oshar till garden.				

Table 2: Build settings and overrides for Salvo libraries for Rowley Associates' CrossWorks for MSP430 C compiler

**Note** Salvo Lite libraries have precompiled limits for the number of supported tasks, events, etc. Salvo LE and Pro libraries have no such limits. See the *Libraries* chapter of the *Salvo User Manual* for more information.

#### Available Libraries

Salvo Lite for TI's MSP430 contains a single freeware library. Salvo LE for TI's MSP430 adds standard libraries in all configurations. Salvo Pro for TI's MSP430 adds standard libraries in all configurations with debugging information included. Each Salvo for TI's MSP430 distribution contains the Salvo libraries of the lesser distributions beneath it.



### **Target-Specific Salvo Source Files**

The source file salvoportra430.asm is needed for Salvo Pro source-code builds. It automatically detects whether the target is part of the MSP430 or MSP430X architecture.

### salvocfg.h Examples

Below are examples of salvocfg.h project configuration files for various different Salvo distributions and the MSP430F1612.

#### Salvo Lite Library Build

OSUSE_LIBRARY	TRUE
OSLIBRARY_TYPE	OSF
OSLIBRARY_CONFIG	OST
OSTASKS	2
OSEVENTS	4
OSEVENT_FLAGS	0
OSMESSAGE_QUEUES	1
	OSUSE_LIBRARY OSLIBRARY_TYPE OSLIBRARY_CONFIG OSTASKS OSEVENTS OSEVENT_FLAGS OSMESSAGE_QUEUES

Listing 1: Example salvocfg.h for library build using libsalvofra430-t.hza

#### Salvo LE & Pro Library Build

#define	OSUSE_LIBRARY	TRUE
#define	OSLIBRARY_TYPE	OSL
#define	OSLIBRARY_CONFIG	OST
#define	OSTASKS	7
#define	OSEVENTS	13
#define	OSEVENT_FLAGS	3
#define	OSMESSAGE_QUEUES	2

Listing 2: Example salvocfg.h for library build using libsalvolra430-t.hza or libsalvolra430it.hza

#### Salvo Pro Source-Code Build

#define	OSENABLE_IDLING_HOOK	TRUE
#define	OSENABLE_SEMAPHORES	TRUE
#define	OSTASKS	9
#define	OSEVENTS	17
#define	OSEVENT_FLAGS	2
#define	OSMESSAGE_QUEUES	4

Listing 3: Example salvocfg.h for source-code build



### Performance

#### Interrupt Latencies

Since Salvo's context switcher for Rowley Associates' CrossWorks for MSP430 C compiler does not need to control interrupts, Salvo applications can easily be created with zero total interrupt latency for interrupts of interest.

In a properly-configured application, only those interrupts that call Salvo services will experience interrupt latency from Salvo's operations. Users must ensure that these interrupt sources are disabled (and re-enabled) via the user interrupt hooks.

Disabling and re-enabling interrupts globally in the user interrupt hooks (i.e., the default user interrupt hook behavior) is of course permitted, but will result in non-zero interrupt latencies for all interrupt sources, even those that do not call Salvo services. See the target-specific source files of this distribution for examples.

#### **Memory Usage**

Example Application <sup>2</sup>	Program Memory Usage <sup>3</sup>	Data Memory Usage <sup>4</sup>
\MSP430x1xx\\tut5lite	1788	61
\MSP430x1xx\\tut5le	1756	61
\MSP430x1xx\\tut5pro	1964	61

Table 3: ROM and RAM requirements for Salvo applications built with Rowley Associates' CrossWorks for MSP430 C compiler

### **User Hooks**

### **Overriding Default Hooks**

In library builds, users can define new hook functions in their projects and the linker will choose the user function(s) over the default function(s) contained in the Salvo library.

In source-code builds, users can remove the default hook file(s) from the project and substitute their own hook functions.



### Idling

The default idling hook in salvohook\_idle.c is a dummy function, as shown below.

```
void OSIdlingHook ( void )
{
    ;
    ;
}
Listing 4: Default Salvo idling hook for Rowley
Associates' CrossWorks for MSP430 C compiler
```

Users can replace it (e.g. with a directive to put the FM430 to sleep) by building their own version with their application.

#### Interrupt

The default interrupt hooks in salvohook\_interrupt\_RA430\_GIE.c are shown below.<sup>5</sup>

```
static unsigned s;
void OSDisableHook(void)
{
  s = __disable_interrupt();
}
```

```
void OSEnableHook(void)
{
    ___set_interrupt(s);
}
```

Listing 5: Default Salvo interrupt hooks for Rowley Associates' CrossWorks for MSP430 C compiler

These functions clear the GIE bit (i.e. disable global interrupts) across Salvo's critical section, and restore the GIE bit to its precritical-section value thereafter. Interrupts are *not* re-enabled inside of ISRs with these functions, thereby avoiding unnecessary or unwanted interrupt nesting. Therefore these default interrupt hooks are suitable for *all* applications.

For greater runtime performance, users can replace these functions with targeted interrupt-control functions by building their own version with their application. For example, if the Salvo service OSTimer() is the *only* Salvo service called from the foreground (i.e. interrupt) level, *and* it's called (only) via the TimerA0 ISR, then the following functions to disable and re-enable TimerA0's interrupt enable bit are all that is required, e.g.:



```
void OSDisableHook ( void )
{
   TACCTL0 &= ~CCIE;
}
void OSEnableHook ( void )
{
   TACCTL0 |= CCIE;
}
```

#### Listing 6: Example of user interrupt hooks where only TimerA0 ISR calls Salvo services

With the hooks shown in Listing 6, only the TimerA0 interrupt is disabled during Salvo's critical sections. All other interrupts sources (and the GIE bit) are untouched. This allows other interrupts that do not call Salvo services to proceed with *zero interrupt latency* due to Salvo.

**Warning** Not disabling all source of interrupts that call Salvo services during critical sections will cause the Salvo application to fail.

#### Watchdog

The default watchdog hook in <code>salvohook\_wdt\_RA430\_CLRWDT.c</code> is shown below.  $^{6}$ 

```
void OSClrWDTHook ( void )
{
  WDTCTL = (WDTCTL & 0x00FF) | WDTPW | WDTCNTCL;
}
```

Listing 7: Default Salvo watchdog hook for Rowley Associates' CrossWorks for MSP430 C compiler

Users can replace it (e.g. with a dummy function – this would stop Salvo from clearing the watchdog timer and allow the user to clear it elsewhere) by building their own version with their application.



### **Compiler Issues**

#### **Incompatible Optimizations**

#### **Register Allocation**

The Register Allocation property should be set to None in Salvo projects. Otherwise you may encounter problems in tasks that contain multiple switch statements and/or other complex structures.

### **IDE Issues**

#### **Salvo Libraries**

In version 1.4 of the CrossWorks for MSP430 IDE, Salvo libraries are not automatically identified as libraries, and hence their contents are missed by the linker. To rectify this problem,

- Select the library in the Project Explorer
- Right-click to get the Properties window
- Select the Common configuration
- Set the file type of the Salvo library to be Library

<sup>&</sup>lt;sup>1</sup> This is done automatically through the \_\_CROSSWORKS\_MSP430 symbol defined by the compiler.

<sup>&</sup>lt;sup>2</sup> Salvo 4.1.0-rc0 with v1.4 compiler.

 $<sup>\</sup>frac{3}{4}$  In bytes. Salvo code only.

<sup>&</sup>lt;sup>4</sup> In bytes. Salvo objects only.

<sup>&</sup>lt;sup>5</sup> This hook is valid for all MSP430 and MSP430X targets.

<sup>&</sup>lt;sup>6</sup> This hook is valid for MSP430 and MSP430X targets because the watchdog control register is the same for all targets.