

Tablet series security and alarm device

User Manual

(Applied to PX-45B/PS-45B series)

陈列出乎您想像More Than Display



Shenzhen Ring Electronic Technology Co.Ltd., Address: Block 5,Zone 1,Jia de ma ruan industrial park, Pingshan new district,Shenzhen.

Telephone: 0755-89306464 89667005

Fax: 0755-83280153

Website: www.hemsut.com

National uniform service line: 4006-918-022

-. Packing list


- 1. Main unit(1 set)
- 2. Charger(optional)
- 3. Remote control(optional)
- 4. User manual(1 pcs)


二. Specification & parament

- 1. Color: White/Black
- 2. Material: Aluminium-magnesium alloy
- 3. Angle: 25°
- 4. Alarming: Yes
- 5. Charging: Yes, built-in lithium battery
- 6. Alarming sensing head:single contact

- 7. Alarming volumn: 105 decibel
- 8. Battery Capacity: 580MA
- 9. Charging voltage: DC 5V
- 10. Charging current:500MA


三.Description

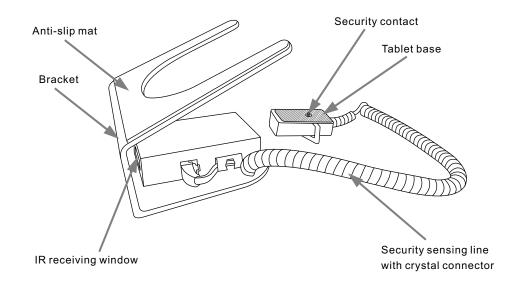

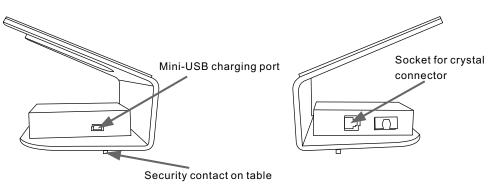

四. Function for Remote control

While pushing the "Unlock" button on the remote control, the red LED of the middle button is on, it means the remote control is workable; or else, it means the remote control needs charging.

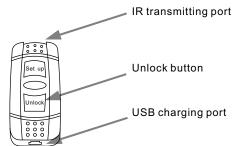


Instruction about charging

battery is low the light on main box

While alarming.

While battery is low,the light on main box turns red.Please charge the main unit via connecting the Mini-USB cable to USB host on the side

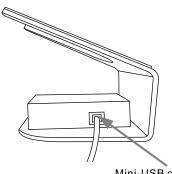


Mini-USB charging port

Instruction about the removal of defense


While alarming, the light on receiving window turns green. Please push and hold "Unlock" button about 1~2 seconds on the remote control toward IR receiving window for removing alarming



 
五.Installation



 1. Take out the main unit from packing box



 2. Keep the table flat and clean, tear off the 3M tape on the bottom




3. Press main unit downward with 5kg strength for fixing well on the table




6. Take out the security Sensing line




5.Push and hold the"Unlock" button on remote control about 1 second for removing alarming

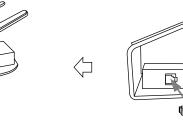


4 . Plug out the crystal connector, meanwhile the main unit alarms automatically

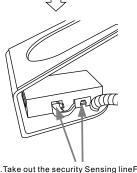

7. Take out the security Sensing lineFix the sensing line near the crystal connector in the clip, and plug the crystal connector into the socket

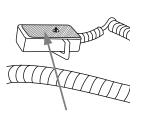


8. Tear off the tape paper on tablet base, and stick on the back of tablet

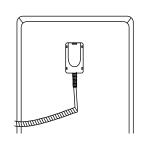

  Press with proper strength the tablet base to go into the working status





10.Put the tablet on the anti-slipe mat of the bracket