

Published by Hutchison 3G UK Limited. All rights in this publication are reserved and no part may be reproduced without the prior written permission of the publisher.

© 2008 Hutchison 3G UK Limited. A Hutchison Whampoa company.

Hutchison 3G UK Limited trading as 3 is a service provider. "AMOI" and "AMOI" is the manufacturer of the 3Skypephone S2 mobile. AMOI has provided the information on its features and use set out in this user guide. © 2008 AMOI.

The contents are believed to be correct at the time of going to press, but any information, products or services mentioned may be modified, supplemented or withdrawn. The provision of any products and services by Hutchison 3G UK Limited is subject to 3's customer terms (available at three.co.uk). The customer terms will take precedence if there is any discrepancy with this publication.

'3' and related images, logos and names referred to in this publication are trademarks of the Hutchison Whampoa group of companies.

This publication is printed on fully recyclable paper.

DD_0508_8005_WPUG DD08178 Jul08



3Skypephone S2 mobile user guide

Helpful information.

Find out more about 3's services

- › Visit three.co.uk
- › For more information on My3 visit three.co.uk/my3
- › Email customer.services@3mail.com or call customer services on **333 (0870 7330 333** from another mobile).

Useful numbers

	Mobile	Other phones
3 customer services	333	0870 7330 333
Mail (voicemail, email and faxmail)	123	07782 333 123
Videomail	123	(select video call option)
Pay As You Go top-up	444	0870 7330 444
Directory enquiries	118 333	118 333
International directory enquiries	118 313	118 313
Disabled and elderly enquiries	195	
Emergency calls	999	999



3Skypephone S2 User Guide



Get online with your mobile.

Who wants to hang around when your mates are waiting online? Just one click and you're straight onto Windows Live Messenger, Facebook, or whichever web hangout you prefer. You'll be using our HSDPA network. And that means extremely fast download speeds.

You can even use your mobile as a plug and play dongle – a high speed wireless modem to get a laptop online when you're out and about.

Not only that but the phone has a 3.2 megapixel camera so if you fancy photo blogging you've got the picture quality you need, and a beautiful big 2.2 inch QVGA screen. Navigation is by a carousel at the bottom of the screen which scrolls through your key applications.

All in all, it's never been easier or quicker to get online from your mobile. Which means you can communicate the way you want to.



Get set up	1
Your mobile explained	2
Set up Skype	3
Planet 3 and the mobile internet	4
Calls	5
Text, multimedia and email messages, and Skype chat	6
Contacts	7
Feeds	8
Media and Game Centre	9
Extra features and security	10
Connectivity settings	11
Troubleshooting, handset safety and maintenance, and index	12

Contents.

1. **Get set up**
 - 1.1 Insert your USIM, battery and memory card, and charge your mobile
 - 1.2 Wizard
 - 1.3 General set up
 - 1.5 Choose a text entry method
 - 1.6 Phone maintenance
2. **Your mobile explained**
 - 2.1 Get to know your mobile
 - 2.3 Your mobile's screen
 - 2.6 Switcher
 - 2.7 The handset's menu options
 - 2.8 Auto-install modem drivers
 - 2.9 Using the modem
3. **Set up Skype**
 - 3.1 Sign into Skype
 - 3.2 Skype settings
 - 3.2 Skype status icons
4. **Planet 3 and the mobile internet**
 - 4.1 The mobile internet
 - 4.2 Find out what you can do on **Planet 3**
 - 4.3 Facebook
5. **Calls**
 - 5.1 Make voice and video calls
 - 5.1 Make a call from Contacts
 - 5.1 Make Skype-to-Skype calls
 - 5.1 Make emergency calls
 - 5.1 Receive calls
 - 5.1 Reject calls
 - 5.1 End a call
 - 5.2 Conference calls
 - 5.2 Make a call from Call log
 - 5.2 Call divert
 - 5.2 Call features
 - 5.2 Show my number
 - 5.3 Video call settings
 - 5.3 Call log
6. **Text, multimedia and email messages, and Skype chat**
 - 6.1 Text messages
 - 6.1 Skype chat
 - 6.1 Multimedia messages
 - 6.1 Take a picture or video and send it
 - 6.2 Set up your email
 - 6.2 Write an email message
 - 6.2 Retrieve an email
 - 6.2 Reply to an email
 - 6.2 Browse into mail
7. **Contacts**
 - 7.1 Add a contact
 - 7.1 Access contacts
 - 7.1 Edit a contact
 - 7.1 Delete a contact
 - 7.1 Add a photo to a contact
 - 7.1 Copy a contact between USIM and mobile
 - 7.1 Copy contacts between USIM and mobile
 - 7.2 Add a Skype contact
 - 7.2 Import your Skype contacts
8. **Feeds**
 - 8.1 Access to feeds
 - 8.1 Add a feed
 - 8.1 View a feed
 - 8.1 Update a feed
 - 8.1 Mark a feed as read
 - 8.2 Edit a feed
 - 8.2 Delete a feed
9. **Media and Game Centre**
 - 9.1 Play music
 - 9.2 Take photos or make video clips
 - 9.2 View your photos or video clips
 - 9.3 Access games and apps
 - 9.3 Download games and apps
10. **Extra features and security**
 - 10.1 Set an alarm
 - 10.1 Calendar
 - 10.1 Calculator
 - 10.2 Activate your USIM PIN
 - 10.2 Change your USIM PIN
 - 10.3 Network settings
 - 10.3 Airplane mode
 - 10.3 Master reset
 - 10.3 Language
11. **Connectivity settings**
 - 11.1 Connect with a Bluetooth headset
 - 11.1 Transfer files from your mobile using Bluetooth
 - 11.2 Transfer files between your mobile and PC
 - 11.2 PC synchronisation
12. **Troubleshooting, handset safety and maintenance, and index**
 - 12.1 Troubleshooting
 - 12.3 Safety precautions
 - 12.8 Index

1 Get set up.

First things first.

It's dead simple to get started, and this section shows you how. Install the USIM and battery, charge the mobile for a few hours, and then adjust the settings so you get the look and the sounds you want.

- 1.1 Insert your USIM, battery and memory card, and charge your mobile
- 1.2 Wizard
- 1.3 General set up
- 1.5 Choose a text entry method
- 1.6 Phone maintenance




Insert your USIM, battery and memory card, and charge your mobile.

Your 3 USIM can only be used in mobiles which are enabled for 3 services.

If you try to use the USIM in other mobiles you could seriously damage the mobile and may be unable to use it, including making emergency calls. If you do that, we are not responsible for any such damage or usage problems.

Illustrations


- 1 Remove battery cover
- 2 Remove battery
- 3 Insert your USIM
- 4 Insert memory card
- 5 6 Insert your battery and battery cover
- 7 Charge your battery

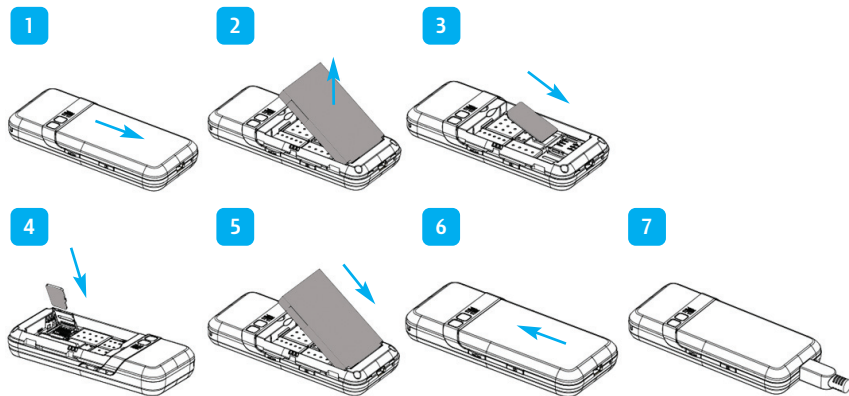

Fully charge the battery before using it for the first time.

Wizard.

The Wizard will appear when you first turn on your mobile to take you through setting the time and date. You need to do this so that your phone will work properly.

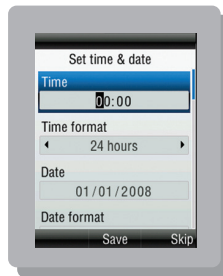


- > Set the current time.
- > Then select your preferred time format.
- > Set the date.
- > Then select your preferred date format.
- > Then press **Save**, or **Skip** if you want to set the time and date later.

General set up.

This section shows you how you can adjust various settings to make your mobile perform exactly as you like. It explains how to set the time and date, sounds and wallpapers, as well as showing the various ways of entering text available.


Power on

- › Press and hold  to switch on your mobile. After powering on, you may need a security check (entering PIN or handset code if set). The first time you switch it on you will be asked if you want to set the time and date. Select **Save** to start it or **Skip** to do it at another time.


Power off

- › Press and hold  to switch off the mobile.


Set the wallpaper

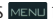- › Press  from the Start Screen and select **Settings > Phone settings > Display > Main screen**.
- › Select **Show wallpaper > Enable**, then press the **left soft key** to select your preferred image > **Select**.
- › You can also select **Show clock > Enable** or select **Show text > Edit > Edit text > Save**.

Set your ringtone

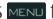

- › Press  from the Start Screen and select **Settings > Profiles**.
- › Select **Options > Edit > OK**.
- › Select **Ringtones & alerts > Change > select from track or artist or album etc > Select**.

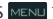Set your screen saver

- › Press  from the Start Screen and select **Settings > Phone settings > Display > Screensaver setting**.
- › Select **Image > select your preferred image > Select**.
- › Or you can select **Date & time > Enable** or select **Off** to turn off the screen saver.

Voicemail and videomail

To set up voicemail and videomail:

- › **Voicemail:** press and hold . Follow the voice prompts to choose a PIN and record your greeting.
- › **Videomail:** press and hold  for a video call. Then follow the voice prompts to record your video greeting.

Choose a text entry method.

While writing a message, entering contact details etc, you will need to select an appropriate text entry method.


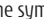
Text entry status icons

T9Abc	Predictive text mode, initial
T9ABC	Predictive text mode, caps lock
T9abc	Predictive text mode, lower case
Abc	Multipress text input mode, initial
ABC	Multipress text input mode, caps lock
abc	Multipress text input mode, lower case
123	Numeric input mode

Changing input modes

The multipress, T9 and numeric input modes can be changed by pressing  within a text box.

- › **ABC Input:** use the keypad to enter letters, numbers, symbols, and other characters. Press the same key repeatedly to cycle through available characters. If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.
- › **T9 Text Input:** you press each key only once, even if the character you want is not the first character on the key. It tries to predict the word.

- › **123 Input:** if you want to input a series of numbers, you need to change to 123 mode or press and hold the particular key for three secs.
- › **Symbol Input:** In abc and 123 mode, short press  and you can access the symbol menu. While in T9 mode, press and hold  for a few seconds to access the symbol menu.
- › Select **Options** › **Dictionary** › **Add to/Go to**, to view the dictionary or add new words to it.
- › Press the # key, then the abbreviation of each language is shown:
Italiano - IT
English - ENG
Francais - FR
Deutsch - DE
Dansk - DA
Svenska - SV

Phone maintenance.

Mobile phones are complex electronic devices and must be looked after carefully. The following advice can help you to look after your mobile and prolong its life.

- › The mobile and its spare parts should be kept out of the reach of children.
- › Keep the mobile dry. Rain, moisture or water will corrupt its electronic circuitry. If your mobile does get wet, remove the battery immediately.
- › Don't put the mobile in dusty places or this will affect the everyday use of the mobile.
- › Don't touch the screen with a sharp object.
- › Don't expose the mobile to high temperatures. High temperatures will shorten the life of electronic devices, destroy the battery and destroy or melt a mobile's plastic shell.
- › Don't expose the mobile to low temperatures. Otherwise, when the temperature rises, moisture will condense in the mobile and could damage the mobile's electronic circuitry.
- › Don't throw, knock or shake the mobile intensely as this could damage the electronic circuitry and structure of the mobile.
- › Please use a clean, soft cloth to clean the camera lens and other delicate surfaces.

2 Your mobile explained.

 
Your mobile can do a lot of things.

This section explains what all the icons and symbols mean, and shows you how to find your way around your mobile.

- 2.1 Get to know your mobile
- 2.3 Your mobile's screen
- 2.6 Switcher
- 2.7 The handset's menu options
- 2.8 Auto-install modem drivers
- 2.9 Using the modem

Get to know your mobile.

Familiarise yourself with its features.

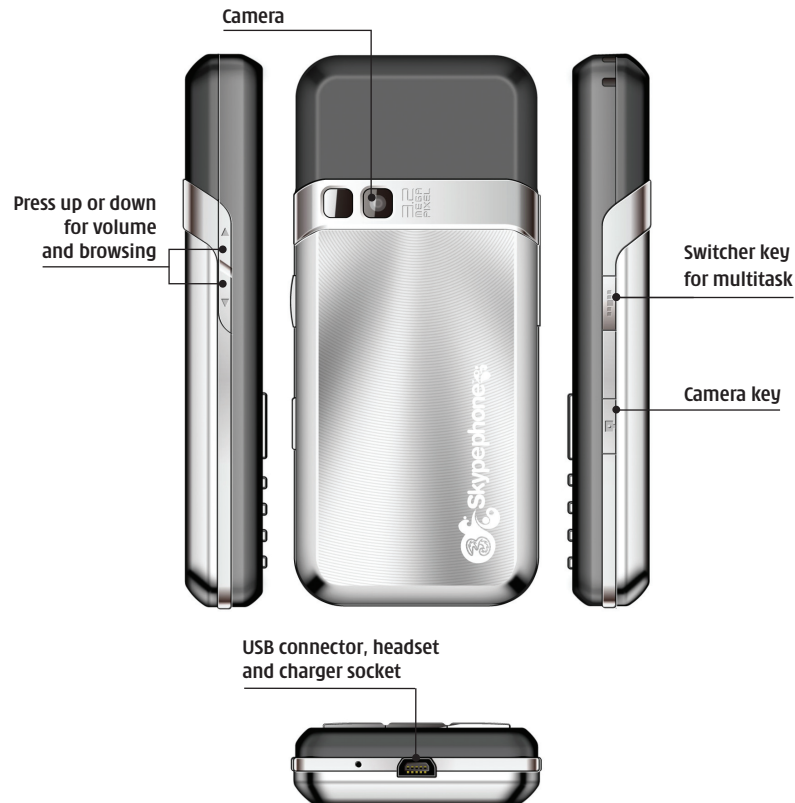

Your mobile's screen.

Your mobile's screen is divided into three basic screens: the Status bar, the Main Screen and the Prompt box.



Status bar

Shows what operations are taking place, Skype status (see page 3.2), and the battery and signal strength. See the next page for status icon details.

Main Screen
















If you are not on the Start Screen, the screen will show the main menu or the submenu related to that particular feature.









Switcher









Quick access to all open applications and easy to close open applications.

The Prompt box

Displays various prompts in the soft key boxes. These are activated by pressing the appropriate left and right soft key under each one.

Icon	Function description
	Signal strength - shows the strength of your mobile's connection with the network  indicates you are outside the video service area
	Battery - shows the level of battery.  shows little battery power left
	Profile - Normal - notifies you of an incoming call or message.  Silent.  Vibrate only.  Loud.  Headset.  In car.  Customised.  Airplane.
	Message - appears when there are new text messages
	New messages - appears when there are new unread text and multimedia messages
	Roaming - appears when you are out of your home area and have registered on a different network

Icon	Function description
	MMS - appears when there are new multimedia messages
	Email - appears when there are new emails
	Push message - appears when there are new push messages
	Sending message
	HSDPA network is available
	EDGE network is available
	GPRS network is available
	Alarm clock - appears when the alarm clock is set


Icon	Function description
	PDP (Packet data protocol) - PDP always on
	Bluetooth activated - this icon indicates Bluetooth is active and connected to another device. If Bluetooth isn't connecting with the other device, this icon will be grey but not blue
	Hide - Bluetooth is hidden from other Bluetooth enabled devices
	Memory full - appears when the mobile memory is nearly full. In this case it may be necessary to release some memory on your mobile
	Calendar - appears on the day when a calendar event exists
	Video call forward
	Voice call forward
	Minimise media player - music is playing in the background

Switcher.

The Switcher shows your most important applications and anything you've got open at the moment. It's a carousel of icons at the bottom of the screen, showing up to twenty icons. Whatever function you're using, you can access the Switcher instantly by pressing the Switcher key on the side of your phone. And when the phone is idle the Switcher shows.

You can choose to add or take away icons from the carousel, so if you've got a favourite website or application you can get to it straight away.

When you're using an application and you call up the Switcher, the home icon appears in the centre. If the phone is idle, the home icon doesn't appear (seeing as you're already there).

- › To add an item to the Switcher customise area, select **Options > Add items to switcher**.
- › To remove item from the Switcher customise area, select **Options > Remove from switcher**.
- › To set Switcher mode to Active one touch Switcher, select **Options > Activate one touch switcher**.
- › To access an open application, use left or right key to select the application and then press .

- › To close a current application select **Options > Close**.
- › To see the help about Switcher select **Options > About Switcher**.



The handset's menu options.

Take a look below to see all of your handset's menu options and what they include. Press **MENU**.



Camera



Media player

Now playing
Artist
Album
Track
Movies
Playlist
Recently played
Recently added
3MusicStore



Games and apps

Homepage
Mshop
Bejeweld
Facebook
PAC-MAN
Skype
Tetris



Web

Enter address
Search
My bookmarks
History
Saved pages
Planet 3



Messages

New
Inbox
Skype chats
Email
Outbox
Drafts
Sent
Template
Settings



My stuff

Music
Pictures
Movies
Others
Memory card
(if memory card inserted)



Call log



Contacts



Feeds



Alarm



Tools

Video camera
Calendar
Calculator
Notepad
PC Suite
World time
Stopwatch
Voice recorder
SIM Application
(if supported)



Settings

Profiles
Phone settings
Connectivity
Calls
Network settings
Security settings
Java settings
Settings master reset

Auto-install modem drivers.

Your mobile gives you a broadband internet connection for your laptop when you're out and about.



It's simple to use as your handset has in-built drivers that will automatically install when you first connect up to your PC.

Just plug your mobile into your laptop and installation will start automatically (if your PC doesn't forbid auto run function). The Mobile Modem software will start up on your laptop screen and you will see a button saying **Connect**. Click this and you'll get online.

The Mobile Modem software also shows you the strength of your mobile signal and how fast your internet connection is.



- Offline
- Weak signal / slow
- Medium signal / medium
- Strong signal / fast

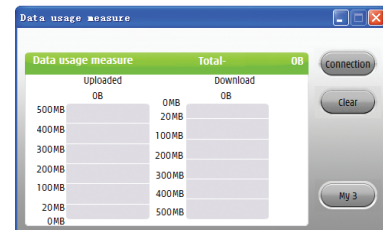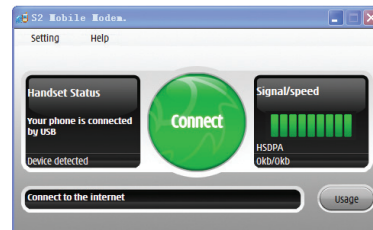

Note

- 1 This mobile modem application can not be supported in Max OS
- 2 This mobile modem application can not support dialling up via bluetooth

Using the modem.

You can use the phone's modem to dial up a network via either USB or Bluetooth.

To dial up via Bluetooth

- Press **MENU**.
- Select **Settings > Connectivity > Mobile Modem connection > Via Bluetooth**.

Note: If Bluetooth won't embed in your PC, you will need to set up the Bluetooth accessory card, card drivers and application software which you will need to purchase. To configure them for the Bluetooth modem, follow the instructions in the software and modem user guide.

Connect your Mac to the internet using your phone

First you will need to install the software. Connect your phone to your Mac using a USB cable. When prompted, double click on the file **S2 USB Driver.pkg**. Then follow the on screen instructions to complete the installation.

Once the driver software has been loaded you may need to change a few settings before you can start using the internet.

Click the phone icon in the top right hand corner of the screen and select **Open Network Preferences**, then click the '+' icon.



In the Interface box select **S2 Proprietary USB Modem** and then click **Advanced**.

Change the Vendor to **AMOI**, the model to **S2** and the APN to **three.co.uk**. Click **OK**.

Change the telephone number to ***99#** and click **Apply**.

You should now be able to connect to the internet by clicking **Connect**.

3 Set up Skype.

With Skype on 3, you can make Skype-to-Skype calls from your mobile. This means you can call people all over the world who use Skype, including other Skype on 3 users.

- 3.1 Sign into Skype
- 3.2 Skype settings
- 3.2 Skype status icons

Sign into Skype.

If you have a Skype account


- › From the Start screen, scroll to **Skype** and press **OK**.
- › Select **Sign in for existing users**, then enter your username and password.
- › Scroll to **Sign me in** and set it as **Automatically** or **Manually**.
- › If you select **Automatically**, you'll automatically sign into Skype each time you turn on your mobile.

You can:

- › Import your Skype contacts to your mobile when you activate your Skype account for the first time.
- › Otherwise to import your Skype contacts - see page 7.2
- › For Skype calls - see page 5.1
- › For Skype chat - see page 6.1
- › Add a Skype contact - see page 7.2

To create a new account

If you don't have a Skype account

- › From the Start screen, scroll to **Skype** and press **OK**.
- › Scroll to **Create account for new users** and press .
- › Read the Skype End User Licence, Terms of Service and Privacy Policy available at www.skype.com/eula, www.skype.com/tos, www.skype.com/privacy or on the CD version of this user guide; select **Accept** and enter a username, password and an email address on the Create account screen.
- › Select **OK** to save the settings.

Skype settings.

Change Skype status

- › From the Start screen, scroll to **Skype** and press **OK**.
- › Select **Options** › **Change status**.

Sign out of Skype

- › From the Start screen, scroll to **Skype** and press **OK**.
- › Select **Options** › **Sign out**.

Change Skype sign in setting

- › From the Start screen, scroll to **Skype** and press **OK**.
- › Select **Options** › **Settings** › **Sign me in Automatically / Manually**.

Skype status icons.

The Skype status icon you select will appear on your mobile's status bar. This can be seen by your Skype buddies.

You can choose to set your own status to:

- ✔ **Online** - others will see you as online (default setting when you sign in)
- ✔ **Away** - others will see you as away
- ✔ **Not Available** - others will see you as not available
- ✔ **Do Not Disturb** - others will see you as do not disturb
- ✔ **Invisible** - others will see you as offline

4 Planet 3 and the mobile internet.

With so many sites designed to work on mobiles, you can now get the best of the web on your mobile. And with Planet 3 you can download music, the latest goals and games plus much more.

- 4.1 The mobile internet
- 4.2 Find out what you can do on Planet 3
- 4.3 Facebook

The mobile internet.

Go to mobile websites

- › Press **MENU** › **Web** › **Google / Yahoo** to enter the website URL and select **Go to**.

Search the internet

- › Press **MENU** › **Web** and select then scroll to **Google / Yahoo** to enter the search word(s) and select **Go to**.

Internet on your mobile really is a useful tool for everyone, you can access all your favourite sites everyday, even when you are out and about away from your computer. Try some of these ideas:

Need train times? Want to change your travel plans? Then check out National Rail, My Trains or AA.com.

Itching to check your webmail? You can get Hotmail, Yahoo! Go and Gmail when you need them.

Looks like rain? Get personalised weather reports on your mobile, everyday.

Taken a wrong turn? Search Google, or even get a map to your destination with Google Maps.

Here are just a few more sites you might want to try out on the move:

YouTube, facebook, BBC, flickr, bebo, skype.



Find out what you can do on Planet 3.

From **Planet 3** you can...

Watch music videos and goals, play games and much more. It's free to browse and we'll tell you how much they cost before you download them.



Email & Social Networks - Meet friends, chat, or check out each other's pics and videos with EyeVibe, Facebook, Windows Live Messenger and more.



Music - Fill your phone with tracks galore at the **3** MusicStore.



News & Info - Keep up with what's going down. Get the news from ITN, the BBC and others, as well as weather, horoscopes, magazines and more.



Games & Puzzles - Whether it's brain (s)training, old arcade favourites or all-action adrenaline fests - we've got the latest releases.



Sport - All the action across all the major sports, with updates from Sky Sports, Football365, the BBC and many others.



Entertainment - Find out what's on at the cinema, or watch your favourite TV from the BBC, ITV, MTV, Kerrang, Kiss and loads of others on your mobile.



Restricted - If you're over 18, this is where you can access adult entertainment, gambling, horror and adult comedy.



Travel & Guides - Where to go to keep an eye on the jams, check your directions, pick the place to meet your mates, or even book a cab or a holiday.



Personalise & Downloads - loads of useful links, to Dialtunes, Realtunes, Pix, all sorts of applications and loads more. Everything you need to help you get your mobile looking and working just the way you like it.



Shopping & Lifestyle - lets you put in or check bids on eBay, order CDs and stuff on Amazon, look for a new job or even a new home, and generally keep your life ticking along.

All this plus news, showbiz, movie trailers, comedy and more through **Planet 3**.

Facebook.

Use your phone to get on Facebook, see what's going on, and make any updates you want.

It's a 'light Facebook' experience with an adapted interface - you can navigate through the important 'hot spots' on the site and then update your status, send messages, respond to requests, and so on.

You can also get a regularly updated summary of all notifications, requests, inbox changes, pokes, walls and news feeds.

To access Facebook, press the Switch key on the right of your mobile and select **Facebook**. You can then log into your existing Facebook account by entering your email address and password, or register for a new account via your phone.

5 Calls.

Right. Let's get some basic functions sorted out.


Making and receiving calls is as easy as you'd expect. But there's also a number of useful 3 services that will make it easier for you to manage your calls. Conference calls, Caller ID, Call Divert... take a look at the list below for the complete picture.

- 5.1 Make voice and video calls
- 5.1 Make a call from Contacts
- 5.1 Make Skype-to-Skype calls
- 5.1 Make emergency calls
- 5.1 Receive calls
- 5.1 Reject calls
- 5.1 End a call
- 5.2 Conference calls
- 5.2 Make a call from Call log
- 5.2 Call divert
- 5.2 Call features
- 5.2 Show my number
- 5.3 Video call settings
- 5.3 Call log



Make voice and video calls.

Make voice and video calls


To make a call from the Start screen:

- › Enter the mobile number.
- › Press  to make a voice call.
- › Select **Options** › **Video call** › **OK** for a video call.

Make a call from Contacts

- › Press  (down).
- › Scroll to your preferred contact and press  for voice call.
- › Scroll to your preferred contact and select **Options** › **Call** › **Video call** › **OK** for a video call.

Make Skype-to-Skype calls

- › From the Start screen, scroll to **Skype** and press **OK** and scroll to your preferred contact.
- › Press  for Skype-to-Skype calls.
- › See page 7.2 for how to import Skype contacts.

Make emergency calls

Enter the appropriate emergency numbers for your location then press .

Receive calls

- › To answer a call press .

Reject calls


- › Press .

End a call



- › Press .

Conference calls

While on a call, you can make another call or receive a second call and talk with up to three people at the same time.

- › Enter the second number and press  to make another call.
- › Press **Options** › **Conference**.

Make a call from Call log

- › Press  from the Start screen and scroll to your preferred contact.
- › Press  for a voice call.

Call divert

Lets you transfer incoming voice and video calls to a specified number. For video calls, it must be to another video mobile number.

- › Press .
- › Select **Settings** › **Calls** › **Call divert**.


Call features

During a call, press **Options** to access the following features:

- › **Hold**: select to place the caller you are talking to on hold. Select **Retrieve** to remove the call from hold.
- › **Mute**: select to turn off the microphone so that you can hear the caller but the caller cannot hear you. Select **Mute off** to switch on the microphone again.
- › **Call log**: select to view your call log list.
- › **Contacts**: select to view your Contacts list.
- › **Messages**: select to access the Messages menu.

Show my number

Enables you to choose whether your mobile number will be hidden or not during a call.

- › Press .
- › Select **Settings** › **Calls** › **Call settings** › **Show my number**.

Make voice and video calls.

Video call settings

Enables you to change settings for video calls.



- › Press **MENU** and select **Settings > Calls > Video call settings**.
- › **My video size:** allows you to set the size for your own video. You can choose either large or small.
- › **My video position:** allows you to set the position of your image on the display. You can choose either left or right.
- › **Hide my video:** allows you to choose whether to display your own video on the screen.
- › **Block my video:** enables you to allow or stop the sending of your own video to the other party.

Call log

To view call log:

- › From the Start screen, press .

Caution:

Press  (left) or  (right) to switch between **All calls / Missed calls / Dialed calls / Answered calls / Most used**.

From the call log you have a number of options available. Choose your preferred contact, and select **Options** to access any of the following:

Options

View detail

Functions

Displays the status, time, name, number and picture (the picture will be displayed only when the number has been saved in the contacts and assigned the picture to the number) of this call.

Call

Makes a voice or video call to the selected number.

Send message

Send a message or an email to the selected number.

Skype

Skype call or Skype chat to the selected number.

Create contact

Creates a new contact, and the contact will be added to the Contact list automatically.

Add to contact

Adds the number to the contact which has been saved in Contact list.

Delete

Deletes the selected contact from the list.

Delete all

Deletes all contacts in current list.

6 Text, multimedia and email messages, and Skype chat.

Send videos, pictures and emails to your friends - and chat to other Skype users.

- 6.1 Text messages
- 6.1 Skype chat
- 6.1 Multimedia messages
- 6.1 Take a picture or video and send it
- 6.2 Set up your email
- 6.2 Write an email message
- 6.2 Retrieve an email
- 6.2 Reply to an email
- 6.2 Browse into mail

Text, multimedia and email messages, and Skype chat.

You can send and receive text, picture, video and voice messages, plus email on your mobile.

Text messages

- › Press **MENU** from the Start screen. Scroll to select **Messages** and select **New > Message**.
- › Enter the mobile number at **To(1)** or press **Contacts** to select preferred contact.
- › Scroll to **Message** and write the message. Press **Send** to send the message.

Skype chat

- › From the Start screen, scroll to **Skype** and press **OK**.
- › Scroll to select the preferred Skype contact, then select **Options > Start chat**.
- › Write your message and select **Send**.

Skype chat is a network dependent feature.

You can view your Skype chat log by pressing **MENU** from the Start screen. Scroll to select **Messages** and select **Skype chats**.

Multimedia messages

- › Press **MENU** from the Start screen. Scroll to select **Messages** and select **New > Message**.
- › Enter the mobile number or email address at **To(1)**. Scroll to **Message** and press **Options** and select **Insert picture / video / sound** and select a file. Press **Send** to send the message.

Take a picture or video and send it

- › From Start screen press **EN** on the right of your mobile.
- › Select **Options > Capture mode** to switch between camera and video mode.
- › Select **Back** and press **EN** to take photo or to start video recording, and press **Stop** (left soft key) to stop video recording.
- › Select **Send** to send the message. Follow the menu.

Set up your email

- › Press **MENU** from the Start screen. Scroll to select **Messages** and select **Settings > Email**.
- › Select **Options > Edit > Account details > OK**.
- › At **Account name** enter your name. Then scroll to **Username** and enter your mobile number starting with 447xxxxxxx but without plus +. Then scroll to **Password**, enter the 4-digit PIN selected for voicemail and press **Save**.

Write an email message

- › Press **MENU** from the Start screen. Scroll to select **Messages** and select **New > Email**.
- › Enter the email address at **To(1)**. Scroll to **Message** and write the message. Press **Send** to send the message.

Retrieve an email

- › Press **MENU** from the Start screen. Scroll to select **Messages** and select **Email**.
- › Select **OK > Retrieve** to retrieve your preferred email.

Reply to an email

- › Press **MENU** from the Start screen. Scroll to select **Messages** and select **Email**.
- › Scroll to the email, and select **Retrieve > View > Options > Reply**.

Browse into mail

- › Press **Planet 3**.
- › Select **Services > Mail**.

From the browser you can send emails and view and manage emails, voicemails and contacts.

7 Contacts.

The place to find all your numbers in one place.


- 7.1 Add a contact
- 7.1 Access contacts
- 7.1 Edit a contact
- 7.1 Delete a contact
- 7.1 Add a photo to a contact
- 7.1 Copy a contact between USIM and mobile
- 7.1 Copy contacts between USIM and mobile
- 7.2 Add a Skype contact
- 7.2 Import your Skype contacts

Contacts.


Add a contact

- › Enter a contact number from the Start screen and select **Options** › **Create contact**.
- › Enter name and other details and select **Save**.



Access contacts

- › Press  (down) from the Start screen.
- › Scroll to the desired contact and select **View**.

Edit a contact


- › Press  (down) from the Start screen.
- › Select **Options** › **Edit** to edit your contact and then press **Save**.

Delete a contact


- › Press  (down) from the start screen.
- › Scroll to the contact and press  › **Yes** to delete the contact.

Add a photo to a contact


You can add a photo to a contact stored on the mobile (not on your USIM card).

- › Press  (down) from the Start screen.
- › Scroll to highlight the desired contact, select **Options** › **Edit**.
- › Scroll to **Picture** › **Options** › **From pictures** and select your preferred image or **Picture** › **Options** › **New photo** to take a photo. Press **OK** to save the setting.

Copy a contact between USIM and mobile

- › Press  (down) from the Start screen.
- › Scroll to the desired contact and select **Options** › **Move contacts** › **Copy to your USIM** / **Copy to your phone**.

Copy contacts between USIM and mobile


- › Press  (down) from the Start screen.
- › Select **Options** › **Mark** › **Mark** › **Mark**.
- › Scroll to select the desired contact(s) › **Options** › **Move contacts** › **Copy to your USIM** / **Copy to your phone**.

Add a Skype contact

- › From the Start screen, scroll to **Skype** and press **OK**.
- › Select **Options** › **Add a contact** to enter the contact's Skype name and select **Save**. You'll also have the option to save the Skype contact in your phone book.

Import your Skype contacts

You can save your Skype contacts onto your mobile along with your other contacts.

- › Press  (down) from the Start screen.
- › Select **Options** › **Skype** › **Get contacts from Skype**.

8 Feeds.

Keep right up to date on the stuff you're interested in.

Feeds are basically a way of letting you know every time there's a change on a website you like, as long as it provides an RSS feed. That could mean updates on news, sports scores, entertainment gossip - whatever you're interested in.

- 8.1 Access to feeds
- 8.1 Add a feed
- 8.1 View a feed
- 8.1 Update a feed
- 8.1 Mark a feed as read
- 8.2 Edit a feed
- 8.2 Delete a feed


Set up your feeds.

It's easy to choose a new feed and set it up. You can also set how often you want to be updated with any changes on the website.

Access to feeds

- › Press **MENU** from the Start screen.
- › Scroll to select **Feeds**.

Add a feed

- › Press **MENU** from the Start screen. Scroll to select **Feeds**.
- › Select **Options** › **Add a feed** › **OK**.
- › To add a web feed from your browser, look for the RSS icon . When you see it use the Options menu to add the feed.
- › Alternatively, you can enter a feed URL manually and select **Add**.

View a feed

- › Press **MENU** from the Start screen.
- › Scroll to select **Feeds** to enter the Feeds list, then select **View** or select **Options** › **View feed**.
- › Select **Go to** to go to browser. This will take you to the page of the website related to that particular feed.

Update a feed

- › Press **MENU** from the Start screen.
- › Scroll to select **Feeds** to enter the Feeds list, then select **Options** › **Update** › **Selected** to update the single focus feed or select **Options** › **Update** › **All** to update the content of all feeds manually.
- › Select **Options** › **Set auto Update** to update the content of all feeds automatically. You can also set the feeds to update **Once an hour**, **Once a day**, **Once a week** or **Never**.

Mark a feed as read

- › Press **MENU** from the Start screen.
- › Scroll to select **Feeds** to enter the Feeds list, then select **Options** › **Mark as read** to mark the selected feed as read.
- › To mark all feeds as read, select **Options** › **Mark all as read**.

Edit a feed

- › Press **MENU** from the Start screen.
- › Scroll to select **Feeds** to enter the Feeds list, then select **Options** › **Edit**.

Delete a feed

- › Press **MENU** from the Start screen.
- › Scroll to select **Feeds** to enter the Feeds list, then select **Options** › **Delete feed** › **Yes**.

9 Media and Game Centre.

Play music, take pictures, record videos or play games.
The media centre is where you'll find all the fun stuff
your mobile can do for you.

- 9.1 Play music
- 9.2 Take photos or make video clips
- 9.2 View your photos or video clips
- 9.3 Access games and apps
- 9.3 Download games and apps

Multimedia.

The media centre on your mobile lets you take photos and videos and play music.

Play music

- › Press **MENU** from the Start screen.
- › Select **Media player** › **Artist, Album, Track, Recently added**, etc.

See the Now Playing screen below:



The icons are:

Icon Functions

- Indicates the current volume status, press Side Up key to increase the volume and press Side Down key to decrease the volume.
- Repeat play.
- Press (down) to play the next file.
- Press (up) to play the previous file.
- Press to switch between Play and Pause.
- Press (left) to fast reverse.
- Press (right) to fast forward.

Take photos or make video clips

- › From Start screen, press on the right of your mobile.
- › Select **Options** › **Capture mode** to switch between camera and video mode.
- › Select **Back** and press to take a photo or to start video recording, and select **Stop** (left soft key) or Camera key to stop video recording.
- › For additional camera features, select **Options** by pressing the left soft key.

View your photos or video clips

- › Press **MENU**.
- › Select **My stuff** › **Pictures** › **Photos** to view photos or **My stuff** › **Movies** › **Video rec** to view movies.
- › Select your preferred picture or video clips and select **OK**.

Games and applications.

Your mobile supports Java so you can download games from **Planet 3 Games**, and play them on your mobile.

Access games and apps

- › Press **MENU**.
- › Select **Games and apps**.

Download games and apps

Select **Homepage** to access and download new applications and games for your mobile.

10 Extra features and security.

Your mobile has a bunch of useful extra features, including a Calendar with alarms to remind you of specific appointments, an alarm clock and a way to lock your mobile.

- 10.1 Set an alarm
- 10.1 Calendar
- 10.1 Calculator
- 10.2 Activate your USIM PIN
- 10.2 Change your USIM PIN
- 10.3 Network settings
- 10.3 Airplane mode
- 10.3 Master reset
- 10.3 Language

Alarm.

The alarm can be set to ring at a specific time within 24 hours. The alarm signal rings even if the mobile is set to silent or turned off.

Set an alarm

- › Press **MENU**.
- › Scroll to select **Alarm** › **Alarm1**. Press **OK** to set your alarm.
- › After setting, select **Save**.

Calendar





You can use the calendar to keep track of important meetings.

To create a new event/task:

- › Press **MENU**.
- › Scroll to select **Tools** › **Calendar**.
- › Scroll to your preferred date. Press **View** and select **Yes** to create a new calendar entry.
- › Select **New event / New to do** › **OK**.
- › Enter the details and select **Save**.

Calculator

To use the calculator:

- › Press **MENU**.
- › Scroll to select **Tools** › **Calculator**.
- › Use  to Add, Multiply, Divide or Subtract and  to select calculator. Press  to delete a number and  for decimal point.

Set up your PIN number.

Make sure you protect your mobile number so that only you can use it.

Activate your USIM PIN

Your PIN (Personal Identification Number) code protects the information stored on your USIM.

To activate your USIM PIN:

- › Press **MENU**.
- › Scroll to select **Settings** › **Security settings** › **Activate PIN** › **Enable**.
- › Enter the default PIN **0000**, and press **OK**.

Change your USIM PIN

Once you have activated your PIN, each time you turn on your mobile, you'll need to enter your PIN.

- › Press **MENU**.
- › Scroll to select **Settings** › **Security settings** › **Change PIN**.
- › Enter your default PIN (0000), press **OK** and enter your new PIN (4-8 digit) twice.
- › Select **OK** to save the setting.


Caution

- › If you enter an incorrect PIN code three times in succession, your USIM and mobile functions will be locked. For more details, please refer to **Safety precautions** on page 12.3.
- › If you do not know the correct PIN code and PUK code, please contact your operator or network service provider.

Network settings.

You can also manually select the network you wish to be on when travelling abroad.

Network settings

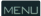

- › Press .
- › Scroll to select **Settings** › **Network settings** › **Search** › **Manual**.
- › Select your preferred network and press **Select**.

Airplane Mode

- › Scroll to select **Settings** › **Network settings** › **Airplane Mode** › **OK** › **On / Off** to turn on / off the airplane mode.

Master reset




The Master reset function enables you to reset your mobile back to the factory settings.

- › Press  from the Start screen.
- › Scroll to select **Settings** › **Settings master reset**.
- › Enter the default handset code 0000 and press **OK**.
- › Press  to mark the preferred menu, then select **Options** › **Reset** › **Yes** to reset the marked settings. To reset all factory settings, select **Options** › **Reset all** › **Yes**.

For more details about master reset settings, select **Options** › **Guide**.

Language

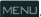This function allows you to choose the language for the display of your mobile. Several options are available.

- › Press .
- › Scroll to select **Settings** › **Phone settings** › **Language**.
- › Press  (up) or  (down) to select the preferred language and select **OK**.

11 Connectivity settings.

Keep track of your appointments and updates of your contacts by copying them to your PC and connect to your friends' mobiles with Bluetooth.

- 11.1 Connect with a Bluetooth headset
- 11.1 Transfer files from your mobile using Bluetooth
- 11.2 Transfer files between your mobile and PC
- 11.2 PC synchronisation

Bluetooth synchronisation.

Connect with a Bluetooth headset

Before making calls with a Bluetooth headset, you must first set up the headset to work with your mobile. Once you've done this, your mobile remembers the headset's ID. You can find more details in your Bluetooth headset user guide.

To connect with a Bluetooth headset:

- › Press **MENU**.
- › Scroll to select **Settings > Connectivity > Bluetooth > Switch on > Select** to switch on the Bluetooth function.
- › Scroll to **Search for new devices > Select**.

Make sure that your headset's Bluetooth is switched on. See your Bluetooth headset user guide for how to connect your mobile and headset.

Transfer files from your mobile using Bluetooth

You can transfer files from your mobile to PC or to other mobiles via Bluetooth.

- › Press **MENU**.
- › Scroll to select **My stuff** and select your preferred file.
- › Select **Options > Send as > Bluetooth > Select Search** and select the device you want to transfer to, then follow the instructions.

Transfer files between your mobile and PC

Connect your mobile and PC using the USB cable. You don't need to install any drivers on your PC. You'll need to make sure that your mobile's memory card is inserted.

- › First insert the USB cable into your handset and your PC.
- › Select **Memory card transfer**.
- › Open your media folder on your PC. Then drag and drop your preferred tracks between your PC and mobile.

PC synchronisation

You can set up your mobile and PC so that the Contacts, Calendar, SMS and files are up to date and match each other. For more information, please refer to the PC sync software made for your mobile.

12 Troubleshooting, handset safety and maintenance, and index.


Any problems, questions or queries?
You'll find the answers here!

- 12.1 Troubleshooting
- 12.3 Safety precautions
- 12.8 Index

Troubleshooting.

Having problems with your mobile? See below for a list of common questions. If we can't answer your questions here, then just call us on **333** from your mobile or **0870 7330 333** from another mobile.

The mobile can't be switched on

Possible reason	Solution
You are not holding  down for long enough.	Press and hold.
The battery power is used up.	Charge the battery.
Incorrect battery insertion.	Check and insert the battery correctly.

The mobile is switched off automatically

Possible reason	Solution
Low battery power.	Charge the battery.

The call volume is too low

Possible reason	Solution
The call volume has been set too low.	Increase the call volume.

The person you are calling cannot hear your voice

Possible reason	Solution
Call status has been set to mute.	Turn off the mute function on the call menu.
The microphone is too far from the sound source.	Put the mobile's microphone closer to your mouth.

The incoming call doesn't ring

Possible reason	Solution
The mobile has been set to silent mode.	Reset the ring type in Profiles to Normal or Loud .
The ring volume has been set too low.	Increase the volume in Profiles.
The call diverting option has been set.	Cancel call diverting in Settings.

The battery can't be charged

Possible reason	Solution
The battery is worn out and the charging time takes too long.	Charge when the mobile prompts low battery.
The battery doesn't connect well to the mobile.	Ensure the battery has been inserted correctly.

Can't display network

Possible reason	Solution
The USIM card has been incorrectly inserted.	Refer to the USIM card insertion method.
The phone has been set to Airplane Mode.	Change the setting when it is safe to do so.

The mobile does not recognise the memory card

Possible reason	Solution
The memory card has been incorrectly inserted.	Insert the memory card correctly according to instructions in the user manual.
The memory card has been damaged.	Replace the memory card.

Safety precautions.

Usage environment

Please remember to obey the relevant rules and regulations whenever use your mobile. This will help keep you and others around you safe.

- Switch off your mobile when close to petrol stations, bunkers, chemical factories or explosive areas and follow any safety signs and instructions there. Breaking any rules could cause explosion or injury.

- Using the mobile in a plane can cause interference and danger to an aircraft navigation system and network. You must switch off your mobile before boarding and make sure your mobile is switched off during the whole flight.

- Please place the mobile somewhere safe and don't put it on a seat or in places where it could fall and break. To keep safe on the road, please don't use the mobile when you're driving. If you must use it, please use the mobile on hands-free kit with a fixed cradle (and make sure you still exercise proper control of the vehicle) or stop at a safe location by the roadside before making or answering a call.

Medical devices

Please switch off your mobile near electronic medical equipment (such as heart pacemakers, hearing aids etc). Most medical devices can shield the mobile's RF signal, but some can't. If you have any questions or need to find out more, please consult your doctor or medical device manufacturer.

Pacemaker

Pacemaker manufacturers advise keeping a distance between your mobile and heart pacemaker of at least 6 inches (15.3cm), or the mobile could interfere with the pacemaker.

Anyone wearing a pacemaker should do the following:

- Always keep a distance between the mobile and pacemaker of more than 6 inches (15.3cm) when the mobile is switched on.
- Avoid carrying the mobile in a breast pocket.
- Listen to the mobile using the ear on the opposite side of the body to the pacemaker.

Caution

If you are unsure as to the level of interference, please switch off the mobile at once and consult a doctor immediately.

Safety precautions.

Hearing aids

Phones may cause interference to some hearing aids. If there is any interference, please get in touch with the manufacturers of the hearing aid immediately.


Emergency calls

It is impossible to ensure your mobile can be connected successfully in every situation, so please don't rely purely on your mobile as the only means of communication in an emergency (such as medical first aid).

Make an emergency call

If your mobile is switched off, please turn on your mobile and check whether the network signal is strong enough.

You can't use Skype to make emergency calls.

1. Input the local emergency number correctly (such as 999). Different areas have different emergency numbers.
2. Press  to call.

Caution

While making an emergency call, you should try to provide all important information correctly. Don't end the call without being told to do so by the emergency services.

Password access

Your mobile and USIM card can be protected by a password to stop others using it without your permission.

Phone password

This protects your handset from unauthorised use by other people. The preset password is 0000. Please modify your handset password as soon as possible and keep it secret.

PIN code

This is a personal identification code which is used to protect the USIM card from unauthorised use by other people. Generally, the PIN code and USIM card are provided together. After activating the PIN code, you can use the handset normally by correctly inputting your password each time.

Caution

If you input your PIN code incorrectly three times in succession, the USIM card will be locked. You will need to input the PUK code to unlock it. (If you don't have a PUK code, please contact your operator and USIM card provider for this information. Please input all characters.)

Safety precautions.

PIN2 code

This is the password which activates the special USIM card functions. Usually, the PIN2 code and the USIM card will be provided together. If you incorrectly input the PIN2 code three times in succession, it will be locked and you will need to input PUK2 to unlock it again.

PUK code

This is used to unlock the PIN code. If you incorrectly input the PUK code ten times in a row, then the USIM card cannot be used again. Usually the PUK code and USIM card are provided together. If you lose PUK code or it isn't supplied with USIM card, please contact your network operator or USIM card provider.

PUK2 code

This is used to unlock the PIN2 code. Usually the PUK2 code and the USIM card are provided together. PUK2 can modify the locked PIN2 code. If you incorrectly input the PUK2 code ten times in a row, you will not be able to access some of the functions. Please apply to your operator for a new card. The PUK2 code cannot be changed. If you lose it, please contact your service provider.

Note about charging the battery

The handset uses a lithium battery. How long a charged battery lasts will be influenced by the system's environment and mobile settings.

- Please use the battery and charger provided by the AMOI Company. AMOI will take no responsibility for damage caused by using the wrong battery or charger.

Caution

Generally, the charging time is 3-5 hours according to the current status of the mobile (whether switched on, making a call, etc).

- Don't touch the handset, battery or charger with wet hands while it's charging.

Caution

To charge a new battery as fully as possible, please charge and discharge the mobile twice or three times.

Safety precautions.

Battery information and care

- Never use any battery that has been damaged.
 - When you use the handset near a network station, the power consumption is very low, which means that how long you can use it before charging the battery depends greatly on the signal strength of the network and other factors.
 - The battery charging time will depend on the amount of electricity remaining and the type of battery and charger used. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
 - Only use batteries that are compatible with your handset and only recharge your battery with a compatible charger. If a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, as overcharging may shorten its life.
 - Do not connect the anode and cathode of a battery the wrong way round.
 - Do not leave the battery in places with too high or too low temperature (such as in a car during summer or winter), or the battery capacity will be reduced and battery life will be shortened. Always try to keep the battery at room temperature.
 - Do not short-circuit the battery. This may damage the electronic core or the protected circuit inside the battery. Accidental short-circuiting can take place when a metal object (coin, clip or pen) causes a direct connection between the anode and cathode of the battery, for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting. So please store the battery carefully and on its own.
 - Don't burn your handset battery or treat it as common rubbish. Please follow the local environmental policy in order to avoid endangering life and causing environmental damage, and recycle your batteries.
 - If your handset, battery or other charging device leaks due to carelessness, you must not put it inside any piece of equipment that heats up (such as drier, microwave etc). The handset or other products may go wrong, and you could even cause the handset, battery or other charging device to burn, expand and explode.
- AMOI will take no responsibility for any direct or indirect damage caused by user error.

Safety precautions.

Note about using spare parts

- Please put all spare parts (such as USIM card, storage card, battery, etc) out of reach of children.
- Please switch off the handset and disconnect the handset and charger before removing the battery from the mobile.
- As the mobile's spare parts are not waterproof, please keep all spare parts dry.
- You should pull out the plug of any spare part correctly when you switch off the power; don't pull strongly on the power line.

If the handset, battery, and charger don't operate normally, please contact one of our maintenance centres with a qualified repair service as soon as possible.

Other safety information

- When you are not using your handset, it is a good idea to switch it off. You can remove the battery to save energy.
- If you use earphones to listen to music or watch a film, please don't turn the volume up too high as this could damage your hearing.
- Don't dismantle the terminal and battery of the mobile - this should be left to qualified staff.

Index.

A		G		S	
Airplane mode	10.3	Games and applications	9.3	Safety notice	12.3
B		General set up		Safety precautions	12.3
Battery		- Choosing a text entry method	1.5	Skype	
- Charging	1.1	- Ringtone	1.3	- Call	5.1
- Power display	2.4	- Voicemail and videomail	1.4	- Chat	6.1
C		- Wallpaper	1.3	- Sign in	3.1
Call		I		- Sign out	3.2
- Conference	5.2	Inserting		- Status	3.2
- Features	5.2	- Memory card	1.1	- Switcher	2.6
- Making	5.1	- USIM card and battery	1.1	T	
- Receiving	5.1	M		Transfer	11.1
- Video call settings	5.3	Menu tree	2.7	Troubleshooting	12.1
E		Messages		W	
Extra feature and security		- Email messages	6.2	Wizard	1.2
- Activate and change your USIM PIN	10.2	- Multimedia messages	6.1	Y	
- Alarm	10.1	- Setting up your email	6.2	Your mobile	
- Calculator	10.1	- Text messages	6.1	- Back view	2.2
- Calendar	10.1	Mobile internet	4.1	- Front view	2.1
- Master reset	10.3	Modem	2.8	- Keys and navigation	2.1
- Network settings	10.3	Multimedia		- Side view	2.2
F		- Playing music	9.1	- Start screen	2.3
Facebook	4.3	- Taking a photo or video	9.2		
Feeds		- Viewing photos and video clips	9.2		
- Access	8.1	P			
- Add	8.1	Phone maintenance	1.6		
- Delete	8.2	Planet 3	4.2		
- Edit	8.2	Power on / off	1.3		
- Mark as read	8.1				
- Update	8.1				
- View	8.1				