



ZEPP GOLF USER GUIDE


TABLE OF CONTENT

Getting Started	1
What's Included	1
iOS & Android Requirements	1
Downloading the app	1
Turning on your Zepp Sensor	2
Pairing your Zepp Sensor	2
Getting to know your Sensor	4
Mounting your Zepp Golf sensor	5
Capturing a Swing	5
Flash Storage Capability	6
Battery Life, Charging and Power	6
Multi-Sport Functionality	6
Storage	7
Factory Reset	7
LED Indicator Lights	7
Getting to know your Zepp App	8
What Zepp Golf measures	9
Swing History	9
3D Swing Screen	10

Swing Dashboard	10
Set goals and track your improvement	10
Cloud Sync	10
Compare Swings	11
Sharing your Swings	11
Screen Lock	11
Delete a Swing	11
Low Battery Indicator	12
Practice Swings	12
General Information & Specifications	13
Zepp Golf App Updates	14
Zepp Golf Firmware Updates	14
Using your Zepp in wet conditions	14
Customer Support	14
Technical Specifications	14
Return policy and warranty	14
Regulatory and Safety Notices	15

Getting Started

 What's Included

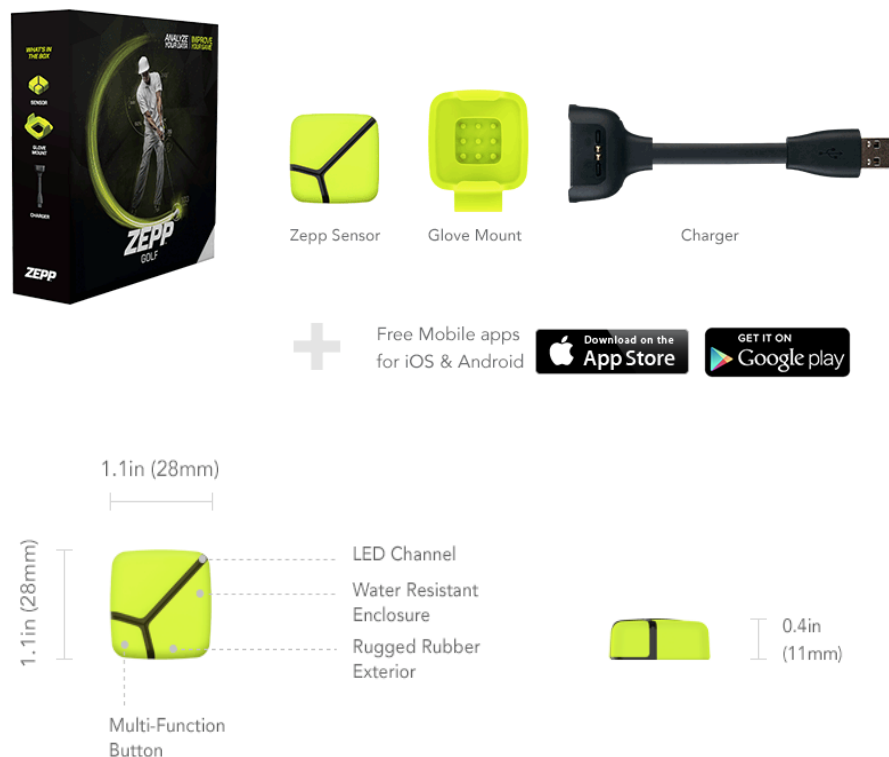

iOS & Android Requirements

iOS iPhone, iPad, iPod Touch – iOS 6.1 or later

Android - v2.3.3 and up

 
Downloading the app

You will need to download the free Zepp Golf app to use your sensor.

1. Click on the App Store or Google Play icon on your iOS or Android device.
2. In the search toolbox, enter Zepp Golf.
3. There will be an icon with an add feature that says "Free" for iOS users and "Install" for Android users. Click this icon. A new green icon will appear asking "Install App". Tap it.
4. Once the download is complete you can find Zepp Golf on your device.

Turning on your Zepp Sensor

To turn it on, press in from the side towards the LED channel (see image below). You should feel the button push in slightly when you do this. Hold for at least 4 seconds when pushed in. If it doesn't turn on try holding a bit longer and adjusting your finger to the top corner.

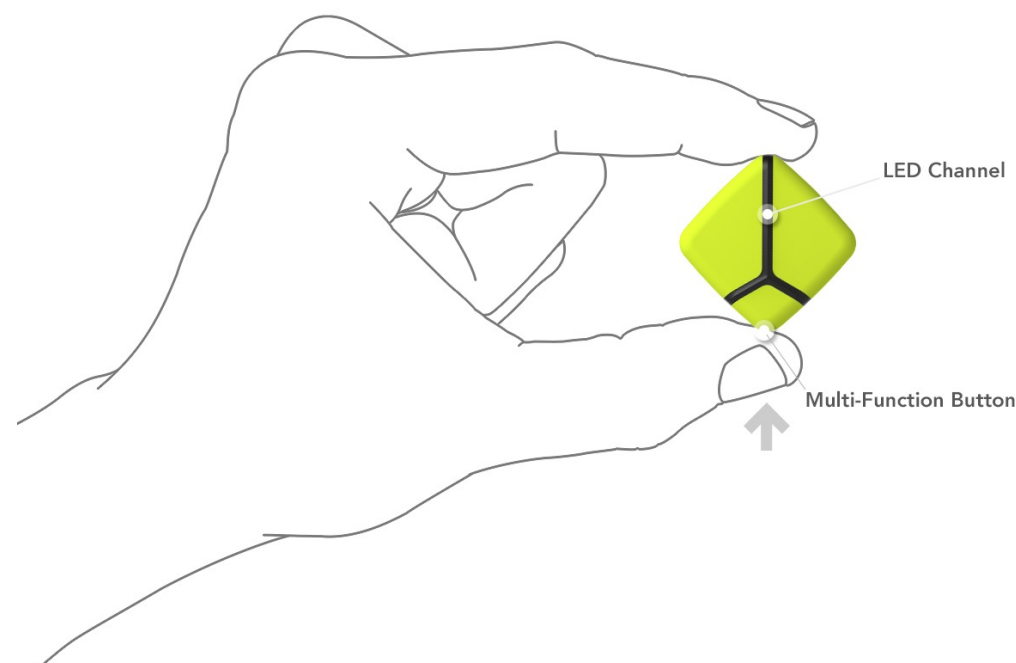

Pairing your Zepp Sensor

Pairing an iOS Device

1. Select the Settings icon and then select Bluetooth. If Bluetooth is not enabled, turn it on.
2. Your iOS device will automatically search for Zepp. This will take approximately 15-30 seconds. Once found, a pop up "Bluetooth Pairing Request" will appear. Select Pair.
3. When paired, your device will note Zepp "Connected".
4. After connection has been established, another pop up will appear asking you to allow Zepp to communicate with the ZEPP App. Select Allow.
5. From this point on, your iOS device will automatically pair with Zepp Golf. Unless if you turn Bluetooth off or unconnected Zepp by selecting "Forget this Device", you will not need to pair the device when you turn on your Zepp.

Pairing an Android device

1. Select the Settings icon and then select Bluetooth. If Bluetooth is not enabled, turn it on.
2. With some Android OS, you may receive a pop up message to let you know the Bluetooth is pairing with your Zepp device. Select "OK".
3. It will take approximately 15-30 seconds for Zepp to pair with the device. When paired, your device will note Zepp "Paired".
4. From this point on, your Android device will automatically pair with Zepp. Unless if you turn Bluetooth off or unconnected Zepp, you will not need to pair the device when you turn on your Zepp.

Getting to know your Sensor

Mounting your Zepp Golf sensor

Slide the sensor into the golf mount ensuring a secure fit. After you have inserted the sensor attach the mount to the glove by sliding it over the tab of your glove. Slide the mount over the tab of your glove so that it fits squarely in the center.

Capturing a Swing

Once you have established Bluetooth connection and mounted the sensor to your golf glove you're almost ready to capture a swing.

1. Open the app. Follow the steps to create your account if you haven't done so already.
2. Wait for the yellow sensor icon to appear in the upper left corner of the main swing screen. (1)
3. Calibrate your sensor by tapping the sensor icon in the upper left part of the screen. Follow the instructions and remain still while calibrating.
4. Choose a club by tapping the club icon in the bottom left corner. (2)

5. Set up to a ball and take a swing! Each time you make a swing the Zepp Golf app will show your swing in the app within a few seconds. Simply continue swinging after capturing your first swing in order to capture another swing.



Flash Storage Capability

The Zepp sensor is capable of working both online and offline. For Zepp Golf, it is recommended to operate in online mode (connected to app) since the club you swing with is regularly changed. In online mode the Zepp sensor is used when your connected to the app on your phone or tablet. All swings are stored immediately and saved to the app. If you lose connection or capture swings in offline mode all of your swings will be stored locally on the sensor until you reconnect the app again.

Battery Life, Charging and Power

Battery Life

The battery will last up to 5.5 hours with continuous swing recording.

Charging

Place your sensor into the USB Charger included in the box, and plug the charger into any USB port. Charging your sensor will take approximately 2-3 hours. When charging is complete the light rotation of the sensor is as follows: all of the LED lights will light up for a moment, and then all LED lights will fade away. This cycle repeating while in the charger indicates a full charge.

Hibernate Mode

To save battery the sensor will enter a Hibernation Mode if it does not detect a swing or a button press for 5 minutes. Simply press the multi-function button or take a swing to wake the sensor out of hibernation mode. If you find that the sensor disconnects from the app during this time, press the multi-function button twice to reconnect to the app.

Multi-Sport Functionality

Your sensor will work with all 3 Zepp Sports Apps: Baseball, Tennis, and Golf. Simply download the mobile app of choice and attach the sensor to the appropriate racket, bat, or golf mount. To use the sensor for a different sport, connect your sensor to your mobile device and open the sport app of your choice. The app will ask you if you wish to change the sensor to the new sport mode. Select OK to begin change process.

Storage

The Zepp Golf sensor can hold up to 2,000 swings when not connected to the app. When connected to the app all swings will automatically transfer from the sensor to the app.

WARNING: If you have stored swings that have not been synced to an app prior to switching to a new sport they will be erased. You must upload the stored swings to the correct app prior to switching modes.

Factory Reset

Press in and hold the multi-function button for 10 seconds to reset your sensor into Factory Default setting.

WARNING: All swings will be erased from memory when your sensor is reset.

LED Indicator Lights

Your Zepp sensor features a display that consists of 10 LED indicator lights. These lights communicate a variety of feedback including battery status, searching to connect, starring swings, and sensor reset.

Tracking Mode

The sensor is in Tracking Mode when it is on and the LED lights are running across the LED channel every 4 seconds.

Connect Mode

If you're having trouble connecting to Bluetooth press in on the multi-function button two times to put the sensor in Connect mode. The sensor will show 3 LEDs traveling back and forth across the LED channel.

Battery Status

Press in on the multi-function button one time to check the battery status. If three or less LEDs light up this indicates a low battery. Charge your sensor for 2-3 hours.

Starring a Swing

The star feature allows you to keep track of all of the great swings you make. To star a swing with your sensor press in on the multi-function within 10 seconds of your swing.

Getting to know your Zepp App

What Zepp Golf measures

Club/Hand Speed

Club Speed measures in miles per hour (MPH) or kilometers per hour (KPH) how fast your club head is traveling at the point it impacts the golf ball. Hand Speed measures how fast your hands are traveling at the point it impacts the golf ball.

Club/Hand Plane

Club plane measures how closely your backswing plane matches your downswing plane. Hand Plane measures the path your hands make in the backswing compared to the path they make on the downswing. Ideally, the closer the plane matches, the better the golf swing.

Tempo

Tempo is the ratio of the measured time in seconds it takes to make a back swing versus the measured rate of time in seconds it takes to make a downswing until impact. Tempo is the natural rhythm and timing of the swing. You want your swing to not only happen in a timely manner but in a consistent way with every swing.

Backswing Position

This is the measurement of degrees of the angle of the club shaft between address and the top of backswing. It is measured by the change in angle at address to the angle at the top of the swing. At address the club is at zero (0) degrees. At the top of the swing it is 270 degrees.

Hip Rotation

Hip Rotation measures the degrees you rotate your hips on the backswing and then the degrees of rotation at impact. It is captured in the app when the phone is placed in the front right (righties) or left pocket (lefties). To ensure the app stays open, we recommend enabling the screen lock function located in the control center.

Note – Mobile device must contain a gyroscope in order to capture hip rotation.

Swing History

Each swing recorded with your Zepp Golf sensor is stored automatically and can be viewed at any time in your swing history. To view swing history, tap the calendar icon in the top right corner of the 3D swing screen. Swing History can also be viewed from the Main Menu screen by tapping “My History”.

3D Swing Screen

Review and replay your swing in 360. (1) Rotate and analyze your club path from any angle by moving your finger left to right to swing around your swing. Drag up or down to view from a top angle.

Swing Dashboard

 
The Swing Dashboard is the dashboard that shows you the results of the swing you are analyzing. (2) The metrics within the dashboard comprise of the algorithm that makes up your Swing Score. Metrics within the Swing Dashboard include club speed, hand speed, club plane, hand plane, tempo, backswing position, and hip rotation (mobile device must contain gyroscope and be placed in pocket).

Set goals and track your improvement

Goal setting can be used to improve over time. Set your goals and use the swing dashboard to focus your practice on specific goals. Goals can be set for speed, tempo, backswing position, club and hand plane. To track your improvement, go to the Lab Reports and My Statistics section from the main menu of the app.

Cloud Sync

Whenever you swing, your swing data will automatically and instantly appear on your smartphone or tablet. There's no limit to how many swings you can store and analyze in the app. When you're connected to WiFi or a 3/4G network your swings will automatically sync to the cloud. Cloud sync allows you to view your swing history when you sign in to the app from any mobile device.

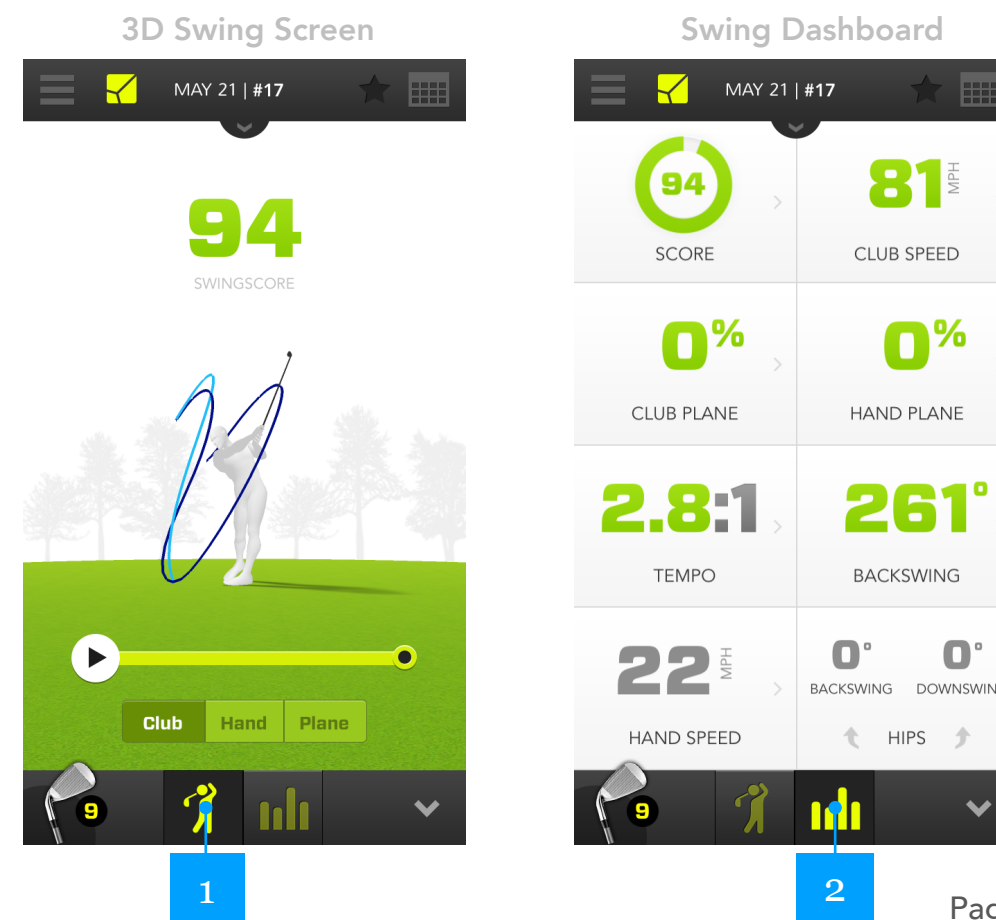

Compare Swings

Select any two swings and replay them simultaneously from any angle or compare the data for each swing side by side by selecting a swing and opening the **Control Center** (1) located in the bottom right corner of the app and selecting “Compare.” (2)

Sharing your Swings

 
Swings can be shared via email or social media channels from the Swing History. Find the swing that you would like to share and swipe right or left across the session. From here you can select the channel that you would like to share through. Alternatively, you can share selected swings by tapping “Share” (3) located in the Control Center.

Screen Lock

To lock your screen while capturing swings, select “Screen Lock” (4) located in the Control Center.


Delete a Swing

There are a couple different ways in which you can delete a swing. In your swing history, swipe right or left across the swing that you’d like to delete and tap delete. Alternatively, tap edit in the upper right corner of your swing history and select the swings that you would like to delete. Lastly, you can delete selected swings by opening the command center and tapping “Delete.” (5)

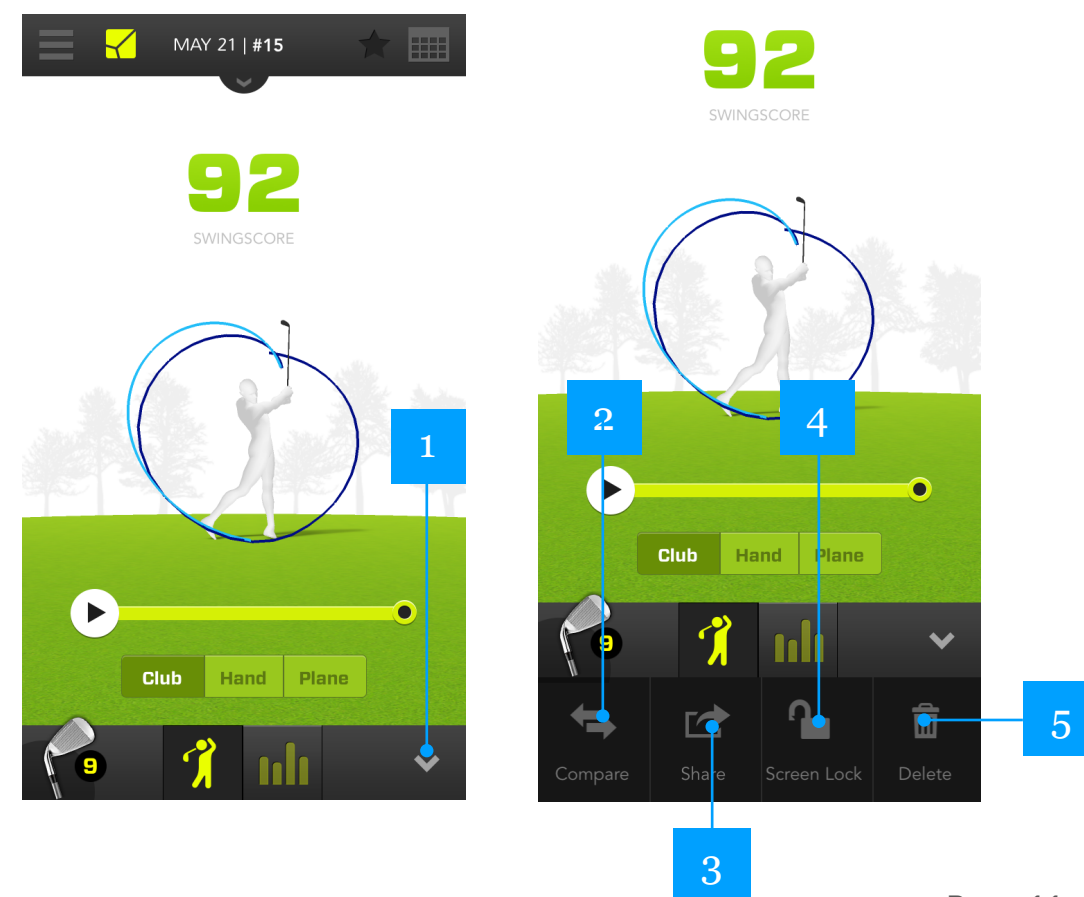

Low Battery Indicator

 The Zepp Golf App now indicates when your sensor has low battery. See photo below.



Practice Swings

Zepp Golf can capture your swings when practicing without a ball. Swings where you do not make contact with a ball or mat will be marked with a blue "p" in your swing history which stands for practice.



General Information & Specifications

Zepp Golf App Updates

Zepp will periodically add new features, updates, and improvements to the Zepp Golf app. It is recommended that you keep your Zepp Golf app updated to the latest version.

Zepp Golf Firmware Updates

Zepp will periodically include firmware updates when updates to the app are released. Updating the firmware will improve accuracy and overall performance of the sensor. To check if a firmware update is available sync the sensor to the app. If an update is available you'll see UPDATE in yellow in the Settings section. Tap here and follow the instructions.

Using your Zepp in wet conditions

Your Zepp sensor is water-resistant. It is sweat-proof, rain-proof, water resistant, and can function with light water exposure.

Customer Support

Troubleshooting and assistance for your Zepp Golf can be found at: <http://www.zepp.com/support/golf>

Technical Specifications

Zepp uses 3 MEMS sensors to measure motion in its proprietary motion engine capture system. This motion engine is used to capture speed, tempo, backswing position and more.

Return policy and warranty

Zepp provides a one-year limited warranty. Under conditions of the warranty agreement provided with your Zepp, purchasers will be entitled to repair or replacement for defective Zepp units. This warranty begins from the date of initial purchase. Zepp may also choose to refund the purchase price of the unit to the purchaser. Warranty information and the Zepp.com Store Return Policy can be found online at www.zepp.com/support/golf

Regulatory and Safety Notices



The symbol on the product or its packaging signifies that this product has to be disposed separately from ordinary household wastes at its end of life. Please kindly be aware that this is your responsibility to dispose electronic equipment at recycling centers so as to help conserve natural resources. Each country in the European Union should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off point, please contact your local electrical and electronic equipment waste management authority or the retailer where you bought the product.

- Do not dispose of the Zepp sensor with household waste.
- Batteries are not to be disposed of in municipal waste stream and require separate collection.
- Disposal of the packaging and your Zepp should be done in accordance with local regulations.

For additional information on disposal and recycling, including contact details of a distributor in your region, please visit <http://zepp.com/support>.

