



INSTALLATION INSTRUCTION

MHTL-VOL

1. Main Data:

Fixture Model	LED	Input Voltage	System Wattage	Dimensions	Power Factor	Net Weight
MHTL-VOL-2x2	5630HE	120-277V AC 50Hz/60Hz	38W	23.6"x23.6"x4"	>0.98	17 lbs
MHTL-VOL-2x4			60W	47.2"x23.6"x4"		30 lbs


2. Warnings:

- 2.1. This product is to be installed and serviced by a certified electrician.
- 2.2. The Luminaire should be installed in an area with good ventilation, clear of any corrosive or combustible gases and explosive objects.
- 2.3. A supply voltage tolerance of +/- 10% is allowable. Voltage outside of this range will influence the normal operation of this luminaire and result in damage to the luminaire.
- 2.4. The luminaire must be properly grounded to prevent accidental electrical shocks, and to prevent interference from the electrical ballast affecting the normal operation of the luminaire.

3. Installation Instructions:


Recessed Mount (Standard)

1. Remove the traditional lay-in troffer lights.
2. Choose the replacement that fits in the grid. (Install aircraft cable as a second means of support if needed)
3. Remove the back panel of the fixture, connect the power source, and reinstall the back panel.

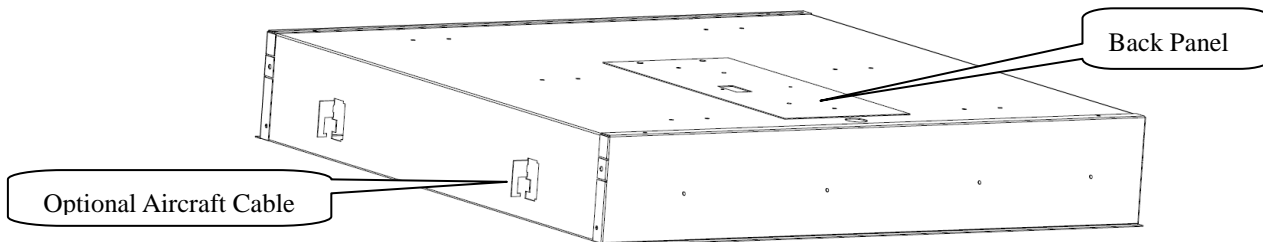

2X2 Surface Mount (Optional)


1. To mount a 2x2 to a surface, a mounting plate and two panels are provided.
2. Install the mounting plate on the ceiling using anchors and screws (Step 1).
3. Remove the back panel of the fixture, connect the power source, and reinstall the back panel (Step 2).
4. Slide the fixture onto the mounting plate (Step 3) and close both ends using the two panels (Step 4 & 5).

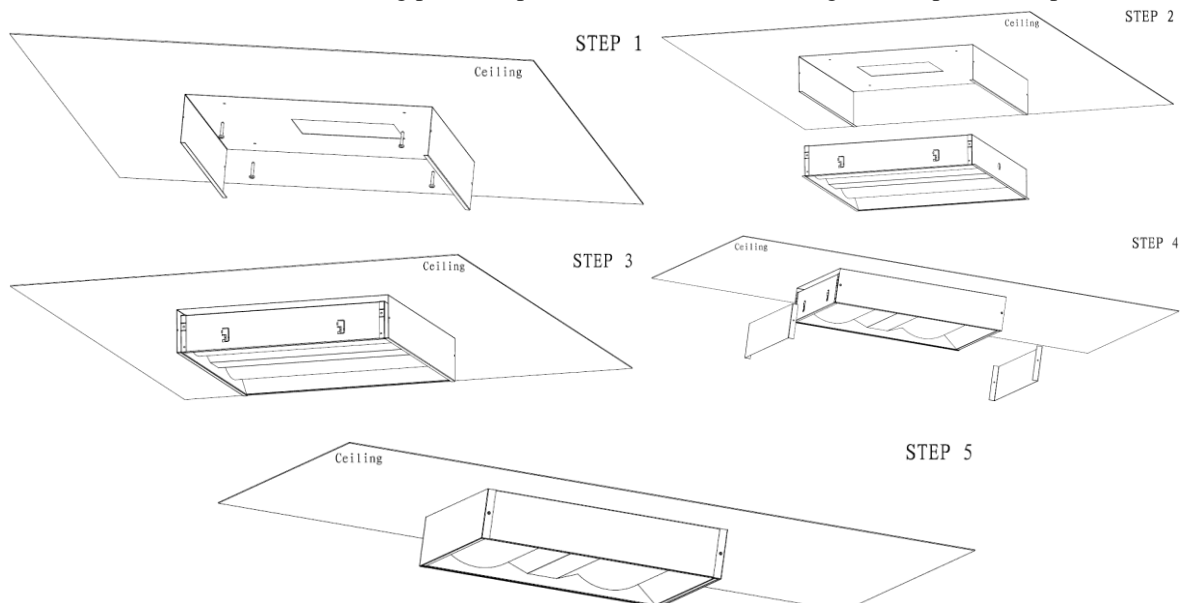



INSTALLATION INSTRUCTION

MHTL-VOL

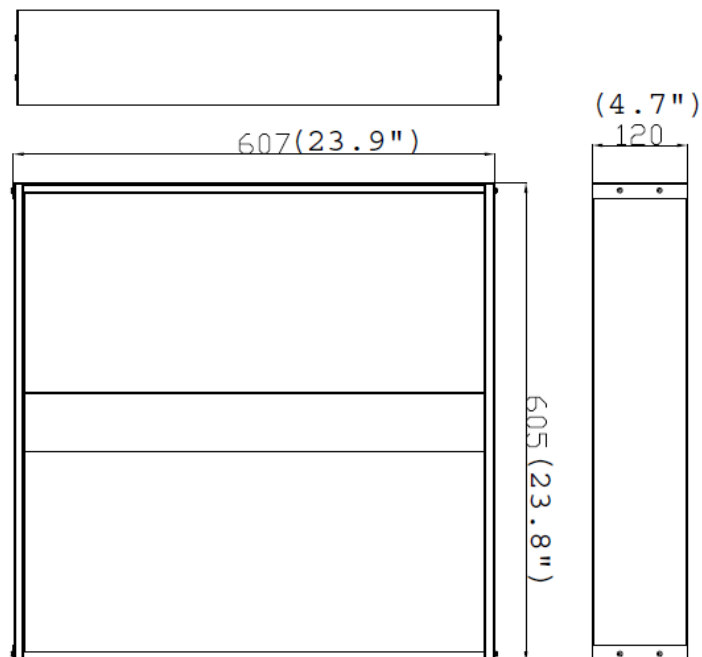

2X4 Surface Mount (Optional)

1. To mount a 2x4 to a surface, a mounting plate is provided.
2. Install mounting plate on the ceiling using anchors and screws.
3. Remove the back panel of the fixture, connect the power source, and reinstall the back panel.
4. Hook the fixture onto the mounting plate.

