

Contents

Precautions	1
Function Overview.....	3
Appearance.....	4
Turn on/off	5
Record Mode	6
Voice Mode	10
Music Mode.....	12
FM Radio	13
Time setting	14
Connect to PC.....	15
Technical Specifications	16

Precautions

In order to avoid accidents, please read the User's manual carefully before operations.


1. Please charge the recorder frequently when you do not use it for a long time.
2. Please keep it away from the high temperature, moisture or dusty places.
3. The recorder should be handled with great care .Do not drop or crash it.
4. Please do not turn off the power during recording and playing. Otherwise it may cause file corruption or information loss.
5. Please backup data regularly on your computer to avoid information loss which may be caused by wrong operations or machine breakdown.
6. We're not responsible for the failures of recording which caused by wrong operations or machine breakdown.
7. Please do not disassemble and repair the recorder by yourself .Please backup your data before sending it for repair service .We're not responsible for the data loss which caused by maintenance or other reasons.

8. We are not responsible for dispute issues which caused by recording voice without permission, because it is no connection with products
9. We will endeavor to ensure the integrity of the User's manual. But if the contents of the User's manual do not match for the product itself completely due to technique or production batches, please take the product as standard.

Function overview

1. Wireless recording remotely
2. Super long time continuous recording
3. One button recording& playing
4. Four recording modes:
 - LP: Long-time recording
 - SP: Standard recording
 - HP: High quality recording
 - Wireless recording
5. Voice Activated Recording
(VOR/VAR)
6. Listening while recording
7. Time setting
8. FM radio: Frequency response 87.0-
108MHz
9. Automatic section-break
10. A-B repeat
11. Mp3 player
12. Intelligent power monitoring
13. With built-in high power loudspeaker
14. With built-in high capacity polymer
battery

Appearance

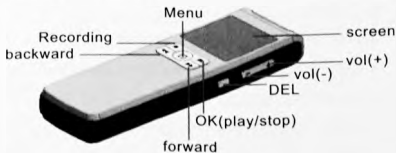

Turn on/off

● Turn on:

Push down the power switch button, the screen will lighten up as soon as the recorder turned on.

In a soft shutdown condition, press the "OK" button for several seconds to turn it on.

● Turn off :

Push up the power switch button, the screen will turn black as soon as the recorder turned off. In any standby condition, press the "OK" button for several seconds to turn it off.

The recorder will turn off automatically if there is no further operation in two minutes

● Battery power



Power is full



Half power left



Almost no power



No power

Record Mode

Select the record mode by pressing the “◀▶” button on the main menu. Then press the “●” button to enter into Record Mode.



LP: long-time recording, ADPCM format, 32Kbps

SP: standard recording, ADPCM format, 128Kbps

HP: high quality recording, ADPCM format, 192Kbps

🔊 : wireless recording, ADPCM format, 128Kbps

● One button recording

Press “●” button in any pause or stop condition could start recording

● Recording Pause /Save/Exit

Press “OK” button to pause the recording under the state of recording. Press the “OK” button again to continue. Press the “●” button to stop and save the recording

Record Mode

data. Then press "□" button to get back to main menu.

● Voice Activated Recording (VOR/VAR)

After the recording stopped, press the "◀▶" to choose the proper level of voice activated recording (from 0-10, default 0 which means the function doesn't work). Press the "●" button again to move on to the next recording.

When it starts working, the VOS icon will flash and the time will stop. On the contrary, when it stops, the VOS icon will disappear and the recorder will return to the normal state.

ATTN: Whether turn on the VOR or not according to individual demands. In general condition, We suggest don't use this function.

● Listening while recording

When it is recording, insert the earphone and press "VOL +" button to choose the proper volume (from 0 to 40, 0 means this function doesn't work)

Whether turn on the function or not according to individual demands, the power can be saved when you turn off this function in time.

● Record folder

Record Mode

The recording files will be saved automatically in the folder which Matches to the corresponding mode.

- Automatic section break

The recorder will save 4 hours of continuous recording voice automatically and move on to the next recording

- Auto save in low power

When the power is not enough to keep working, the recorder will save files and turn off automatically.


- Wireless recording

Step 1:pull the antenna out from the wireless microphone, push down the power switch, the blue indicator light keep lighting.

Step 2:insert the earphone into the recorder, press “◀▶” button to choose the mode of wireless recording, and then press “⊙” button to start wireless recording remotely. Under this state ,you can hear the voice when you press the “vol +”button., You can change the distance and position of the two devices to et the best audio effect.

Charging: When the wireless microphone is out of power, it can be charging with the included charger or by

Record Mode

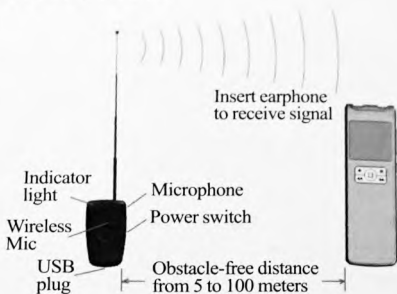

connecting to the PC. When the recorder is charging the red indicator light will be twinkle, when it is done, the red light will disappear. the wireless microphone can continuous working about 3 hours with full power.

Attn: The wireless microphone should be kept one to five meters away from the position of the source of the sound which will make the recording to get a best effect. In order to improve the effect, please keep the antenna vertically. Insert the earphone when you use wireless recording mode. The speaker could be opened by long time pressing the "DEL" button.

Voice mode

Select the Voice mode by pressing the “◀▶” button on the main menu. Then press the “OK” button to enter into Voice mode.



● One button playing

In a pause state, press “OK” button to play recording files.

● PLAY / PAUSE

Press the “OK” button to start playing, press it again to pause. Press the “□” to enter into the main menu.

● Selection, Fast forward /Rewind

Press the “◀▶” button one second to select the files.

Press the “◀▶” button several seconds to fast forward or rewind.

● Volume adjustment

Press “VOL+” or “VOL-” to adjust the volume under the standby or playing condition.

Voice mode

● A-B repeat

When playing the recording files, press “⊙” to choose the starting point “A”, press it again to determine the ending point “B”. then recorder will start to repeat from A to B.

The recorder will automatically stop repeating after three times. You can press “⊙” button to cancel it too.

● Delete

When the playing-record stops or pauses, press “DEL” button for three seconds and then press the “OK” button to confirm it.

Music mode

Select the Music mode by pressing the “◀▶▶” button on the main menu. Then press the “OK” button to enter into Music mode.



Other operations are same as the operations of the Voice mode.

FM Radio:Frequency 87.0-108MHz

Select the Radio mode by pressing the “◀▶” button on the main menu. Then press the “OK” button to enter into Radio mode.



● Scan/Save channel:

Short time press the “◀▶/▶▶” button for manual scanning and press the “●” button to save the channel.

Long time press the “◀▶/▶▶” button for automatic scanning, the recorder will automatically save the channel.

You can change the channel by pressing the “OK” button.

● Delete the saved channels

Press the “DEL” button for three seconds, you can delete the current channel.

Attention: Please use earphone accompanying with the recorder when you listen to the FM Radio. Press the “DEL” button for a long time to open the loudspeaker then listen to the FM radio.

Time setting

Select the Time setting mode by pressing the “◀▶” button on the main menu as below.



Press the “OK” button to enter into the Time setting mode ,Then press“◀/▶” to select the part you want to adjust ,the selecting part will winkle continuously. Press “VOL+”or “VOL-”button to adjust it to the current time as below.



After complete the adjustments, press “OK” button to save and return to the main menu.

Connect to PC

With an included USB cable to connect it to the computer, it can be used as a USB flash disk and charging automatically.

After finish it ,Right click on the pop-up icon appeared on the right bottom of desktop..After disconnecting the computer ,you can unplug the recorder. You can charge the recorder immediately when connect it to a charger with an included USB cable.

Hint: please turn on the recorder at first and then charge it, in that case ,it's clear to know how much the power left. The icon of the battery will flash during the charging time, and it will stop when it is fully charged. It will take 5.5 hours to finish the charging when using charger.

Specifications

Size: 110*35*13.5mm
Weight: 57g
Power supply: polymer battery 3.7V 1500mAh, super long time continuous recording
Memory capacity: 4GB~16GB
Recording bit rate: ADPCM,32Kbps/128Kbps/192Kbps
4GB recording time: LP about 283 hours/SP about 70 hours/ HP about 47 hours
8GB recording time: LP about 555 hours/SP about 138 hours/ HP about 92 hours
16GB recording time: LP about 1110 hours/SP about 277 hours/ HP about 185 hours
Support system: Windows2000/XP/Vista/7/8
Music format : MP3/WMA