Technical specifications

Audio/Video Parameters	
Container	MPG, VOB, TS
Codecs	
Video	MPEG-1, MPEG-2, MPEG-4, H264/AVC
Image	BMP, JPG, PNG, 8-24-32 bit. No support for progressive
	JPEGs
Audio	Dolby digital 5.1, AC3, MP3, WAV, Mono / Stereo,
	44.1 & 48 KHz sampling frequency, 16bit linear PCM WAV
Maximum resolution	
VGA	1366 x 768 (WXGA)
HDMI/YPrPb	1080p@50 or 60Hz
Maximum bitrate	35MBit/s
Connectors	
Video output	VGA, HDMI
Audio output	3.5mm stereo jack, HDMI
Flash card slot	1 slot on front panel
Storage	SD & SDHC
Power in	5V, 3A
Power out	3.3V Pheonix
Control in	Single contact on phoenix connector
Control out	
Other	
Power supply	
Maximum consumption	
	1U half 19" rack mountable lacquered black metal
Dimensions	215 x 185 x 44mm (W x D x H)
Weight	2.5Kg
Environment	
Temperature	
Relative humidity	
Warranty	3 years

Optional accessories

Commercial Division

RSF EUROPE S.A.
18 rue de l'Industrie
L8399 Windhof – G-D Luxembourg
Tél: +352/49 74 20 40
EUROPE
Fax: +352/49 74 20 50
E-MAIL: info@rsf-int.com



Manufacturer

RSF 45, Avenue Marcel Dassault (Parc de la Plaine) 31500 Toulouse - France Tél: +33-5/61207909 Fax: +33-5/61800094

OneDVP-HD

Quick Start Guide



 ϵ



Connect this unit's AC power adaptor only to an AC outlet of the type stated in this Owner's Manual or as marked on the unit. Failure to do so is a fire and electrical shock hazard.

Do not allow water to enter this unit or allow the unit to become wet. Fire or electrical shock may result.

Do not place a container with liquid or small metal objects on top of this unit. Liquid or metal objects inside this unit are a fire and electrical shock hazard.

Do not place heavy objects, including this unit, on top of the power cord. A damaged power cord is a fire and electrical shock hazard. In particular, be careful not to place heavy objects on a power cord covered by a carpet.

Do not scratch, bend, twist, pull, or heat the power cord. A damaged power cord is a fire and electrical shock hazard.

Do not remove the unit's cover. You could receive an electrical shock. If you think internal inspection, maintenance, or repair is necessary, contact your

Do not modify the unit. Doing so is a fire and electrical shock hazard.

If lightning begins to occur, turn off the power switch of the unit as soon as possible, and unplug the power plug from the electrical outlet.

If there is a possibility of lightning, do not touch the power plug if it is still connected. Doing so may be an electrical shock hazard.

Use only the included AC power adaptor for this unit. Using other types may be a fire and electrical shock hazard.

If the power cord is damaged (i.e., cut or a bare wire is exposed), ask your dealer for a replacement. Using the unit with a damaged power cord is a fire and electrical shock hazard.

Should this unit and AC adaptor be dropped or the cabinet be damaged, turn the power switch off, remove the power plug from the AC outlet, and contact your dealer. If you continue using the unit without heeding this instruction, fire or electrical shock may result.

If you notice any abnormality, such as smoke, odour, or noise, or if a foreign object or liquid gets inside the unit, turn it off immediately. Remove the power This product is EC-compliant with all required guidelines

plug from the AC outlet. Consult your dealer for repair. Using the unit in this condition is a fire and electrical shock hazard

Keep this unit away from the following locations:

- Locations exposed to oil splashes or steam, such as near cooking stoves, humidifiers etc
- Unstable surfaces, such as a wobbly table or slope.
- Locations exposed to excessive heat, such as inside a car with all the windows closed, or places that receive direct sunlight.
- Locations subject to excessive humidity or dust accumulation.

Hold the power plug when disconnecting it from an AC outlet. Never pull the cord. A damaged power cord is a potential fire and electrical shock hazard.

Do not touch the power plug with wet hands. Doing so is a potential electrical

To relocate the unit, turn the power switch off, remove the power plug from the AC outlet, and remove all connecting cables. Damaged cables may cause

Do not cover or wrap the AC power adaptor with a cloth or blanket. Heat may build up under the cloth or blanket, melting the case, or causing fire. Use only in a well-ventilated environment.

If you know you will not use this unit for a log period of time, such as when going on vacation, remove the power plug from the AC outlet. Leaving it connected is a potential fire hazard.

The user is legally obliged (battery regulation) to return used batteries and storage batteries. Do not dispose of used batteries via the household rubbish! Batteries/storage batteries containing harmful substances are marked with the following symbols indicating that they are not allowed to be disposed of in the domestic refuse.

The designations for the respective hazardous heavy metals are: Cd = cadmium. Hg = mercury. Pb = lead. You can return used batteries/storage batteries free of charge to any collecting point in your local authority or in any other store where batteries/storage batteries are sold.

About the Product

The OneDVP-HD is an HD Digital Video Player which has been designed for an increasingly common situation where a default video runs in a loop, and another video has to be triggered at a certain point. The OneDVP-HD uses flash memory cards. The total absence of mechanical parts in its design guarantees absolute reliability. Configurable by a simple text file, the OneDVP HD is flexible enough to provide solutions to a wide range of applications. A professional hardware video scaler ensures realtime, high quality, full HD output.

Overview

