




for the safety and happiness of your home

## Home System

# HS-6270

## User's Manual



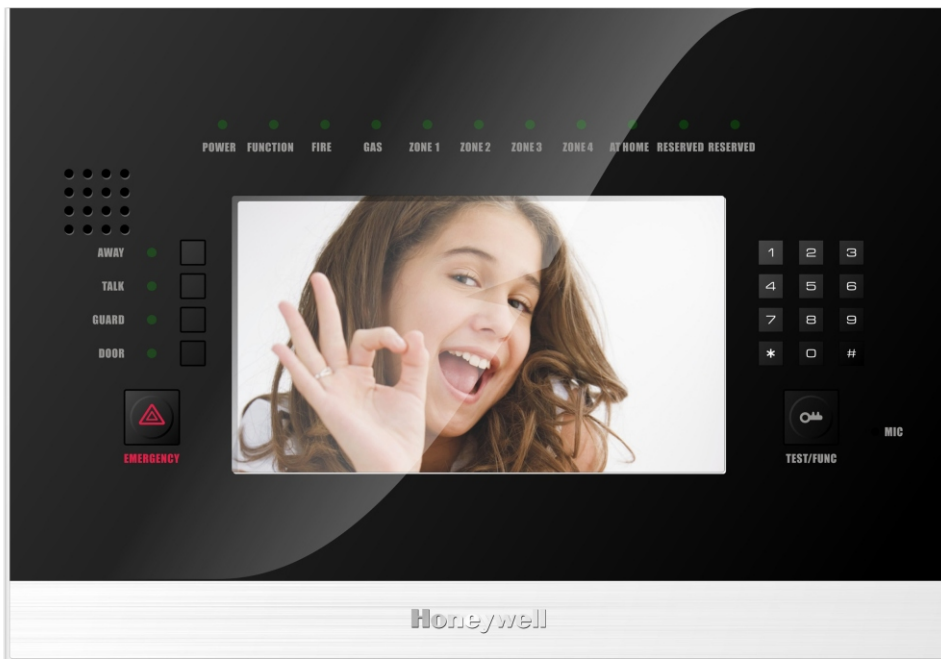

- To get the best use of the product, please read the user's manual carefully before using the product.
- Keep the user's manual at an easily accessible place and make it available to the next user.
- The specification of product picture may vary the model.



- The location of the lamps in the pictures may vary by model.

# Honeywell

## Accessing the fire/gas control test mode

- Press ,
- Press ,
- Press , to shift to fire test mode.
- Press , to shift to gas test mode.

※ Refer to page 16 for more details.


# Contents

Safety Precautions .....	2
Usage Suggestions .....	5
Parts of HS-6270 .....	6
<b>Function Setting</b>	
Adjusting the Volume of the Bell .....	7
Adjusting the Brightness of the Screen .....	7
Adjusting the Volume of the Phone .....	7
Setting the Safety Zone .....	8
Setting, Changing, and Checking the Exit/Entry Delay .....	9
Setting, Changing, Deleting, and Checking the Password .....	10
<b>Phone Call Function</b>	
<b>Telephone Function</b>	
Answering the Phone .....	11
Making a Phone Call .....	11
<b>Talking to Someone at the Door</b>	
Taking Calls from the Door .....	11
Monitoring the Door .....	11
<b>Interphone Function</b>	
Answering the Interphone .....	12
Making a Call over the Interphone .....	12
<b>Reaching the Guard Post</b>	
Taking Calls from the Guard Post .....	12
How to Reach the Guard Post .....	12
<b>Talking to Someone at the Common Entrance</b>	
Taking Calls from the Common Entrance .....	13
<b>Security and Alarm Functions</b>	
<b>Away Mode</b> .....	14
<b>Sleep (stay) Mode</b> .....	14
<b>Room Mode (deactivating the away and sleep modes)</b> .....	15
<b>In Case of Emergency</b>	
Reporting an Emergency .....	15
In Case of Fire or Gas Leakage .....	15
In Case the Security Alarm is Activated .....	15
<b>Deactivating the Emergency Alarm</b> .....	16
<b>Testing the Alarm Sound</b> .....	16
Electronic Bullet Board Function .....	17
Saving Image Function .....	18
Using the Camera .....	19
Troubleshooting .....	20
Product Specifications .....	21
Product Warranty .....	22

# Safety precautions



To prevent property damage, **make sure you have read the "Safety Precautions" before using your system.**



- The following symbols denote the degree of damage that may arise in case of failure to follow the specified precautions.

	<b>Warning</b>
Indicates the serious damage or even loss of life that may result from failure to follow instructions.	



	<b>Caution</b>
Refers to injury or property damage that may result from failure to follow instructions.	

- The following symbols denote the points that should be followed by the user.

 <b>Warning</b>	
	"Prohibitory", meaning the action being referred to should never be taken.

 <b>Warning</b>	
	"Mandatory", meaning you should follow the instructions indicated.

 <b>Warning</b>	
	Do not disassemble at any time (may result in property damage or loss of life).

 <b>Warning</b>	
	Do not touch (may result in property damage or loss of life).

# Safety precautions



## Warning



**Keep the product away from moisture**  
(contact with moisture or other liquids may cause fire, electric shock, or malfunction).



**Do not disassemble or modify the product** (may lead to electric shock, fire, or malfunction).



**If the panel comes into contact with water, unplug the cord immediately to avoid electric shock or fire.**



**Do not use the product in places exposed to inflammable gases or debris such as propane gas or gasoline** (may cause explosion or fire).



**Keep the product away from sources of heat to avoid fire or malfunction.**



**Check the gas sensor monthly. Replace it after 4 years.**  
Malfunction may result in hazardous situations.



**When the alarm sounds, take appropriate measures immediately.**  
Intrusion, fire, or gas leak may lead to hazardous situations.



**Replace the fire sensor every 2 years.**  
Malfunction may result in hazardous situations.

# Safety precautions



## Caution



**Do not use benzene or other volatile substances** (may damage the product).



**Keep out of reach of children** (product may cause injury).



**Do not place the product near large TV's or speakers that generate strong magnetic forces** (may cause malfunction).



**Child users should be instructed on the product's proper use. Adult supervision is recommended to avoid injury.**



**Do not install on an unstable location** (may get detached and result in breakdown or injury).



**Do not apply shock or impact to the product** (may cause breakdown).



**Keep away from direct sunlight. Do not store in high-temperature areas** (may cause product deformation or malfunction).

### When the gas leak alarm sounds, perform the following steps.

- 1) Close the gas valve immediately and open the windows and doors to secure ventilation.
- 2) Do not unplug or plug in electrical devices.
- 3) Do not open the refrigerator.
- 4) When the gas is completely removed, check the gas appliance.

# Usage suggestions

**To get the best use of the product, take note of the following.**

1. When using the gas alarm and/or fire sensor, follow the manufacturer's instructions.
2. Make sure that the product is impervious to volatile gases to avoid sounding the fire alarm by mistake.
3. In case of product breakdown, do not disassemble the body or sensor. Contact the vendor.
4. In case the main panel goes out of order, contact the vendor.
5. Use the emergency button only when necessary.
6. The product does not function during blackout or in case the circuit breaker is shut down.
7. To clean the product, use a soft cloth.  
Do not use volatile liquids (i.e. benzene, thinner) or wet cloth to clean the product.

# Parts of HS-6270

## Parts of the control panel

- Fire/Gas Lamp**  
Signals a fire/gas alarm.
- Function Lamp**  
Indicates the function setting status.
- Power Lamp**
- Away Button/Lamp**  
Sets your home to away mode and indicates that the system is in away status.
- Speaker**
- LCD**  
Shows an image of the entrance.
- Safety Zone Lamp**  
Indicates the Safety Zone and Burglar Alarm states.
- Stay Lamp**  
Indicates the stay setting status.
- 10KEY, \* (stop), # (reset) button**  
Used when inputting numbers for dialing/function setting/entering the code.





- Emergency Button/Lamp**  
Used in case of emergencies; indicates the emergency status.
- Talk Button/Lamp**  
Used when talking over the telephone and interphone.
- Guard Button/Lamp**  
Used when calling the guard post and common entrance.
- Door Button/Lamp**  
Used when talking to someone at the door.
- Microphone**
- Test/Function (open)**  
Opens the door to the entrance or common entrance.

※ The location of the lamps and specifications may vary by model.





# Function Setting



## Adjusting the Volume of the Bell

1. Press the  button.
2. Press **2**.
3. Press **1** (low), **2** (medium), or **3** (high) to adjust the volume level.
4. To end the function setting menu, press the  button.

## Adjusting the Brightness of the Screen

1. Press the  button.
2. Press **3**.
3. Press **1** (dark), **2** (medium), or **3** (bright) to adjust the brightness level.
4. To go to another function setting menu, press **\***.
5. To end the function setting menu, press the  button.









## Adjusting the Volume of the Phone

1. Press the  button.
2. Press **4**.
3. Press **1** (local), **2** (door), **3** (guard post), **4** (common entrance), or **5** (interphone).
4. Press **1** (small) ~ **5** (large).
5. To end the function setting menu, press the  button.
6. The volume is set to medium level **3** when released.

# Function Setting

## Setting the Safety Zone

※ When activating the security system, you can set the Safety Zone.

1. Press the  button.
2. Press .
3. Press  (Safety Zone 1),  (Safety Zone 2),  (Safety Zone 3), or  (Safety Zone 4), then the corresponding safety zone lamp blinks. Press it again to turn off. Pressing the corresponding safety zone button causes the safety zone to be set (**not monitored: safety zone lamp blinks; monitored: safety zone lamp goes out**).
4. To go to another function setting menu, press .
5. To end the function setting menu, press the  button.











**The zone setting is not affected, even though alarm function or away mode and/or sleep mode is deactivated.**

# Function Setting

## Setting, changing, and checking the exit/entry delay




- ※ You can set the delay time for activating your security system for exit/entry.
- ※ Exit Delay refers to the time given by the system to let you exit the house before the system is activated.
- ※ Entry Delay refers to the time given by the system to let you deactivate the system after entering the house.
- ※ Optional function; may not be available in some models.

### [ Setting and changing the entry/exit delay ]






1. Press the .
2. Press the  button.
3. Press   ~   (Number X 15 sec. = immediately ~ 4 min.) To save the desired setting. (Initially set to 30 sec).
4. If desires to input again, start with the step 3.  
If desires to confirm the time, start from the step 3 of Checking the entry/exit.  
Press  to enter other menu setting.
5. To exit the function setting mode, press the  button.

If the delay is set to 0, the alarm system is activated immediately after setting the away mode.



ex) setting entry/exit delay to 1 min. →  +  +  

### [ Checking the entry/exit delay ]

1. Press the .
2. Press .
3. Press the  button to hear the saved entry/exit delay time through the sound.
4. If desires to input again, start with the step 3.  
If desires to confirm the time, start from the step 3 of Setting and change the entry/exit delay.  
Press  to enter other menu setting.
5. To exit the function setting mode, press the .







Ex) Checking the entry/exit delay → Press  +  +  ▶ "The clue sound 'zero, four' "

# Function Setting

## Setting, Changing, Deleting, and Checking the Password

- ※ One household can have up to four passwords.
- ※ Be sure to remember the password for deactivating the security system and alarm.







### [Setting/Changing the Password]

1. Press the  button.
2. Press .
3. Enter the password (four digits).
4. Press .
5. To save the password to (  ~  ), press the corresponding button.
6. To continue entering passwords, start with the step 3. To check the password you entered, go to **[Checking Password]** 3.
7. To end the function setting menu, press the  button.

Ex) To set the password to [1111] →  +  +     +  + 







▶ "The number is set"

### [Deleting the Password]

1. Press the  button.
2. Press .
3. Press .
4. To delete the password from (  ~  ), press the corresponding button.
5. To continue deleting passwords, start with the step 3. To check the password you entered, go to **[Checking Password]** 3.
6. To end the function setting menu, press the  button.

Ex) To delete the password saved to [1] →  +  +  +  ▶ "The number is set"

### [Checking the Password]

1. Press the  button.
2. Press .
3. Press .
4. Press the button of (  ~  ) to check the password. You will then hear the saved password.
5. To continue checking passwords, start with the step 3.
6. To end the function setting menu, press the  button.


Ex) To check the password saved to [1] →  +  +  +  ▶ "The password is one, one, one, one"

# Phonecall function



## Telephone function

※ Optional function; may not be available in some models.

### [ Answering the phone ]


1. The phone bell rings/the talk lamp blinks.
2. Pressing (Talk)  causes the talk lamp to light up.
3. You are now ready talk to the caller.



### [ Making a phone call ]

1. Pressing (Talk)  causes the talk lamp to light up.
2. Dial the number to make your call.
  - To hang up, press (Talk) .

## Talking to someone at the Door

### [ Taking calls from the Door ]


1. The door bell rings/the door lamp blinks/you can see the door on the screen.
2. Pressing (Door)  causes the door lamp to light up.
3. Talk to the visitor.


- To terminate the call, press (Door) .
- You have three minutes to talk to the person at the door before the line is automatically terminated.
- When someone calls from the door, or if you are using the phone, you can open the entrance door by pressing .



**The door opening function is available only when a separate device is installed.**

### [ Monitoring the Door ]


1. Press (Door) .
2. The door lamp blinks/the image is shown on the screen (monitoring).

- To stop monitoring, press (Door) .
- You have 30 seconds to monitor the door before it is automatically terminated.



# Phonecall function












## Interphone function


### [Answering the interphone]



1. The interphone bell rings/the talk lamp blinks.
2. Pressing the (Talk)  button causes the talk lamp to light up.
3. Talk to the person on the other flat.

### [ Making a call over the interphone ]

1. Press the (Talk)  button.
2. You will hear the dial tone after pressing the  button.
3. Press the address number of the flat you want to call.


ex) Making a call to Apt. no. 101, flat number 1004 → (Talk)  +  +    +  +     + 

- To hang up, press the (Talk)  button.
- You have three minutes of talk time before the line is automatically terminated.


 In case you get a call from the telephone and interphone at the same time, press the (Talk)  button to be connected to the telephone.


## Reaching the guard post

### [ Taking calls from the guard post ]

1. The guard post bell rings/the guard lamp blinks.
2. Pressing the (Guard)  button causes the lamp to light up.
3. Talk to the guard.

### [ How to reach the guard post ]


1. Pressing the (Guard)  button causes the lamp to light up.
2. Talk to the guard.



- To hang up, press the (Guard)  button.
- You have three minutes to complete your call before the line is automatically terminated.

# Phonecall function

## Talking to someone at the common entrance

### [ Taking calls from the common entrance ]

1. The common entrance bell rings/the guard lamp blinks/the image is shown on the screen.
2. Pressing the (Guard)  button causes the guard lamp to light up.
3. Talk to the visitor.

- To stop talking, press the (Guard)  button.
- You have three minutes to talk to the person at the common entrance before the line is automatically terminated.
- Pressing the  button while talking to the entrance or over the telephone causes the entrance door to open.
- 🔊 When setting the away mode (refer to page 14), the call from the common entrance is automatically connected to the guard post.
- 🔊 When you get another call while talking to someone over the telephone or interphone, you can answer the new call only after terminating the first call.

# Security and Alarm Functions

## Away Mode

※ Away Mode, You can activate the security system when leaving the house.

1. Press  [Away].

2. Press  .

The Away lamp and Safety Zone lamp for monitoring are then lit.

Message: "**Security system is activated.**"

Away warning sound of "toot-toot" is then heard.

- During setting, the away mode is not set if the security zone except the entrance door and living room is breached (or sensed). The corresponding safety zone lamp then blinks, and the message "**Security system is not activated. Please check and try again**" is displayed.

▶ Press  [Away].

- When setting the away mode, the away status is transmitted to the guard post.

### Caution

The system considers you an intruder if you do not leave the house while the away warning alarm sounds. As a result, the security system is activated.

## Sleep (stay) Mode

※ You can activate the security system when you are at home.

1. Press  [Away].

2. Press  .

3. The Stay lamp and Safety Zone lamp for monitoring are then lit.

Message: "**Security system is activated.**"

- During setting, the Sleep mode is not set if the security zone is breached (or sensed). The corresponding safety zone lamp then blinks, and the message "Security system is not activated. Please check and try again" is displayed.

▶ Press  [Away].

- When setting the away mode, the away status is transmitted to the guard post.
- When the sleep mode is activated, the living room is not monitored; thus enabling you to move freely inside the house.
- If you have a visitor or wish to go outside while the sleep mode is activated, you need to deactivate the sleep mode first.



# Security and Alarm Functions

## Room Mode (deactivating the away and sleep modes)

※ You can deactivate the security system.

1. Input the "four-digit password" + \* + #.



Message: "The security system is deactivated."


- When you open the entrance door while the Exit or Sleep mode is activated, the security system is disabled during the previously set entrance delay time with the warning alarm ("toot-toot" sound).

**Caution** If you do not set the Room mode while the warning alarm sounds, you are considered an intruder, and the security system is activated.

## In Case of Emergency

### [Reporting an Emergency]

1. Press the  [Emergency] button on the bottom left.
2. The  [Emergency] lamp then blinks.

**Caution** Use the  [Emergency] button only when necessary.

### [In Case of Fire or Gas Leakage]

1. The Fire or Gas lamp on top blinks. / the corresponding alarm is issued.



### [In Case the Security Alarm is Activated]

1. The corresponding safety zone lamp blinks.  
Message: "Intruder found!"

- The security status is transmitted to the guard post.

# Security and Alarm Functions

## Deactivating the Emergency Alarm



1. Enter the password.
2. To turn off the warning sound, press the stop  button.
3. To deactivate the alarm completely, press the return  button.











**You need to finish your call or monitoring first to deactivate the alarm while talking on the phone or monitoring the entrance.**

**Caution** If the gas leak or cause of fire is not removed completely, the alarm is activated again.

**Caution** In case of gas leak, close the gas valve, open the windows to allow ventilation, and wait until the sensor lamp turns green. Do not turn on any electrical device.

※ You can perform deactivating and resetting by pressing stop  and return  even while the gas or fire alarm is activated (according to the laws and regulations on fire prevention).



## Testing the Alarm Sound

1. Press the  button.
2. Press .
3. Press  for emergency,  for fire,  for gas, or  for intrusion.
4. The lamp then blinks, and the corresponding alarm sounds (in case of emergency, however, only the lamp blinks).
5. To turn off the warning sound, press stop .
6. To terminate the test, press return .






# Electronic Bullet Board Function

## Electronic Bullet Board Function

### [View Info Title]

1. Press the  button and then press  to display the information title.
2. The title shows 20 letters at the first part of the information.



### [View Info Content]

1. Press the No.  ,  ~  ,  on the title menu of the information.
2. To select the 10th one on the Information No., Press  .
3. It displays “Loading---” at first during reading the information , then turn to the menu, finally the information content.
4. The reading time depends on the length of the information. 220 letters need about 10 seconds.

### [Return the information content to the title content]


1. To return to the title menu, press  .

### [End the Information Menu ]

1. To end the information menu and exit, press  button or  .

- It auto ends after 30 seconds without pressing any button.

### [Information Event]

1. If there is new information , the content will display automatically for 3 seconds on the menu and the melody will ring at same time.
2. After the auto display, the FUNCTION light will flash continuously to inform that the new information reaches.
3. If checks the information in one minute and press  , the menu will turn off.


# Saving Image Function

## To Modify Time



- 1 Press **[Door]** + **[6]** to go to SET UP MODE in Time Modify.
- 2 Press **[6]** to remove the cursor to the modify position.
- 3 Press **[1]** to increase the value, press **[5]** to decrease the value. After the time check, press **[6]** to remove the cursor to the position to modify.
- 4 To exit from Time Setup Mode, press **[7]**.

## To Record the image of the visitor

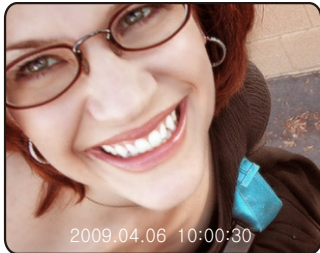


- 1 When the visitor is calling at entrance or pressing the entrance monitor, press **[2]** to start recording.
- 2 When Away Mode is set but the visitor calls at entrance, it will record automatically.

※ The recorded image is in color style. When the amount of the images is over 50 pieces, the 51st one would cover the first one, the 52nd one would cover the second one, so does the following one.


## To Check the image

- 1 Press **[Door]** + **[1]** to display the recorded image.
- 2 Press **[1]** to display the next menu.

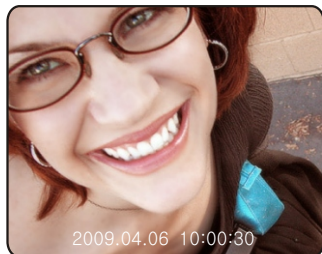


## To Delete the image

- 1 Press **[Door]** + **[1]** to display the recorded image.
- 2 Press **[4]** to delete the all saved images.

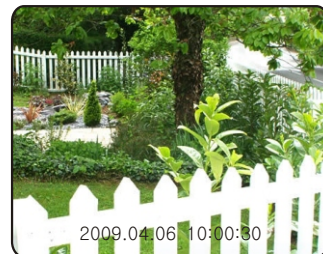

# Using the camera

## Parts of the camera

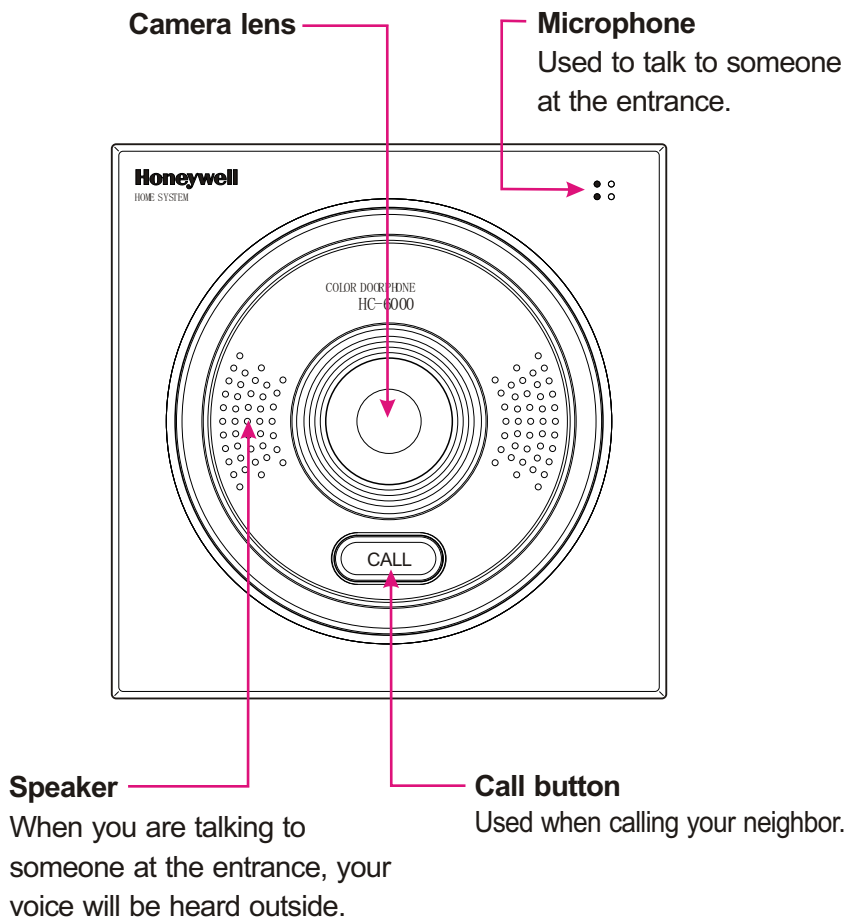

※ The camera is subject to change without prior notice.

# Troubleshooting

## Please check the manual before reporting a malfunction.

Check the list below before requesting for repair.

Symptom	Check the following	Reference
The panel is not working.	<ul style="list-style-type: none"><li>• Is the red light on the control panel turned on? (Check the power)</li></ul>	
The screen is fuzzy.	<ul style="list-style-type: none"><li>• Is the brightness setting appropriate? (Check the menu)</li><li>• Are there stains in the screen and camera lens?</li><li>• Is there moisture in the camera?</li></ul>	
The alarm has been activated and cannot be deactivated even after pressing the reset button.	<ul style="list-style-type: none"><li>• Did you follow the steps in sequence? (Check the menu)</li></ul>	
The exit mode cannot be set.	<ul style="list-style-type: none"><li>• Check for open doors (burglar alarm system).</li></ul>	
The functions are not working as intended.	<ul style="list-style-type: none"><li>• Refer again to the user's manual.</li></ul>	

### The following are not malfunctions:

- The doorphone camera and common entrance camera screens may become fuzzy under strong sunlight or headlights.
- The image may flicker slightly after pressing the call button.
- A motorcycle or car passing by the doorphone camera may affect the image on the screen.

# Product specifications

## Product specifications

The appearance and specifications in the user's manual may be changed without prior notice for product improvement purposes.

### Electrical specifications and characteristics

Classification		Control panel	Camera
Power voltage		220V AC	DC 12V
Dimensions(mm)		296 x 205 x 47	120 x 120 x 39
Weight		Approx. 1100 g	Approx. 200g
Temperature		-10 ~ 40°C	-10 ~ 40°C
Surrounding humidity		0 ~ 80%	0 ~ 80%
Power consumption	Normal	5W	0.2W
	Maximum	25W	2.4W

# Product warranty

## Product warranty

Model	HS-6270
Date of purchase	
Warranty period	1 year
Product serial number	
Store of purchase	

- ※ This product has gone through strict quality inspections prior delivery.
- ※ hMalfunction during use shall be repaired by the designated service or call center.

## Warranty rules

- ※ Malfunctions occurring during normal use and within the warranty period shall be repaired free of charge.
- ※ Malfunctions occurring during normal use and beyond the warranty period shall be repaired for a reasonable fee.
- ※ Malfunctions due to natural disasters shall be repaired for a reasonable fee.

Date of occurrence of malfunction	Cause of malfunction	Repair details	Person in charge

- ※ The cause of malfunction is very important; please give as much details as you can.
- ※ This product is subject to change without prior notice.

Contact:



# Honeywell Security & Data Collection

## For more information:

Asia Pacific Headquarters Tel:(86)21-5257 4568  
Australia Tel:(61)1300 368 755  
China Tel:(86)755-2518 1226  
Hong Kong Tel:(852)2405 2323

India Tel:(91)124 5105671  
Korea Tel:(82)2-799 6109  
Singapore Tel:(65)6333 9563  
Tainwan Tel:(886)2-2245 1000

[www.asia.security.honeywell.com](http://www.asia.security.honeywell.com)  
[security.ap@honeywell.com](mailto:security.ap@honeywell.com)

The Honeywell logo is displayed in a bold, red, sans-serif font.

Automation & Control Solutions  
Honeywell Security-Asia Pacific  
Honeywell International Inc.  
[www.security.honeywell.com](http://www.security.honeywell.com)

Jan 2009  
©2009 Honeywell International Inc.



■ The location of the lamps and specifications as shown in the picture above may vary slightly from the actual product.

## The World's Best Customer Service!

We at Honeywell provide the world's best customer service to enable our customers to enjoy a convenient and happy life.

# Honeywell

The contents of this user's manual are subject to change without prior notice.