



# 3PS Network Server 3.0

User Manual

For V3.0.06 Version

# About This Manual

## Target Audience

---

This manual is intended for **End Users** who actually execute security tasks such as monitoring activities, patrolling secured zones, searching video data and managing alarms with use of 3PS Network Server surveillance system. The reader is expected to own not only the basic operation skills but permissions to access major functionalities, as the access rights are based upon different user roles defined by the **System Administrators**.

## Content Overview

---

This manual provides information needed for monitoring the whole system and playback recordings. Its content consists of the following sections:

- **Login** provides instructions on how to log in to 3PS Network Server system as different clients.
- **3PS Network Server User Interface Overview** gives you a glance of the user interface components and module functions.
- **Live View** introduces the methods to add your desired channels and arrange your customized live view layout on live view screen.
- **Monitoring** provides guidance on how to read the system alerts and status, do live view PTZ operations, take a snapshot and execute manual recording.
- **Playback** gives instructions on how to perform synchronized playback and export files from 3PS Network Server system.



## 3PS Network Server 3.0 User Manual

### Related Documentation

---

Since this manual focuses on operation instructions for live view operations, playback, search video and export files from 3PS Network Server, there is very limited information about system installation and configurations for **System Administrator**. **System Administrators** and **End Users** who would like to obtain the instructions on 3PS Network Server system setup, please acquire the latest [3PS Network Server 3.0 System Administrator's Manual](http://www.inaxsys.com/en/support/downloads/manuals-specifications.html) from Inaxsys website via <http://www.inaxsys.com/en/support/downloads/manuals-specifications.html>.

### Technical Support

---

For technical support or feedback, please contact our Technical Support at [support@inaxsys.com](mailto:support@inaxsys.com)

### Conventions Used in This Manual

---

The following are typographic conventions used in this manual:

- **Bold**: Bold typeface is used for a keyword, major functions of 3PS Network Server, or a title of a section/column.
- *Italic*: Italic typeface is used for a filename or location path.
- Underlined: Underlined typeface is used for a document name or hyperlink.
- **"Bold"**: Bold interface enclosed in double quotation marks indicates the name of a button or a choice item.

Some notices are placed within the following boxes; each type of the box indicates different purposes or levels of importance for system:

#### Important Notice

The content within this box is an **important notice**. This notice is important for you to get certain function to work properly, or to prevent from certain potential problems that may damage your system. Make sure you read this notice and follow the instructions.

#### Note

The content within this box is a **note**. A note is some necessary information you need to know about the action you are currently taking, like what will happen after you follow or don't follow certain procedure.

#### Tip

The content within this box is a **tip**. A tip gives you an alternative method to easily or quickly achieve an objective, usually for specific conditions.

# Legal Notice

## Disclaimer

---

- The information contained in this document is intended for general information purposes. Inaxsys Security Systems Inc. shall not be liable for errors contained herein or for incidental or consequential damages arising from the furnishing, performance, or use of this manual.
- The information contained herein is subject to change without notice.
- The English version of this document is the official one for all purpose. All the translated versions are provided as a convenience. Any discrepancies or differences created in the translations of any other languages are not legally binding.


## Copyright

---

Copyright ©2003-2012 Inaxsys Security Systems Inc. All Rights Reserved.

## Trademarks

---

- 3PS and its logo  are registered trademarks of Inaxsys Security Systems Inc.
- Microsoft® and Windows® are registered trademarks of Microsoft Corporation.  
All other product or company names mentioned in this document may be trademarks or registered trademarks of their respective owners.

# Table of Contents

## 1 About This Manual 2

---

Target Audience .....	2
Content Overview .....	2
Related Documentation.....	3
Technical Support.....	3
Conventions Used in This Manual.....	4

## 2 Legal Notice 5

---

Disclaimer	5
Copyright	5
Trademarks.....	5

## 3 Table of Contents 6

## 4 Overview 9

---

3PS Network Server / Client Architecture .....	9
--	---

## 5 Log in to the System 10

---

Access via Internet Explorer Browser .....	10
Login .....	11
A. Enter Account & Password	11
B. Change UI language	11
C. Remember Account/Password	11
D. Retrieve the Forgotten Password	11
Access via 3PS Network Server Workstation.....	12
Login .....	12
A. Choose a Server	12
B. Server IP & Server Port	13
C. Enter Account & Password	13



## 3PS Network Server 3.0 User Manual

D. Choose the Initial Screen	13
E. Language	13
F. Remember Login Information	13
G. Retrieve the Forgotten Password	13
<b>Change User Profile.....</b>	<b>14</b>

## 6 3PS Network Server User Interface Overview

15

---

<b>3PS Network Server Resident Tool Bars.....</b>	<b>16</b>
<b>3PS Network Server Main Module Screens .....</b>	<b>18</b>
Live View.....	18
Playback .....	18
Setup.....	18

## 7 Live View

19

---

<b>Watch Live View .....</b>	<b>20</b>
Select a View .....	20
Select a Camera .....	21
Device List	21
Remove a Channel .....	22
Remove All Channels .....	22
Enable View Patrol.....	23

## 8 Monitor the System

24

---

<b>Acknowledge System Alerts and Channel Status.....</b>	<b>24</b>
Channel Status .....	24
Event Panel.....	25
Instant Event Playback.....	26
Pop-up Event Playback.....	27
Hot-Spot Window .....	27
<b>Live View Operations.....</b>	<b>28</b>
Show Mini Live View Windows on a Map.....	28
Adjust Audio-in Volume.....	29
Send Audio Signal .....	29

Trigger Digital-out Device.....	30
Watch Instant Playback of a Channel .....	31
Manual Recording.....	31
Take a Snapshot of Live Image .....	32
Digital PTZ Operation .....	32
Optical PTZ Operation .....	33
PTZ Panel Overview .....	33
Using Mouse Controls .....	34
Navigate a Fisheye Camera Channel .....	35
Change Fisheye Mode .....	35
PTZ Operation .....	35

## 9 Playback

## 37

---

<b>Playback UI Introduction.....</b>	<b>37</b>
<b>How to Do Playback.....</b>	<b>38</b>
Add Video Source .....	38
Remove Unwanted Channels .....	38
<b>Search on Time Bar .....</b>	<b>40</b>
Display Event Types .....	40
Event Type Highlight Colors .....	40
Playback Controls .....	40
Turn On Daylight Saving Time Function .....	41
<b>Digital Zoom on Playback .....</b>	<b>42</b>
<b>Explore Fisheye View .....</b>	<b>43</b>
<b>Search by Filter .....</b>	<b>44</b>
View Search Results.....	45
<b>Take a Snapshot of the Playback View .....</b>	<b>46</b>
<b>Export the Recordings .....</b>	<b>47</b>
Define the Section of Exported Video on Time Bar.....	47
Set the Export Video Settings .....	48



## Overview

3PS Network Server 3.0 (hereafter referred to as **3PS Network Server 3.0**) is a Windows-based software that provides distributed network video surveillance solution with full functionality. This software supports centralized management, real-time monitoring and recording of up to **24** Inaxsys video streaming devices from local or remote network, with rule-based services to trigger multiple schedules and events.


### 3PS Network Server / Client Architecture

3PS Network Server 3.0 is a typical web-based server/client system. In a video surveillance system architecture, the **Server** serves as a video management service provider, aimed to run 24/7 offering non-stop services for clients. A **Client** makes requests of monitoring video streams or playback recordings to **Server**, which can reside on the same computer with server program (as from local) or on another computer (as from remote). **Server** starts automatically as soon as the **Server computer** (where it is installed) boots up, and operates in the background without requiring login by administrator. It would provide services over the TCP/IP network to multiple **Clients** upon request through HTTP Protocol.

There are two types of **Clients** in 3PS Network Server 3.0 system: **Web Client** and **Workstation Client**. A user, connecting from whether web browser or workstation, will enjoy the same user interface and 3PS Network Server functions.

- **Web Client:** the web version of interface to access 3PS Network Server without need of installing any client program to become a client. Logging in the 3PS Network Server is as simple as visiting a website through IE browser.

- **Workstation Client:** the client application making accessing 3PS Network Server free from the use of browser .The workstation includes a set of programs that provide interface between users and the 3PS Network Server.

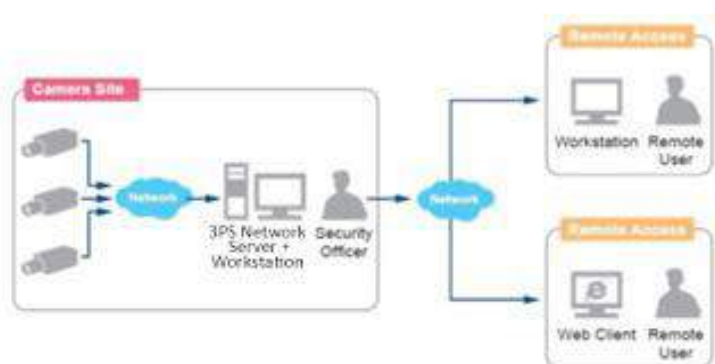

## Log in to the System


There are two types of clients in 3PS Network Server 3.0 system: **Web Client** and **Workstation Client**.

Both clients will enjoy the same user interface and functions. A web client can access 3PS Network Server 3.0 system via the **Windows** default browser: **Internet Explorer**; while a workstation client requires the **3PS Network Server Workstation** pre-installed on the computer. This section will include the said methods to access your 3PS Network Server 3.0 system.


### Access via Internet Explorer Browser

The computer where 3PS Network Server is installed is called **Server Computer**. You may access the server directly via Internet Explorer or **3PS Network Server Workstation** on any other client computer.

Please open your browser, in URL box, type [http://server ip address:port number](http://server_ip_address:port_number), e.g. <http://220.228.146.22:8888> (generally, the port number is 80 and can be ignored in the URL). If your computer is exactly where the 3PS Network server is installed, you may simply type [http://localhost:port number](http://localhost:port_number).

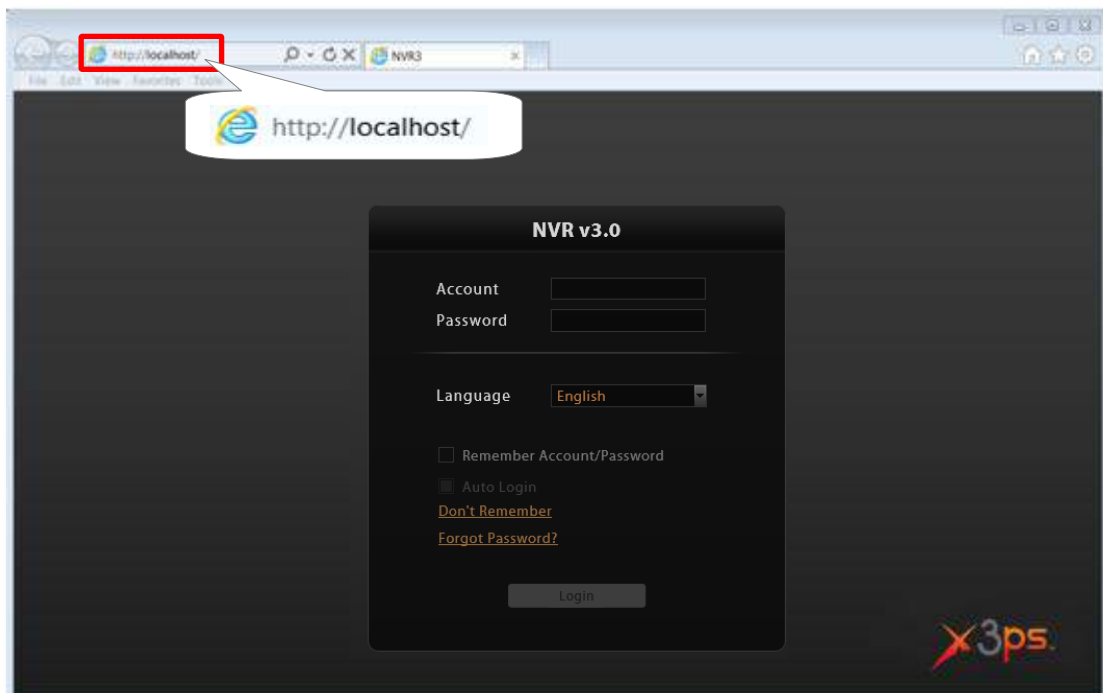

## Login

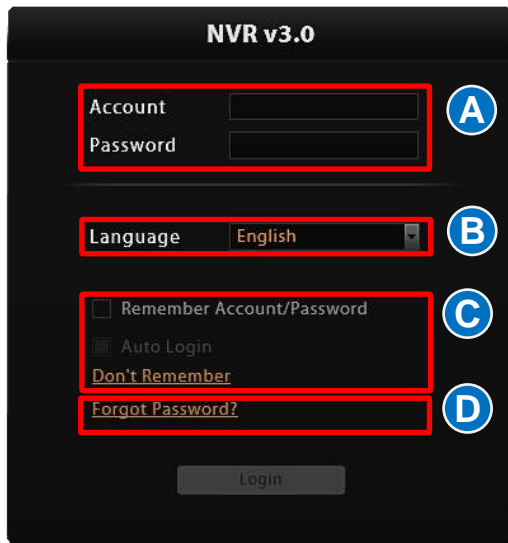

### A. Enter Account & Password

Please obtain the **Account & Password** information from **System Administrator** who has previously set up your User account in 3PS Network Server 3.0 system.

- **Account** (non case-sensitive): **deckardkain** (example)

- **Password** (case-sensitive): **Aa123456** (example)

### B. Change UI language


To change UI language, select the desired language from “**Language**” dropdown list.

### C. Remember Account/Password

To have the server remember your Login **Account** and **Password** for future, check “**Remember Account/Password**”. Click “**Don't Remember**” will clear your input text and reset to default.


To directly enter the main page every time you log in from this PC in the future Check “**Remember Account/Password**” then “**Auto Login**” to skip the Login page. **If your computer may be accessed by someone without proper authority, please DO NOT use either of these functions.**

To cancel auto-login, on title bar, click  “**Logout**” to return to login page, and this function is cancelled.

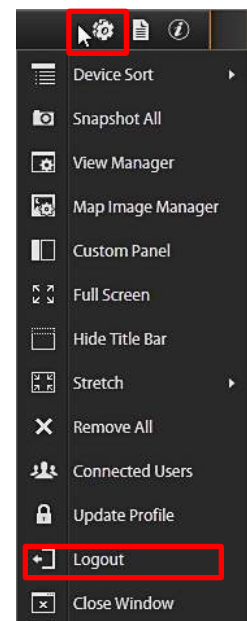

### D. Retrieve the Forgotten Password

Once you forget the password, you may first contact the **System Administrator** or try helping yourself with this procedure. 3PS Network Server can send your password to the email address you saved in 3PS Network Server, and it is strongly that you update your personal information after your first login (please refer to Change User Profile on page 14). Please note that this procedure is only available when the 3PS Network Server has access to SMTP service.

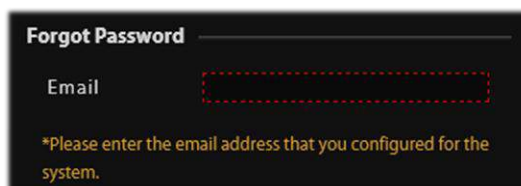

The email address input in **Forgot Password** window should match the one under your User account saved in 3PS Network Server.

## Access via 3PS Network Server Workstation

**3PS Network Server Workstation** includes a set of programs that provide interface between users and the 3PS Network Server. It may be installed on the same PC as the 3PS Network Server, or they may be installed separately and connected to 3PS Network Server via network.



Double-click the shortcut icon on your desktop to execute this workstation application.



### Login

Fill in the following fields then click **“Login”** to log in to the system. The login process of Workstation is very much the same as that of Web browser.

#### A. Choose a Server

**3PS Network Server Workstation** can remember multiple server sites and their login settings. Click on the arrow next to **Server Name**, and select a site from the dropdown list to log in.



### B. Server IP & Server Port


- In **Server IP** field, key in **localhost** or **127.0.0.1** if 3PS Network Server Workstation is on the same computer with 3PS Network Server. If you are connecting from another computer, please input the ip address of server computer, for example: **220.228.146.21**.
- In **Server Port** field, key in the server port number, default is **80**.

### C. Enter Account & Password

Please obtain the **Account & Password** information from **System Administrator** who has previously set up your User account in 3PS Network Server 3.0 system.

- **Account** (non case-sensitive): **deckard kain** (example)
- **Password** (case-sensitive): **Aa123456** (example)

### D. Choose the Initial Screen

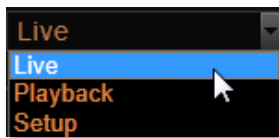

3PS Network Server 3.0 user interface consists of three main module screens: **Live View**, **Playback** and **Setup**, you may choose one where you would like to enter after logging in. Default is **Live View** screen.


### E. Language


Choose a UI language from dropdown list.

### F. Remember Login Information

To have **3PS Network Server Workstation** remember the **Account**, **Password**, your choices of **Initial Page** and **UI Language**, simply check **“Remember login info”**. Click **“Don’t Remember”** will clear your input text and reset to default.

To directly enter the desired page every time you log in from this PC , check **“Remember login info”** then **“Auto Login”** to skip the Login page. **If your computer may be accessed by someone else, you might consider not to use either of these functions.**

To cancel auto-login, on title bar, click  → **“Logout”** to return to login page, and this function is cancelled.

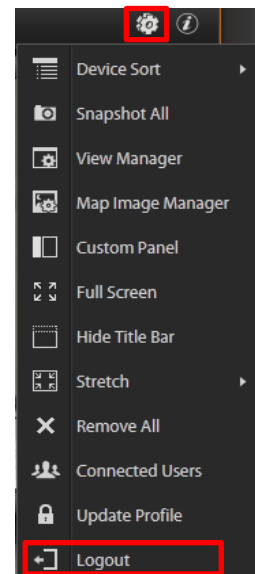


### G. Retrieve the Forgotten Password


Please refer to D. Retrieve the Forgotten Password on page 11.

## Change User Profile

You can maintain your own account information on 3PS Network Server interface without **System Administrator's** help.


On 3PS Network Server screen, click  → **“Update Profile”**.

You may change the email address or password and then click **“Apply”** to save the settings to 3PS Network Server.

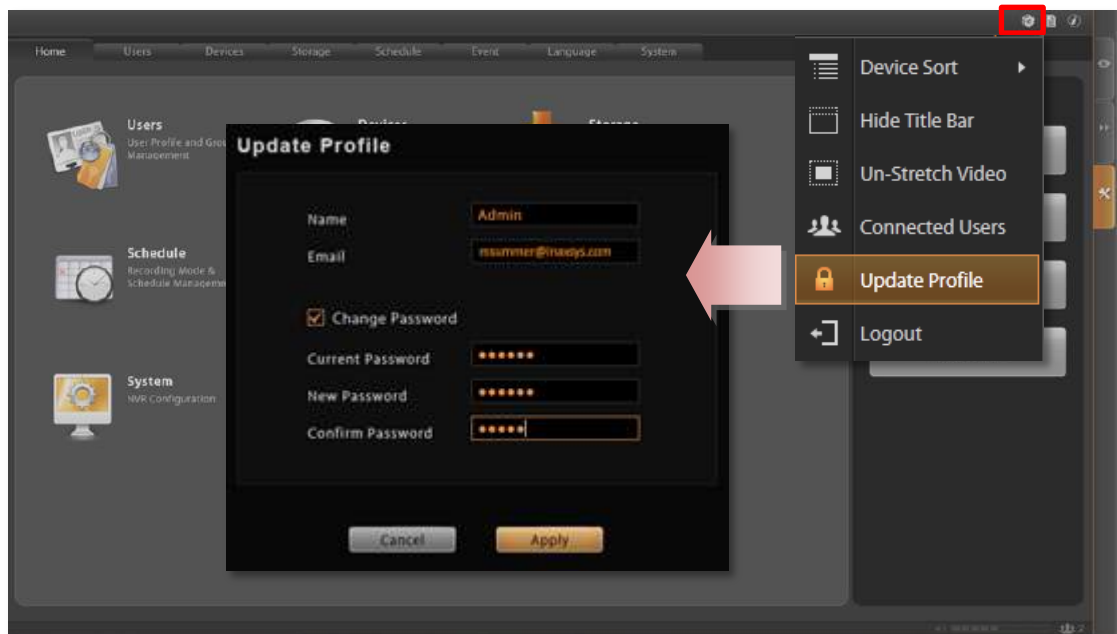

# 3PS Network Server User Interface Overview

Unlike some 3PS Network Server system products on the market, whose tree-like structure may easily confuse the User. 3PS Network Server 3.0's easy user interface structure saves you a lot of time and hassle going from one page to another. Once you log in to the system, you may switch to any of the main function modules: **Live View**, **Playback** and **Setup** on any screen.

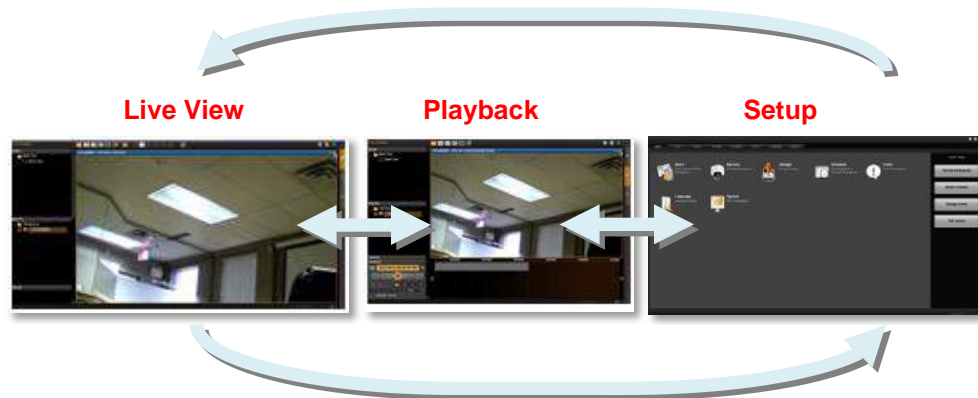


## 3PS Network Server Resident Tool Bars

These resident tool bars are important functions or links that you often need through all the operations in 3PS Network Server system.

**3** Layout Selection Bar    **4** View Tool Bar

**1** Tool Bar

**2** Network Server Module Bar

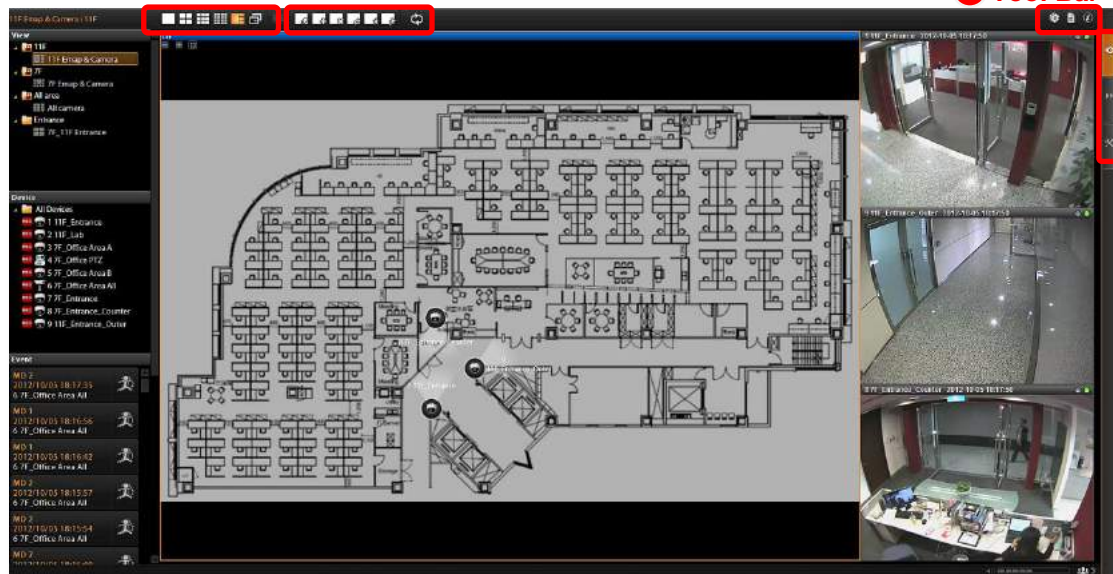


**1** Tool Bar: To the right of title bar reside three links to most-used functions throughout all screens:




Options are certain useful functions you mostly need. The provided functions vary on different screens.


### Live view Screen

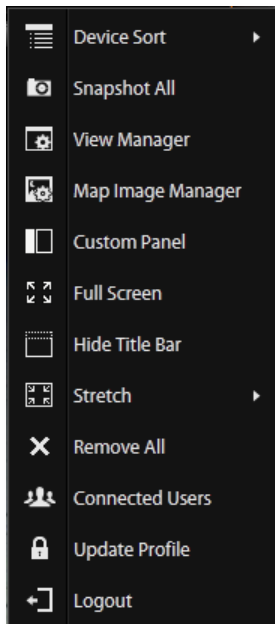

### Playback Screen

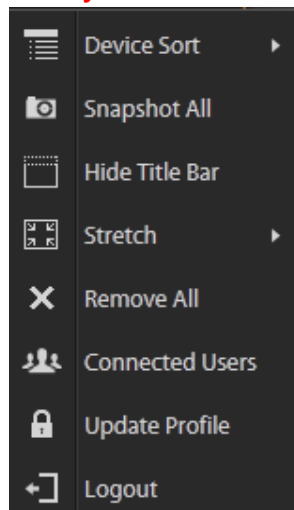


### Setup Screen

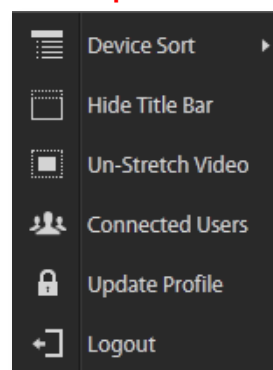





**System Log** provides the search module for you to review the records of user's behavior on this server. This is only available when your User right has permission to access it.

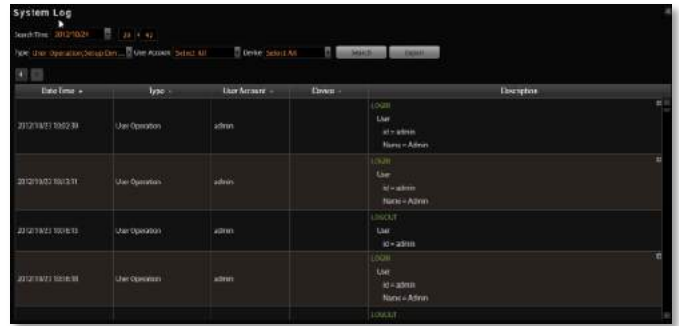

Date Time	Type	User Account	Device	Description
2012/10/21 10:02:30	User Operation	admin		LOGON User: admin Name: Admin
2012/10/21 10:03:11	User Operation	admin		LOGON User: admin Name: Admin
2012/10/21 10:04:10	User Operation	admin		LOGOFF User: admin ID: 23888
2012/10/21 10:04:38	User Operation	admin		LOGON User: admin Name: Admin
				LOGOFF




**About Us** displays the software version number and required ActiveX Control version number. You may also find Inaxsys supportive links here.

- 3PS Network Server Module Bar** includes three main module screens: **Live View**, **Playback** and **Setup**. You can click the button to enter the function page directly.
- Layout Selection Bar** provides different layout styles for **Live View** and **Playback** screen.
- View Tool Bar** provides function keys for View editing on **Live View** screen.

## 3PS Network Server Main Module Screens


Click on the orange buttons on **Module Bar** to switch among these three main screens directly.

### Live View

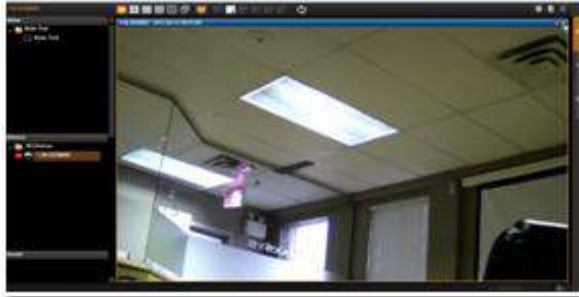

In this module you can see live view from cameras and devices, perform PTZ operations with mouse or Joystick, view system log, receive alert on the Event panel, setup view layouts, perform manual recording or take a snapshot.

### Playback

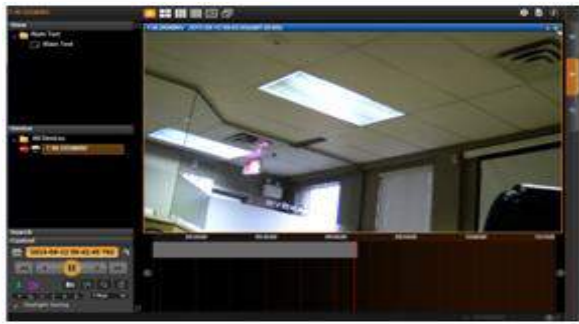

You may find and playback existing recordings in this module. Up to 24 channels may be played back synchronously. Snapshots or video segments can be taken from playback files. Recorded files can also be exported to AVI format here.


### Setup



This module includes user setup, device setup, event setup, schedule setup and system-wide settings

## Live View

**Live View** is the interface where you see the live views from your cameras. It is where most of the security professionals access the surveillance system. Aside from keeping an eye on the video, you may also cycle through View layouts, drag and drop various cameras to the screen, review a log of events, take snapshots, control PTZ cameras, start or stop recording on a given channel, trigger Digital output and broadcast or talk to specific cameras. In this section, you will be given instructions on the said fundamental operations. To start, click **Live View** tab to enter live view screen.

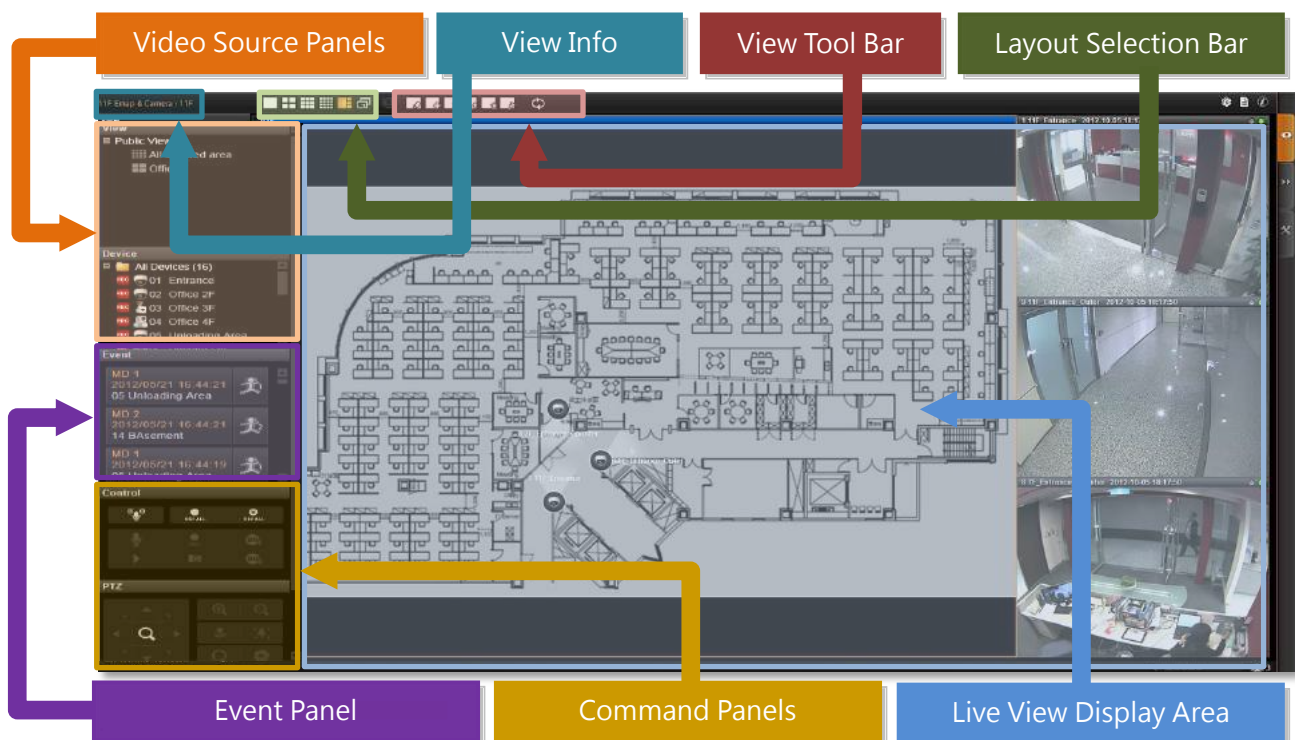

- **View Info:** displays the information: [Current View name][Focused Channel name].
- **Video Source Panels:** **View List** panel and **Device List** panel provide two types of video source for live view display area.
- **Event Panel:** displays alerts of detected motion, abnormal system and device status.
- **Live View Command Panels:** **Control** panel and **PTZ** panel provide most used live view operation commands.
- **Layout Selection Bar:** offers different layout styles.
- **View Tool Bar:** you may create a view and save it using the buttons here. You may also assign specific layout to start patrolling.
- **Liver View Display Area:** you may add up to 24 channels into this area to monitor them concurrently.

## Watch Live View

---

Upon logging in to the system, you will enter the live view screen. If your System Administrator or colleagues have already set the default layout, you may immediately see the live view, and start monitoring without the need to arrange the devices or layouts.

### Select a View

In 3PS Network Server 3.0 system, a **View** refers to the layout where the live images of a few devices are arranged in proper positions to suit the monitoring purpose. This is very similar to a **Camera Group**, which consists of cameras in the same physical location or with the same device functions. For example, a View named **First Floor** may contain the cameras that actually placed in the secured area on the first floor. Once created, each camera view is assigned to a certain channel on the layout style selected by creator.


#### Note

Based on your User Group permissions, you may or may not own the privilege

- To create, edit or delete a **Public View** or a **Private View**
- To assign a specific View as default View
- To see all the cameras included in a **Public View**.




Therefore, you may find certain view edit functions not available on the **View Tool Bar**.

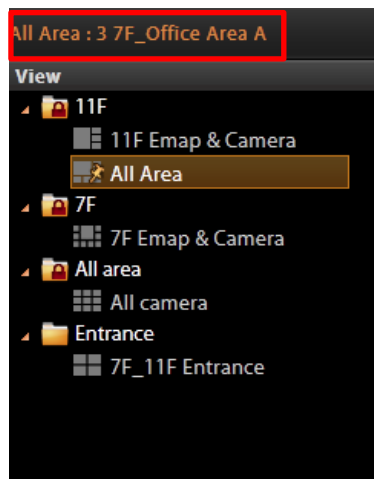To watch a saved View, simply click on it on **View List** panel.



Above the **View List** panel title will display

[Current View name]:Device name

- The **Public Views**  are open to every User
- The **Private Views**  are only available to the User who created them. You may not see this folder if without the User right to own the **Private Views**.
- The view with a pin on it  is set by System Administrator as default view. You will enter this view every time you log in.

For details about how to create and edit a **View**, please refer to the chapter **Customize Views** in [3PS Network Server 3.0 Administrator's Manual](#).

## Select a Camera

To watch the live view of individual devices, you need to identify and add this device video stream to a blank channel in display area. All the devices that you are allowed to see are in the **Device List** panel on the left. The permissions to watch different devices are defined by your User Group, the details of which are managed by the System Administrator.


To pull in video sources to the display area:


From **Device List** panel, double-click on a device or drag it to **Display** area. By double-clicking on “All Device”, all the devices will be added to the **Display** area.




## Device List


To view the device information, put the cursor over the device figure to bring the info box up.

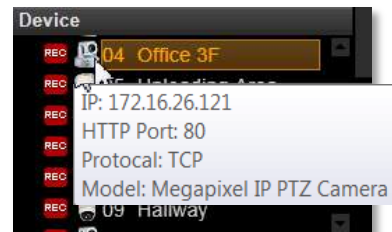

In **Device List** panel, you may also sort the devices in different order. Click  on title bar, select “Device Sort”, and choose “by IP” or “by ID” as the sorting method.

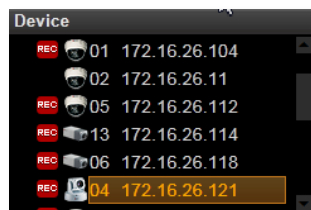


By Device IP

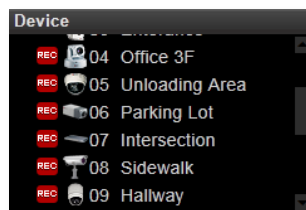

By Device ID (default)


### Remove a Channel

To remove a channel from display window, you may right-click to bring up quick menu on the channel, and select “**Remove**” to remove this video source.

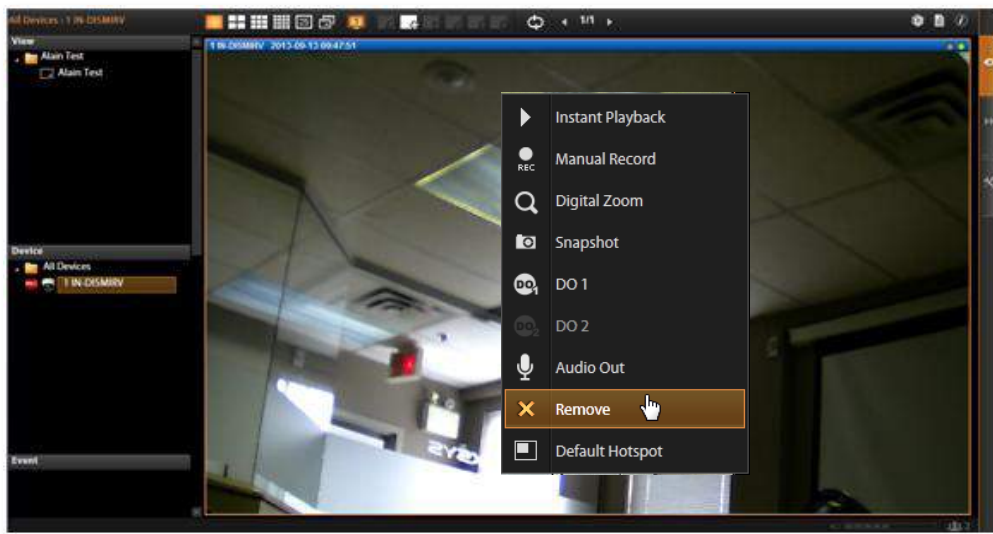



### Remove All Channels

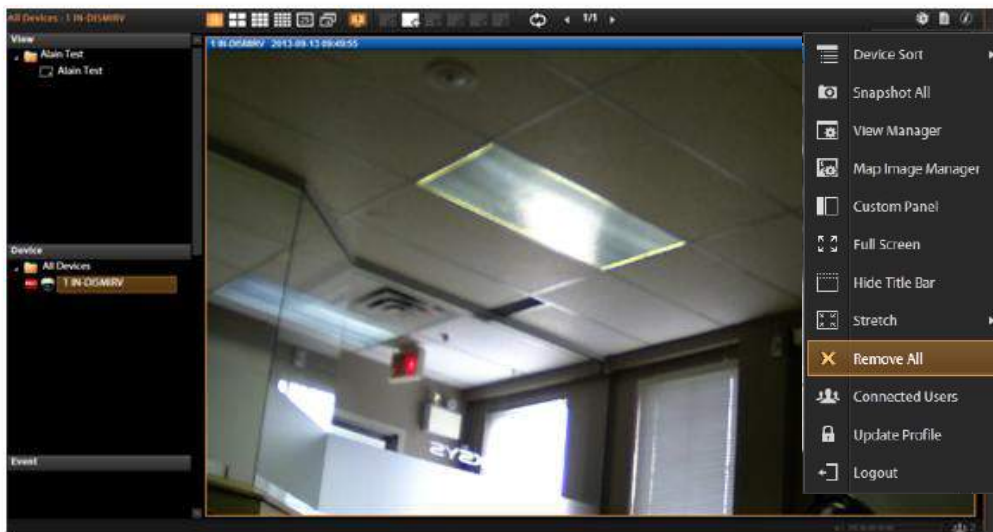You may disconnect all devices by clicking  in title bar and selecting “**Remove All**”.



#### Tip

##### **Full Screen**

On system title bar, click  then select “**Full Screen**” to enter full screen mode. Click the icon  on top right corner of title bar to return to normal mode.

##### **Stretch/Un-stretch Channel View**


On title bar, click  then select “**Stretch**” to make the width of video to fulfill the window.

## Enable View Patrol

You may have the saved Views patrol in turns. In this way, the views in different areas in your site may cycle through themselves for you automatically.

On title bar, click to select a saved patrol. As patrolling is running on Live View is doing patrol, click to stop.

You may create an **Instant Patrol**, which will only temporarily take effect during your current login.

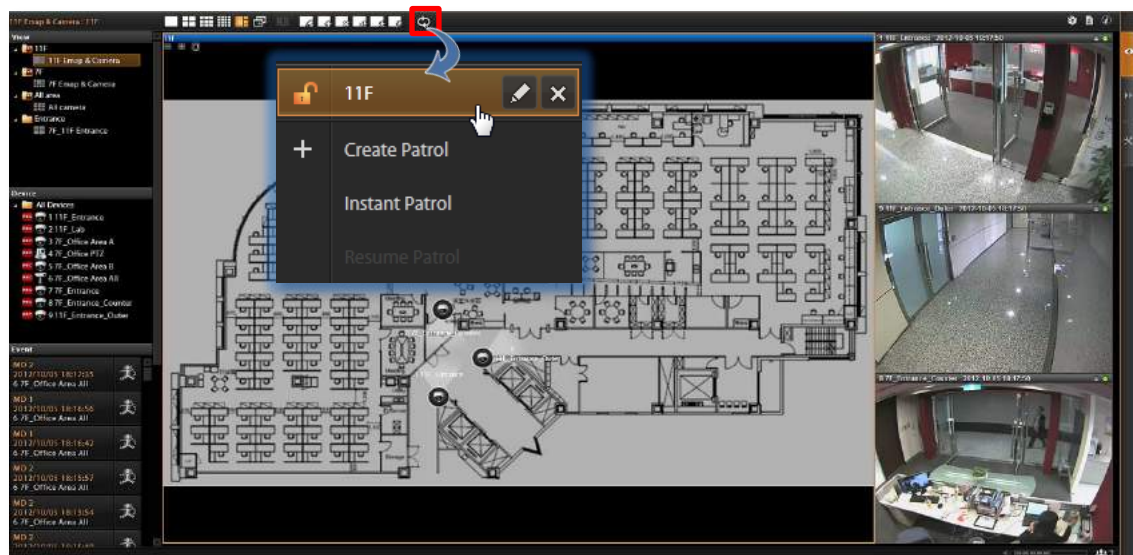

To configure the instant patrol, please:

1. Define the **Global Dwell Time** between the views. If you want to set different dwell time length for individual Views, do not check this option, and configure them separately in below table.
2. Choose the **Views** to display in patrol. If you select the **All Device** group, you will also need to select “**All Device Layout Style**” for it.
3. Click “**Apply**” to save the settings. This patrol will instantly start running until you click .



## Monitor the System

The security monitoring, in surveillance world, involve monitoring or patrolling the whole site, discovering unusual circumstances or investigating the scene at the earliest time. The said tasks would require knowledge and skills to make use of 3PS Network Server functions. This section will introduce the essentials of how you achieve the goal with 3PS Network Server 3.0.

### Acknowledge System Alerts and Channel Status

On 3PS Network Server **Live view** screen, it is essential to observe the system status events. As unexpected environmental factors or human behaviors may take place to influence your surveillance system like power failure or internet connection interruption, 3PS Network Server may lose the connection with devices, and hence you might lose the important video evidence.

#### Channel Status




The title bar of each channel window displays certain status information about this device.





#### The indicators

The color of two indicators on top right channel title bar shows the following status:

##### ●Right

-  :Device is connected with video presence
-  :Devices is not connected
-  :Device is connected, video is not received

##### ●Left

-  : Performing manual recording
-  : Taking snapshot

If this device is triggered by events such as video motion, PIR motion or digital input device, the channel title bar would turn red for a while to alert you that some movements have been detected. Based on System Administrator's setting, you may hear the "**Beep**" audio alert when certain devices are triggered.





On a map channel, if a device is triggered by events such as video motion, PIR motion or digital input device, an event icon will blink besides the device icon for a few seconds.

Click on the device icon to see mini live view window on the map.




## Event Panel

It is important to check out the messages pushed into **Event** panel all the time. These messages are arranged in a reverse-time order (newest on top, oldest on bottom).



The messages notify you of the following device or system status:

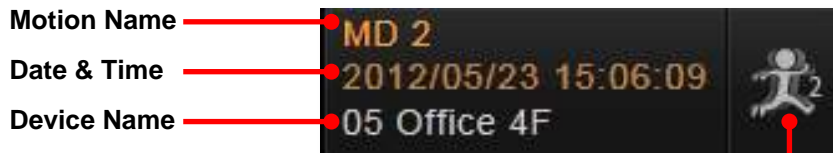

- |                                |                         |                          |
|--------------------------------|-------------------------|--------------------------|
| <b>Detected Motion</b>         | <b>Video Recovery</b>   | <b>Delete File Fail</b>  |
| <b>Digital Input triggered</b> | <b>Video Loss</b>       | <b>Disk Full</b>         |
| <b>PIR Motion</b>              | <b>Network Recovery</b> | <b>Disk Not Found</b>    |
|                                | <b>Network Loss</b>     | <b>Disk is Available</b> |
|                                |                         | <b>Server Recovery</b>   |
|                                |                         | <b>Server Loss</b>       |

## Important Notice

When 3PS Network Server fails to connect a device, to get the video or have disk problems, it might be caused by a temporary network disconnection in your overall environment. The connection might recover after the problem is fixed. If not, please contact your System Administrator.

## Instant Event Playback

Among these types of Event messages, you may individually watch the event playback of a motion (video motion, DI or PIR) event or transmission status event (video recovery & loss, network recovery& loss).

To bring up the instant event playback window, double-click on an event entry:




As the window pops out, it will immediately start playing live view stream. You may draw the time bar back and forth to search.

- Click to play video, to pause, or to play live view video.
- On time bar, click the blue mark or which indicates the event's occurrence, and then to playback this event.
- Click to start manual recording the currently-playing video.
- Click to take a snapshot of this view.
- Click to switch to **Playback** screen.
- Click on top right of the window title to close.

## Pop-up Event Playback

Sometimes the instant event playback window would automatically pop-up to notify you of events detected on certain camera sites. As the events in certain sensitive spots will have higher priority than other channels, your System Administrator would apply this “**Pop-up Event Window**” function to these cameras. In this way, these critical events will be pushed into your sight actively.

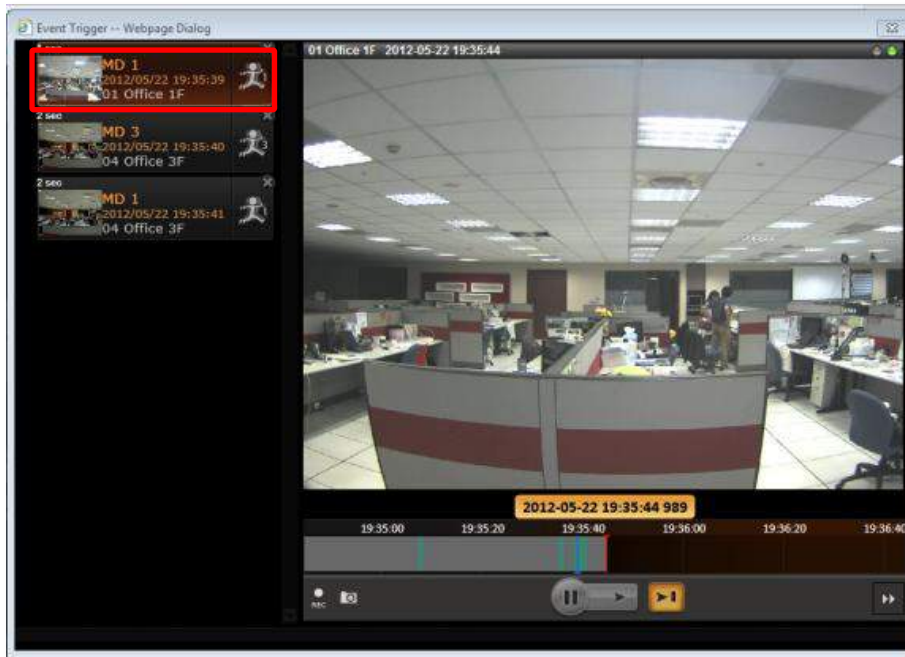


On the left of the window may list a series of motions detected within the same period. You may double-click on any entry to see its live view or playback the event. This window would automatically disappear after a while, and you may still look these events up in the **Event** panel.

## Hot-Spot Window

 In your Live View screen, the upper left window may sometimes display a device video instead of the original channel. This is because the events detected in certain sensitive spots will have higher priority than other channels. Whichever View you are watching, the events detected by those cameras will be temporarily displayed in this window to catch your attention.

You can set any other channel on your live view screen to be the default hotspot channel.

Right-click on the desired channel and select “**Default Hotspot**”




## Live View Operations

Aside from pure watching, there are more benefits provided by 3PS Network Server to accomplish more tasks. For example, you may make use of the audio function to communicate with people on camera side, look into more details with PTZ devices, or navigate the whole scene on the maps.


### Show Mini Live View Windows on a Map

You may open mini live view windows of all devices on a map channel to get an overview of what is happening on this map.

- Click on the icon to enter another linked map.
- Double-click on a device icon to open its live view window.
- On the map channel, right-click and select “**Show All Live View**”.

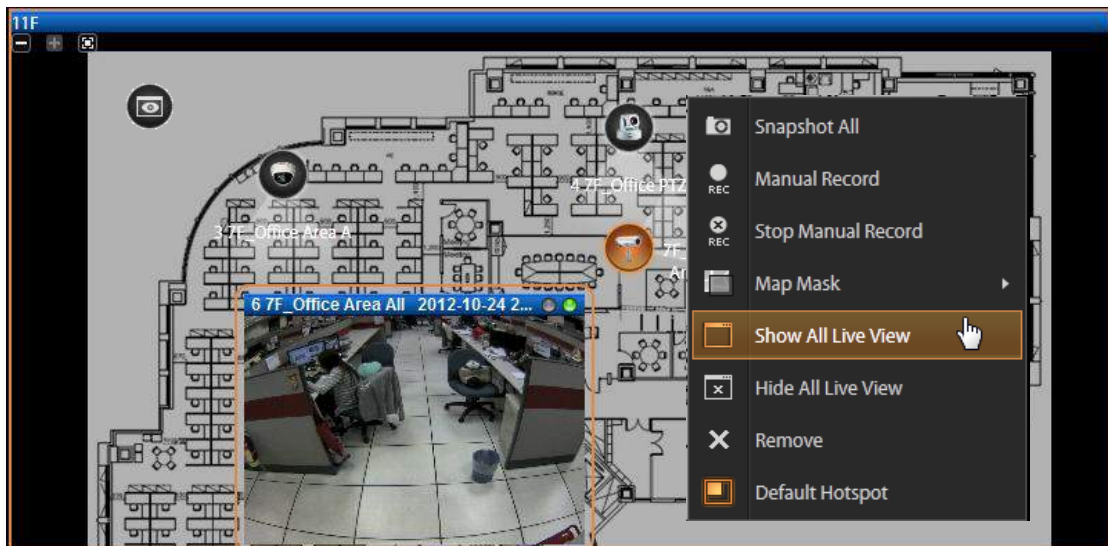


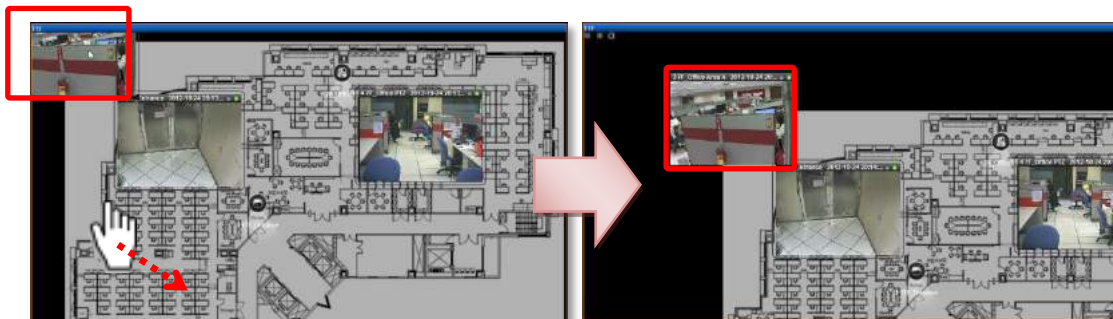

If certain mini windows appear out of view, you can drag on anywhere on the map to move the image until the window reveals.




## Adjust Audio-in Volume

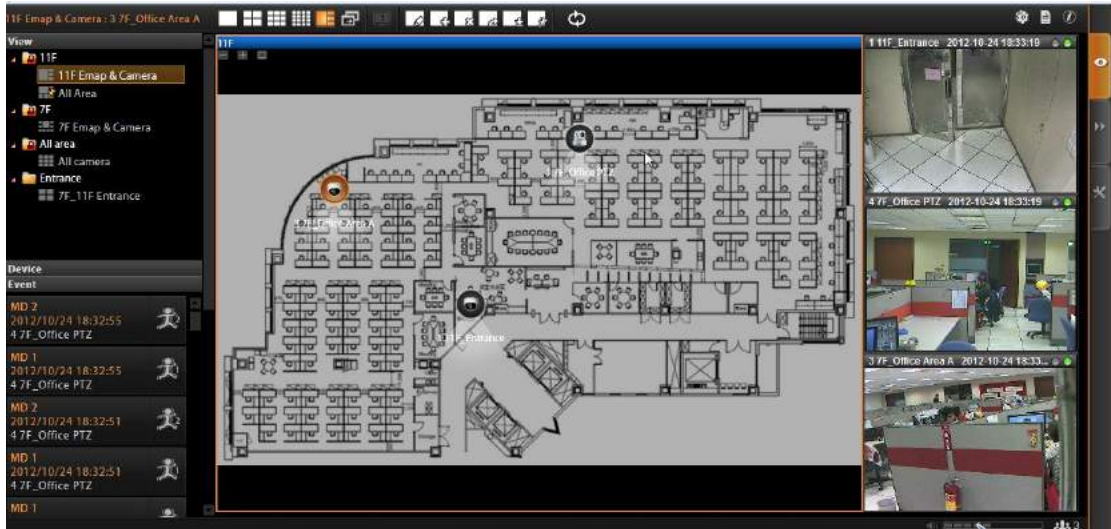If one or more cameras are connected with an audio-in device like a microphone, or supports two-way audio function, the audio signal will be recorded along with video stream. You may listen to the real-time audio on **Live View** screen or recorded audio in **Playback** screen. In **Live view**, 3PS Network Server will send out the audio signal when you select a channel. On bottom right of **Live View** screen is the audio-in volume control.




- To mute the channel audio, click .
- To activate the channel audio, click .
- To adjust audio volume, drag on the volume meter.

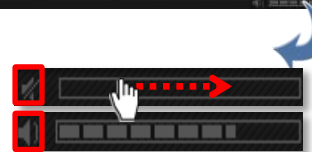


## Send Audio Signal

• To talk to the audience through speaker connected to one camera, right-click on a channel to bring up the quick menu, and select “**Audio Out**”. When this icon appears in orange, your audio-out function is activated, every sound you make through the microphone on your client computer will be sent out to this camera only.




- To broadcast to multiple cameras, click  on **Live view Control** panel. Your audio will be sent to all the channels connected to a speaker in current View.

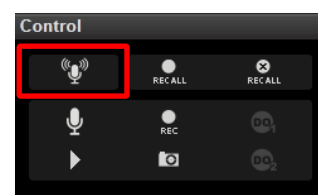


## Trigger Digital-out Device

If a camera is connected with a digital-out device such as a door contact or an alarm, you may trigger it via 3PS Network Server on **Live View** screen. Do either of the following:

On the channel, right-click to bring up the quick menu, the DO icon will appear available if the corresponding DO device is connected. Click **“DO”** to trigger it, click again to stop triggering.

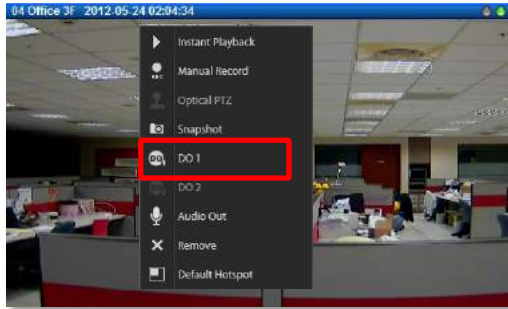


- As a channel is focused, click  on **Live view Control** panel, click again to stop triggering.

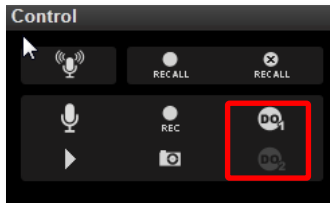


### Note

Trigger DO and sending audio to a specific device are only available on a single camera channel. On a map channel, you may do **“Audio Broadcast”** to all devices in this view.

## Watch Instant Playback of a Channel

You may watch the playback of any channel in a pop-up window on **Live View** without switching to **Playback** screen. As a channel is focused, click  on **Live View Control** panel.

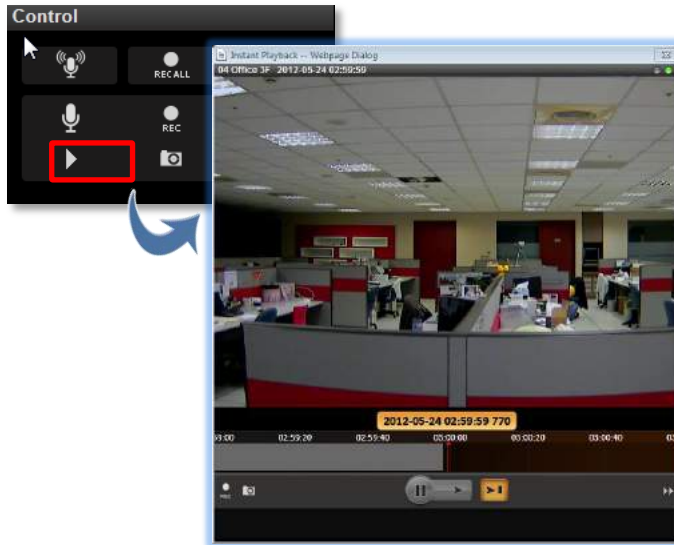

## Manual Recording



You may manually record the real-time video on **Live view** screen. This video will only be searchable in **Playback**. You may switch to **Playback** screen to find this clip (please refer to the section in this manual: Search by Filter on page 44 for instructions).


To do manual recording, do one of the following:

- On a channel, right-click to bring up the quick menu, then select “**Manual Record**”.

Once the recording starts, the left indicator on the channel title bar will turn red. To stop recording, click “**Manual Record**” again on quick menu.



- To manual record all channels in current View, on **Live view Control** panel, click ; click .

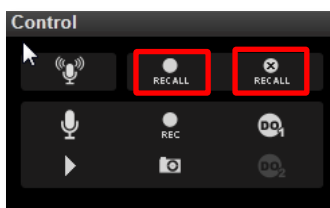

## Take a Snapshot of Live Image


You may take a snapshot on a channel live image on **Live View** screen. The snapshot will be saved to default folder on your client computer as .jpg format (The system default location is **Windows Desktop**). You may find the location path on the bottom of 3PS Network Server window after taking a snapshot.


**Snapshot to: C:\Users\Wen.Cheng\Desktop\Channel01\_20121024184041\_759.jpg**

You may do one of the following to take a snapshot:

- On a channel, right-click to bring up the quick menu and select “**Snapshot**”. While the snapshot is being taken, the left indicator on the channel title bar will turn blue. After the picture is taken, the indicator will then turn grey.




- As a channel is focused, click  on **Live view Control** panel to take a snapshot.

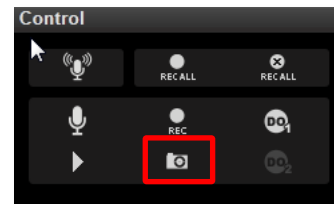


## Digital PTZ Operation

Regardless of the device models, you may perform digital zooming on **Live view** screen.

 1. Click and drag a highlight rectangle over any channel, and the area highlighted will be displayed in the full live video window. In this mode, a picture-in-picture view will show in the lower right of live view window. A red rectangle will mark the currently enlarged view area within the full size video. You may drag the red rectangle over the image to zoom another area.



**Draw Zoom area**

 

**Cancel Zoom area**

2. To go back to the original full video view, just right-click on the minimized Picture in Picture view.



## Optical PTZ Operation

If there is a camera supporting optical pan/tilt/zoom function in current view, you may operate it via the **PTZ** panel.

Once you select the camera, the optical PTZ controls will become available on **PTZ Panel**.

### PTZ Panel Overview

**Digital/Optical Zoom switch**  
Click to switch the PTZ mode between digital PTZ and optical PTZ mode . A non-PTZ device will only have digital PTZ mode.

**Zoom Controls**  
If the camera has controllable zoom, these two buttons will zoom the lens in or out.

**8-directional PTZ navigation controls**  
Click to control PTZ movements.

**Focus Controls**  
If the camera has controllable focus, this will shift the focus of the camera.

**Pan/Tilt/Zoom Speed Controls**  
Click on the speed meter to define the speed of PTZ movement.

**Iris Controls**  
If the camera has controllable iris, these two buttons will modify Iris level.

**Goto Preset**  
01 Left aisle  
02 Middle  
03 Right aisle  
**Preset** Tour Command

**Preset Tour**  
Stop  
01 Office Tour  
02  
03  
04  
05  
06  
**Preset** Tour Command

**PTZ Command**  
01 Wash  
**Preset** Tour Command

**Goto Preset Menu**  
Select the preset point name from the list to go to the spot. Click the title "**Goto Preset**" to close menu.

**Preset Tour Menu**  
Select a tour name from the list to start a PTZ tour. Click "**Stop**" to stop touring. Click the title "**Preset Tour**" to close menu.



**PTZ Command Menu**  
Select a command from the list to execute particular action command. Click the title "**PTZ Command**" to close menu.

### Using Mouse Controls

You may also use mouse to perform PTZ negation on a channel view or a mini live view window on a map.

Place the mouse over the channel to do the following PTZ operations:

- To execute optical **Panning** and **Tilting**, click anywhere on the live window to allow the camera to move in that direction. The length of the direction indicator is proportional to the Pan and Tilt speed. The farther you place the cursor from the center, the faster the Pan/Tilt movement.
- To execute optical **Zoom in** or **Zoom out**, scroll the mouse wheel forward to zoom in; scroll the mouse wheel backward to zoom out.

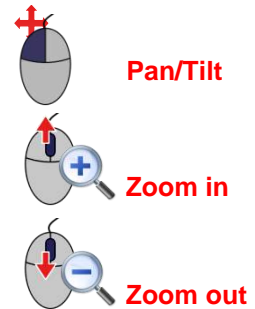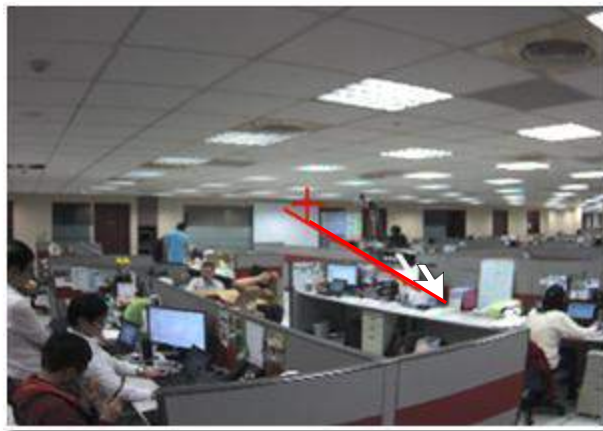


## Navigate a Fisheye Camera Channel

On a fisheye camera channel, you may change the fisheye view mode and view point at will. What you see on **Live View** screen will not affect what is being recorded, and you can have alternative choice of view mode when doing playback.

## Change Fisheye Mode

On this channel, right-click to bring up channel menu, click **"Fisheye Mode"** and select one mode.

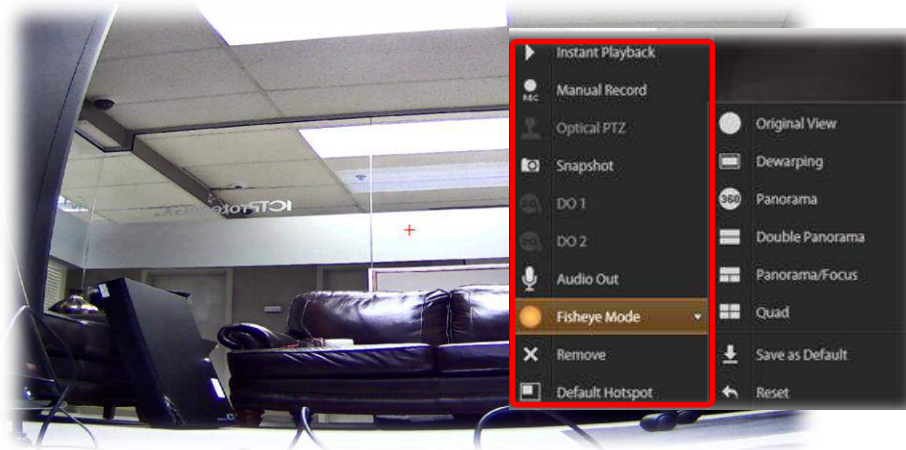


## PTZ Operation


Select a fisheye mode; click the entire channel or a region of interest to navigate this view

- Use **PTZ Panel** controls to operate PTZ movements:

### PTZ Controls on PTZ Panel

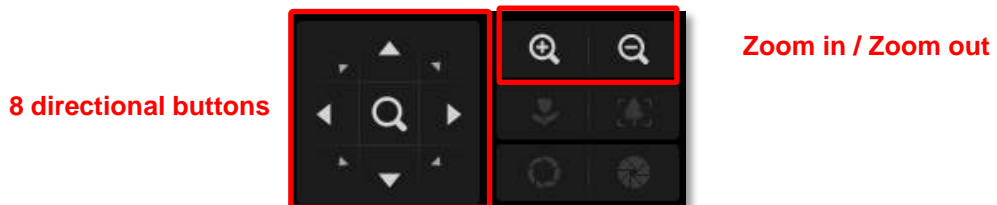

- Click the mouse anywhere on the view to pan/tilt, scroll the mouse wheel to zoom in/out.

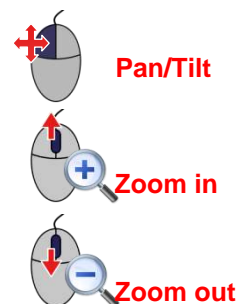

- To reset the PTZ navigation area back to default viewing angle, right-click to bring up channel menu, and then click “**Reset**”.

### Note

Once a channel is changed to any of the following fisheye modes: **Dewarping, Panorama, Double Panorama, Panorama/Focus** or **Quad**, the resolution of this live stream will become 1920x1080, so will the resolution of the snapshot.


## Playback

**3PS Network Server Playback** is the 3PS Network Server module that processes recorded clips. You may search, playback and export video through Active Player. Playback may include up to 24 channels synchronized playback. Video clips may also be exported in either RAW or AVI formats.

### Playback UI Introduction

Playback screen consists of four function areas: **Video Source**, **Playback Display**, **Time Bar** and **Search Panel**.

- **Video Source Area:** Provides both saved **Views** and **Device Tree**, you may drag a view or device to **Playback Display** Area to view the recordings.
- **Playback Display Area:** You may have multiple-channel synchronized playback in this area
- **Tim Bar Area:** The time bar of the video source in **Playback Display** Area will be shown here. You may drag on the time bar back and forth to your desired time spot.
- **Search Tool Area:** The **Search** results and **Control** panels are shown here. You may find the playback controls, search tool and export options in **Control** panel. The **Search** results will display your search results in thumbnails, providing event filter and pagination to easily scan through.

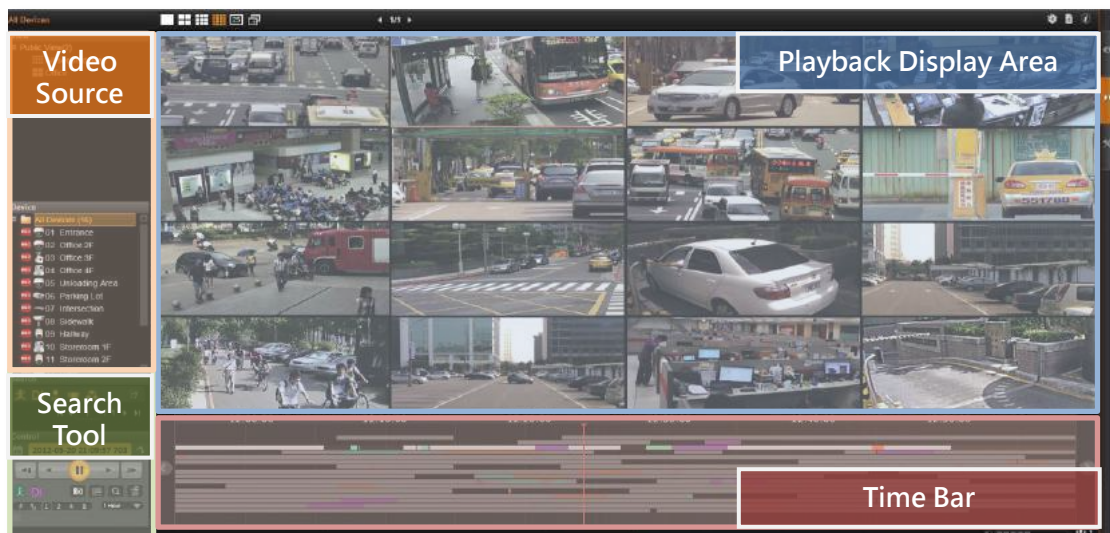

## How to Do Playback

On 3PS Network Server screen, click into “**Playback**” page to enter **Playback** view, none of the video sources is selected in the beginning, and you have to select your desired channels.


### Add Video Source

There are two ways to pull in video sources:

1. In **View** area, click on a saved view.
2. From **Device List** panel, double-click on a device or drag it to **Display** area.

Through either way, you may add video sources, and their time bars will display in **Time Bar** area. Your playback operations and search will be based on these selected channels.

In the meanwhile, you may change the layout styles from **Layout Selection Bar** on title bar.

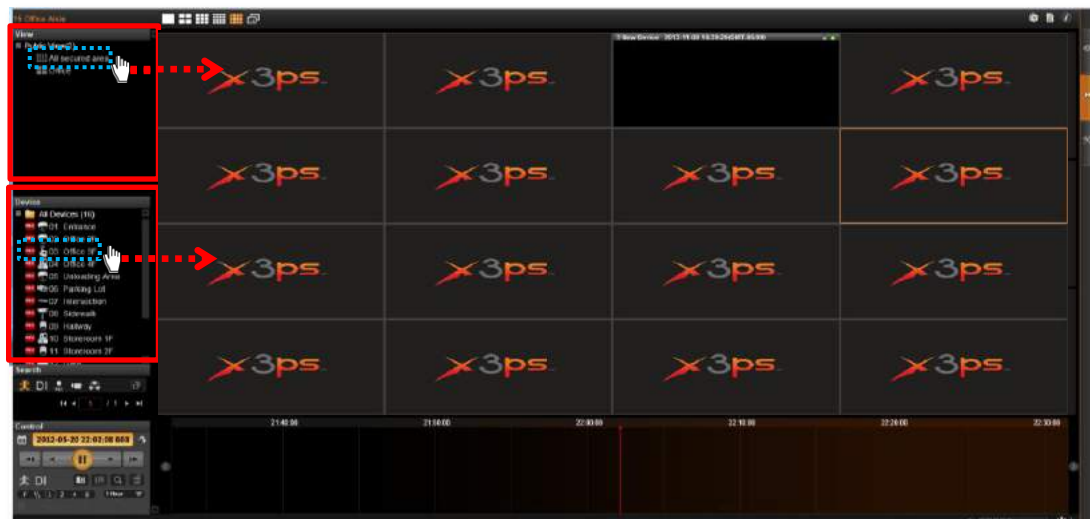


### Remove Unwanted Channels


You will only need the desired channels to be kept in **Display** area, as you don't want too many unnecessary results after you perform a search.


To remove a channel from **Display** area, you may place your cursor over the channel, and right click the mouse, then right-click menu provides “**Remove**”, “**Export Video**” and “**Snapshot**” for a single channel.

#### Note

The view of a map channel will not be record, and therefore it has no time bar or recordings for playback.

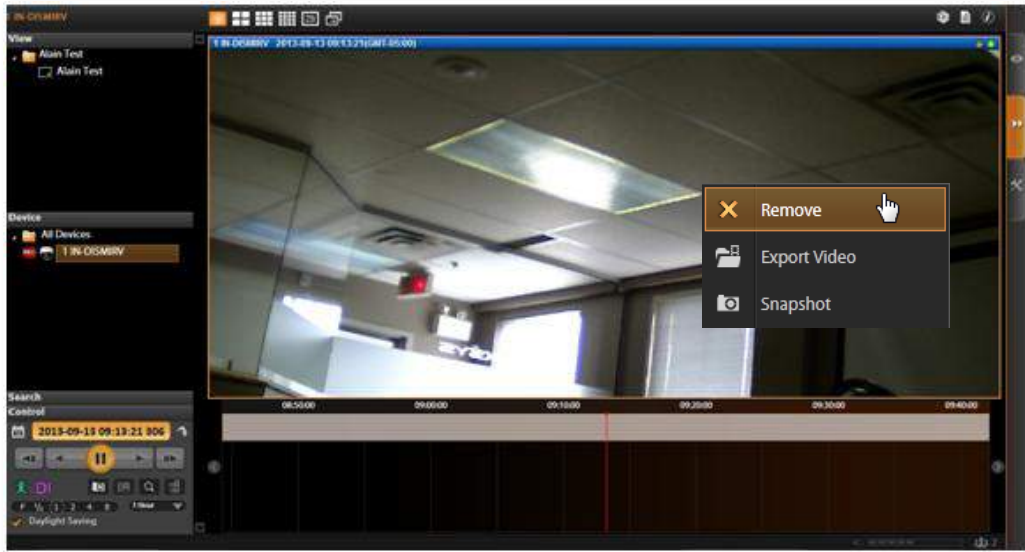

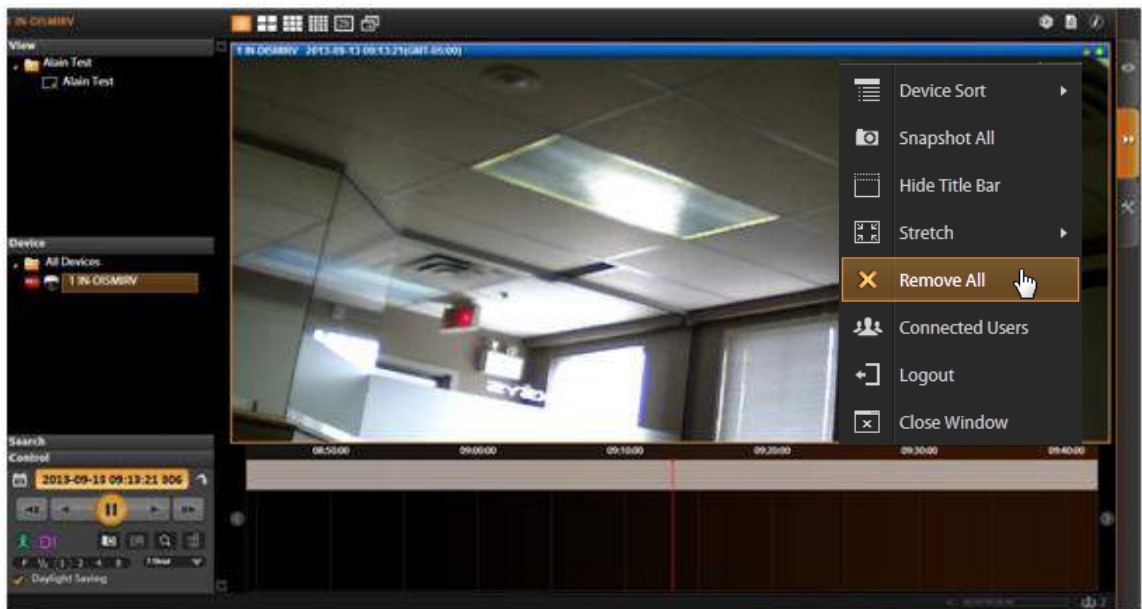


To remove all channels at one time, on title bar, click  to bring up the most used playback-related commands menu, and select **“Remove All”**.



## Search on Time Bar

You may focus on a certain channel as a search base. Its time bar will be highlighted as well.

1. To find specific later time spot, drag the cursor to the left.
2. To find specific former time spot, drag the cursor to the right.
3. Click on  to previous time section;  to next time section.

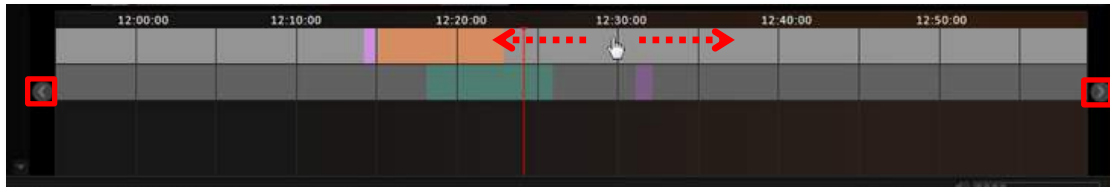

## Display Event Types

By default, the “Manual” recording will display in orange, while “Schedule” recording displays in grey on the time bar. To highlight specific events, you may enable the “Event” and “DI” event highlighters on **Control** panel.



## Event Type Highlight Colors



## Playback Controls

The playback related controls reside in **Control** Panel. You may adjust the video play speed, do a reverse / forward play, or pause the video to spot your desired view. For non-continuous recording types such as **DI**, **Event** or **Manual** recording, you may use the “**Previous Recording**” or “**Next Recording**” buttons to jump to the part directly.






## Turn On Daylight Saving Time Function

3PS Network Server will detect and display your client computer local time on **Liver View** and **Playback** screen. Once you apply **Daylight Saving Time** rule on your computer, 3PS Network Server will automatically enable this function on **Control** panel. You may disable this function to view playback according to **Coordinated Universal Time**.

## Digital Zoom on Playback


Regardless of the device models, you may perform digital zooming while the video is playing.

1. Click and drag a highlight rectangle over any channel, and the area highlighted will be displayed in the full live video window. In this mode, a picture-in-picture view will show in the lower right of live view window. A red rectangle will mark the currently enlarged view area within the full size video. You may click and drag the red rectangle to see another area.
2. To go back to the original full video view, just right-click on the minimized Picture-in- Picture view.

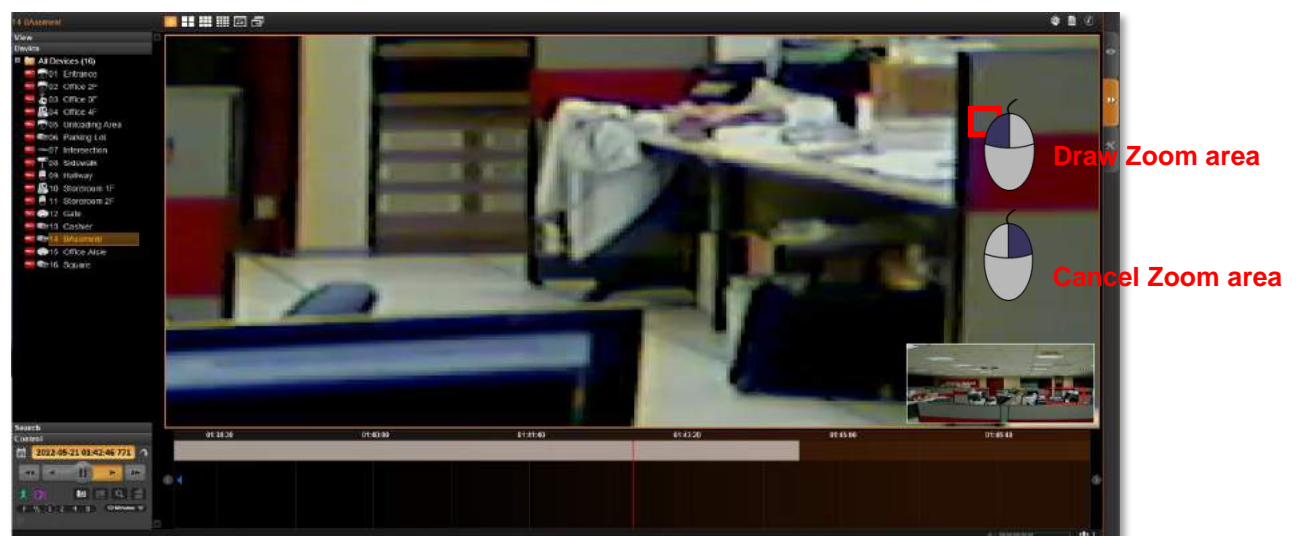

## Explore Fisheye View

You may change to the desired fisheye view mode on Playback screen. Select a fisheye camera channel, right-click to bring up the channel menu → **Fisheye Mode** → select one view mode.

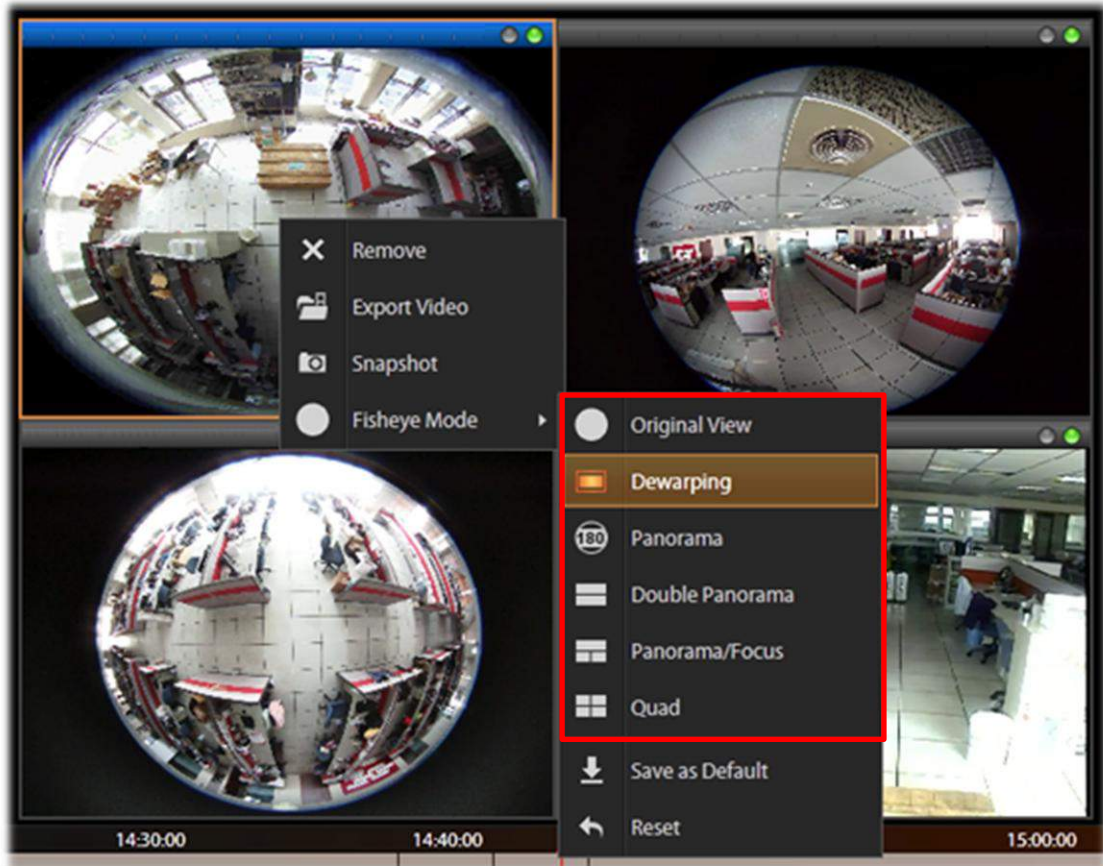

In a view mode where ePTZ operation is available (e.g. **Quad** mode), you may explore the region of interest using mouse or **PTZ Panel** at will. For ePTZ operation instructions, please refer to Navigate a Fisheye Camera Channel\_on page 35.

## Search by Filter

---

If you are clear about (1) When (2) as which event type (3) Where the incident happened, you will not need to drag on time bar all the way to the spot. The search filter can sort out the video clips that match your criteria.

1. On **Control** panel, click  to bring up the **Search** filter settings window.



2. Set the criteria.
  - Set **Time Duration**:  
Put the start date/time and the end date/time, the maximum duration is **3 days**.
  - Set **Event Types**:  
Click on the event type buttons to highlight, only the selected event types will displayed in results.
  - Set **Device** Types:  
Click on the device names to select.
3. Click "**Apply**" to start searching.

## View Search Results

The search results will then start being generated in thumbnails in **Search Result** window. However, it might take a few seconds if a large number of results are found. The thumbnails are listed in sequential order, left-to-right and top-to-bottom.

Do advanced sorting by enabling different event type filters.

Choose different thumbnail layout

Focus on certain view, and then you may play this recording or download this snapshot.

Search Results

1  
MD 1  
2012/05/20 22:39:39  
14 BAsement

2  
MD 1  
2012/05/20 22:39:43  
14 BAsement

3  
MD 2  
2012/05/20 22:39:44  
14 BAsement

4  
MD 1  
2012/05/20 23:25:53  
14 BAsement

5  
MD 1  
2012/05/20 23:26:41  
14 BAsement

6  
MD 2  
2012/05/20 23:26:42  
14 BAsement

7  
MD 2  
2012/05/20 23:26:46  
14 BAsement


8  
MD 2  
2012/05/20 23:28:31  
14 BAsement

9  
MD 1  
2012/05/20 23:28:34  
14 BAsement

1 / 2

OK

The page number will keep increasing until all the results are found.

This icon  will show to display that searching is still in process.


Click to return to Playback screen.


Your last performed search result will be kept in the **Search** panel on the left screen. You may focus on specific result view while watching the playback in the mean time.

## Take a Snapshot of the Playback View

You may save the snapshot of focused channel to 3PS Network Server computer during playback.

1. Focus on a channel, right-click the mouse to bring up quick menu, and then click “Snapshot”.

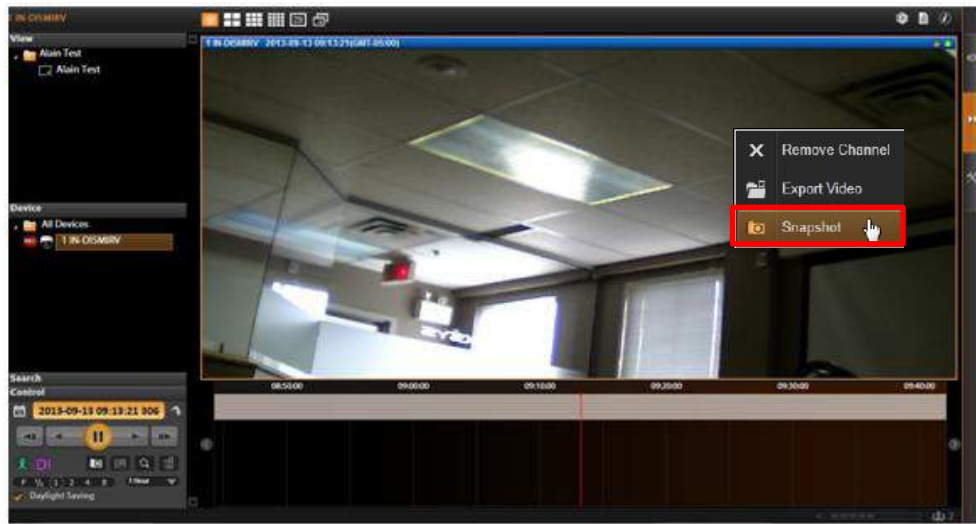

2. Click the  on **Control** panel to take a snapshot of the focused channel.



You may take a snapshot on a channel live image on **Live view** screen. The snapshot will be saved to default folder on your client computer as .jpg format (The system default location is **Windows Desktop**). You may find the location path on the bottom of 3PS Network Server window after taking a snapshot.

Snapshot to: C:\Users\Wen.Cheng\Desktop\Channel01\_20121024184041\_759.jpg

## Export the Recordings

---

3PS Network Server playback offers the\*.AVI file, as the most widely adopted video format on Windows system, can be instantly transferred by 3PS Network Server and played directly in **Windows Media Player**.

Before starting to export the video, please make sure there is enough memory space on the hard drive of your destination computer.

To play the exported \*.AVI file in other video players, you must have FFDSHOW or DivX codec installed in your computer. They can be found over the internet at the following sites:


<http://sourceforge.net/projects/ffdshow/>

<http://www.divx.com/en/software/divx-plus/codec-pack>

### Define the Section of Exported Video on Time Bar

You may define the video duration on time bar during the playback. In this way, you don't spend extra time and effort on finding the specific date and time information.


1. On time bar, drag to the start point of the video, right-click to bring up quick menu, then select **"Mark Export Start"**.
2. If you have successfully set the start point, the time duration will turn yellow as you drag to another point. Drag to the end, right-click to bring up quick menu, and then select **"Mark Export End"**.

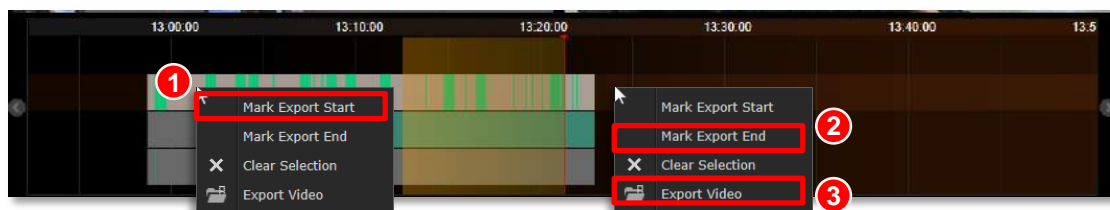

3. As both start point and end are set, you may right-click again the quick menu and find these two options are already gray out. Select **"Export Video"**

Depending on your scenario, you may first set the end point, then the start point.

### Set the Export Video Settings

You may export video with or without defining the time duration beforehand since you can configure all the settings on **Export Setting** window. On **Control** panel, click  to enter the window.



1. Select the devices. If more than one device are selected, you will get multiple recordings.
2. Set the time duration. The minimum duration is **10** seconds, maximum is **1 hour**. (For individual recording, if the total **size** is over **2 GB**, or the **video encoder type**, **frame rate**, **resolution** of this channel's stream once altered during the selected **Time Duration**, this file will be **divided**).
3. Choose the video format, you may enable the "**Filter no video**" function to skip the video gaps. If this channel is a fisheye camera, make sure you select the desired fisheye view from right-click menu → "**Fisheye Mode**", and check "**Export current fisheye view**" here. The exported video will come in the view mode you are seeing now; otherwise, the default fisheye view for exported video is **Original View**.



4. Set the overlay text if needed. The maximum number of characters for Text is **40**.
5. This exported video can be saved to your current client computer. Please choose the location. By default, the files will be saved to Desktop.
6. Click **“Apply”** to start file converting and exporting. The export process window will appear. In the **Device** column displays the processed/ total number of video clips of that device. You may also observe the remaining processing time of each device’s video files.



There are five types of process status: **success, converting, waiting, no data** and **fail**. It might happen that there is certain section in a recording that exists no video data; if the status shows **“Fail”**, it may be that your disk drive does not have enough space for video files, please make some space and click **again** to re-execute this export task.

	No Data
	Success
	Fail 
 Remain time: 01:10:15	Converting
	Waiting

### Note

Once a channel is changed to any of the following fisheye modes: **Dewarping, Panorama, Double Panorama, Panorama/Focus** or **Quad**, the resolution of this live stream will become 1920x1080, so will the resolution of exported video clip.

### Note

Certain fisheye camera view modes (e.g. **Quad** mode) display multiple regions in a single channel. When being exported, these regions will still be put together as a single video file.