



GC256
User Manual

INTRODUCTION

Thank you for purchasing this Micromax mobile phone. To obtain the best performance of your phone, please read this user manual carefully.

User manual

Table of Contents


1	Safety	4
1.1	Safety Precautions	4
2	Introduction	6
2.1	About your phone	6
2.2	Phone and Accessories	6
2.3	Your Phone.....	6
2.4	About SIM Card and the Battery	7
2.5	To switch ON and OFF	7
3	Phonebook	8
3.1	To Quick search contact.....	8
3.2	To Search a contact	8
3.3	To Add a Contact	8
3.4	To Copy all.....	8
3.5	To Delete a Contact	8
3.6	Caller groups.....	8
3.7	Extra numbers.....	9
3.8	Phonebook settings.....	9
4	Calling	9
4.1	Call Divert	9
4.2	Call Waiting.....	9
4.3	Call Barring.....	9
5	Call Center	11
5.1	Missed Calls/Dialed Calls/Received Calls.....	11
5.2	Delete Call Logs	11
5.3	Call Time	11
6	Messages GSM & CDMA	12
6.1	Write SMS	12
6.2	SMS Inbox	12
6.3	SMS Outbox	12
6.4	SMS Templates.....	12
6.5	SMS Settings	12
6.6	Send MMS.....	13
6.7	MMS Inbox.....	13
6.8	MMS Outbox.....	13
6.9	MMS Drafts.....	14
6.10	Templates.....	14
6.11	MMS Settings.....	14
6.12	Voicemail Server	14
6.13	Broadcast Message.....	15
7	Settings	16
7.1	Customized Phone & Call Settings	16

User manual

7.2	Profile Setup	17
7.3	Safety	17
8	Multimedia	18
8.1	Camera	18
8.2	Image Viewer.....	18
8.3	Video Recorder	18
8.4	Video Player.....	18
8.5	Audio Player.....	19
8.6	Sound Recorder.....	19
8.7	FM Radio.....	19
9	Fun & Games.....	20
9.1	Games.....	20
10	Bluetooth	20
10.1	To Power ON/OFF Bluetooth Connectivity	20
10.2	To Inquire/Search Audio Device.....	21
10.3	Remote Control.....	21
10.4	To Search My (new) device	21
10.5	Active Device.....	21
10.6	Settings	21
11	Organizer.....	21
12	File Manager	22
13	WAP	23
13.1	WAP Browser	23
13.2	WAP Setup	23
14	Inputting Text.....	23
15	Maintenance	24
16	Taking Care of your Device	25
17	After Services	26

1 Safety

1.1 Safety Precautions









 Please read through the following briefings carefully, and act in accordance with these rules, so as to prevent causing any danger or violating any law.



Safe driving

- 1) Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- 2) Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

User manual

-  **Turn off during a flight:** Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.
-  **Turn off the phone when within an area where blasting takes place:** Be sure to strictly observe the related laws and statutes by turning off the phone when you are within, or in the vicinity of, an area where blasting takes place.
-  **Turn off the phone when any dangerous goods are in vicinity:** Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.
-  **In hospital:** Please obey the related rules or bylaws of the hospital when using your phone in a hospital. Be sure to turn off your phone when near any medical equipment. Your use of any wireless transmission equipment, inclusive of the phone, will interfere with any medical equipment that is not protected fully, and other electronic equipment items, too. Should you have any question in this regard, please consult a related physician or medical equipment supplier.
-  **Interference:** Each and every phone's performance may be affected due to radio interference.
-  **Professional service:** The phone must be installed or repaired by no other personnel than professionals. You are likely to suffer a huge risk when you install or repair this phone by yourself, which also goes against the warranty rules.
-  **Fittings and battery:** You shall use the fittings and battery acknowledged by the phone manufacturer only. Using unauthorized accessories may tamper the warranty of the device.
-  **Emergency call:** You may enter a telephone number (112, etc.) to ask for emergency help after making sure that the phone has been turned on and is in the service status. Press the Send Key to call out.

Disclaimer: Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper usage of the mobile phone. Micromax keeps the right to make modifications to any of the content here in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such case, the latter shall govern.

2.1 About your phone

Your phone is allocated with dual card holders- one for GSM and the other for a CDMA card. The default password for all password based functions in your phone is **0000**.

2.2 Phone and Accessories

Open the packing box of the phone and check for its contents which should be as follows:

1. Transreceiver
2. Standard Charger
3. Standard Battery
4. Handsfree Kit
5. USB Cable
6. Card Reader
7. User Guide
8. Service Guide
9. Warranty Card

2.3

Your Phone



2.4 About SIM Card and the Battery

Please store the cards out of childrens reach.

The card and the contacts are vulnerable to damage due to scratching or bending. Therefore, be careful when using, inserting or removing the cards.

Be sure to switch OFF the phone before you insert or remove the battery or the card, otherwise, the phone may be damaged.

Insert the plug of the charger into the interface of the phone, and insert the charger into the power socket carefully. The battery icon will blink.

We suggest you recharge the battery when the power is used up so as to increase the life of the battery

2.5 To switch ON and OFF

To switch ON: Long press **End key** when the phone is in the OFF mode.

If the phone lock has been activated, you need to enter the 4-digit password to unlock. (The preset unlock code is 0000.)

If the SIM card has been inserted in the phone, and the related PIN code protection is activated, you need to enter the 4-8 digit password to unlock.

Warning: If you enter three wrong PIN codes in a row, the SIM card will be locked and you

need to enter the PUK code to unlock. Both the PIN code and PUK code are provided by the network operator.

To switch OFF: In the standby mode, long press **End key**.

3 Phonebook

Menu > Phonebook

3.1 To Quick search contact

Menu > Phonebook > Quick search

Input the first character of the name you wish to quick search.

3.2 To Search a contact

Menu > Phonebook > Search

Input the name of the contact you wish to look up in your phonebook directory.

3.3 To Add a Contact

In idle, enter phone numbers.

Options > Save To Phone book/SIM/2 or to CDMA > Select the location for saving

Or: **Menu > Phonebook > Add new contact>** Select the location for saving

You can edit the name & number.

3.4 To Copy all

In the contact list of the Phonebook, select the name card to be copied

Tip: "Copy" means copying to other storage location. You can copy the entry stored in the SIM(/UIM) card to the phone memory and vice versa

Menu > Phonebook > Copy All > From SIM to Phone(/UIM to Phone/Phone to SIM/Phone to UIM).

You can copy all entries from SIM(/UIM) card to Phone and vice versa:

3.5 To Delete a Contact

Menu > Phonebook > Delete>

In the idle screen press the **right soft key** to view names. In Contacts list, select the entry you want to delete: **Options > Delete**

- You can delete all entries from SIM /UIM card
- To delete entries from the phonebook enter the default password (0000) and delete the desried contacts.
- You can also delete contacts one by one.

3.6 Caller groups

Menu > Phonebook > Caller Groups

Select a category from the group you wish to add a contact under.
The detail of the categories (Family, Friends, VIP, Business & others) includes Group Name, Associate Sound, Associate Picture and Member List.

3.7 Extra numbers

Menu > Phonebook > Extra numbers

View your number and emergency (SOS) numbers under this folder.

Owner Number: You can edit two groups of names and numbers.

SOS Number: You can set five numbers mostly.

3.8 Phonebook settings

Menu > Phonebook > Settings

Memory Status: You can view the used & available memory status in the phonebook.

Preferred Storage: Select to store your contacts either in the SIM/UIM memory or the phone memory.

Fields: Set the displayed options, includes Home Number, Company Name, Email Address, Office Number, Fax Number, Birthday, Associate Picture, Associate Sound and Caller Group.

My vCard: Edit or send my card. It includes Name, Phone Number, Home Number, Company Name, Email Address, Office Number and Fax Number.

vCard Version: Select vCard 2.1 or vCard 3.0.

4 Calling

4.1 Call Divert

Menu > Call center > General call Settings > SIM /CDMA> Call Divert

With the Call Divert function (needs network support), you may divert incoming calls to another mobile phone or a direct line telephone, but not to any extension of a fixed telephone.

4.2 Call Waiting

Menu > Call center > General call Settings > SIM /CDMA) >Call Waiting

This function allows you to put the current call on hold and then answer the second one. The function needs the support from the local network. In some districts, you can use the function only after you apply to the local network operator.

4.3 Call Barring

ONLY applicable with GSM network

Menu > Call center>General call settings > SIM call settings> Call barring

The function is a GSM network service and can restrict outgoing and incoming calls selectively. If you need to change the settings of Restrict Calls, please contact your network operator to obtain the password for opening this service.

5.1 Missed Calls/Dialed Calls/Received Calls

Menu>Call center> Call history>SIM/CDMA call history

When view the call logs of SIM-2 and CDMA UIM. You may select from option:

Delete: To delete the entry.

Save To Phonebook: To save the number to the Phonebook

Call: Call the desired entry

Edit: Edit the number

Send Message: Send a message from SIM-2/CDMA to the number

Send MMS: Send a multimedia message (mms) from SIM-2/CDMA to the number

5.2 Delete Call Logs

Menu > Call center> Call history>SIM/CDMA call history> Delete call logs

You may select to delete **Missed, Dialed, Received** or **All** calls.

5.3 Call Time

Menu > Call center> Call history>SIM/CDMA call history> Call time

Allows you to view CDMA and GSM call timers.

6.1 Write SMS

To write the GSM/CDMA message

Menu > Messages > Text message>Write Message

Write the content of the SMS, select **Options**:

SIM Done: Complete the edited message and then send it.

UIM/SIM2 Done: Complete the edited message and then send it.

Use Template: You can insert the template ones into the message.

Insert number: You can insert a number from the phone book.

Insert name: You can insert a name from the phone book.

Input method: Select and choose an input method.

6.2 SMS Inbox

Menu > Messages > Text message>SIM/CDMA Inbox

Reply: Allows you to reply to the SMS received.

Delete: Delete this message.

Edit: Edit the current message.

Forward: Forward this message to others.

Delete All: Delete all messages in the list.

Use Number: Allows you to **Call** on the nuber or **Save to Phonebook**

6.3 SMS Outbox

Menu>Messages>Text message>SIM/CDMA Outbox

SMS messages from your SIM card & CDMA card that have been sent are stored in Outbox.

Send from SIM: Send the current message GSM SIM card

Send from UIM: Send the current message from your CDMA card

Edit: Edit the current message.

Delete: Delete the current message.

Delete All: Delete the all messages in the list.

Use Number: Allows you to **Call** on the nuber or **Save to Phonebook**

6.4 SMS Templates

Menu>Messages>Text message>Templates

Choose from a list of preloaded templates and add to a message.

6.5 SMS Settings

For the GSM settings:

Menu > Messages > Text message>SMS Settings> SIM message settings

Profile settings: Choose and edit profile 1-2 settings

Common Settings: Activate/deactivate 'delivery report & reply path'.

Memory status: Check the message memory status.

Preferred storage: Select preferred storage.

For the CDMA SMS settings:

Menu > Messages > Text messages>SMS Settings> CDMA message settings

Common Settings: Activate/deactivate 'delivery report & reply path'.

Memory status: Check the message memory status.

6.6 Send MMS

Note: The MMS feature in this phone is only compatible with GSM connection and NOT CDMA.

MMS, which contains text, pictures, videos and ringtones are sent through the MMS center to another mobile phone.

The phone supports sending and receiving Multi Media Messages.

Menu > Messages > MMS>Write message

To: Select and Add Number or Add Email.

Cc: Select and Add Number or Add Email.

Bcc: Select and Add Number or Add Email.

Subject: Edit the subject of the message **Add Text:** write text.

Edit Content: Edit the content of the MMS. During editing, you can press the **Left Soft key** to select Done, Input Method, Add Picture, Add Audio, Add Video, Add Attachment, Add Slide Before, Add Slide After, Add Bookmark Text, Preview and Slide Timing.

After you have edited the message, press **Left Soft key** to display the submenus:

Send Only: Send the edited message.

Save and Send: Send the edited message and save it.

Save To Drafts: Save the edited message in Drafts.

Send as Template: Save it as a template item.

Send Options: You can set Validity Period, Delivery Report, Read Report and Priority.

Exit: Leave the current interface and the phone will prompt you to save the edited message.

6.7 MMS Inbox

Menu > Messages > MMS > Inbox

View: Play the MMS, press the **Right Soft key** to stop playing.

Replay: Replay an MMS.

Reply by SMS: Reply to an MMS by send a SMS.

Replay All: Replay a MMS to all persons.

Forward: Edit the numbers and send the current message to others.

Delete: Delete the current message.

Delete All: Delete all the messages.

Save as Template: Save the MMS as a template.

Properties: View the detail of the message.

Use Details: Dial the numbers in the message or save them in the phone book.

6.8 MMS Outbox

Select **Options:**

View: Play the MMS, press **Right Soft key** to stop playing.

Resend: Resend the current message.

Delete: Delete the current message.

Delete All: Delete all the messages.

Send To Others: Edit the numbers and send the current message to others.

Move To Drafts: Move the message to the drafts.

Properties: View the detail of the message.

Use Details: Dial the numbers in the message or save them in the phone book.

6.9 MMS Drafts

MMS saved during editing are stored in the Draft.

Menu > Messages > GSM MMS > Drafts

View: Play the MMS, press the **Right Soft key** to stop playing.

Send: Send the message.

Edit: Edit the current message.

Delete: Delete the current message.

Delete All: Delete all the messages.

Save as Template: Save the MMS as a template.

Properties: View the detail of the message.

Use Details: Dial the numbers in the message or save them in the phone book.

6.10 Templates

Menu > Messages > MMS > Templates

The phone has preset frequently used phrases which may be selected and added to the text when you are editing an MMS. Preset phrases may be modified.

6.11 MMS Settings

Menu > Messages > MMS > MMS Settings

Profile: Choose SIM or SIM 2 profile

Common Settings

- **Compose:** Compose an MMS
- **Send:** Send the composed MMS
- **Retrieve:** Retrieve an MMS
- **Filter:** Allows sms from known numbers only.
- **Memory Status:** Allows you to check the available and used memory.

6.12 Voicemail Server

The phone supports Voice Mail only for GSM networks.

Menu > Messages > GSM Voicemail server

Set the voice mail numbers. When connecting by GSM network, you can call and listen to the voice mail.

Note: This feature is network dependant

6.13 Broadcast Message

Menu > Messages > Broadcast Message

The phone supports Broadcast Message. It is supported by GSM network. Broadcast messages are single-way messages sent to the users of the network operators by the message service center. For the contents and channel setup of broadcast messages, consult your network operator.

7.1 Customized Phone & Call Settings

Functions	Description
Set time and date	Menu > Settings > Phone settings > Time & Date
Schedule power on/off	Menu > Settings > Phone settings > Schedule Power On/Off To disable and enable status; to activate/deactivate, switch on/off, and time in turn.
Select language	Menu > Settings > Phone settings > Language
Preferred input methods	Menu>Settings>Phone settings>Preferred input methods
Set Display settings	Menu > Settings > Phone settings>Display settings > Wallpaper/Screen saver/Show date& time>LCD settings
Set Greeting text	Menu > Settings > Phone settings > Greeting Text
Shortcuts	Menu > Settings > Phone settings > Shortcuts
Set the Dedicated key	Menu > Settings > Phone Settings > Dedicated Key By default: Up > Audio Player Down > FM Radio Left > Camera Right > Wtite message
Auto update of date & time	Menu > Settings > Phone settings > Auto update of date & time
UART setup	Menu > Settings > Phone settings > UART setup
Smart dialing	Menu > Settings > Phone settings > Smart dialing
Set GSM Call waiting	Menu > Call center > General call settings > SIM Call Waiting
Set GSM Call divert	Menu > Call center > General call settings > SIM Call Waiting Tip: You can select Cancel All Divert to cancel all the divert settings.
Set GSM Call barring	Menu>Call center>General call settings>SIM Call barring Call barring is a GSM network service. Please contact your network operator to obtain the password for opening this service.
Set CDMA Call waiting	Menu > Call center > General call settings > CDMA Call Waiting
Set CDMA Call divert	Menu > Call settigns > General call settings> CDMA Call Divert
Set Themes	Menu > Fun & Games> Themes
Network setup	Network selection: Menu > Settings > Network Setup > Network Selection Select PreferredNetwork: The phone will search and display the list of known networks for you to select the desired one, after which, the phone will try to log in the selected network. If the selected network is registered successfully, it will prompt so.

User manual

Set information of GPRS Connection	Menu> Services> Data account> name>Data account>GPRS/GSM Data
Restore factory default	Menu > Settings > Restore Factory Settings Tip: You need to enter the phone password when you want to restore factory default. The preset phone password is 0000 . Please bear your password in mind. In case you forget it, contact the local dealer or an authorized service center.

7.2 Profile Setup

Functions	Description
Activate the profile mode	Menu > User Profiles >Options > Activate
Activate 'silent-vibration mode' in idle condition	Long press the # key on your keypad to activate the vibration mode
Set ring for incoming calls	Menu > User Profiles > Customize > Tone setup> Incoming calls
Set ring for messages	Menu > User Profiles > Customize > Tone setup> Messages
Set the ringtone for keypad tone	Menu > User profiles > Customize > Tone Setup > Keypad Tone
Set Ring Type	Menu > User Profiles > Customize > Ring type
Adjust the volume of Ring Tone / Key Tone	Menu > User Profiles > Customize > Volume
Set the Extra Tone	Menu > User Profiles > Customize > Extra Tone
Set the answer mode	Menu > User Profiles > Customize > Answer Mode

7.3 Safety

Functions	Description
SIM lock	Menu > Settings > Security Setup>SIM security setup>SIM Lock Warning: If you enter three wrong USB Cable PIN codes in a row, you need to enter the PUK code to unlock. PIN code and PUK code are provided by the network operator.
CDMA/UIM lock	Menu > Settings > Security Setup>CDMA security setup>UIM Lock Warning: If you enter three wrong UIM PIN codes in a row, you need to enter the PUK code to unlock. PIN code and PUK code are provided by the network operator.
Phone lock	Menu > Settings > Security Setup > Phone Lock The preset password is 0000
Auto keypad lock	Menu > Settings > Security Setup > Auto Keypad Lock Select to turn ON/OFF the keypad Note: Press the Left Soft key and the * key to lock/unlock the phone.
Theft Tracker	Menu > Settings > Security Settings > Theft Tracker To activate 'theft tracker' enter the default password- 0000
Change password	Menu > Settings > Security Setup> Change Password (GSM/CDMA)

8.1 Camera

Menu > Multimedia > Camera:

Before clicking pictures, you can set the following as needed. Select **Options >**

Photos: Enter to view the photos.

Camera Settings: Set EV, Banding, delay timer, shutter sound, and cont. shot,

Image Settings: Set the size and quality of photos.

White Balance: Set White Balance.

Scene Mode: Set scene mode.

Effect Settings: Set the special effects of photos, such as Grayscale, Sepia, Sepia Green and Colour Invert.

Storage: Store images in the phone memory

Restore Default: Restore default settings.

8.2 Image Viewer

Menu > Multimedia > Image viewer

On the Image viewer list screen, select **Options>**

View: View the highlighted photo.

Browse style: Select the style of viewing.

Send: Send the via MMS or Bluetooth.

Rename: Rename the highlighted file.

Delete: Delete the highlighted file.

Delete all files: Delete all the files from the list.

Sort by: Sort the files in the list.

Storage: Store the photos in phone/SIM memory

8.3 Video Recorder

Menu > Multimedia > Video recorder

Press **Central Soft Key (Ok Key)** to record. When recording, press **Ok Key** to pause the recording, and press **Ok Key** again to resume recording.

Before recording, you can set the following as needed. Select **Options >**

Camcorder settings: Set White Balance, EV, Night Mode and Banding.

Storage: Store the video in phone/SIM memory

Restore default: Restore default settings.

8.4 Video Player

Menu > Multimedia > Video player

In the playing interface, press the Left Soft key/OK key to start playing; press * key to switch lateral/normal playing; press the Left/Right key to decelerate/speed; Press the Side key to adjust the volume.

On the video player list screen, select **Options >**

Play: Play the video

Send: Send the video by MMS or Bluetooth.

Rename: Rename the highlighted file.

Delete: Delete the highlighted file.

Delete all files: Delete all the files from the list.

Sort by: Sort the files in the list.

Storage: Store the video in phone/SIM memory

8.5 Audio Player

Menu > Multimedia > Audio player

Choose the location you want to create a list of your songs from:

Menu>Multimedia>Audio player>List>Options>Settings> Pre playlist (Phone or Memory card)

While viewing the list of songs press the left Soft Key to view the below mentioned options-

Play: Play the current video.

Send: Forward the video to Bluetooth.

Rename: Edit the name of the video.

Delete: Delete the current video.

Delete All Files: Delete all the files in the list.

Sort by: sort the files.

Storage: Select Phone or Memory card to store.

8.6 Sound Recorder

Menu > Multimedia > Sound recorder

On the Sound Recorder list screen, you can select:

Record: Start recording. During recording, you can press the Left/Right Soft key to Pause or Stop.

Play: Play the highlighted recording.

Append: Continue to record the highlighted recording. (The format must be AMR or AWB).

Rename: Rename the highlighted recording.

Delete: Delete the highlighted recording.

Delete All: Delete all the files.

Settings: Set the format of the recording.

Forward: Send the current file to User Profile, MMS or Bluetooth.

8.7 FM Radio

Menu > Multimedia>FM radio

View the list of available channels

Options > Channel list

Options > Edit

Create a list manually

Options > Manually

User manual

Edit the channel list automatically:

Options > Auto search

Background play

Options > Settings>Background play

Set the function ON or OFF.

Listen in by Loud Speaker:

Options > Settings>Loud speaker

Set the speaker ON or OFF.

To switch between channels:

Press the number keys on your keypad to switch between channels. Press from numbers 1-9 as per the number of channels available.

To Increase/Decrease the volume:

To increase the volume press the # key and to decrease the volume press the * key.

9 Fun & Games

9.1 Games

Menu >Fun & Games> Games

10 Bluetooth

Menu>Organizer>Bluetooth

Tip:

You can connect wirelessly to other compatible device with Bluetooth technology. Compatible devices may include computers, mobile phones. You can use Bluetooth connectivity to send images, music and sound clips, video clips, and notes.

Since devices with Bluetooth wireless technology communicate using radio waves, your device and the other devices need to be within a range of 10 meters from each other, but the connection may be subject to interference or could face obstruction from stuff such as wall or from other electronic devices. Use the wireless technology of bluetooth to be able to consume battery quantity of electric charge. If you are restricted by something when using bluetooth technology, consult your local Micromax support/service station.

10.1 To Power ON/OFF Bluetooth Connectivity

Menu > Organizer >Bluetooth > Power (On/Off)

10.2 To Inquire/Search Audio Device

Menu > Organizer > Bluetooth > Search Audio Device

Tip: Please activate the Bluetooth first.

10.3 Remote Control

Menu > Organizer > Bluetooth > Remote Control

To connect your phone Bluetooth with the PC Bluetooth activate Bluetooth application on both ends. Thereafter, sync both your phone and pc together (via Bluetooth) and use the phone as a mouse.

10.4 To Search My (new) device

Menu > Organizer > Bluetooth > My Device > Search New Device

Tip: Please activate the Bluetooth first.

10.5 Active Device

Menu > Organizer > Bluetooth > Active Device

Tip: Please activate the Bluetooth first.

10.6 Settings

Menu > Organizer > Bluetooth > Settings- Allows you to:

- ON/OFF your Device visibility to other connected Bluetooth users.
- You can also Change Device Name, Authentication_
- Forward songs to your Bluetooth device.
- Choose the storage location- Phone or Memory card

Tip: Please activate the Bluetooth first.

11 Organizer

Functions	Description
View the calendar	Menu > Organizer > Calendar
To Do	Menu > Organizer > To Do Options > To do
Set the alarm	Menu > Organizer > Alarm > Edit
World clock	Menu > Organizer > World clock
Stopwatch	Menu > Organizer > Stopwatch > Typical Stopwatch > Split timing/Lap timing / View record Press Start to start timing, and press Split / Lap continuously to record more than one time. Press Back to save the time. Menu > Applications > Stopwatch > nWay Stopwatch Press Start to start timing, and press the corresponding Navigation key to activate the sub-timing. The main timing will continue to add. Select Pause to stop the main timing and the sub-timing. Press Resume to resume the selected sub-timing.
Calculator	Menu > Organizer > Calculator

User manual

Currency Converter	Menu > Organizer > Currency Converter Input the exchange rate and Press OK . Select the exchange rate, input the figure and press OK .
Unit Converter	Menu > Organizer > Unit Converter Select the wanted unit mode and Press OK . Select the detailed unit, and input the digits.
Text Reader	Menu > Applications > Text reader
Bluetooth	Menu > Applications > Bluetooth

12 File Manager

When an USB cable is connected, you can use the phone as a USB mass storage.

Functions	Description
Open folders	Menu > Multimedia > File manager > Options > (Phonebook Memory or Memory Card)
Create new folders	Menu > Multimedia > File manager > Options > Create Folder
Format	Menu > Multimedia > File manager > Options > Format Tip: The Format function will delete the data you have created and saved. Please back-up important data and keep them properly.

13.1 WAP Browser

Menu > Services> Internet Services (WAP)

You need to make the relevant settings in WAP Setup before you use the WAP browser to surf the web.

When the WAP browser is activated, if a homepage is set in WAP Setup, the phone will link the website indicated by the homepage; otherwise, you may enter a website and the phone will connect to it.

When surfing the web, select **Options >**

Refresh: To refresh the web page.

Homepage: To link the homepage.

Input URL: input a website address.

Add Bookmark: Add to bookmark.

Set Homepage: set the URL as homepage.

Forward/Backward: To turn to the next /previous page.

Advance: Show URL info, Bookmark, Save item.

Exit: To exit the browser.

13.2 WAP Setup

WAP settings are required for surfing the web with WAP. Follow the steps below to set up a WAP account:

- Internet Services > Account name > Data account>GPRS > Add account > Add account name/ APN/ Username & password > Save.

Then go to:

- Menu >Connectivity > Internet services (WAP) >Settings > Profiles > Add new > Account Name/ Homepage/ Data Account (select the previously created data account) > Select connection type (HTTP/WAP- Indise HTTP & WAP ener the correct proxy address & port > Done > Save the account >Go to the created account & activate.

Menu > Services> Internet Services (WAP)> Settings>Profile

You can set the following:

Account: To select from the GPRS connection list.

Connection type: To set WAP or HTTP connection mode.

Home page: To set the address of the homepage. The phone has a default and you can modify it.

You can enter text in English.

15 Maintenance

Use a dry soft cloth to wipe general dirt.

Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of colour.

16 Taking Care of your Device

- Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:
- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use chargers indoors

For details, see the After Service Guide supplied with the phone.