



uniwin
for IOS (iPhone / iPad)

Version 3.0

User Manual

Internet: www.uniwin.nl
E-mail: support@uniwin.nl
Copyright: © Infotech Logistics B.V. 2012



Introduction

UniWin® for IOS is an additional application of UniWin®.

The app is a remote application that allows UniWin functionality on your IOS device (iPhone, iPad or iPod touch).

Usage:

- View and verify all base data, such as customers, products, orders, transporters, etc.
- View and verify all transactional data, such as weighings, vehicles on-site, (un)loaded vehicles, etc.
- Ability to create and view reports. Email, print or view them on the screen.
- Activate available import/export routines on the server.
- View status of all used devices, such as scales/weighbridges, readers (barcode/cards/RFID/OCR), barriers, traffic-lights, printers, cameras, etc.
- View status of all connected clients.
- View logging. The logging of UniWin shows all activities, errors, issues.
- Further functionality depends on the configuration of your UniWin solution.

We have limited this manual to explain the basic functions of the UniWin app. These functions cover all basic fields of operation in the latest version of UniWin (V3). Whether functions are available or not depends on the configuration of your UniWin solution.



Contents

INTRODUCTION	2
CONTENTS.....	3
START-UP UNIWIN.....	4
START-UP	4
LOGIN.....	5
MAIN MENU.....	6
FILE.....	7
<i>Browse</i>	7
<i>Detail</i>	8
VIEW	9
<i>Browse</i>	9
<i>Detail</i>	10
REPORTS.....	12
CLOSURE	13
DEVICES	14
<i>Reader</i>	15
<i>Scale</i>	16
<i>Other</i>	16
STATUS.....	17
<i>Logging</i>	17
<i>Tallyroll</i>	18
<i>Comports</i>	19
<i>Network</i>	20
<i>Modem</i>	21
ACTION BUTTON.....	22
<i>Login</i>	23
<i>Assign Pin</i>	23
ABOUT.....	24
SETTINGS.....	25
CONNECTION	26
OPTIONAL HOSTS.....	27
IMAGE/DATA	28
SCREEN.....	29
INSTALLATION.....	30
REQUIREMENTS.....	30



Start-up UniWin

UniWin starts up like any other program running on an ios device.

Start-up


The UniWin app opens by selecting the UniWin icon from one of your main screens.





Login

When starting-up the login-screen will be first screen that appears.

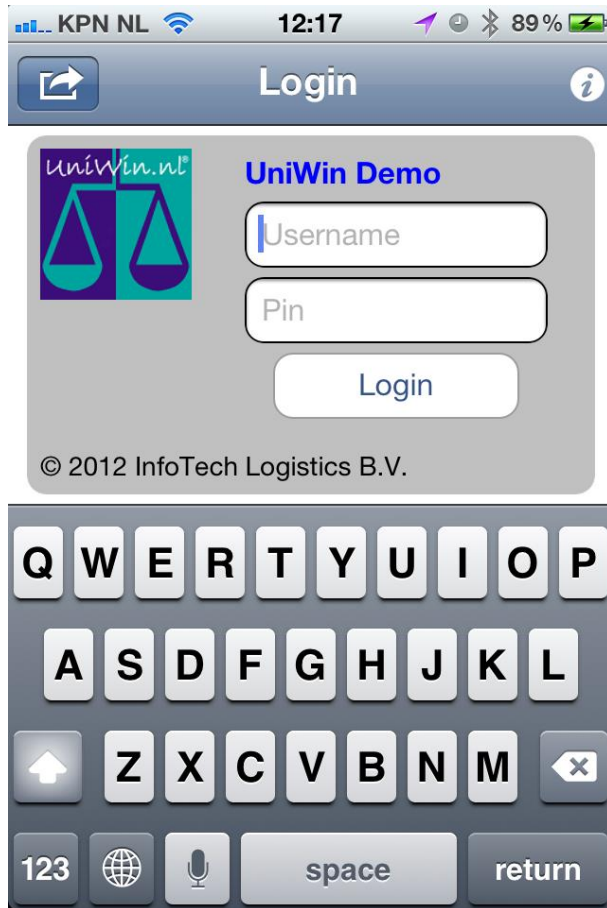

Enter the Username and Password as defined in your UniWin solution.

If you have a Pin-code assigned, you can move to the Password field, to enter the Pin-code for direct login.


When you have setup optional UniWin hosts in your settings, Click on the blue host ID, or use the Action button (top left), to show a list of available UniWin Hosts to select from.

If you have not setup a UniWin host (UniWin Host is blank), you can enter any username and/or password. After clicking the Login button, you will be given the option to connect to the Demo UniWin App.



Main Menu

After login, the Main Menu of UniWin appears. Functions and options depend on the version and configuration of your UniWin solution.

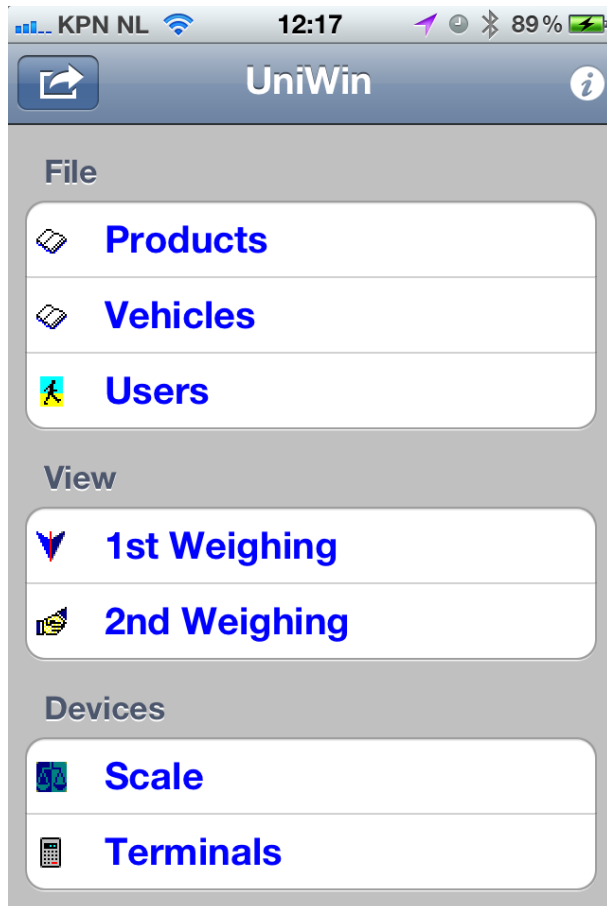

The language of the user-interface will depend on language settings of the device. If this language is not supported by the UniWin solution, the default language will be used for the data on screen.

There is a maximum of 4 sections available from the menu:

- File, a list of all available basefiles.
- View, a list of all available open and finished transactions
- Devices, a list of all available devices
- Status, a selection of options to monitor the status of the UniWin solution.




File

By selecting any of the File options, you can view the selected base file.

Browse

The initial screen will show a list of records within that base file.

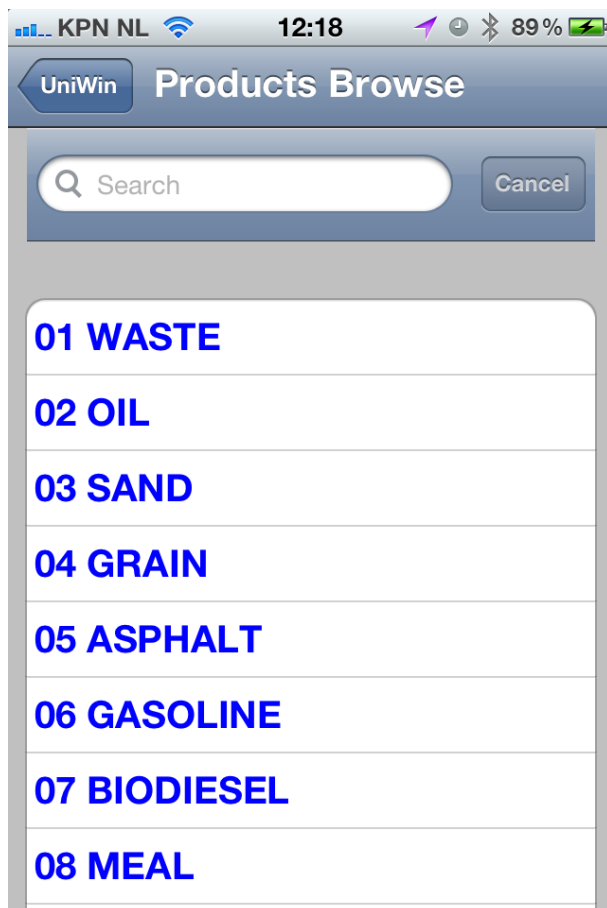

In principle, each record will contain a Code and Description field. Optionally an extra line with more detailed information about the record can be shown. (Depends on configuration UniWin solution)


The list is dynamically extended. This means that records are added to screen when you scroll down and near the end of the list.

By entering a search text, UniWin will only display those records that match the search entry. To return to the full browse list, simply clear the search field and press cancel.

Selecting any of the records will show the Detail screen.

Detail

After selecting one of the records within a browse screen, this Detail screen will appear.

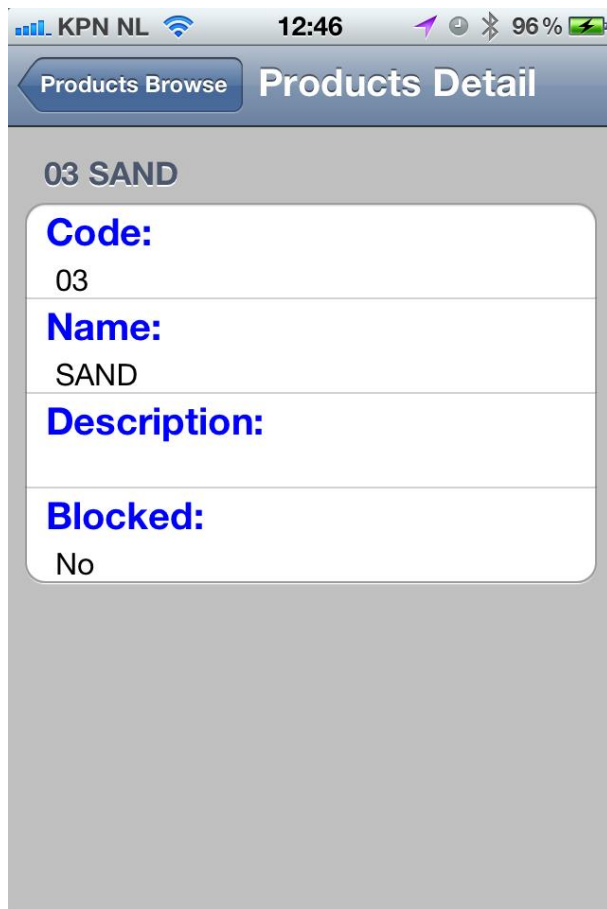

All details about the record are shown. For every detail, the description and value of the field are shown.

Depending on the configuration of UniWin, other functions could be available for the record, like a subfile (orders / orderlines). These functions will also be shown in the list.

For some types of details, more information can be given. Please see Detail of View.



View

The View section contains all transactional data, like vehicles on-site, loaded vehicles etc.

Browse

The first screen will show a list of all transactions within the selected state.



When you select a state containing finished transactions, you will first need to select the date for which you want to view the records.

In principle, each record will contain a Code and a Date / Time stamp. Optionally an extra line with more detailed information about the record can be shown. (Depends on configuration UniWin solution)


The list is dynamically extended. This means that records are added to screen when you scroll down and near the end of the list.

By entering a search text, UniWin will only display those records that match the search entry. To return to the full browse list, simply clear the search field and press cancel.

Selecting any of the records will show the Detail screen.


Detail

After selecting one of the records within a browse screen, this Detail screen will appear.

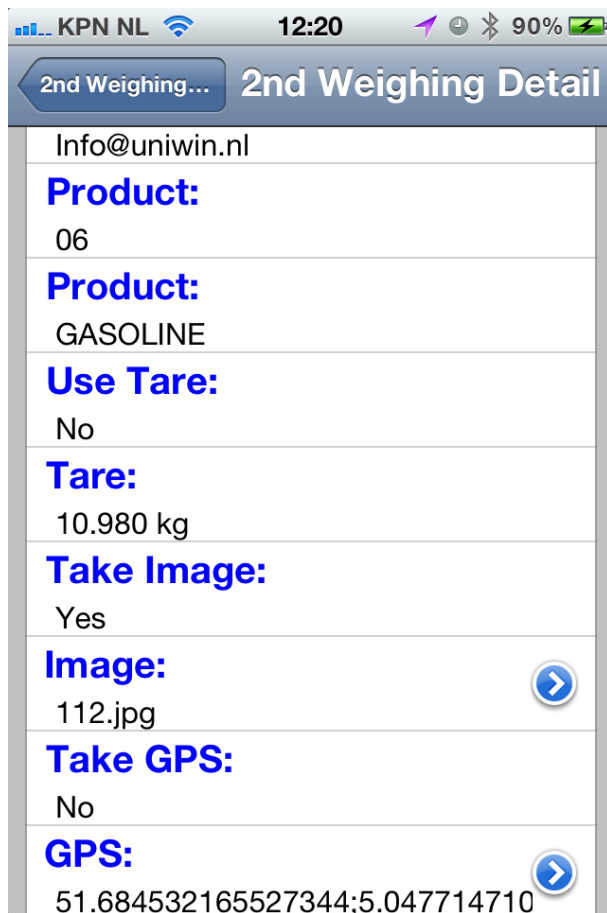


All details about the record are shown. For every detail, the description and value of the field are shown.

Depending on the configuration of UniWin, other functions could be available for the record. These functions will also be shown in the list.

For some types of details, you can view more . They are marked with the  icon in a row.

- Image data, like photos can be viewed by clicking the row
- Position/Location data can be viewed by clicking the row (Google Maps). Maps can be shown either static or dynamic (see Settings)

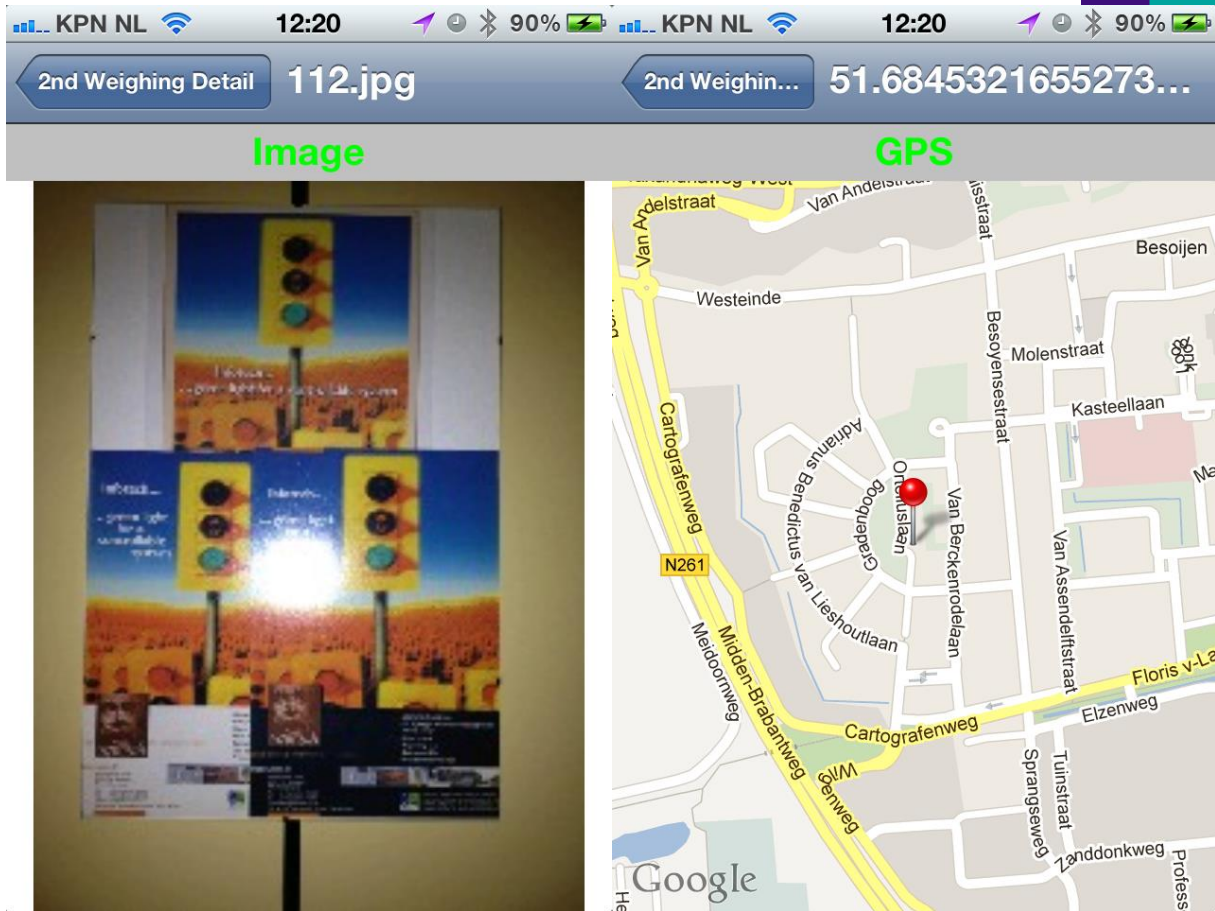

For maps you can select the type to display. Either a static map (image) or a dynamic map, where you can scroll and zoom, can be shown. (see Settings).

Press and hold the image/map or click on the title of the image/map (Image / GPS), to bring up an optional menu.

- For images the full image can be retrieved (only when the setting Retrieve Reduced Size is set).
- For maps, the type of map can be changed.



Reports

Depending on the application, several reports can be available.


Registration	Product	Date 2	Exit	NetImage
CT-08-WER	03	08-10-2012	21:33:16	29.120 kg
123-MMDI2	04	01-10-2012	10:09:49	17.660 kg
123-MMDI2	04	07-10-2012	21:38:01	4.160 kg
XX-YY-123	04	08-10-2012	6:24:28	24.360 kg
38-OQ08-1	04	18-10-2012	10:38:37	22.760 kg
123-MMDI2	04	22-10-2012	20:54:27	16.380 kg
123-MMDI2	04	22-10-2012	22:33:31	6.500 kg
123-MMDI2	04	29-10-2012	15:11:38	14.580 kg
123-MMDI2	05	01-10-2012	8:54:57	7.440 kg
123-MMDI2	05	08-10-2012	20:51:28	12.520 kg
123-MMDI2	05	12-10-2012	11:54:01	16.980 kg
123-MMDI2	05	16-10-2012	20:42:09	20.280 kg
38-OQ08-1	06	09-10-2012	10:37:55	57.320 kg
CT-08-WER	06	24-10-2012	17:49:20	21.280 kg
190-08UQ	06	28-10-2012	1:10:04	7.160 kg
123-MMDI2	07	06-10-2012	9:07:39	60.140 kg
38-OQ08-1	07	18-10-2012	15:24:53	19.560 kg
123-QQ-1	07	21-10-2012	14:42:11	23.380 kg
XX-YY-123	07	28-10-2012	14:56:34	15.360 kg
123-QQ-1	07	30-10-2012	11:27:18	17.560 kg
123-MMDI2	08	08-10-2012	6:25:37	85.140 kg
38-OQ08-1	09	04-10-2012	18:06:06	9.260 kg
CT-08-WER	09	06-10-2012	16:09:50	12.460 kg
123-QQ-1	09	08-10-2012	6:31:02	6.360 kg
38-OQ08-1	09	09-10-2012	10:28:54	8.460 kg
190-08UQ	09	10-10-2012	17:41:20	13.620 kg
38-OQ08-1	09	12-10-2012	7:47:03	25.060 kg
190-08UQ	09	23-10-2012	12:37:28	12.900 kg
CT-08-WER	09	27-10-2012	16:46:56	21.780 kg
CT-08-WER	09	30-10-2012	17:05:43	27.280 kg
123-MMDI2	10	05-10-2012	5:52:28	131.780 kg
123-MMDI2	10	05-10-2012	5:52:28	9.300 kg
XX-YY-123	11	10-10-2012	14:45:22	9.300 kg
123-MMDI2	11	28-10-2012	1:07:37	34.080 kg
123-MMDI2	11	28-10-2012	1:07:37	11.980 kg
38-OQ08-1	12	09-10-2012	18:22:47	46.660 kg
GRAMS	12	19-10-2012	8:27:01	13.360 kg
190-08UQ	12	19-10-2012	8:27:01	17.360 kg
190-08UQ	12	25-10-2012	11:25:08	11.760 kg
				42.380 kg
				595.800 kg

The user-interface for each report will have on or more of the following entries:

- **File**
Optionally a weigh or base file must be selected.
- **Period**
Enter the period over which the report must be generated. Optionally a From and To Time are also available. It is also possible that the Date field can be selected to be applied on the period.
- **Sort By**
In the box enter one or more break groups (sorting key). Per key an optional From and To value can be entered. When using multiple keys it could be of interest to generate totals per key, e.g. totals per customer. Also you can check the option to start each break on a new page.
- **Printer**
Select the printer to which the report must be sent. The printers available are those printers which are available for the UniWin server. The Screen printer, will show the report in a webpage format. When Email functionality is available on the UniWin server, reports can be emailed in several formats.

Closure

The **Closure** menu gives the options to import and export data of weighing files to and from UniWin.

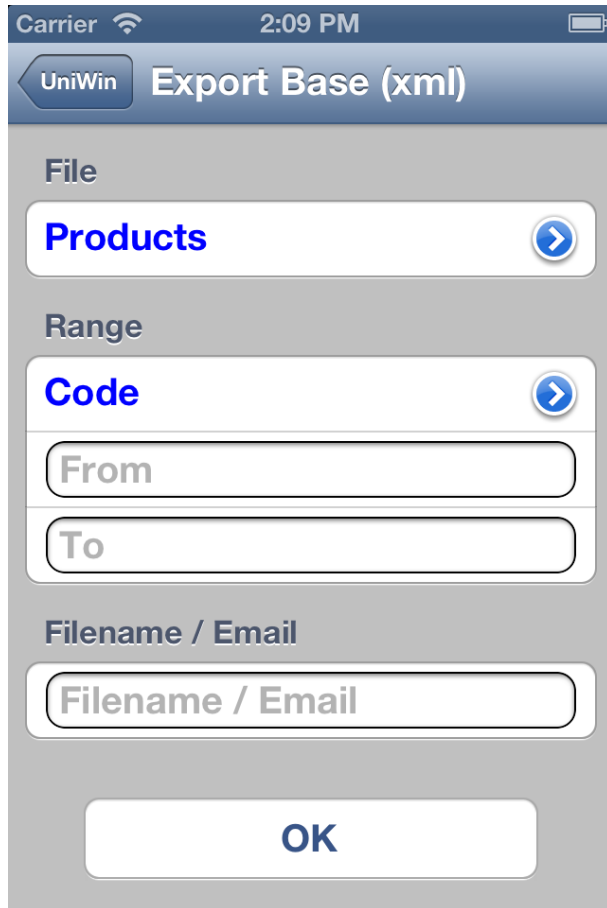

The screenshot shows the UniWin mobile application interface for the 'Export Base (xml)' function. At the top, there is a status bar with 'Carrier', signal strength, '2:09 PM', and battery level. Below that is a navigation bar with 'UniWin' and 'Export Base (xml)'. The main content area is divided into sections: 'File' with a 'Products' dropdown menu; 'Range' with a 'Code' dropdown menu and two input fields labeled 'From' and 'To'; and 'Filename / Email' with a text input field. At the bottom, there is a large 'OK' button.


The user-interface for each closure will have on or more of the following entries:

- **File**
Optionally a weigh or base file must be selected.
- **Period**
Enter the period over which the closure must be generated. Optionally a From and To Time are also available.
- **Range**
In the box enter an optional break range group. Only records matching the range will be imported or exported.
- **Filename**
Enter the filename to import from or export to. Note this filename points to a file on the UniWin Server. When Email functionality is available on the UniWin server, exports can be emailed by entering an email address in the filename box.



Devices

The status of devices connected to UniWin can be viewed. There are several types of devices and they all have their own view.

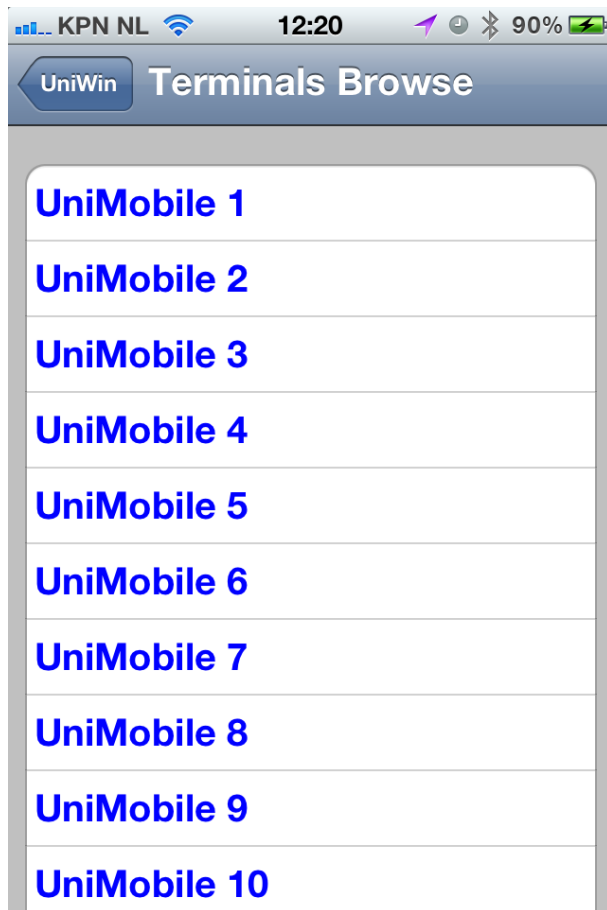

It is possible that multiple devices of the same type are available for a certain peripheral. After selecting such a peripheral, you will first need to select which device you want to view.

Reader

For reader devices the following is shown.




If a reader is connected to a scale, the top part will show the actual weight of the scale.

The 4 display lines, last keyboard entry and last badge entry are shown below.

Optionally the device might have I/O, which will be shown at the bottom.

Scale

For scale devices, the following is shown:

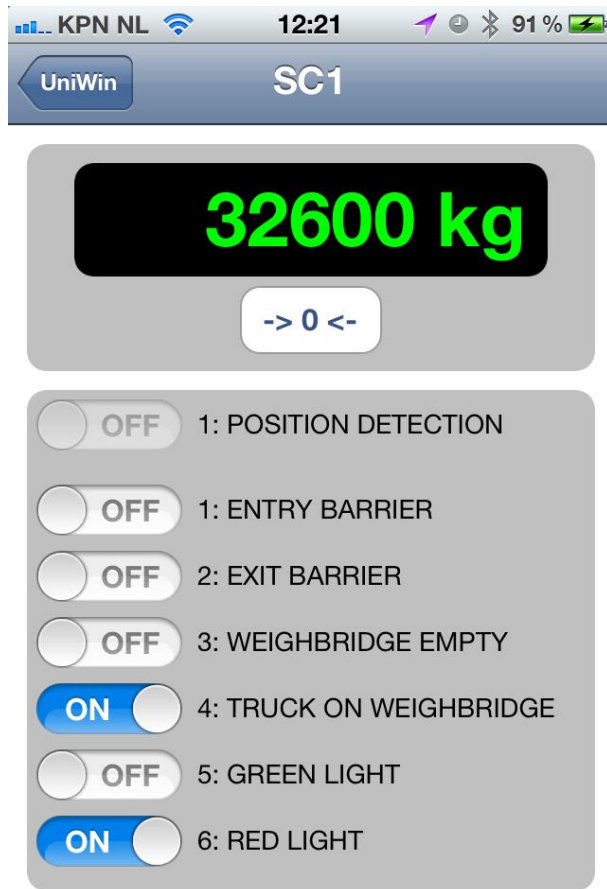

The top part will show the actual weight and a button to zero the scale. Depending on the setup of the UniWin solutions, the zero may only be activated for some users, or only when a weight is within the so-called zero range.

Other

There are other devices available to be viewed. In principle they will show a combination or a part from any of the previous device types. E.g. for an I/O module only the I/O section of will be shown.


If you have a camera device connected, you can also view the actual image of that camera.

Status

The status gives an overview of the current status of the UniWin solution.

Logging

After you select a date, the log file for that date is shown.

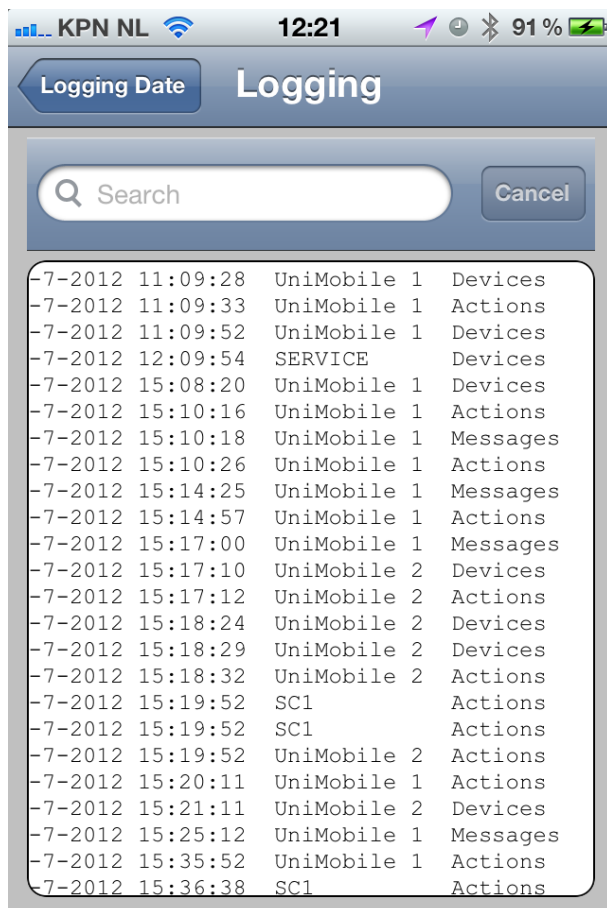


You can enter any text in the search field. When activated, only those lines that contain this text will be shown.

To return to the full log, simply clear the Search field and press the cancel button.

Tallyroll

After you select a date, the tally file for that date is shown.

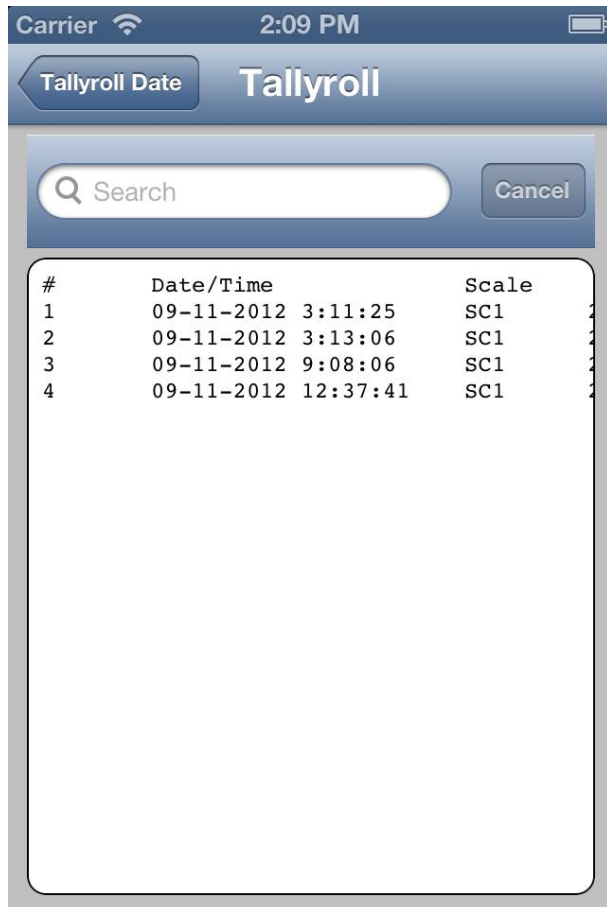

You can enter any text in the search field. When activated, only those lines that contain this text will be shown.

To return to the full tally, simply clear the Search field and press the cancel button.



Comports

Every peripheral connected to UniWin has a device driver. Generally all devices are connected to UniWin using comports.



First select from which peripheral you would like to see the status.


The Detail screen shows the status and version of the driver.

Select the Reset function to unload and load the device driver in the UniWin server. Please take absolute care when using this Reset function.



Network

All Computers / Devices connected to the UniWin server via the network are listed here.

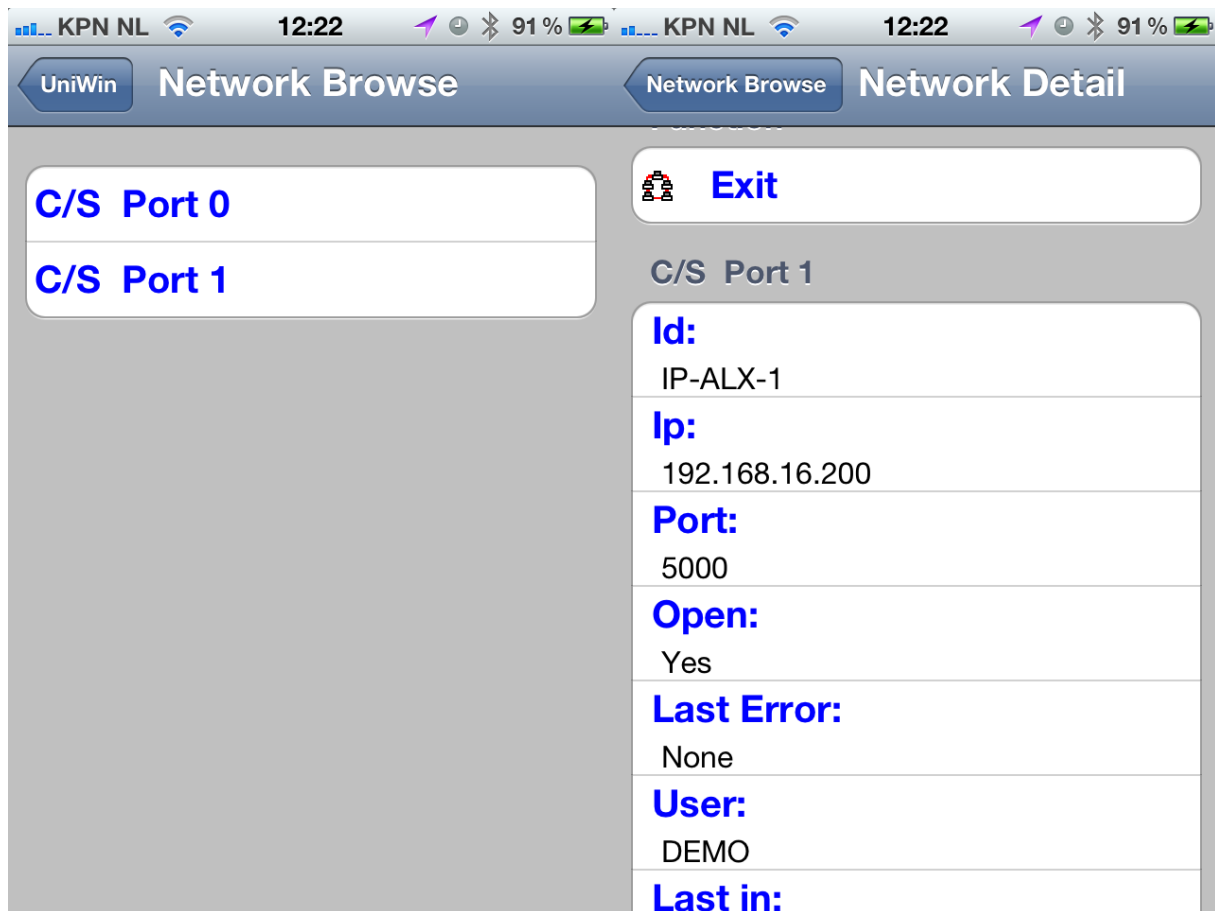

First select from which network connection you would like to see the status.


The Detail screen shows the details of the selected connection.

The Exit function can be used on certain connections (C/S only) to force a shutdown / exit of the connected client from UniWin. Please take absolute care when using this Exit function.



Modem

When Master/Slave is enabled in your UniWin solution, you can check the status using Modem.

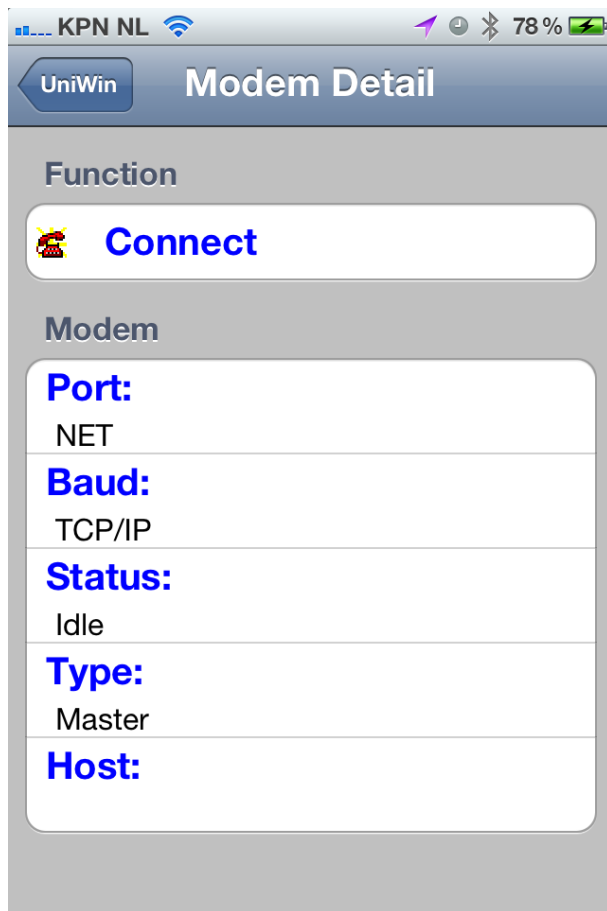


The actual status of communication between Master and Slaves is shown.

The Connect function is available when the UniWin server is assigned as the Master in the Master / Slave network. You can start the communication by activating this function.



Action button

From the main Menu in UniWin you can select the Action button (top left) to activate several functions.

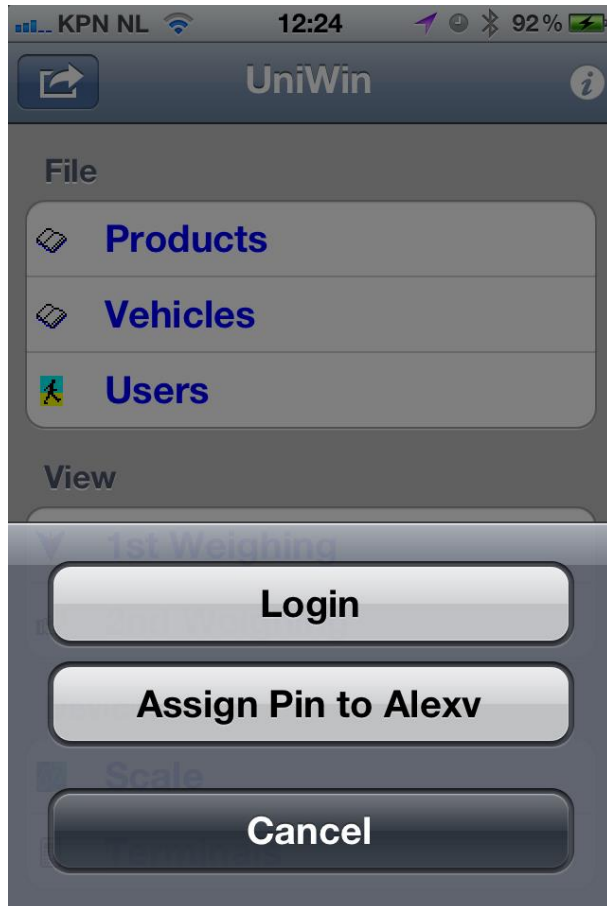

Which functions are available depends on the state of the system.



Login

Select this function to go back to the Login screen. You will logout from the current UniWin and the session will be closed.

Assign Pin

When you have a Pin-code set in your settings, the item becomes available after a successful login. Selecting the function will assign the used username and password to the pin code.


Next time you login, you will only need to enter the Pin-code in the password field to quickly login to the UniWin system.

Note: There is only one Pin-code that is assigned to a username and password, if you have multiple UniWin hosts, the app will use the same username and password for each UniWin host.



About

From the Main menu screen select the Information button (top right) to bring up the About screen.

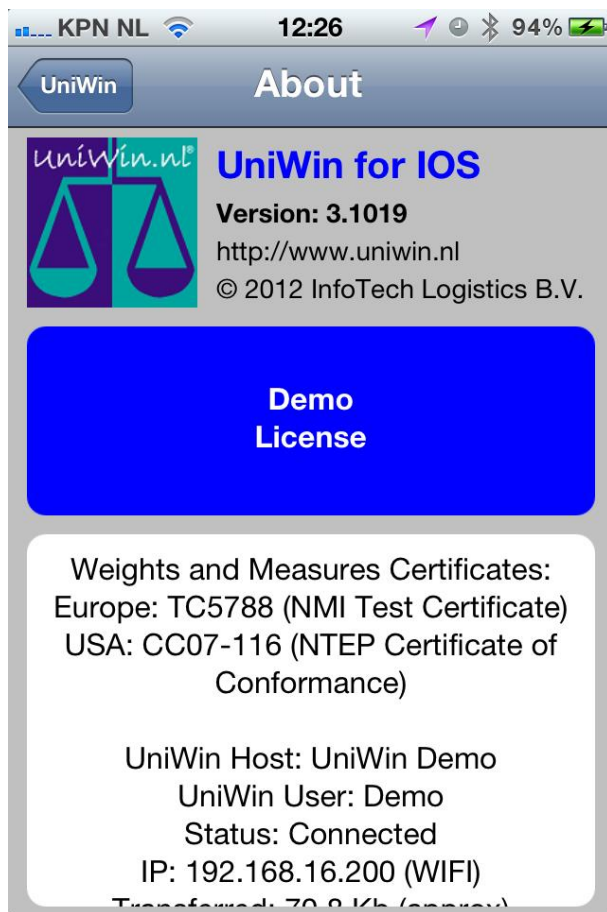

It shows:

- Version information
- UniWin License information
- Connection settings
- IOS settings.



Settings

Go to iPhone/iPad settings and select UniWin from the list to open the settings/preferences menu of UniWin.





Connection

The connection settings are needed to setup the connection with the UniWin server.



Please ask your System Administrator for any details of the connection.

ID:	A free entry to identify this connection.
UniWin Host:	The IP/Hostname of the UniWin server.
UniWin Port:	The port/socket on the UniWin server (normally: 5000)
UniWin Site:	When connecting to UniProxy, you can enter the fixed site-id here.
Timeout:	A timeout setting needed for the communication (normally 30000)
Password:	An optional password needed to activate the link
Identification:	The name of this device.
Login Pincode:	Enter a pin code with a minimum length of 4. The Pin-code can be used to quickly login. The code must be assigned to a username and password within the UniWin app.
Disconnect on Pause:	Setting to disconnect from UniWin, when the application is paused. E.g. when another app is started. Please note enabling this has effect on the battery life.



Optional Hosts

This allows you to enter multiple UniWin hosts, so you can connect the UniWin app to different solutions.


The screenshot displays the 'Optional UniWin Hosts' dialog in the UniWin app. It features a title bar with the UniWin logo and the text 'Optional UniWin Hosts'. Below the title bar, there are two host configuration sections, 'Host 6' and 'Host 7'. Each section contains a form with the following fields: 'ID' (empty), 'Host' (empty), 'Port' (set to 5000), and 'Password' (empty). The top status bar of the device shows 'KPN NL', '12:28', and '94%' battery.

There is a maximum of 10 other hosts you can enter in this dialogue. When one of these hosts is selected within the login screen of UniWin, it will overrule the Connection settings as setup in the Connection dialog.

ID x:	A free entry to identify this connection.
Host:	The IP/Hostname of the UniWin server.
Port:	The port/socket on the UniWin server (normally: 5000)
Site:	When connecting to UniProxy, you can enter the fixed site-id here.
Password:	An optional password needed to activate the link

Image/Data

Settings about images and other data files.

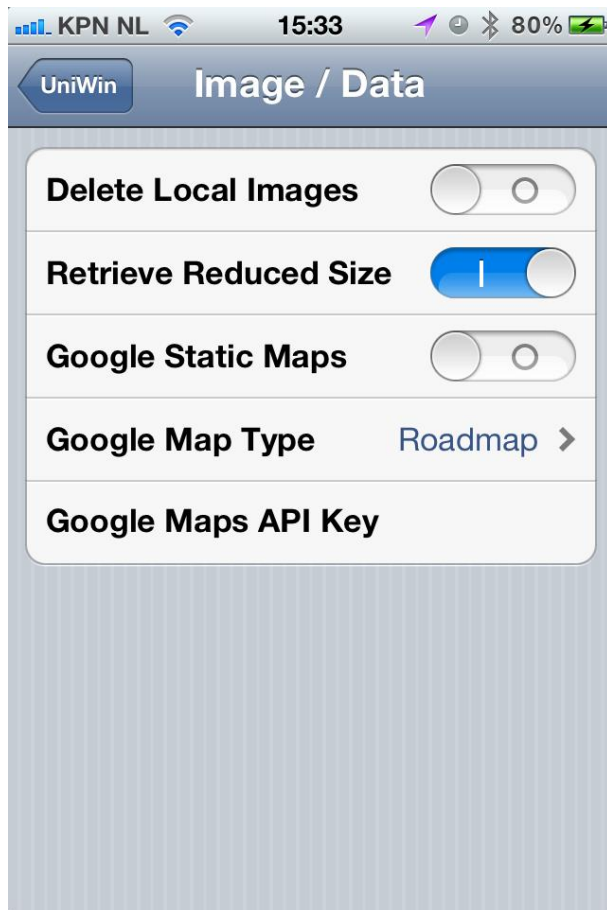

Most of these settings should be modified depending on the fact if UniWin is used in a local Wifi network or needs Mobile data to connect to UniWin. Optimize these parameters for a quicker response and/or less Mobile data usage.

- Delete local images:** All images saved locally by UniWin will be removed at the next start up of UniWin. This function is performed only once, so is automatically disabled once it is performed.
- Retrieve reduced size:** When retrieving images from UniWin, retrieve them in a smaller size, so they are collected quicker.
- Google static map:** Selects either the Static or Dynamic Google maps function, which can be activated in the View function.
- Google map type:** You can select any of these map type views. Please note, not all of these map types might be available on your device.
- Google maps api key:** In principle the usage of Google maps is free but limited to a number of times used per day. If you exceed this number of times, you might have to register with Google maps and retrieve a key. Enter this key here.
- Report EMail:** Enter the default Email address, to be used when reports are emailed.

Screen

Layout settings of the screen can be adapted to your preferences.




- Font size:** Select the font size for the display menus and lists
- Descending for finished:** When in a finished state of a View dialog, the sorting order will be descending, meaning the latest transaction will be on top.
- Functions top screen:** When in the Detail screen of a File or View, available functions are placed on the top of the screen or at the bottom.
- iPad split window:** For iPad only. The main screen will be split, with the menu being on the left and the dialog/screens on the right.
- Lock orientation:** The orientation of the screen is locked on start up of UniWin.



Installation

The UniWin for IOS app can be found in the App Store. Please search for UniWin to find the app in the store.

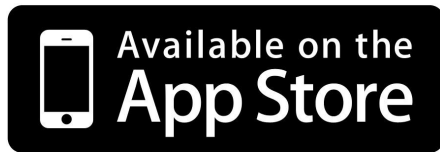

Just follow the instructions on your device to download and install UniWin. We advise you update UniWin on your device as soon as it becomes available in the App Store.

Requirements

The requirements of UniWin are:

- IOS device (iPhone, iPad or iPod touch) with IOS version 4.3 or higher.
- UniWin Server or network license (with extra client licenses) version 1.0.1.4 or higher.
- We advise to use 3.0/1.0.1.9 and higher for best performance and security. Needs UniWin 1.0.1.9 or higher for Reports, Closure, Status, Photo and Maps functionality.

UniWin works with Wi-Fi and Mobile data. However the setup on UniWin and firewalls must be checked to allow for remote connections. Please contact the System Administrator.