

COMPUSYNC™ NTP TIME SYNCHRONIZATION

## **GPS - TRACEABLE COMPUSYNC SYSTEM**

### INSTALLATION & USER GUIDE



## Legal Notice

Copyright ©2014 Primex Wireless, Inc. All rights reserved.

SNS is a trademark of Primex Wireless, Inc.

U.S. Patents 6,873,573; 7,352,657. Other Patents Pending.

Printed in the USA.

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of those agreements. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical or otherwise, for any purpose, without the prior written permission of Primex Wireless.

## Primex Wireless

	United States	Canada	United Kingdom
Address	965 Wells Street Lake Geneva WI 53147	1310 Kerrisdale Blvd. Unit #4 Newmarket, ON L3Y 8V6	Unit G420 Dean Clough Halifax, West Yorkshire HX3 5AX
Email	<a href="mailto:info@primexinc.com">info@primexinc.com</a>	<a href="mailto:info@primexwireless.ca">info@primexwireless.ca</a>	<a href="mailto:info@primexwireless.co.uk">info@primexwireless.co.uk</a>
Web	<a href="http://www.primexwireless.com">www.primexwireless.com</a>	<a href="http://www.primexwireless.ca">www.primexwireless.ca</a>	<a href="http://primexwireless.co.uk">primexwireless.co.uk</a>
Telephone	(800) 537-0464	(800) 330-1459	0800-3896996
Fax	(262) 248-0061	(905) 952-0134	01422-349462

## CONTENTS

<b>About CompuSync™</b> .....	<b>4</b>
About CompuSync™.....	4
CompuSync Configuration Options.....	4
CompuSync Receiver (NTP-R System).....	5
<b>Install CompuSync™ Hardware</b> .....	<b>6</b>
Install CompuSync Receiver (NTP-R System).....	6
Connect CompuSync Receiver to Computer - NTP-R System.....	6
<b>Configure CompuSync Receiver (NTP-R System)</b> .....	<b>6</b>
CompuSync Receiver Menu.....	6
CompuSync Receiver Internal Dip Switch Setting Options.....	7
LED RX Signal Indicator.....	8
<b>Install CompuSync Software</b> .....	<b>9</b>
Operating System Compatibility.....	9
Install CompuSync Software.....	9
CompuSync Log.....	11
<b>Configure CompuSync Software</b> .....	<b>12</b>
About CompuSync Receiver Configuration (NTP-R System).....	12
Configure CompuSync Receiver with Transmitter - Internal Antenna (NTP-R System).....	12
Configure CompuSync Receiver with Transmitter - External Antenna (NTP-R System).....	13
Set Time Source to use CompuSync Receiver as Time Source.....	14
Set CompuSync Backup External Time Server.....	15
Set Auto Startup.....	16
Set Log Level - CompuSync.....	16
Activate Service in CompuSync.....	16
Test CompuSync Receiver Connection.....	16
Grant CompuSync Access to Additional Personnel.....	17
<b>Ways to Synchronize a Network Using CompuSync™</b> .....	<b>18</b>
Synchronizing a Client Computer to CompuSync Over a Network.....	18
Running CompuSync Using the 'at' Command.....	18
<b>Support</b> .....	<b>20</b>
<b>Warranty</b> .....	<b>21</b>

# ABOUT COMPUSYNC™

## About CompuSync™

### NTP-R System (NIST Traceable)

CompuSync offers the total solution for enterprise wide time synchronization. Precise time is acquired from GPS satellites or NTP time source and made available over the network using the Network Time Protocol (NTP). As a result, client computers are synchronized typically to  $\pm 0.02$  seconds. By installing CompuSync within your network firewall, you can ensure high reliability and security in delivering precise time.

- CompuSync derives time from Primex Wireless transmitters which synchronize to GPS satellites and automatically track up to twelve satellites simultaneously. A simple user interface makes initial setup and use straightforward and effective.

### CompuSync Configuration Options

The following scenarios list the possible ways of configuring the CompuSync software.

#### **Scenario 1:** Casual User, Manual Mode

- CompuSync is installed and runs like a regular program whenever the user thinks of it, or as part of a regular maintenance routine.
- Profile: For this user accurate time is important when needed.

#### **Scenario 2:** Power User, Daily Mode

- CompuSync is installed and running in the system tray. The mode is set to daily and the time is set when the Internet connect is typically up.
- Profile: For this user accurate time is important and CompuSync makes the setting daily.

#### **Scenario 3:** Mission Critical, Periodic Mode

- CompuSync is installed and running in the system tray (or as a Windows service) in the Periodic mode. The user has selected an interval that in practice has proven to keep the clock within a comfortable level of accuracy.
- Profile: For this user accurate time is of the essence. Since the system utilization varies over the day, the CompuSync software checks that the clock is correct several times each day.

#### **Scenario 4:** File Server, Auto Mode

- CompuSync is installed and running in the system tray (or as a service) in the Auto Mode. CompuSync calculates when to make the next setting based on the accuracy required by the user and the traditional clock drift experienced on that system.
- Profile: For this user accurate time is critical and system load and utilization is fairly consistent.

#### **Scenario 5:** Scientific, Once Mode

- CompuSync is installed and runs in the "once" mode. The time is scheduled to make a setting before the user begins a particularly critical program or test when time must be correct or when coordination without side machines or processes is critical.
- Profile: For this user accurate time at a certain point in time is critical.

#### **Scenario 6:** Dial Up Desktop User, Manual Mode

- This user uses CompuSync whenever they're logged onto the network, which might be once a day or a few times a week.
- Profile: For this user convenience and ease of use is key.

#### **Scenario 7:** Embedded Application, Batch Mode

- CompuSync is configured in the Windows 98 Task Scheduler or the user's System Assistant in Microsoft Plus+ profile, which is part of their regular maintenance routine. This task is set to run every night at 3 a.m. when Internet access is first available.
- Profile: For this user accurate time is as simple as set it and forget it.

### CompuSync Receiver (NTP-R System)

The CompuSync Receiver, as shown Figure 1, receives synchronized time signals from the Primex Wireless System, which are then sent to the server or computer configured with the CompSync software. When installed on a network server, the Windows settings of the computer and server can be configured to synchronize to the Primex Wireless System.

- Dimensions: 5.8"L (14.73 cm) x 4.3"W (10.92 cm) x 1.3"D (3.30 cm)
- Antenna: 11.5"L (29.21 cm)
- 5' (1.52 m) RS232 data cable attached
- Power supply:
  - Input: 120 VAC 50/60 Hz
  - Output: 9 VDC 1.6 Amp
  - 6' (1.83 m) cord

Figure 1: CompuSync Receiver

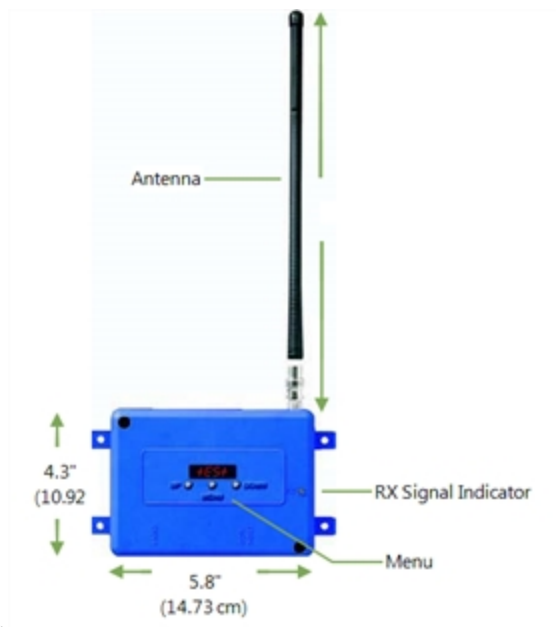


Figure 2:

## INSTALL COMPUSYNC™ HARDWARE

This section provides the procedures to install the CompuSync hardware.

### Install CompuSync Receiver (NTP-R System)

Complete the steps below to install the receiver.

1. Attach the rubber antenna to the CompuSync Receiver.
2. Determine a location for the CompuSync Receiver and test at the location.

**NOTE:**

- Close all doors and windows during testing.
- Closeness to walls can degrade receiver sensitivity.
- Do not hold the CompuSync Receiver during testing, as this can artificially improve the sensitivity of the receiver. Do not use an analog clock to determine if a location will be adequate for signal reception. The receiver in a clock is more sensitive than the receiver in the CompuSync Receiver and therefore, the CompuSync Receiver may not work in locations where a clock works.
- The CompuSync Receiver should be located at least 3 ft from electromagnetic noise sources such as transmitting antennas.
- If the exact location is not known, be sure to test the CompuSync Receiver in several locations. If a signal is not received at a particular location, note this for future reference.

3. Mount the CompuSync Receiver in its final location.

**NOTE:** The antenna must be vertical when mounted.

4. Connect the 9V, 500mA power supply to the CompuSync Receiver first, then into the wall.
5. Verify that the green LED is flashing once per second.

### Connect CompuSync Receiver to Computer - NTP-R System

1. Plug cable from the CompuSync Receiver into the computer's serial port.
  - The cable has a female DB9 connector at the end and plugs into an available serial port (usually named COM1 or COM2) on the computer.
2. Note the number of the COM port that the data cable is connected to.

## CONFIGURE COMPUSYNC RECEIVER (NTP-R SYSTEM)

### CompuSync Receiver Menu

To access the CompuSync Receiver menu, press the **Menu** button located on the front of the receiver. By pressing and holding the Menu button, the receiver will cycle through the menu options.

**NOTE:** Changes made in the menu will be saved when the menu is exited.

Table 1: Menu Mode Options

Display	Menu	Description
Ch	Channel Number	<p>The CompuSync Receiver is set by default to scan for the first available frequency. The hardware can, however, be set to pick up a signal from a specific transmitter.</p> <p>While in the Channel menu option, if there are no changes made in a minute of entering a menu section, it will time out and save the displayed value, exiting the menu mode. If a value is changed while cycling through the menu, it will be saved and continue to cycle.</p>
tEst	Test	<p>The Test menu allows the user to hear audible beeps with a valid time/date reception. This will occur 5 seconds after the test menu is selected. It will continue to be in this mode until the menu button is pressed again, leaving the menu mode and returning to normal mode.</p> <p>While in test mode, it will remain in the selected mode until the menu button is pressed again to exit.</p>
LtU	Last Time Update	<p>The Last Time Update menu allows the user to see the last time update, time and date (cycles every second). This will occur 5 seconds after last time update menu is selected. The unit will remain in this mode for a minute, wherein it will time out and return to the menu mode.</p>
Soft	Software Revision	<p>The Software Revision menu allows the user to see the software revision on the unit. This will occur 5 seconds after last time update menu is selected. The unit will remain in this mode for a minute, wherein it will time out and return to the menu mode.</p>
dst	Daylight Saving Time	<p>The Daylight Saving Time Calendar menu allows the user to see the current Daylight Saving Time calendar in use. This will occur 5 seconds after last time update menu is selected. The unit will remain in this mode for a minute, wherein it will time out and return to the menu mode.</p>
donE	Done	<p>The Done menu allows the user to exit the menu mode. This will occur 5 seconds after the done menu is selected returning to the normal mode saving all settings</p>

## CompuSync Receiver Internal Dip Switch Setting Options

The internal dip switch settings define the unit's time and RF channel scanning settings, as defined in the table below.

**NOTE:** To access the dip switch panel, remove the cover of the receiver.

Table 2: Internal Dip Switch Specifications

Switch	Sets	ON Position	OFF Position
2	Time/Date	displays only the time.	displays the current time for 8 seconds and the date for 2 seconds.
3	12/24 Hour	display the time in 24 hour format.	display the time in 12 hour format.
4	RF Channel Scan	enable the scan and look for a suitable channel.	disable the scan and only look on the selected channel for time/date/event info.
5	DST	DST is disabled	DST is enabled

**NOTE:** Settings are only read on reset. Switches 6, 7, 8 do not apply to this application.

### LED RX Signal Indicator

The LED RX Signal Indicator is located on the front right side of the CompuSync receiver below the antenna. The green LED will flash each valid time/date packet.

## INSTALL COMPUSYNC SOFTWARE

The section provides the procedures to install the CompuSync software.

### Operating System Compatibility

- Windows 7/2003/2000/XP: May require reboot after installation. Administrator rights are required for installation. Can either run as a background service or can be started when the local user logs in to Windows.
- Windows 98/Me: May require reboot after installation. CompuSync can be configured to start on system boot up.
- Windows NT 4: Service Pack 3 or above for NT v. 4.x Updating of older DLLs may be necessary. May require reboot after installation Administrator rights are required for installation. Can either run as a background service or can be started when the local user logs in to Windows.


**NOTE:** Windows NT/2000/XP/2003 users should consider using the service. The “service” option shows the status of the CompuSync Service and allows you to stop and start the service. In Windows, a service is a separate process that runs independently of any application and is normally active whenever the computer is running. When enabled, the CompuSync Service runs whenever the computer is running. It functions identically to the application in checking the clock and keeping the time correctly set.

**NOTE:** Windows may incorrectly identify the GPS Receiver as a “Microsoft Serial” or “Microsoft Serial BallPoint” mouse. If this occurs, Windows may then install software that inhibits communication with the GPS, or which causes the mouse cursor to respond erratically. You can check for this by looking in the Windows Device Manager to see if a second “Serial” or “BallPoint” mouse is assigned to the same COM port that is utilized by the GPS Receiver. If it is installed on the same port, disable that mouse in the Device Manager.

### Install CompuSync Software

Prior to installation, uninstall any previous version of the CompuSync Software installed on your computer. Also, it is recommended to close all other applications you may have running.

1. Verify operating system compatibility.
2. Insert the CompuSync CD into your computer’s CDROM drive.
3. Click on the **Start** button, scroll up and select **Run**. Type **d:\setup**, where “d” is your CDROM drive letter. If “d” is not your CDROM drive letter, substitute the correct letter. Press **Enter** or click **OK**.

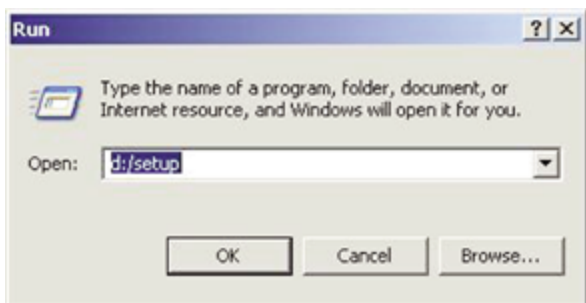


4. The Install Shield Wizard opens to guide you through the program setup progress. Once the Install Shield Wizard is installed, it is ready to install the Primex Wireless CompuSync Software on your computer. Click **Next**.

5. The software will ask if the program is to be installed for all users or just one. Select the desired option and click **Next**.
6. The software will ask if CompuSync is to be installed as a service. Select the desired option and click **Next**.



7. The software will ask for a key code. This code is located on the back of the CD jacket. If using the trial version, enter TRIAL as the key. Type in the key and click **Next**.



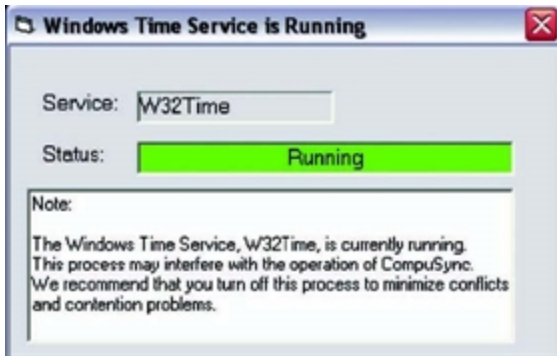

8. A Registration Information screen will appear with the option to enter a User Name and Organization. Type in the Name and Organization and click **Next**.
9. Verify that all information is correct and click **Next**.
10. The Setup will ask you where to install the CompuSync files. Click **Next** to accept the default directory or click **Browse** to select a different directory.
11. The software will ask if you want to backup replaced files. To back them up, click **Yes**. If backup files are not required, click No.
12. If the backup option is selected, the setup will place the files in the location listed on the screen. Click **Next** to continue.
13. Setup will now begin installing the CompuSync Software. Click **Next** to continue. The Install Shield will copy the CompuSync files to your computer.
14. If Windows Time Service is running, the software will recommend that you stop it. This is a required step if you plan to use CompuSync as an NTP timeserver.
15. When installation is completed, the following screen will appear. Click **Finish** to exit Install Shield.
16. On certain versions of Windows you may be asked to restart to complete the installation. If so, click Yes to restart your computer. CompuSync is now installed on your computer.

**NOTE:** When installing on a Windows 2000 or XP computer, the GPS receiver may be incorrectly identified as a "Microsoft Serial BallPoint" mouse. If asked, do not install the "Serial BallPoint Mouse" when prompted.

## CompuSync Log

The log provides a record of all the settings made by CompuSync. Once a log file is specified, the system adds data to the log file each time the program is activated and a setting is made.

- **Action log:** a summary view of all current time setting activity. Data is displayed in a list on the main screen and actions are added as they occur. Entries include the origination of the action and the result. Upon starting, the list shows the five most recent events (if available). After the program closes, the action detail can be found in the individual logs.
- **Event log:** allows you to write selected action to a text file and/or the NT/2000/XP/2003 event log. This log captures major time setting activities as well as warnings for when there may be a system or time setting problem.

## CONFIGURE COMPU SYNC SOFTWARE

This section provides the procedures required to configure the CompuSync software settings.

### About CompuSync Receiver Configuration (NTP-R System)

The CompuSync configuration procedure is dependent upon the system transmitter model, as specified below.


- **1-Watt transmitters with internal antenna:** select the CompuSync Receiver (Option 1). For additional information, see "Configure CompuSync Receiver with Transmitter - Internal Antenna (NTP-R System)" located on page 12.
- **1-Watt, 5-Watt, or 30-Watt transmitters with the antenna mounted outdoors (external antenna):** select the CompuSync Receiver Ext (Option 2). For additional information, see "Configure CompuSync Receiver with Transmitter - External Antenna (NTP-R System)" located on page 13.

### Configure CompuSync Receiver with Transmitter - Internal Antenna (NTP-R System)

Complete the steps below to configure a CompuSync receiver for use with a 1 Watt Transmitter - Internal Antenna model.

1. Open the CompuSync program.
2. Select **Options** and select the drop-down **GPS**.
3. Be sure the Sync time is set to **Continuous**.
4. Check **Enable GPS as time base**.
5. Click the **Setup** button.
6. From the drop down menu, select **CompuSync Receiver**.
7. Select the **COM port** in this GPS Setup window.

Figure 3: GPS Setup Configuration

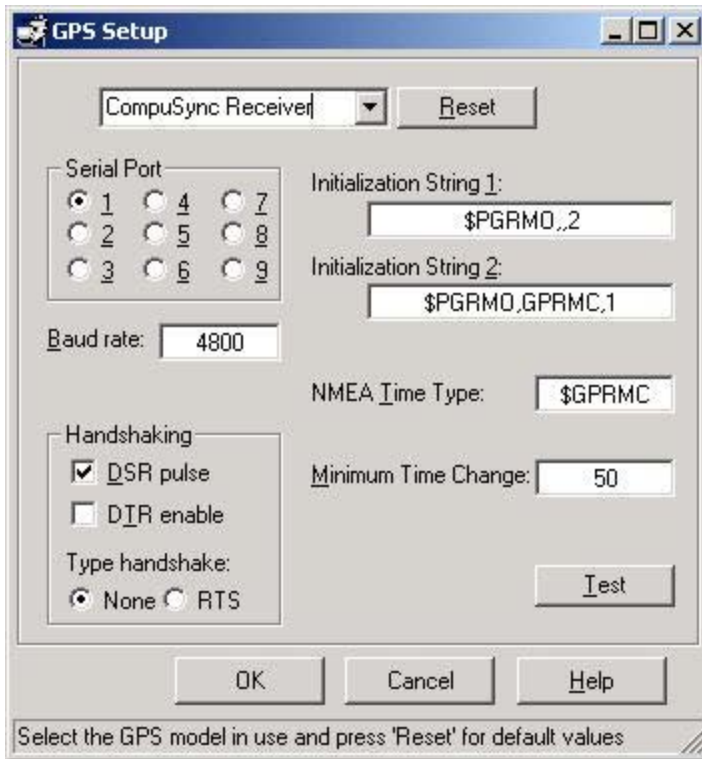


8. Click **OK** when finished.

### Configure CompuSync Receiver with Transmitter - External Antenna (NTP-R System)

Complete the steps below to configure a CompuSync receiver for use with a either a 1W, 5W or 30 Watt Transmitter - External Antenna model.

1. Open the CompuSync program.
2. Select **Options**, and drop down to **GPS**.
3. Set the **Sync time** to the time your transmitter is broadcasting on. The most common time is Hourly from 39 minutes after the hour to 06 after the next hour. These are the times in which Primex Wireless products are searching for a signal. The second most common time is daily from 12:50 am - 3:10 am.
4. Check **Enable GPS as time base**.
5. Click the **Setup** button.
6. From the drop-down menu, select **CompuSync Receiver**.
7. Select the **COM port in this GPS Setup window**.

Figure 4: GPS Setup Configuration

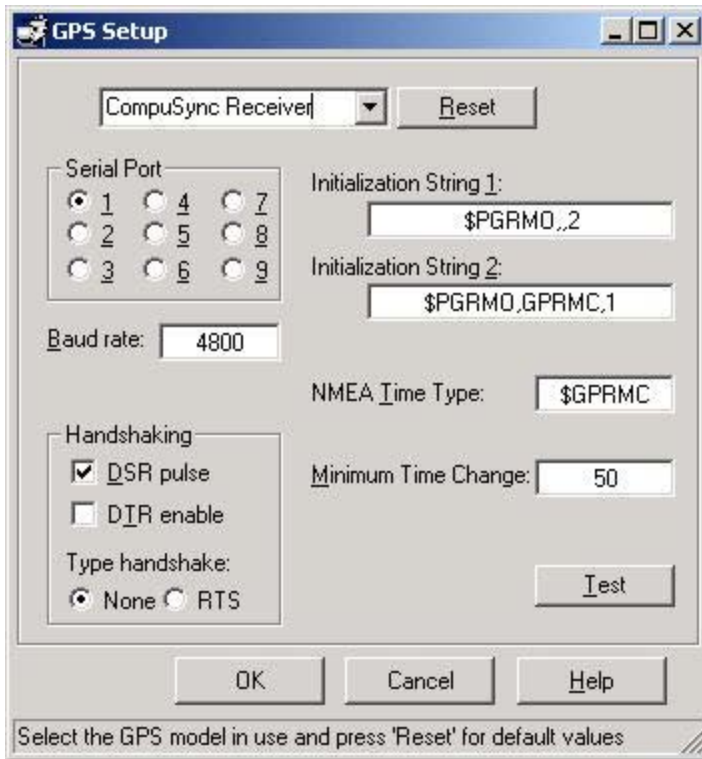

8. Click **OK** when finished.


### Set Time Source to use CompuSync Receiver as Time Source

The GPS Options tab in CompuSync sets how often the computer's clock is updated from the GPS or CompuSync Receiver. It can be found from the main Options menu of CompuSync.

Complete the steps below to set CompuSync to use GPS as its time source.

1. From the **Options** menu, click the **GPS Options** tab.
2. To set the GPS Receiver as the time source, select the check box **Enable GPS as time base**. When enabled, CompuSync will synchronize the operating system time to the GPS time at the interval specified.

**NOTE:** When this setting is enabled, CompuSync accesses the GPS at the interval specified, independent of the timserver settings selected (e.g. Manual, Periodic, Auto).

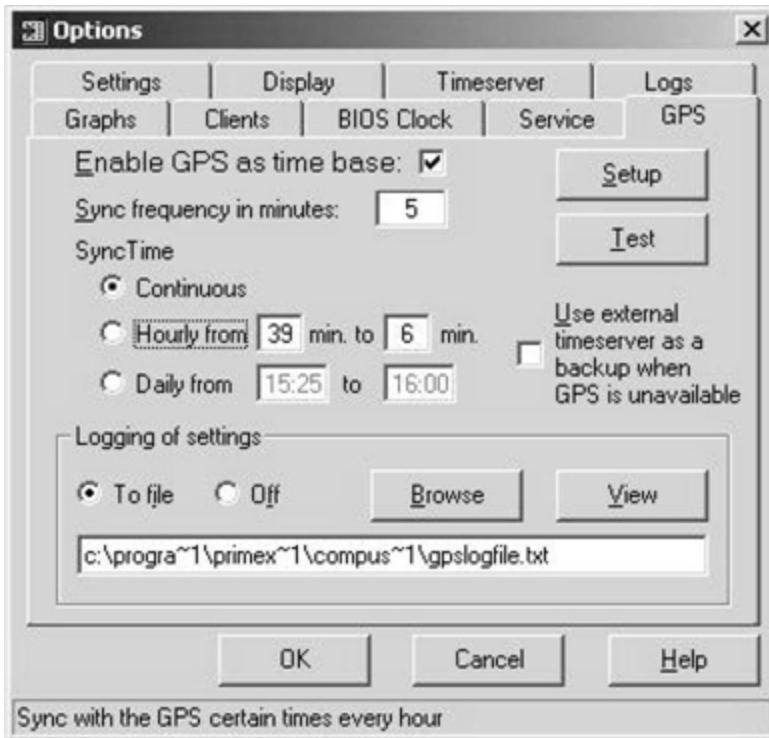

3. Set the **Sync frequency in minutes**. Sets the number of minutes between GPS time readings. Updating the operating system clock from the GPS stabilizes a system with erratic time keeping.
4. Set the **SyncTime** to continuous, as the GPS should be continuously sending data.
5. To connect to an external timeserver when GPS is unavailable, select the check box **Use external timeserver as a backup when GPS is unavailable**.

**NOTE:** This is not recommended as Internet time servers may not be synchronized to the Primex Wireless System.

- CompuSync will get the time from a backup external timeserver specified in the settings in the Timeserver tab.
- In the Timeserver tab you can choose to use either an Internet based timeserver or contact the NIST directly via modem (Direct Modem).
- Set the warning level under the Settings tab to determine when the backup timeserver should be used.

### Set CompuSync Backup External Time Server

When GPS is not available, an external timer server can be used as a backup.

1. From the CompuSync software, select the "Timeserver" tab in the "Options" window to view the current server settings, including server, protocol and port number used to communicate with the timeserver.
  - The current settings are used to set the initial test conditions. The default timeserver is set to the NIST in Boulder, Colorado. A list of alternative timeservers can be accessed by clicking the "Directory" button. Default settings are also selected for "Connection" and "Protocol", but can be updated according to your preferences.

2. Pressing the test button will verify that the communication can be established with the current settings. To test your connection, click "Test". The "Timeserver Test" screen will appear. Click the "Test" button in the lower left corner. The results are displayed on the bottom of the window.

## Set Auto Startup


To set the CompuSync user interface to start-up automatically each time the system is rebooted, click the **Display** tab of the Options window and check **Startup Automatically**.

**NOTE:** On Windows 98/Me machines, CompuSync starts on system boot up. On Windows NT/2000/XP/2003 machines, CompuSync is started when the local user logs on to Windows.

## Set Log Level - CompSync

The log provides a record of all the settings made on the system. This can be useful in a variety of ways:

1. To store previous setting attempts for use by the Previous Settings Graph.
2. As a record of system performance.
3. As a long term indicator of system clock drift over time.
4. As a source of information on when Internet access is available.
5. As an input to other programs, such as a spreadsheet or database programs, where further analysis would be done.

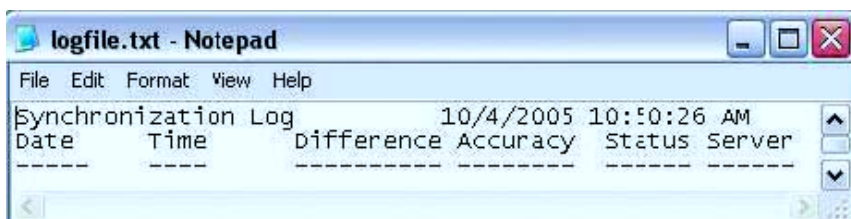

## Activate Service in CompuSync

(Windows NT/2000/XP/2003)

From the **Options** window, select **Service**. You have the option to start, pause, or stop the execution of the CompuSync service. Select **Start** to activate your CompuSync system.

- **Start:** Starts the CompuSync service that is not running.
- **Pause:** Suspends and resumes the clock synchronization activity of the CompuSync service.
- **Stop:** Stops a version of CompuSync that is currently running.

## Test CompuSync Receiver Connection

Complete the steps below to test the CompuSync Receiver connection.

1. From the **Options** window, select **GPS**.
2. Click the **Test** button.

3. The GPS Test window will open. Click **Open** to connect to the GPS. You should be able to observe the data coming in from the GPS Receiver.

### Grant CompuSync Access to Additional Personnel

You can add new CompuSync users for Windows NT/2000/XP/2003 on the same computer. Each user will have their own settings. There will be a single copy of the CompuSync application files installed on the computer.

Steps to add a user:

1. As an administrator, first install the full application on the computer and confirm it works.
2. Grant Change the system time right to the intended user, in the User Rights Policy section.
3. Login to the computer as the intended user.
4. Run the new user program, Add New User.
5. Use the same key code to register the software for the user.
6. Start CompuSync.

## WAYS TO SYNCHRONIZE A NETWORK USING COMPU SYNC™

The two most common methods of synchronizing networks using CompuSync are the Client/Server mode and distributing time over a Domain Server. Due to the many variations of network topologies that exist, not all possible ways of configuring the CompuSync to synchronize a network can be described in this guide.

- In Client/Server mode, the computer that the CompuSync software is installed on becomes an NTP Server. Once installed, client computers can be pointed to this NTP server for synchronization. For additional information, see "Synchronizing a Client Computer to CompuSync Over a Network" located on page 18.

**NOTE:** All Windows 2000 and newer PC's have an SNTP Client installed by default.

- When using CompuSync to distribute time over a Domain Server, the CompuSync software is installed on a domain server. This mode synchronizes the server's internal clock. The Domain Server can then be used to distribute synchronized time over the network. For additional information, see "Running CompuSync Using the 'at' Command" located on page 18. Additional information can also be found on [www.microsoft.com](http://www.microsoft.com).

### Synchronizing a Client Computer to CompuSync Over a Network

A remote computer can synchronize with the computer running CompuSync using the net time command available in Windows 95/98/Me or Windows NT/2000/XP/2003.

The syntax for this to be run from a remote computer not running CompuSync is:

```
net time \\<CompuSync> /set /yes
```

Where:

- net time = the network command
- \\<CompuSync> = the name of the computer with the correct time. (i.e. \\SERVER\_MAIN)
- /set = synchronizes the clock on computer you are executing the command from, with the computer specified.
- /yes = runs the command without verification

### Running CompuSync Using the 'at' Command

Under Windows NT/2000/XP/2003 CompuSync will not run as a Network Service for the server it is installed on, however it can run automatically in the background on a Windows network by using the at command.

The "at" service must first be started from the net start command or by using the service applet in the Control panel.

Syntax for the at command is:

```
at \\anyconnectedcomputer time /every day command option
```

Where:

- at = the command
- anyconnectedcomputer = the computer where CompuSync is installed
- time = is the time to run the command
- /every day = is an option to run the command every day at the day and time specified
- command = the name of the executable to run
- option = the command line argument for the executable.

For example:

at \\primexnt 01:30 /every:Th,S c:\Program Files\Primex Wireless\CompuSync\CompuSync.exe once Runs CompuSync with the once option every Thursday and Saturday at 01:30 AM on the computer namedprimexnt.

# SUPPORT

## Primex Wireless Technical Support

Technical Support responds to specific questions about product features, system configuration, and troubleshooting. All support services will be delivered in accordance with your organization's support agreement, end user licenses agreements, and warranties.

## Contact Primex Wireless Technical Support

Before contacting Technical Support, make sure you have satisfied the system requirements that are listed in your product documentation. Also, you should be at the computer on which the problem occurred, in case it is necessary to replicate the problem.

When you contact Technical Support, please have the following information available:

- Customer ID
- Problem description
- Device hardware information
- Error messages
- Troubleshooting performed before contacting Primex Wireless
- Recent network changes (SNS products only)

Technical Support	
Telephone	(800) 404-8112
Email	techsupport@primexinc.com
Fax	(262) 248-0061
Hours	7:00 am to 7:00 pm CST   Monday through Friday
Web	www.primexwireless.com

## WARRANTY

### One Year Limited Warranty

Primex Corporation warrants this product to be free from defects in materials and workmanship for a standard of one year from the date of purchase. Primex will at its sole option, repair or replace any components that fail in normal use. Such repairs or replacements will be made at no charge to the customer for replacement parts. The customer will be responsible for any transportation costs. This warranty does not cover failures due to misuse, abuse, accidental or unauthorized alterations or repairs.

The warranties and remedies contained herein are exclusive and in lieu of all other warranties express or implied or statutory, including any liability arising under any warranty or merchantability or fitness for a particular purpose, implied, statutory or otherwise. In no event shall Primex be liable for any incidental, special, indirect or consequential damages, whether resulting from the use, misuse or inability to use this product or from defects in the product. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitations or exclusion may not apply to you.

To obtain warranty service: If after following the instructions in the product guide, you are certain the product is defective, please contact Primex Wireless Technical Support to assist with troubleshooting the issue. If the issue cannot successfully be resolved and the product is under warranty, an RMA (Return Material Authorization) will be generated. The RMA form will be provided via email with detailed instructions for the return. All merchandise returned must be shipped to Primex Wireless, Attn: Returns Dept., N3211 County Road H, Lake Geneva, WI 53147.

Primex Wireless retains the exclusive right to repair or replace the unit at its sole discretion. All merchandise returned must be shipped to Primex Wireless, Attn: Returns Dept., N3211 County Road H, Lake Geneva, WI 53147. Primex Wireless retains the exclusive right to repair or replace the unit at its sole discretion. Such shall be your sole exclusive remedy for any breach of warranty.