

# **Digital Video Recorder**

## **CDVR-1608R**

### **User Manual**

## FCC Compliance Statement

**NOTE :** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

# **IMPORTANT SAFETY INSTRUCTIONS**

## **1. Read Instructions**

All the safety and operating instructions should be read before the product is operated.

## **2. Retain Instruction Manuals**

The safety and operating instructions should be retained for future reference.

## **3. Heed Warnings**

All warnings on the product and in the operating instructions should be adhered to.

## **4. Follow Instructions**

All operating and use instructions should be followed.

## **5. Cleaning**

Unplug this product from the power outlet before cleaning.

Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

## **6. Attachments**

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

## **7. Water and Moisture**

Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

## **8. Accessories**

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.

## **9. Ventilation**

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

## **10. Power Sources**

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

## **11. Power-Cord Protection**

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from

## **12. Overloading**

Do not overload wall outlets, extension cords, or integral convenience receptacle as this can result in a risk of fire or electric shock.

## **13. Object and Liquid Entry**

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

#### **14. Damage Requiring Service**

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a) When the power-supply cord or plug is damaged.
- b) If liquid has been spilled, or objects have fallen into the product.
- c) If the product has been exposed to rain or water.
- d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e) If the product has been dropped or damaged in any way and
- f) When the product exhibits a distinct change in performance - this indicates a need for service.

#### **15. Replacement Parts**

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

#### **16. Safety Check**

Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operating condition.

#### **17. Heat**

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat the product.

#### **18. Internal Fan**

The internal fan rotates at high speed and may cause an accident.

#### **19. Battery**

Change the lithium battery after turning off the power of the product.

Check the polarity of the lithium battery while changing and change the lithium battery with the same type which is in the product or with a similar type recommended by your vendor.

Dispose the lithium battery according to the instructions of the battery manufacturer.

There is danger of explosion when instructions are not followed.

#### **20. Turning On / Off the DVR power.**

Do not turn off the power by removal of the power plug.

To turn off the power, click the power button from the front panel.

When the system stops abnormally, the power button might not work.

Click power button for 5 full seconds to turn power off.

Do not turn off the power improperly or apply shock/vibration to unit while the hard disk is activating.

It may cause hard disk failure or loss of data.

## 1. INTRODUCTION

|                               |    |
|-------------------------------|----|
| 1.1. DVR Components.....      | 6  |
| 1.2. Product Description..... | 7  |
| 1.2.1. Front Panel.....       | 7  |
| 1.2.2. Rear Panel.....        | 9  |
| 1.2.3. Remote Controller..... | 10 |

## 2. INSTALLATION

|                            |    |
|----------------------------|----|
| 2.1. Hard Drive.....       | 11 |
| 2.2. Starting the DVR..... | 12 |
| Cautions & Warnings.....   | 12 |
| 2.3. Log In & Log Out..... | 13 |
| 2.4. CD Booting.....       | 14 |
| 2.5. USB Flash Drive.....  | 14 |

## 3. CONFIGURATION

|                                      |    |
|--------------------------------------|----|
| 3.1 Configuration Menu.....          | 15 |
| 3.2. System Setup.....               | 17 |
| 3.3. Camera Setup.....               | 19 |
| 3.4. Sensor Setup.....               | 21 |
| 3.5. Network Setup.....              | 22 |
| 3.6. Record Setup.....               | 24 |
| 3.7. Record Scheduler.....           | 26 |
| 3.8. Display Setup.....              | 27 |
| 3.9. Device Setup & Information..... | 28 |
| 3.10. Log List.....                  | 29 |
| 3.11. Backup & Format.....           | 30 |

## 4. OPERATION

|                                     |    |
|-------------------------------------|----|
| 4.1. Monitoring.....                | 31 |
| 4.1.1. Multi-Screen Display.....    | 31 |
| 4.1.2. Changing Channel.....        | 31 |
| 4.1.3. Freeze Screen.....           | 31 |
| 4.1.4. Full Screen Display.....     | 32 |
| 4.2. Monitoring Control.....        | 33 |
| 4.2.1. Display.....                 | 33 |
| 4.2.2. Video.....                   | 34 |
| 4.2.3. Audio.....                   | 34 |
| 4.2.4. etc.....                     | 35 |
| 4.3. Playback (Search) .....        | 37 |
| 4.3.1. Time/Date Search.....        | 37 |
| 4.3.2. Event Search.....            | 40 |
| 4.3.3. File Search(CD-RW, USB)..... | 41 |
| 4.3.4. Capture.....                 | 42 |
| Image Capture.....                  | 42 |
| Video Clip Copy.....                | 42 |
| 4.4. PTZ Control.....               | 44 |
| 4.5. Recording.....                 | 46 |
| Panic Recording.....                | 46 |

|                                            |    |
|--------------------------------------------|----|
| <b>Appendix A. Technical Specification</b> | 47 |
|--------------------------------------------|----|

|                                     |    |
|-------------------------------------|----|
| <b>Appendix B. Trouble Shooting</b> | 48 |
|-------------------------------------|----|

# 1. INTRODUCTION



## 1.1. DVR Components

---

Check the package and contents for visible damage. If any components are damaged or missing, do not attempt to use the unit, contact the supplier immediately. If the unit must be returned, it must be shipped in the original packing box.



**DVR Unit**



**Mouse**




**Remote Controller**



**Power Cable**




**Operation Manual**

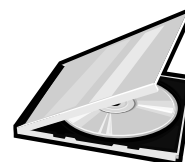

**Network Client Program**

## 1.2. Product Description

### 1.2.1. Front Panel

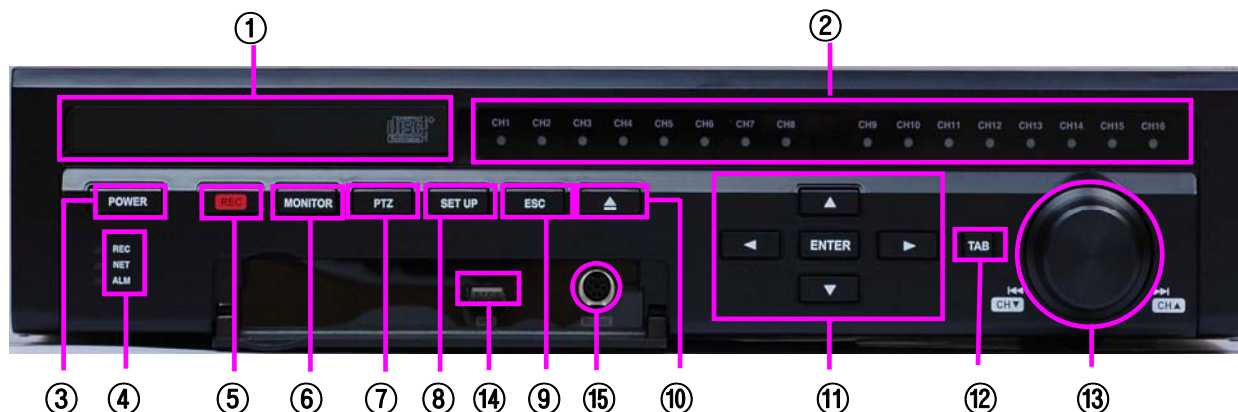

1. **CD-RW Tray Door** : Insert CD.

2. **Channel Indicator (1 to 16)** : Indicates which channels are operating.

3. **POWER** : Press to turn on/off power. The power indicator will light up when power is on.

4. **REC Indicator** : The indicator will blink during recording.

**NT Indicator** : The indicator will light up during network connection.

**AR Indicator** : The indicator will light up when sensor is triggered.

5. **PANIC** : Toggle to start/stop panic recording of all channels with high recording quality.

6. **MONITOR** : Display the Monitoring Control Menu on the screen.

7. **PTZ** : Enter the PTZ control mode.

8. **SETUP** : Enter the Setup Mode.

9. **ESC** : Clear the Monitoring Control Menu.  
Return to a higher Category/Group/Field.  
Cancel the selected Field button.

10. : Insert and Eject CD. You may also push the tray to insert the tray.

11. **Operation Keys** :

: Activate a function or complete an entry that you have made during setup.  
Display the Monitoring Control Menu on the screen.

: Move between categories and change field values.


12. **TAB** : Move between menu groups.

13. **JOG Dial** : Change channels during monitoring.  
Frame by frame reverse/forward during Playback mode.

14. **USB Port** : Connection for USB storage device


15. **MOUSE Port** : Connection for PS2 mouse.

### 1.2.2. Rear Panel

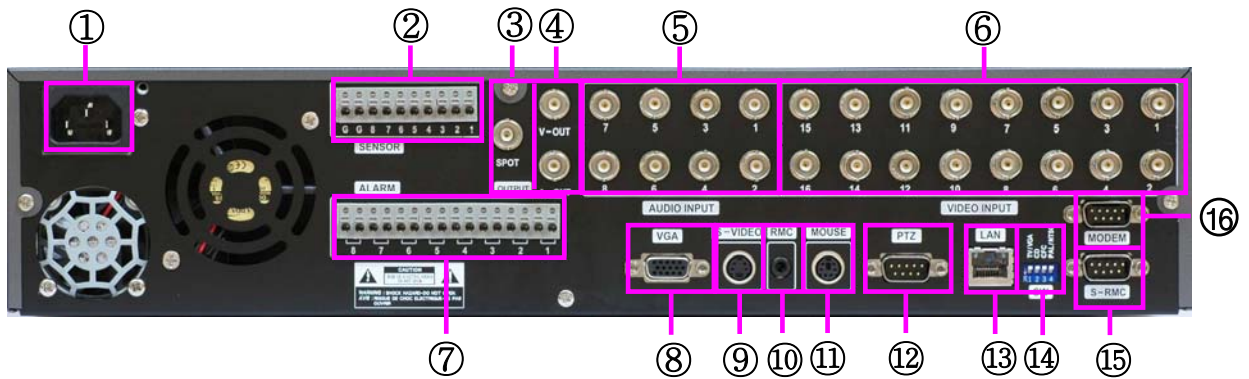

**1. AC POWER Socket** : Supports 110V ~ 220V free volt.

**2. SENSOR Terminal**

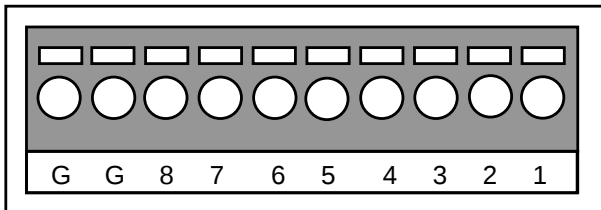

\* Connect G(Ground) before connecting the sensors.

**3. SPOT OUT Connector**

- Output connector for Spot Out signal to monitor.

**4. VOUT & AOUT Connectors**

- Output connector for video(VOUT) and audio(AOUT) signals to monitor.


**5. AUDIO INPUT Connectors**

- Input connectors for audio signals.

**6. VIDEO INPUT Connectors**

- Input connectors for video signals.

**7. ALARM Output Terminal**

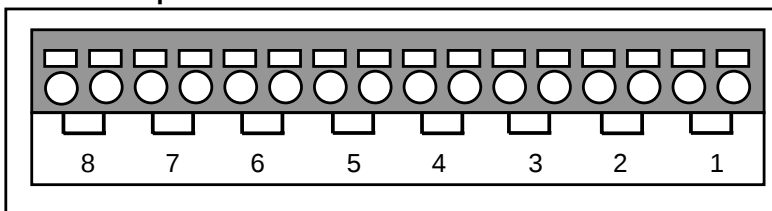

- Connect the alarm devices in its corresponding numbers.

**8. VGA(Monitor) Port**

- Connection to PC monitor.

**9. S-Video Connector**

- Connection to S-Video jack.

**10. RMC Connector**


- Connection to remote controller extension cable.

**11. MOUSE Port**

- Connection to Mouse.

## 12. PTZ Connector

- Connection to PTZ camera.

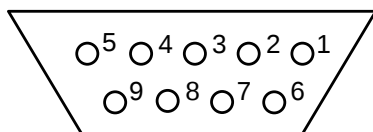

| PIN No. | Explanation | PIN No.     | Explanation |
|---------|-------------|-------------|-------------|
| 1       | nRS485      | 5           | GND         |
| 9       | RS485       | 2,3,4,6,7,8 | Not used    |

## 13. LAN Port

- Connection to LAN cable.


## 14. SW(DIP Switch)

- Adjust the Dip Switch setting according to required functions. The system must be restarted after adjustments.

| Functions      | OFF Position(Up) | ON Position(Down)          |
|----------------|------------------|----------------------------|
| Color System   | NTSC             | PAL                        |
| Booting        |                  | CD Booting                 |
| None           |                  |                            |
| Monitor Output | VGA              | *TVRGB, Composite, S-Video |

\* Only PC monitors that support Interlace RGB must be used. Or TVs with RGB jack (SONY monitors) may be used after connecting RGB and HSYNC to the external SYNC. Switch between TV↔VGA may be performed only during the Monitoring Mode.


## 15. TERMINAL

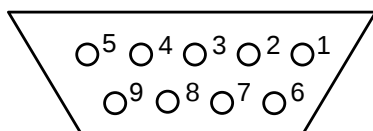

| PIN No. | Explanation | PIN No.     | Explanation |
|---------|-------------|-------------|-------------|
| 2       | RX          | 5           | GND         |
| 3       | TX          | 1,4,6,7,8,9 | Not used    |

\* Lower serial connection jack : For serial remote control.

## 16. MODEM Port

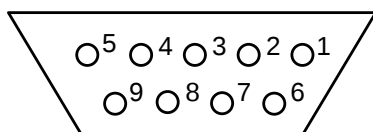

| PIN No. | Explanation | PIN No.     | Explanation |
|---------|-------------|-------------|-------------|
| 2       | RX          | 5           | GND         |
| 3       | TX          | 1,4,6,7,8,9 | Not used    |

### 1.2.3. Remote Controller

|                |                                                                                                                                                                                                                                                                                                    |
|----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OSD            | OSD On/Off during Monitoring.                                                                                                                                                                                                                                                                      |
| PANIC          | Panic Recording On/Off.                                                                                                                                                                                                                                                                            |
| Numeral Keys   | Input numbers during Login/Setup/PTZ.                                                                                                                                                                                                                                                              |
| CAPTURE        | Enter video clip/image copy menu during playback.                                                                                                                                                                                                                                                  |
| F/F            | Remove image distortion during frame by frame advance.                                                                                                                                                                                                                                             |
| PREVIOUS       | Move to previous category.                                                                                                                                                                                                                                                                         |
| NEXT           | Move to next category.                                                                                                                                                                                                                                                                             |
| Direction Keys | Move cursor left/right/up/down.<br>PTZ control                                                                                                                                                                                                                                                     |
| MENU ENTER /   | Display the menu bar during monitoring, playback, and capture.<br>Select/Enable a highlighted category/function.                                                                                                                                                                                   |
| ESC            | Stop current operation or return to previous mode.                                                                                                                                                                                                                                                 |
| AUDIO          | Audio On/Off.                                                                                                                                                                                                                                                                                      |
| MONITOR        | Enter Monitoring mode.                                                                                                                                                                                                                                                                             |
| PTZ            | Enter PTZ control mode.                                                                                                                                                                                                                                                                            |
| SEARCH         | Enter Search(Playback) mode.                                                                                                                                                                                                                                                                       |
| SETUP          | Enter Setup mode.                                                                                                                                                                                                                                                                                  |
| PAUSE          | Pause during playback.                                                                                                                                                                                                                                                                             |
| ⏮              | Fast reverse playback                                                                                                                                                                                                                                                                              |
| ⏪              | Playback in reverse/forward direction                                                                                                                                                                                                                                                              |
| ⏩              | Fast forward playback.                                                                                                                                                                                                                                                                             |
| FULL SCR       | Change to full screen display during Search..                                                                                                                                                                                                                                                      |
| ⏮              | Playback in slow motion(1x→1/2x→1/4→1/8x→1/16)                                                                                                                                                                                                                                                     |
| -/+ SKIP       | Increase/Decrease speed during playback.                                                                                                                                                                                                                                                           |
| CH             | Change channels during Monitoring/PTZ Control/Playback.                                                                                                                                                                                                                                            |
| DISPLAY        | Change multi-screen display type                                                                                                                                                                                                                                                                   |
| -/+ ZOOM       | Adjust zoom of PTZ camera.<br>Toggle between zoom 2x and normal view during monitoring.                                                                                                                                                                                                            |
| FREEZE         | Freeze screen during monitoring                                                                                                                                                                                                                                                                    |
| SEQUENCE       | Automatic sequence display during monitoring.                                                                                                                                                                                                                                                      |
| ▲ / ▼ FOCUS    | Adjust focus of PTZ camera                                                                                                                                                                                                                                                                         |
| ID Set         | Set ID of remote controller.<br>Same ID must be applied for the DVR and remote controller.<br>🔑 Press the ID SET button and input the ID using the numeral keys.<br>The ID must be set in 3 digits.(If DVR ID is "1" press "001")<br>The ID SET button must remain pressed while inputting the ID. |
| PRESET         | Enter preset controls of PTZ                                                                                                                                                                                                                                                                       |
| IRIS           | Adjust aperture of PTZ camera.                                                                                                                                                                                                                                                                     |



## 2. INSTALLATION

### 2.1. Installation of Hard Disk Drives


※ **Compatible Hard Drives : Samsung, Maxtor, Fujitsu, Western Digital, Seagate**

#### 2.1.1. Installation Order.


Unscrew the Brackets from the DVR bottom in order to install Hard Drives.

- Installing one HDD : PRIMARY MASTER
- Installing two HDD : PRIMARY MASTER → SECONDARY MASTER
- Installing three HDD : PRIMARY MASTER → SECONDARY MASTER → PRIMARY SLAVE

\* Hard Drives must be installed in the DVR according to the above order and adjust the Jumper Pin of the Hard Drive to the Master or Slave position.

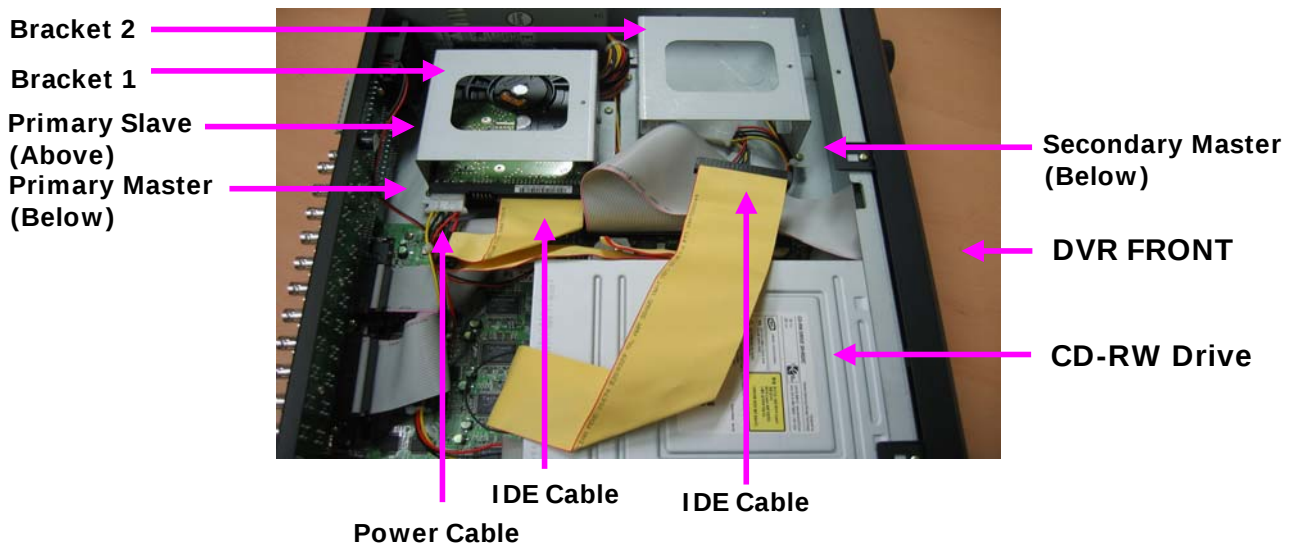

- Fasten 2 screws on each side of the HDD bracket to fix the Hard Drives to the bracket.

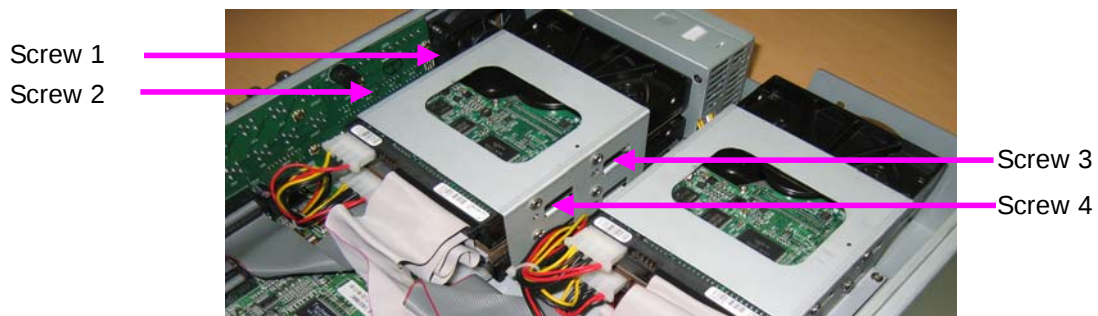

#### 2.1.2. Cable Connection.

Connect the Power Plug and IDE Cable to the Hard Drive.


The CD-RW must be connected with the **Secondary Slave IDE Cable**.

## 2.2. Starting the DVR

After installing the hard disk, set the DIP switch to the NTSC or PAL position to match your equipment before turning on the power of the DVR.

Then, connect the power cord and press the power button until the LED lights up to start the DVR.

When starting the DVR for the first time, formatting of the hard disk will commence automatically and the DVR will be initialized as follows.

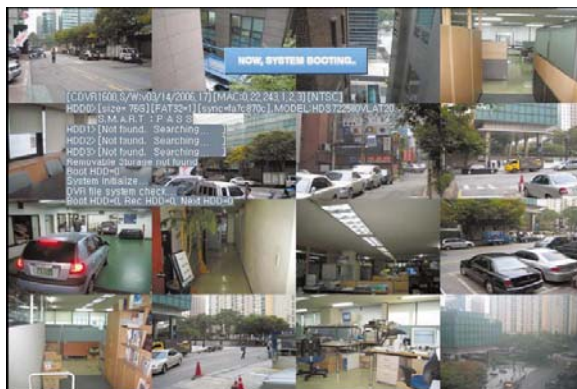

The DVR will perform “**S.M.A.R.T.**” check of the installed hard disk.

If no problem is detected [**S.M.A.R.T. PASS**] will be indicated and if a problem is detected [**S.M.A.R.T. FAILURE**] will be indicated and a warning will appear on the monitoring screen every 1 minute for a duration of 5 seconds.

The hard disk capacity indicated may be smaller than the capacity declared by the hard disk producer. This difference may occur due to the difference in measure units and therefore is not a defect.

If the hard disk detected has not been formatted, recording will start after the formatting is completed.

### ※ S.M.A.R.T. (Self Monitoring, Analysis and Reporting Technology)

S.M.A.R.T. is a reliability prediction technology to anticipate the failure of a hard disk drive with sufficient notice to allow a system or user to back up data prior to a drive's failure.

If the controller detects problems in the disk drive reliability, it will release a warning to the user. In such a case, the use of the disk drive should be stopped immediately and have it examined.

### ※ Cautions & Warnings

1. Press the Power button on the DVR until the Power Indicator lights up.
2. The Hard Disk used in this DVR is compatible with the Windows OS by using the FAT32 file system. However, we cannot guarantee safety against the possibility that the system may crash with vaccine programs such as Anti-Virus, V3, etc.
3. If the Hard Disk is formatted in the Windows environment, it should be performed in Windows XP or a higher edition and must use the FAT32 format.
4. Do not remove devices during backup or playback of recorded data. It may cause DVR malfunctions.


## 2.3. Log In & Log Out

### 1. Select USER

Using   buttons, select the USER. (ADMIN, USER1 ~USER5)

### 2. Enter the PASSWORD

A Key Panel will appear automatically when the LOGIN screen pops up.

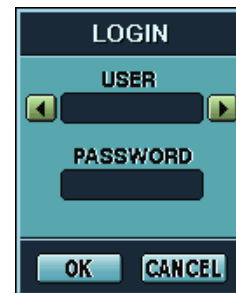

Enter the Password using the Key Panel and click the [OK] button.



Key Panel

- ❖ **Default value of the Password is set at "0000".**
- ❖ **Password can be changed in the SYSTEM SETUP menu.**

### 3. LOG OUT



Menu Bar



Click the mouse right button or move the cursor to the bottom of the screen to bring up the Menu bar on to the monitoring screen.

Click the mouse left button on the [LOG OUT] button on the right hand corner of the Menu Bar to escape from the Administrator Mode.

This will prohibit any other users other than the authorized personnel with proper password to enter PLAY(Search), PTZ Control, and SETUP



## 2.4. CD Booting

---

When you face problems with the DVR program or want to re-install or upgrade the firmware without entering the DVR Setup menu please take the following steps.

1. Adjust the DIP Switch located in the rear panel of the DVR to the CD position(Down) and turn on the DVR power.
2. Insert the CD containing the DVR Firmware. The name of the Firmware is “DVRSYS” and in this directory, the following folders must exist.
  - CDVR BMP
  - FONT
  - FW
3. Firmware installation will proceed automatically once the Firmware CD is inserted. The CD will eject automatically once the installation is completed.
4. Take out the CD and adjust the DIP Switch(CD Switch) to the Off position(Up). The DVR will will automatically re-boot.
5. Repeat the above procedure if the DVR fails to re-boot.



## 2.5. USB Flash Drive

---

- This DVR supports Hi-Speed USB 2.0 Flash Drives.
  - Use of Full Speed USB 2.0 Flash Drives may result in slow backup speed or capture speed.
- Please note that the USB must be formatted using the DVR Formatting function.
  - Please follow the formatting instructions provided in CONFIGURATION – BACKUP in page33.

# 3. CONFIGURATION



## 3.1. Configuration Menu

| SYSTEM                   | CAMERA              | SENSOR                   |
|--------------------------|---------------------|--------------------------|
| LANGUAGE                 | CAMERA NAME         | SENSOR                   |
| ID(DVR)                  | MOTION DETECTION    | CAMERA LINK              |
| DATE TYPE                | MASKING AREA        | ALARM LINK               |
| TIME DATE                | SENSITIVITY(CAMERA) | OPERATION TIME           |
| DST                      | COVERT              | TYPE                     |
| TRANSPARENCY(GUI)        | COLOR SETTING       | OPERATION MODE           |
| ADMIN PASSWORD           | BRIGHTNESS          | RECORDING DWELL TIME     |
| MOUSE SENSITIVITY        | CONTRAST            | OUTPUT DWELL TIME(ALARM) |
| USER(NUMBER)             | HUE                 |                          |
| USER PASSWORD            | PTZ SETTING         |                          |
| USER AUTHORITY           | ID                  |                          |
| COLOR SYSTEM(NTSC/PAL)   | DRIVER              |                          |
| S/W VERSION              | BAUD RATE           |                          |
| UPGRADE(SETUP, F/W, BMP) | DATA BIT            |                          |
| FACTORY DEFAULT(RESET)   | PARITY              |                          |
|                          | STOP BIT            |                          |

| NETWORK                | RECORD               | SCHEDULER     |
|------------------------|----------------------|---------------|
| IP TYPE                | RESOLUTION           | SCHEDULE      |
| PORT                   | WATERMARK USE        | CONTINUOUS    |
| IP ADDRESS             | WATERMARK STRENGTH   | MOTION        |
| GATEWAY                | WATERMARK KEY        | MOTION+SENSOR |
| SUBNET MASK            | RECORD TIME STAMP    | SENSOR        |
| DNS SERVER             | AUDIO RECORD         | NONE          |
| SMTP SERVER            | FPS(RECORDING SPEED) | COPY SCHEDULE |
| MAC ADDRESS            | QUALITY              |               |
| E-MAIL SERVER ID       |                      |               |
| E-MAIL SERVER PASSWORD |                      |               |
| E-MAIL SENDER          |                      |               |
| E-MAIL RECEIVER        |                      |               |
| PPPOE ID               |                      |               |
| PPPOE PASSWORD         |                      |               |
| DVR NAME               |                      |               |
| EVENT MAIL             |                      |               |




| DISPLAY              | DEVICE                    | LOG LIST |
|----------------------|---------------------------|----------|
| MULTI-DISPLAY        | DISK MANAGEMENT           | EVENTS   |
| SEQUENCE MODE(CAMEO) | END OF DISK               | POWER    |
| SEQUENCE DWELL TIME  | FULL DISK ALARM           | SENSOR   |
| VIDEO ADJUSTMENT     | FULL DISK PRE-ALARM(5%)   | RECORD   |
| FLICKER CANCEL       | SMART FAILURE             | CAMERA   |
| COLOR DIFFUSION      | DEVICE INFORMATION        | LAN      |
| VGA DE-INTERLACE     | DEVICE                    | BACKUP   |
| SPOT OUT             | SIZE                      | SETUP    |
| SEQUENCE DWELL TIME  | TEMPERATURE               | TIME     |
| SENSOR ACTIVATION    | RAW READ ERROR RATE       | CHANNELS |
|                      | RE-ALLOCATED SECTOR COUNT | CALENDAR |
|                      | SEEK ERROR RATE           |          |

| BACKUP & FORMAT |
|-----------------|
| FORMAT          |
| BACKUP          |

## 3.2. System Setup

Before starting your DVR for the first time, you should establish the initial settings. This includes categories such as Language, DVR ID, Date and Time, DST, Password, User Authorization.

Click the  button on the Menu Bar to enter SETUP and the [SYSTEM] Setup screen will appear on the monitor. Click on the settings(field) to change the values.  
Click on the  button after changing the setup values.

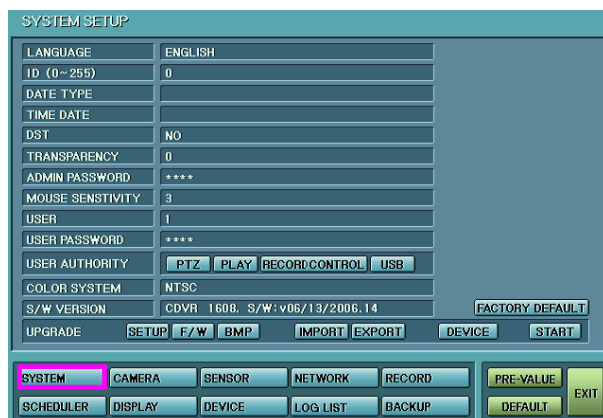

| CATEGORY       | DEFAULT VALUE | FUNCTION & OPERATION METHOD                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|----------------|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LANGUAGE       | ENGLISH       | <ul style="list-style-type: none"> <li>Select GUI(Graphic User Interface) Language</li> <li>The display will change immediately according to the selected language.</li> <li>If the new values are not saved when exiting [SETUP], the settings will return to its previous values.</li> </ul>  Turn the mouse wheel to change the Language.                                                                                                                                                                                                                                                                                                                                                                                                                                |
| ID             | 0             | <ul style="list-style-type: none"> <li>Assign an ID number for the DVR</li> <li>When using several DVRs, each DVR will be differentiated with this ID number.</li> <li>Input Range : 0~255</li> </ul>  Use pop-up Key Panel or turn the mouse wheel to change the number.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| DATE TYPE      | YYYY-MM-DD    | <ul style="list-style-type: none"> <li>Select DATE indication method.(YYYY-MM-DD, MM-DD-YYYY, DD-MM-YYYY.)</li> </ul>  Turn the mouse wheel to change the Date Type.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| TIME DATE      |               | <ul style="list-style-type: none"> <li>Adjust the Time and Date.</li> <li>A calendar will appear when the Time &amp; Date Field is selected.</li> <li>Date is available from January of the DVR production year to end of year 2099.</li> </ul>  Use the   buttons on the calendar to change the Month. Click on the Date with mouse left button and change the Time by turning the mouse wheel or clicking the   buttons. |
| DST            | NO            | <ul style="list-style-type: none"> <li>Select whether to apply the DST(Daylight Saving Time)</li> </ul>  Turn the mouse wheel to select between YES or NO..                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| TRANSPARENCY   | 0             | <ul style="list-style-type: none"> <li>Set the transparency level of the Graphic User Interface(GUI).</li> <li>The GUI will appear more transparent with lower input values</li> <li>Input Range : 0~10</li> </ul>  Turn the mouse wheel to change the input value or use the pop-up Key Panel.                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| ADMIN PASSWORD | 0000          | <ul style="list-style-type: none"> <li>Register Password of the DVR Administrator.</li> <li>Max. 8 characters(Letters and numerals) can be used.</li> </ul>  Use the pop-up Key Panel to change the password.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

| CATEGORY                                                                            | DEFAULT VALUE | FUNCTION & OPERATION METHOD                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MOUSE SENSITIVITY                                                                   | 2             | <ul style="list-style-type: none"> <li>Set the Mouse Sensitivity level.</li> <li>Input Range : 1(Slow)~3(Fast)</li> </ul>  Turn the mouse wheel to change the input value.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| USER                                                                                | 1             | <ul style="list-style-type: none"> <li>Assign the number of authorized Users having access to the DVR.</li> <li>Max. number of Users : 1~5 persons.</li> <li>User Password and Authority Level will need to be assigned for each Users.</li> <li>Register the User Password and Authority Level after selecting the User.</li> </ul>  Turn the mouse wheel to change the User.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| USER PASSWORD                                                                       | 0000          | <ul style="list-style-type: none"> <li>Register the Password of the selected User.</li> <li>Max. 8 characters(Letters and numerals) can be used.</li> </ul>  Use the pop-up Key Panel to change the password.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| USER AUTHORITY                                                                      | NONE          | <ul style="list-style-type: none"> <li>Assign the Authority Level of the selected User.</li> <li>Assign which mode/modes(PLAY, PTZ, RECORD CONTROL, USB) the User is permitted to access.</li> </ul>  Click on the mode or modes the User is permitted to access. The button will be highlighted in pink when selected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| COLOR SYSTEM                                                                        | NTSC / PAL    | <ul style="list-style-type: none"> <li>Displays the current Color System selected for the DVR.</li> <li>Setting values : NTSC, PAL</li> </ul>  The DIP Switch in the DVR rear panel should be positioned to the Color System applicable in your region before turning on the DVR power.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| S/W VERSION                                                                         |               | <ul style="list-style-type: none"> <li>Displays the installed Software version of the DVR.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| UPGRADE                                                                             | IMPORT        | <ul style="list-style-type: none"> <li>Upgrade Setup Values, Firmware and BMP Image(GUI) files</li> </ul> <div>  : Setup Values                 </div> <div>  : Firmware                 </div> <div>  : Image files used in the GUI.                 </div> <div>  : Upgrade(Download) Firmware, Setup Information, BMP files to the DVR from a CD or USB memory.                 </div> <div>  : Copy Firmware, Setup information, BMP files of the DVR to a CD or USB memory.                 </div> <div>  : Select the CD-RW or USB.                 </div>  DVR UPGRADE : Select the Upgrade category(Setup, Firmware, BMP) and click on IMPORT. Click DEVICE and select the storage device from the pop-up menu and click the START button. |
|  |               | <ul style="list-style-type: none"> <li>All settings in SETUP will be reset to the initial Factory default values</li> </ul>  Click the FACTORY DEFAULT button with the mouse left button.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|  |               | <ul style="list-style-type: none"> <li>All settings in the SYSTEM Setup will return to its Previous values.</li> </ul>  Click the Pre-Value button with the mouse left button.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|  |               | <ul style="list-style-type: none"> <li>All settings in the SYSTEM Setup will return to its factory default values.</li> </ul>  Click on the DEFAULT button.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

### 3.3. Camera Setup


In Camera Setup, you may designate Motion Detection and Masking Areas, select Covert function, and adjust the Color and PTZ settings for individual/all cameras connected to the DVR.



Select the camera number from the channel buttons displayed at the top of the screen for individual camera setup. You may click on the **ALL** button to apply same setting values for all cameras for Sensitivity, Covert, and Color Setting.

✳ Select the Camera before changing the Camera settings..

Save confirmation window will appear when changing to another camera number if setup values have been changed.

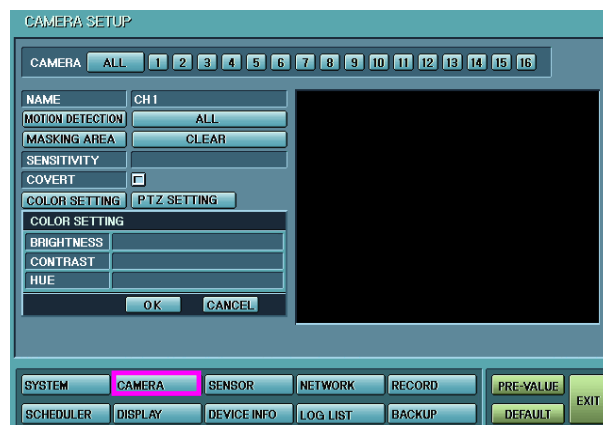

| CATEGORY         | DEFAULT VALUE | FUNCTION & OPERATION METHOD                                                                                                                                                                                                                                                                                                                                                                            |
|------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| NAME             | CH1           | <ul style="list-style-type: none"> <li>Assign the Camera Name to display on the On Screen Display (OSD).</li> <li>Max. 8 characters(Letters and numerals) can be used.</li> </ul> Use the pop-up Key Panel to input characters..                                                                                                                                                                       |
| MOTION DETECTION | NONE          | <ul style="list-style-type: none"> <li>Designate the Motion Detection Area</li> </ul> Click the [MOTION DETECTION] button, and then designate the Motion Detection Area by clicking on the desired areas in the view screen. Designated area will be highlighted in blue. Clicking on the [ALL] button will designate the entire area. Clicking on the [CLEAR] button will clear all designated areas. |
| MASKING AREA     | NONE          | <ul style="list-style-type: none"> <li>Designate a specific area that needs to be hidden during monitoring and recording.</li> <li>Designation of Masking area in the semitransparent area on the right hand side of the view screen is not possible.</li> </ul> Click on an area in the view screen to designate the Masking Area. Click the [CLEAR] button to cancel the Masking area.               |
| SENSITIVITY      | 80            | <ul style="list-style-type: none"> <li>Set the Motion Detection Sensitivity level.</li> <li>Recording will perform continuously if the sensitivity level is set at 100.</li> <li>Input Range : 10~100</li> </ul> Use the pop-up Key Panel or turn the mouse wheel to change the input value.                                                                                                           |
| COVERT           |               | <ul style="list-style-type: none"> <li>The selected camera will not be displayed on the monitor.</li> <li>Recording of the selected camera will continue.</li> </ul> Click the check box to apply Covert camera function.                                                                                                                                                                              |
| COLOR SETTING    |               | <ul style="list-style-type: none"> <li>Set the Brightness, Contrast , Hue level of the selected camera</li> <li>Input Range : 0~10</li> </ul> Use the pop-up Key Panel or turn the mouse wheel to change the level and click on <b>OK</b> or <b>CANCEL</b> button.                                                                                                                                     |



| CATEGORY    | DEFAULT VALUE | FUNCTION & OPERATION METHOD                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PTZ SETTING |               | <ul style="list-style-type: none"><li>• Assign the PTZ ID, Driver, Baud Rate, Data Bit, Parity, Stop Bit for the selected PTZ Camera</li><li>• Input Range :<ul style="list-style-type: none"><li>- PTZ ID : 0~255</li><li>- PTZ Drivers : PELCO-D, PELCO-P, PANASONIC, PT-A100L, DOME1, DOME2, HSDN-251N, WPT-101, SJ-2819, SK-2162D, DSC-230, GROOM-D106, CAZ1723, VC-C4, SCC-C4201, CRR1600T, SRX-100B, VVK-3000, ORX-1000</li><li>- Baud Rate : 300 ~115,200</li><li>- Data Bit : 7 ⇔ 8</li><li>- Parity : NONE ⇔ ODD ⇔ EVEN,</li><li>- Stop Bit : 1 ⇔ 2</li></ul></li></ul>  Use the pop-up Key Panel or turn the mouse wheel to change the input values.<br>Click the [TEST] button to test whether the PTZ camera is operating properly.<br>Click the  or  button after completing the PTZ setting. |

### 3.4. Sensor Setup

In Sensor Setup, you may designate Camera and Alarm (Output) Link for each Sensors.



Select the Sensor from the Sensor numbers displayed at the top of the screen and then make the necessary linkage with the Camera and Alarm (Output).

Save confirmation window will appear when changing to a new Sensor number if setup values have be changed.

| CATEGORY             | DEFAULT VALUE | FUNCTION & OPERATION METHOD                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CAMERA LINK          |               | <ul style="list-style-type: none"> <li>Assign the Camera that is to be connected to the Sensor.</li> <li> Click the Camera channel or channels that is to be linked to the Sensor.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                     |
| ALARM LINK           |               | <ul style="list-style-type: none"> <li>Assign the Output(Alarm) that will activate when the Sensor is triggered.</li> <li> Click the Output Channel or Channels that is to be linked to the Sensor.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                    |
| OPERATION TIME       | 0~24          | <ul style="list-style-type: none"> <li>Set the Time for which the Sensor will operate.</li> <li>Input Range : Between 0~24(Unit : Hour)</li> <li> Turn the mouse wheel to change the time.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                             |
| TYPE                 | NO            | <ul style="list-style-type: none"> <li>Select the Sensor Type</li> <li>Please refer to the Sensor Manual to select the correct type.</li> <li> Turn the mouse wheel to select between NO(Normal Open) and NC(Normal Closed)</li> </ul>                                                                                                                                                                                                                                                                                                                                                            |
| OPERATION MODE       | NORMAL        | <ul style="list-style-type: none"> <li>Select the Monitoring Screen Display type when the Sensor is triggered. <ul style="list-style-type: none"> <li>NORMAL : Display video in 16 channel multi-screen display.</li> <li>INTENSIVE : For 1:1 Camera and Sensor link, the activated camera view will appear in Full Screen Display and the DVR internal buzzer will beep while the Sensor is activated.</li> </ul> </li> <li>If several Cameras are linked to the Sensor, the Intensive mode cannot be applied.</li> <li> Turn the mouse wheel to select between NORMAL and INTENSIVE.</li> </ul> |
| RECORDING DWELL TIME | 0             | <ul style="list-style-type: none"> <li>Set the length of time you would like to record for the associated event.</li> <li>Input Range : 0~600 Seconds</li> <li> Turn the mouse wheel to change the Recording Dwell Time.</li> </ul>                                                                                                                                                                                                                                                                                                                                                               |
| OUTPUT DWELL TIME    | 0             | <ul style="list-style-type: none"> <li>Set the length of time you want the Output(Alarm) activated.</li> <li>Input Range : 0~600 Seconds</li> <li> Turn the mouse wheel to change the Output Dwell Time.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                               |

### 3.5. Network Setup

Remote access and control of the DVR through the internet may be performed with the Network Client Software included in this package. Configuration of the Network settings is required to connect the DVR to the internet.



Select the IP Type that meets your network environment and set up the appropriate LAN parameters.

| CATEGORY    | DEFAULT VALUE   | FUNCTION & OPERATION METHOD                                                                                                                                                                                                   |
|-------------|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IP TYPE     | FIXED IP        | <ul style="list-style-type: none"> <li>Select the IP Type : FIXED ⇄ AUTO ⇄ PPPOE</li> <li> Turn the mouse wheel to select the IP Type.</li> <li>Fields that do not require any input will be highlighted in green.</li> </ul> |
| PORT        | 7050            | <ul style="list-style-type: none"> <li>Set the Port number.</li> <li>Input Range : 0~65000</li> <li> Use the pop-up Key Panel or turn the mouse wheel to input the numbers.</li> </ul>                                        |
| IP ADDRESS  | 192.168.123.98  | <ul style="list-style-type: none"> <li>Set the IP Address</li> <li>Input Range for each field : 0~255</li> <li> Use the pop-up Key Panel or turn the mouse wheel to input the numbers.</li> </ul>                             |
| GATEWAY     | 192.168.123.254 | <ul style="list-style-type: none"> <li>Set the Gateway Address</li> <li>Input Range for each field : 0~255</li> <li> Use the pop-up Key Panel or turn the mouse wheel to input the numbers.</li> </ul>                        |
| SUBNET MASK | 255.255.255.0   | <ul style="list-style-type: none"> <li>Set the Subnet-Mask Address</li> <li>Input Range for each field : 0~255</li> <li> Use the pop-up Key Panel or turn the mouse wheel to input the numbers.</li> </ul>                    |
| DNS SERVER  | 210.114.220.41  | <ul style="list-style-type: none"> <li>Set the DNS Server</li> <li>Input Range for each field : 0~255</li> <li> Use the pop-up Key Panel or turn the mouse wheel to input the numbers.</li> </ul>                             |
| SMTP SERVER | 0 .0 .0 .0      | <ul style="list-style-type: none"> <li>Set the SMTP Server</li> <li>Input Range for each field : 0~255</li> <li> Use the pop-up Key Panel or turn the mouse wheel to input the numbers.</li> </ul>                            |
| MAC ADDRESS |                 | <ul style="list-style-type: none"> <li>Set the MAC Address</li> <li>Input Range for each field : 0~255</li> <li> Use the pop-up Key Panel or turn the mouse wheel to input the numbers.</li> </ul>                            |

| CATEGORY            | DEFAULT VALUE | FUNCTION & OPERATION METHOD                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E-MAIL SERVER ID    | ADMIN         | <ul style="list-style-type: none"> <li>Set the E-mail Server ID.</li> <li>Max. 16 characters can be used.</li> </ul>  Use the pop-up Key Panel to input characters                                                                                                                                                                                                                        |
| PASSWORD            | 0000          | <ul style="list-style-type: none"> <li>Set the E-mail Server Password.</li> <li>Max. 16 characters can be used.</li> </ul>  Use the pop-up Key Panel to input characters.                                                                                                                                                                                                                 |
| E-MAIL SERVER LOGIN | NOT USE       | <ul style="list-style-type: none"> <li>Select whether e-mail server Login is required when sending an event e-mail.</li> </ul>  Click on the [USE] [NOT USE] button to select between Use or Not Use.                                                                                                                                                                                     |
| E-MAIL SENDER       |               | <ul style="list-style-type: none"> <li>Set the e-mail address of the Sender.</li> <li>Max. 50 characters can be used.</li> </ul>  Use the pop-up Key Panel to input characters.                                                                                                                                                                                                           |
| E-MAIL RECEIVER     |               | <ul style="list-style-type: none"> <li>Set the e-mail address of the Receiver.</li> <li>Max. 50 characters can be used.</li> </ul>  Use the pop-up Key Panel to input characters.                                                                                                                                                                                                         |
| PPPOE ID            | ADMIN         | <ul style="list-style-type: none"> <li>Set the ID required for PPPOE networking.</li> <li>Max. 128 characters can be used.</li> </ul>  Use the pop-up Key Panel to input characters.                                                                                                                                                                                                     |
| PPPOE PASSWORD      | 0000          | <ul style="list-style-type: none"> <li>Set the Password required for PPPOE networking.</li> <li>Max. 128 characters can be used.</li> </ul>  Use the pop-up Key Panel to input characters.                                                                                                                                                                                              |
| DVR NAME            |               | <ul style="list-style-type: none"> <li>Assign a Name for the DVR.</li> <li>Max. 50 characters can be used.</li> </ul>  Use the pop-up Key Panel to input characters.                                                                                                                                                                                                                    |
| EVENT MAIL          |               | <ul style="list-style-type: none"> <li>Set for which Events e-mail notification is to be activated.</li> <li>When an Event (Power, Sensor, Record, Camera, Network, Backup, Setup, Time) occurs, e-mail notice will be relayed to the designated recipient.</li> </ul>  Click the Event buttons for which e-mail notification is required. Selected events will be highlighted in pink. |

### 3.6. Record Setup

Video Recording Speed(FPS) and Quality, Video Resolution, Watermarking(Video Authentication). Time Stamping, and Audio Recording can be set up in this menu.

※ **Resolution, Watermark, Time Stamp, Audio**

**Recording can be configured only in two Groups.**

- Group A : Channels 1~8

- Group B : Channels 9~16

※ **Recording Speed and Quality can be set up for each individual cameras or all cameras.**

Save confirmation window will appear when changing to another camera number if setup values have been changed.

| CATEGORY            | DEFAULT VALUE                 | FUNCTION & OPERATION METHOD                                                                                                                                                                                                                                                                                       |
|---------------------|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RESOLUTION          | 352x240(NTSC)<br>352x288(PAL) | <ul style="list-style-type: none"> <li>Set the recording resolution.<br/>NTSC : 352x240, 720x240, 352x480, 720x480<br/>PAL : 352x288, 720x288, 352x576, 720x576</li> </ul> Turn the mouse wheel to select the Resolution Type.                                                                                    |
| *WATERMARK SETUP    |                               | <ul style="list-style-type: none"> <li>Digital encoding will be made on images for authentication.</li> <li>Select whether to apply Watermark or not.</li> <li>Watermark Strength and Key must also be set.</li> </ul> Click on the check box to apply. The check box will be highlighted in yellow when applied. |
| WATER MARK STRENGTH | 0                             | <ul style="list-style-type: none"> <li>Set the Watermark Strength.</li> <li>Input Range : 0~4</li> </ul> Turn the mouse wheel or use the pop-up Key Panel to select the Strength.                                                                                                                                 |
| WATERMARK KEY       | 0                             | <ul style="list-style-type: none"> <li>Set the Watermark Key.</li> <li>Input Range : 0~15</li> </ul> Turn the mouse wheel or use the pop-up Key Panel to select a Key.                                                                                                                                            |
| RECORD TIME STAMP   |                               | <ul style="list-style-type: none"> <li>Overlay the Time of Recording on the video for authentication.</li> <li>Select whether to apply Record Time Stamp or not.</li> </ul> Click on the Check box. The check box will be highlighted in yellow when applied.                                                     |
| AUDIO RECORD        |                               | <ul style="list-style-type: none"> <li>Select Audio Recording channels.</li> </ul> Click on the Audio Channel buttons. The selected channels will be highlighted in pink.                                                                                                                                         |

| CATEGORY | DEFAULT VALUE | FUNCTION & OPERATION METHOD                                                                                                                                                                                                                                                                                                                                                            |
|----------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CAMERA   | CH1           | <ul style="list-style-type: none"> <li>Select the camera for setting up the Recording Speed(FPS) and Recording Quality.</li> <li> Click <b>ALL</b> button to apply the same setting values for all cameras or click on one channel to set different settings for each cameras..</li> </ul>            |
| *FPS     | 15            | <ul style="list-style-type: none"> <li>Set the Recording Speed : FPS(Frames per Second)</li> <li>Recording will not operate if value is set at "0".</li> <li>Input Range : 0~30 for NTSC, 0~25 for PAL</li> <li> Turn the mouse wheel or use the pop-up Key Panel to change the FPS level.</li> </ul> |
| QUALITY  | MIDDLE        | <ul style="list-style-type: none"> <li>Set the Video Quality level.</li> <li>Input Range :<br/>- LOW ⇄ MIDDLE ⇄ HIGH ⇄ SUPER</li> <li> Turn the mouse wheel to change the quality level.</li> </ul>                                                                                                   |

※ **WATERMARK** is a technology which overlays hidden digital codes to recordings to counter forgery or tampering of the original data.

※ **FPS** : If the total FPS of the entire channels used exceeds the max. FPS of the DVR(240fps/NTSC, 200fps/ PAL)the DVR will automatically decrease the FPS level of each channels uniformly.

### 3.7. Record Scheduler

Recordings can be scheduled for each individual or all cameras based on various recording conditions including Continuous, Motion, Sensor, Motion+Sensor.



Select the camera number from the channels displayed at the top of the screen, and then select the recording conditions for each weekdays. Or click on **ALL** button beside the channel buttons to apply the same recording conditions for all cameras, or apply different conditions for each camera by selecting the appropriate channel. Save confirmation window will appear when changing to another camera number if setup values have been changed.



| CATEGORY            | DEFAULT VALUE | FUNCTION & OPERATION METHOD                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RECORDING CONDITION |               | <ul style="list-style-type: none"> <li>Select the Recording Condition for each Day and Time.</li> <li> CONTINUOUS(Green) : Record continuously.</li> <li> MOTION(Light Blue) : Start recording when motion is detected.</li> <li> MOTION+SENSOR(Blue) : Start recording when SENSOR is activated</li> <li> SENSOR(Orange) : Start recording when MOTION &amp; SENSOR is activated</li> <li> Do not record.(Gray)</li> <li> Click on the small square buttons on the Weekday/Time Table to change the recording condition.</li> </ul> |
| ALL                 | <b>ALL</b>    | <ul style="list-style-type: none"> <li>Apply the same recording condition for the selected weekday or the entire week..</li> <li> Click on the relevant <b>ALL</b> button to change the recording condition. The recording condition will change with each click.</li> </ul>                                                                                                                                                                                                                                                         |
| COPY CAMERA         |               | <ul style="list-style-type: none"> <li>The recording condition for a camera can be copied to another camera.</li> <li> Select a camera number to which the copy is to be made by clicking on the  or  and click the <b>COPY</b> button.</li> </ul>                                                                                                                                                                                                                                                                                   |

### 3.8. Display Setup

Multi-Screen Sequence Display and Spot Monitoring may be set up in this menu and adjustments of video distortion or problems may be made.

| CATEGORY                                  | DEFAULT VALUE        | FUNCTION & OPERATION METHOD                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MULTI-DISPLAY MODE<br>SEQUENCE MODE       | NORMAL               | <ul style="list-style-type: none"> <li>Set whether to use the Sequence or Cameo function.</li> <li><b>NORMAL</b> : The displayed channels will be displayed briefly on screen before changing to the next channel in the sequence list.</li> <li><b>CAMEO</b> : The screen on the bottom right hand corner will display the remaining channels in sequence mode during 4 &amp; 9 multi-screen display. In the 13 multi-screen display mode, the middle screen will act as the cameo screen.</li> </ul> Turn the mouse wheel to change between NORMAL ⇄ CAMEO |
| MULTI-DISPLAY MODE<br>SEQUENCE DWELL TIME | 10                   | <ul style="list-style-type: none"> <li>The Sequencing feature allows a camera to be displayed briefly on screen, before advancing to the next camera.</li> <li>Set the sequence dwell time.</li> <li>Input Range : 1~600 Seconds</li> </ul> Turn the mouse wheel or use the pop-up Key Panel to change the dwell time.                                                                                                                                                                                                                                       |
| FLICKER CANCEL                            | YES                  | <ul style="list-style-type: none"> <li>Select this feature if the GUI becomes shaky when using composite output</li> </ul> Turn the mouse wheel to select between YES ⇄ NO.                                                                                                                                                                                                                                                                                                                                                                                  |
| COLOR DIFFUSION                           | NTSC : 8<br>PAL : 18 | <ul style="list-style-type: none"> <li>Set to compensate/correct Color Diffusion when using composite video output</li> <li>Input Range : 0~32</li> </ul> Turn the mouse wheel for adjustment.<br>Adjust the level based on the status of the 3 color boxes.                                                                                                                                                                                                                                                                                                 |
| VGA DE-INTERLACE                          | BOB                  | <ul style="list-style-type: none"> <li>When viewing video in the progressive(VGA) scan mode, the interlaced image is transformed to the progressive image. And if there is no moving images, horizontal lines(Tearing) will appear on the screen. Selecting "BOB" will make the tearing disappear and if there is no moving images on screen, selecting "WEAVE" will provide a clearer image.</li> </ul> Turn the mouse wheel to change between BOB ⇄ WEAVE.                                                                                                 |
| SPOT OUT<br>SEQUENCE DWELL TIME           | 0                    | <ul style="list-style-type: none"> <li>Set the channel sequence dwell time for the SPOT Monitor.</li> <li>Input Range : 0~600 Seconds</li> </ul> Turn the mouse wheel or use the pop-up Key Panel to change the dwell time.                                                                                                                                                                                                                                                                                                                                  |
| SENSOR ACTIVATION                         | Disable              | <ul style="list-style-type: none"> <li>Set whether to use Spot output when sensor is triggered.</li> </ul> Click on the check box to enable/disable.                                                                                                                                                                                                                                                                                                                                                                                                         |

### 3.9. Device Setup & Information

Hard disk drive and external memory device information is provided in this menu

You may decide whether to Overwrite or Stop recording when the capacity of the installed hard disk drive is full.

And select the notification method.



| CATEGORY                 | FUNCTION & OPERATION METHOD                                                                                                                                                                                                                                                                                                                                       |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| END OF DISK              | <ul style="list-style-type: none"> <li>Select whether to STOP or OVERWRITE recording when the HDD capacity is full.</li> <li> Turn the mouse wheel to select between STOP ⇄ OVERWRITE</li> </ul>                                                                                                                                                                  |
| FULL DISK ALARM          | <ul style="list-style-type: none"> <li>Select the notification method when the HDD is full.</li> <li>BEEP : Beeper in the DVR will be activated.</li> <li>MAIL : E-Mail will be transmitted to the designated person.</li> <li> Click on the check box to enable /disable.</li> </ul>                                                                             |
| FULL DISK PRE-ALARM (5%) | <ul style="list-style-type: none"> <li>Select the notification method when there remains only 5% HDD capacity</li> <li>BEEP : Beeper in the DVR will be activated.</li> <li>MAIL : E-Mail will be transmitted to the designated person.</li> <li> Click on the check box to enable /disable.</li> </ul>                                                           |
| SMART FAILURE            | <ul style="list-style-type: none"> <li>Select the notification method when SMART(HDD) Failure occurs.</li> <li>BEEP : Beeper in the DVR will be activated.</li> <li>MAIL : E-Mail will be transmitted to the designated person.</li> <li> Click on the check box to enable /disable.</li> </ul>                                                                   |
| DEVICE INFORMATION       | <ul style="list-style-type: none"> <li>Select the memory device to check the device information and status.</li> <li>- Device Type</li> <li>- Memory Size</li> <li>- Temperature</li> <li>- Raw Read Error Rate</li> <li>- Re-Allocated Sectors count</li> <li>- Seek Error Rate</li> <li> Click on the button of the memory device you wish to check.</li> </ul> |

### 3.10. Log List


Log List of various events involving Power, Sensor, Recording, Camera, LAN, Backup, Setup, and Time changes can be searched for any dates.



| CATEGORY | FUNCTION & OPERATION METHOD                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| EVENTS   | <ul style="list-style-type: none"> <li>Select the event type you wish to search.<br/>           All : Log list of all events.<br/>           PWR : Log list of Power On/Off<br/>           SENS : Log list of Sensor input.<br/>           REC : Log list of Recording Start/Stop.<br/>           CAM : Log list of Camera On/Off.<br/>           LAN : Log list of LAN connections.<br/>           BACKUP : Log list of Backup executions.<br/>           SET : Log list of Setup Configuration changes.<br/>           TIME : Log list of System Clock adjustments.</li> <li> Click on the relevant event button. The selected event button will be highlighted in pink.</li> </ul> |
| CHANNEL  | <ul style="list-style-type: none"> <li>Select the channel.</li> <li> Click on the channel button. The selected channel button will be highlighted in pink.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| CALENDAR | <ul style="list-style-type: none"> <li>Select the date.</li> <li> Use   buttons to select the Month and click on the day</li> </ul>                                                                                                                                                                                                                                                                                                                                                                             |

### 3.11. Backup and Format

Perform Formatting of hard disk drives and Back Up of stored data to external storage devices.

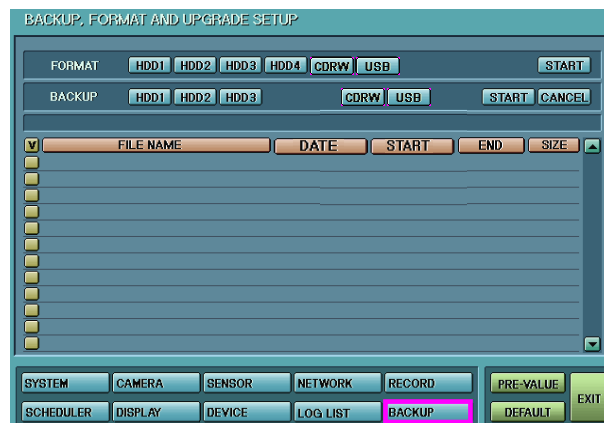

| CATEGORY | FUNCTION & OPERATION METHOD                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FORMAT   | <ul style="list-style-type: none"> <li>Perform Formatting of Hard Disk Drives and other storage devices.</li> <li>This function can be used to erase CD-RW disks. All recorded data on the CD-RW disk must be erased before re-using the disk.</li> </ul>  Select the storage device which requires Formatting and click the START button. The selected storage device button will be highlighted in pink.                                                                                                                                                                                        |
| BACKUP   | <ul style="list-style-type: none"> <li>Back up recorded data from the Hard Disk Drive to external storage.</li> </ul>  Select the HDD and select the files to be copied by clicking on the check box beside each files. A check sign will appear in the check box when selected. Re-click the check box to cancel the selected file. After the files have been selected, select the external storage and click on the [START] button. Selected buttons will be highlighted in pink. USB Memory Device must be formatted in the FAT32 file system and formatting should be performed in the DVR. |

## 4. OPERATION



### 4.1. Monitoring


During the Monitoring Mode, video data from cameras are relayed live to monitors.

Multi-Screen Display, Channel Shift, Screen Freeze, and Full-Screen Display are supported in the Monitoring Mode.

#### 4.1.1. Multi-Screen Display

The monitoring screen can be displayed in 1 / 4 / 9 / 13 / 16 channel Multi-Screen.

The Monitor Display will shift to the next Multi-Screen Display type in the following order.

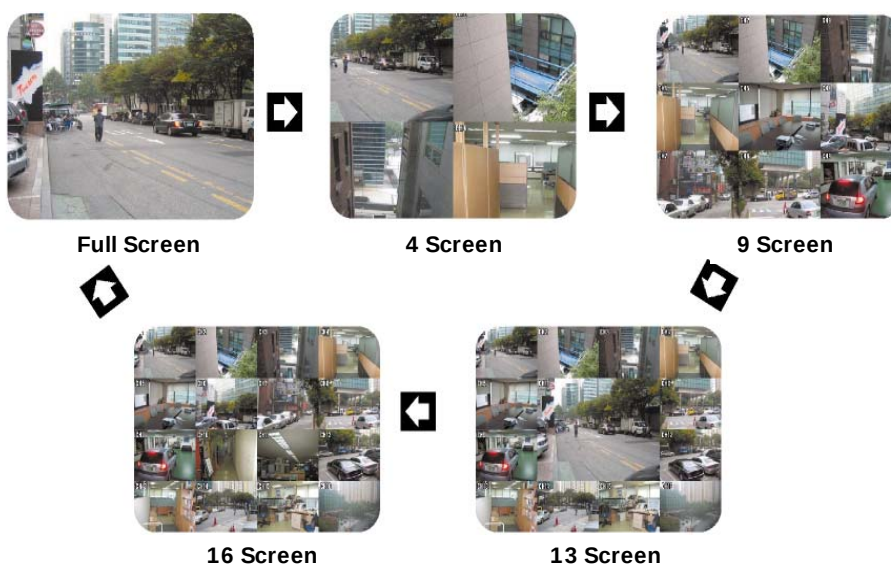

Click the **mouse wheel** to change the multi-screen display type.

#### 4.1.2. Changing Channel

Changing the channel is possible only in 1 / 4 / 9 / 13 multi-screen display modes.

In the 13 channel multi-screen mode, the channels in the center screen will change



Turn the **mouse wheel** to increase and decrease channels.

#### 4.1.3. Freeze Screen

You may freeze a live image during monitoring. The freeze icon  will appear on the selected channel screen.



Place the mouse cursor on the screen(Channel) that is to be frozen and **double click the mouse left button**

In order to resume live view, **double click the mouse left button again.**

#### 4.1.4. Full Screen Display

A channel can be selected to be viewed in Full Screen during multi-screen monitoring



Place the mouse cursor on the screen(Channel) and **click the mouse left button**

In order to return to the previous multi-screen monitoring mode, **re-click the mouse left button**.

## 4.2. Monitoring Control

Multi-Screen Display selection, Video/Audio Channel selection, OSD change, Record, Status(Sensor, Network Connection, Recording) Display, and Video Reset can be performed in this mode.



**Click the mouse right button or move the cursor to the lower part of the monitoring screen** to make the Menu Bar(Shown below) appear on screen. The Menu Bar will disappear from the screen automatically after one minute and clicking the EXIT button can also make it disappear.



①

① Category Menu

②

② Sub-Menu for the selected Category

③

③ Main Mode Menu

### 4.2.1. Multi-Screen Display

Full Screen and 4 / 9 / 13 / 16 Multi-Screen Display types and Sequence Display can be selected from the Sub-Menu of the Monitoring Control Bar.

In the 13 channel Multi-Screen display type, the middle screen is used for sequence display of all channels or display of a selected channel..



**Multi-Screen Display :** Click the MULTI button and click on the multi-screen display type you wish to apply in the sub-menu



**Sequence Display :** The Sequencing feature allows a channel or channels to be displayed briefly on screen before changing to the next channel in the sequence list.



Click the sequence button and the channels will change in repeated sequence according to the sequence dwell time applied in [SETUP] - [DISPLAY]



### 4.2.2. Video

Video input and recording status of all channels will be displayed on the Menu Bar..

During 13 channel multi-screen display, the selected channel will be displayed in the center screen.




Current status of each video channels are displayed based on different colors.

-  GRAY : No input signal.
-  BLUE : Input signal exists but recording not in progress.
-  PINK : Input signal exist and recording in progress.
-  GREEN : Selected channel.

 Click the VIDEO  button and the channel buttons will appear in the sub-menu. Click the channel button you wish to see

### 4.2.3. Audio

Displays the current status of each audio channels and you may select which audio channel you wish to hear.

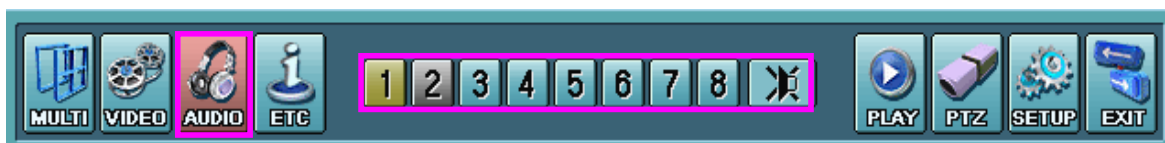


Current status of each audio channels are displayed based on different colors.

-  GRAY : No recording is in progress.
-  PINK : Recording in progress.
-  GREEN : Selected channel.
-  : Audio ON
-  : Audio OFF

 Click the AUDIO  button and the channel buttons will appear in the sub-menu. Click the channel button you wish to hear.

#### 4.2.4. etc

OSD Change, Recording On/Off, Status(Sensor, Network Connection, Recording) Display, and Video Reset can be performed in this menu.

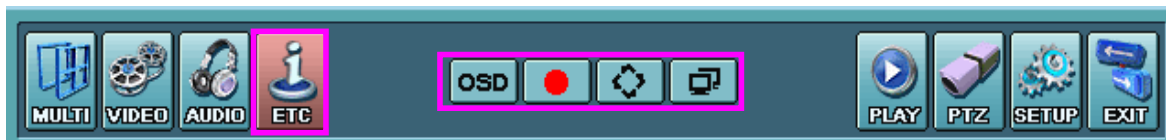

##### 1. Change OSD(On Screen Display)


You may select to display or hide OSD on the screen during monitoring.

 Click the OSD  button and the OSD will change in the following order :

Time+Channel → Channel → Time → HDD Status Bar→ Off

##### HDD(Hard Disk) Status Bar

Disk Capacity, Disk Status, and Used Capacity/Total Capacity information is displayed in the Status Bar.

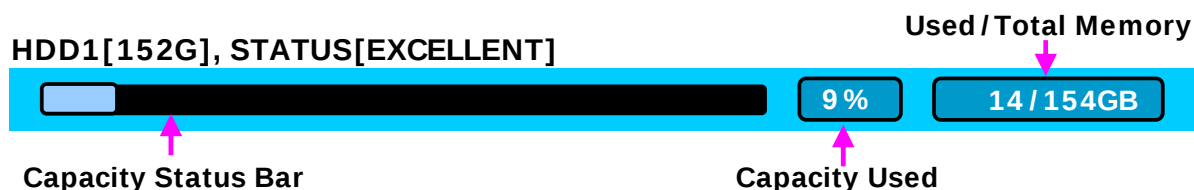

✖ The Status bar will disappear automatically after 10 seconds.

##### 2. Recording On/Off

Start Recording when not in recording mode or Stop Recording during record mode. Recording will be performed based on the settings applied in [SETUP].

✖ Authorized user password entry will be required in order to stop recording.

 Click the RECORD  button to Start/Stop recording.

##### 3. Video Reset

This function can be used to correct bad video conditions during monitoring and playback.

 Click the VIDEO RESET  button when you experience bad video conditions.

#### 4. Sensor & Network Status

Status of Sensor, Network Connection, Recording are displayed on the Status Bar.



-  When a Sensor is triggered the corresponding Sensor channel will be highlighted in pink..
  -  When a Network connection occurs, the icon will be highlighted in pink.
  -  The Record icon will blink continuously if recording is in progress.
- ✖ The Status Bar will pop-up automatically when Sensor and Network connection occurs.
- ✖ The Status Bar will disappear automatically after 10 seconds, or it can be cleared by clicking the  button.

### 4.3. Playback (Search)

Playback/Search and Capture of recorded video/data may be performed in this mode.




Click the  button to enter Playback(Search) mode.

Search can be performed in three different methods. Click the  button and select the search method from the Sub-Menu.

-  Time / Date Search
-  Event(Sensor) Search
-  File Search

#### 4.3.1. Time / Date Search

Recorded video may be searched based on Time & Date.

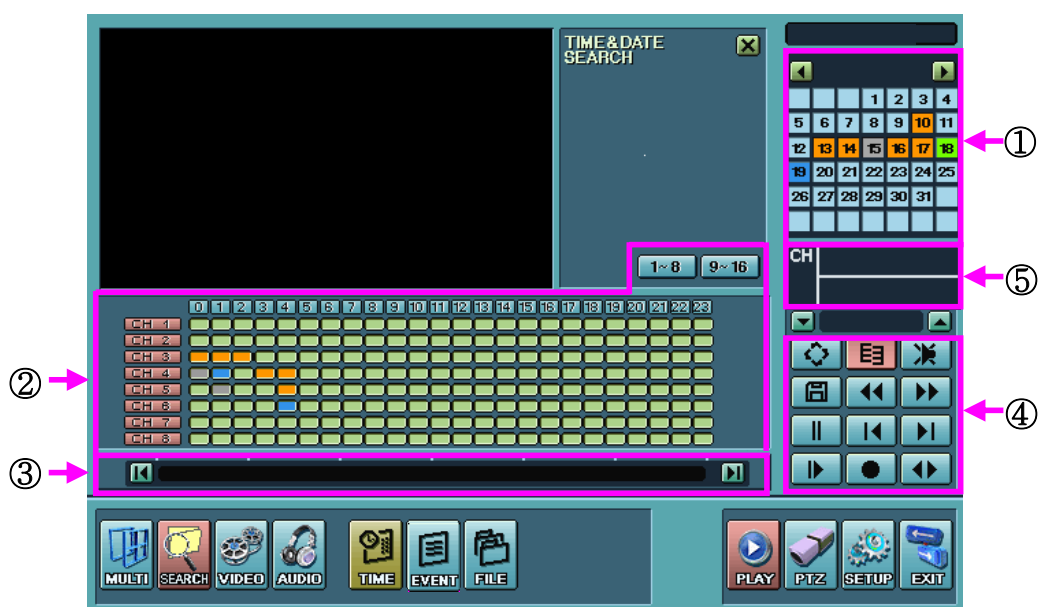

##### 1. Calendar

- Select the date.
- Dates containing recording data will be highlighted in orange and the selected date will be highlighted in green.

Move to previous/next month by clicking the   buttons on the calendar. Then click the relevant day.

## 2. Channel/Time Table

- Numbers 0~24 represents Time and recording information is displayed on the table for 8 channels.

 Recording information of channels 1~8 will appear on the Table.

 Recording information of channels 9~16 will appear on the Table.

 Orange : Recording video data exists

 Gray : No video data.

 Green : Selected for playback.

 Blue : Sensor activated video data exists.

 Switch from Search Screen to Full Screen Display or from Full Screen Display to the Search Screen.

 Channels are divided into two groups of 1~8 and 9~16 and you may select which group you wish to view by clicking on the  or  button. The selected button will change to green.

Click on the relevant square button on the Channel/Time Table to start the video clip

## 3. Playback Scroll Bar

Displays the playback progression rate of the selected video clip



- The scrollbar represents one hour and each scale mark represents 10 minutes .
-  Return to the beginning of the selected video clip during playback and playback will not resume unless otherwise instructed. If this button is clicked at the beginning of the video clip, it will move back to the previous hour and resume playback. If no video clip exists in the previous hour it will search for the most recent previous video clip.
-  Advance to the end of the selected video clip during playback and stop. If this button is clicked at the end of the video clip, playback will resume from the next hour. If no video clip exists in the next hour, it will search for the nearest subsequent video clip.

 Click on the Playback Scroll Bar to view video of the selected period in the one hour time frame.

※ 8 Channels are displayed in Playback and clicking on the  9 channel multi-screen button from the menu bar during Full Screen playback will allow you to move between the two groups Channels 1~8 and Channels 9~16.

#### 4. Playback Button Functions

| Button                                                                              | Function                                                                                                                                            |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
|    | • Decrease playback speed ( 1x → 1/2 → 1/4x → 1/8x → 1/16x )                                                                                        |
|    | • Regain playback speed ( 1/16x → 1/8x → 1/4x → 1/2 → 1x )                                                                                          |
|    | • Correct bad video conditions.                                                                                                                     |
|    | • Correct image distortion during still frame playback.<br>※ Operates only on monitors with vertical pixel size above 480 for NTSC and 576 for PAL. |
|    | • Turn On/Off audio recording.                                                                                                                      |
|    | • Save a video clip or image.                                                                                                                       |
|    | • Fast reverse playback ( 2x → 4x → 8x → 16x → 32x )                                                                                                |
|    | • Fast forward playback ( 2x → 4x → 8x → 16x → 32x )                                                                                                |
|    | • Pause video during playback.<br>• Paused video will resume playback at the speed it was being played if the button is re-clicked.                 |
|    | • Frame by frame forward playback.                                                                                                                  |
|   | • Frame by frame reverse playback.                                                                                                                  |
|  | • Pause playback.                                                                                                                                   |
|  | • Slow playback( 1x → 1/2 → 1/4x → 1/8x → 1/16x )                                                                                                   |
|  | • Recording indicator. (The dot will blink in red during recording)                                                                                 |
|  | • 1x Playback in forward/reverse direction.                                                                                                         |


#### 5. Playback Information

- Channel, Date, and Time Information of the video clip being played will be displayed in this window.

### 4.3.2. Event Search

Video files recorded from Sensor activation are recorded into the Event Log and can be played back.

Event search may be performed by selecting a date from the calendar and selecting the file from the Event log list.

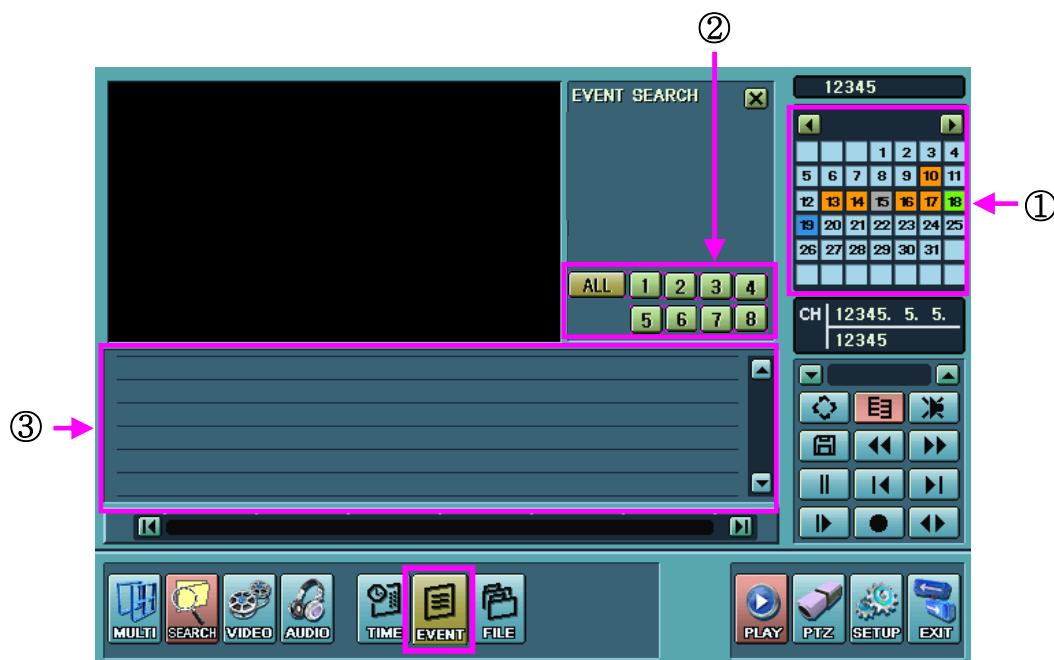

#### 1. Calendar

- Select the date.
- Dates containing recording data will be highlighted in orange and the selected date will be highlighted in green.

 Move to previous/next month by clicking the   buttons on the calendar. Then click the relevant day.

#### 2. Sensor Channel

- Select a sensor channel or channels.
- The selected channel will be highlighted in green.

 Click on the channel button or buttons. Re-clicking the button will enable/disable the channel.


#### 3. Event List

- Select an event you wish to view.

 Click on the event you wish to view and use the playback buttons and the playback scroll bar to search the video. .

### 4.3.3. File Search

Recorded videos may be searched through the file list of each storage devices. The file system is similar to the Windows environment. .

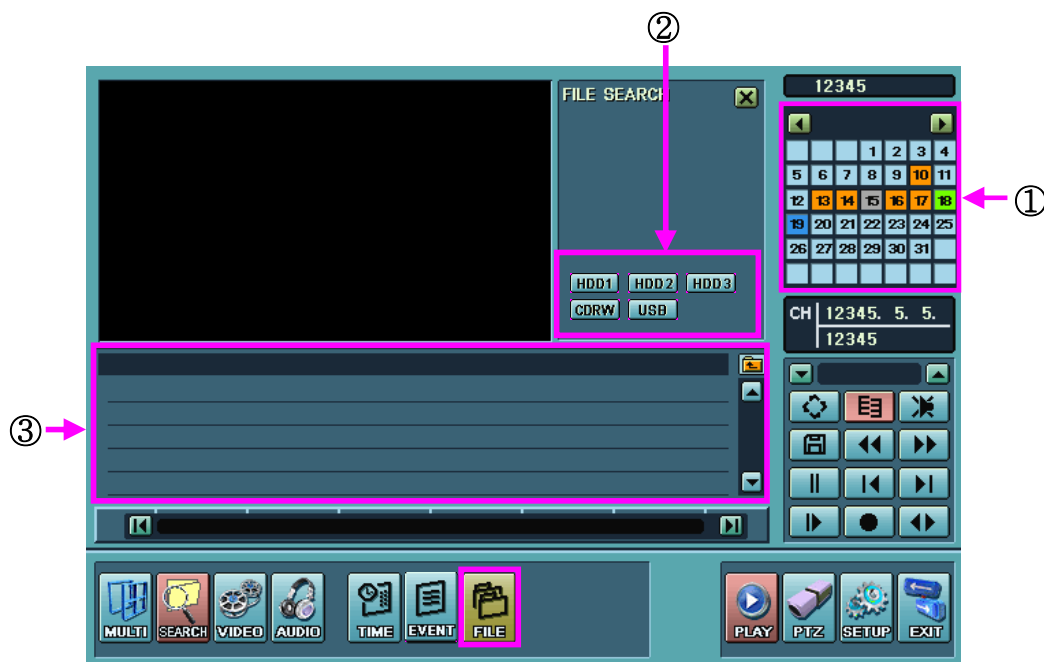

#### 1. Calendar

- Select the date.
- Dates containing recording data will be highlighted in orange and the selected date will be highlighted in green.

 Move to previous/next month by clicking the   buttons on the calendar. Then click the relevant day.

#### 2. Device

- Select the storage device.

 Click on the storage device button.  
Re-clicking the button will enable/disable the channel.

#### 3. File List

- Select a file you wish to view. When searching video data from the hard disk drives, the file names ending with "0" contains video data of channels 1~8 and file names ending with "1" contains video data of channels 9~16.
-  : Move to the previous page of the File List.
-  : Move to the next page of the File List.

 Click on the file you wish to view and use the playback buttons and the playback scroll bar to search the video.

### 4.3.4. Capture

Copying images or video clips to the CDRW or USB Memory is possible through CAPTURE.

- The DVR manages the channels in two groups(Channels 1~8 and channels 9~16) and image capture will be made of the applicable group and not individual channel.
- The image and video clip will be copied in the MPEG4 format.

#### 1. IMAGE CAPTURE


- Approximately 10 seconds of the video that is being played back can be copied to the CDRW or the USB Memory.

 Enter the Playback mode and search the image you wish to copy by using the playback buttons and click  . Then select the storage device from the pop-up screen.

Approximately 5 seconds before and after the designated image will be copied to the storage device.

#### 2. VIDEO CLIP COPY

- This function is to copy a video clip to a CDRW or USB Memory.

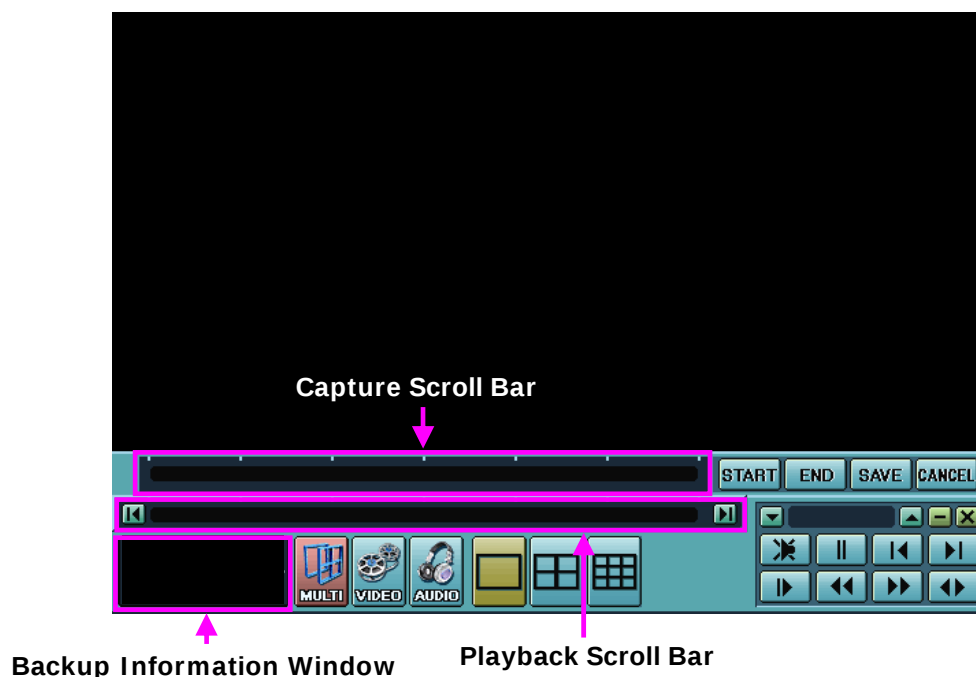


- |                                                                                     |                                                         |
|-------------------------------------------------------------------------------------|---------------------------------------------------------|
|  | Mark the Starting Point of the video clip to be copied. |
|  | Mark the Ending Point of the video clip to be copied.   |
|  | Start the copying process to the storage device.        |
|  | Cancel the capture process.                             |



1. Enter the Playback mode and search the video clip you wish to copy using the playback buttons and click . Then select the storage device from the pop-up screen
2. Click on the Playback Scroll Bar or use the playback buttons to find the START and END of the video clip you wish to make a copy.
2. Click  and mark the starting point of the video clip copy by clicking on the corresponding point in the Capture Scroll Bar.
3. Click  and mark the ending point of the video clip copy by clicking on the corresponding point in the Capture Scroll Bar.
4. The memory capacity of the Video Clip and the available free capacity of the backup storage device will be shown on the Backup Information Window.
5. Click  to start the copying process or click  to stop the copying process.
6. Click  to make the menu disappear. Moving the mouse cursor to the bottom of the screen or clicking the mouse right button will make the menu reappear on the screen
7. Click  to escape from the video clip copy mode and return to the playback screen.


## 4.4. PTZ Control

 Control the Direction, Focus, Zoom, Iris of the connected PTZ camera.



Click the PTZ button to enter the PTZ control mode and click the mouse right button to make the PTZ Control Bar appear on the screen.

※ PTZ control is possible only with cameras that support PTZ control, correct configurations must be made in [CAMERA SETUP] before it can be used.

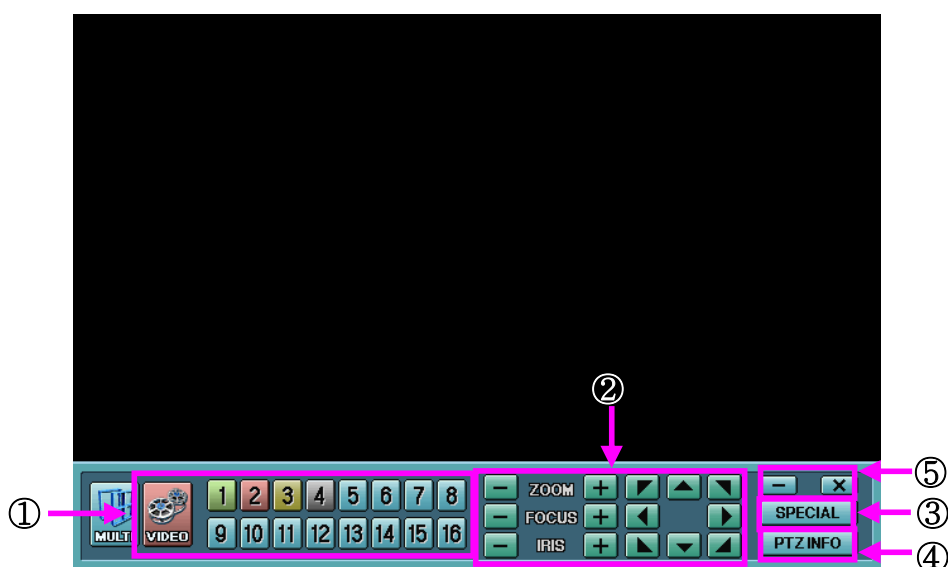

### 1. VIDEO Channel Selection

- Select the channel(Camera) by clicking on the channel buttons in the sub-menu bar or directly clicking on the screen of the relevant channel.
- Selected channel button will be highlighted in green.

### 2. PTZ Control

- Pan, Tilt, Zoom, Focus, Iris Adjustment can be performed with these buttons.

ZOOM : Use ZOOM to Zoom-In and Zoom-Out.

FOCUS : Use FOCUS to adjust Focus.


IRIS : Use IRIS to adjust the Aperture.

PAN/TILT : Change the direction of the camera by using buttons..



### 3. SPECIAL Functions

- Enter to control PRESET, SWING, PATTERN, GROUP of the PTZ camera.
- Select MENU to set up the SWING, PATTERN, GROUP functions. (Follow the instruction provided by the PTZ camera producer)
  - SWING : Continuously move between two preset positions.
  - PATTERN : Continuously move in the pre-assigned multi directions.
  - GROUP : Sequence movement of PRESETs, SWINGs and PATTERNs.

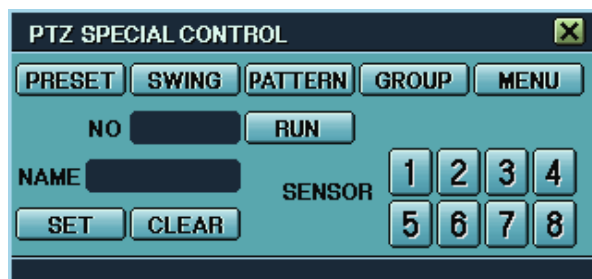

1. Click **SPECIAL** to enter the Special function menu.

2. Click **PRESET** to set Presets.

(1) Control the PTZ camera using the various PTZ control buttons to pre-assign the direction of the camera.

(2) Designate the preset Number by clicking on the field and turning the mouse wheel or using the pop-up key panel to input the number.

(3) Designate the Name(ex. Lobby) for the area the PTZ camera is directed. Click on the field and use the pop-up key panel to input the name

(4) Designate the Sensor or Sensors that is to be linked to the PTZ camera.

The PTZ camera will automatically move in the direction of the linked sensor for recording when the sensor is triggered.

(5) Click **SET** to save the camera presets or click **CLEAR** to cancel the preset setting.

3. Enter SWING, PATTERN, GROUP and click the **RUN** to activate PTZ camera movement.

### 4. PTZ INFO

- Enter to view the setup information of the selected PTZ camera.



Click **PTZ INFO** to enter PTZ Information. Re-click **PTZ INFO** to make the PTZ Information screen disappear..

### 5. Menu Display



1. Click **—** to make the PTZ Control Bar disappear. Moving the mouse cursor to the bottom of the screen or clicking the mouse right button will make the Control Bar re-appear .

2. Click **X** to escape from the PTZ control mode and return to the main monitoring screen.

## 4.5. Recording

The initial recording configuration for this DVR is set up as follows :

| CATEGORY           | DEFAULT VALUE            |
|--------------------|--------------------------|
| Recording Speed    |                          |
| - NTSC             | 15FPS(Frames Per Second) |
| - PAL              | 12FPS(Frames Per Second) |
| Recording Quality  | Middle                   |
| Resoluton          |                          |
| - NTSC             | 352x240(CIF)             |
| - PAL              | 352x288(CIF)             |
| Recording Schedule | Motion + Sensor          |
| Audio Recording    | All                      |
| Full Disk          | Overwrite                |
| Watermark          | No                       |

※ To change the above configurations, enter SETUP and change the settings from the SETUP-RECORD and SETUP-SCHEDULER menu.

※ **Recording Indicator** : The following indicator will appear on the monitoring screen for each channels.

- **R** : Recording schedule has been set up.
- Blinking **R** : Actual recording is in progress.
- Blinking **M** : Motion detection recording is in progress
- Blinking **S** : Sensor activated recording in progress.

### PANIC RECORDING

Press the PANIC button on the Front Panel or the Remote Controller during an emergency to activate immediate recording of all cameras at the highest possible recording quality level

RECORDING QUALITY : SUPER

RECORDING SPEED : 15~30FPS/NTSC, 12~25FPS/PAL

(Depending on the number of cameras connected to the DVR.)

※ However, recording resolution will be performed in CIF(352x240/NTSC, 352x288/PAL)

You may de-activate the PANIC recording by pressing the PANIC button once again and the DVR will continue to operate based on the original recording settings.



## Technical Specification

| CATEGORY              | SPECIFICATION                                                                                                                        |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Operating System      | Embedded Proprietary OS                                                                                                              |
| Compression Algorithm | MPEG4(VIDEO) , ADPCM(SOUND)                                                                                                          |
| Byte Size per Frame   | 1.5~6KByte/Frame @ 352x240(352x288)<br>3~12 KByte/Frame @ 720x240(720x288)<br>6~24KByte/Frame @ 720x480(720x576)                     |
| Multi-Screen Display  | 1/4/9/13/16/Sequence                                                                                                                 |
| Video Input           | 16 BNC                                                                                                                               |
| Monitor Output        | 1 Composite, 1 VGA, 1 S-Video, 1 Spot                                                                                                |
| Display Speed         | 480fps                                                                                                                               |
| Recording Resolution  | NTSC : 352x240, 352x480, 720x240, 720x480<br>PAL : 352x288, 352x576, 720x288, 720x576                                                |
| Recording Speed(CIF)  | Max 240fps(NTSC), Max 200fps(PAL)                                                                                                    |
| Recording Mode        | Continuous, Schedule, Event(Sensor, Motion Detection)                                                                                |
| Audio                 | 8 Line-In / 1 Line-Out                                                                                                               |
| Search Method         | Time & Date, Event(Sensor)                                                                                                           |
| Sensor Alarm          | 8 Alarm Input(NO/NC) / 8 Alarm Output                                                                                                |
| PTZ Interface         | RS-485                                                                                                                               |
| Storage               | Max. 3 HDD IDE                                                                                                                       |
| Backup Storage        | CD-RW, USB2.0 Memory, Network                                                                                                        |
| System Control        | Mouse, Front Panel, IR Remote Controller, Network                                                                                    |
| Network               | DHCP, DDNS, PPPoE, TCP/IP Ethernet                                                                                                   |
| Special Features      | SMART Warning, Virus Free, Masking, Triplex Operation(Simultaneous Playback, Recording, Networking), Covert Recording. Cameo Display |
| Remote Management     | Remote Configuration, Software Upgrade, PTZ Control                                                                                  |
| Verification          | Digital Watermark, Time Stamp                                                                                                        |
| Dimension(W x H x D)  | 427mm x 88mm x 335mm                                                                                                                 |
| Weight                | 6.1kg                                                                                                                                |
| Power Supply          | AC100~240V, 50~60Hz                                                                                                                  |



## Trouble Shooting

| Symptoms                                                       | Check Point                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cannot turn on power.                                          | <ul style="list-style-type: none"><li>• Check if power cord is firmly connected to the DVR and the power outlet..</li></ul>                                                                                                                                                                                                                                                                                                                                         |
| Power turns on automatically.                                  | <ul style="list-style-type: none"><li>• The power turns on automatically if the power was not turned off properly. This is not a malfunction.</li></ul>                                                                                                                                                                                                                                                                                                             |
| No live video                                                  | <ul style="list-style-type: none"><li>• Check cable connections between DVR and camera.</li><li>• Check cable connections between DVR and monitor.</li><li>• Check camera power connection status.</li></ul>                                                                                                                                                                                                                                                        |
| Bad live video conditions.                                     | <ul style="list-style-type: none"><li>• Adjust brightness, contrast, color in the CAMERA Setup menu.</li><li>• Check monitor color settings.</li></ul>                                                                                                                                                                                                                                                                                                              |
| No recording                                                   | <ul style="list-style-type: none"><li>• Check recording conditions in the SCHEDULER Setup menu.</li><li>• If recording condition is set with sensor activation, the linked camera will not start recording unless the sensor is triggered.</li><li>• If recording is set with motion detection, recording will not start unless motion is detected. If recording does not start even when there is motion, adjust the camera sensitivity in CAMERA Setup.</li></ul> |
| Recorded data disappeared.                                     | <ul style="list-style-type: none"><li>• If the HDD capacity is full, recording will continue by overwriting the oldest data. To avoid overwriting existing data, select [STOP] in the DEVICE Setup menu.</li></ul>                                                                                                                                                                                                                                                  |
| PTZ control does not work.                                     | <ul style="list-style-type: none"><li>• Check cable connections of the PTZ camera.</li><li>• Check if the PTZ controller is configured correctly.</li><li>• Check PTZ status and whether the correct ID/Driver is selected in the CAMERA Setup menu.</li></ul>                                                                                                                                                                                                      |
| No response during Import/Export and Upgrade.                  | <ul style="list-style-type: none"><li>• Check if the CD-RW or USB memory stick is properly inserted.</li><li>• Check if the USB memory stick is formatted in the FAT32 format. If not, enter the BACK Setup menu and format the USB memory stick.</li></ul>                                                                                                                                                                                                         |
| SMART FAIL warning when installing hard disk drive.            | <ul style="list-style-type: none"><li>• Check HDD connections.</li><li>• Check HDD jumper setup status.</li><li>• If existing HDD already has SMART problem, this may cause the Fail warning. In such case, remove the existing HDD.</li></ul>                                                                                                                                                                                                                      |
| Bootling does not start or a [No File Exists] message appears. | <ul style="list-style-type: none"><li>• Follow the procedure explained in 2.4 CD Booting.</li></ul>                                                                                                                                                                                                                                                                                                                                                                 |