

## Mobile Phone user manual

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

www.samsungmobile.com

Printed in Korea  
Code No.:GH68-21458A  
English (IND). 01/2009. Rev. 1.0



phone or switch to a mode that disables the wireless functions when directed by airline personnel.

### Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

### Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Avoid using the phone's camera flash or light close to the eyes of children or animals.
- Your phone and memory cards may be damaged by exposure to magnetic fields. Do not use carrying

### Correct disposal of this product

(Waste Electrical & Electronic Equipment)

 (Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



## Safety warnings

### Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

### Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

### Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

### Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

### Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

### Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

### Avoid interference with pacemakers


Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.



## Important usage information

### Use your phone in the normal position

Avoid contact with your phone's internal antenna.

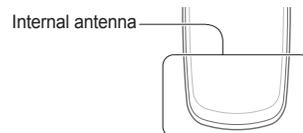

### Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

### Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

### Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

# CE 0168

### Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

### Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.



## Safety precautions

### Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

### Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

### Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

### Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

### Turn off the phone or disable the wireless functions when in an aircraft


Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your

### Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram of body tissue.

During testing, the maximum SAR recorded for this model was 0.294 watts per kilogram. In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy. The Declaration of Conformity at the back of this manual demonstrates your phones compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

## Phone layout

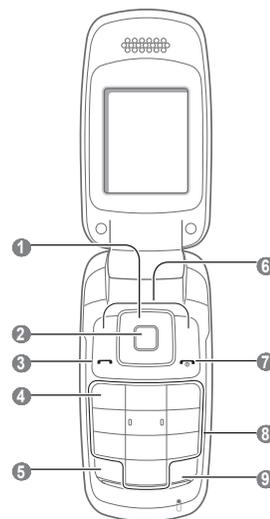

1

#### 4-way navigation key

In Idle mode, access user-defined menus; In Menu mode, scroll through menu options

2

#### Menu entry/Confirm key

In Idle mode, enter the Menu; In Menu mode, select the highlighted menu option or confirm an input

3

#### Dial key

Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers;

4

#### Voice mail service key

In Idle mode, access voice mails (press and hold)

5

#### Pause key

Enter a dial pause (press and hold)

6

#### Softkeys

Perform actions indicated at the bottom of the display

7

#### Power/Menu exit key

Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

8

#### Alphanumeric keys

9

#### Silent profile key

In Idle mode, activate or deactivate the Silent profile (press and hold)

Your phone v the following status indicators on the top of the screen:

Icon	Description
	Signal strength
	Call in progress
	Call diverting active
	Alarm activated
	In Home Zone service area
	In City Zone service area
	New text message (SMS)
	New voice mail message
	FM radio on
	Normal profile activated
	Silent profile activated
	Battery power level

## Install the SIM card and battery

1. Remove the battery cover and insert the SIM card.



2. Insert the battery and replace the battery cover.


 


## Charge the battery

1. Plug the supplied travel adapter.



2. When charging is finished, unplug the travel adapter from the phone.

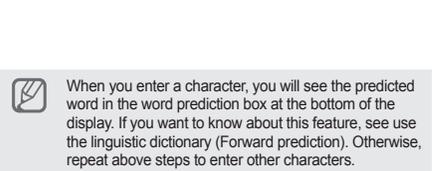

## List of the characters available in Hindi

Key	Characters in the order displayed	
	Press the numeric key	And press the ✖ key
1	<span>क</span>	<span>क</span> <span>ख</span> <span>ग</span> <span>घ</span> <span>ङ</span>
2	<span>च</span>	<span>च</span> <span>छ</span> <span>ज</span> <span>झ</span> <span>ञ</span>
3	<span>ट</span>	<span>ट</span> <span>ठ</span> <span>ड</span> <span>ढ</span> <span>ण</span>
4	<span>त</span>	<span>त</span> <span>थ</span> <span>द</span> <span>ध</span> <span>न</span>
5	<span>प</span>	<span>प</span> <span>फ</span> <span>ब</span> <span>भ</span> <span>म</span>
6	<span>य</span>	<span>य</span> <span>र</span> <span>ल</span> <span>व</span> <span>श</span>
7	<span>ष</span>	<span>ष</span> <span>स</span> <span>ह</span> <span>क्ष</span> <span>त्र</span>
8	<span>अ</span>	<span>ऋ</span> <span>ए</span> <span>ऐ</span> <span>ओ</span> <span>औ</span>
9	<span>ा</span>	<span>ा</span> <span>ि</span> <span>ी</span> <span>ु</span> <span>ू</span>
0	<span>ं</span>	<span>ं</span> <span>ं</span> <span>ं</span> <span>ं</span> <span>ं</span>
✖	<span>्</span>	Virama (togles a virtual keypad page)

## Accessing a remote phone

If a remote phone has the mobile tracker 2.0 feature and it is activated, you can get contacts, delete data, forward calls, and get location information of the remote phone.

To get contacts of the remote phone:

- In Idle mode, press <Menu> → **Settings** → **Security** → **Mobile tracker 2.0** → **Access remote phone**.
- Enter the number of the remote phone.
- Scroll down and enter the mobile tracker password of the remote phone.
- Press the <OK>.
- Select **Get contact**.
- Enter the name of the contact you want to retrieve and press the <Send>.

Your phone will receive a text message with the contact information.

To delete data on the remote phone:


 
- In Idle mode, press <Menu> → **Settings** → **Security** → **Mobile tracker 2.0** → **Access remote phone**.
- Enter the number of the remote phone.
- Scroll down and enter the mobile tracker password of the remote phone.
- Press the <OK>.
- Select **Delete user data**.
- Press the <Yes>.

A call log list, Phonebook contacts, and all messages of the remote phome will be deleted.


	<b>Note</b> ; notes, usage tips, or additional information
	<b>Followed by</b> ; the order of options or menus you must select to perform a step; for example: Press <Menu> → <b>Messages</b> (represents <b>Menu</b> , followed by <b>Messages</b> )
	<b>Square brackets</b> ; phone keys; for example: [ <span>☰</span> ] (represents the Power/Menu exit key)
	<b>Angled brackets</b> ; softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

## Turn your phone on or off





- To turn your phone on, press and hold [☰].
- To turn your phone off, press and hold [☰].

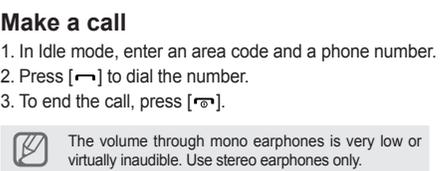

 Key **1-7**: Consonant Groups
Key **8**: Independent Vowel Group
Key **9**: Dependent Vowel Group
Key **0**: Signs & Symbols



**Example**
To enter **कम** (made up of half character), press the **1**, **✖** (Virama), **1**, **5**, and **5** keys.

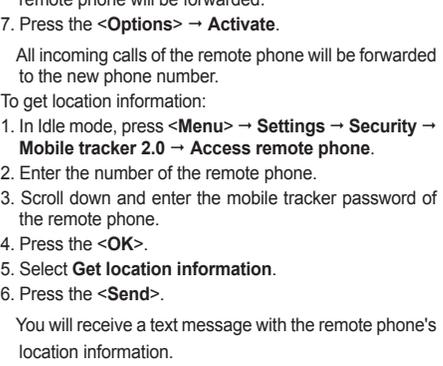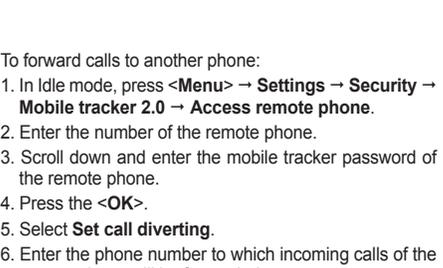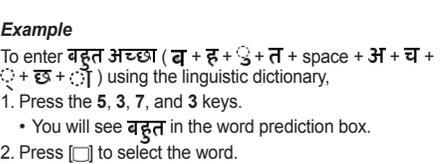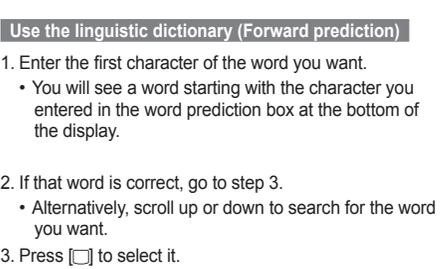

### Answer a call

- When a call comes in, press [☰].
- To end the call, press [☰].

 
## Adjust the volume

**To adjust the volume of the ringtone**

- In Idle mode, press < **Menu** > → **Settings** → **Profiles**.
- Scroll to the phone profile you are using.
- Press <**Options**> → **Edit**.
- Select **Volume** → **Call alert**.
- Scroll left or right to adjust the volume level.
- Press <**Save**>.




While a call is in progress, press the navigation key up or down to adjust the earpiece volume.



**Change your ringtone**

- In Idle mode, press < **Menu** > → **Settings** → **Profiles**.
- Scroll to the phone profile you are using.
- Press <**Options**> → **Edit**.
- Select **Call ringtone**.


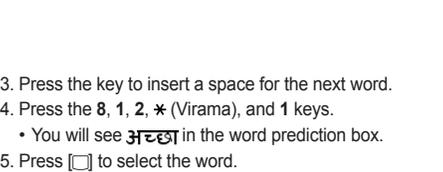


**List of the combination of half and full formed consonant**

क + क = क्क	त् + न = त्न
क + क् + क = क्क्क	द + ध = द्ध
स् + थ् + य = स्थय	ध् + द = ध्द
स् + म् + थ् + क = स्मथ्क	द् + य = द्य
ट् + र = ट्र	द् + म = द्म
ग् + र = ग्र	श् + च = श्च
र् + ग = र्ग	श् + र = श्र
त् + त = त्त	
द् + द = द्द	


 
## Set and use alarms

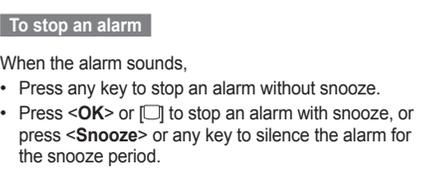

**To deactivate an alarm**

- In Menu mode, select **Alarms**.
- Scroll to the alarm you want to deactivate and press [☐].
- Scroll down (if necessary).
- Scroll left or right to **Off**.
- Press <**Save**>.

- Select a ringtone category → a ringtone.
- Press <**Save**>.

 
## Call a recently dialed number

- In Idle mode, press [☰].
- Scroll left or right to select a call type.
- Scroll up or down to select a number or name.
- Press [☐] to view details of the call or [☰] to dial the number.

## Enter text

**To change the text input mode**

- Press [✖] to change case or switch to Number mode.
- Press and hold [✖] to switch to an input mode.
- Press and hold [✚] to switch to Symbol mode.




**To change the Hindi language input mode**

- Press the appropriate alphanumeric keys to enter an entire word.
- When the word display correctly, press [✚] to insert a space. If the correct word does not display, press the navigation key down to select an alternate word.

**T9 mode**

**Add a new contact**

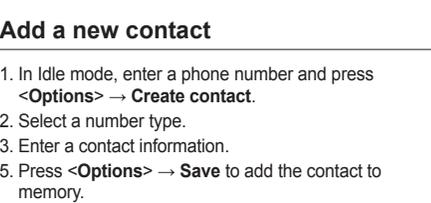

**Send and view messages**

**Send a text message**

 
- In Idle mode, press <Menu> → **Messages** → **Create new message**.
- Enter the text message.
- Press <**Options**> → **Send only** or **Save and send**.
- Enter the destination number.
- Press <**Options**> → **Send** to send the message.

**View text messages**


- In Idle mode, press <Menu> → **Messages** → **Inbox**.
- Select a text message.

## Listen to the FM radio

- Plug the supplied headset into the phone.
- In Idle mode, press <Menu> → **FM radio**.
- Press [☐] to start the radio.
- Press <**Yes**> to start automatic tuning.
  - The radio scans and saves available stations automatically.



 - Scroll up or down to a radio station.
- To turn off the FM radio, press [☐].



**Fake calls**

The Fake call features may be available on your phone depending on the phone's software or your service provider. You can simulate fake incoming calls when you want to get out of meetings or unwanted conversations.

- In Idle mode, press and hold the navigation down key.
- To end the fake call, press the End key.

### ABC mode

 
Press the appropriate alphanumeric key until the character you want appears on the display.

**Number mode**


Press the appropriate alphanumeric key to enter a number.

**Symbol mode**

Press the appropriate alphanumeric key to select a symbol.



**Neopad Indian Mode**

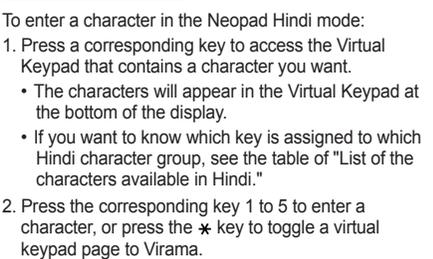

**Activate the mobile tracker**

This feature helps track your phone when it is stolen or when someone tries to use your phone using other SIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

- In Idle mode, press <Menu> → **Settings** → **Security** → **Mobile tracker 2.0**.
- Enter a new 4- to 8-digit password and press <OK>.
- Enter the new password again and press <OK>.
- Select **Settings**.
- Enter a new 8-digit password for the mobile tracker and press <OK>.
- Enter the new password again and press <OK>.
- Scroll left or right to **On**.
- Scroll down and press [☐] to open the recipient list.
- Press <**Options**> → **Phonebook** to open your contact list.
- Scroll to a contact and press [☐].
- Press <**Options**> → **Save** to save the recipients.
- Scroll down and enter the sender's name.
- Press <**Options**> → **Save** → <**Accept**>.