

Chapter 1. Introduction

1.1. Characteristics of GMWIN	1-1
1.2. How to Connect GMWIN to PLC.....	1-4
1.2.1. Method of Connection	1-4
1.2.2. Depth of Connection	1-9

Chapter 2. Installation

2.1. System Requirement for GMWIN	2-1
2.2. GMWIN Installation	2-2
2.2.1. Installline program	2-2

Chapter 3. Getting Started

3.1. Create a Program.....	3-1
3.2. Configuration of Screen.....	3-13
3.2.1. The Menu Bar	3-13
3.2.2. The Tool Bar	3-19
3.2.3. The Toolbox	3-20
3.2.4. The Status Bar	3-20
3.3. How to use a Dialog Box	3-21
3.4. Files being created in GMWIN	3-21
3.5. Open a File.....	3-22
3.6. Save a File	3-23
3.6.1. Save a New File.....	3-23
3.6.2. Save a File on Working.....	3-23
3.6.3. Save as another name.....	3-23
3.7. Close a File	3-24

Chapter 4. Edit a Project

4.1. Create a Project.....	4-2
4.2. Open a Project	4-3
4.3. Save a Project.....	4-3
4.4. Edit Configuration	4-4
4.4.1. Edit a project.....	4-4

Table of Contents

4.4.2. Edit Configuration item.....	4-4
4.4.3. Edit a Configuration Global Variable.....	4-5
4.4.4. Edit Access Variable	4-7
4.4.5. Edit Resource	4-9
4.4.6. Edit Resource Global Variable	4-9
4.4.7. Define Task.....	4-9
4.4.8. Define Program.....	4-11
4.4.9. Comment of Direct Variable.....	4-13
4.5. Edit a Parameter	4-15
4.5.1. Edit Basic Parameter	4-15
4.5.2. Set I/O Parameter	4-17
4.5.3. Set the High Speed Link Parameter	4-21
4.5.4. Set Redundancy Parameter.....	4-29
4.5.5. Set Communication Parameter	4-36

Chapter 5. Edit a Program

5.1. Create a Program	5-1
5.2. Open a Program	5-2
5.3. Save a Program.....	5-3
5.4. Program Properties.....	5-3
5.5. Edit a Variable.....	5-4
5.6. Edit LD.....	5-7
5.6.1. Create a Contact.....	5-9
5.6.2. Create a Coil.....	5-9
5.6.3. Create a Function	5-9
5.6.4. Create a Function Block.....	5-10
5.6.5. Return	5-11
5.6.6. Jump and Label	5-12
5.6.7. Rung Comment.....	5-13
5.6.8. Subroutine Call	5-14
5.6.9. End of Main Program.....	5-14
5.6.10. variable Input	5-15
5.6.11. Edit a Block.....	5-16
5.6.12. Find.....	5-17
5.6.13. Replace.....	5-19
5.6.14. Find/Replace Again.....	5-20
5.6.15. Goto	5-20

Table of Contents

5.6.16. Zoom In/Out	5-21
5.6.17. Variable Comment	5-22
5.6.18. Delete Row	5-22
5.6.19. Delete Cell	5-22
5.6.20. Insert Line	5-23
5.6.21. Insert Cell	5-23
5.6.22. Move/Copy Cell	5-23
5.6.23. Pop-Up Menu	5-23
5.6.24. Undo	5-24
5.6.25. Print and Preview	5-25
5.7. Edit SFC	5-27
5.7.1. Create a Step/Transition	5-28
5.7.2. Create a parallel Branch	5-29
5.7.3. Create a Selective Branch	5-31
5.7.4. Create a Label	5-33
5.7.5. create a Jump	5-34
5.7.6. Create an Action	5-36
5.7.7. Create a Transition	5-40
5.7.8. Delete	5-41
5.7.9. Zoom In Action/Transition	5-44
5.7.10. Arrange number	5-45
5.7.11. Action/Transition List	5-46
5.7.12. Edit a Block	5-47
5.7.13. Find	5-48
5.7.14. Replace	5-48
5.7.15. Again	5-48
5.7.16. goto	5-48
5.7.17. Condense Screen	5-48
5.7.18. Print	5-49
5.8. Edit IL	5-49
5.8.1. Operation Input	5-51
5.8.2. Function Input	5-52
5.8.3. Function Block Input	5-54
5.8.4. Label Input	5-56
5.8.5. Comment Input	5-56
5.8.6. Change an Inset/Overwrite Mode of Program	5-57
5.8.7. Delete a Program	5-57
5.8.8. Edit a Block	5-57

Table of Contents

5.8.9. find	5-58
5.8.10. Replace	5-59
5.8.11. Again	5-59
5.8.12. Goto	5-60
5.8.13. Print	5-60

Chapter 6. Compile a Program

6.1. Make	6-1
6.2. Compile	6-1
6.3. Build All	6-1
6.4. Message	6-3
6.5. Memory Reference	6-3

Chapter 7. Online

7.1. Connect	7-1
7.1.1. Connect+Write+Run+Monitor On	7-1
7.1.2. Connect	7-1
7.2. Disconnect	7-1
7.3. Read from PLC	7-1
7.4. write to PLC	7-2
7.5. Change PLC Mode	7-4
7.6. Clear PLC Data	7-4
7.7. PLC Reset	7-4
7.7.1. Reset	7-4
7.7.2. Overall Reset	7-5
7.8. Flash Memory	7-5
7.9. Setup Link Enable	7-6
7.10. PLC Information	7-6
7.10.1. System Information	7-6
7.10.2. Error/Warning Information	7-8
7.10.3. AC Fail History	7-9
7.10.4. Error History	7-9
7.10.5. Mode Change History	7-10
7.10.6. I/O Module Fault Information	7-11
7.11. I/O Information	7-12
7.12. Forced I/O Setup	7-13

7.13. Enable I/O Forcing	7-14
7.14. Link Information	7-15
7.15. Tx/Rx Information.....	7-16
7.16. Mnet Parameter	7-16
7.17. Mnet Information	7-17
7.18. I/O Skip	7-17
7.19. Fault Mask	7-18
7.20. Initialize Special Modules.....	7-19

Chapter 8. Monitoring

8.1. Monitor a Program	8-1
8.1.1. Monitor LD	8-1
8.1.2. Monitor SFC	8-4
8.1.3. Monitor IL	8-4
8.2. Monitor a Variable.....	8-5
8.2.1 Register Variable	8-6
8.2.2. Start Monitoring.....	8-8
8.2.3. Set the View Type of Monitoring	8-8
8.2.4. Data Display Form	8-8
8.2.5. Forced Variable Output	8-9
8.2.6. Monitor Array Variable	8-10
8.3. I/O Monitoring	8-10
8.4. Monitor a Time Chart	8-12
8.4.1. Select a Variable.....	8-12
8.4.2. Start Monitoring.....	8-14
8.4.3. Set the View Type of Monitoring	8-15
8.4.4. Set Time Interval.....	8-15
8.4.5. Forced Variable Output	8-15
8.5. Monitor a Link Parameter.....	8-16

Chapter 9. Debugging

9.1. LD Debugging	9-1
9.1.1. Break Run	9-1
9.1.2. Step Run	9-2

Table of Contents

9.1.3. Step Into.....	9-4
9.1.4. Step Out.....	9-4
9.2. SFC Debugging	9-5
9.2.1. Break Run	9-5
9.2.2. Step Run	9-5
9.2.3. Step Into.....	9-6
9.2.4. Action Debugging.....	9-6
9.3. IL Debugging	9-7
9.3.1. Break Run	9-7
9.3.2. Step Run	9-7
9.3.3. Step Into.....	9-7
9.3.4. Step Out.....	9-7
9.3.5. Watch Current Result.....	9-7
9.4. View Break Point.....	9-8
9.5. Set a Break Condition	9-9
9.5.1. Break Scan	9-10
9.5.2. Break Variable	9-10
9.6. Enable Task Turnover.....	9-11

Chapter 10. Library

10.1. Type of Library File	10-1
10.2. Load a Library	10-2
10.3. Create User Defined Library File	10-6
10.3.1. Create User defined Function	10-6
10.3.2. Create a User Defined Function Block.....	10-15
10.3.3. Library Manager	10-23

Chapter 11. Option

11.1. Connet Option.....	11-1
11.1.1. Connetion with a series Communication.....	11-1
11.1.2. Connetion with Phone	11-2
11.1.3. Connetion with GLOFA Fnet for PC.....	11-3
11.1.4. Connetion with GLOFA Mnet for PC	11-3
11.1.5. Connetion with Eiher	11-3
11.1.1. Computer Link Information.....	11-4
11.2. Set the Directory of GMWIN	11-5

11.3. Auto Save	11-6
11.4. Set a Password.....	11-8
11.5. Monitor/Debug Option.....	11-9
11.6. Make Option.....	11-10

Chapter 12. Upload

12.1. Make Upload File	12-1
12.2. Write to PLC (Download)	12-2
12.3. Read from PLC (Upload)	12-3

Chapter 13. Online Edit

13.1. Start Online Edit.....	13-1
13.2. Write for Online Edit.....	13-2
13.3. Cancel Online Edit	13-2
13.4. Available Items for Online Edit.....	13-3
13.5. Non-available items for Online Edit.....	13-3

Chapter 14. Simulation

14.1. Applied PLC and Specigication for PC	14-1
14.1.1. Applied PLC.....	14-1
14.1.2. Specification for PC	14-1
14.2. Create a Program.....	14-1
14.3. Available Program for Simulation.....	14-1
14.4. Start Simulation	14-1
14.5. Build an I/O Module	14-1
14.6. Add/Remove Module.....	14-2
14.7. Simulation of I/O Module.....	14-2
14.8. Power Simulation	14-2
14.9. A/D, D/A Simulation.....	14-3
14.9.1. Shape	14-3
14.9.2. Simulation	14-3
14.9.3. Analog type of A/D,D/A module	14-3
14.9.4. Change of Analog type and Display of converted data by channel	14-3
14.9.5. Analog Input of A/D module and Display of converted data	14-3
14.9.6. Digital Input of D/A module and Display of converted data	14-4

Table of Contents

- 14.10. Function by online menu 14-4
 - 14.10.1. Monitor 14-4
 - 14.10.2. Forced I/O Setup 14-4
 - 14.10.3. Data Clear 14-4
 - 14.10.4. Reset 14-4
 - 14.10.5. Mode Change 14-4
- 14.11. Debugging..... 14-5
- 14.12. Stop Simulation..... 14-5

Appendix A. Error Code

Appendix B. GLOSSARY


Appendix C. Structure of GMWIN Menu

Chapter 1. Introduction


1.1. Characteristics of GMWIN

GMWIN is a programming and debugging tool for the full range of GLOFA PLC.
GMWIN software has the following features.

- 1) Comfortable Interface
It is possible to compile and debug several programs at the same time and maximizes user's other convenience.
- 2) Supporting Various Languages
It supports various languages like LD, SFC, IL. So you can select and use applicable language to a system.

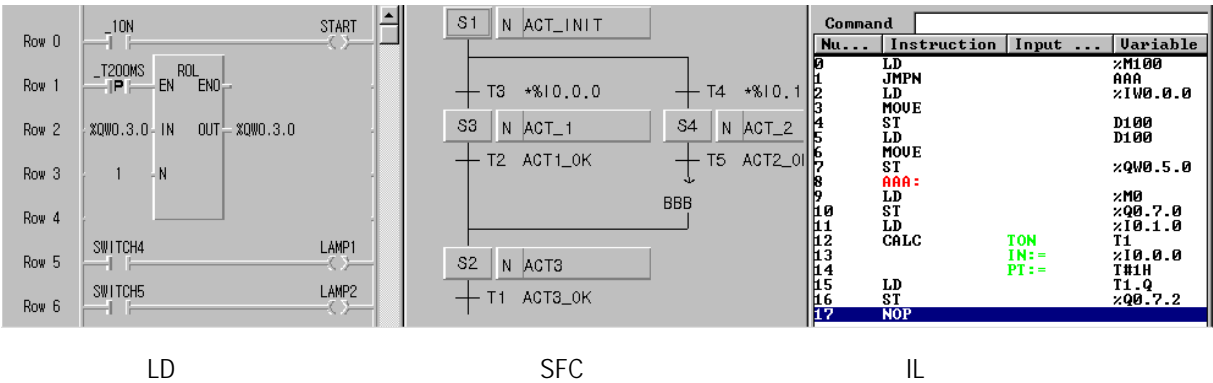


- 3) Using Variables by Symbol
You can create a program using symbols for easy understanding and memory address is also assigned automatically. It supports various data types. So you can create high-leveled programs.

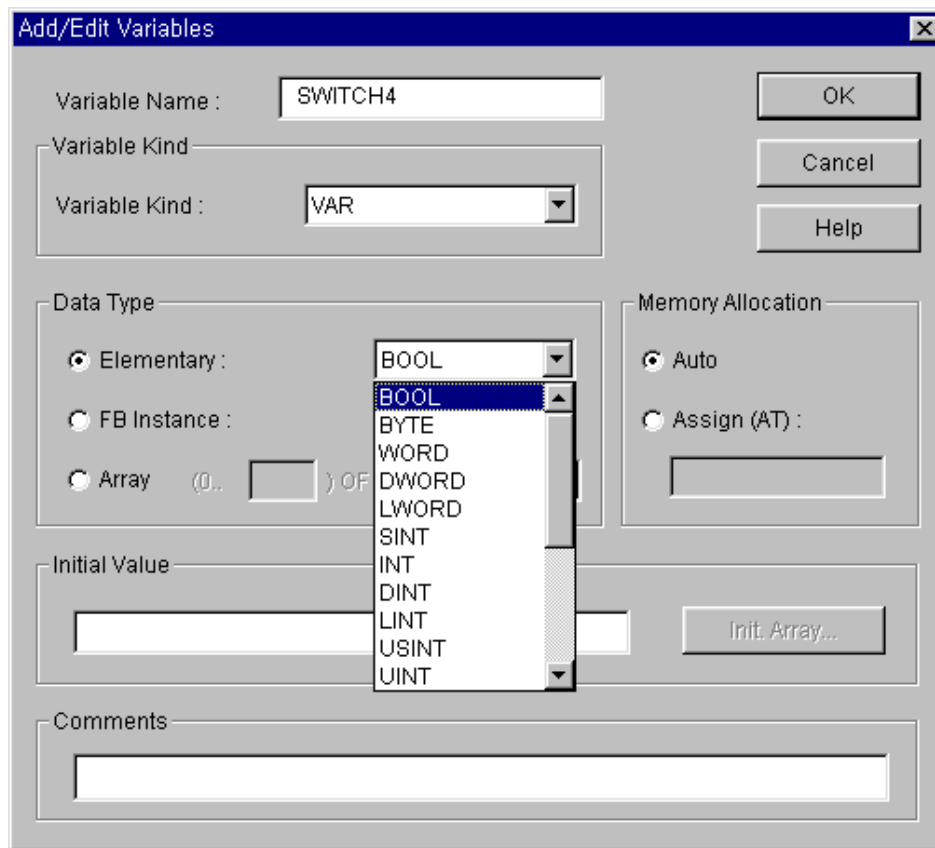

4) PLC System using Project Unit

It is very easy to create and test a program because you can include several programs in one PLC system.

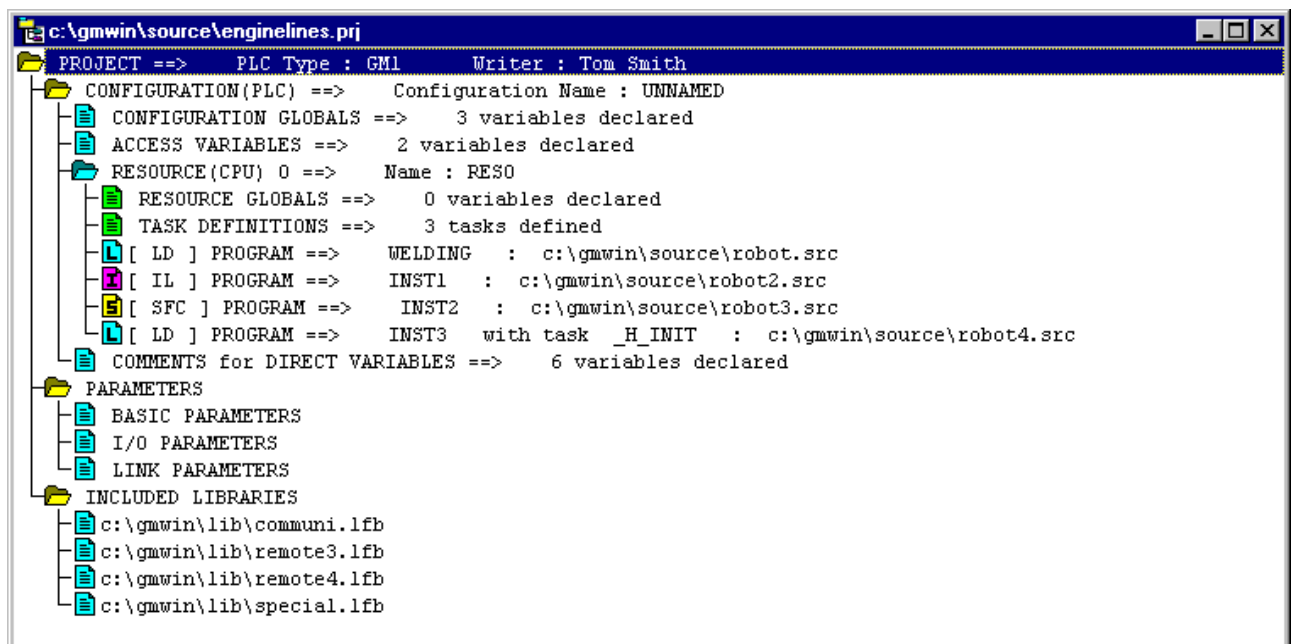

5) Connecting GMWIN to PLC by Easy Network

You can download and monitor programs not only in directly connected PLC but also in a local PLC connected by network.

6) Various PLC Information

It is available to monitor various PLC states and to use this function in the program mode.

7) User-Defined Libraries

Besides standard functions and function blocks, you can define a frequently used program as one of functions or function blocks for your convenience.

1.2. How to Connect GMWIN to PLC

In connection GMWIN to PLC, you must previously define two options – 『Method of Connection』 and 『Depth of Connection』 in Connect Option.

There are four kinds of methods of connection, using RS-232C, MODEM, Communication module (GLOFA Fnet/Mnet for PC) and Network (Ethernet), and three kinds of depth of connections such as Local, Remote 1 and remote 2.

When using Windows 3.x for operating system, the connections using Communication module and Network are not supported.


Select 『*Connect option*』 in *Project - Option* menu.

1.2.1. Method of Connection

1) Connection using RS-232C

To use RS-232C connection, connect the RS-232C cable with the serial port in PC and serial port in PLC

- ◆ From the Project Menu, choose *Option*.
- ◆ Choose *Connect Option* tab in the *Option* dialog box.

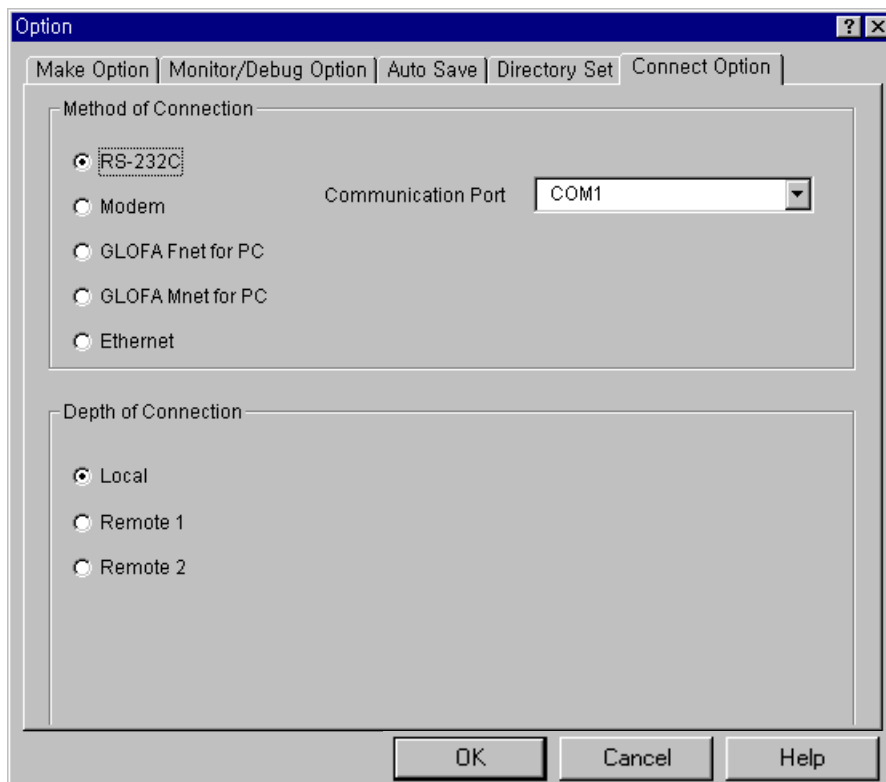


- ◆ Select *RS-232C* in Method of Connection.
- ◆ Select Communication Port.
- ◆ Select *Depth of Connection* and click *OK* button.

Local Connection

- ◆ Select *Local* in Depth of Connection and click *OK* button.
- ◆ Choose *Connect* from the Online Menu

Remote Connection (See GLOFA Fnet/Mnet user's manual for more details),

- ◆ Open Network Type List and select a network type.
- ◆ Type a station number in Station No. Box.
- ◆ Select slot number.
- ◆ Click *OK* button.
- ◆ Choose *Connect* from the Online Menu.

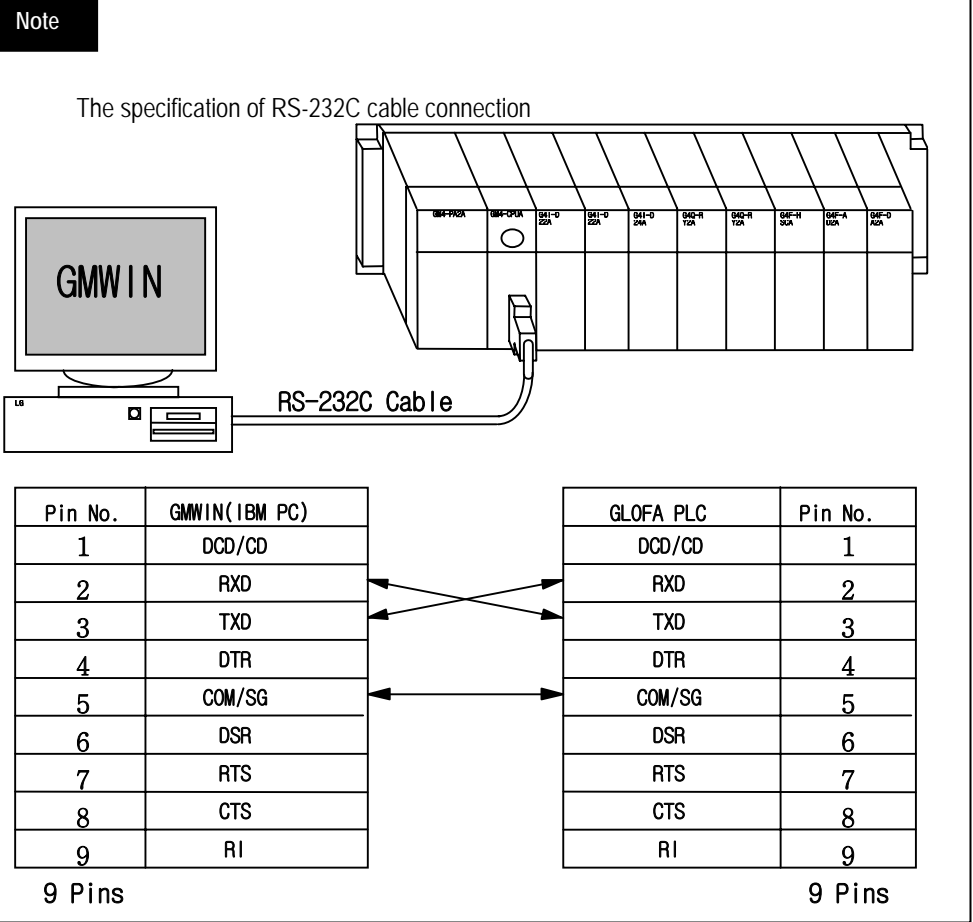


2) Connection using Modem

The long distance connection using modem is only available by Remote Connection.

To be connected with PLC, the computer link board(G□L – CUEA) must be mounted on the computer.

- ◆ From the Project Menu, choose *Option*.
- ◆ Select *Connect Option* in *Option*.

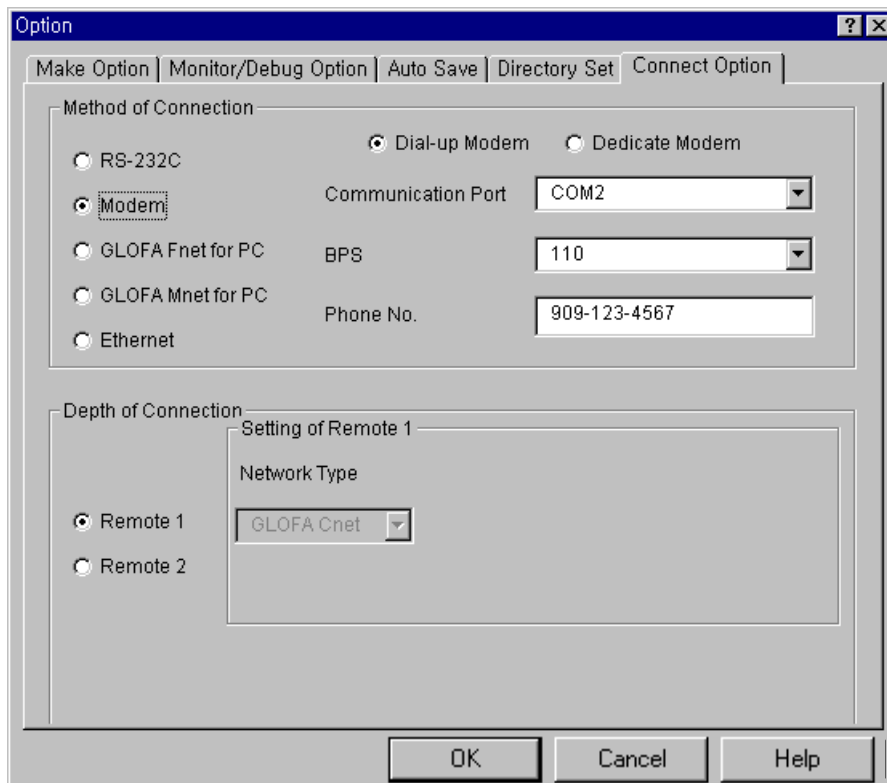

- ◆ Select *Modem* in Method of Connection.
- ◆ Select Dial-Up Modem or Dedicate Modem.
- ◆ Setup *Communication Port*(COM1 ~ COM4), *BPS* and *Phone No.*
- ◆ Click *OK* button.


3) Connection using Communication Module

To use Communication module connection (GLOFA Fnet for PC or GLOFA Mnet for PC), Fnet(Fieldbus) or Mnet(Mini-MAP) module for PLC and boards for PC.

After installing communication board for PC in PC, you must setup the address to be used by communication module for PC with changing config.sys file in Windows folder of PC (See GLOFA Fnet/Mnet user's manual for detail comment).

Example) device = c:\windows\emm386.exe noems x=d000-d4000

- ◆ From the Project Menu, choose *Option*.
- ◆ Select *Connect Option* in *Option*.

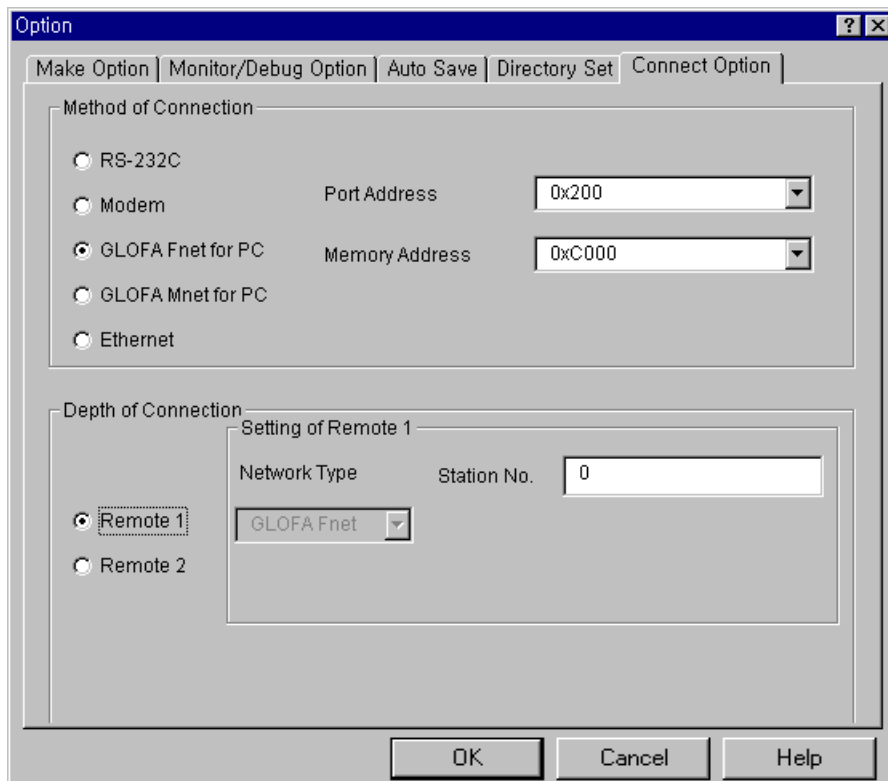

- ◆ Select *GLOFA Fnet for PC* or *GLOFA Mnet for PC* in Method of Connection.
- ◆ Setup *Port Address* and *Memory Address*.

Remote Connection (See GLOFA Fnet/Mnet user's manual for detail comment information)


- ◆ Select *Station No.*
- ◆ Select *Online-Connection* in menu and click *OK* button.
- ◆ Choose *Connect* from the Online Menu.

Port Address and *Memory Address* must be identified with the ones set in the communication board mounted on PC.

4) Connection using Network

Network connection is only available for Remote connection. To use this connection, Enet(Ethernet) module and the network system must be installed.

- ◆ From the Project Menu, choose *Option*.
- ◆ Select *Connect Option* in *Option*.

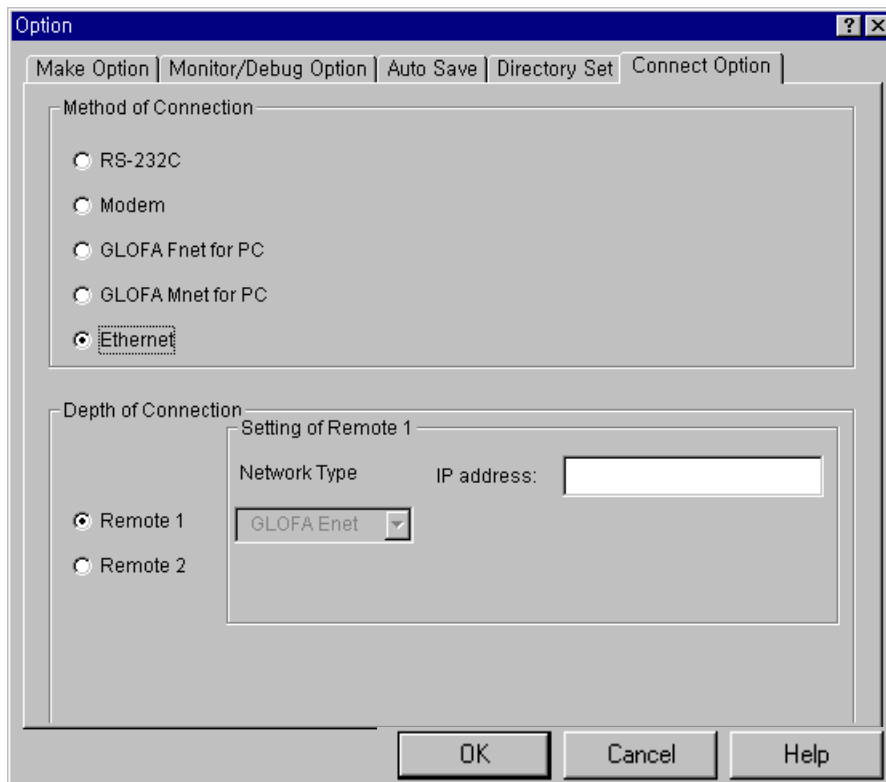

- ◆ Select *Ethernet* in Method of Connection.


Remote Connection (See GLOFA Fnet/Mnet user's manual for more detail information)

- ◆ Setup *IP address*.
- ◆ Click *OK* button.
- ◆ Choose *Connect* from the Online Menu.

1.2.2. Depth of Connection

1) Local Connection


- ◆ From the Project Menu, choose *Option*.
- ◆ Select *Connect Option* in *Option*.
- ◆ Select *Local* in Depth of Connection.

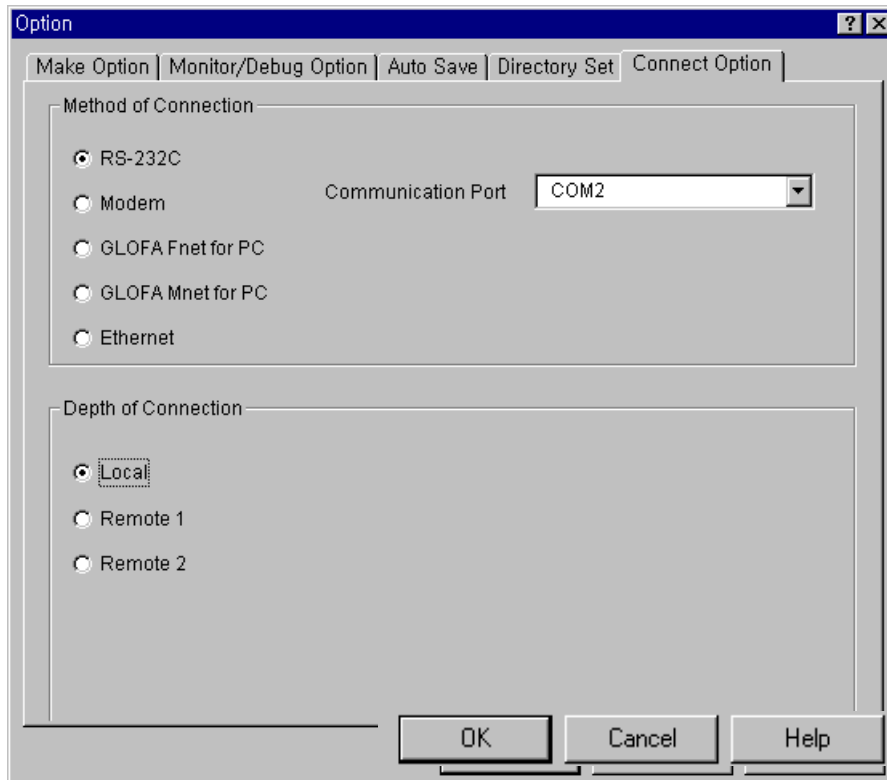

- ◆ Click *OK* button.
- ◆ Choose *Connect* from the Online Menu.


Note

Local Connection for GMWIN and PLC

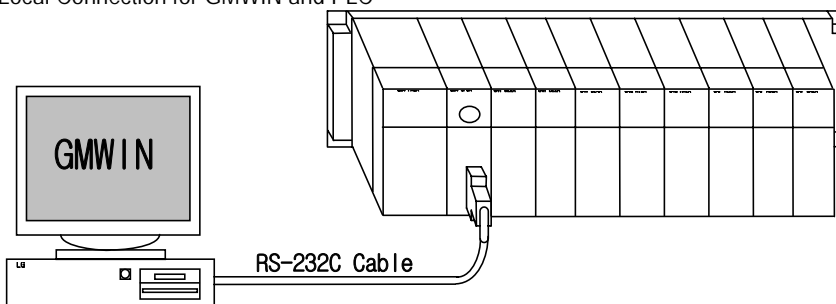

2) Remote 1 Connection


- ◆ From the Project Menu, choose *Option*.
- ◆ Select *Connect Option* in *Option*.
- ◆ Select *Remote 1* in Depth of Connection.

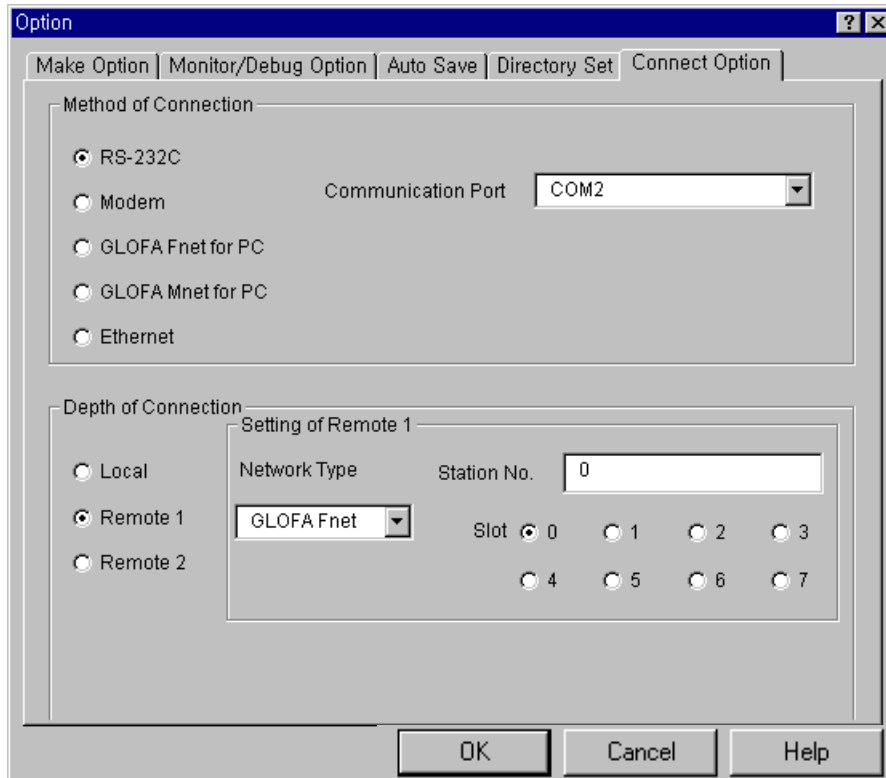

- ◆ Select *Network Type* and *Slot* in Depth of Connection.
- ◆ Select *Station No.* (only available in GLOFA Fnet, Fdnet and Mnet) or IP address(GLOFA-Enet). decimal or hexadecimal numbers are all available for *Station No.*
- ◆ Click *OK* button.

3) Remote 2 Connection

- ◆ From the Project Menu, choose *Option*.
- ◆ Select *Connect Option* in *Option*.
- ◆ Select *Remote 2* in Depth of Connection.

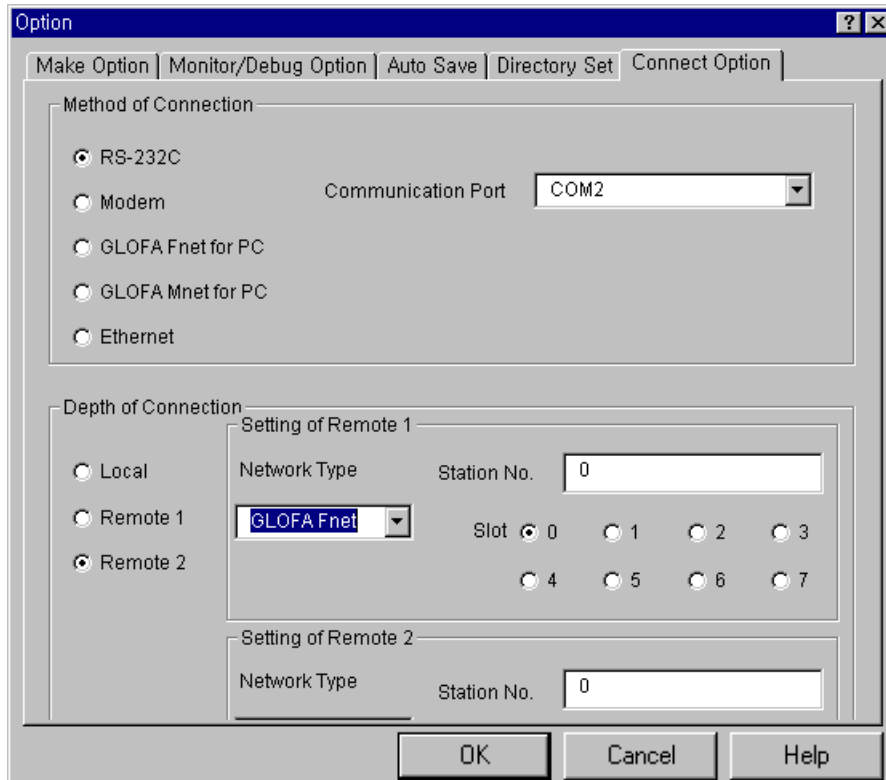

Setup Remote 1 Box

- ◆ Select *Network Type* in Depth of Connection.
- ◆ Select *Slot* and *Station No.*

Decimal and hexadecimal numbers are all available for the Station No.

Setup Remote 2 Box


- ◆ Select *Network Type* in Depth of Connection.
- ◆ Select *Slot* and *Station No.*

Decimal and hexadecimal numbers are all available for the Station No.

- ◆ Click *OK* button.

Note

Local Connection, remote 1connection and remote 2 connection are as below.

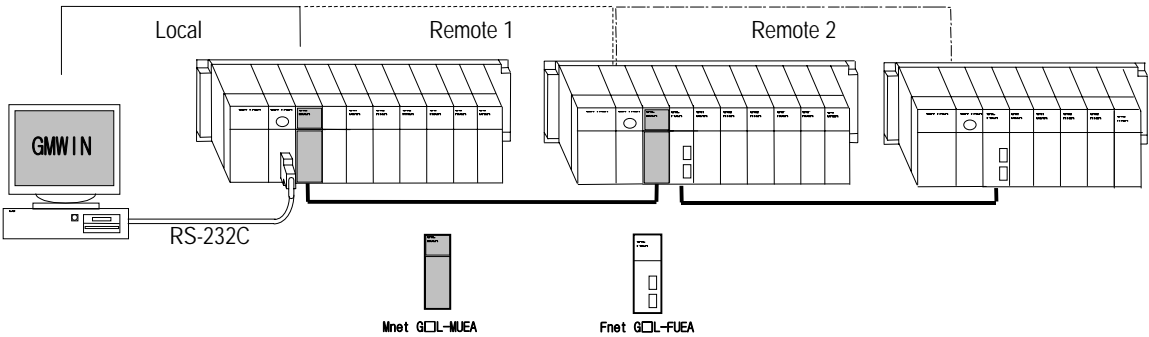

Chapter 2 Installation

2.1. System Requirements for GMWIN

Hardware and Software requirements for GMWIN are as below.

- 1) Personal computer and its memory capacity
 - ◆ Personal computer (80386 / 80486 CPU or above)
 - ◆ A minimum of 4 MB memory including extended memory.
- 2) Serial Port
 - ◆ 1 or more serial port.
- 3) Hard disk
 - ◆ 20 Mb Hard disk space
- 4) Resolution for Graphic Card
 - ◆ Minimum 800 x 600 pixels or above
- 5) Floppy disk
 - ◆ One floppy disk driver.
- 6) Mouse
 - ◆ A windows 3.1/95 compatible mouse.
- 7) Printer
 - ◆ A windows 3.1/95 compatible printer.
- 8) Operating System
 - ◆ Windows 95 / 98

2.2. GMWIN Installation


Note

Installation program for GMWIN is compressed in floppy diskettes. So if you just copy all the programs in each floppy diskettes onto your hard disk, you cannot run GMWIN.
To install GMWIN in your computer, Use installation program (SETUP.EXE) in "disk 1".

2.2.1. Installing Program


To install GMWIN for Windows, you must run an installation program(SETUP.EXE) in "disk 1" on Windows 95 / 98.

- ◆ Confirm that "disk 1" is inserted into your floppy disk driver.
- ◆ Click on the File menu in Program Manager.

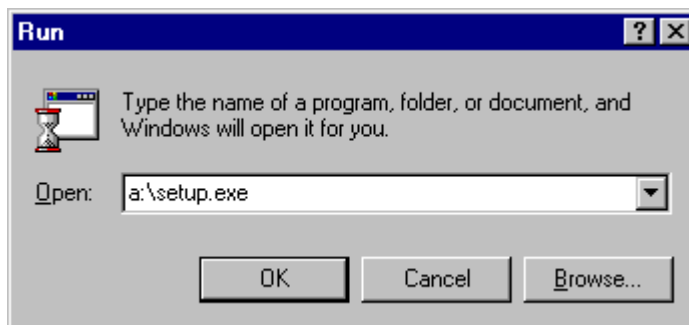


- ◆ Select the Run command and run the setup.exe in disk 1.
- ◆ Click OK button. Then the setup wizard will guide you to install the program.




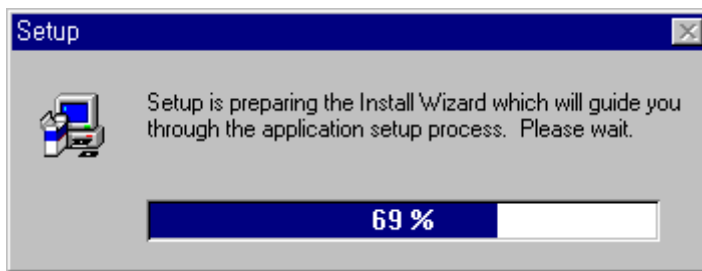

- ◆ The above dialog box of welcoming message appears in your screen.

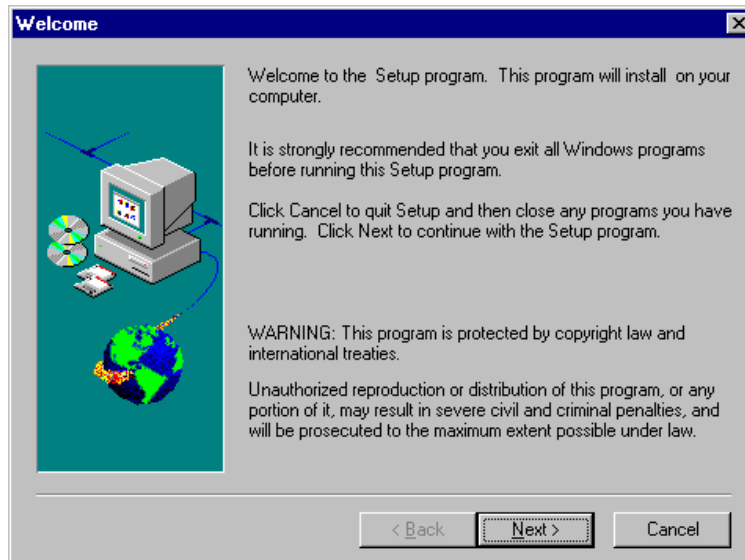


- ◆ Click the Next button to continue the installation.

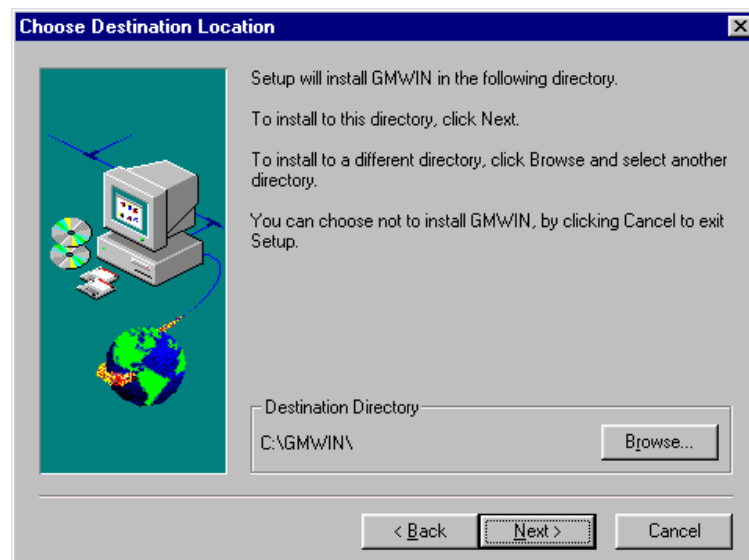


- ◆ Select Destination Directory.
If you want to change the installing directory, click the Browse... button.
You may cancel the installation by clicking the Cancel button in dialog box at anytime.


- ◆ If you click the Browse... button in the dialog box, Choose Directory dialog box appears.

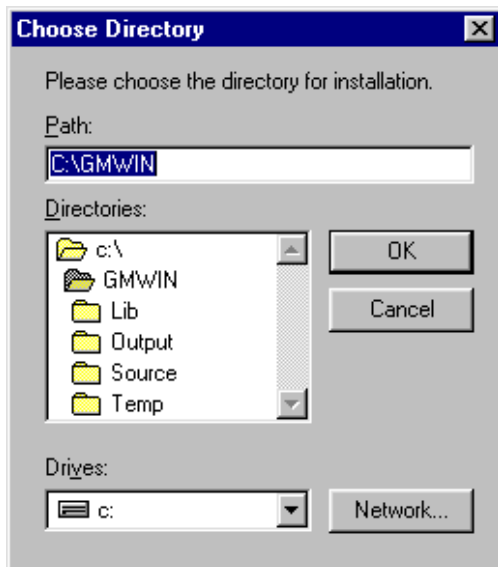


- ◆ Choose the destination path in the dialog box or enter the path name in the text box and click OK button.
- ◆ If the entered path name does not exist, the dialog box appears as below.

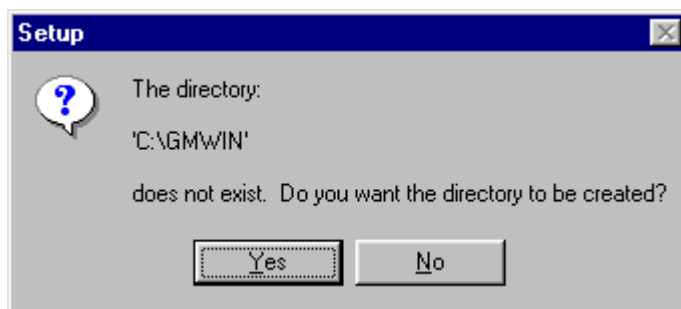


- ◆ If you would like to create the path, click Yes button.
- ◆ If you finish selecting installation path, click the Next button.
- ◆ Files in the floppy disk will be copied onto your hard disk.

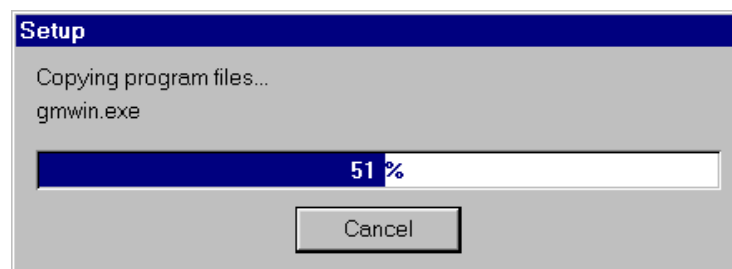

- ◆ When copy is completed, the setup wizard asks whether you read ReadMe.txt file or not.

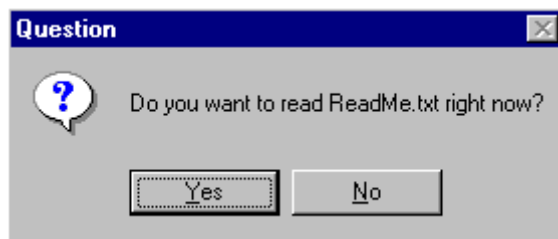

- ◆ The icon for GMWIN will be registered at the Start-Up Program. Click OK button to finish the installation.

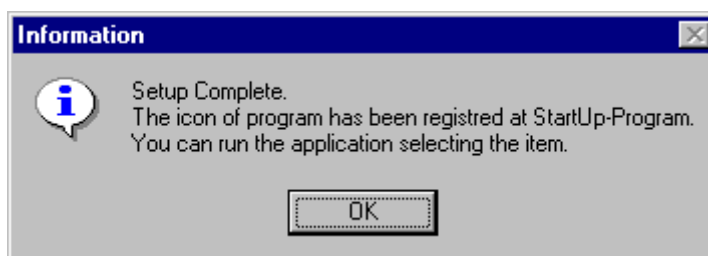

Chapter 3. Getting Started


GMWIN is a programming tool that compiles a program, makes an execution file, transfers a file to PLC, monitors and debugs PLC data.

GMWIN uses the multiple document interface (MDI) method, so that it is possible to compile and debug several programs at the same time.


3.1. Create a Program




- ◆ Click  button.
- ◆ Click *Programs - GMWIN*.

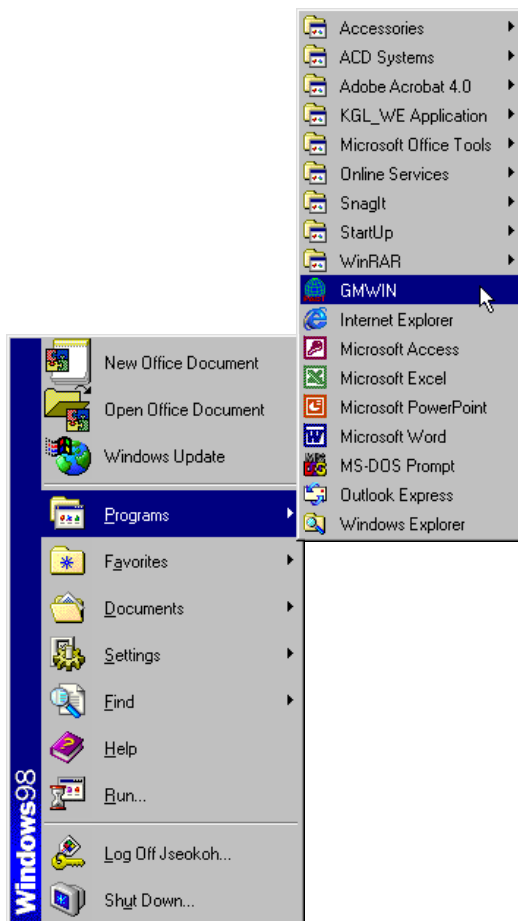


Then the initial window is shown as below.

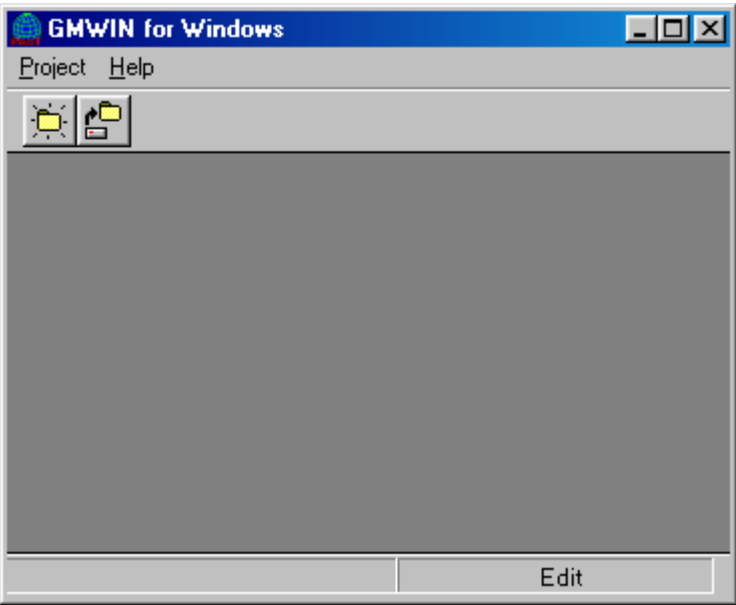


Step 1 : Create a Project

- ◆ Click *New Project* () icon or select the dialog box by clicking *Project - New...*

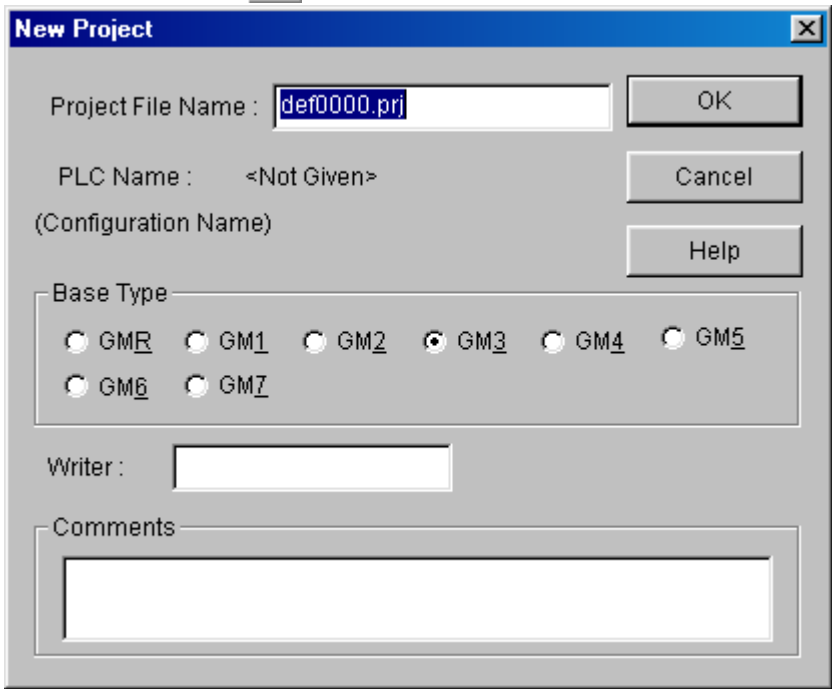

- ◆ Enter the information to the text boxes on *New Project* dialog box.


Project File Name	Engine Line
Base Type	GM3
Writer	LG Industrial Systems
Comments	Welding Process in engine line

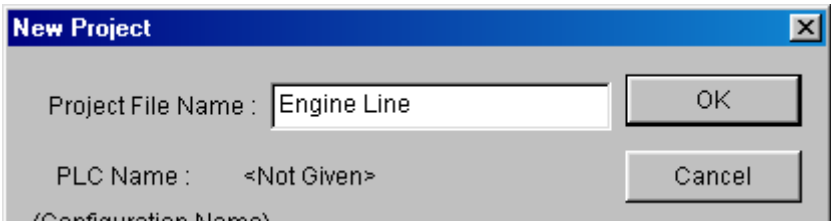

- ◆ Click *OK* button.

Step 2 : Define a Program


- ◆ Enter the information on the *Define Program* dialog box.

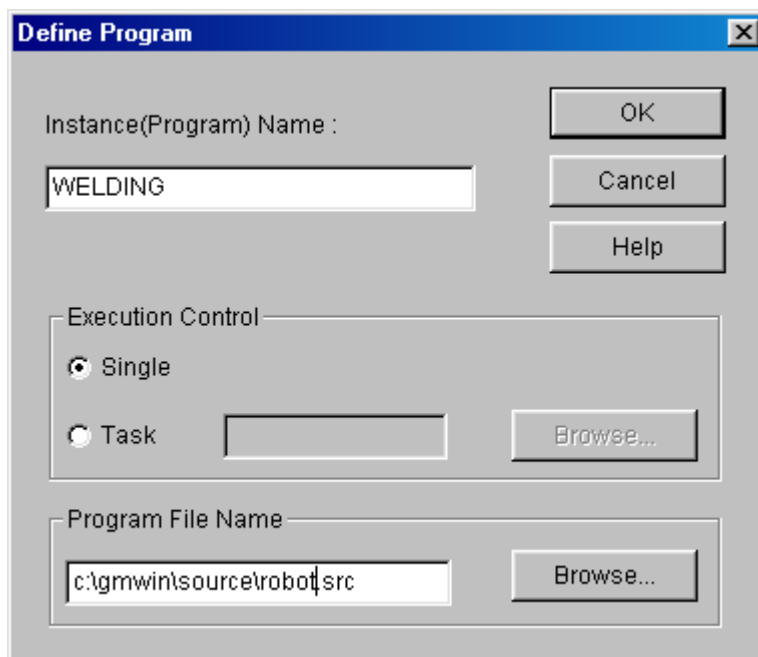

- ◆ Enter an instance(program) name in *Instance Name* text box.
- ◆ Enter 'robot.src' for Program File Name and click *OK* button.
- ◆ Open *New Program* dialog box.

- ◆ Select kind of language to use for the new program.
- ◆ Type Comments for the description of the program in *Comments* box.

- ◆ Press *Enter* or *OK* button.

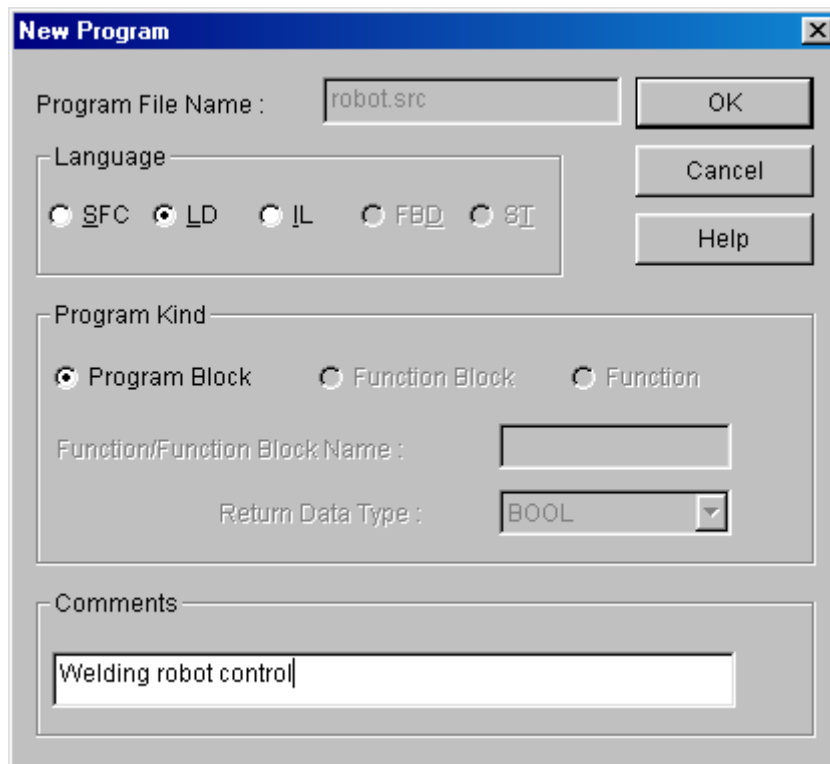


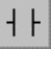

The 'New Program' dialog box is shown with the following fields and options:


- Program File Name :** robot.src
- Language:**
 - ☐ SFC
 - ☒ LD
 - ☐ IL
 - ☐ FBD
 - ☐ ST
- Program Kind:**
 - ☒ Program Block
 - ☐ Function Block
 - ☐ Function
- Function/Function Block Name :** (empty text box)
- Return Data Type :** BOOL (dropdown menu)
- Comments:**
 - Welding robot control

Buttons: OK, Cancel, Help

Step 3 : Editing a Program


- 1) Input a contact and output coil

- ◆ Click the left button of the mouse on the position of Row '0' and Column '1' in the LD window after selecting() icon in the toolbox.
- ◆ Click the mouse on the right side of contact of  after selecting  in the toolbox as below.

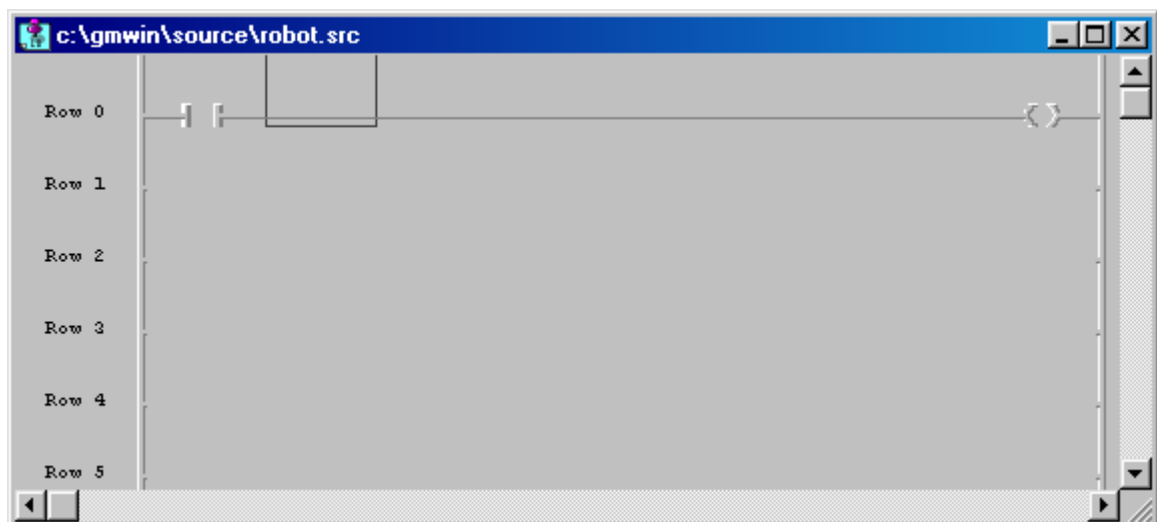



Chapter 3. Getting Started

- ◆ Select  in the toolbox and click the left button on the location of Row '1' and Column '1'.

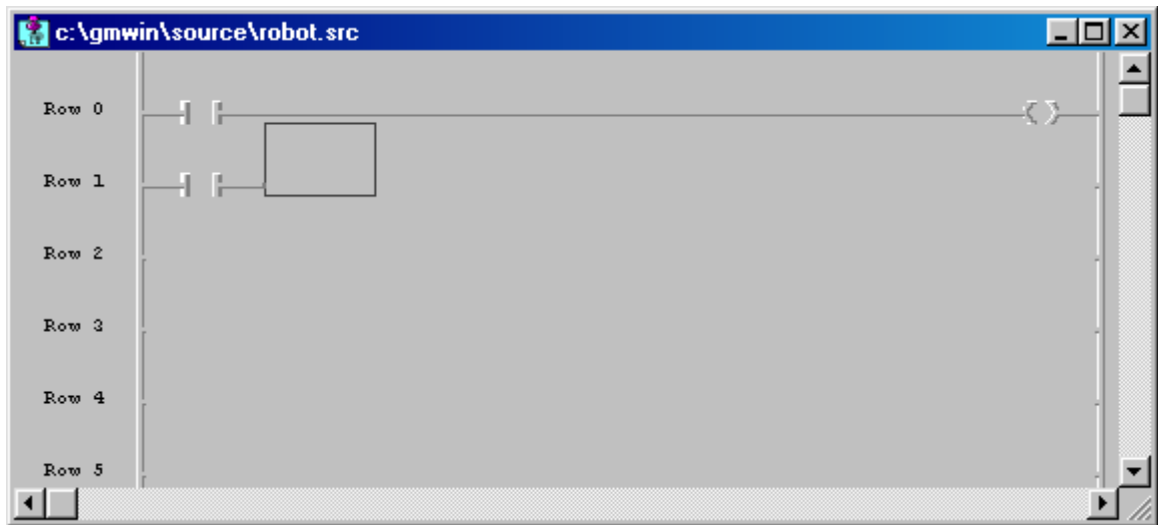


2) Insert a Function

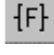
- ◆ Select  in the toolbox using a mouse.
- ◆ Click the left button of mouse on the position of Row '1' and Column '2'.

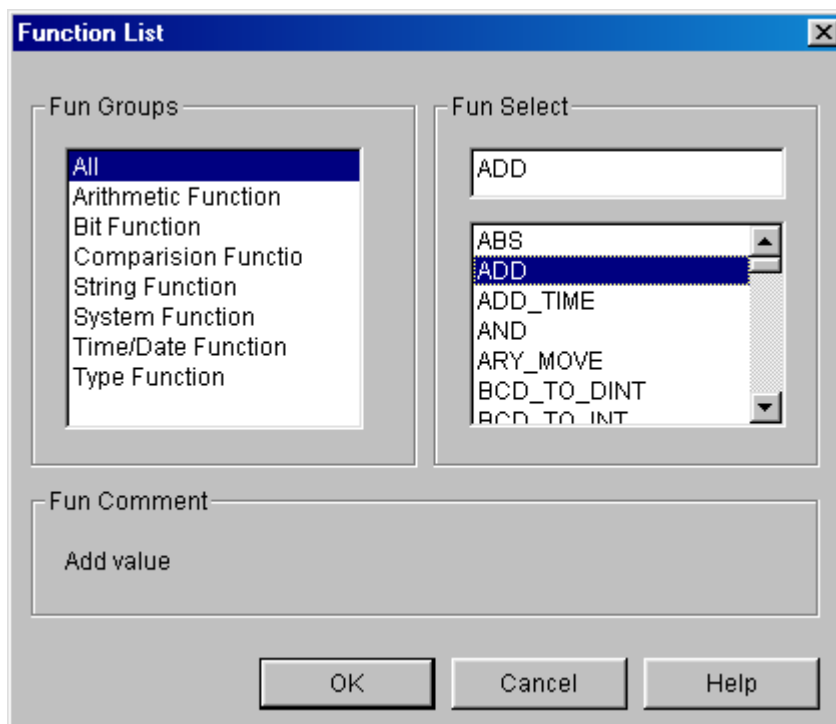

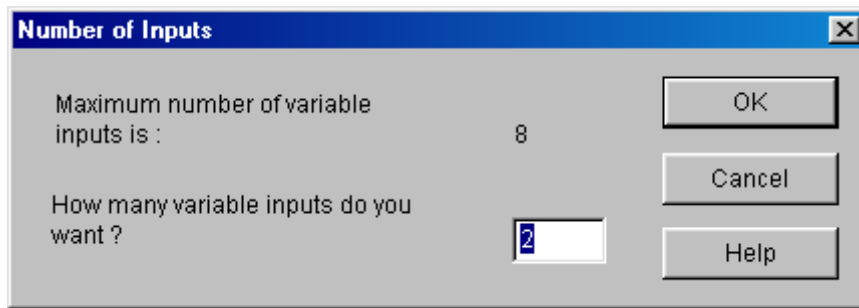

- ◆ Select Arithmetic Function 'ADD' in *Fun Select* box and click *OK* button.

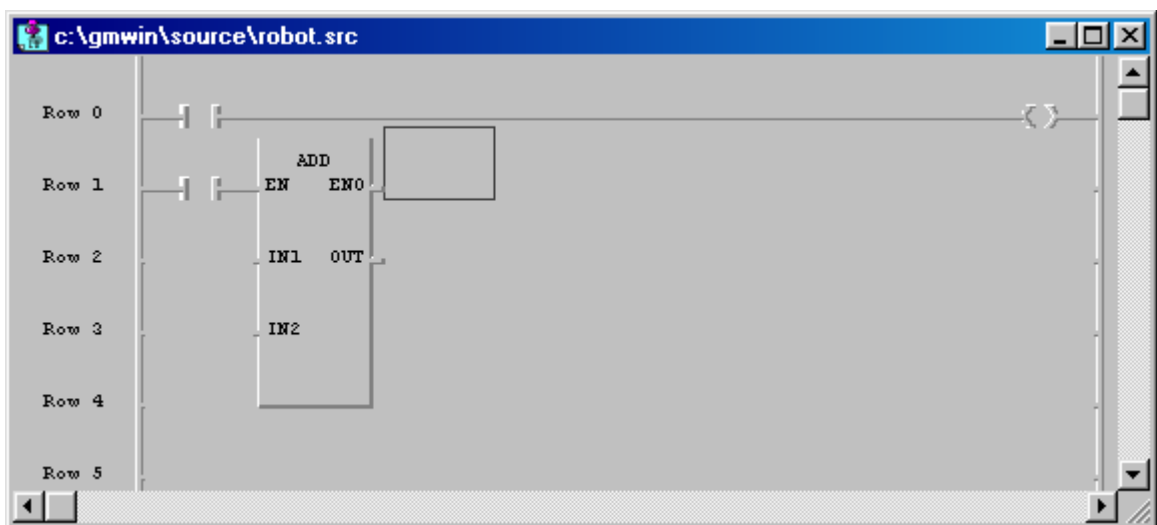


- ◆ Enter '2' for the number of inputs.
- ◆ Click *OK* button.




3) Variable Input

- ◆ Select  in the toolbox and double-click the left button of mouse on the location  of Row '0' and Column '1'.

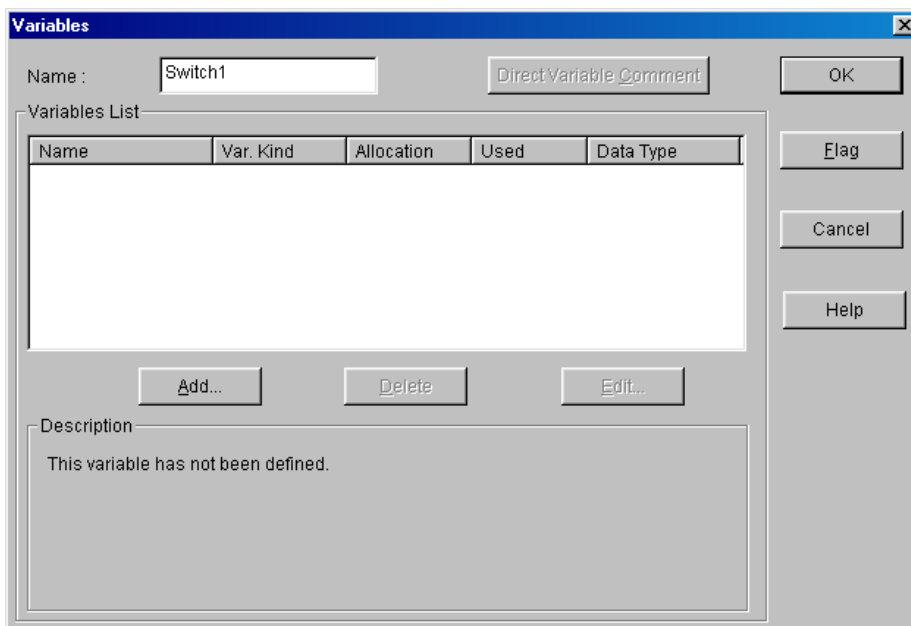


Chapter 3. Getting Started

- ◆ Enter 'SWITCH 1' in the *Name* edit control.
- ◆ Click *OK* button.

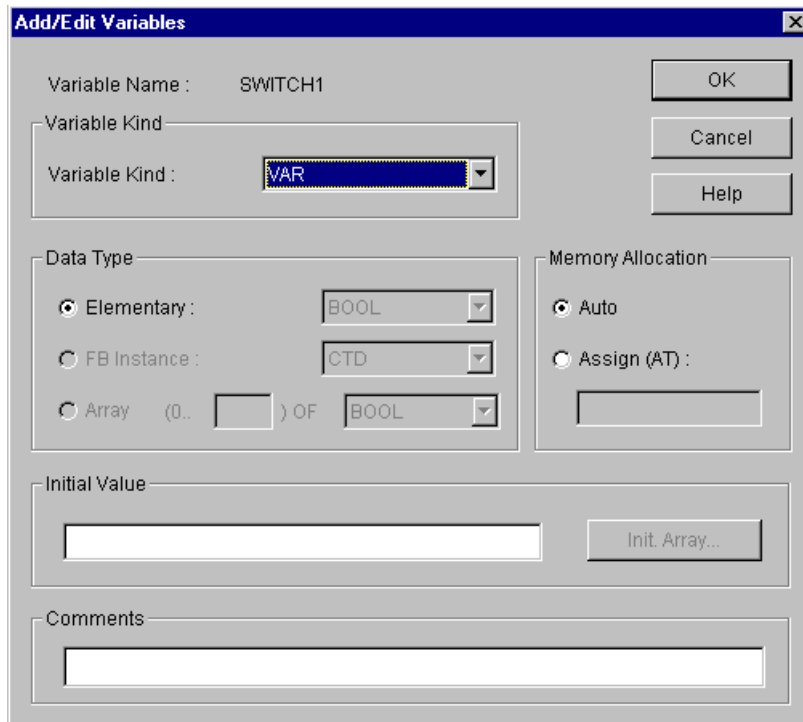


The 'Add/Edit Variables' dialog box is shown. The 'Variable Name' field contains 'SWITCH1'. The 'Variable Kind' dropdown is set to 'VAR'. The 'Data Type' section has 'Elementary' selected with 'BOOL' chosen from the dropdown. The 'Memory Allocation' section has 'Auto' selected. The 'Initial Value' field is empty, and the 'Comments' field is also empty. The 'OK', 'Cancel', and 'Help' buttons are on the right.

- ◆ Click *OK* button.

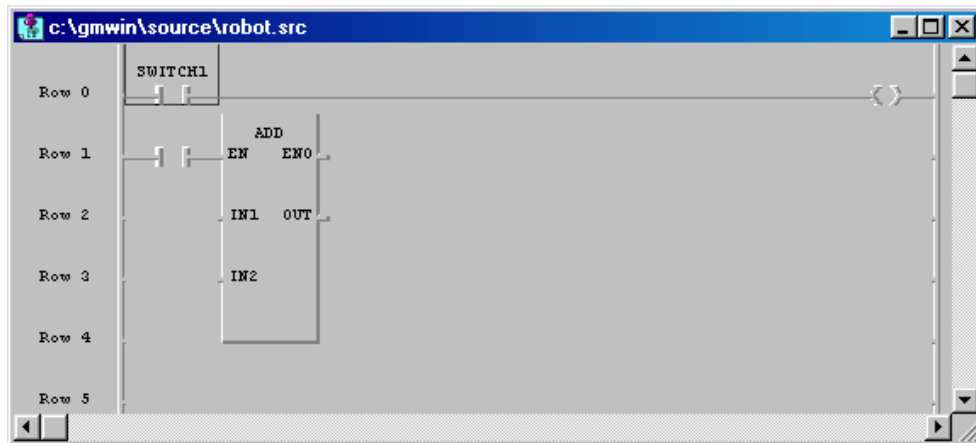

- ◆ How to assign a variable to output coil and the input contact for ADD Function are same as the above one.

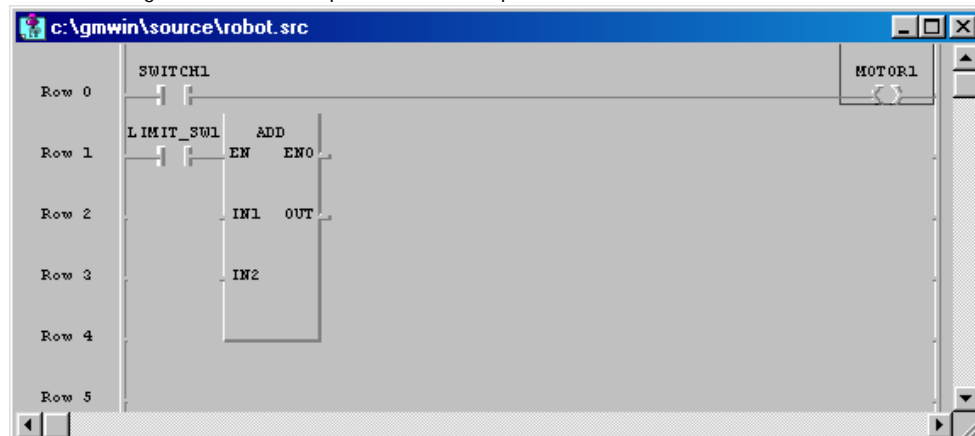

- ◆ Double-click the left button of mouse on the left of 'IN1' position (row '2', column '1') in the function 'ADD'.
- ◆ Enter the variable name 'ABC' on the *Name* edit control in *Variables* dialog box.

Variables

Name :

Variables List

Name	Var. Kind	Allocation	Used	Data Type
LIMIT_SW1	VAR	<Auto>		BOOL
MOTOR1	VAR	<Auto>		BOOL
SWITCH1	VAR	<Auto>		BOOL

Description

This variable has not been defined.

- ◆ Click *OK* button. Then *Add/Edit Variables* dialog box appears.

Add/Edit Variables

Variable Name :

Variable Kind

Variable Kind :

Data Type

☒ Elementary :

☐ Array (0..) OF

Memory Allocation


☒ Auto ☐ Assign (AT) :

Initial Value


Comments

Chapter 3. Getting Started


- ◆ Click **OK** button. Then variable name 'ABC' is assigned as 'IN1' of the function 'ADD'.

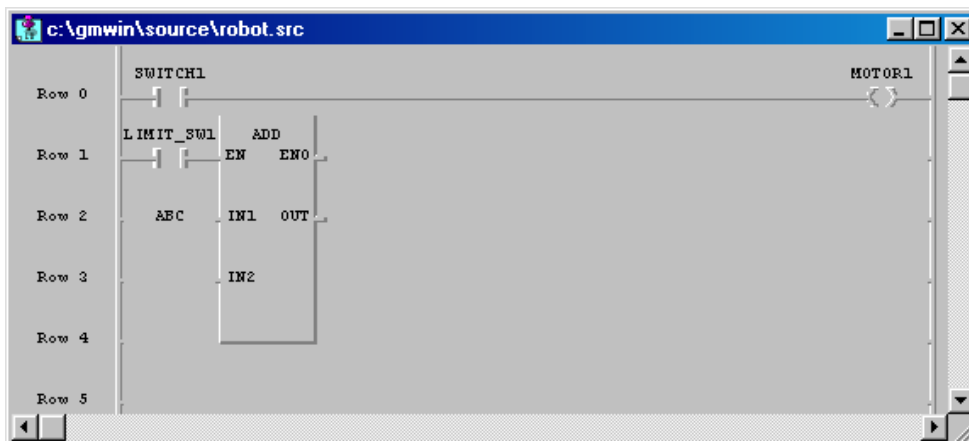

- ◆ Double-click the left button of the mouse on 'IN2' position (Row '3', Column '1').
- ◆ Then **Variables** dialog box appears.
- ◆ Enter Constant '1' in the edit control of **Name**.

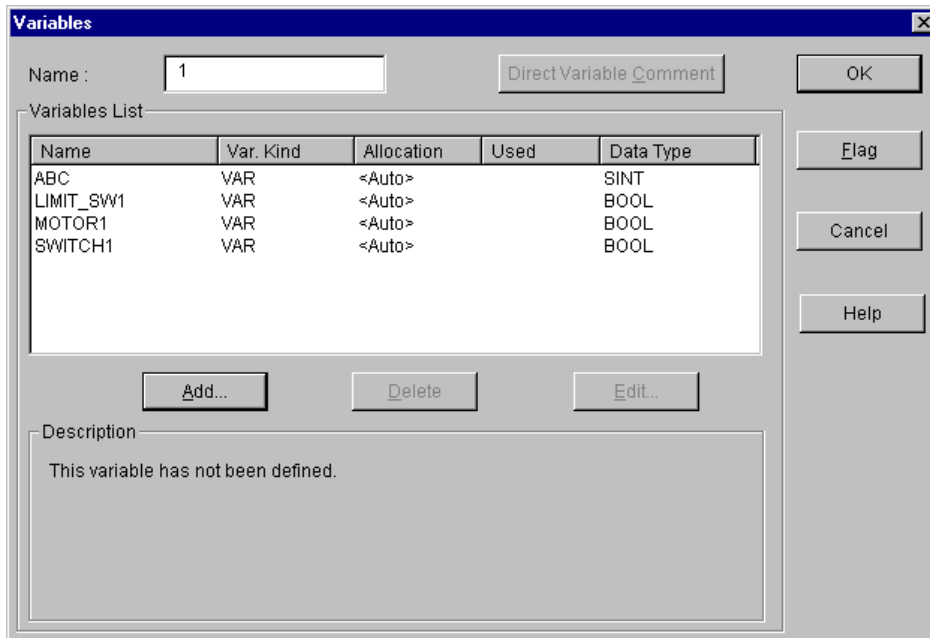

- ◆ Click **OK** button. Then Constant '1' is assigned as 'IN2' of the function 'ADD'.

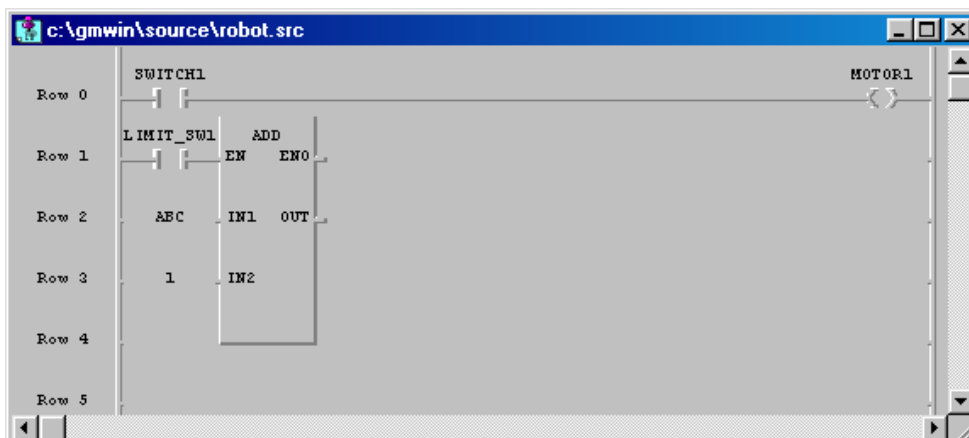

- ◆ Double-click the left button of the mouse on 'OUT' position (Row '2', Column '3') in the function 'ADD'.
- ◆ Enter the variable name 'ABC_ADD' in the edit control of *Name* in the Variables dialog box.


The 'Variables' dialog box has a title bar with a close button. It contains a 'Name' field with 'ABC_ADD' and a 'Direct Variable Comment' field. Below these is a 'Variables List' table with columns: Name, Var. Kind, Allocation, Used, and Data Type. The table lists four variables: ABC, LIMIT_SW1, MOTOR1, and SWITCH1, all with Var. Kind 'VAR' and Allocation '<Auto>'. The Data Type for ABC is 'SINT', and for the others is 'BOOL'. To the right of the table are buttons for 'OK', 'Flag', 'Cancel', and 'Help'. Below the table are buttons for 'Add...', 'Delete', and 'Edit...'. At the bottom is a 'Description' field containing the text 'This variable has not been defined.'

Name	Var. Kind	Allocation	Used	Data Type
ABC	VAR	<Auto>		SINT
LIMIT_SW1	VAR	<Auto>		BOOL
MOTOR1	VAR	<Auto>		BOOL
SWITCH1	VAR	<Auto>		BOOL

- ◆ Click *OK* button.


The 'Add/Edit Variables' dialog box has a title bar with a close button. It contains a 'Variable Name' field with 'ABC_ADD'. To the right are buttons for 'OK', 'Cancel', and 'Help'. Below the name field is a 'Variable Kind' section with a dropdown menu set to 'VAR'. Below that is a 'Data Type' section with three radio buttons: 'Elementary' (selected), 'FB Instance', and 'Array'. The 'Elementary' option has a dropdown menu set to 'SINT'. The 'FB Instance' option has a dropdown menu set to 'CTD'. The 'Array' option has a text field '(0..)' and a dropdown menu set to 'BOOL'. To the right of the 'Data Type' section is a 'Memory Allocation' section with two radio buttons: 'Auto' (selected) and 'Assign (AT)'. Below these is a text field. At the bottom is an 'Initial Value' section with a text field and an 'Init. Array...' button. At the very bottom is a 'Comments' section with a text area.

- ◆ Click *OK* button. Then the variable name 'ABC_ADD' is assigned as 'OUT' in the function 'ADD'.

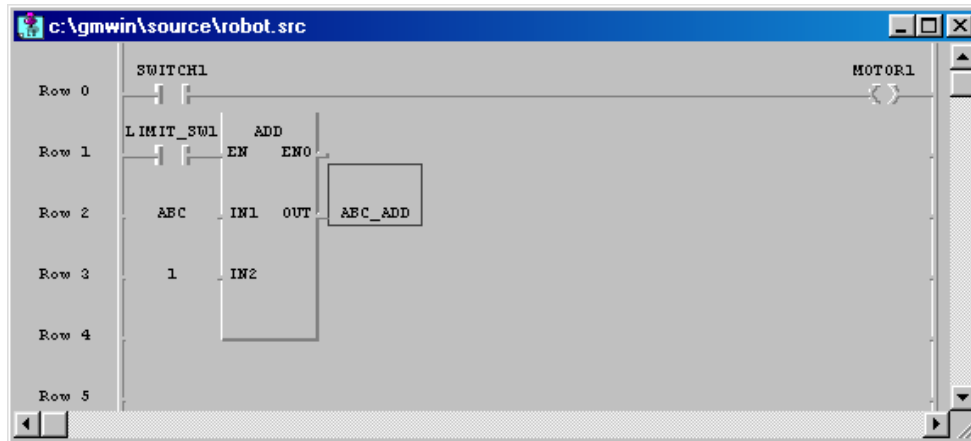


Step 4 : Compile a Program

- ◆ Select **Compile - Make** in the pull-down menu.
- ◆ Build the project file for the execution by running compiler.

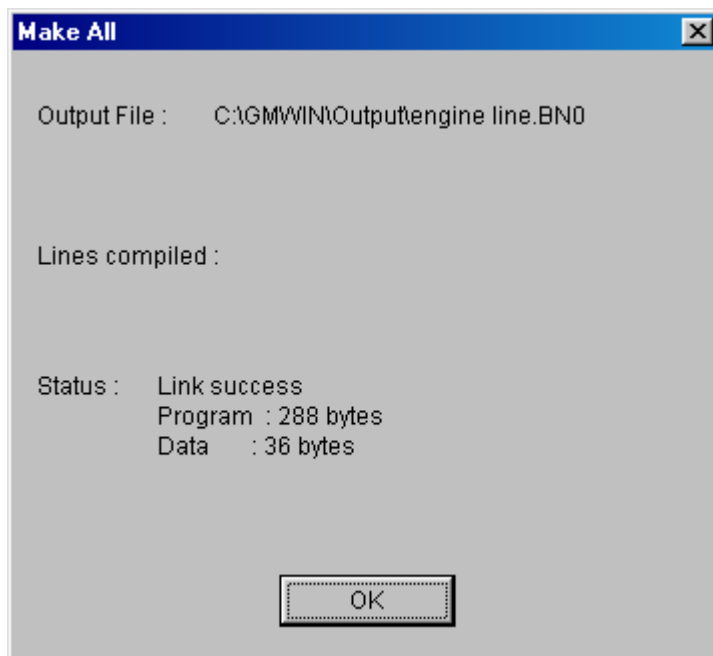


Step 5 : Download a Program


- ◆ Be sure to connect the cable between PC and PLC before downloading the program.
- ◆ Select *Online - Connect + Write + Run + Monitor On*.

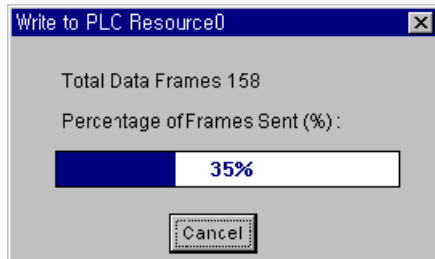

- ◆ Then the execution file is downloaded to PLC.
- ◆ After downloading the program, PLC must be 'Run' mode to enable monitoring.
- ◆ In order to turn 'SWITCH1' On forcibly, double-click the left button of the mouse on the position of the contact. Then *Force Variable* dialog box appears.

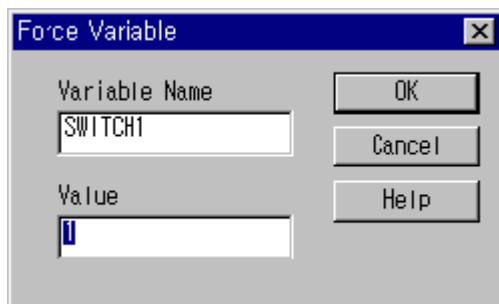


- ◆ Enter the value of the contact as '1' in the edit control of *Value* and click *OK* button.
- ◆ To turn 'LIMIT_SW1' On forcibly, execute the same order as the above.

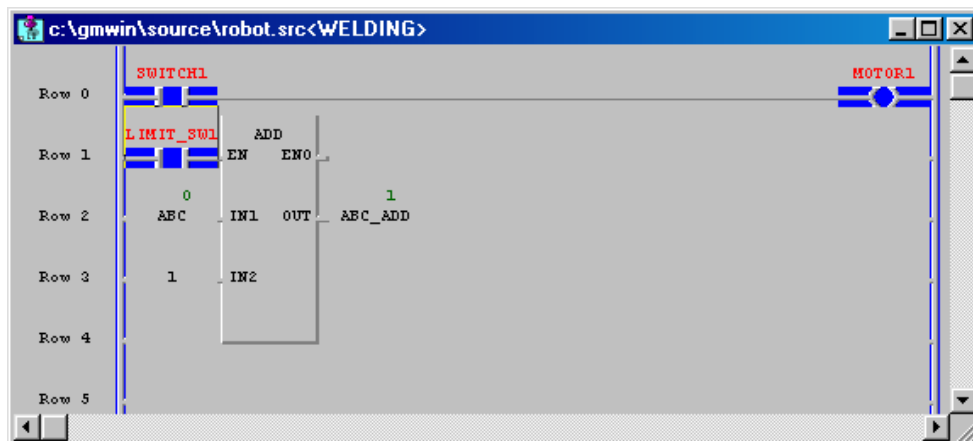


- ◆ The output coil 'MOTOR1' gets On/Off according to the condition of the input 'SWITCH1'.
- ◆ Variable 'ABC_ADD' is increased by 1 according to the result of variable 'ABC'.

3.2. Configuration of Screen

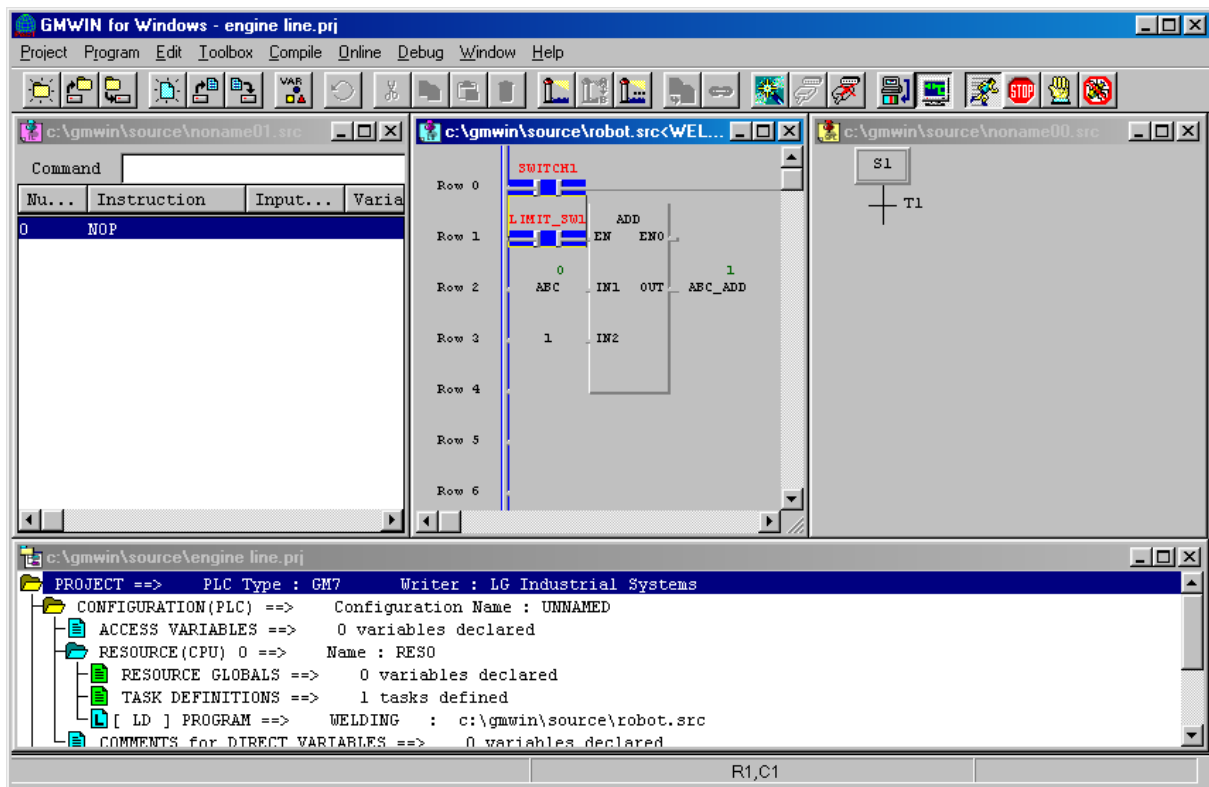

3.2.1. The Menu Bar

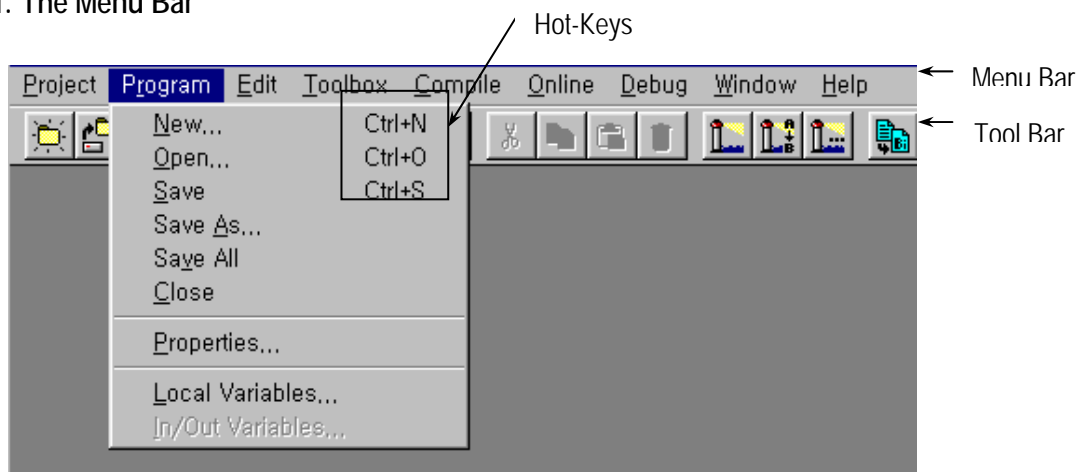

To access the pull-down menus, click on a menu using a mouse or key.
If menu item has the hot-key (Ctrl+X, Ctrl+C ...), you can select the menu directly by pressing hot-keys.

1) Project

Items	Description
New	Create a new project
Open	Open an existing project
Open From PLC	Up-load and open a project in PLC
Save	Save a project (Not program)
Save as	Save a program as another name
Close	Close a project
Add Project Item	Add new items (Program or Resource.: Resource can be added only in GM1.) to a project
Edit Project Item	Edit an item in a project
Delete Project Item	Delete items(Program, Resource) in a project
Up(Program) Ctrl+U	Exchange a program order with the upper item in the project window
Down(Program) Ctrl+W	Exchange a program order with the lower item in the project window
Edit M Region	Edit M area
Print	Print all or part of the contents in the active window
Printer Setup	Select the printer and Setup the options of the printer
Options	Setup options in GMWIN Connect Option, Monitor/Debug Option...)
Library Manager	Create or edit library files
Insert Library	Insert a library file into the project
Start Simulation	Start or stop the simulation
Exit	Quit the application

2) Program

Items	Description
New Ctrl+N	Make a new program
Open Ctrl+O	Open an existing program
Save Ctrl+S	Save a program
Save as	Save a program as another name
Close	Close a program
Properties	Change program properties
Local Variables	Show and edit local variable
In/Out Variables	Show and edit Input/Output variables for Function or Function block

In SFC Program Menu, more menus are added as below.

Items	Description
Action List	Show action lists
Transition List	Show transition lists

3) Edit

Items		Description
Undo	Ctrl+Z	Undo the last action
Cut	Ctrl+X	Cut the selection and move it to Clipboard
Copy	Ctrl+C	Copy the selection to Clipboard
Paste	Ctrl+V	Copy the selection to edit window from Clipboard
Delete	Del	Delete the selection
Find	Ctrl+F	Search for letter
Replace	Ctrl+H	Search for letter and replace with another letter
Find Again	Ctrl+F3	Run again 'Find' or 'Replace' command
Find-Move		Move a cursor to desired place

In SFC Program Menu, more menus are added as below.

Items		Description
Condense screen	Ctrl_P	Determine the rate of the screen size
Comments		Show comments of action and transition
Arrange Number		Readjust step and transition numbers

In LD Program Menu, more menus are added as below.

Items		Description
Condense screen	Ctrl+E	Determine the rate of the screen size
Variable Comments	Ctrl+M	Show comments of variable in LD window
Delete Line	Ctrl+D	Delete a line
Delete Cell	Del	Delete a cell
Insert Line	Ctrl+L	Insert a line
Insert Cell	Ctrl+I	Insert a cell

4) Toolbox

In IL mode,

Item	Description
Toolbox Type	Open/close a toolbox and adjust a position of toolbox

In LD mode,

Items		Description
Function	F2	Insert a function
Function Block	F3	Insert a function block
Label	F4	Insert a label
Operator	F5	Insert an operator
Delete	F6	Delete one line of program
Variable Comment	F7	Show or hide comment column
Insert/Overwrite	F8	Change a mode (Toggled)

Insert contact, coil, function, function block, jump, return and etc.

In SFC mode,

Items		Description
Step	F2	Insert a step or transition
Branch	F3	Insert a selective or simultaneous branch
Action/Transition	F4	Define a name of action or transition including Qualifier
Label	F5	Insert a label
Jump	F6	Insert a jump
Zoom	F7	Open action or transition window
Arrow Mode	Ctrl+A	Switch to Arrow mode

In monitoring mode for LD and IL,

Item	Description
Select Array Subscript	Specify array index for monitoring

In Variable monitoring mode,

Items		Description
Start/Stop	F2	Select start/stop mode for monitoring
View	F3	Select an information of the variable to monitor
Force	F4	Enter the specified value for variable forcibly
Select	F5	Select a variable to monitor
Display Form	F6	Show the variable to be monitored with hexadecimal or decimal format selectively
Array Number select	F7	Specify array range of variable for the type of Array

In Time Chart monitoring mode,

Items		Description
Start/Stop	F2	Select start/stop mode for monitoring
View	F3	Select an information of the variable to monitor
Force	F4	Enter the specified value for variable forcibly
Select	F5	Select a variable to monitor
Time	F6	Select the period to monitor

In case of monitoring I/O

Items		Description
Select Base	F2	Select a base board to monitor
Start/Stop	F3	Select start/stop mode for monitoring

Chapter 3. Getting Started

5) Compile

Items	Description
Compile	Compile a program
Make	Build a PLC execution file after compiling an active program in a project
Build All	Make a PLC execution file after compiling all programs in a project
Message	Show an error message after compiling
Memory Reference	Show used global or direct variables

6) Online

Items		Description
Connect+Write+Run+Monitor On Ctrl+R		Connect GMWIN to PLC, write a program created by user, change the operation mode and monitor it
Connect		Connect GMWIN to PLC
Disconnect		Disconnect GMWIN from PLC
Read		Read PLC data
Write		Write to PLC
Monitor	Monitor On/Off	Start monitoring / Stop monitoring
	Variable Monitor	Monitor variables
	I/O Monitor	Monitor I/O's
	Time Chart Monitor	Monitor Boolean variables in time chart format
	Link Parameter Monitor	Monitor High speed link parameter
Mode Change		Change PLC operation mode
Data Clear		Clear PLC data as '0'
Reset		Reset CPU of PLC
Flash Memory		Show the type of the flash memory in CPU Write data on a flash memory
Link Enable		Enable or disable the execution of the high speed link
PLC Info		Show PLC information
I/O Info		Show the information of PLC I/O's
I/O Forcing		Setup the forced I/O
Link Info		Show the information of link module
Comm Info		Show the information of communication status
Mnet Parameter		Show the information of Mnet parameter
Mnet Info		Show Mnet information
I/O Skip		Specify I/O to skip
Fault Mask		Set Fault Mask
Initialize Special Modules		Initialize Special Modules
Start Online Edit		Select a target source
Write for Online Edit		Compile and write for Online Edit
Cancel Online Edit		Cancel current Online Edit
Data Share		Share the data for monitoring

7) Debug

Items	Description
Debug Start/Stop	Start/stop debugging (Toggled)
Go Ctrl+F9	Start or continue the program execution
Step Over Ctrl+F8	Step over the next statement
Step Into	Step into the next statement
Step Out	Step out of the current function or function block
Pause	Pause the program execution
Run to Cursor Ctrl+F2	Run to cursor position
Add/Remove Breakpoint Ctrl+F5	Insert or remove a breakpoint
Breakpoint List/Condition	Show breakpoints and break conditions
Task Enable	Enable or disable the task execution

8) Window

Items	Description
Cascade	Arrange the windows as overlapping tiles
Tile Horizontally	Arrange the windows as horizontal, non- overlapping tiles
Tile Vertically	Arrange the windows as vertical, non-overlapping tiles
Arrange Icons	Arrange icons
Close All	Close all active windows


3.2.2. The Tool Bar



Tool Bar buttons represent single action functions that you can perform by simply clicking on the appropriate button.

Tool	Comment	Tool	Comment
	New Project		Connect + Write + Mode Change To Run + Start Monitor
	Open Project		Connect
	Save Project		Disconnect
	New Program		Write
	Open Program		Monitor Start/Stop
	Save Program		Run
	Local Variable		Stop
	Undo		Pause
	Cut		Debug Start
	Copy		Debug Run
	Paste		Step Over
	Delete		Step Into
	Find		Step Out
	Replace		Pause
	Find Again		Run to Cursor
	Compile		Add/Remove Breakpoint
	Make Execution File		

3.2.3. The Toolbox

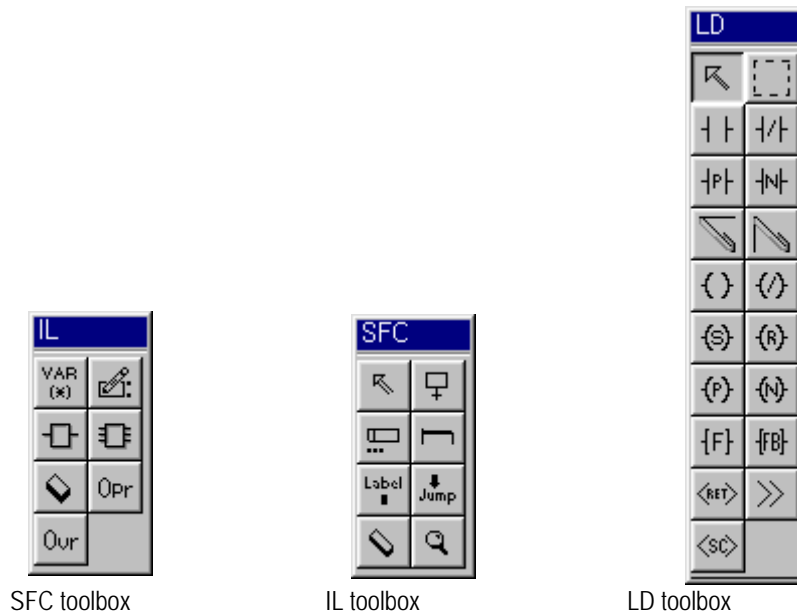

You can create or edit a program using the toolboxes for each language.
 You can also execute the same function as the toolboxes by clicking **Toolbox** in the pull-down menu.
 You can change the position of the toolbox or the property by selecting **Toolbox - Toolbox Type** in the pull-down menu.


3.2.4. The Status Bar



- 1) Description Mode
Describes the function of the command or menu.
- 2) PLC Mode
Shows PLC type, PLC operating mode, Monitoring mode and more.
- 3) Cursor Position
Shows the location of the cursor in the screen as Row/Column.
- 4) Status of GMWIN
Shows the status of GMWIN(Edit mode, Monitor mode and Debug mode).

3.3. How to use a Dialog Box

Edit control, OK/Cancel/Help button, Option and List Box are in dialog box so you can define a required value or input.

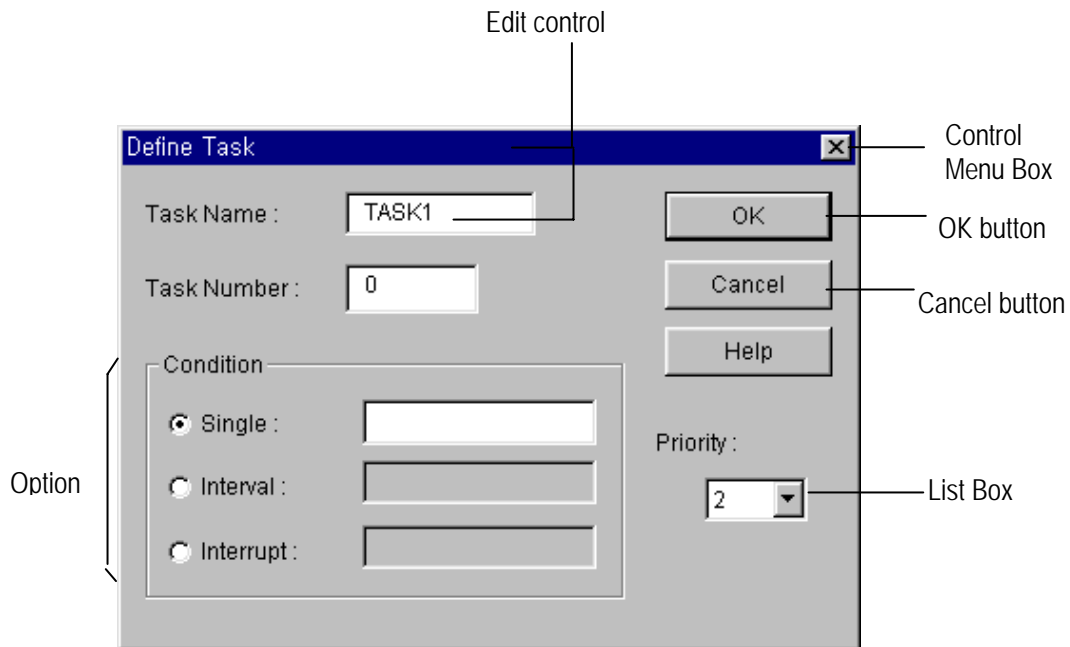

Edit control	: Enter a required name or letter.
Option Radio Button	: It is used to select only one in the same group.
List Box	: Click a mouse on a desired item.
OK button	: List is appeared by clicking a mouse on arrow in list box and you can select a list by clicking.
Cancel button	: Click OK button to close a dialog box after entering a designated value.
	: Click Cancel button or double-click a mouse on adjustment menu box to cancel the setup and close the dialog box.

3.4. Files being created in GMWIN

If a user create a PLC execution file through building a project and editing a program, the following files are created.

- <Project Name>.PRJ : Project file created by user.
- <Project Name>.BNO : PLC execution file.
 - In GM1, files are created as many as resource.
 - <Project Name>.BNO ~ <Project Name>.BNi,(i is resource number).
- <Project Name>.MON : Information file for Monitoring.
- <Project Name>.CRO : It is created when user builds a PLC execution file.
 - It is the text file that expresses the global or direct variable used in each program (Cross Reference).

<Program Name>.SRC: Program file created by user

<Program Name>.ASV: Program created by user is saved as this name periodically.

To create this file, you must setup the time value by setting up the time cycle in **Option - Auto Save** in the pull-down menu. This file is deleted automatically by closing a program window normally.

<Program Name>.OP?: It is created as object file when user compiles a program.
(in case of Program Block)

<Program Name>.OB?: It is created as object file when user compiles a program.
(in case of Function Block)

<Program Name>.OF?: It is created as object file when user compiles a program.
(in case of Function)

Example (OP3 : program block for GM3, OF4 : Function for GM4)


3.5. Open a File

To open a Project

- ◆ Select **Project - Open** in the pull-down menu.

To open a Program

- ◆ Select **Program - Open** in the pull-down menu.

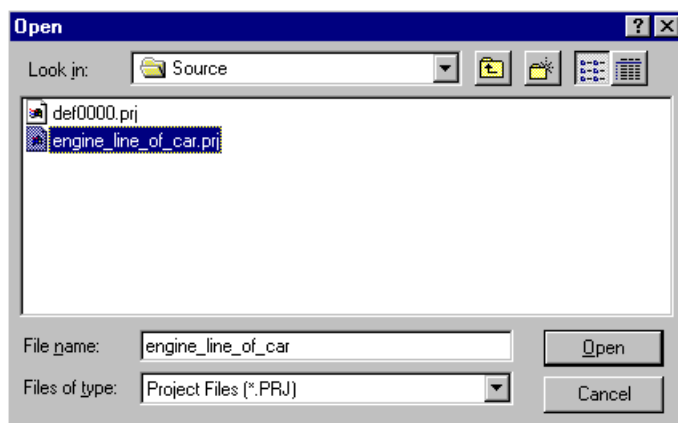

- ◆ Look in the folder to open and select the file to open
List box displays only files having an extension name selected in **Files of type** list box.
(Project File : *.PRJ, Program File : *.SRC)
- ◆ Click **Open** button.

3.6. Save a File

3.6.1. Save a New File

Save a new file that is not ever saved.

To save a Project

- ◆ Select **Project - Save** in the pull-down menu.

To save a Program

- ◆ Select **Program - Save** in the pull-down menu.
- ◆ Select a drive and folder to save the file.
- ◆ Enter a file name in the **File Name** text box.
 - Input a **PRJ** extension for Project File and a **SRC** extension for Program File.
- ◆ Click **Save** button.

3.6.2. Save a File on Working

To save a project

- ◆ Select **Project - Save** in the pull-down menu.

To save a program

- ◆ Select **Program - Save** in the pull-down menu.

3.6.3. Save as another name


You can save a project or program as another file name.

To save a Project

- ◆ Select **Project-Save as...** in the pull-down menu.

To save a Program

- ◆ Select **Program - Save as...** in the pull-down menu.

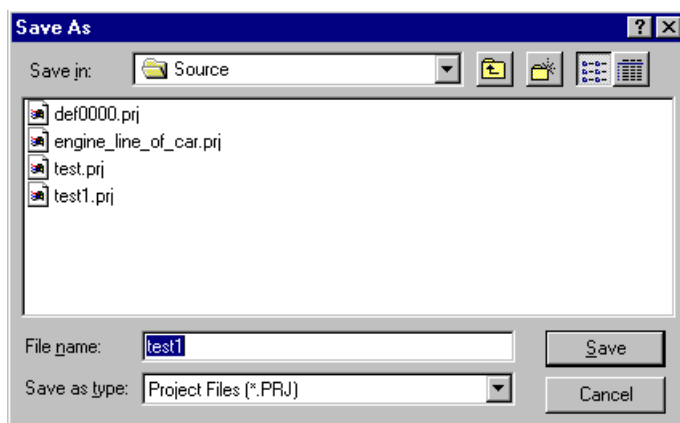

- ◆ Select a drive and folder to save the file.
- ◆ Enter a file name in the *File Name* text box.
Input a *PRJ* extension for Project File and a *SRC* extension for Program File.
- ◆ Click *Save* button.

3.7. Close a File

<Method 1>

Click a mouse on the Adjustment Menu Box on the right-upper corner of the active window.

<Method 2>


To close a Project

- ◆ Select *Project - Close* in the pull-down menu.

To close a Program

- ◆ Select *Program - Close* in the pull-down menu.

If the file was not saved, then following dialog box appears.

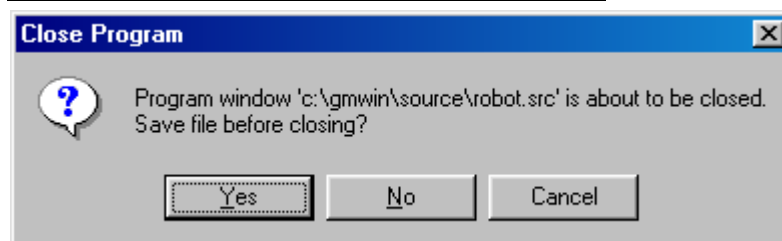

To save a file

- ◆ Click *Yes* button.


Not to save a file

- ◆ Click *No* button.

- ◆ Click *Cancel* button to cancel

Chapter4 Edit a Project



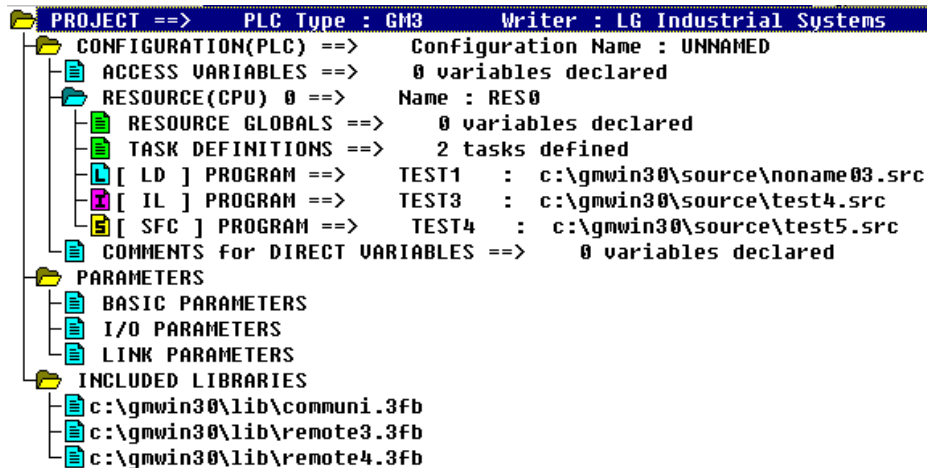

Project is a basic element of GLOFA PLC. Basically, one project can be created for each PLC system. Project consists of Configuration part, Parameter part and Included Library files. Configuration part is software part such as Global variables, Access variables, Resource contents and etc.. Parameter part is a hardware part such as basic parameters, I/O parameters, link parameters and etc. And Library files can be added or deleted in Included Library Files part.



Items	Descriptions
Project	Define all the PLC systems
Configuration	Set definition about PLC program
Configuration Global Variable	Variable which can be used in the configuration
Access Variable	Accessible variable list from other Configurations
Resource	CPU module
Resource Global Variable	Variable which can be used in all resources within a project
Task Definition	Definition of program executive conditions
Program Definition	Definition of each program and it's executive conditions
Direct Variable Comment	Comment list using in direct variable
Parameter	Defined content for the hardware in PLC system
Basic Parameter	Definition of basic hardware parameter
I/O Parameter	Described content on input/output module
High Speed Link Parameter	Described content on high speed link parameters
Redundancy Parameter	Described content on input/output circuit and fault mask (for GMR only)
Communication Parameter	Described content on communication (for GM7 only)
Included library files	File list for currently used libraries


Reference: How to use folder

You can use the tree list to see briefly or detail tree list by clicking a mouse or pressing the right/left arrow key.

-  : Opened folder. If you click this folder, it changes into closed folder and lower branch is disappeared.
-  : Folder that can be opened. If you click this folder, it changes into opened folder and lower branch is appeared
-  : Unable to open folder (it describes an item).
-  : This folder means each item.

4.1. Create a Project

- ◆ Select *Project - New Project* ().

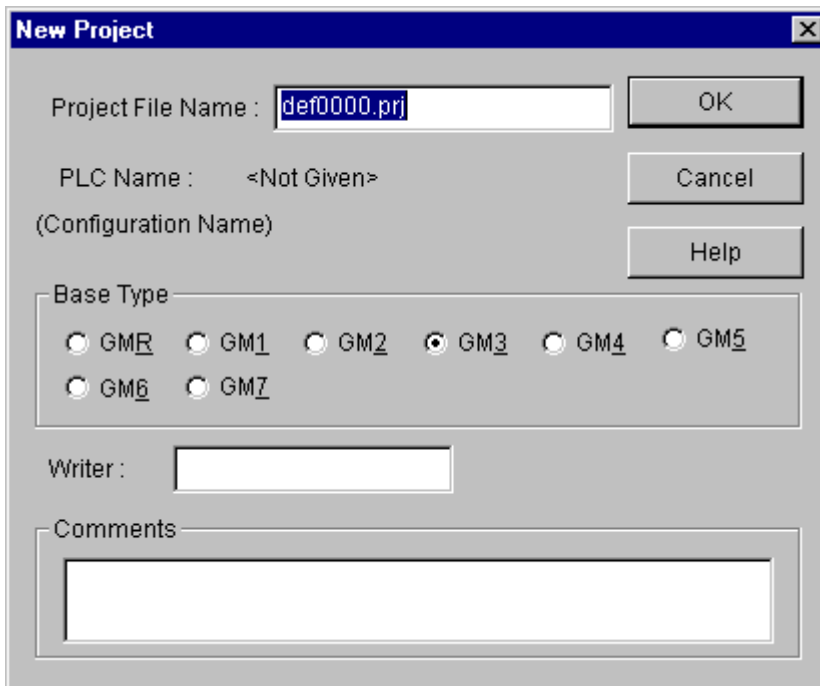


The **New Project** dialog box contains the following fields and controls:

- Project File Name :** A text box containing "def0000.prj".
- PLC Name :** A text box containing "<Not Given>".
- (Configuration Name)** : A label for the PLC Name field.
- Base Type** : A group box containing seven radio buttons labeled GMR, GM1, GM2, GM3, GM4, GM5, GM6, and GM7. GM3 is selected.
- Writer :** An empty text box.
- Comments** : A large empty text area.
- Buttons** : OK, Cancel, and Help buttons are located on the right side of the dialog.

- ◆ Enter the Project File Name.
- ◆ Select *Base Type* option radio button.
- ◆ Input the writer name in the *Writer* text box.
- ◆ Input the comment in the *Comments* text box.
- ◆ Click *OK* button. Then *Define Program* dialog box appears.
(Refer to the section 5.1 for more information of *Define Program* dialog box)


4.2. Open a Project


- ◆ Select *Project - Open...* ().

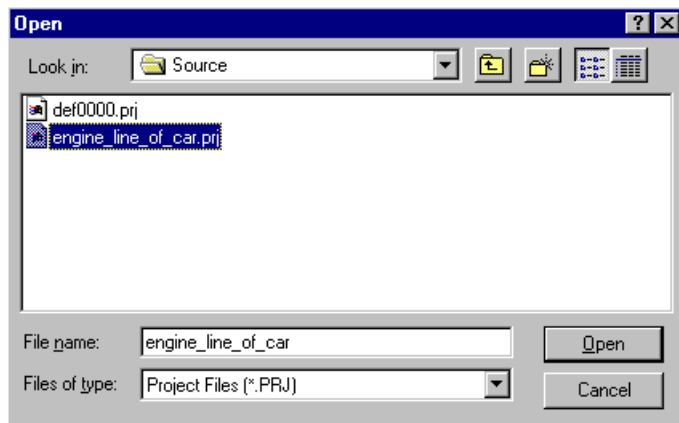

- ◆ Select a desired project and click *Open* button.

4.3. Save a Project

- ◆ Select *Project - Save* (). If you save already existing project file, no message will be displayed.
- ◆ If you save a new file or save by selecting *Project - Save As...*, a dialog box will be displayed as below.

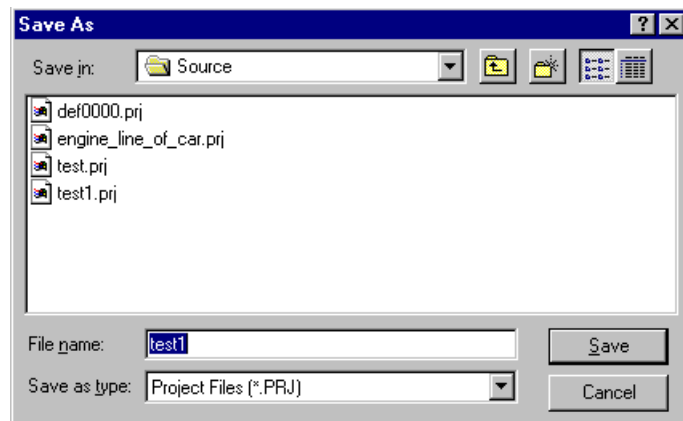

- ◆ Enter the file name that you want to save and click *Save* button.

4.4. Edit Configuration

To edit configuration, double-click on the each list of tree list or select *Project - Edit Project Item*.

4.4.1. Edit a Project

 **PROJECT ==> PLC Type : GM3**

- ◆ Select *Project* in the lists of Project window(or double-click Project in the Project window)
- ◆ Select *Project - Edit Project Item* in the pull-down menu.
- ◆ Edit the project with the same way used in section 4.1.
- ◆ Click *OK* button.


Note

If you change PLC type, you must reload library (besides standard library) selectively.
(Refer to detail comment in "10.2 load Library ")



4.4.2. Edit Configuration Item

 **CONFIGURATION(PLC) ==> Configuration Name : UNNAMED**

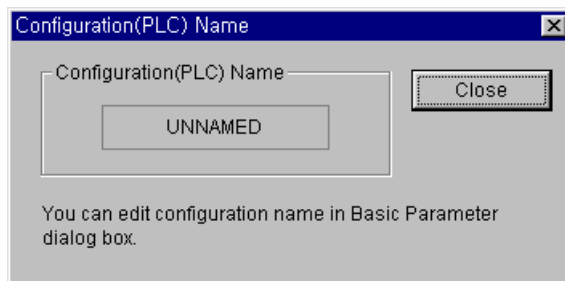The *Configuration Item* in Project window shows the name of configuration that you selected.
Configuration name can be edited in *Basic Parameters* (refer to the section 4.5.1).




4.4.3. Edit a Configuration Global Variable

 **CONFIGURATION(PLC) ==> Configuration Name : UNNAMED**
 **CONFIGURATION GLOBALS ==> 0 variables declared**

Configuration Global Variable can be used commonly for all programs in several resources.
So, it can be used only in GM1 that several resources can exist in.

- ◆ Select *Configuration Globals* in the Project window list.
- ◆ Select *Project - Edit Project Item*(or double-click the Configuration Globals in the Project window).

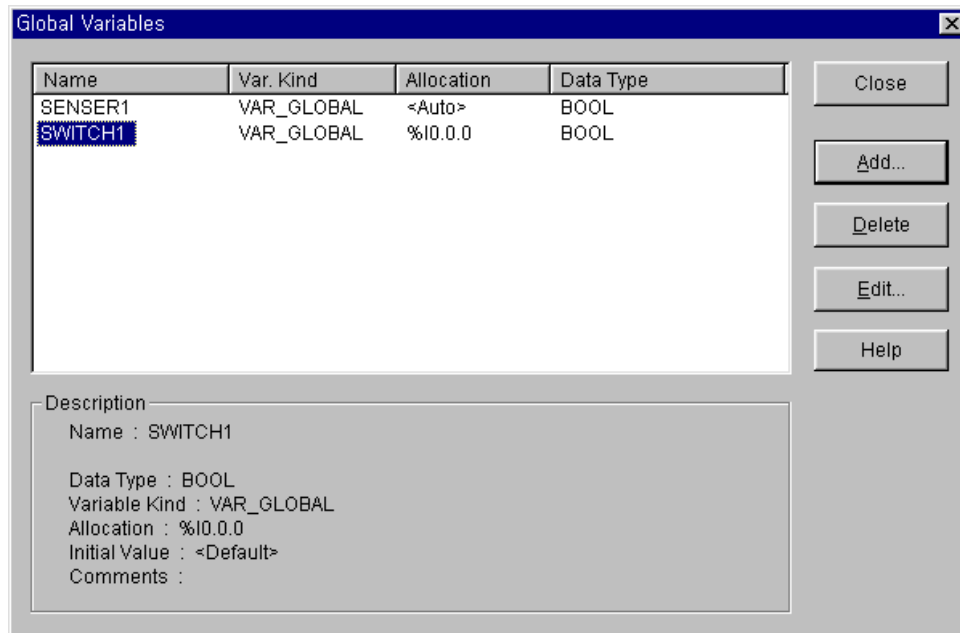

Description item in the above dialog box shows the content of the selected global variable in detail.

1) Add a Configuration Global variable

- ◆ Click the **Add...** button in the above dialog box.
- ◆ Enter the Variable name in the **Add/Edit Global Variables** text box.

- ◆ Select Variable type in the **Variable Kind** list box.
- ◆ Select Data Type for Variable at list box or option radio button.
- ◆ Select Memory Allocation for Variable by option radio button in **Memory Allocation**.
- ◆ If you want to set an initial value, type it in the **Initial Value** text box.
- ◆ Enter the comment in the **Comments** text box.
- ◆ Click **OK** button.

2) Delete Configuration of Global Variable

- ◆ Select item to delete in the **Global Variable List** box .
- ◆ Click **Delete** button.


3) Edit Configuration of Global Variable

- ◆ Select item to edit in the **Global Variable List** box.
- ◆ Click **Edit** button.
- ◆ Enter the data in the same way to insert.

4.4.4. Edit Access Variable


An access variable is used to protect the data besides declared as access variable, when other PLC(i.e. other configuration) read or write to it's own PLC, it allows you to constrain read/write access authority.

- ◆ Select **Access Variable** at the list in Project window.
- ◆ Select menu **Project - Edit Project item**(or double-click **Access Variable** in the Project window).

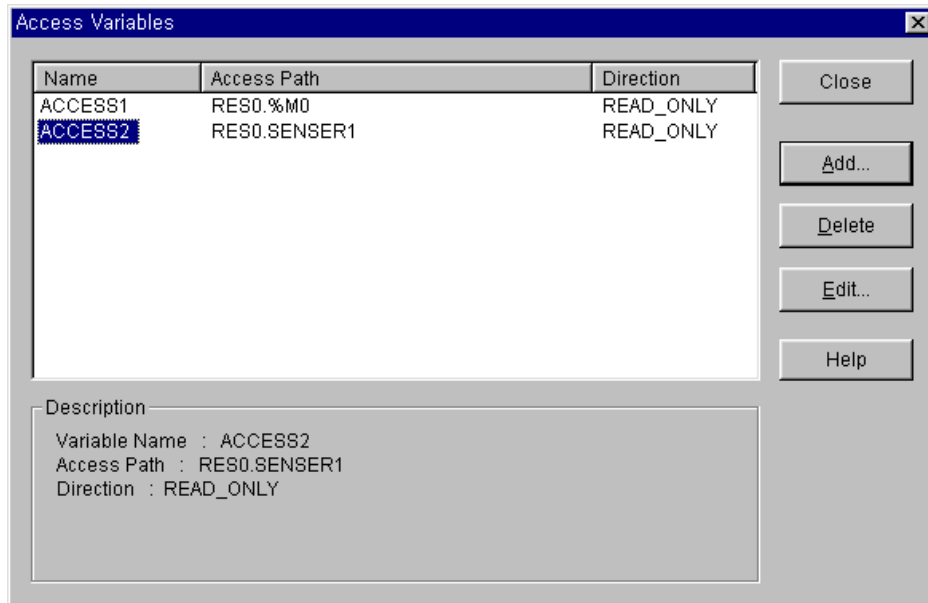

1) Insert Access Variable

- ◆ Click the **Add...** button.

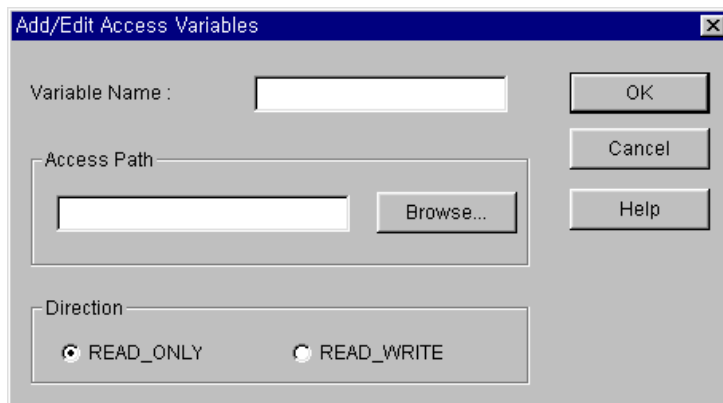

- ◆ Type the Variable Name in the **Access Variable Name** text box.
The name is available only Capital Letter.
- ◆ Select or enter the Access Path in the **Access Path** text box.

For example,


In GM1

Available Input for Access path	Example
Configuration Global Variable	A, VALVE1
Resource Global Variable	Resource Name. Global Variable name --> RES1.a
Direct Variable	Resource Name. Direct Variable --> RES1. %10.0.0

In GM2 ~ GM7

Available Input for Access path	Example
Resource Global Variable	Use only Global variable name ---> A
Direct Variable(excluding GM1)	Use only Direct Variable --> %10.0.0

- ◆ You can also select the **Access Path** by clicking **Browse** button.

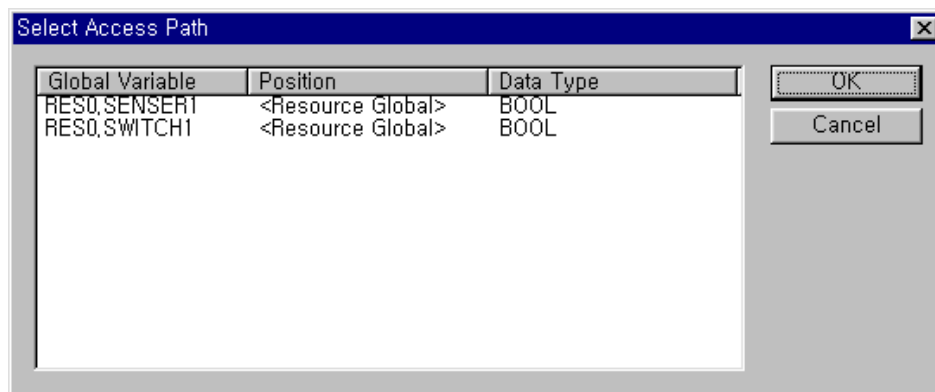


- ◆ Select the **Access Authority** option button. (Choose one of the Read or Read/Write)
 - ◆ Click **OK** button.
- 2) Delete Access Variable
- ◆ Select an item to delete in **Access Variable List** box.
 - ◆ Click **Delete** button.
- 3) Edit Access Variable
- ◆ Select an item to edit in **Access Variable List** box.
 - ◆ Click **Edit** button.
 - ◆ Enter in the same way to insert access variable, and click **OK** button.

4.4.5. Edit Resource

Resource is a CPU for PLC. So, you can use maximum 4 resources in GM1 when you configure a multi-CPU.(for others, only one resource is available.)

1) View Resource Name

You can see the Resource name defined by user at *Resource* item of the Project window. You can edit a resource name in the "*Edit Basic Parameter*".

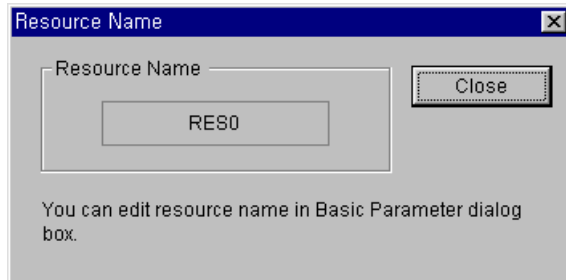

2) Add Resource (only available for GM1)

- ◆ Select *Configuration* in Project window.
- ◆ Select *Project - Add Project Item - Resource*.
- ◆ Enter a resource name in the *Resource Name* text box.
- ◆ Click *OK* button
- ◆ Now, new resource is added to the Project Window and *Define Program* dialog box appears as like creating a new project.

3) Delete Resource (only available for GM1)

- ◆ Select Resource to delete.
- ◆ Select *Project - Delete Project Item*.


4.4.6. Edit Resource Global Variable

Resource Global Variable can be used for the all programs in the resource. The process for editing is same as Global Variable.

4.4.7. Define Task


Task defines the executive condition of a program. Its types are single, Interval, interrupt and etc.

- ◆ Select *Define Task* in Project window.
- ◆ Select *Project - Edit Project Item*.

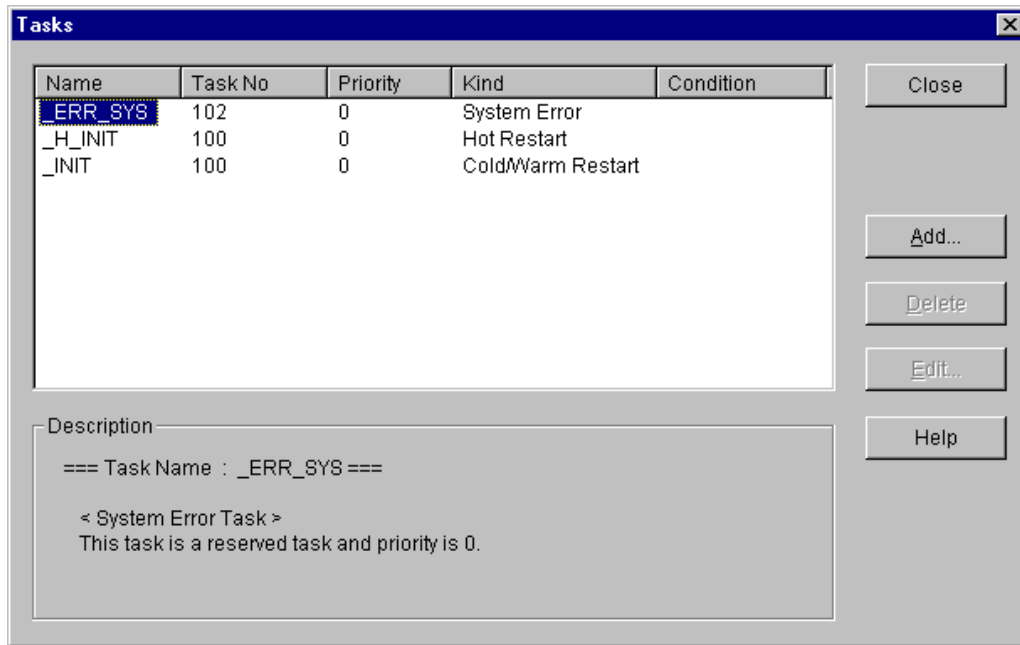

1) Add Task

- ◆ Click the **Add...** button.

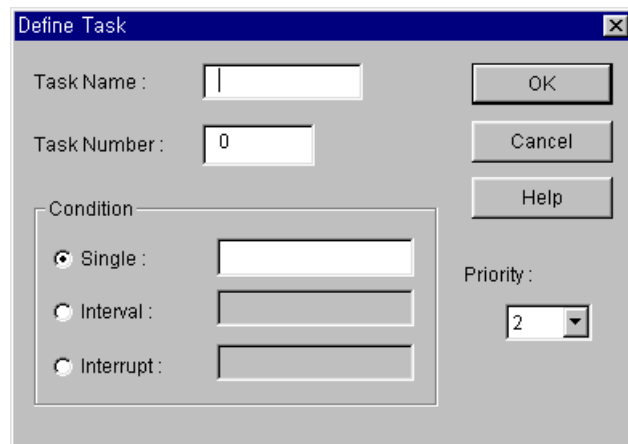

- ◆ Type the task name in the **Task Name** text box.
- ◆ Enter following number for the executive condition in the Task Number text box.

Executive Condition	Task Number
Interval	0 ~ 31
Interrupt	32 ~ 47 (GM4, 5 : 32 ~ 39)
Single	48 ~ 63

In case of interrupt, interrupt number and the designated task number is fixed automatically.
The task number of GM6 and GM7 is setup automatically under the priority order.
GM6 and GM7 can have 8 tasks including Interval, Interrupt and Single.

Variable name for single, duration time for interval and input position of interrupt card for interrupt are represented as a number.

a) In case of Single

Boolean in the Resource Global Variable	A, VALVE1, etc.
Boolean in the Direct Variable	%IX0.0.0, %QX0.1.1, %MX10, etc.

b) In case of Interval

A constant for the duration time	T#10S, T#1H10M10S10MS, etc.
----------------------------------	-----------------------------

c) In case of Interrupt

Interrupt Number (GM1 ~ 3 : 0 ~ 15, GM4 ~ 7 : 0 ~ 7)	0, 1, 2 ... 15
--	----------------

- ◆ Select priority in the **Priority** list box. You can select priority number from 0 to 7, and smaller number has higher priority.
- ◆ Click **OK** button.

2) Delete Task

- ◆ Select an item to delete in the **Define Task** list box.
- ◆ Click **Delete** button.

3) Edit Task


- ◆ Select an item to edit in the **Define Task** list box.
- ◆ Click **Edit** button.
- ◆ Enter in the same way to add a task, and click **OK** button.

4.4.8. Define a Program

The defined program in this process is the real program to be executed in PLC.
There are 2 kinds of program, one is scan program and the other is task-defined program.
When several scan programs exist, they execute the program in the defined order.
And the program defined as task is executed according to the condition of the task.

1) Add a Program

- ◆ Select **Project - Add Project Item - Program** in the pull down menu.
- ◆ And the dialog box appears as below.

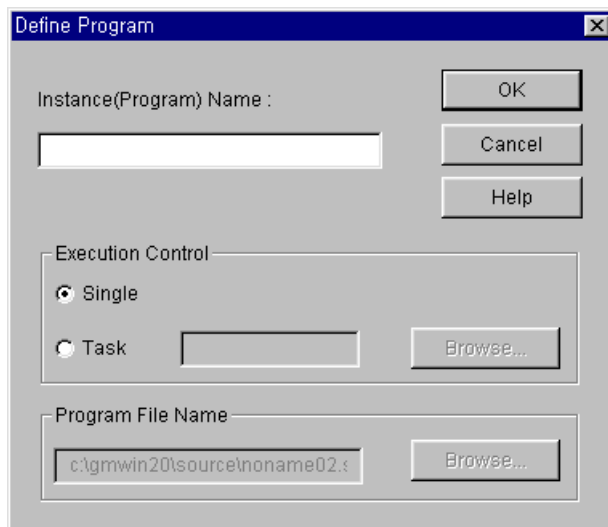

- ◆ Enter the instance(Program) name in **Instance Name** text box.
- ◆ Choose one between scan program(**Single**) and define task program(**Task**) in the **Execution Condition** option.
- ◆ In case of task-defined program, you can enter the task name directly in the **Task** text box. In other way, you can select one of the tasks already defined in the **Task List** dialog box by clicking Browse button, and click **OK** button.
- ◆ Input the program name(～.SRC) in the **Program File name** text box. If there is a program already created, click **Browse** button and select file in the **Task List** dialog box.
- ◆ Click **OK** button.
- ◆ Then new program is added into the Project window.

2) Delete Program

- ◆ Select a program to delete.
- ◆ Select **Project - Delete Project Item**.

3) Edit Program

- ◆ Select **Program** in Project window.
- ◆ Select **Project - Edit Project Item**.
- ◆ Edit data in the same way to add a program, and click **OK** button.

4) Change Program Order

- ◆ A program execution order is set as the order(from up to down) in the project tree list.


To change the order,

- ◆ Select a program item at the list in project window.
- ◆ Change order step by step using **Project - UP(Program)** or **Project - Down(Program)**.

4.4.9. Comment of Direct Variable


Comment of Direct Variable allows you to explain on Direct Variable, and it is exactly same as content in the program comments windows.

- ◆ Select *Comments for Direct Variables* at the list in Project window.
- ◆ Select *Project - Edit Project item* in the pull-down menu.

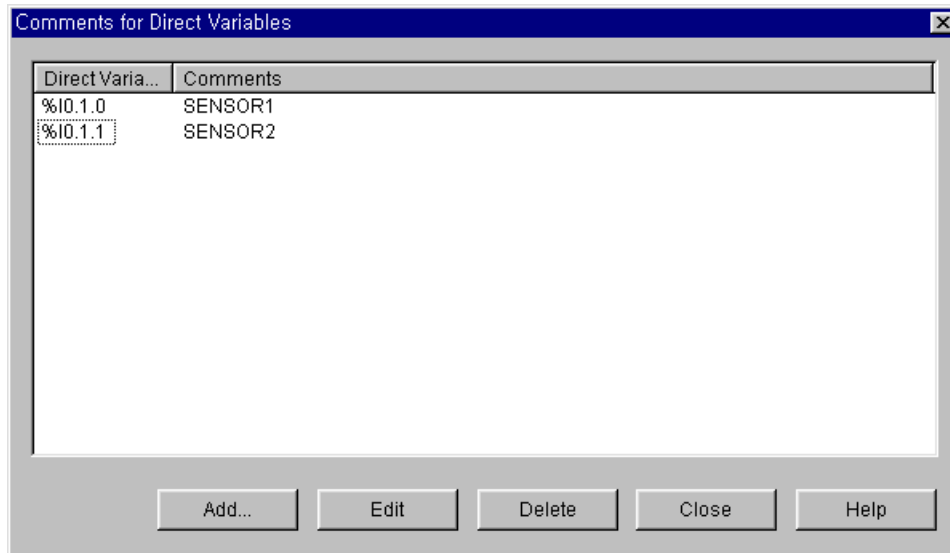


1) Add Direct Variable Comment

- ◆ Click the *Add...* button.

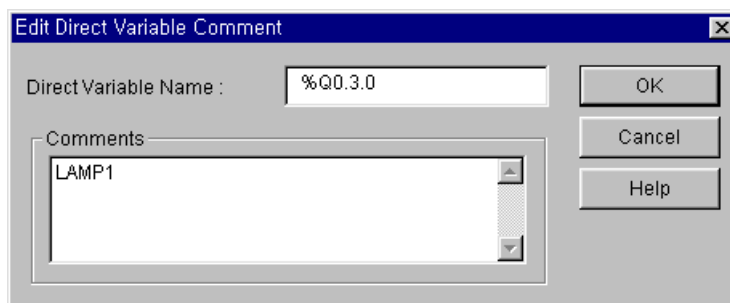

- ◆ Type the Direct Variable name in the *Direct Variable name* text box (%I0.3.0).
- ◆ Enter the comment in the *Comment* text box.(LAMP1).

- ◆ Click *OK* button.

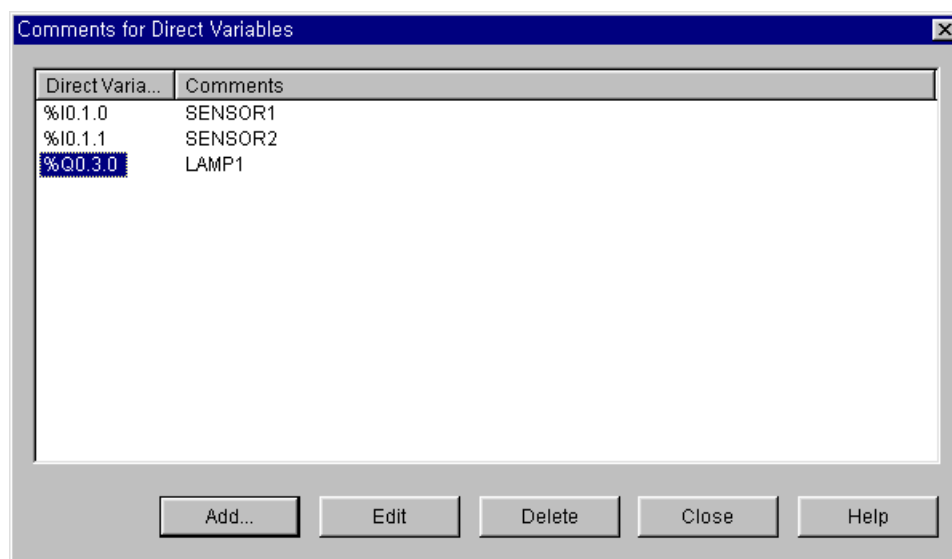

2) Delete Comment for Direct Variables

- ◆ Select an item to delete in the *Comment for Direct Variables* list box.
- ◆ Click *Delete* button.

3) Edit the Comment for Direct Variable

- ◆ Select an item to edit in the *Comment of Direct Variable* list box.
- ◆ Click *Edit* button.
- ◆ Enter data in the same way to add a comment, and click *OK* button.

4.5. Edit a Parameter

Type of parameter : "Basic Parameter", "I/O Parameter" and "Link Parameter".

4.5.1. Edit Basic Parameter

To set Basic Parameter,

- ◆ Double-click on the "*Parameters - Basic Parameters*" in Project window, or move a cursor to "*Parameters - Basic Parameters*" and Select "*Project - Edit Project Item*".

Basic Parameter

Configuration(PLC) Name: UNNAMED

PLC Ver.: v1.6 ☒ Remote Access Right

☐ Hot Restart
hr min sec

Restart Mode
☒ Cold Restart
☐ Warm Restart

Resource(CPU) Property

	Name	Scan W.D Timer
Resource 0	RES0	200 ms

OK Cancel Help

PLC type (GM2 ~ GM5)

Basic Parameter

Configuration(PLC) Name: UNNAMED

PLC Version : v1.0 ☒ Remote Access Right

☐ Hot Restart
hr min sec

Restart Mode
☐ Cold Restart
☒ Warm Restart

Multi CPU Running Mode
☒ Scan Synchronous
☐ Scan Asynchronous

Resource(CPU) Properties

	Name	WatchDog Timer Duration
Resource 0	RES0	200 ms
Resource 1	RES1	200 ms
Resource 2		ms
Resource 3		ms

OK Cancel Help

PLC type (GM1)

Basic Parameter

Configuration(PLC) Name: UNNAMED

PLC Ver.: v1.0 ☒ Remote Access Right

☐ Can't pause by key

Restart Mode

☐ Cold Restart

☒ Warm Restart

Communication

Station Number: 0

Baud Rate: 19200

☐ Master ☒ Slave

TimeOut: 50 *10m:

☐ Read Status of Slave PLC

Resource(CPU) Property

Name	Scan W.D Timer
Resource RES0	200 ms

OK Cancel Help

PLC type (GM6)

Basic Parameter

Configuration(PLC) Name : UNNAMED

PLC Ver.: v1.0 ☒ Remote Access Right

☐ Can't pause by key

Restart Mode

☐ Cold Restart

☒ Warm Restart

Input Property

Software On/Off Delay Time:

8 ms

Pulse Catch Input (%I0.0.x):

0	1	2	3	4	5	6	7
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Resource(CPU) Property

Name	Scan W.D Timer
Resource RES0	200 ms

Ok Cancel Help

PLC type (GM7)

- ◆ Enter the PLC name in the "**Configuration (PLC) Name**" text box.
You can form PLC name with maximum 8 characters of alphabets and numbers.
And it becomes a configuration name.
- ◆ "**Applied PLC Ver**" shows you available PLC version in the GMWIN Version.
- ◆ Setup the permission of the remote access in "**Remote Access Right**" check box.
(Default : permission)
- ◆ Set Hot Restart option. If the "**Hot Restart**" option is checked, hot restart will be operated.
Then you must set the hot restart time, and you can set it from " 1 second" to "23 hour 59 minute 59 second" with second scale.
- ◆ Set Cold Restart or Warm Restart by clicking option radio box in **Restart Mode**.
- ◆ Choose one mode of scan synchronization and scan synchronization in the GM1 Multi CPU system by clicking option radio button in the "**Multi- CPU Running Mode**". (available for only GM1)
- ◆ Type the resource name in the text box of "**Set Resource(CPU) Properties**".
Resource name is formed with 8 characters of alphabet and digit.
- ◆ Set the watchdog time in the text box of "**Watchdog Timer Duration**".
Maximum time is "65535 ms" with "1 ms" scale. (GM7 : Max. 5000ms)
- ◆ In GM7, you can set 'Software On/Off Delay Time' and 'Pulse Catch Input (%I0.0.x)' in Input property box. Please refer the GM7 user's manual for details.


Note

1. Refer to the PLC User Manual about Remote Access Authority, Restart and %M area.
2. In case of GM1, it is available for resource 0 ~ 3.
3. In case of GM1, it has Multi-CPU Running setting mode.
4. In case of GM5, it has RS-422 speed setting mode.
5. In case of GM6, it has computer network setting mode.
6. In case of GM7, it has input property setting mode.
7. In case of GM6 and GM7, they do not support hot restart function.


4.5.2. Set I/O Parameter

To set the I/O Parameter,

- ◆ Double-click on the "**Parameters - I/O Parameters**" in Project window, or move a cursor to "**Parameters - I/O Parameters**" and select "**Project – Edit Project Item**".

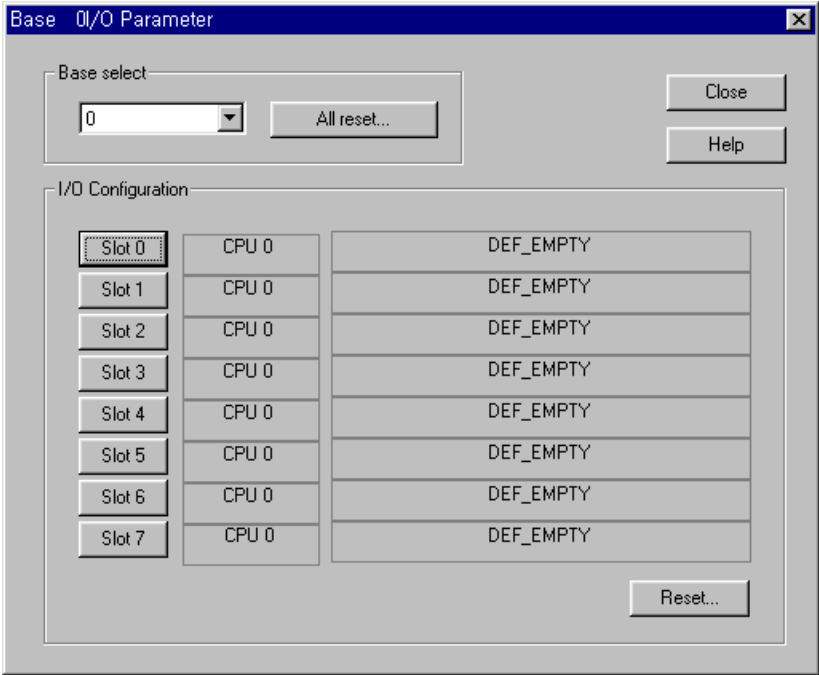

GM1

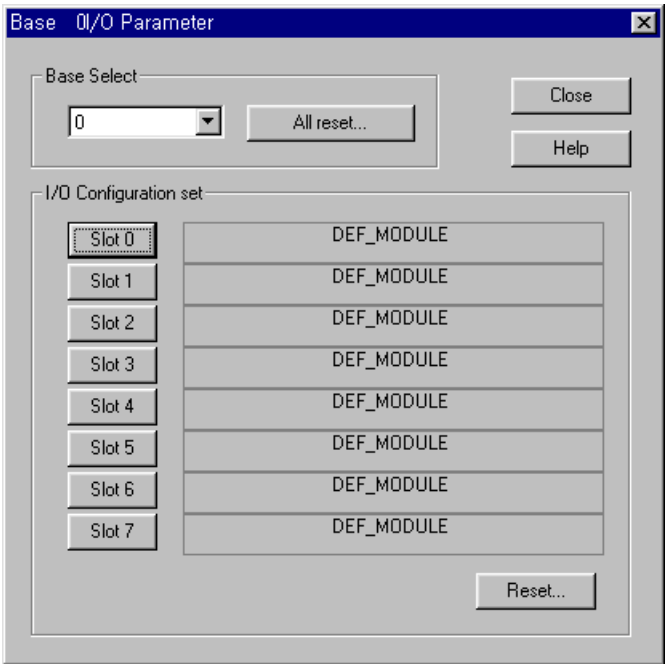

GM2 ~ GM6

Note

In case of GM1, CPU configuration item (see above figure) is added.
(I/O type is set as DEF_EMPTY)
In case of GM7, it has no I/O parameter setting.

- ◆ Select the base number to set in the "**Base Select**", and the setting content of base you choose is displayed in the "**I/O configuration set**".
- ◆ If you click "**All Reset**" in the "**Base Select**", then I/O parameters in all bases are changed into default value.
- ◆ If you click the "**Reset**" in the "**I/O configuration set**", then I/O parameter in the selected base slot is changed into default value.
- ◆ Base setting range with PLC type

PLC type	Range
GM1	Base 0 ~ 31
GM2	Base 0 ~ 7
GM3,4	Base 0 ~ 3
GM6	Base 0 ~ 1

- ◆ If you want to set the I/O parameter of each slot, select the slot number in the "**I/O configuration set**" by clicking slot number button. Then "**Base Slot I/O Parameter**" dialog box is displayed as below.

GM1

Select an item at the "**Type Select**", and select the number of I/O in the "**Point**". Click OK button.

GM2-6

Note

In case of GM1, the option of CPU select and Redundancy are added.

Reference

I/O type used as default value

I/O type	Content
DEF_I	When power is on, the input module in a selected slot is registered as default value at the I/O refresh table.
DEF_O	When power is on, the output module in a selected slot is registered as default value at the I/O refresh table.
DEF_IO	When power is on, the input/output module in a selected slot is registered as default value at the I/O refresh table.
DEF_SP	When power is on, the special module in a selected slot is registered as default value at the I/O refresh table.
DEF_MODULE	When power is on, the module in a selected slot is registered as default value at the I/O refresh table.
DEF_EMPTY	When power is on, the selected slot is registered as empty slot at the I/O refresh table.

1) Base Setup



In case of GMR, you have to set a Base in the **Base select** box.

◆ Local A

Single input/output(I/O) can be installed only CPU A. And I/O module of digital content can be installed for Single I/O. Setting each base as '**Local A**' in the Base Selection box makes Single I/O and this system can be used for the part no required backup to save the cost of redundancy.

◆ Redundancy Input/Output

CPU-A and CPU-B are operated using the same program simultaneously. When the system needs the data synchronization during the operating, they synchronize data each other. If the operating is stop by disorder of master CPU, the stand-by CPU maintain it's operating continuously. At this time, the input/output connected to the master CPU in base set as redundancy input/output gets OFF.

In this system, both of the master CPU and stand-by CPU control the input/output modules. For input data, you can apply the data it had two or more same value in comparing the input values of Master, Stand-by and Transfer.

Setting up each base as '**Redundancy**' in the Base Selection box makes Redundancy input/output. You have to set both bases with the same number. And you set the transfer I/O location for the input comparison and the output feedback.

◆ Transfer Input/ Output


CPU-A and CPU-B are operated using the same program simultaneously. When the system needs the data synchronization during the operating, they synchronize data each other. If the operating is stop by disorder of master CPU, the stand-by CPU maintain it's operating continuously. At this time, the input/output of each base set as transfer I/O are continuously executed without any change of this status.

This system can call as a redundancy CPU because Redundancy input/output is not setting. This system is set by setting up as '**Transfer I/O**' in the parameter setting part. The stand-by CPU reads the information in the input/output module periodically and check any fault of the connection.

4.5.3. Set the High Speed Link Parameter

To set the High Speed Link Parameter,


- ◆ Double-click on the "*Parameters - Link Parameters*" in Project window, or move a cursor to "*Parameters - Link Parameters*" and select "*Project - Edit Project Item*".

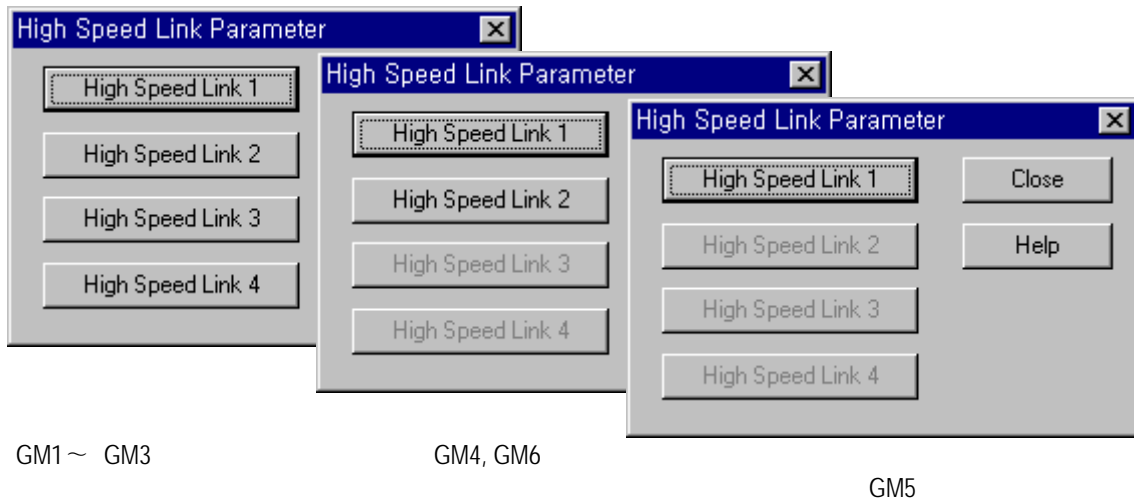

Note

The configuration for setting High Speed Link Parameter according to PLC type is like the above figure.
GM1/2/3 : High Speed Link 1 ~ 4 , GM4 / 6 : High Speed Link 1 ~ 2, GM5 : High Speed Link 1

If you click the High Speed Link Number button in the *High Speed Link Parameter* dialog box, then "*High Speed Link*" dialog box will be displayed, which shows the list of registered item and setting information of selected link.

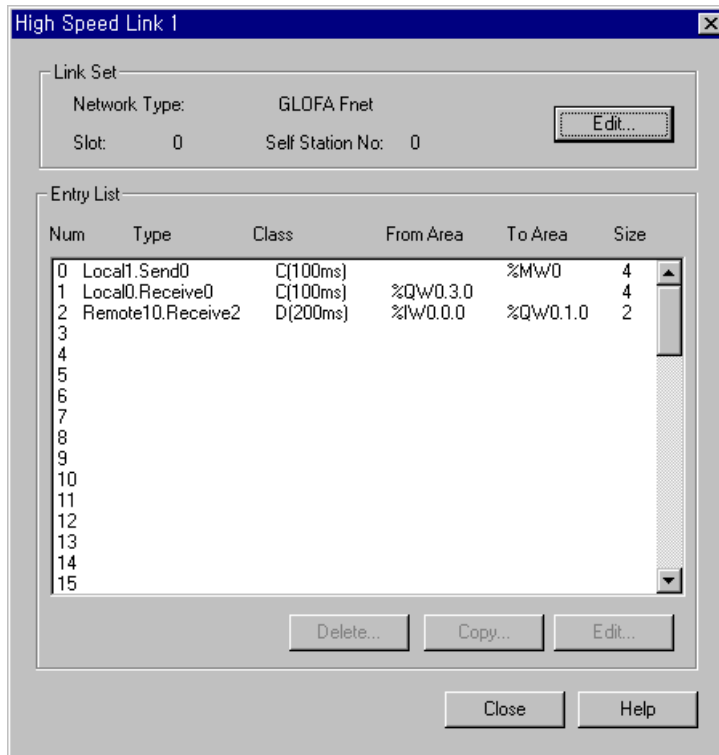

The "**High Speed Link**" dialog box allows you to setup the information of Link Setup and each registered List. You can use the "**Delete**", "**Edit**", "**Copy**" and etc. button, or "**Del**" key to delete an item and "**Ctrl-V/Ctrl-C**" key to "**Copy/Paste**".

Reference

Method of multi-selection has two ways, one is selection in order, the other is selection of scattered items in list.

1) How to select multi-items in order.



- ◆ Click the first registered item you wanted in the list.
- ◆ Drag a mouse to the final item in the desired list with pressing the left button of it.



- ◆ Move a cursor to registered list with "**Tab**" key, and move the cursor to the first registered item in the desired list with "**Arrow**" key.
- ◆ Move the cursor to the final item in the desired list with "**Arrow**" key by pressing "**Shift**" key.

2) How to make a multi-selection for scattered items.




- ◆ By pressing "**Ctrl**" key, click mouse button on each registered item.



- ◆ Move a cursor to the registered list with "**Tab**" key, and move cursor to the first registered item in the desired list with "**Arrow**" key.
- ◆ Press the "**Shift + F8**" key, and cursor start to blink.
- ◆ Move cursor to the desired item with "**Arrow**" key.
- ◆ Select each registered item with "**Space**" key.
- ◆ If you finish the selection, Press "**Shift + F8**" key.

1) Set Link Information


- ◆ Click "**Edit**" button at the "**Link Set**" area in the "**High Speed Link Set**" then "**High Speed1Link Set**" dialog box appears, which allows you to setup the information for the link setting.

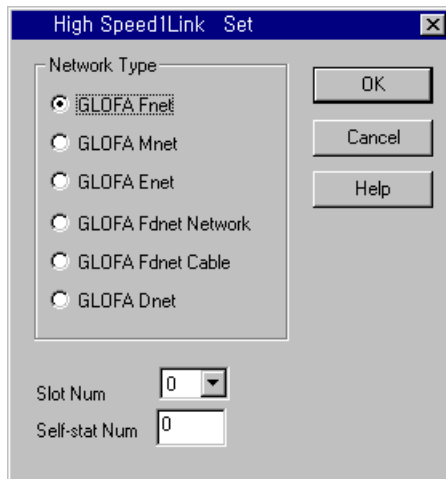

- ◆ Select a network type in "**Network Type**" option radio button.
- ◆ Select the slot number of the link module in "**Slot Num**" List box.
- ◆ Select the self station number to save the High Link Parameter in the "**Self-Stat Num**" text box.

2) Set Entry List


- ◆ Click "**Edit**" button at **Entry List** box after selecting registered list number, then "**High Speed Link Item Edit**" dialog box appears, which allow you to setup the information of the entry link list.

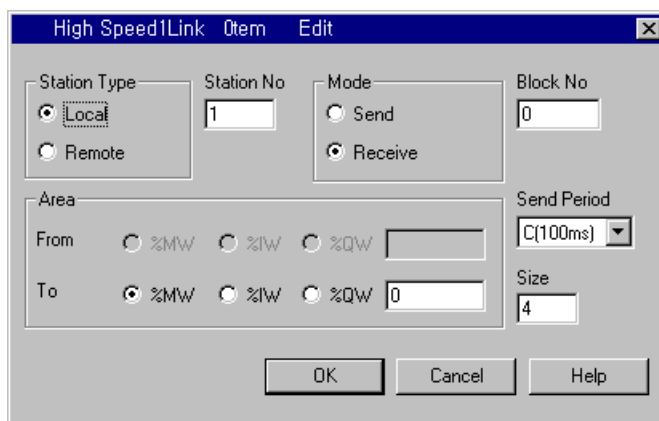

- ◆ Select whether Station Type is local or remote in "**Station Type**" option radio button.
- ◆ Set the station number in the "**Station No**" text box.
- ◆ Select whether it is data to send or receive in "**Mode**" option radio button.
- ◆ Set the block number in the "**Block No**" text box.
- ◆ Select the send period in the "**Send Period**" list box.
(A:20ms, B:50ms, C:100ms, D:200ms, E:500ms, F:1S, G:5S, H:10S)
- ◆ Set the send/receive area in the "**Area**" option radio box. Each area is selected by option button and address is fixed in each text box.
- ◆ Set the data size to communicate in the "**Size**" text box.(by word size)

3) Delete Entry List


- ◆ Click "**Delete**" button or "**Del**" key, after selecting the entry list number to delete at entry list box in "**High Speed Link**" dialog box.

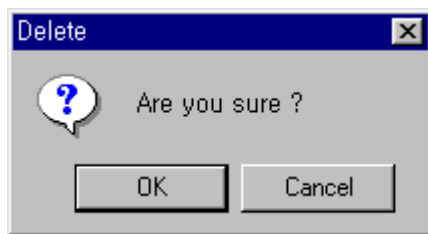


- ◆ You can delete the selected item by clicking "**OK**" button, otherwise click "**Cancel**" button.

4) Copy Entry List


- ◆ To copy the list within Entry List each other in "*High Speed Link*" dialog box,
 (1) Press "Ctrl - C" to copy, after selecting the item to copy using a cursor or mouse.

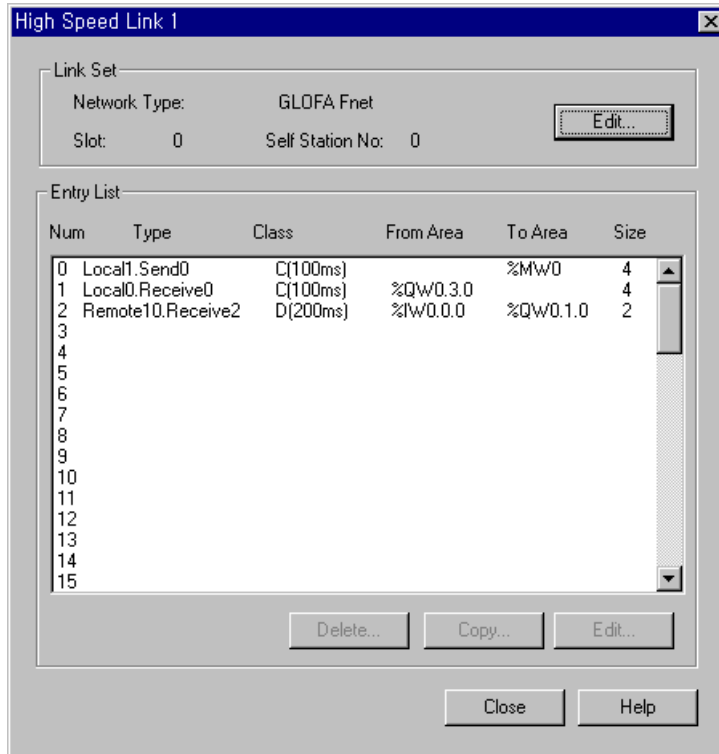

- (2) Press "Ctrl - V" to paste, after moving a cursor to the location you want.

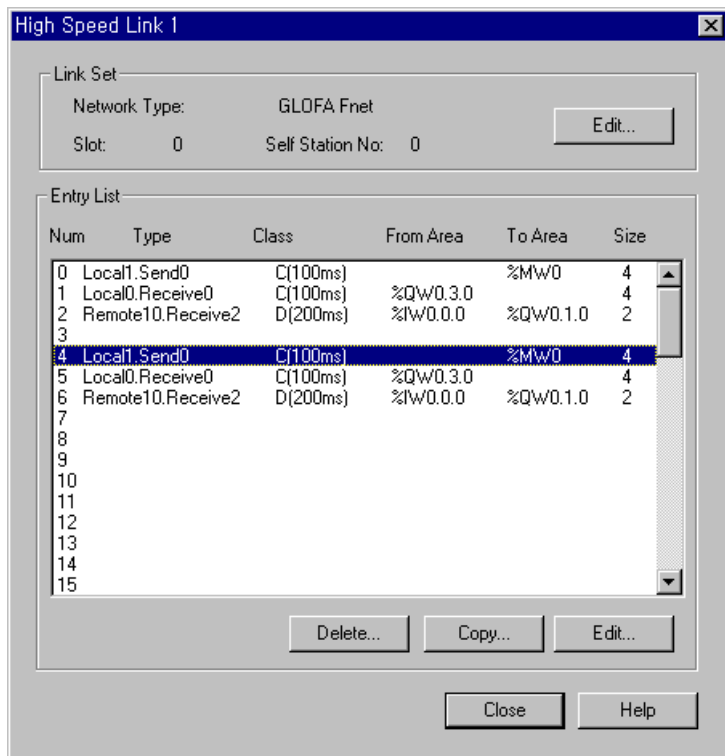

- ◆ Click "**Copy**" button, after selecting the entry item number at the entry list box in the "High Speed Link" dialog box.

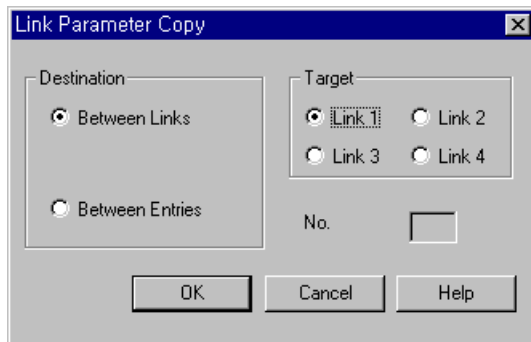


A) Copy Between Links



- ◆ Select "**Between Links**" option to copy a selected list to other link.
- ◆ Select the Link number to paste in "**Target**" option radio button.

Example) To copy the entry list 0.1.2.3 in High Speed Link 1 to 0.1.2.3 in High Speed Link 2,

(1) Select the entry list 0.1.2 in the "**High Speed Link 1**".

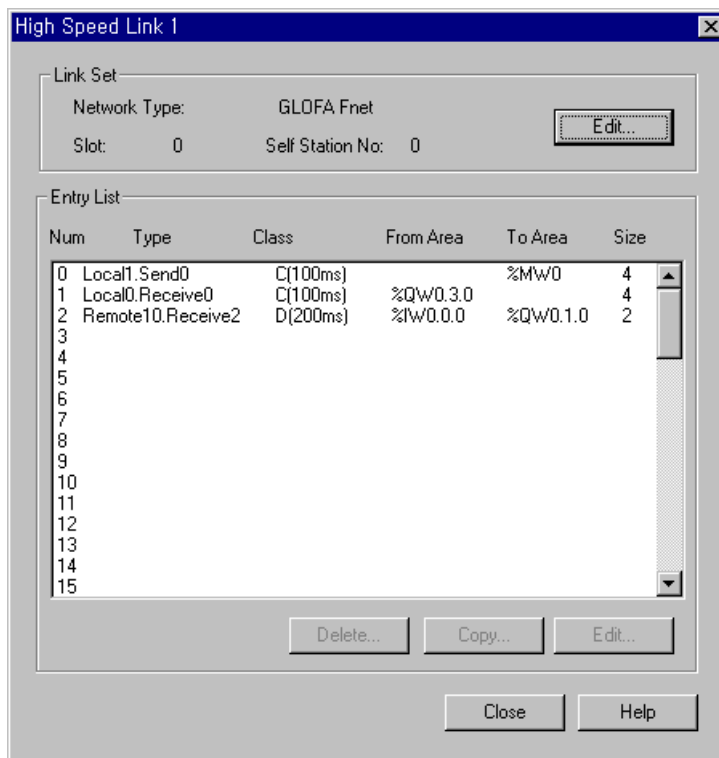

- (2) Click "**Copy**" button
- (3) Choose the "**Between Links**" in "**Link Parameter Copy**" dialog box
- (4) Select "**Link 2**" in "**Target**" box and click **OK** button.

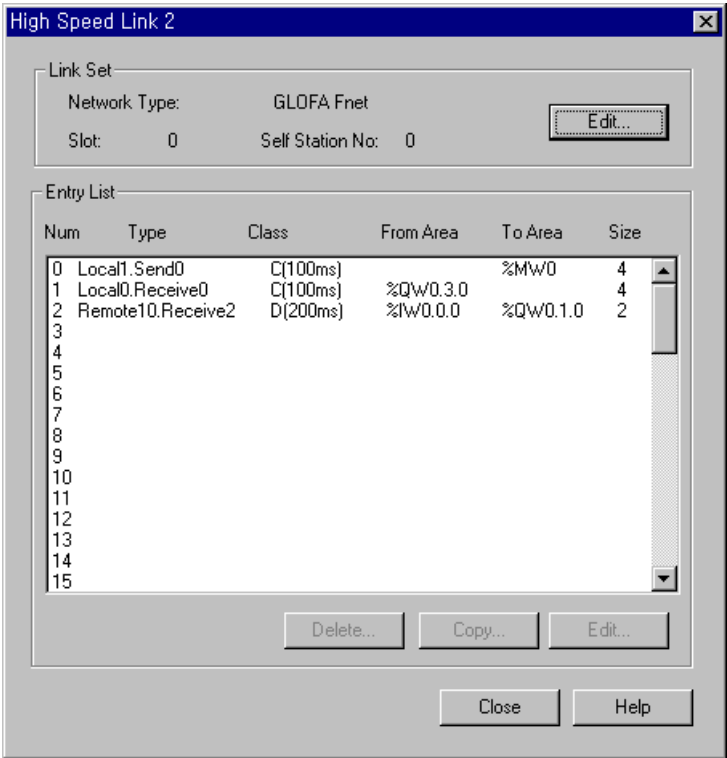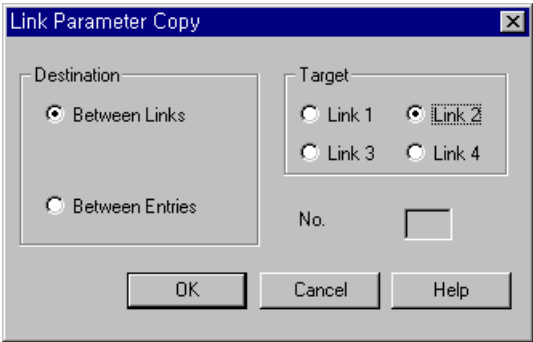


B) Copy Between Entries

- ◆ Select the "**Between Entries**" option to copy selected entries to other link list in the same link.
- ◆ Enter the entry Item number to paste in "**Target**" option radio button.
selected entry Items are copied from selected number.

Example) To copy entry Items 0.1.2 in High Speed Link 1 to 10.11.12 in High Speed Link 1,


(1) Click "**Copy**" button, after selecting entry Items 0.1.2 in High Speed Link 1.

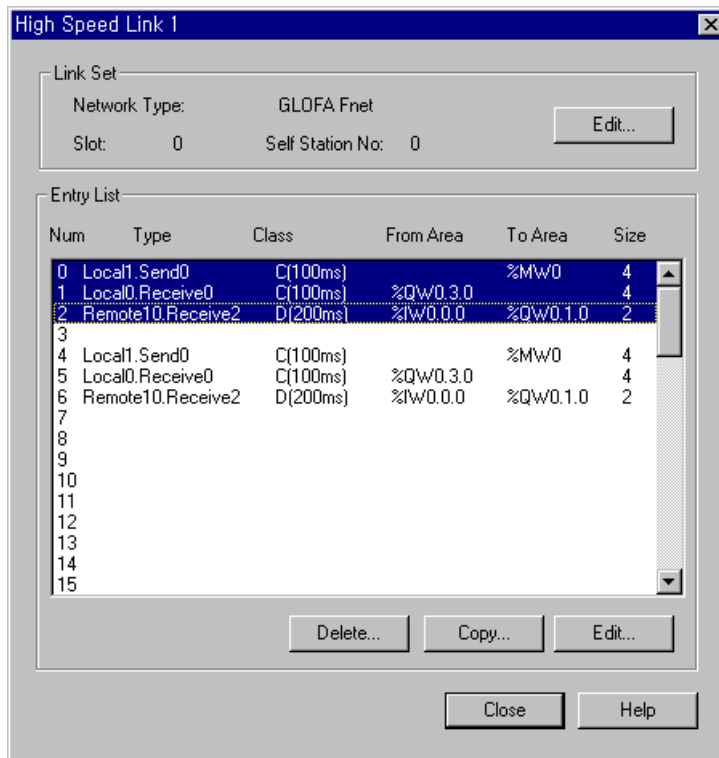

(2) Choose "**Between Entries**" at the "**Link Parameter Copy**"

(3) Enter "**10**" in the "**Link Parameter Copy**" text box.


(4) Click **OK** button.

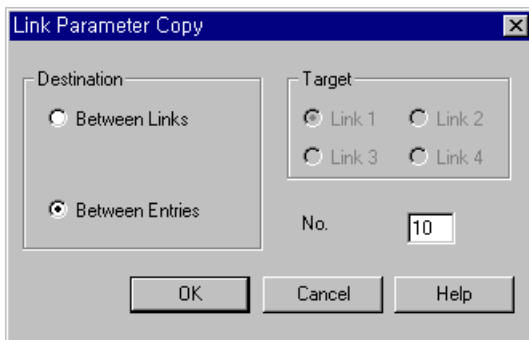

4.5.4. Set Redundancy Parameter


This function is available only for *GM1RED* PLC.

- ◆ Double-click on the *Parameter - Redundancy Parameter* in Project window or move a cursor on the *Parameter - Redundancy Parameter* and choose *Project - Edit Project properties* in pull-down menu.

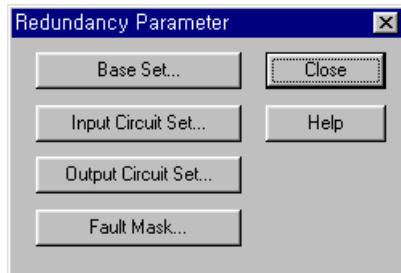

1) Base Set


At *Redundancy Parameter* dialog box, click the *Base Set...* button for setting base.

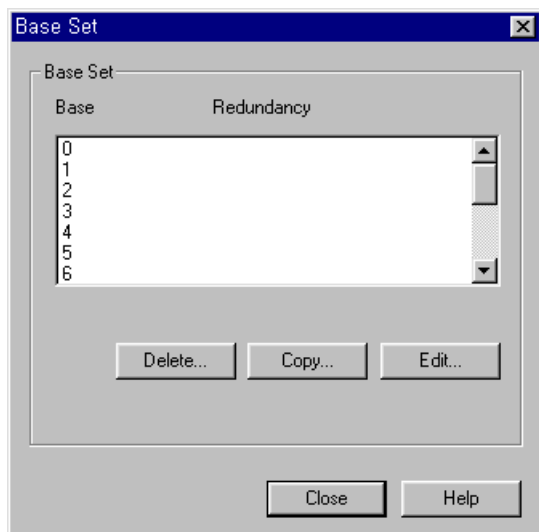


Double-click on the item that you want to set or click *Edit* button to set the base.

- ◆ To delete entry items, select the items and click *Delete...* button.
- ◆ To copy entry items, select the items and click *Copy* button.

You can copy by entering the position of the base and clicking **OK** button.

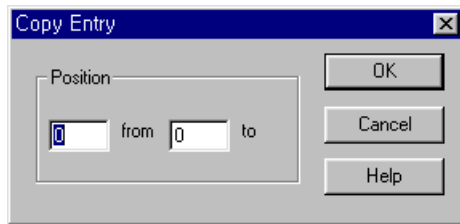

- ◆ To edit entry items, select the items and click **Edit** button. Then **Redundancy** dialog box appears. Select the item you want to edit and click **OK** button.

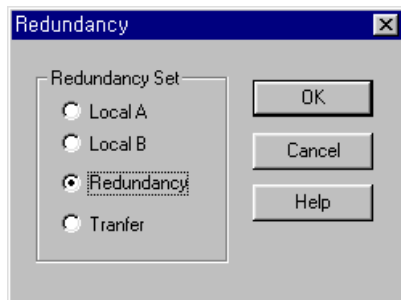

◆ Single Input/Output(I/O)

Local A and Local B are operated by the same program simultaneously, and the data is synchronized by transferring inputted data from Local A to Local B. When system stops operating by Local A disorder, input/output of Local A stops operating and all connected outputs get OFF.

Single I/O can be installed only in Local A. And only I/O modules of digital contacts can be installed for Single I/O.

Single I/O is made by setting each base as 'Single input/output' in the setting part.

And this system can be used for the part not to require backup to save cost for redundancy

◆ Redundancy Input/Output

Local A and Local B are operated by the same program simultaneously. When the system needs the data synchronization during the operating, they synchronize data each other.

If a system stops operating by disorder of master CPU, the stand-by CPU starts operating immediately and continues its operating. At this time, the input/outputs connected to the master CPU in bases set as redundancy input/output get OFF. In this system, both of master CPU and stand-by CPU control the input/output modules.

For input data, the data can be adapted as the input data after comparing the data among Master, Stand-by and the transferred value.

Redundancy input/output is set by setting up each base as 'Redundancy input/output' in the setting part. And both bases of Local A and Local B must be set as the same number. And you set the transfer I/O location for the input comparison and the output feedback.

◆ Transfer input/output

Local A and Local B are operated by the same program simultaneously. When the system needs the data synchronization during the operating, they synchronize data each other.


If the master CPU is out of order, the system stops and the stand-by CPU starts operating immediately and continues its operating. At this time, the input/outputs of each base set as transfer I/O are continuously executed without any change of the status.

This system can call as a redundancy CPU because an input/output is not for the redundant mechanism. This system is set by setting up as "Transfer I/O" in the parameter setting part.


The stand-by CPU reads the information in the input/output module periodically and checks any fault of the connection all the time.

2) Input Circuit Set

The below dialog box is for setting triple redundancy input.
Click Circuit Set button in the *Redundancy Parameter* dialog box.

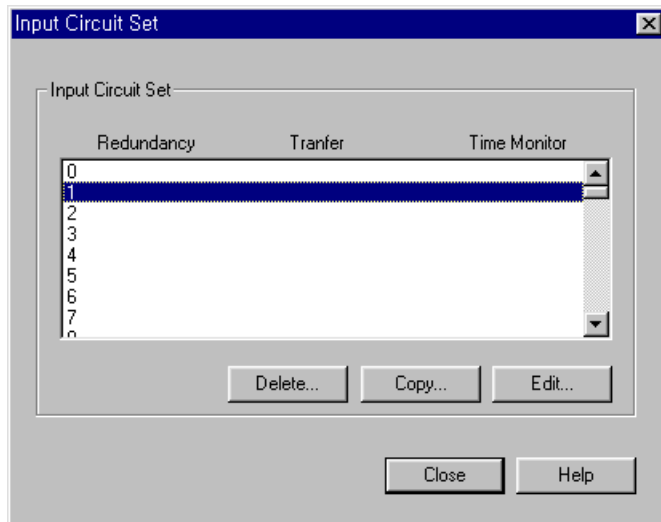

If you double-click the item in the *Input Circuit Set* dialog box, or click *Edit* button, the *Input Circuit Set* dialog box appears. It allows you to set input circuit for the appropriate item.

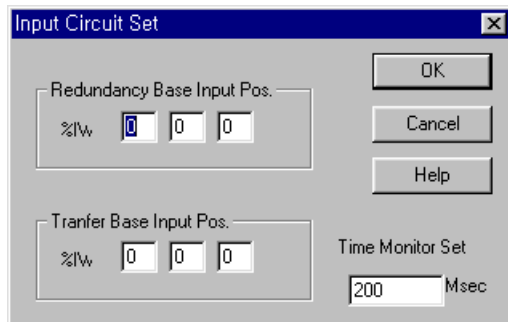


Triple redundancy input


Triple redundancy input allows you to use that data as input value of the program after selecting identified 2 data of 3 data compared to the inputted data. So, you must have 2 input modules mounted on the same redundancy base slot and 1 input module mounted on the transfer base.

To set the Input Circuit Item,

- ◆ **Position of Redundancy Base Input**
Indicates the position and channel of input module mounted on a redundancy base for the triple redundancy input. There is only one item for fixing a position because input module of both Local A and B must be on the same base slot. And the designated base must be set as *Redundancy I/O* in the *Base Set* dialog box.
- ◆ **Position of Transfer Base Input**
Indicates the position and channel of input module mounted on a transfer base for the triple redundancy input. And the designated base must be set as *Transfer I/O* in the *Base Set* dialog box.
- ◆ **Setting Time Observation**
It is time value for allowing temporary disagreement of input value by delay of the input module.
- ◆ To delete the entry item, select the item and click *Delete* button.
- ◆ To copy the entry item, select the item and click *Copy* button.
Then *Copy Entry* dialog box appears. Enter the position to copy, and click *OK* button.

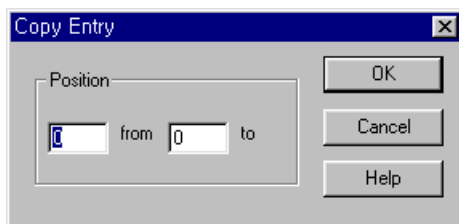


- ◆ To edit the entry item, select the item and click *Edit* button.
Then *Input Circuit Set* dialog box appears. Enter the data and click *OK* button.

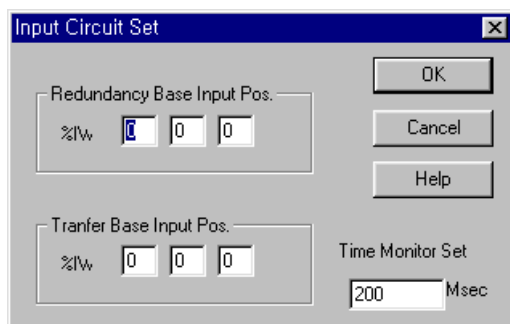


3) Output Circuit Set

Click the output circuit setting button in *Redundancy Parameter* dialog box.

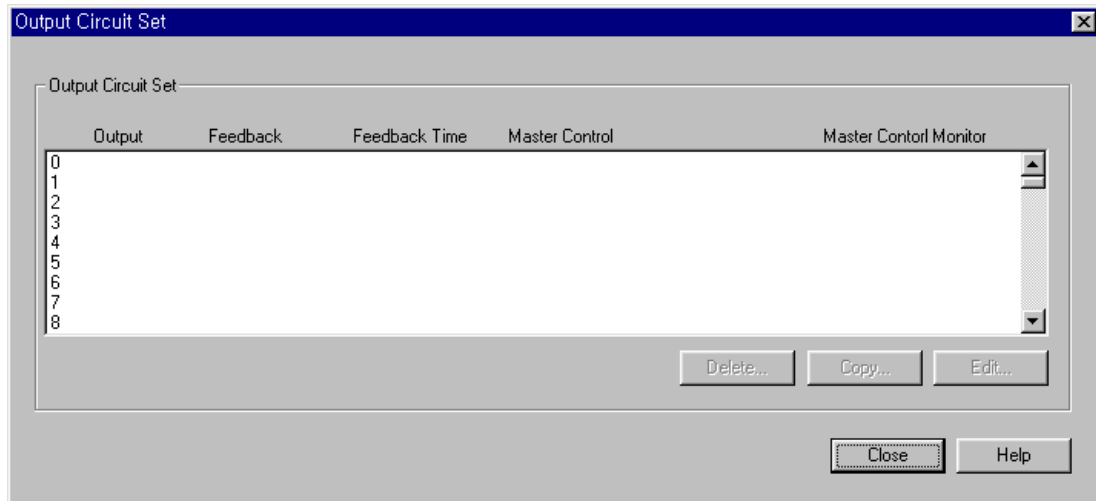

Double-click on the item to set or click on *Edit* button in the *Output Circuit Set* dialog box. Then *Output Circuit Set* dialog box appears. It allows you to set the selected item.

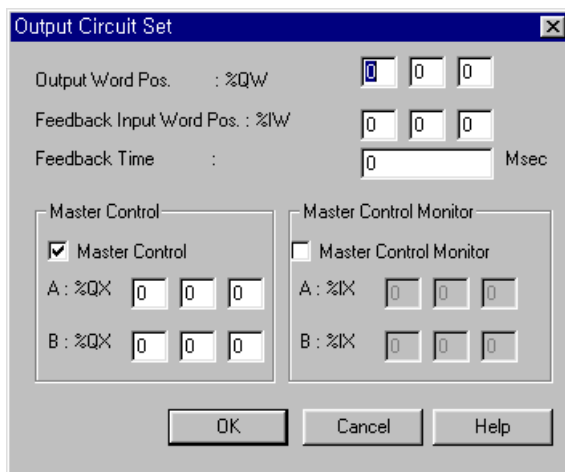


◆ Position of Output Word

Indicates the position and channel of redundancy output module. At this time the designated base must be the base set as *Redundancy I/O* in the *Base Setting* dialog box.


◆ Location of Feedback Input Word

When setting redundancy output as O-F type, it indicates the position and channel of feedback input module. At this time, the designated base must be the base set as *Redundancy/Translate I/O* in the *Base Setting* dialog box.

- ◆ **Feedback Time**
When setting redundancy output as O-F type, it indicates the time interval for admitting temporary disagreement of a output value and feedback input.
- ◆ **Master control**
When setting redundancy output as O-F type, it indicates the position and the number of the output to cut off the power and contact number. And the designated base must be the base set as *Redundancy/Transfer I/O* in the *Base Setting* dialog box.
- ◆ **Observation of Master control**
When setting redundancy output as O-F type, it indicates the position of the input that observe output to cut off the power and contact number. And the designated base must be the base set as *Redundancy/Transfer I/O* in the *Base Setting* dialog box.
- ◆ To delete the entry item, select the item and click *Delete* button.
- ◆ To copy the entry item, select the item and click *Copy* button.
Then *Copy Entry* dialog box appears. Enter the position to copy and click *OK* button.

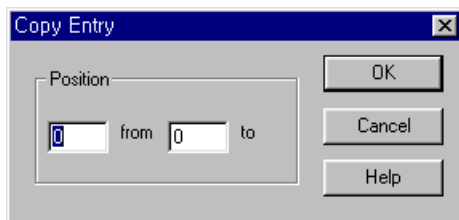

- ◆ To edit the entry item, select the item and click *Edit* button. Then *Output Circuit Setting* dialog box appears. Enter the desired value, and click *OK* button.

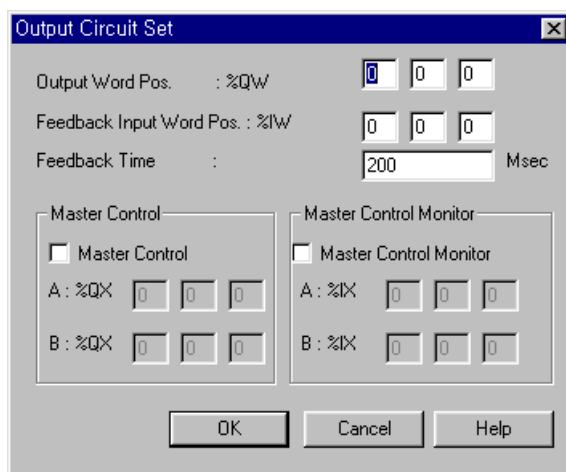


4) Fault Mask Set


Click the *Fault Mask set...* button in the *Redundancy Parameter* dialog box.



In *Fault Mask Set* dialog box, if you double-click on the item to set or click *Edit* button, *Fault Mask Set* dialog box appears, which helps to set the input circuit for the appropriate item.

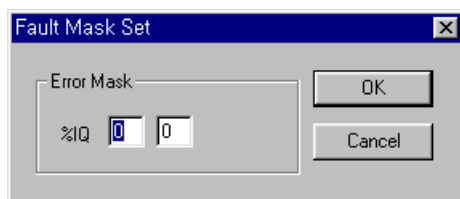

- ◆ The Position of module to be continued in case of disorder
When a machine is out of order, you can select the position of module to be continued at any base setting status.
- ◆ To delete the entry items, select the item and click *Delete* button.
- ◆ To copy the entry items, select the item and click *Copy* button. Then *Copy Entry* dialog box appears. Enter the position to copy and click *OK* button.

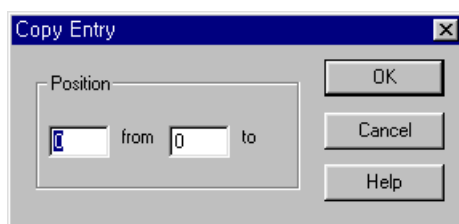

- ◆ To edit the entry items, select the item and click *Edit* button. Then *Fault Mask Set* dialog box appears. Enter the desired value and click *OK* button.



4.5.5. Set Communication Parameter

In GM7, select Communication Method, Protocol and Transmission Mode.

- ◆ Double-click on the **Parameter-Redundancy Parameter** in Project window or move a cursor to the **Parameter-Redundancy Parameter** and select **Project-Edit Project Properties** in Menu.

Communication Parameter

Communication Method

Station No. : 0

Baud Rate : 19200

Data Bit : 8

Parity Bit : None

Stop Bit : 1

Communication Channel

☒ RS232C Null Modem or RS422/485

☐ RS232C Modem (Dedicated Line)

☐ RS232C Dial Up Modem

Init. Command : ATZ

Protocol and Mode

Timeout in Master Mode : 500 ms

Dedicated

☐ Master

☒ Slave

☐ Read Status of Slave PLC

List

Modbus

☐ Master

☐ Slave

Transmission Mode : ASCII

User Defined

☐ Master

☐ Slave

List

Ok Cancel Help

◆ Set the Communication Method as follows.

Item	Contents
Self Station No.	0-31 are selectable. (* Note 1)
Baud Rate	You can set 1200, 2400, 4800, 9600, 19200, 38400, 57600 bps.
Data Bit	You can set 7 or 8 Bits. (*Note 2)
Parity Bit	You can set None, Even and Odd.
Stop Bit	You can set 1 or 2 Bit(s) (* Note 3)
Communication Channel	<ul style="list-style-type: none"> • RS232C Null Modem or RS422/485 : Select it to communicate with the internal function of GM7's basic unit or Cnet I/F module(G7L-CUEC). • RS232C Dedicated Line : On communication with Cnet I/F module(G7L-CUEB), if you use a Dedicated Line, select this channel. • RS232C Dial Up Modem : On communication with Cnet I/F module(G7L-CUEB), if you use the Dial Up Modem, select this channel. <p>Note) A Communication of RS232C Dedicated Modem or RS232C Dial Up Modem is available at the Cnet I/F module(G7L-CUEB) supports RS232C only and no available at the Cnet I/F module (G7L-CUEC) supports RS422/485.</p>
Timeout in Master Mode	<ul style="list-style-type: none"> • It is a waiting time of an answer frame after transmitting required frame in the GM7 is set as Master. • Default value is 500ms. • You have to set it under the consideration of the maximum period of Master PLC transmission and receiving(Tx/Rx). • If you set the less value than the maximum period of Master PLC transmission and receiving.
Master / Slave	If you set the Master, it become the subject in the communication system and it allows reading and writing the data in the selected device(PLC).
Read Status of Slave PLC	Set it to read the Status of GM 7 basic unit is designated as Slave. Do no select it except monitoring the status of slave. It can reduce communication speed. (You can set it in the dedicated protocol only)
Transmission Mode	ASC II or RTU Mode is selectable. (You can set it in the Modbus Protocol only)

*Note 1) In Modbus, do not set the broadcast station number with '0'.

It is became one factor of a wrong operation.

In GM7, Broadcast is not supported.

*Note 2) In Modbus, set 7Bits in the ASC II box and set 8 Bits in the RTU mode.

*Note 3) In Modbus, please set the Stop Bit as '1' when you set the Parity Bit, and set '2' if you not set the Parity Bit.

1) Private Communication

◆ Set the Protocol as Dedicated Line, and select Master or Slave.

If you selected Master, Entry List button appears.

Protocol and Mode


Timeout in Master Mode : 500 ms

Dedicated

☒ Master ☐ Read Status of Slave PLC

☐ Slave

◆ Click the Entry List button, then Private 1 dialog box appears.

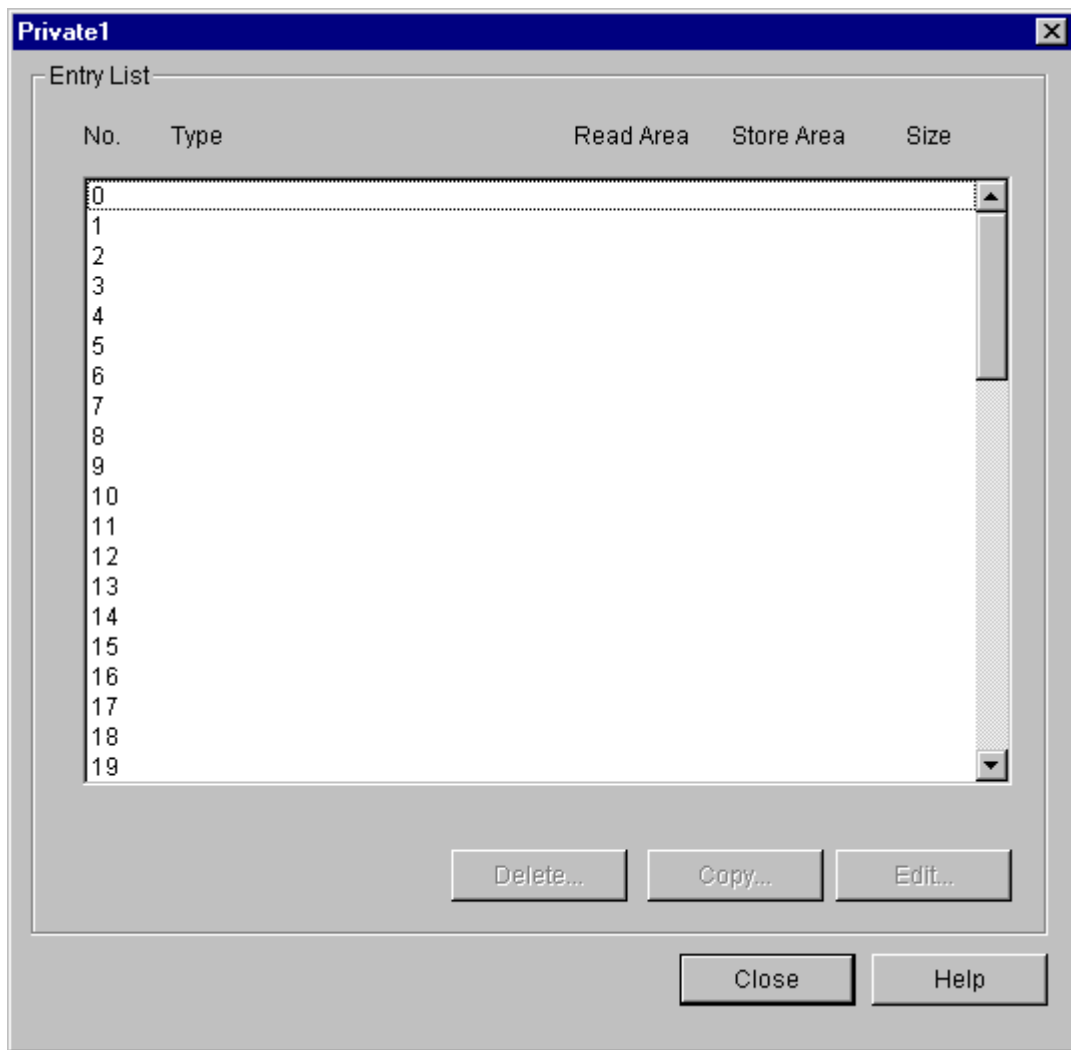

- ◆ The above dialog box allows you to set the information of each registered List. You can use the "Delete", 'Edit', 'Copy' and etc. button, or 'Del' key to delete the multi-selected items and 'Ctrl-V/Ctrl-C' key to Copy and Edit.
- ◆ Click the desired number in the Entry List then the **Entry List Set** dialog box appears.

- ◆ Select the Send button in Mode when you want Data writing to the Slave station, and select the Receive button if you want Data reading from the Slave station.
- ◆ Set the Slave Number(Opposite station) in the **Station No.** box.
- ◆ Set the data size in the Size(Word) box in word.
Max. 60 words are available.
- ◆ Set Tx/Rx area in the Area box. Select each area by option button, and designate the address in each input box.

Note

- 1.If you select %MW0 : Enter '0' in the input box after selecting '%MW'.
- 2.If you select %QW0.1.0 : Enter '0.1.0' in the input box after selecting '%QW'.

2) Modbus Communication

- ◆ Set the Protocol with Modbus, and select Master or Slave.
- ◆ Select ASCII in the Transmission Mode box.

Note

1. Modbus communication use the function block(MOD0102,MOD0203,MOD0506,MOD1516).
Refer to GM7 Manual '8.3 Modbus Protocol Communication' for more details.


3) User Defined Communication

- ◆ Set the Protocol as User Defined, and select Master or Slave.



A dialog box titled "User Defined" with a close button (X) in the top right corner. Inside the dialog, there are two radio buttons: "Master" and "Slave". To the right of these buttons is a button labeled "List".

- ◆ Click the desired number in the Frame List then the Frame Information Set dialog box appears.

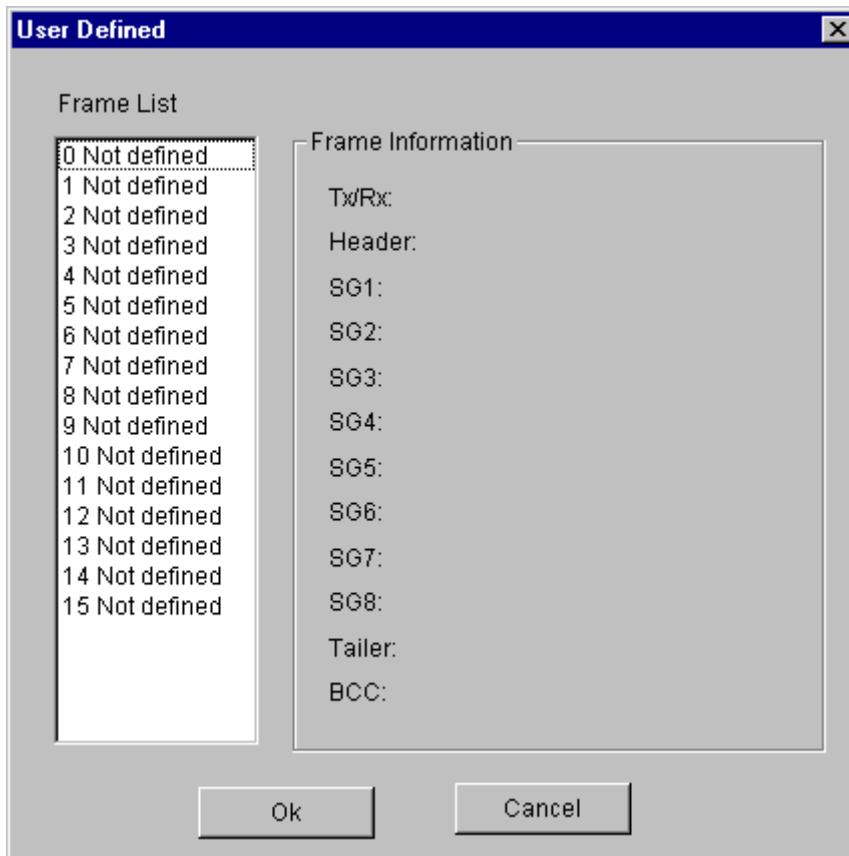

A dialog box titled "User Defined" with a close button (X) in the top right corner. It contains two main sections: "Frame List" on the left and "Frame Information" on the right. The "Frame List" section has a list box containing 16 items, all labeled "Not defined": 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, and 15. The "Frame Information" section is a large text area with labels for "Tx/Rx:", "Header:", "SG1:", "SG2:", "SG3:", "SG4:", "SG5:", "SG6:", "SG7:", "SG8:", "Tailor:", and "BCC:". At the bottom of the dialog are two buttons: "Ok" and "Cancel".

Frame 0

Header : [ENQ] Tx/Rx : Send

Segment 1
Type: CONST 07wSS0106
☐ Hex Input ☒ ASCII Input Size: Byte

Segment 2
Type: CONST %MVW200
☐ Hex Input ☒ ASCII Input Size: Byte

Segment 3
Type: ARRAY %MB400
☒ Send by ASCII Converting Size: 2 Byte

Segment 4
Type: NONE
☒ Hex Input ☐ ASCII Input Size: Byte

Segment 5
Type: NONE
☒ Hex Input ☐ ASCII Input Size: Byte

Segment 6
Type: NONE
☒ Hex Input ☐ ASCII Input Size: Byte

Segment 7
Type: NONE
☒ Hex Input ☐ ASCII Input Size: Byte

Segment 8
Type: NONE
☒ Hex Input ☐ ASCII Input Size: Byte

Tailor: [EOT][BCC] BCC Setting Ok Cancel

- ◆ Set Tx or Rx in the Tx/Rx box.
- ◆ Enter the Header, Segment and Tail in each box.

Frame 0

Header : Tx/Rx : Not defined

Segment 1
Type:
☒ Hex Input ☐ ASCII Input Size: Byte

Segment 2
Type:
☒ Hex Input ☐ ASCII Input Size: Byte

Segment 3
Type:
☒ Hex Input ☐ ASCII Input Size: Byte

Segment 4
Type:
☒ Hex Input ☐ ASCII Input Size: Byte

Segment 5
Type:
☒ Hex Input ☐ ASCII Input Size: Byte

Segment 6
Type:
☒ Hex Input ☐ ASCII Input Size: Byte

Segment 7
Type:
☒ Hex Input ☐ ASCII Input Size: Byte

Segment 8
Type:
☒ Hex Input ☐ ASCII Input Size: Byte

Tailor: BCC Setting Ok Cancel

Note

Refer to the GM7 Manual "8.2 User Defined Protocol Communication for more details.


Chapter 5. Edit a Program

This program is a unit to create an order language for the PLC system is run. This chapter shows the methods; create a program and save it to file, edit each language, and etc.

5.1. Create a Program

To create a new program,

- ◆ Select **Program-New Program...** () in the menu..

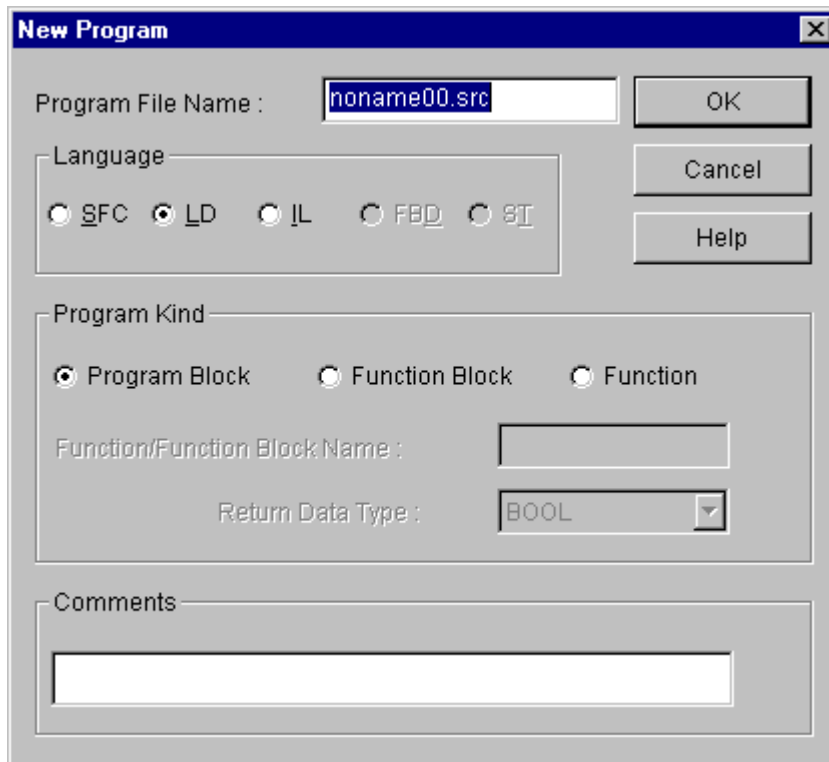

The 'New Program' dialog box is shown. It has a title bar 'New Program' with a close button. The 'Program File Name' field contains 'noname00.src'. There are 'OK', 'Cancel', and 'Help' buttons. The 'Language' section has radio buttons for SFC, LD (selected), IL, FBD, and ST. The 'Program Kind' section has radio buttons for Program Block (selected), Function Block, and Function. Below these are fields for 'Function/Function Block Name' and 'Return Data Type' (set to 'BOOL'). There is a 'Comments' section with a text area.

- ◆ Enter Program File name.
- ◆ Select a language in **Language** option button.(GLOFA PLC supports SFC, LD, and IL. FBD and ST will be supported later.)
- ◆ Select a program in **Program Kind** option button. If you select **Function/Function Block** to create a user-defined function/function block, refer to the chapter 10 Library. Select **Program Block** option in this chapter.


Note

You can select a **Function** option button in only case of LD or IL language.
You can not create a user-defined function by SFC.

Note

Function/Function Block name is only in active when **Function/Function Block** option button is selected and **Output Data Type** is in active only when **Function** option button is selected. (Refer to 10.3. Making a library file defined by user' for detail comment)

- ◆ Enter Comment in **Comment** box.
- ◆ Click **OK** button.
- ◆ If a new program is not existed in the project, the following dialog box appears.

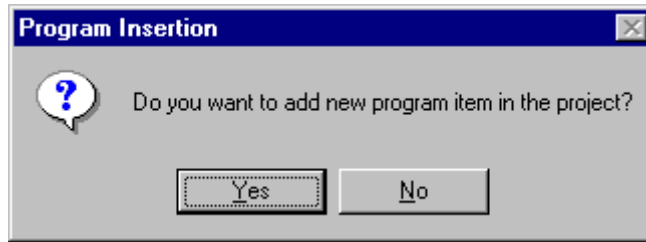


- ◆ Click **Yes** button. Then the **Define Program** dialog box appears. (Refer to 4.4.8.)
- ◆ If you finished define a program, it is inserted in the project as an item..
(In case of GM1 and there are more than two resources, you can select a resource it can introduce the definition of the program.)

5.2. Open a Program

You can open a saved program here. There are two ways to open an existing program. One is selecting in the menu and the other is opening the designated program in the project directly.

1) Open by selecting in the menu

- ◆ Select **Program-Open...** (icon) in the menu.

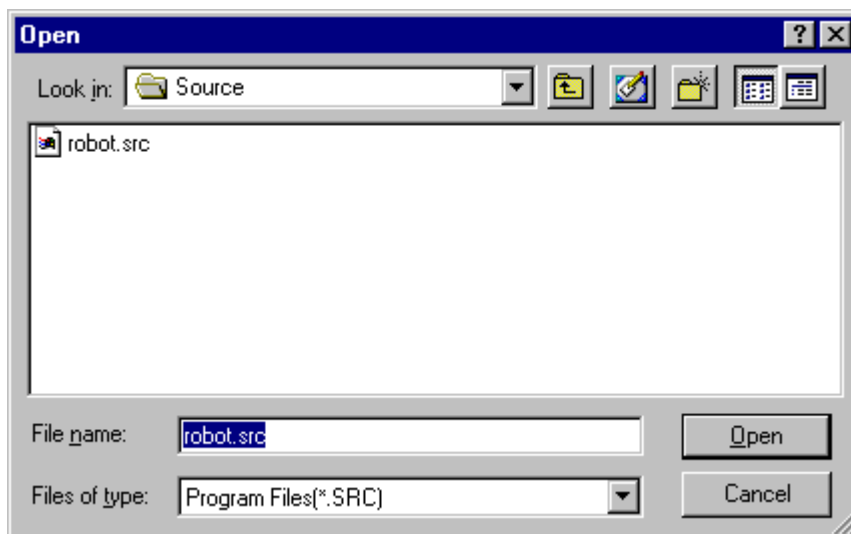

- ◆ Click **OK** button after selecting the desired program file.
- ◆ A selected program is created on the window screen.

2) Opening a program file included in Project


- ◆ If you want to open a program file included in Project, double-click a mouse on the appropriate program item in Project window list.
- ◆ Then a selected program is created on the window screen.


Note

You can not open the same program more than two in Edit or Debug mode. In case of monitor mode, if you can not see a long program at the same time, please open the same program more than two and monitor a different part in each program.

5.3. Save a program

To save a program as file.

- ◆ Select Program-Save... () in the menu. In case of save an existing file, there is no message for saving.
- ◆ If you save a new file or select **Program-Save as...** in the menu, the following dialog box appears.

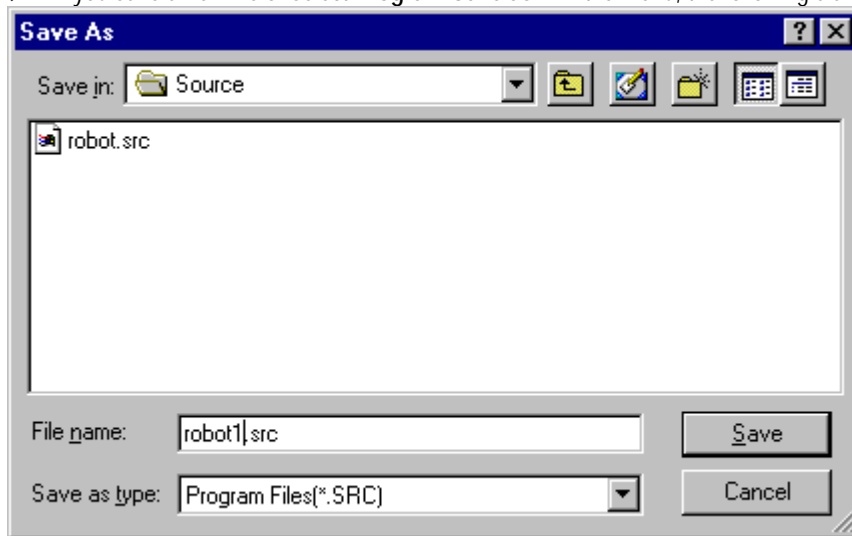


- ◆ Click OK button after entering the desired file name.
- ◆ If you want save all programs on the active window, select **Save All** in Menu.

5.4. Program Properties

You can change the kind or comments of program on editing.

- ◆ Select **Program-Properties...** in Menu. Then the dialog box appears as similar as the case of creating a program. (But, you cannot change the already registered language.)

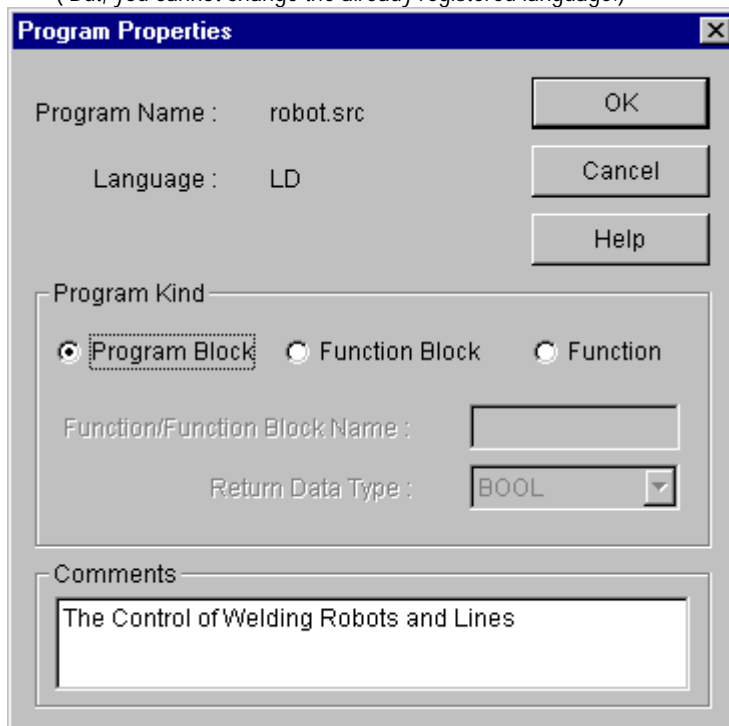


- ◆ Click OK button after editing a desired item.

5.5. Edit a Variable

You can edit Local Variable it appropriates to the activate program window.

- ◆ Select **Program-Local Variables....**

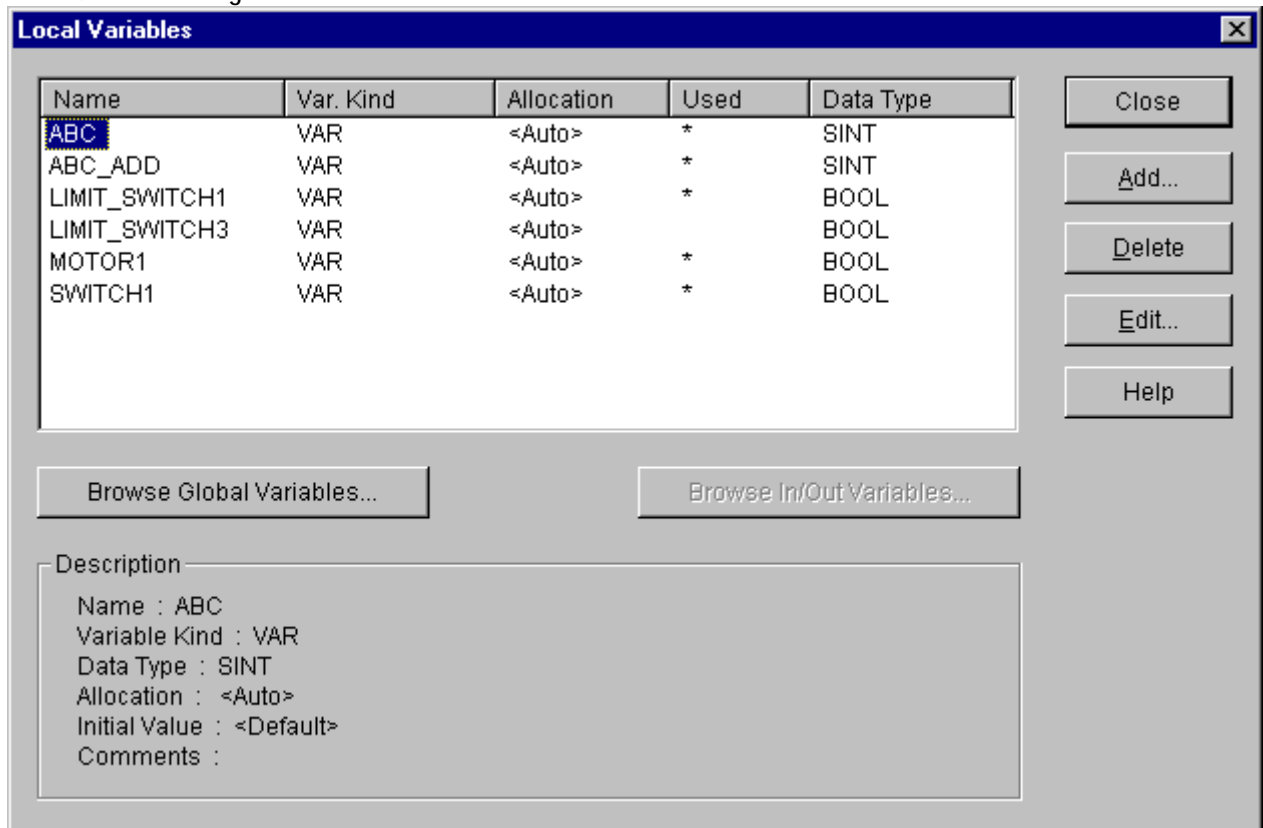

- ◆ Click Close button after adding, deleting and editing each variable.

Note

In the list box of Local Variables, you can see another variables besides local variables that user enter. In case of function/function block, you can see I/O variable and output variable name to return and in case of SFC, you can see a variable 'TRANS' it contained executive conditions. But it is impossible to edit and delete these variables. Examples of these variables are as below.

RETVAL	<Return variable>	INT	- output variable name to be returned in function
IN1	VAR_INPUT	BOOL	- input variable in function/function block
IN2	VAR_INPUT	INT	- input variable in function/function block
OUT1	VAR_OUTPUT	BOOL	- output variable in function
TRANS	<SFC transition>	BOOL	- SFC execution condition variable

1) Add a Variable

- ◆ Open **Add/Edit Variables** dialog box by clicking **Add...** button.

Add/Edit Variables

Variable Name :

Variable Kind :

Data Type :

- ☒ Elementary :
- ☐ FB Instance :
- ☐ Array (0..) OF

Memory Allocation :

- ☒ Auto
- ☐ Assign (AT) :

Initial Value :

Init. Array...

Comments :

OK Cancel Help

- ◆ Enter the variable name in **Variable Name** box

Note

Maximum size for Variable name is 16 English characters.
However, in case of FB Instance type, the size limited to 8 English characters.

- ◆ Select Variable Kind in **Variable Kind** list box
- ◆ Select one type of **Data Type** option button (**Elementary Data Type/Function Block Instance**) and its type in that list box.
- ◆ Select one of **Memory Allocation** option button (**Auto** and **Assign(AT)**), and in case of selecting **Assign** enter the exact position in the text box.

Auto : When you compile a program, declared variable is automatically assigned to data area type

User Define : User assigns the declared variable to I,Q,M area.

- ◆ In case of User Define, designation of I,Q,M area to input is as follows.

Prefix	Comments
I	Input
Q	Output
M	Internal Memory
X, none	1 bit
B	1 byte (8 bit)
W	1 word(16 bit)
D	2 word(32 bit)
L	4 word(64 bit)

Ex.) %QX3.1.4 or %Q3.1.4 : 4th bit of slot 1 on base 3.
 %IW2.4.2 : 2nd word of slot 4 on base 2.
 %MD48 : 48th double words of internal memory (start from 0).
 %MW10.3 : 3rd bit of 10th word in the internal memory.
 (There is no general concept about base and slot in the internal memory)

- ◆ If there is an initial value, enter the value in the box of **Initial Value**.
- ◆ Enter the comment in **Comments** box.
- ◆ Click **OK** button.

2) Delete a Variable


- ◆ Select a variable to delete in the list box of **Local Variables**.
- ◆ Click **Delete** button

3) Edit a Variable

- ◆ Select a variable to edit in the list box of Local Variables.
- ◆ In the list box of **ADD/Edit variable**, edit a variable with the same way as inserting a variable and click **OK** button.

4) Browse Global Variable

- ◆ This function is used when you use a declared global variable in the program.
- ◆ Click **Browse Global Variable** button.

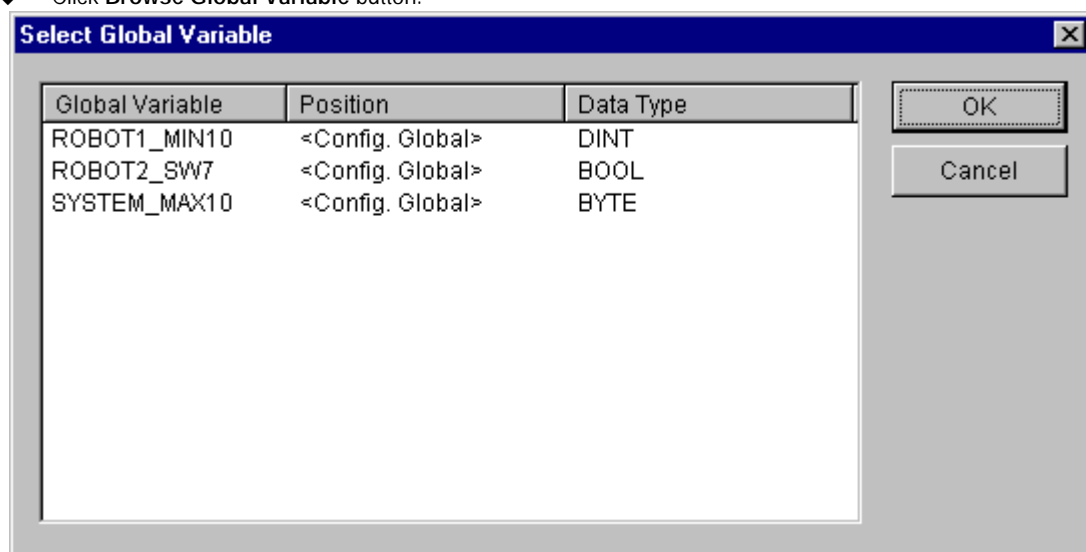

Chapter 5. Edit a Program

- ◆ Select a global variable to use in the program and click **OK** button.
- ◆ A selected global will be declared as **VAR_EXTERNAL** automatically and be added in **Local Variable List**.

Note

When you declare a variable, if the program belongs to the project, the variable declared as **VAR_EXTERNAL** is registered to **VAR_GLOBAL** automatically.

5) Browse In/Out variables

- ◆ This function is used when you want refer to the currently declared I/O variable without closing the **Local Variable** dialog box
- ◆ Click **Browse In/Out Variable** button. Then Dialog box appears as same as when you select **Program-I/O Variable** in the menu. You can add, edit or delete the I/O variable in the same way.


Note

Refer to the section 10.3.2 "Create I/O Variable" for "Edit I/O variable".

5.6. Edit LD


LD program creates a PLC program with a graphic symbol like coil or connects, which is used in relay logic diagram. In the below picture, '**Rung Comment**' is the comment for the appropriate rung.

Rung is a unit of continuous line, which is connected vertically. I.e., in the below picture, a rung is from Row 1 to Row 4 and Row 5 is also a rung.

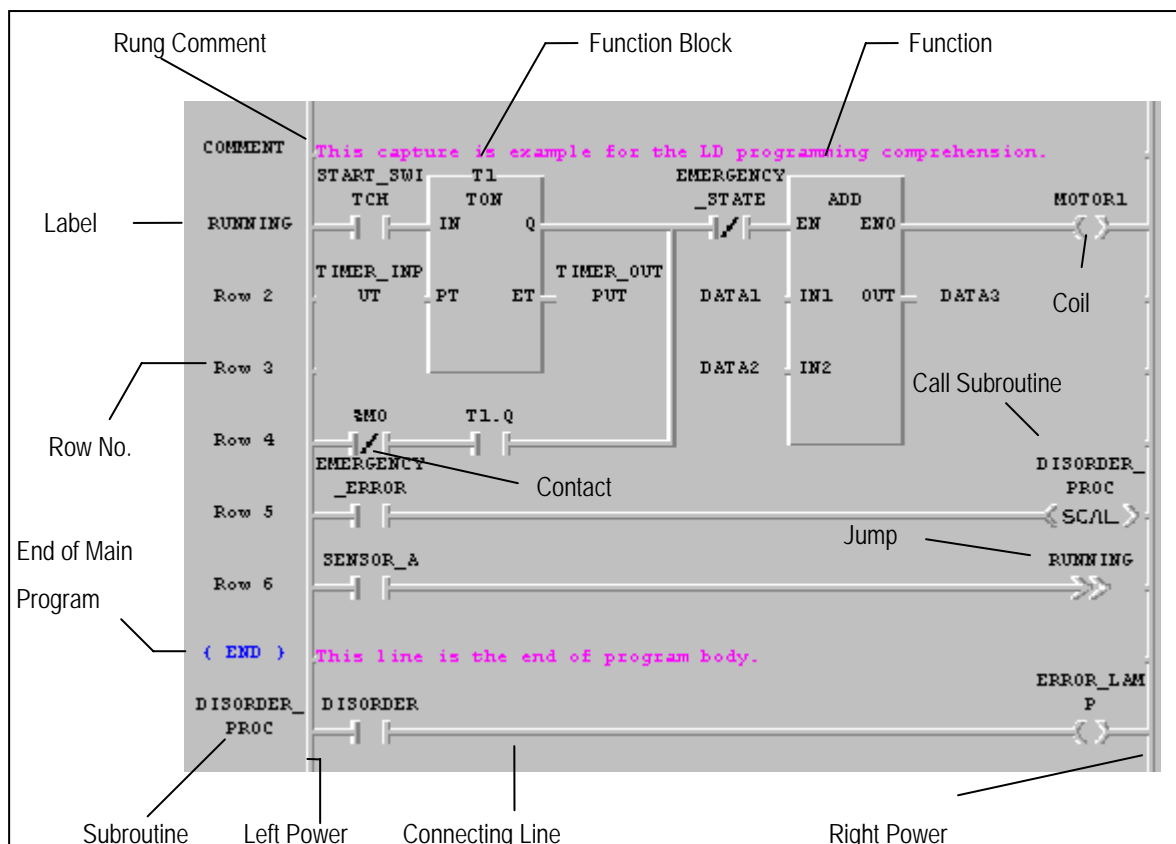

{ **END** } in Row 7 express the end of the main program. Error management, which is continued in the next column, is one type of sub-program and calls this subroutine in Row 1.

It is shows Tools and those names in the Toolbox.

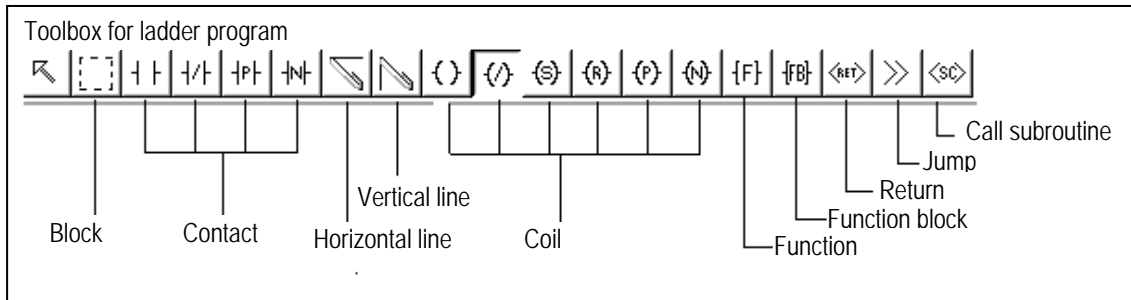


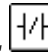
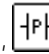
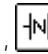


The shape and meaning of each element is as below.



Symbol	Shortcut Key	Comments
	F2	Normally open contact
	F3	Normally closed contact
	Shift-F1	Positive transition-sensing contact
	Shift-F2	Negative transition-sensing contact
	F6	Coil
	F7	Reverse coil
	Shift-F3	Latched coil
	Shift-F4	Unlatched coil
	Shift-F5	Positive transition-sensing coil
	Shift-F6	Negative transition-sensing coil
	F4	Horizontal line
	F5	Vertical line
	F8	Function
	F9	Function Block
	Shift-F7	End command of LD program and Subroutine
	Shift-F8	Jump command for the branch of LD program(Label position)
	Shift-F9	Call a subroutine

If you select an arbitrary element in toolbox, the shape of the mouse is changed to that of the element.

5.6.1. Create a contact



Select a desired contact( ,  ,  ,  ,  , ) in toolbox.

- ◆ In LD program window, move the mouse to a desired position and click the left button.
- ◆ When you draw a line( , ), after moving the mouse from your desired position, drag a mouse by clicking the left button and you can draw a long line.
- ◆ When you draw a continuous line as the above way, if there is another contact under the mouse position, that contact is conserved.




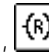
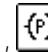
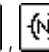


- ◆ Move the cursor to the position that you want to input a contact in..
- ◆ Select a desired contact and line (F2, F3, Shift-F1, Shift-F2, F4, F5) of commands in **Toolbox**.

In case of contact, you can insert it between column 1 of program and column 30. In case of vertical line, you can insert it between column 2 and column 29.

5.6.2. Create a Coil



- ◆ Select a desired coil( ,  ,  ,  ,  , ) in **Toolbox**.
- ◆ In LD program window, move the mouse to a desired position and click the left button.



- ◆ Move a cursor to the position that you want to insert a coil in.
- ◆ Select a desired coil(F6, F7, Shift-F3, Shift-F4, Shift-F5, Shift-F6) of commands in **Toolbox**.

Coil is inserted in the last (31st) column of LD program automatically.


5.6.3. Create a Function




- ◆ Select  in **Toolbox**.
- ◆ In LD program window, move the mouse to a desired position and click the left button.



- ◆ Move the cursor to the position that you want to a function in.
- ◆ Select a function (F8) of commands in **Toolbox** of the menu

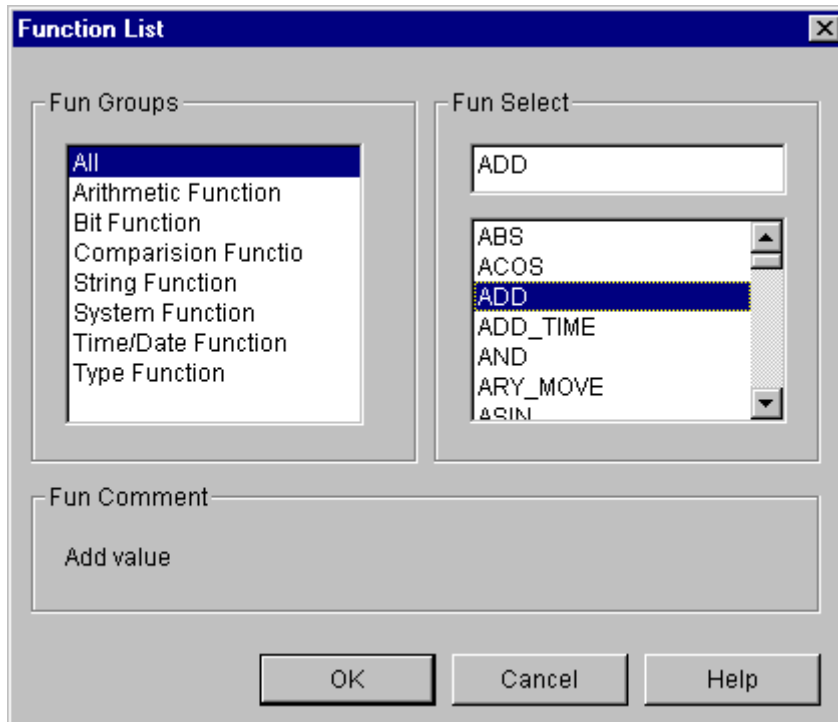


- ◆ Select a function group in **Function List** dialog box. Then only appropriate functions appear in the list.
- ◆ Select a desired function in **Function List** dialog box and click **OK** button.
- ◆ If the selected function is an Extensible Function, then the following dialog box appears automatically.

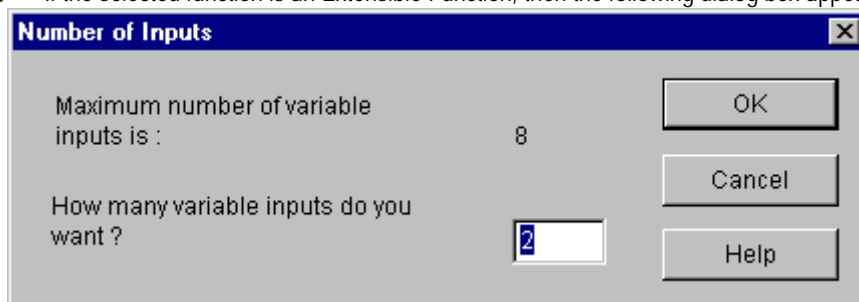

- ◆ Enter the desired input number
You can enter a function between column 2 and column 30 in LD program.


5.6.4. Create a Function Block



- ◆ Select  in **Toolbox**
- ◆ In LD program window, move the cursor to a desired position and click the left button.



- ◆ Move the cursor to the position that you want to insert a function in.
Select a function block (F9) of commands in **Toolbox**.

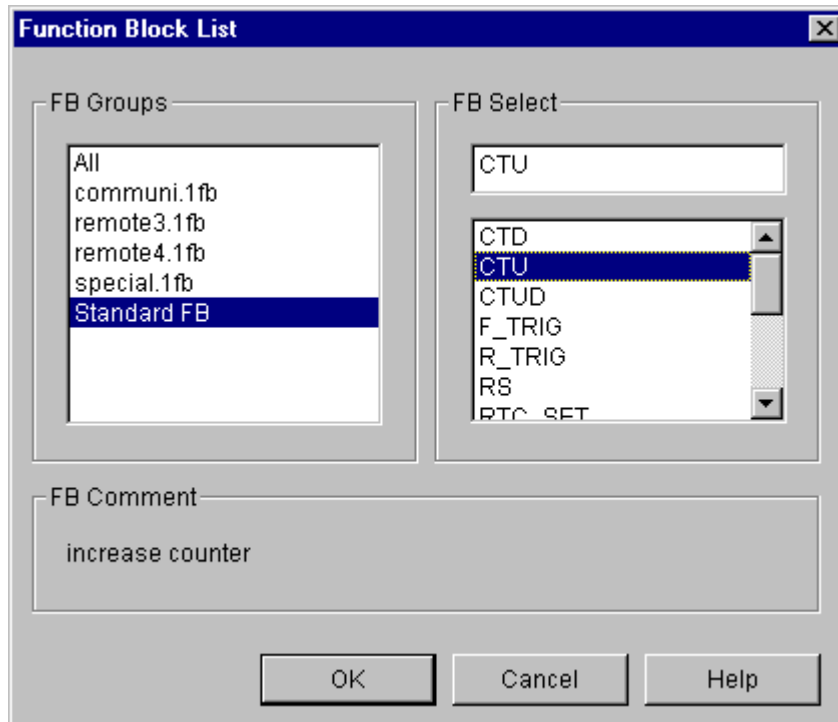


- ◆ Select a function block group in **Function Block List** dialog box. Then only appropriate function blocks appear in the list.
- ◆ Select a desired function block in **Function Block List** dialog box and click **OK** button.
- ◆ Insert a desired instance name of function block in **Add Instance Name** dialog box.

You can insert a function block between column 2 and column 30 in LD program.

5.6.5. Return



- ◆ Select  in Toolbox.
- ◆ In LD program window, move the mouse to a desired position and click the left button.



- ◆ Move the cursor to the position that you want to insert Return in..
- ◆ Select Return (Shift-F7) of commands in Toolbox.

Return is inserted in the last (31st) column of LD program.

5.6.6. Jump and Label

In LD program, Jump command allows you to go directly to the position that you want to branch out. Destination is expressed as a label. Position of label must be inserted on the column '0'. In LD program having subroutine, the label included in the main program must be inserted into jump on the main program and the jump in the subroutine area can branch out to the label in subroutine only.

1) Jump



- ◆ Select  in **Toolbox**.
- ◆ In LD program window, click the left button after moving a mouse to the position that you want.




- ◆ In LD program window, move the cursor to the position that you want to insert a jump in.
- ◆ Select a jump (Shift-F8) of commands in **Toolbox**.

Jump is inserted in the last (31st) column of LD program.

2) Label



- ◆ Select  in **Toolbox**.
- ◆ In LD program window, move the mouse to column '0' and double-click the left button.
- ◆ Select label in the **Label/Rung Comment/The End of Program Body** dialog box.
- ◆ Input a label name in **Add Label** dialog box. (Maximum 16 characters)




- ◆ In LD program window, move the cursor to column '0'.
- ◆ Press **Enter** key.
- ◆ Select Label in the **Label/Rung Comment/The End of Program Body** dialog box.
- ◆ Input a label name in **Add Label** dialog box.


When you designate a label in the jump command, input a label name on the position of jump command.
Example)



5.6.7. Rung Comment




- ◆ Select  in **Toolbox**.
- ◆ In LD program window, move the mouse to column '0' of the first line in a desired rung and double-click the left button. But, if you want to edit and already existing rung comment move the mouse to that comment and double-click the left button on it.
- ◆ Select **Rung Comment** in dialog box.

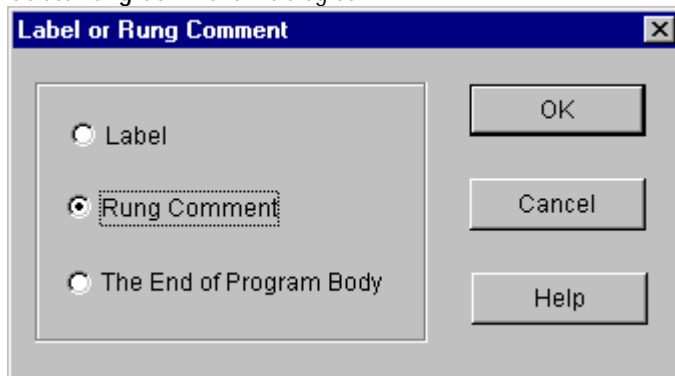


Enter the contents of rung comment in **Rung Comment** dialog box. (Maximum 170 characters)



- ◆ In LD program window, move the cursor to column '0' of the first line in desired rung. But, if you want to edit a created rung comment, move a cursor to that comment.
- ◆ Press **Enter** key.
- ◆ Select **Rung Comment** in **Label/Rung Comment** dialog box.
- ◆ Input a rung comment into the **Rung Comment** dialog box.

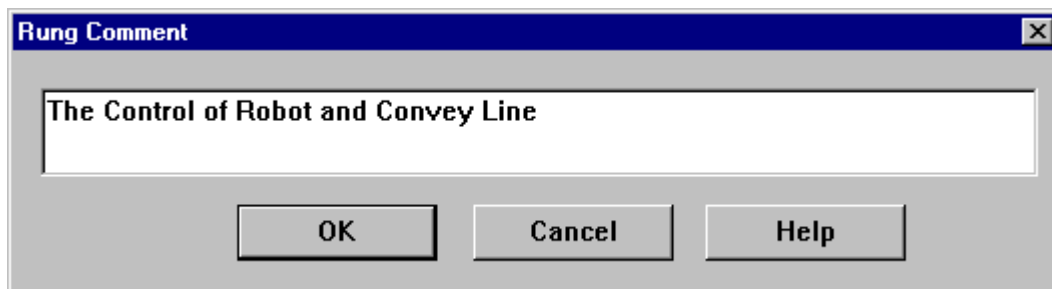


Rung comment is displayed in all through on line as below.

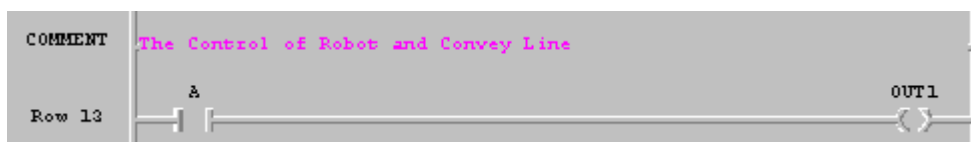

5.6.8. Subroutine Call

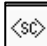

- ◆ Select  in **Toolbox**.
- ◆ In LD program window, move the mouse to a desired position and click the left button.




- ◆ In LD program window, move the cursor to the position that you want to insert a subroutine name in.
- ◆ Select **Toolbox-Subroutine Call <SCAL>** (Shift-F9) in the menu.

Insert a subroutine name on the **Subroutine Call**.


5.6.9. End of Main Program




- ◆ Select  in **Toolbox**.
- ◆ In LD program window, move the cursor to column '0' of the row to designate as the end of main program.
- ◆ Select **The end of Program Body** in **Label or Rung Comment** dialog box.



- ◆ Move the cursor to column '0' of the row to designate as the end of main program.
- ◆ Press **Enter** key.
- ◆ Select **The End of Program Body** in **Label or Rung Comment** dialog box.

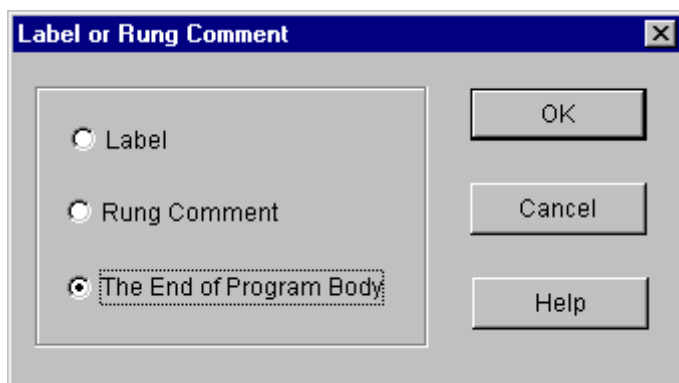


In the end of main program, like below picture, **{END}** is displayed in column '0' of the appropriate row and "This line is the end of main program" is displayed from column '1'.

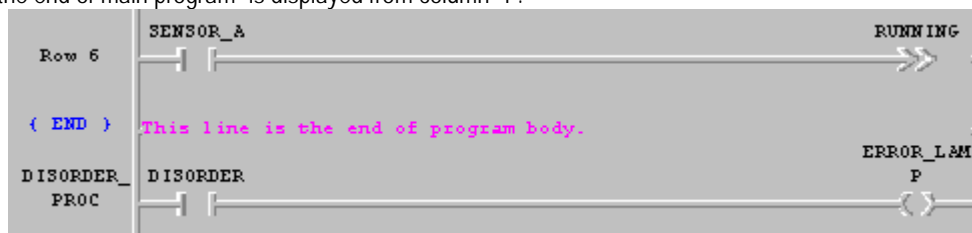

Program logic under the end sign of the main program is regarded as subroutine area.


5.6.10. Variable Input



- ◆ Select  in toolbox.
- ◆ In LD program window, move the mouse on a desired contact, coil or I/O position of Function block and double-click the left button.



- ◆ In LD program window, move the cursor a desired contact, coil or I/O position of Function block and double-click the left button
- ◆ Call a variable dialogue box by pressing **Enter** key.

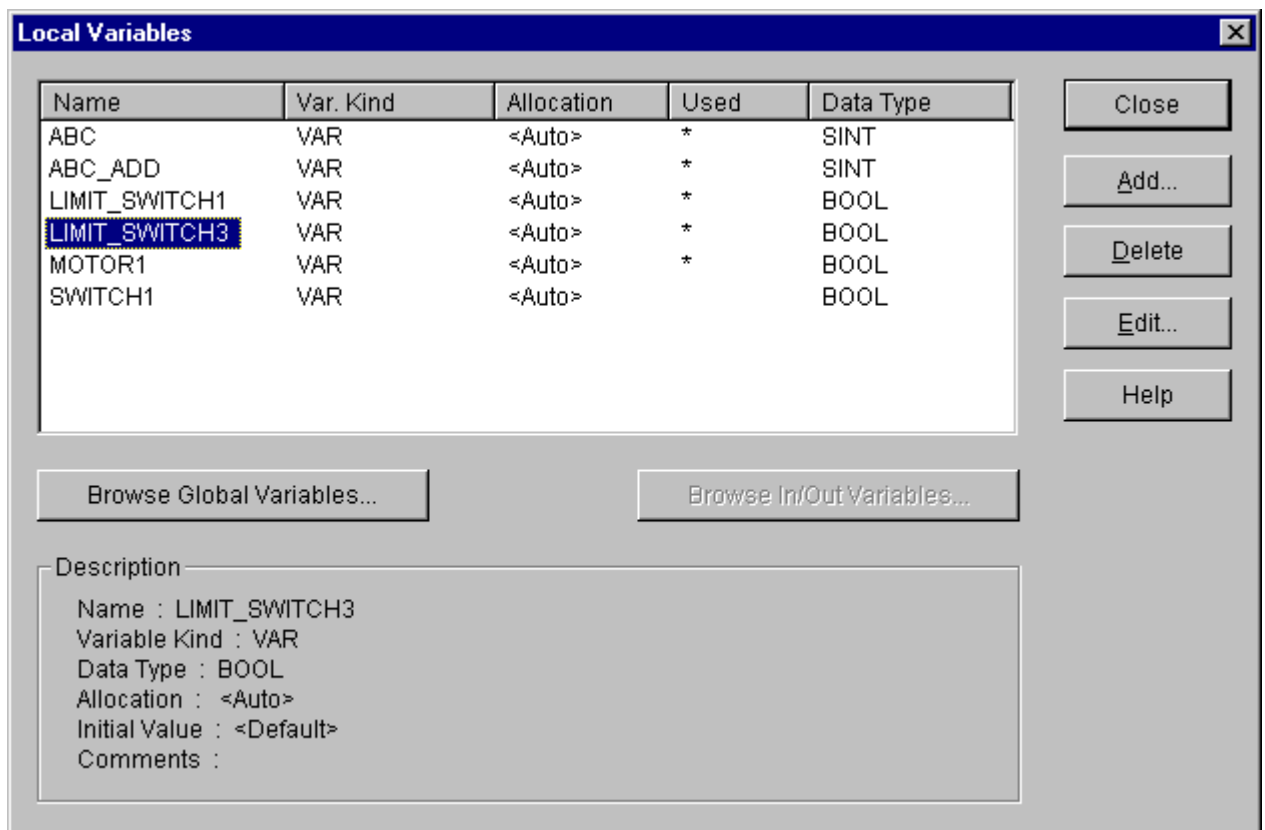


- ◆ You can add, delete or edit a variable in **Variables** dialogue box.
- ◆ In **Variables** dialogue box, enter the variable name to be used and click **OK** button. If you enter an already declared variable name, then variable input is over here.
- ◆ If you enter a new variable name, **Add/Edit Variables** dialogue box, which determines the variable properties, appears.

- ◆ Refer to the '5.5 Edit a Variable' for detail information about **Add/Edit Variables** dialog box.
- ◆ Press **OK** button.

5.6.11. Edit a Block

Before editing a block, you must setup the range to be applied as a block.
Namely, if you want to copy or delete a continuous program, you must designate a range desired as a block before selecting a block editing command.



- ◆ Select  in toolbox.
- ◆ In LD program window, after moving a mouse to the start point of a block by pressing the left button, drag the selected range to the last row of the range to select.



- ◆ In LD program window, move the cursor to the start point of a block.
- ◆ With pressing **Shift** key, move the cursor with arrow key to the last row of range to select.

Note

When you setup a block, if the end of block range is in a function or function block, the function or function block is automatically included in the block.

1) Cut

After selecting a block,

- ◆ Select **Edit-Copy**(Ctrl+X, ).


2) Copy

After selecting a block,

- ◆ Select **Edit-Copy**(Ctrl+C, ).


3) Paste

After copying or cutting a block,

- ◆ In LD program window, move the cursor to the position that you want to paste on.
- ◆ Select **Edit-Paste**(Ctrl+V, ).


4) Delete


After selecting a block,

- ◆ Select **Edit-delete**(Delete, ).

5.6.12. Find


This command allows you to find a variable name, position of contact and etc, which are used in the program


Call Find dialog box by selecting Edit-Find ().

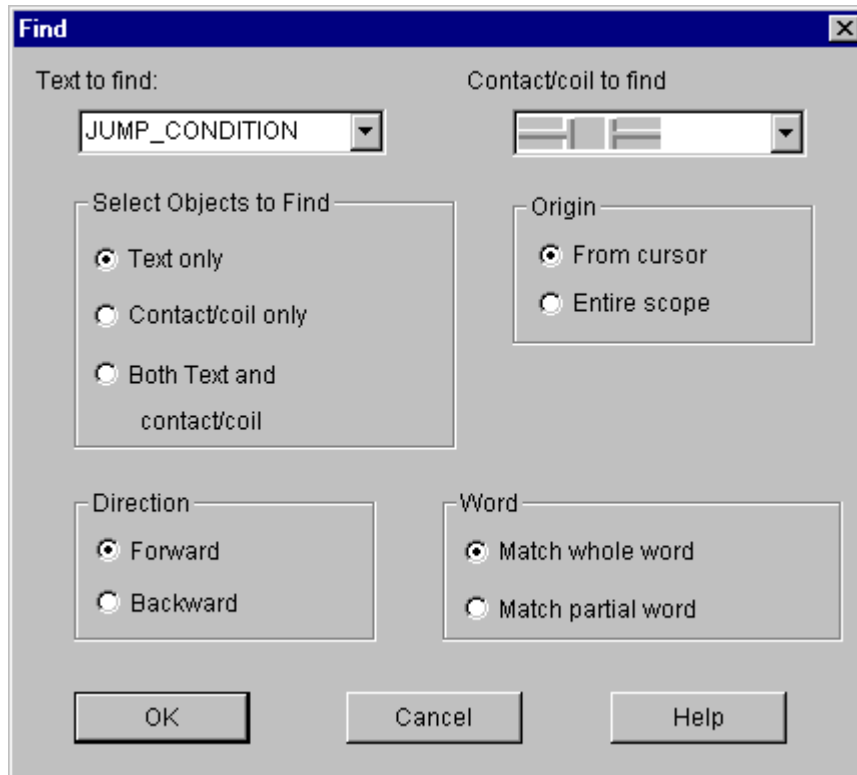

- ◆ In **Text to find** edit box of **Find** dialog box, enter the string that you want to find.
- ◆ Select the following options to find and click **OK** button.
 - (1) Contact/Coil to find
Select the contact or coil that you want to find.
 - (2) Select Objects to find
Text only : Find only the content o character.
Contact/Coil only : Find only LD program elements like contact, coil or etc.
Both text and contact/Coil : Find a content of character and LD program elements like contact, coil or etc. simultaneously.
 - (3) Origin
Select the range where find command is executed.
From cursor : Find from current cursor position.
Entire scope : Find through the whole program.
 - (4) Direction
Select the direction that find command is executed.
Down : Find command is executed downward.
Up : Find command is executed upward
 - (5) Sensitivity
Select an accordance degree in finding a content of character.
Match whole word only : Find only an exactly corresponding word.
Regular expression : Find also a partially corresponding word.

5.6.13. Replace


Call replace dialog box by selecting **Edit-Replace**().

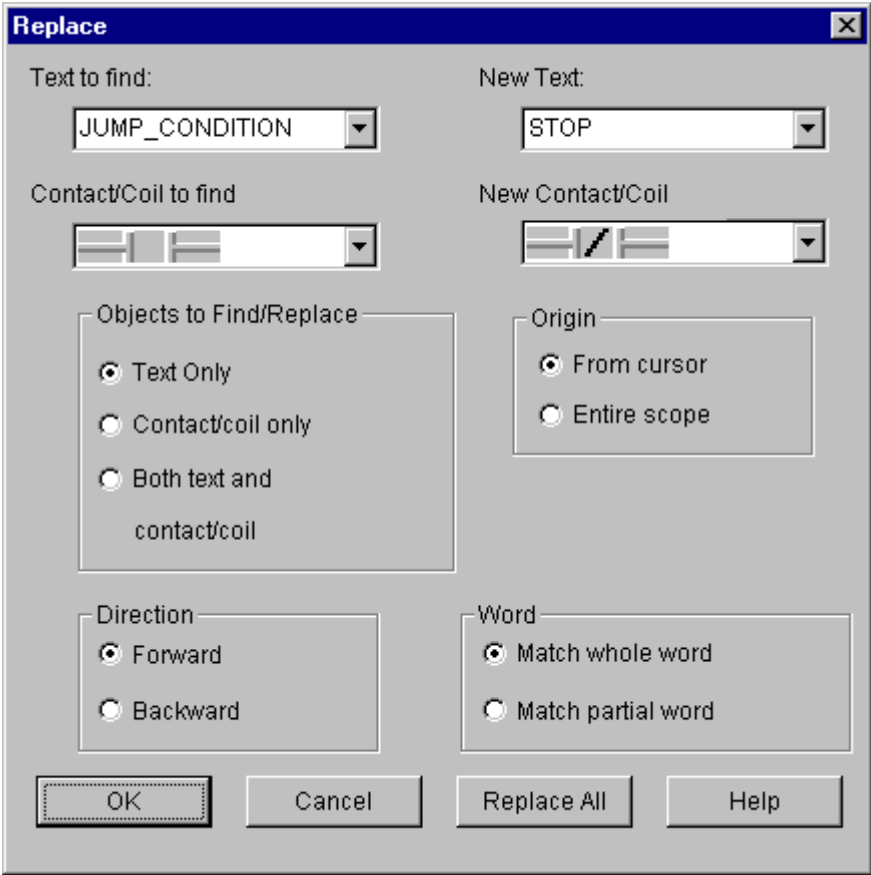


- ◆ Enter the character that you want to change in **Text to find** edit box.
- ◆ Select the element of LD program to change in **Contact/coil** list box.

LD Program Elements						
			LABEL	FUN	FB	FUN/FB-10

- ◆ Enter the character that you want to replace in **New text** edit box.
- ◆ Select the element of LD program to replace in **New Contact/Coil** list box.
- ◆ Select the options in the same way of find command and click **OK** button.

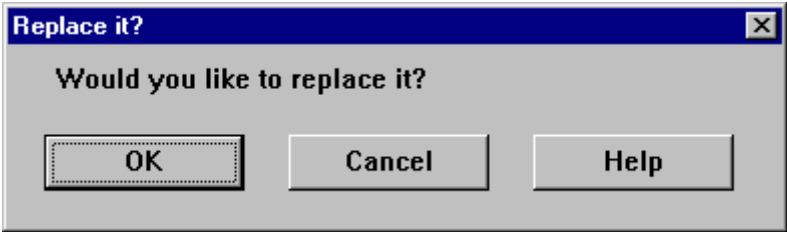

- ◆ Click **OK** button.

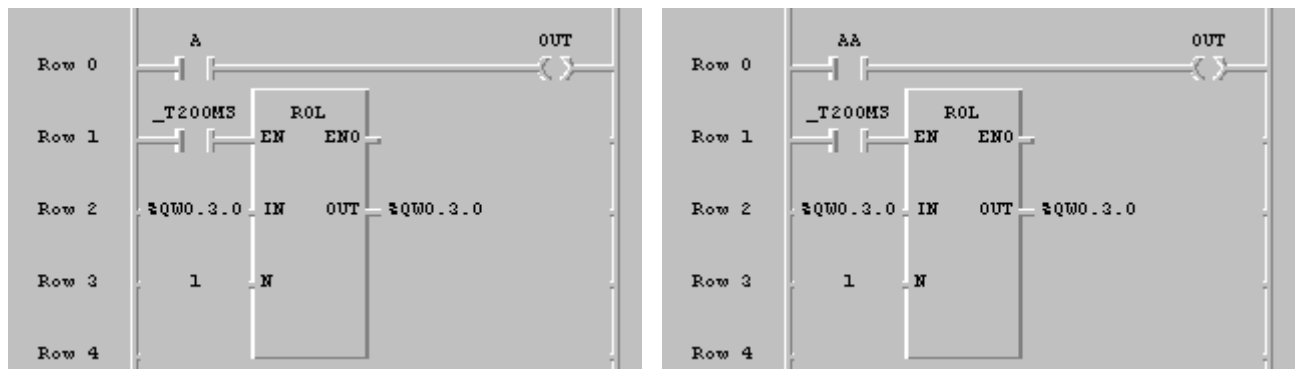

Before

After

5.6.14. Find/ Replace Again

If you executed Find/Replace command before, execute that command again with the condition that designated before.

- ◆ Select **Edit-Again**(Ctrl+F3).

5.6.15. Go to

- ◆ Select **Edit-Go to**.

Go to Line
✕

The las line number is: 39

Select the line number to go to (0 based) :

4

OK

Cancel

Help


- ◆ In **Go to line** dialog box, enter the row number that you want to find.
- ◆ Click **OK** button.

5.6.16. zoom In/ Out


This command allows you to adjust the size of LD Program element.

- ◆ Call a dialog box by selecting **Edit-Condense**.
- ◆ Select a desired screen size in **Condense Level** dialog box.
(100%, 80%, 70%, 50%, 25%, 12%).

Example) In case that compression rate is 100%

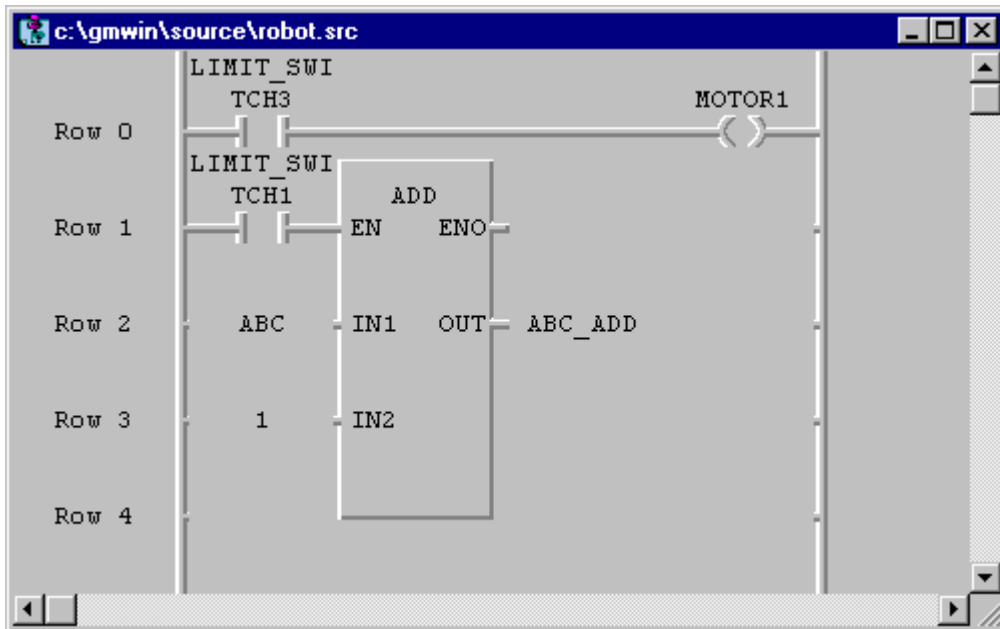

In case that compression rate is 100%

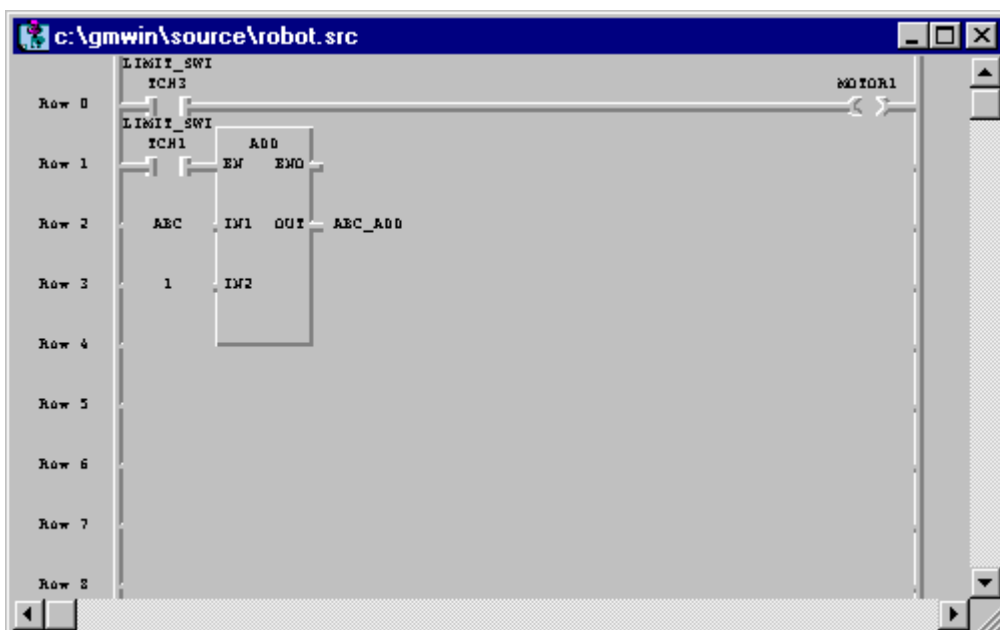

Note


In case that compression rate is 25%, 12%, LD program is not displayed as 3D type.

5.6.17. Variable Comment

LD program supports the function that indicates the comment of each variable.


- ◆ Select **Edit-Variable comment (Ctrl+M)** in the pull-down menu.
- ◆ If there is a check mark at the left side of **Edit-Variable comment (Ctrl+M)**, a current window is in the state that shows a variable comment and if there is not, the window is in the state that does not show the comment.

Example) In case that express a variable comment

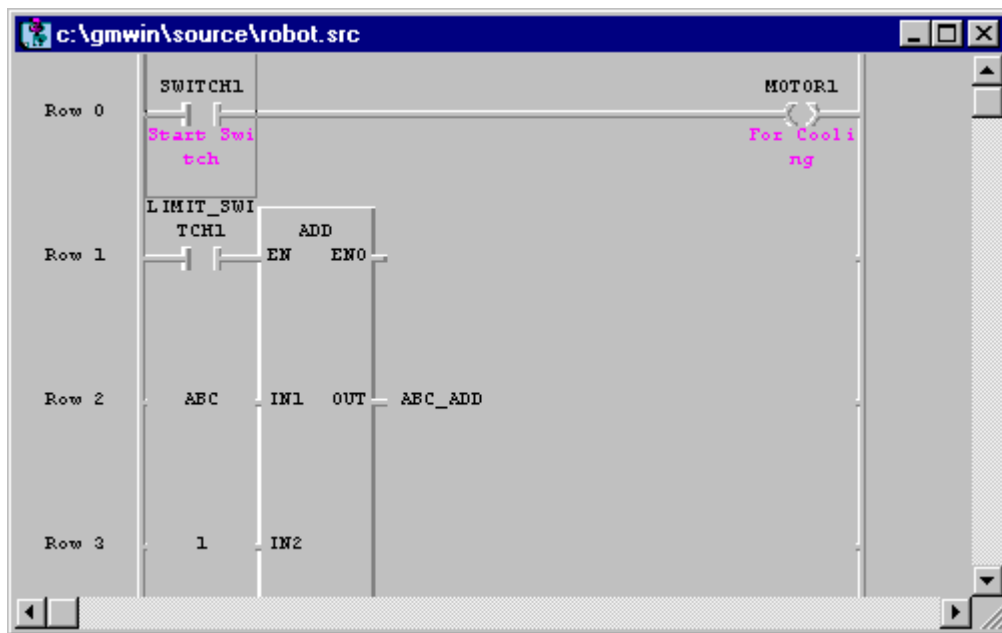

5.6.18. Delete Row



- ◆ Select () in toolbox.
- ◆ In LD program window, move the mouse to the row that you want to delete and move the cursor with clicking a left button.
- ◆ Select **Edit-Delete Line**.




- ◆ In LD program window, move the cursor to the row that you wish to delete.
- ◆ Select **Edit-Delete Line (Ctrl+D)**.

5.6.19. Delete Cell

Delete the cell that cursor is on.

If the current position of the cursor is empty space, this function deletes the empty cell by one column.




- ◆ Select () in toolbox.
- ◆ In LD program window, move the mouse to the cell you want to delete and move the cursor with clicking a left button.
- ◆ Select **Edit-Delete Cell**.



- ◆ In LD program window, move a cursor to the cell to be deleted.
- ◆ Select **Edit-Delete Cell (Delete)**.

5.6.20. Insert Line



- ◆ Select () in toolbox.
- ◆ In LD program window, move the mouse to the position that you want to insert the row and move the dursor with clicking a left button.
- ◆ Select **Edit-Insert Line(Ctrl+N)**.




- ◆ In LD program window, move the mouse to the position that you want to enter the row.
- ◆ Select **Edit-Insert Line(Ctrl+N)**.

5.6.21. Insert Cell

Insert an empty cell in the position where a cursor is on.



- ◆ Select () in toolbox.
- ◆ In LD program window, move the mouse to the position where you want to insert a cell and clicking a left button.
- ◆ Select **Edit-Insert Cell(Ctrl+I)**.




- ◆ In LD program window, move the cursor to the position where you want to insert the cell.
- ◆ Select **Edit-Insert Cell(Ctrl+I)**.

5.6.22. Move/Copy Cell



(for copy, mouse and keyboard are used simultaneously)

- ◆ Select () in toolbox.
- ◆ In LD program window, move the mouse to the cell to move/copy.
- ◆ Drag to a desired position with clicking a left button of mouse.
- ◆ In case of moving, release the ldf button of the mouse.
In case of copy, release a left button of mouse with pressing CTRL key.

5.6.23. Pop-Up Menu



- ◆ Click a right button of the mouse on an arbitrary position or desired position.
- ◆ Select a desired command in menu that is appeared in right side.
Pop-Up Menu are various according to the position of the mouse. You can select frequently used functions in Pop-

Up Menu.


To Arrow mode	Ctrl+A
U <u>ndo</u> (Variable Edit)	Ctrl+Z
C <u>ut</u>	Ctrl+X
C <u>opy</u>	Ctrl+C
P <u>aste</u>	Ctrl+V
D <u>elete</u>	Del
F <u>ind</u> ...	Ctrl+F
R <u>eplace</u> ...	Ctrl+H
A <u>gain</u>	Ctrl+F3
G <u>oto</u> ...	
C <u>ondense</u> ...	Ctrl+E
V <u>ariable comment</u> ...	Ctrl+M
D <u>elete line</u>	Ctrl+D
Delete cell(H)	Del
I <u>nsert Line</u>	Ctrl+L
I <u>nsert cell</u>	Ctrl+I

If you use a Pop-up menu, then you don't need to use each command through the pull-down menu. In the upper menu, To Arrow Mode is the command that changes the input state of a current mouse into arrow mode to select or enter the data or elements of the program.

5.6.24. Undo

This command allows you to cancel previously edited action.



- ◆ Select **Undo**(Ctrl+Z ; ).




- ◆ Select **Undo**(Ctrl+Z).

5.6.25. Print and Preview

Print


- ◆ Call a LD Print Option dialog box by selecting **Project-Print**.

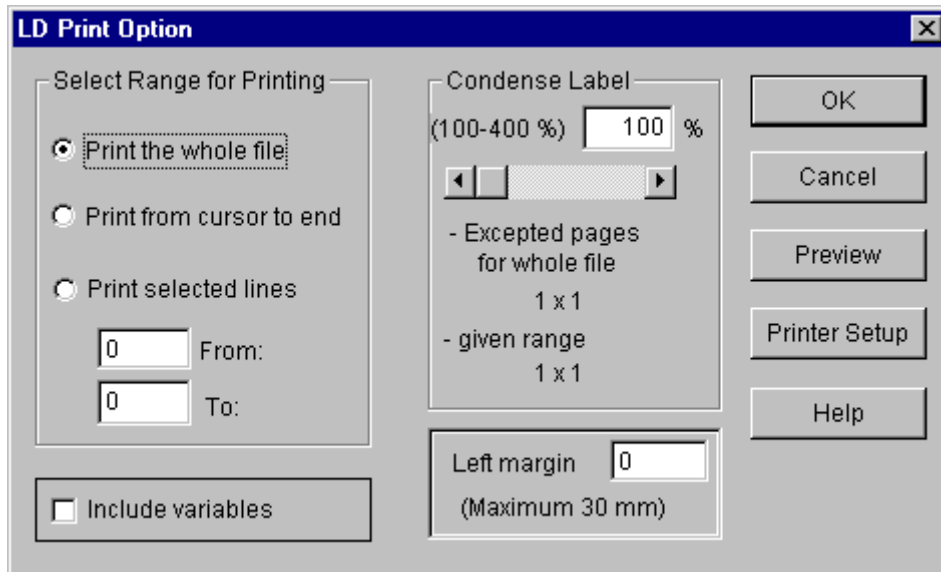

- ◆ In **Select Range for Printing** group box of **LD Print Option** dialog box, select the range of LD program to print.
- ◆ In **Left Margin** group box, enter the blank in mm.(Maximum size is 30mm).
- ◆ In **Condense Label** group box, enter the compression rate of content to print within the range that is from 100% to 400%. Indicates the required page number of printing the whole file and the required page number of printing the given range that user designate in **Select Range for Printing**.


Preview

- ◆ **Preview** button of **LD Print Option** dialog box is used when you want to see the outline of contents to print before printing actually on paper.
In **Preview** dialog box, you can determine either showing several pages simultaneously in a screen or by one page.

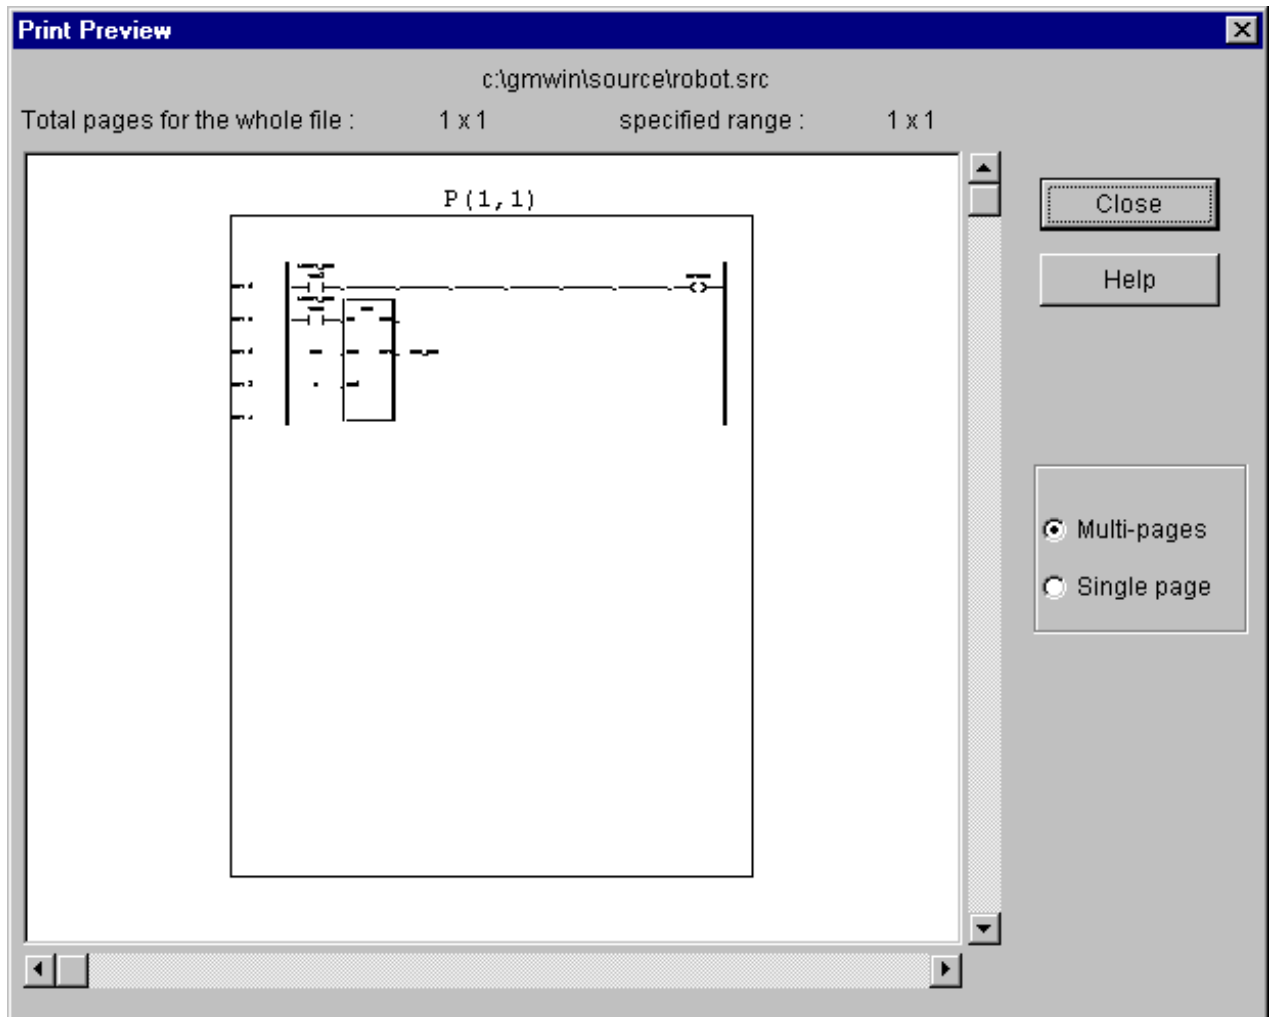

5.7. Edit SFC


SFC supports the method that divides a PLC language (IL,LD) into step and transition according to the execution order. SFC consists of the following elements.

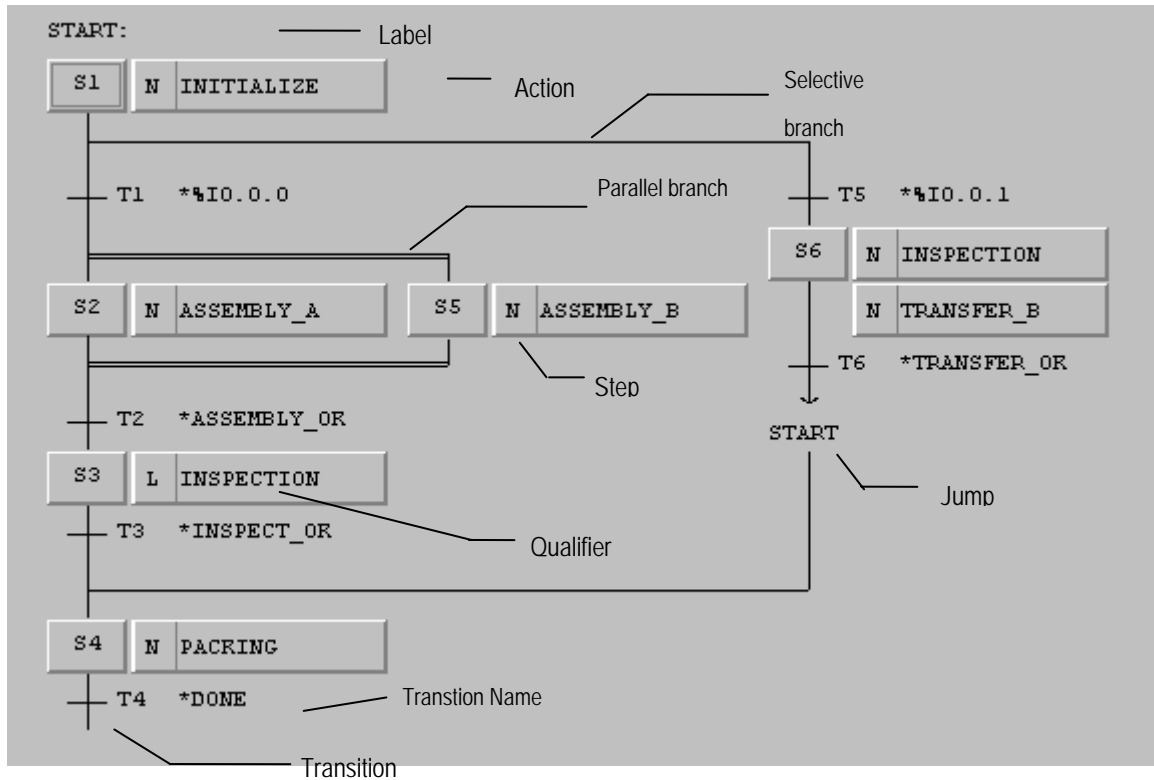

e Note

In case of executing the automatic control of a machine with PLC, SFC (Sequential Function Chart) is the most optimal structural programming method.

SFC Toolbox.

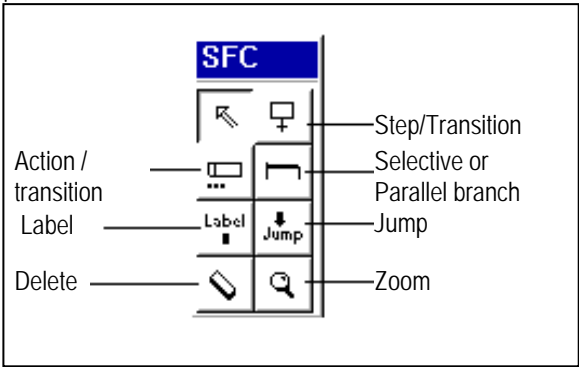

	Step	Indicates the unit of a sequence control with connecting to action
	Transition	Indicates the condition for executing from an active step to next step
	Selective Branch	The executing flow is determined by executive condition
	Parallel Branch	Used to control several sequences simultaneously
	Label	The position where an executive flow start by jump
	Jump	Used to change an executive flow
	Action	Indicates an executing content in the specified step

Select the element to insert and click the left button of the mouse on a desired position.

5.7.1. Create a Step/Transition


Step/Transition or Transition/Step is created in pairs by current position.




◆ Initial screen of SFC program is as below.



- ◆ Select () in toolbox.
- ◆ Move the muse to the position marked , then () symbol appears in the screen.
- ◆ Click the left button of mouse on the position marked .

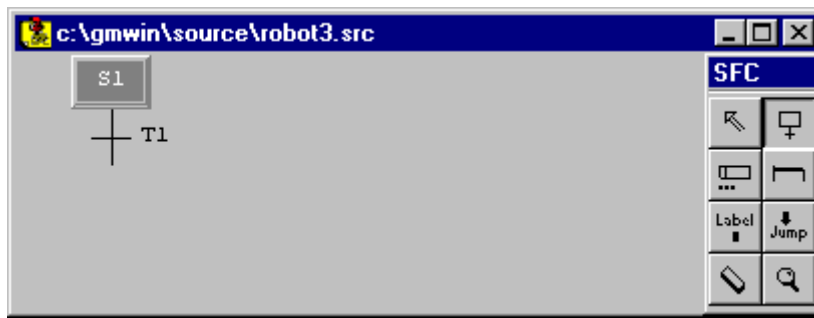

New Step/Transition is created on the position marked .

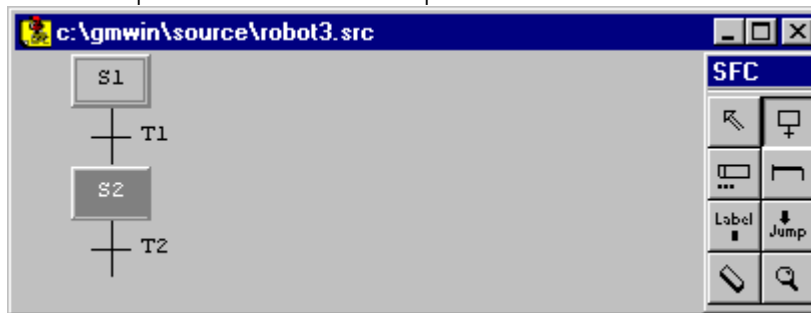
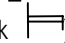



- ◆ Move the cursor with key to the position that you want to creates step/transition.
- ◆ Select **Toolbox-Step(F2)**.

5.7.2. Create a Parallel Branch


1) To create a parallel branch for the first time



- ◆ Select () in toolbox and move the mouse to the transition(T1) where branch starts and click a left button (You can see a mark ).

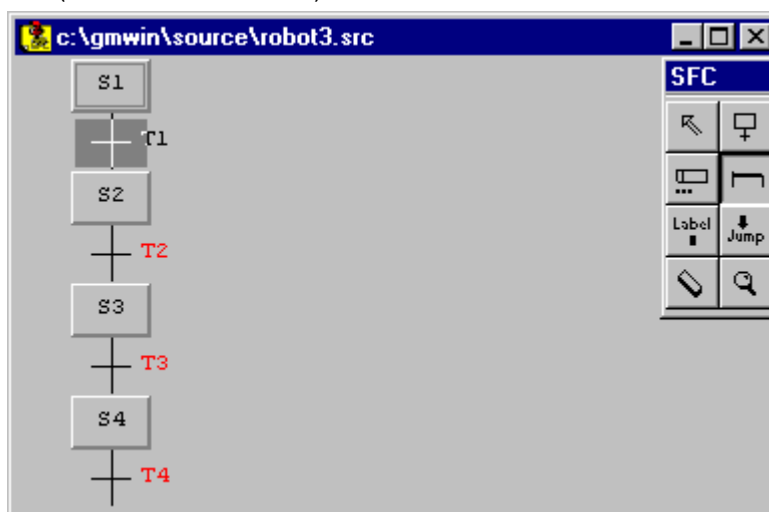

- ◆ Transition (T2,T3,T4) are active in red.
- ◆ Move the mouse to the transition (T3) where branch ends and click a left button.

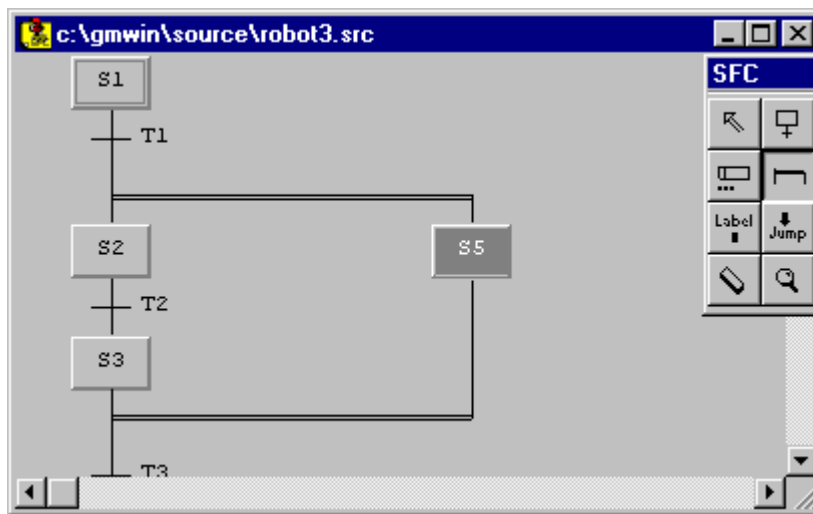


- ◆ Parallel branch and new step (S5) are created.




- ◆ Move the cursor to the transition where branch starts with key.
- ◆ Select **Toolbox-Branch(F3)**.
- ◆ Move the cursor to the transition where branch ends with key.
- ◆ Select **Toolbox-Branch(F3)**.


2) To expand a parallel branch



- ◆ Select () in toolbox .
- ◆ Move the mouse to the start position of the parallel branch and click a left button.

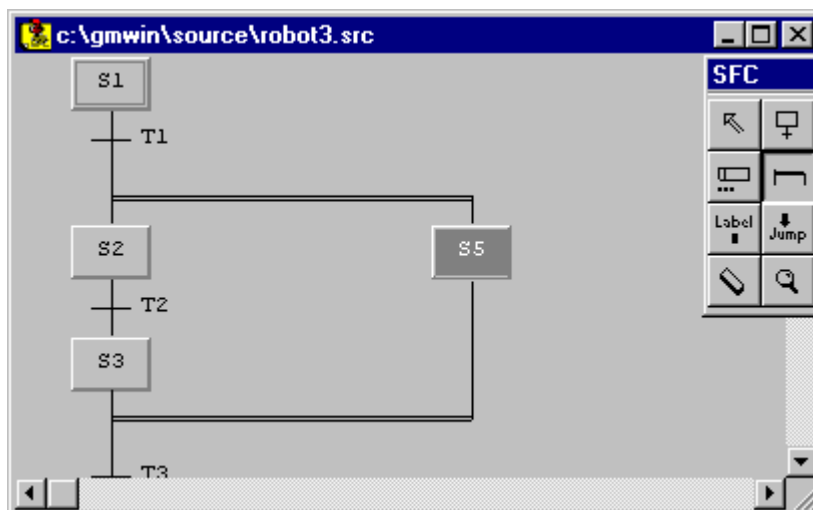

- ◆ Parallel branch and new step (S6) are created.

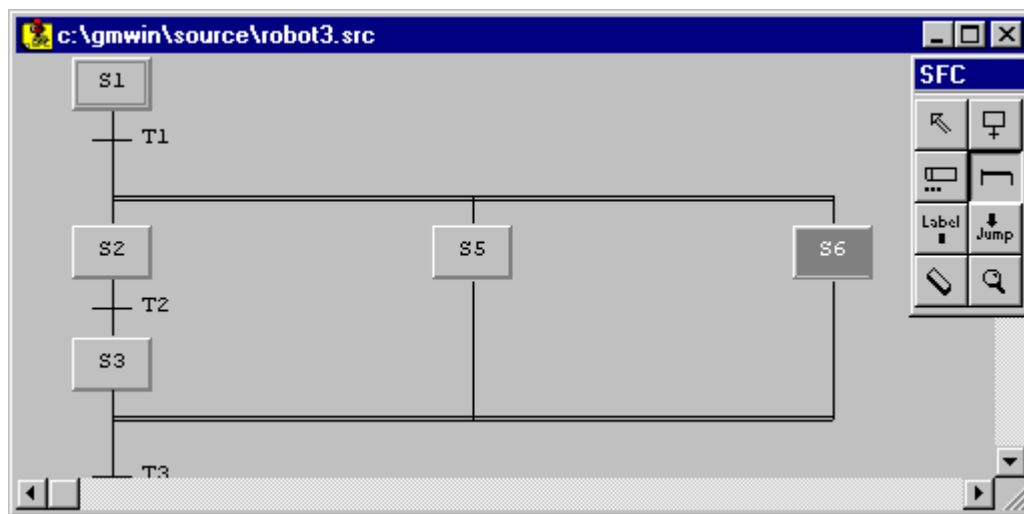




- ◆ Move the cursor to the start position of a parallel branch where you want to insert a branch with key.
- ◆ Select **Toolbox-Branch(F3)**.

5.7.3. Create a Selective Branch


1) To create a selective branch initially.



- ◆ Select () in toolbox and move the mouse to the step(S2) where branch starts and click a left button (You can see a mark ).

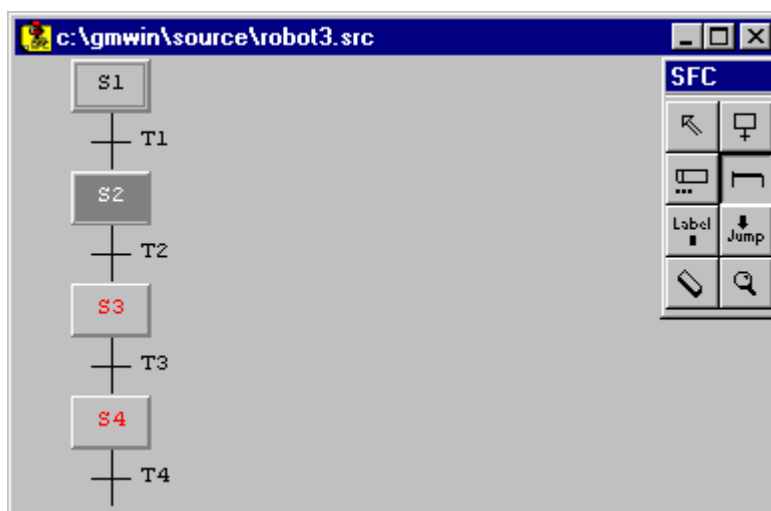

- ◆ Steps(S3,S4) are active in red.
- ◆ Move the mouse to the step(S4) where branch ends and click a left button.

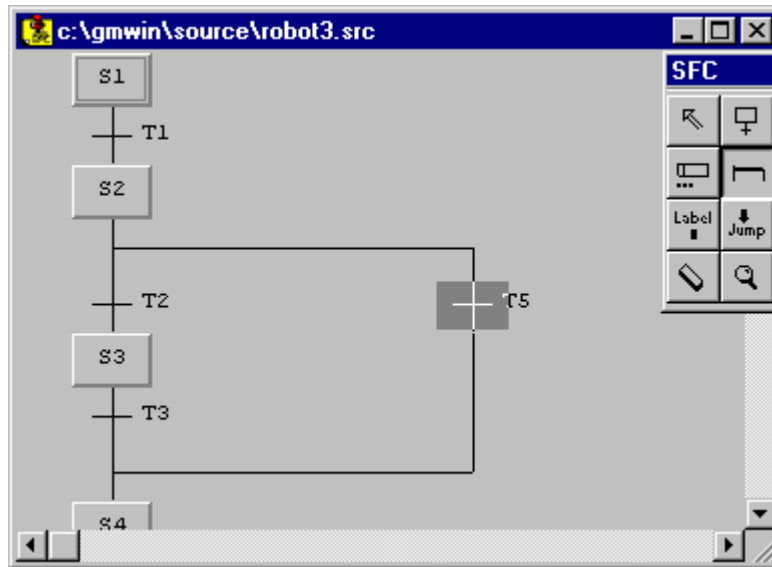


- ◆ Selective branch and new transition (T5) are created.




- ◆ Move the cursor to the step where branch starts with key.
- ◆ Select **Toolbox-Branch(F3)**.
- ◆ Move the cursor to the step where branch ends with key.
- ◆ Select **Toolbox-Branch(F3)**.


2) To expand a selective branch



- ◆ Select () in toolbox.
- ◆ Move the mouse to the start position of a selective branch and click a left button.

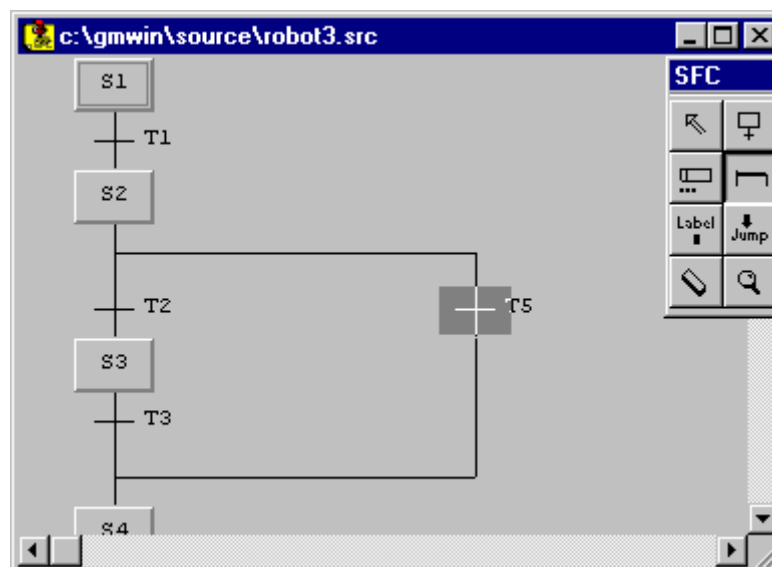

- ◆ Selective branch and new transition (T6) are created.

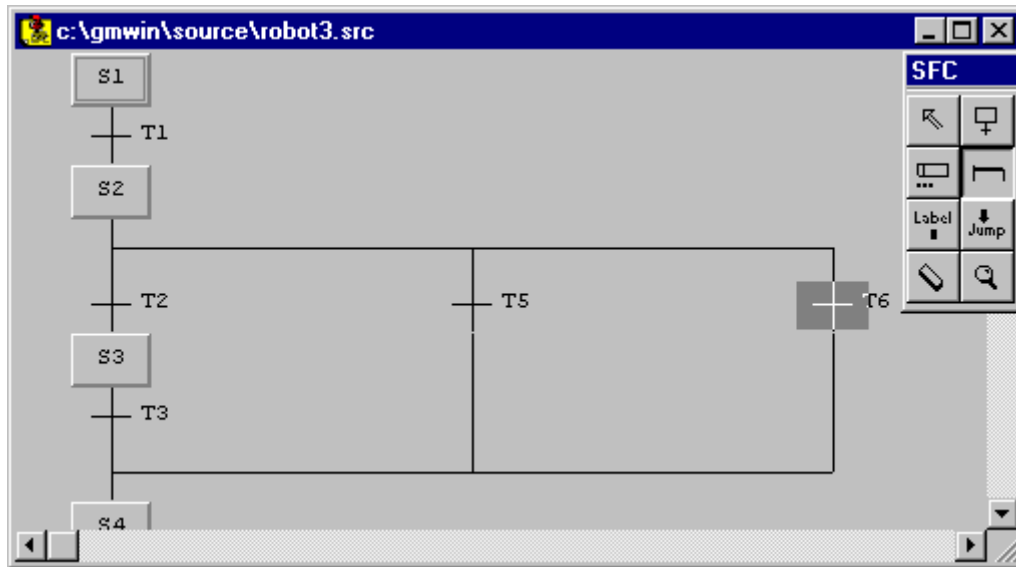


- ◆ Move the cursor to the start position of a selective branch where you want to insert a branch with key.
- ◆ Select **Toolbox-Branch(F3)**.


5.7.4. Create a Label




- ◆ Select () in toolbox.
- ◆ Move the mouse to the step (is marked with  ABC:) and click a left button.

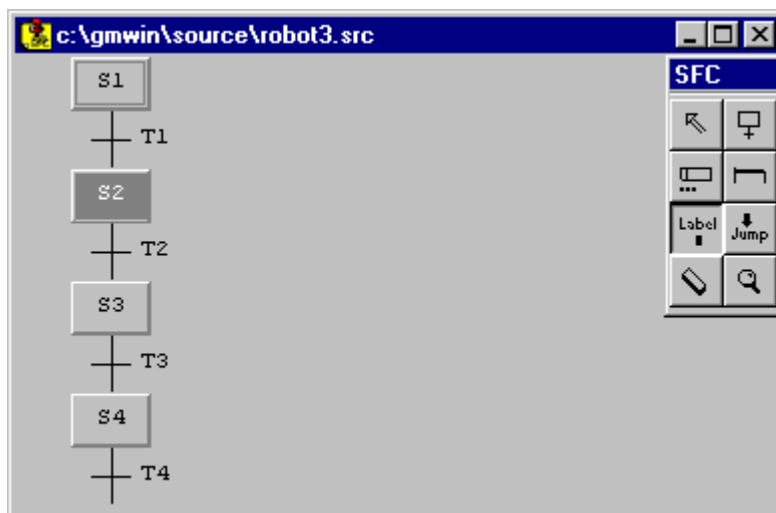

- ◆ Input a label name in **Label** dialog box and click OK button.
- ◆ Maximum size of a label name is 10 characters.

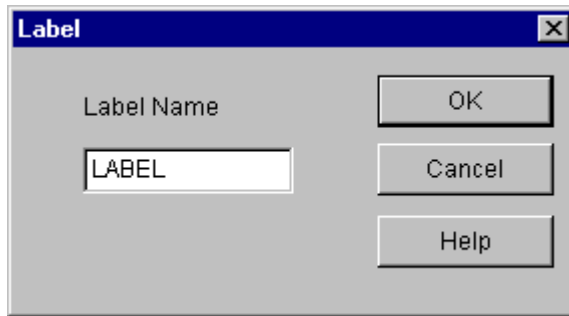

- ◆ Create a label

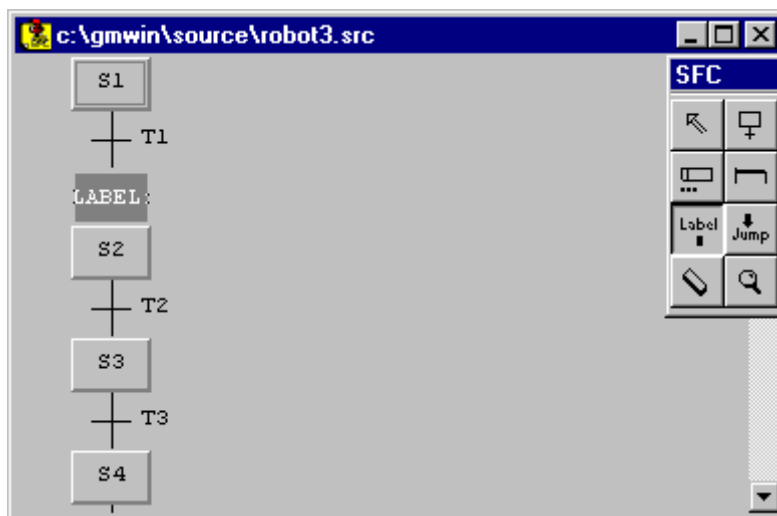

Note

Label is only inserted in the front of Step.




- ◆ Move a cursor to the step with key.
- ◆ Select **Toolbox-Label(F5)**.
- ◆ Input a label name in **Label** dialog box and click **OK** button.

5.7.5. Create a Jump



- ◆ Select () in toolbox.
- ◆ Move the mouse to a desired position (is marked with ( ABC:)) for jump and click a left button.

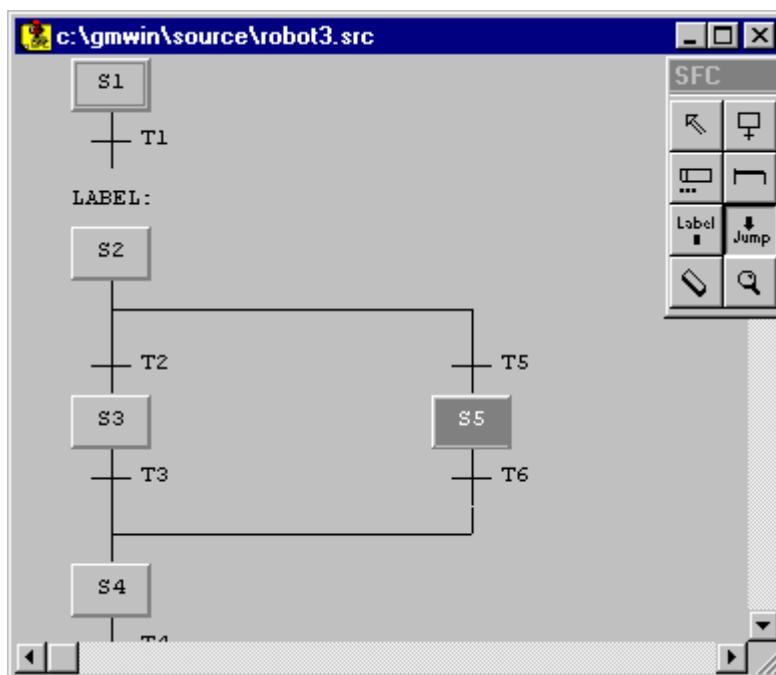


- ◆ Enter the jump name in **Jump** dialog box and click **OK** button.


The screenshot shows a dialog box titled "Jump" with a close button (X). It contains two text input fields: "Jump Name" with the text "JUMP" and "Label Used" with the text "LABEL". To the right of the input fields are three buttons: "OK", "Cancel", and "Help".

- ◆ Maximum size of the jump name is 10 characters.

Note

- Available position for Jump
- Transition at the end of the selective branch
 - Transition at the last end of SFC program

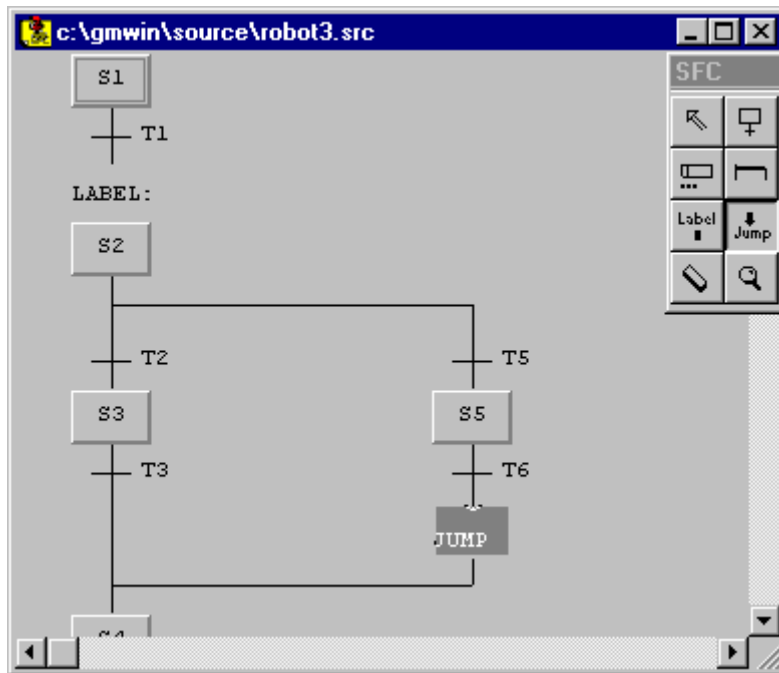


- ◆ Move a cursor to a desired position (is marked with  ABC:) for jump with key.
- ◆ Select **Toolbox-Jump(F6)**.
- ◆ Enter the jump name in **Jump** dialog box and click OK button.

5.7.6. Create an Action

To connect an action to a step.



- ◆ Select () in toolbox.
- ◆ Move the mouse to a step and click a left button.



- ◆ Move the cursor to the step with key.

The 'Action' dialog box contains the following elements:

- Kind:** Radio buttons for 'Program' (selected) and 'Variable'.
- Name:** A text input field.
- Comment:** A text input field.
- List:** A table with columns 'Name' and 'Kind'. A 'Flag' button is located to the right of the table.
- Qualifier:** A dropdown menu currently showing 'N(Non-stored)'.
- Time:** A text input field.
- Buttons:** 'OK', 'Cancel', and 'Help' at the bottom.


- ◆ Select **Toolbox-Action/Transition(F4)**.
- ◆ Select whether you setup an action as a program or as a Boolean variable output in **Kind** radio button of **Action** dialog box.
If you setup an action as a variable output, the designated variable is outputted as '1' when the action is in active.

1) In case of setting up an action as a program

- ◆ Enter the variable name in the **Name** edit box (maximum size is 16 characters).
When you want to connect an already used action, select the action in list box.
- ◆ Enter the comment for the action in the **Comment** edit box (maximum size is 40 characters).

2) In case of setting up an action as a variable

- ◆ Enter the variable name in the **Name** edit box (maximum size is 16 characters).
When you want to connect an already declared variable, select the variable in list box. Select a desired qualifier in **Qualifier** list box.
- ◆ If the selected qualifier has a time value (D,L,SD,SL,DS), enter the time value in the **Time** edit box.
Example) T#10s.
- ◆ click **OK** button.

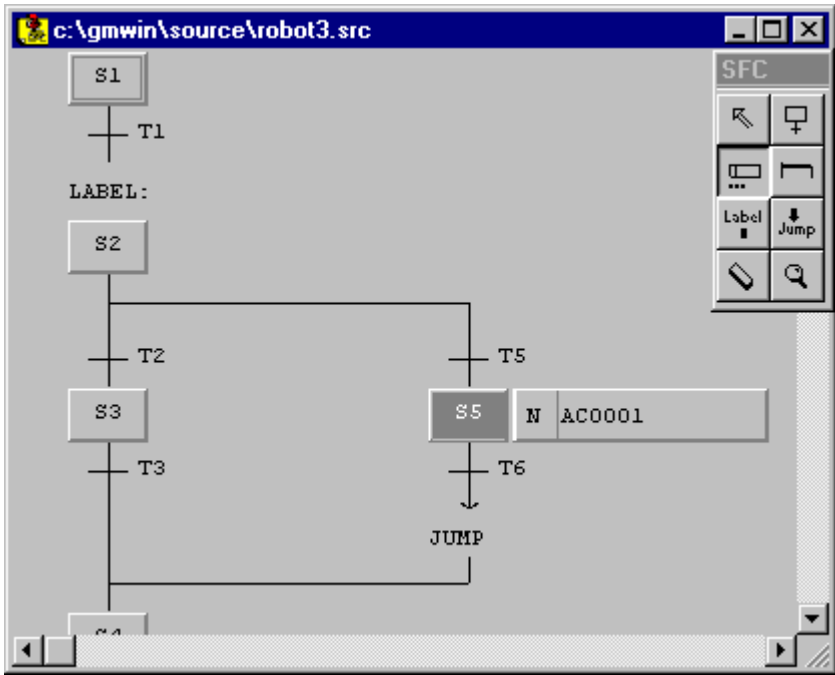


3) Kind and Function of Qualifier

Symbol	Function	<div>Step: Active Condition</div> <div>Passive Condition</div>
N(Non-stored)	Action is executed while Step is in active.	
R(overriding Reset)	R(overriding Reset) makes stopping the execution of action executed by qualifier(S,SD,DS,SL) before.	
S(Set)	After Step is in active, an action is executed until R qualifier acts.	
L(time Limited)	After Step is in active, an action is executed as long as setting time.	
D(time Delayed)	After Step is in active, the execution of action is delayed as long as setting time.	
P(Pulse)	Action is executed at the only moment when Step is in active.	
SD(stored & time Delay)	After Step is in active, an action is executed after the lapse of setting time until R qualifier acts. If the R qualifier, However, acts before the lapse of setting time, the action is not executed.	
DS(Delayed & stored)	After Step is in active, an action is executed after the lapse of setting time until R qualifier acts. But, if the step is in passive or the R qualifier acts before the lapse of setting time, the action is not executed.	
SL(stored & time Limited)	After Step is in active, an action is executed as long as setting time, and when the setting time elapses or R qualifier acts, the action is stopped.	

5.7.7. Create a Transition


To connect Name to Transition.



- ◆ Select () in toolbox.
- ◆ Move the mouse to a transition and call a transition dialog box by clicking a left button.



- ◆ Move the cursor to a transition with key .
- ◆ Select **Toolbox-Action/Transition(F4)**.

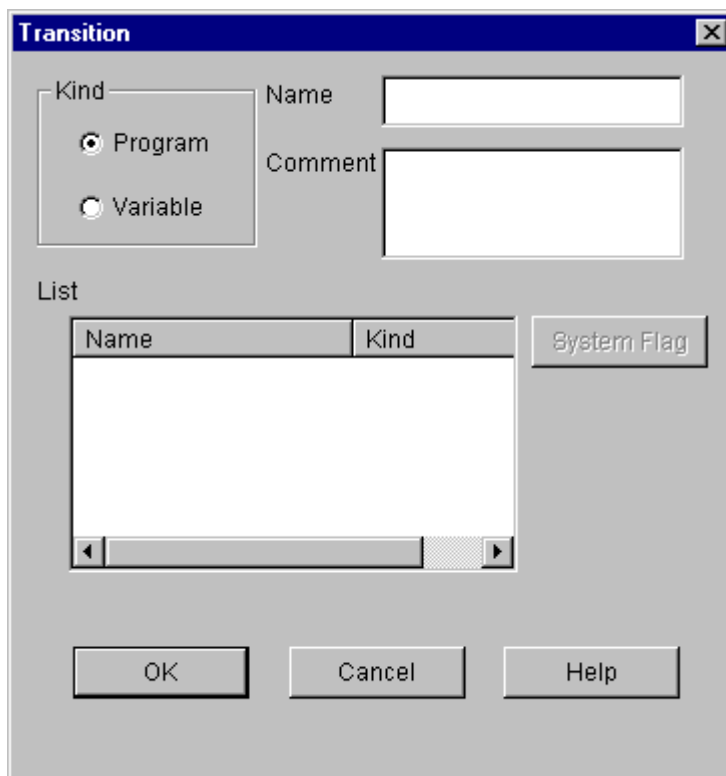

The **Transition** dialog box is shown. It has a title bar with a close button. Inside, there are two radio buttons under the **Kind** label: **Program** (selected) and **Variable**. To the right of these are two text input fields: **Name** and **Comment**. Below these is a **List** section containing a table with two columns: **Name** and **Kind**. To the right of the table is a **System Flag** button. At the bottom are three buttons: **OK**, **Cancel**, and **Help**.

Name	Kind


- ◆ Select whether you setup an executive condition as a program or as a Boolean variable in **kind** button of **Transition** dialog box.

1) In case of setting up Transition as a program,

- ◆ Enter the transition name in the **Name** edit box(maximum size is 16 characters).
When you want to connect the already declared transition, select the transition in list box.
- ◆ Enter the comment for the transition in the **Comment** edit box(maximum size is 40 characters).

2) In case of setting up Transition as a variable,


- ◆ Enter the transition name in the **Name** edit box(maximum size is 16 characters).
When you want to connect the already declared variable, select the variable in list box.
- ◆ Enter the comment for the transition in the **Comment** edit box(maximum size is 40 characters).
- ◆ Click **OK** button

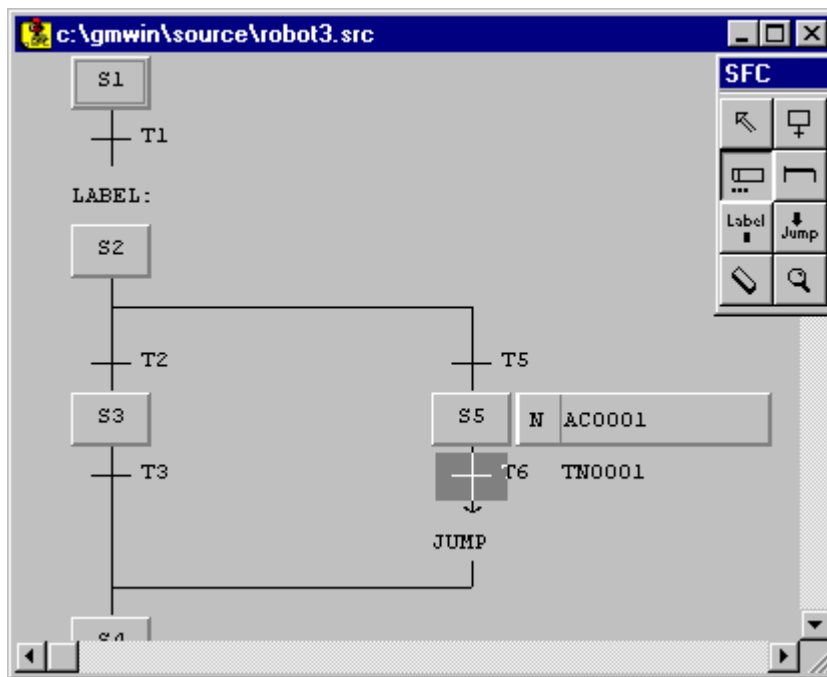


5.7.8. Delete


1) Delete a Step/ Transition



- ◆ Select () in toolbox.
- ◆ Move the mouse to the step or transition that you want to delete.

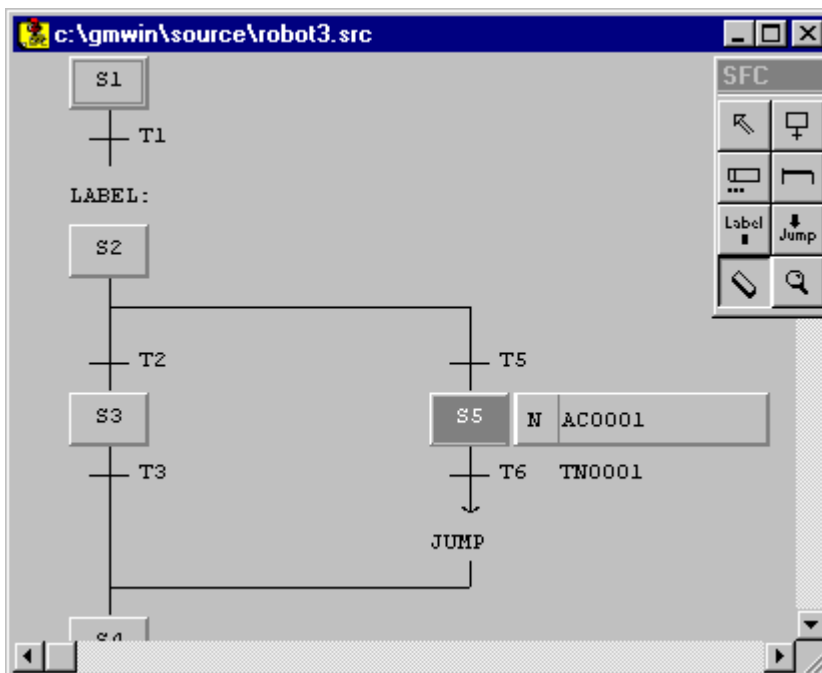

- ◆ Click the left button of the mouse.

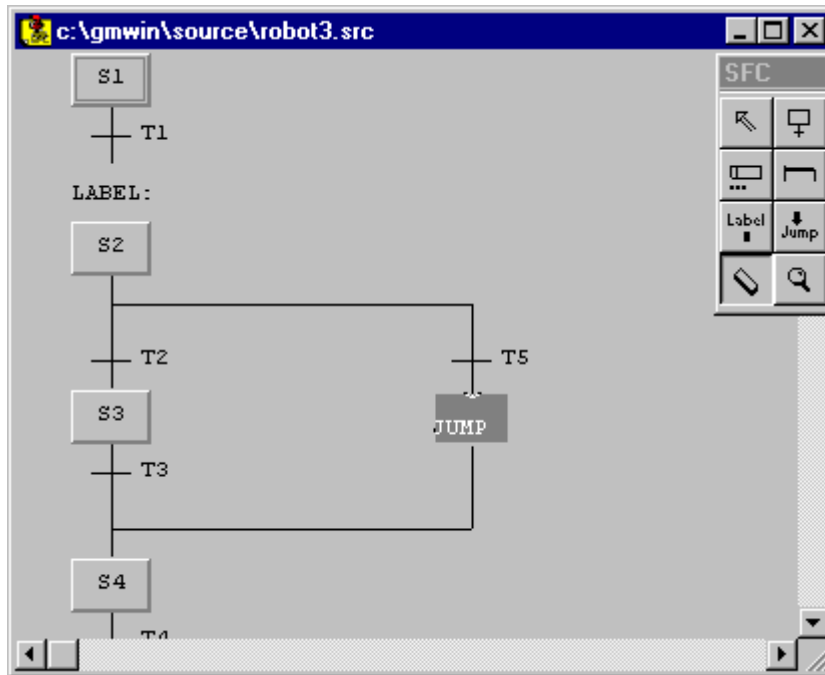

- ◆ Move the cursor to a step or transition that you want to delete with key.
- ◆ Select **Edit-Delete**.



Note

Although you delete a transition in SFC program, a transition program is not deleted.
If you want to delete the program, you must delete it in transition list.
(select **Program-Transition List**)

2) Delete a Branch


To delete the branch, All elements must be deleted before deleting a branch.
Namely, there must be only Step(in case of parallel branch) or Transition (in case of selective branch) in branch



- ◆ Select () in toolbox.
- ◆ Move the mouse to Step(in case of parallel branch, is marked with ) or transition (in case of selective branch) in branch and click a left button.




- ◆ Move the cursor to a step (or transition) in the branch that you want to delete.
- ◆ Select **Edit-Delete**.

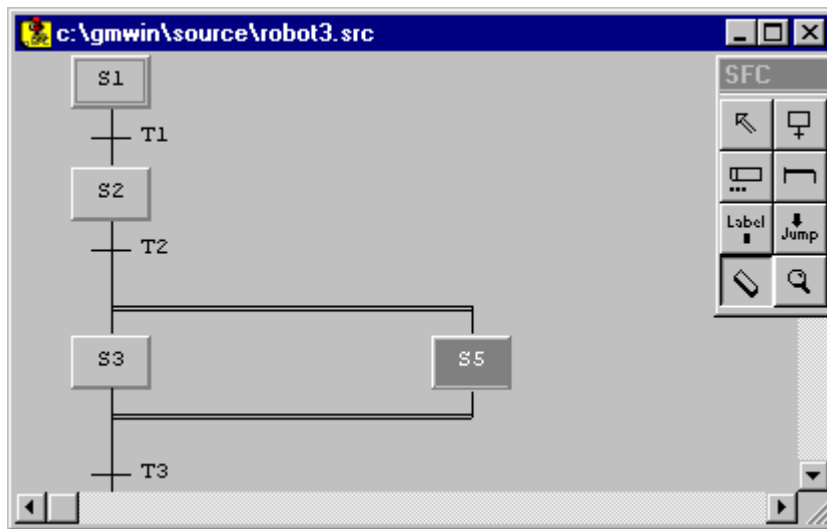

3) Delete a Label




- ◆ Select () in toolbox.
- ◆ Move the mouse to the label that you want to delete and click a left button.



- ◆ Move the cursor to the label that you want to delete.
- ◆ Select **Edit-Delete**.

4) Delete a Jump




- ◆ Select () in toolbox.
- ◆ Move the mouse to the Jump that you want to delete and click a left button.



- ◆ Move the cursor to the Jump that you want to delete with key.
- ◆ Select **Edit-Delete**.

5) Delete a Action



- ◆ Select () in toolbox.
- ◆ Move the mouse to the Action that you want to delete and click a left button.



- ◆ Move the cursor to the Action that you want to delete with key.
- ◆ Select **Edit-Delete**.

Note


Although you delete an action in SFC program, an action program is not deleted. If you want to delete the program, you must delete it in action list (select **Program-Action List**)


5.7.9. Zoom In Action/Transition

This Function is used for editing an action or transition program.


Note

A variable used in action or transition is commonly shared in other actions or transitions.

- ◆ Select () in toolbox.
- ◆ Move the mouse to an action or transition and call a **Select language** dialog box by clicking a left button. At this time, if it is declared as a variable, you cannot zoom in.
- ◆ Selecting a language type is omitted for the action or transition that selected a program type before.

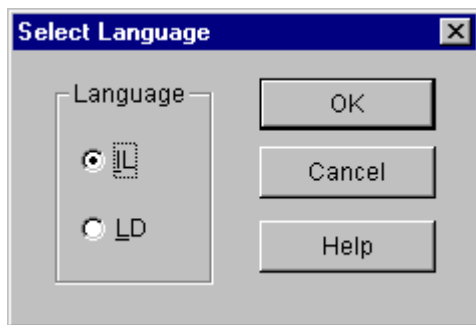

- ◆ Select a desired language type in **Language** option button of **Select Language** dialog box.
- ◆ Call the screen of making a program by clicking **OK** button, and create a program.
- ◆ When you edit a transition, the execution condition must be outputted as **TRANS** variable.

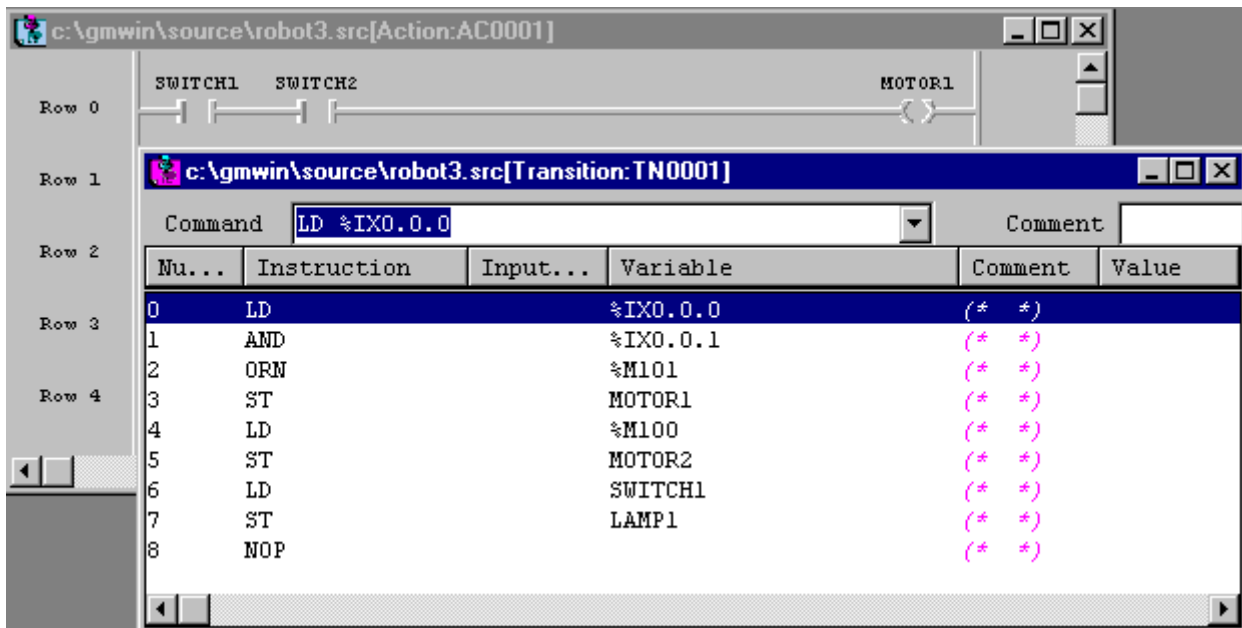


Note

Action and transition programs are not saved by individually. They are also saved when SFC Program as saved. So if you saved SFC program in window, then action and transition are also saved


5.7.10. Arrange Number

This is function for putting the number added to Step and Transition in order. Step or Transition number is added in inserted order, and they have no other meaning. It is arranged automatically when you compile or save the program.


- ◆ Select Edit-Arrange Number.

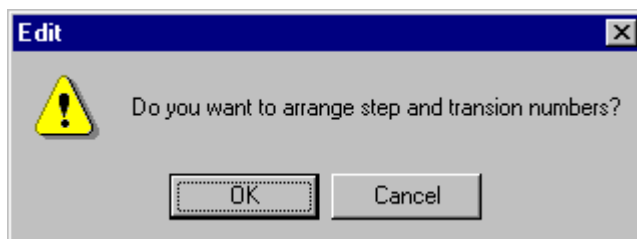

- ◆ Click OK button and the numbers are given in order.

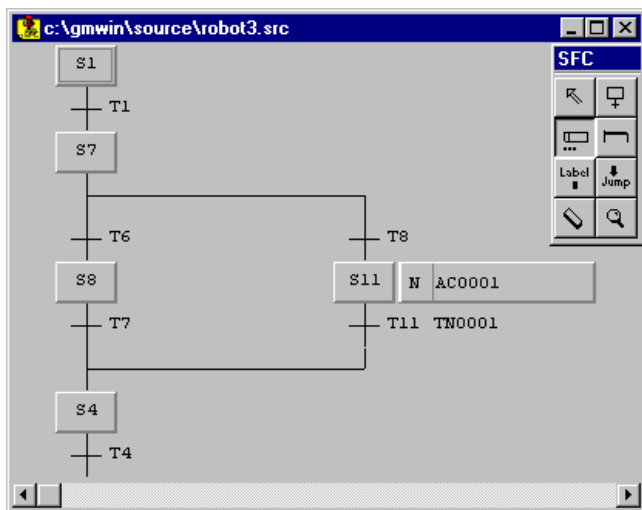


Before arrangement

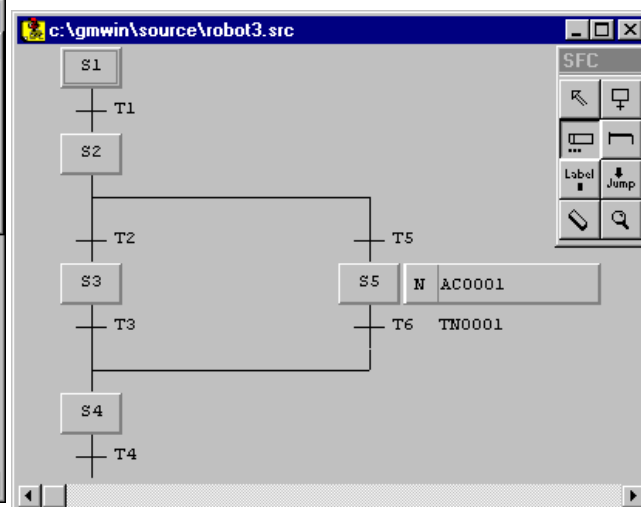

After arrangement

5.7.11. Action/ Transition List

- ◆ Select Program-Action List(or Transition List).

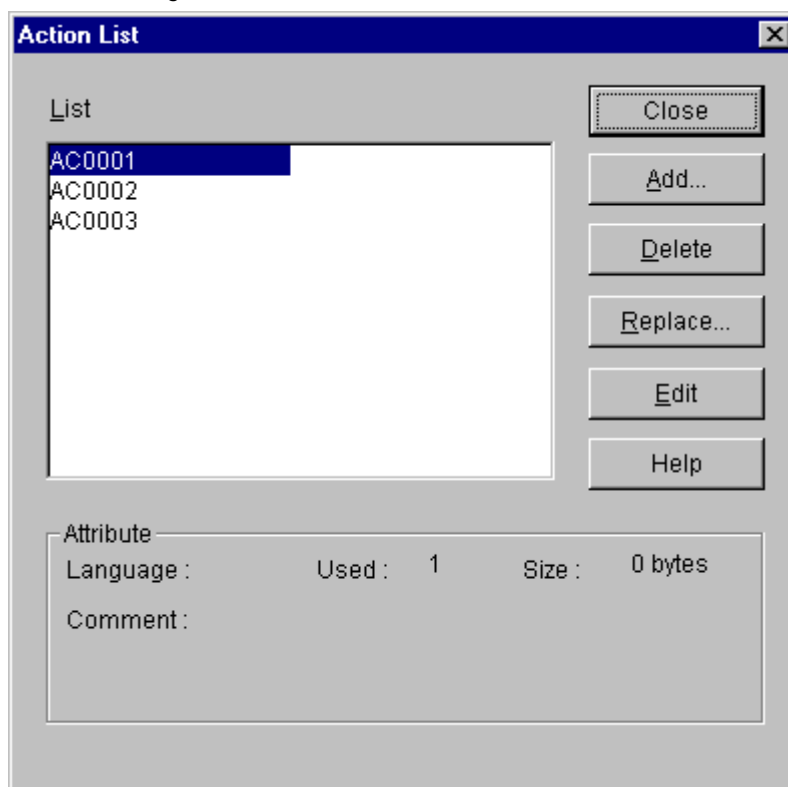

- ◆ Action list and the attribute of the selected action appears in **Action List** dialog box.

Language : Language type of the action
 Used : The number of being used in SFC program
 Size : Program size of the action (byte)
 Comment : Comment for the action

1) Add the action

- ◆ Click **Add** button in **Action List** dialog box.

- ◆ Enter the action name and comment, and click **OK** button.
- 2) Replace the action name
- ◆ Click **Replace** button in **Action List** dialog box.
 - ◆ Enter the action name and comment that you want to replace and click, **Ok** button.
At this time, the action on using in SFC program is also replaced in SFC program.
- 3) Delete the action
- ◆ Click **Delete** button in **Action List** dialog box.
At this time, you cannot delete the action on using in SFC program.
- 4) Edit the action
- To edit an action program.
- ◆ Click **Edit** button in **Action List** dialog box.

5.7.12. Edit a Block

Before editing a block, you must setup the range to be applied as a block.


Namely, if you want to copy or delete a continuous program, you must designate the desired content as a block before selecting edit a block function.

When you fix a block in SFC, a correct program is only available.

For example, you must setup the block, which starts from a step, as a transition for the end of the program.

To setup a block,




- ◆ Select () in toolbox.
- ◆ In SFC program window, move the mouse to the start point of the block and drag it to the last row of the range to select with clicking the left button.



- ◆ In SFC program window, move the cursor to the start point of the block.
- ◆ With pressing **Shift** key, move the cursor with arrow key to the last row of the range to select.

1) Cut

After selecting a block

- ◆ Select **Edit-Cut**(Ctrl+X, ).


2) Copy

After selecting a block

- ◆ Select **Edit-Copy**(Ctrl+C, ).


3) Paste

After copying or cutting,

- ◆ In SFC program window, move the cursor to the position that you want to paste.
- ◆ Select **Edit-Paste**(Ctrl+V, ).

4) Delete

After selecting a block

- ◆ Select **Edit-Delete**(Delete, ).

5.7.13. Find

- ◆ Select **Edit-Find** ().

- ◆ In **Name** edit box of **Find** dialog box, enter the string that you want to find.
- ◆ Select the following option and click **OK** button.

1) Kind

Select the type of string that you want to find.


2) Origin

Select the range where Find function is executed.
From cursor : Find from current cursor position.
Entire scope : Find through the whole range.

3) Direction


Select the direction that Find function is executed.
Forward : Find function is executed forward.
Backward : Find function is executed backward.

5.7.14. Replace

- ◆ Select **Edit-Replace**().
- ◆ In **Name** edit box of **Replace** dialog box, enter the character that you want to find.
- ◆ Enter the new character in **New Name** edit box of **Replace** dialog box,
- ◆ Select options in the same way as Find function and click **OK** button.

5.7.15. Again

If you executed Find.Replace function before, executes the function again with the condition that designated before..

- ◆ Select **Edit-Again**(Ctrl+F3, ).

5.7.16. Goto

- ◆ Select **Edit-Goto**.
- ◆ In Go to Position dialog box, enter the Y(vertical), X(horizontal) coordinates that you want to go.

5.7.17. Condense Screen


To adjust the screen size,

- ◆ Select **Edit-Condense screen**.
- ◆ Select a desired screen size in **Condense screen** dialog box and click **Ok** button.

5.7.18. Print

If you click **View Comment** button to see the comments that you edited in the program.

- ◆ Select **Project-Print** in the pull-down menu.

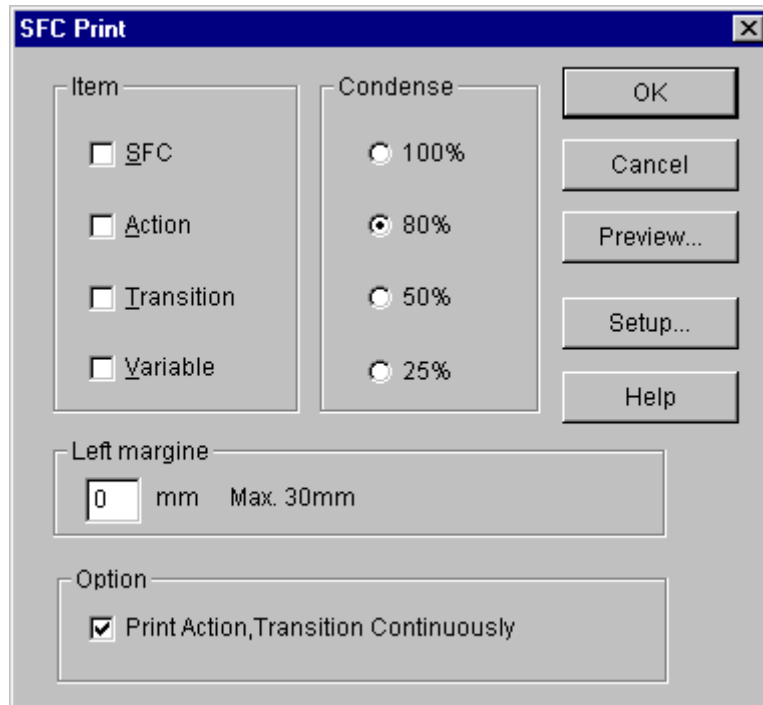

- ◆ Setup the conditions to print in SFC program.
- ◆ To preview the program, select **Preview** button.
- ◆ Close **Preview** screen and click **OK** button to print.


5.8. Edit IL

IL is a language that consists of instructions, whose elements are operators, functions, function block and label.


The input of an instruction and a variable is accomplished in edit control box for command and the input of a comment is accomplished in a comment input box.

A blank separates instruction from variable and in case of several variables, they are separated by ' '.

Example) ADD A,B,2

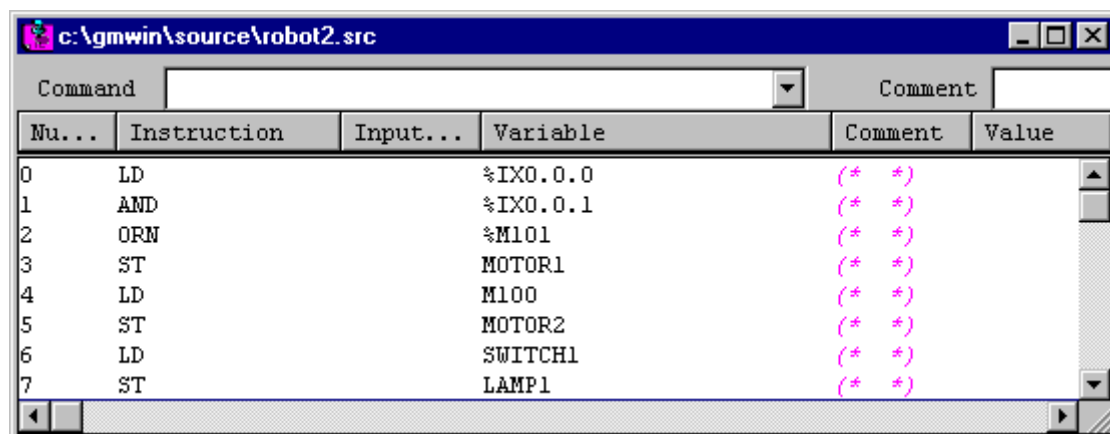

Toolbox for IL

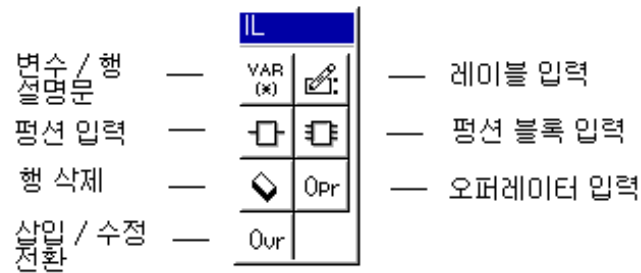

	Function Input	Select a function to input
	Function Block Input	Select a function block to input
	Label Input	Input a label
	Operator Input	Select an operator to input
	Delete a Row	Delete a present row
	Row Comment Input	Input a row comment
	Variable Comment Input	Input a variable comment
	Insert Mode	Change into insert mode
	Overwrite Mode	Change into overwrite mode

The below picture is the menu that is displayed with clicking the right button of the mouse in IL. You can execute each command simply using this menu.



5.8.1. Operator Input


END indicates the end of the main program and the program after **END** is a subroutine program.


If there is not **END**, the whole program is the main program.

You can use **SCAL**, **SCALC**, **SCALN** for calling a subroutine and **RET**, **RETC**, **RETN** for return from a subroutine. The name created in **SCAL(C,N)** must not be in front of **END**.


If **JMP(C,N)** is in front/rear of **END**, the appropriate label is in front/rear of **END**. Although **RET(C,N)** is not in the rear of **END**, the last is regarded as the return from a subroutine..



- ◆ To insert the operator.
- ◆ Click () in toolbox.

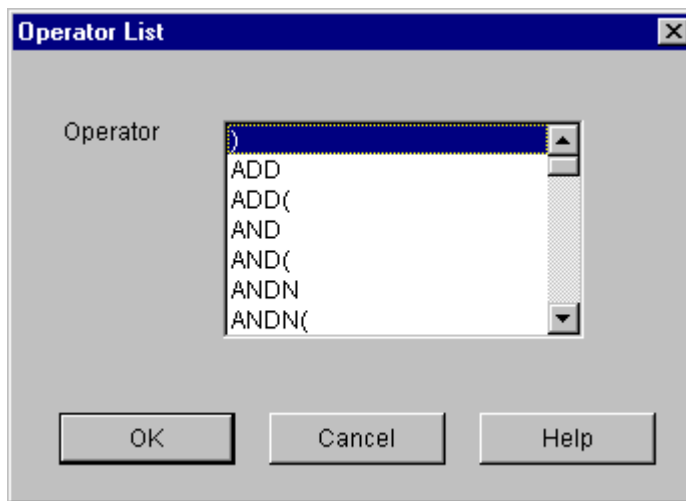

- ◆ Select the operator in **Operator List** dialog box.

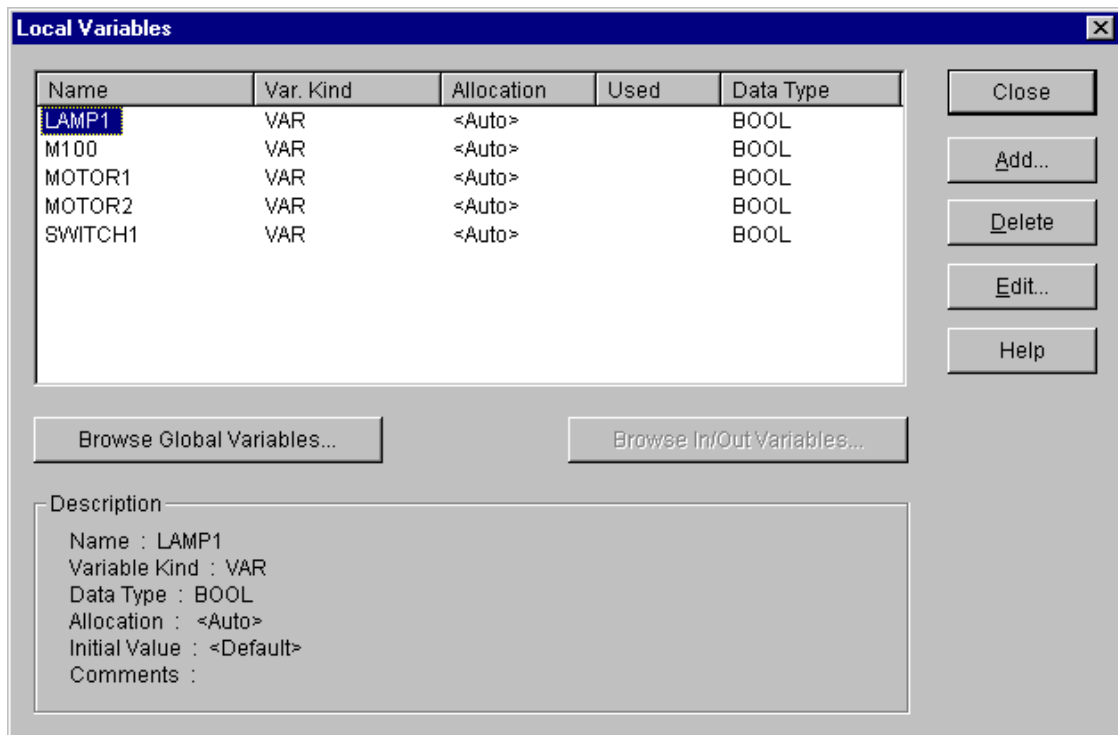

- ◆ Enter the variable name in **Name** edit box of **Variables** dialog box.
- ◆ Click **OK** button.

Note

If you want to enter the already declared variable, select the variable in list box of **Variable** dialog box..



method 1

- ◆ Move the cursor in program region to the position in where you want to insert an operator.
- ◆ Input an operator and object in **Command** edit box.




- ◆ Press **Enter** key.


method 2

- ◆ Move the cursor in the display region which you want to insert an operator.
- ◆ Select **Toolbox-Operator**.
- ◆ Select an operator in **Operator List** dialog box.
- ◆ Enter the variable name in **Name** edit box of **variables** dialog box.
- ◆ Press **Enter** key.

5.8.2. Function Input



- ◆ To insert the Function in IL.
- ◆ Click () in toolbox.

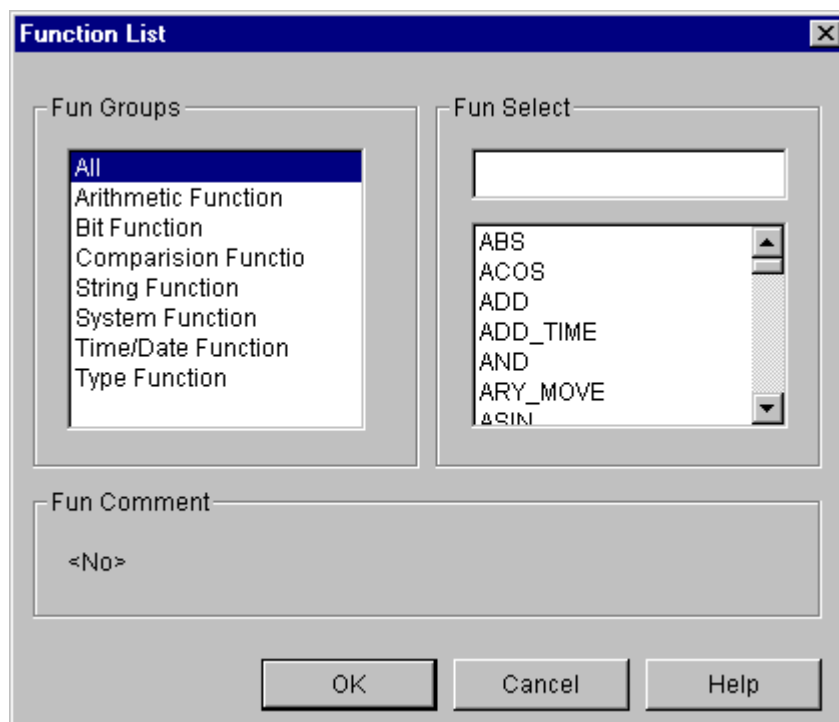


Chapter 5. Edit a Program

- ◆ Select the function in **Function List** dialog box.
- ◆ Enter the variable as many as you want in edit box of **Function List** dialog box.
- ◆ Click **OK** button.

Note

If you want to use the already declared variables as the variable, click Variable list button of **Function** dialog box and select the variable in the list box of **Variables** dialog box.

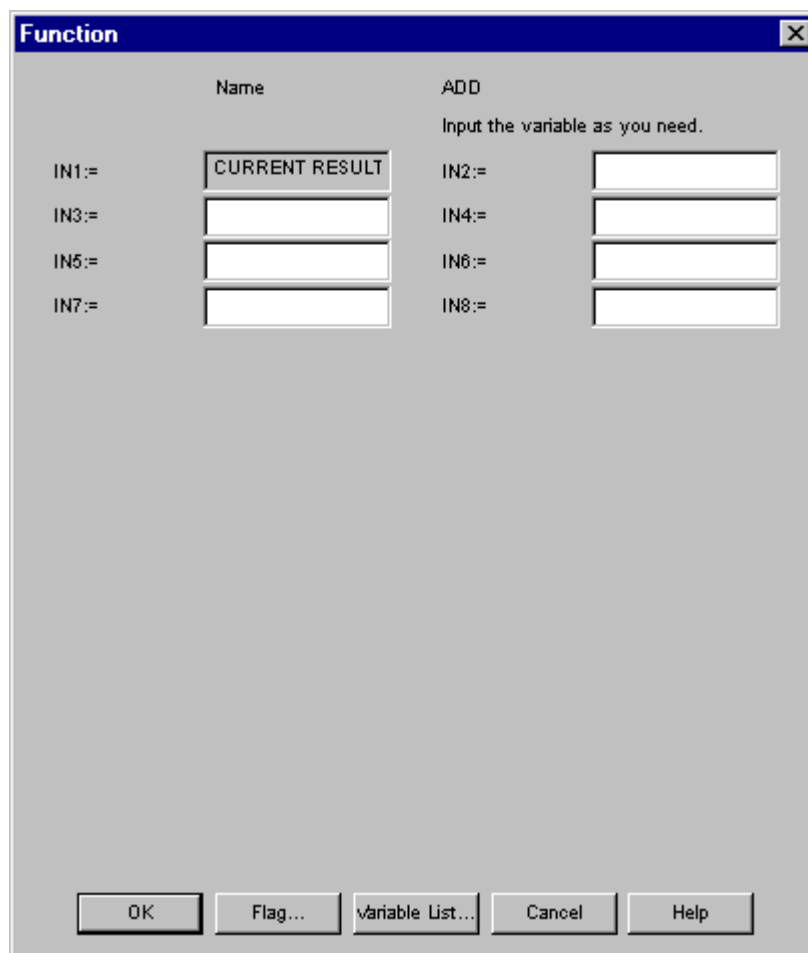

The **Function** dialog box is shown. It has a title bar with a close button. The main area is divided into two columns. The left column is labeled **Name** and contains four input fields labeled IN1:=, IN3:=, IN5:=, and IN7:=. The first field contains the text "CURRENT RESULT". The right column is labeled **ADD** and contains the text "Input the variable as you need." followed by four input fields labeled IN2:=, IN4:=, IN6:=, and IN8:=. At the bottom, there are five buttons: **OK**, **Flag...**, **variable List...**, **Cancel**, and **Help**.



method 1

- ◆ Move the cursor in the display region which you want to insert a function.
- ◆ Enter the function and variable in **Command** edit box.



The **Command** edit box is shown. It contains the text "ADD E,F,G".

- ◆ Press an **Enter** key.

method 2


- ◆ Move the cursor in the display region which you want to insert a function.
- ◆ Select **Toolbox-Function**.
- ◆ Select the function that you want to insert in **Fncion List** dialog box.
- ◆ Enter the variables for the function in **Function** dialog box.
- ◆ Press **OK** button.


Note

I case of extensible function (refer to GMWIN commands for the detail information), the number of input for the variable is not designated.


5.8.3. Function Block Input



- ◆ To insert the Function Block,
- ◆ Click () in toolbox.

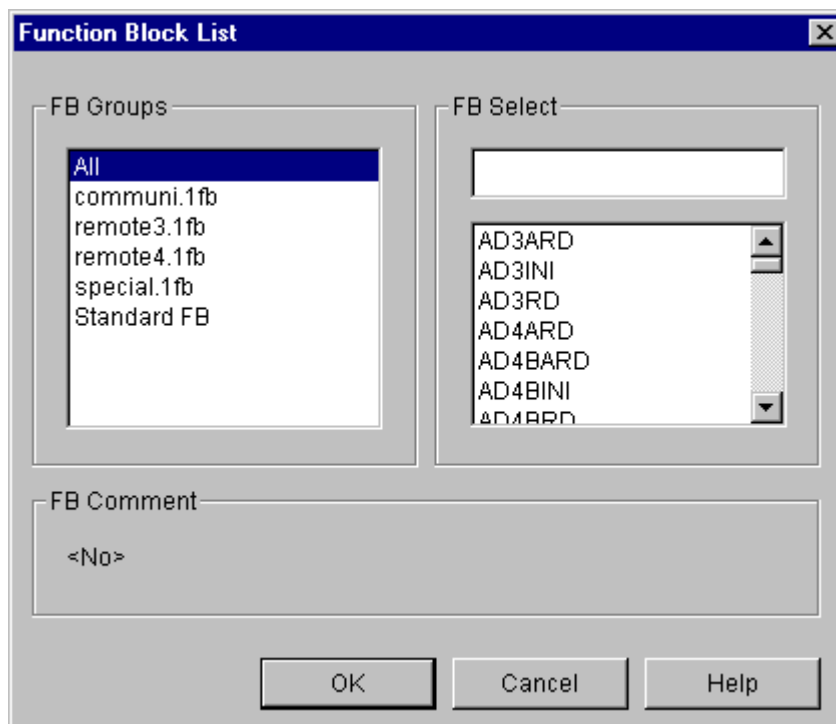

- ◆ After selecting a function block to use in **Function Block List** dialog box, click **OK** button.

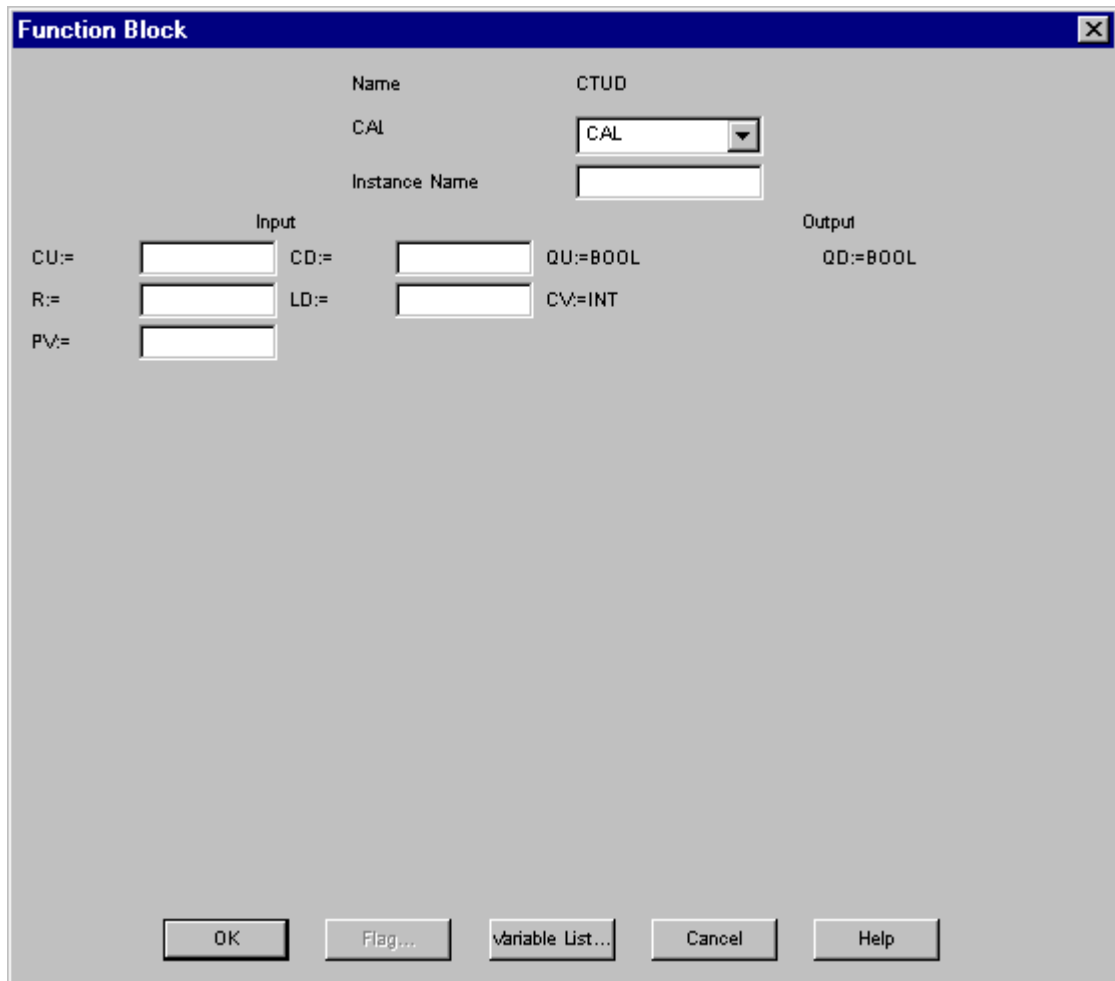

The **Function Block** dialog box is shown. It has a title bar with a close button. The main area contains the following fields and labels:

- Name:** CTUD
- CAL:** A dropdown menu showing 'CAL'.
- Instance Name:** An empty text box.
- Input:**
 - CU:= [text box]
 - CD:= [text box]
 - R:= [text box]
 - LD:= [text box]
 - PV:= [text box]
- Output:**
 - QU:=BOOL
 - QD:=BOOL
 - CV:=INT

At the bottom, there are five buttons: **OK**, **Flag...**, **Variable List...**, **Cancel**, and **Help**.

- ◆ Input an instance name in **Instance Name** edit box.
- ◆ Click **Ok** button.

Note

If you want to insert the already declared variable, click **Variable list** button of **Function Block** dialog box and select the variable in list box of **Variables** dialog box.



method 1

- ◆ Move the cursor in the display region which you want to insert a function block.
- ◆ Enter CAL/CALC/CALN in **Command** edit box.



The **Command** edit box is shown with the text 'CAL' entered.


- ◆ Select the function block in **Function Block List** dialog box.
- ◆ Enter the instance name and variables in **Function Block** dialog box.
- ◆ Press **Enter** key.


method 2

- ◆ Move the cursor in the display region which you want to insert a function block.
- ◆ Select **Toolbox-Function Block**.
- ◆ Select the function block in **Function Block List** dialog box.
- ◆ Enter the instance name and variables in **Function Block** dialog box.
- ◆ Press **Enter** key

5.8.4. Label Input



- ◆ To input the label.
- ◆ Click () in toolbox.

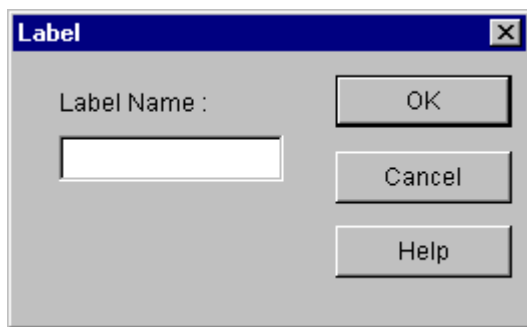

- ◆ Enter the label name (maximum size is 8 characters) in **Label** dialog box.
- ◆ Click **OK** button.



method 1

- ◆ Move the cursor in the display region which you want to insert a label.
- ◆ Enter the label name and ':' in **Command** edit box.



- ◆ Press **Enter** key.

method 2

- ◆ Move the cursor in the display region which you want to insert a label.
- ◆ Select **Toolbox-Label**.
- ◆ Enter the label name in **Label** dialog box.
- ◆ Click **OK** button.

5.8.5. Comment Input

Comment is created in **Comment** edit box in IL program screen. You can insert a line comment and variable comment separately by the comment display of toolbox. You can edit directly the comment in **Comment** edit box.



- ◆ Move the cursor in the display region which you want to insert a comment.
- ◆ Make a comment (maximum size 24 characters) in **Comment** edit box.




- ◆ Move the cursor in the display region which you want to insert a comment.
- ◆ Select **Toolbox-Variable Comment (Line Comment)**.
- ◆ Enter the comment in **Comment** edit box.

5.8.6. Change an Inset/ Overwrite Mode of Program

To change into Insert Mode,




Click () in toolbox.



- ◆ Select **Toolbox-Insert**.

To change into Overwrite Mode,




Click () in toolbox.



- ◆ Select **Toolbox-Overwrite**.

5.8.7. Delete a Program



- ◆ Move the cursor in the display region which you want to delete.
- ◆ Click () in toolbox.



- ◆ Move the cursor in the display region which you want to delete.
- ◆ Select **Toolbox-Delete**.

5.8.8. Edit a Block

Before editing a block, you must setup the range to be applied as a block.

Namely, if you want to copy or delete a continuous program, you must designate a desired range as a block before selecting Edit Block Function.




- ◆ Move the mouse to the row of the display range to select.
- ◆ Drag the mouse to the last row of the range to select with clicking the left button.



- ◆ Move the cursor to the row of the display range to select.
- ◆ With pressing **Shift** key, move the cursor with arrow key to the last row of the range to select

1) Cut

After selecting a block,

- ◆ Select **Edit-Cut**(Ctrl+X, ).


2) Copy

After selecting a block,

- ◆ Select **Edit-Copy**(Ctrl+C, ).

3) Paste

After copying or cutting,

- ◆ Move the cursor in the display region which you want to paste.
- ◆ Select **Edit-Paste**(Ctrl+V, .

4) Delete


After selecting a block,

- ◆ Select **Edit- Delete** (Delete, .

5.8.9. Find

To find an instruction or variable in the program on editing,

- ◆ Select **Edit- Find** (.

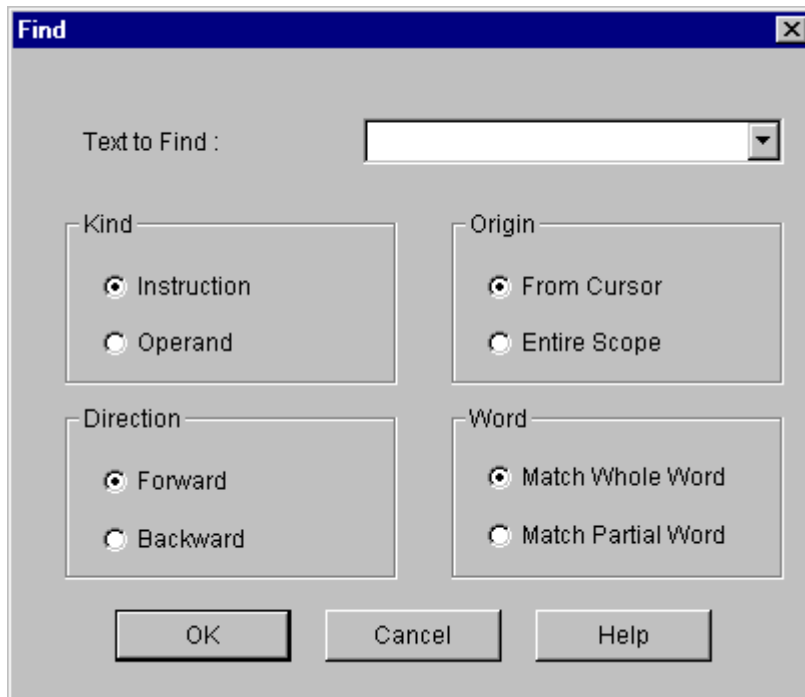

- ◆ In **Text to Find** edit box of **Find** dialog box, enter the string that you want to find.
- ◆ Select the following option and click **OK** button

1) Kind

- ◆ Select the string type to find.

2) Origin

- ◆ Select the range where Find functions executed.
 - (1) From cursor : Find from the current cursor position
 - (2) Entire scope : Find through the whole program

3) Direction

- ◆ Select the direction that Find function is executed.
 - (1) Forward : Find function is executed forward


(2) Backward : Find function os executed backward


4) Word

- ◆ Select an accordance degree in finding a word.
 - (1) Match Whole Word : Find only an exact same word
 - (2) Match Partial Word : Find also a partial same word

5.8.10. Replace

To replace a variable with a desired variable in the program on editing,

- ◆ Select Edit-Replace()

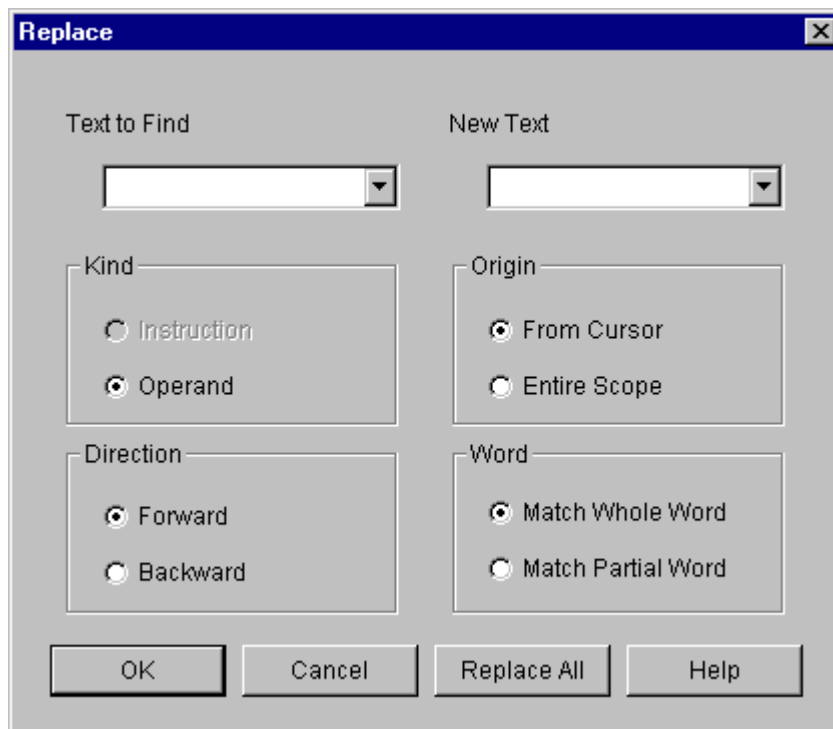


- ◆ In **Text to find** edit box of **Replace** dialog box, enter the string that you want to find.
- ◆ In **New Text** edit box, enter the new string.
- ◆ Select options in the same way as Find function and click **OK** button.
- ◆ Click **Replace All** button to replace all string at once.

Note

You can replace the string only for a variable.

5.8.11. Again


If you executed Find/ Replace command before, executed the command again with condition that designated before.

- ◆ Select Edit-Again(Ctrl+F3, )

5.8.12. Go to

This function allows you to find the desired line in the program.


- ◆ Select **Edit-Goto**.
- ◆ In **Goto** dialog box, enter the line number that you want to find.
- ◆ Click OK button.

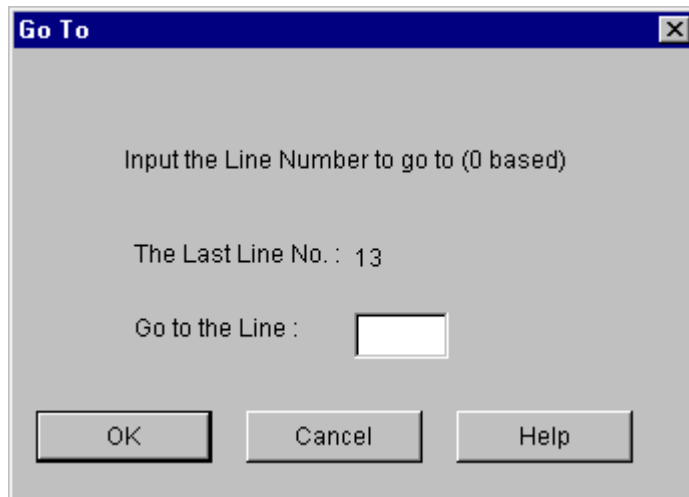

5.8.13. Print

If you click a **Preview** button before printing a program, the outline of content is printed on the screen.

- ◆ Select **Project-Print**.

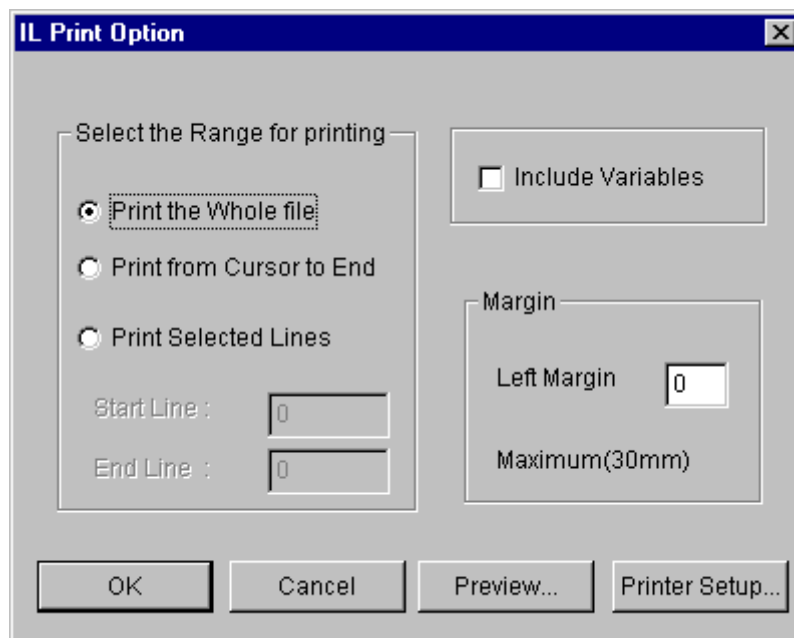

- ◆ Select the Range for printing in **IL Print Option** dialog box.
 Print Whole file : Print the whole program
 Print from Cursor to End : Print from a cursor to the end
 Print selected lines : Print from start line to end line
- ◆ To print variables, select **Include Variables** check box.
- ◆ Setup the margin to print in **Margin** edit box.

Chapter 6. Program Compile

To create an execution file.

1) Compile the Program that belongs to a project

Compile the program that defines as a program instance in a project.

At this time, the compiler verifies the error in a program and if error does not exist, it creates an object an object file.

Object file name : Program file name. **OP3** (for GM3)

2) Create an execution file

It links object files each other which are created by compiler.

At this time, a linker verifies the error on Global Variable, Function, Function block, and creates one execution file.


Execution file name : Project file name. **BN0**

Note: In case of GM1, it is created as many as resource number.

(Project file name.**BN1**, Project file name.**BN2**, ...)


6.1. Make

It creates an execution file after compiling the only program, which needs compiling, in the project.

- ◆ Select **Compile-Make** () in the pull-down menu.
If an error occurs, the error message is displayed in **Make** dialog box and execution file is not created.
- ◆ Click **OK** button in **Make** dialog box.

6.2. Compile

It compiles only the currently active program, and creates an object file.

- ◆ Select **Compile - Compile** () in the pull-down menu.
If an error occurs, the error message is displayed in **Compile** dialog box and object file is not created.
- ◆ Click **OK** button in **Compile** dialog box.


Note

Only compiling a program cannot make an execution file.

6.3. Build All

It creates PLC execution file after compiling all programs in the project.

- ◆ Select **Compile - Build All** in the pull-down menu.
If an error occurs, the error message is displayed in **Build All** dialog box and execution file is not created.
- ◆ Click **OK** button in **Build All** dialog box.

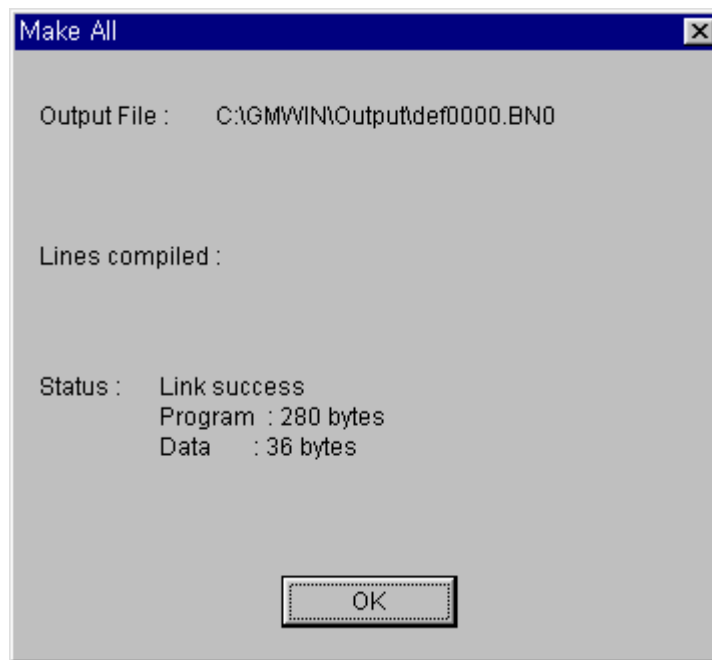


6.4. Message

It shows an error or warning message in the process of Compiling, Make and Build All.

If you double-click the message, it helps you to move directly to the occurred place of error/warning

- ◆ When an error or warning occurs in the process of Compile, Make and Build All, message window appears automatically and it shows the type and occurred place of error/ warning by list

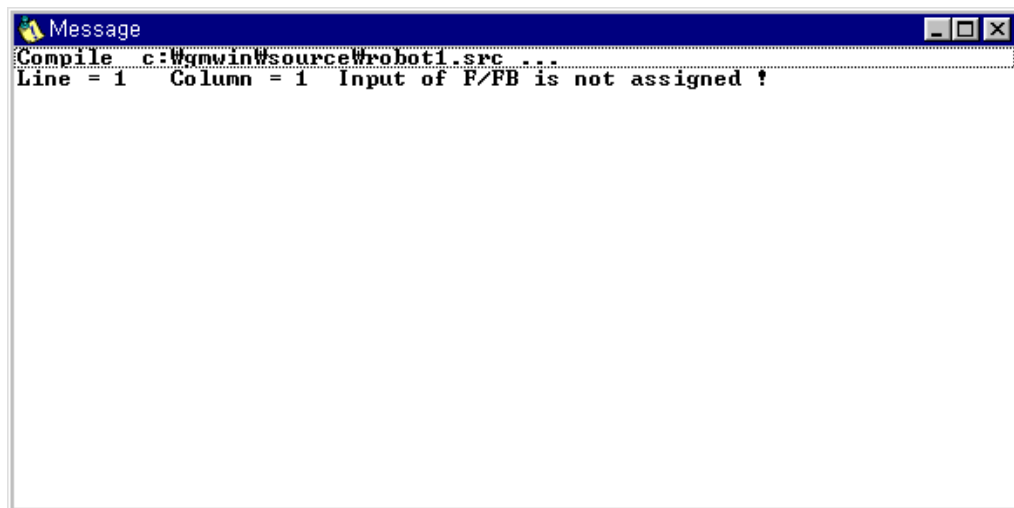


- ◆ If you double-click the each list item, the cursor moves to the occurred place of error/warning.
- ◆ If you select **Compile-Message...** in menu, you can repeatedly see the previous message after closing the message window.


6.5. Memory Reference

It allows you to see the global variable and direct variable at the program in project.

- ◆ Select **Compile-Memory Reference** in the pull-down menu.

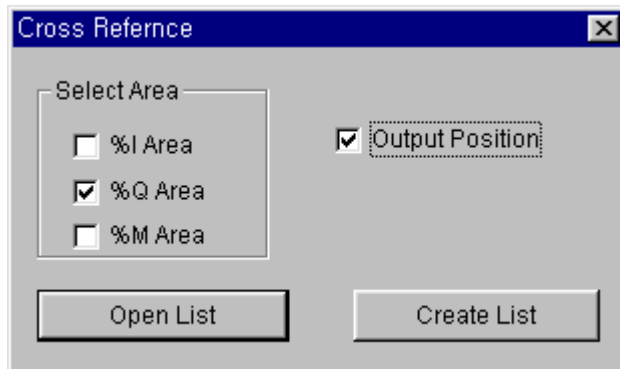

- ◆ When you open the existed list, select **Open List**.
- ◆ When you create a new list, select **Create List** after selecting **Select Area** and **Output Position**.

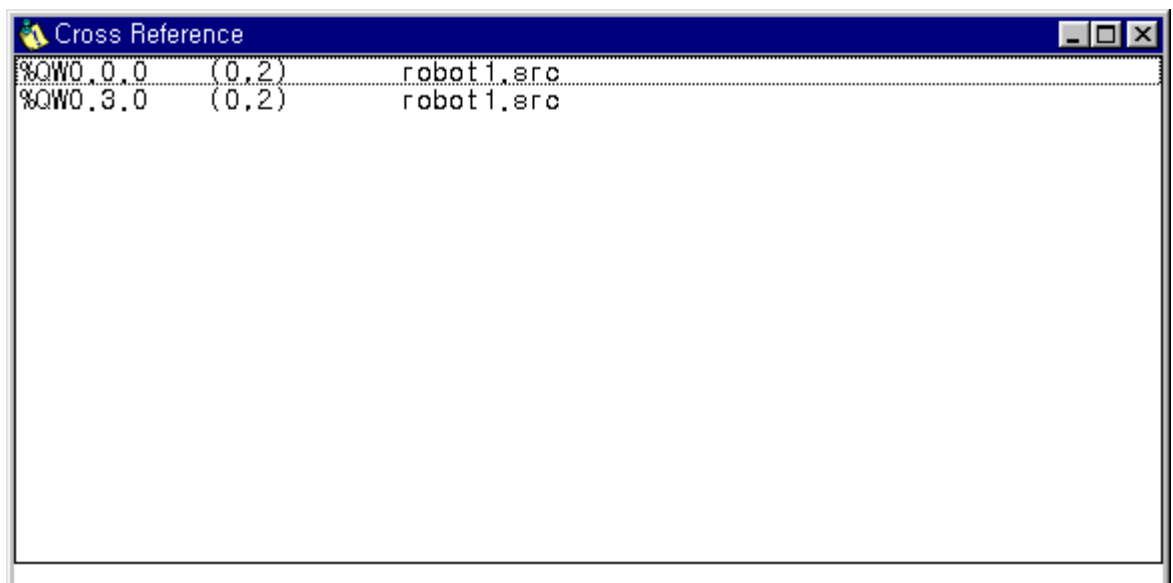

Chapter 7. Online

To connect GMWIN to PLC, you must setup a connection option.

(Refer to 'Chapter1.1.2 How to Connect GMWIN to PLC' for detail description).

After setting the option for connection, you must set a PLC key on REM(Remote Stop) mode to connect with GMWIN.

If you connect GMWIN to PLC in proper order, you can do the following functions.

(reading from PLC, writing to PLC, monitoring, debugging, change a PLC mode, erase PLC data area, set the use of link parameter, PLC information, I/O information, Forced I/O setup, Enable Forced I/O, Set a PLC password, etc.)

7.1. Connect


7.1.1. Connect + Write + Run + Monitor On

It is a macro command that executes a program at one time. To execute the communication with PLC automatically, select this menu. This function can download the project created in GMWIN to PLC, make PLC Run and monitor the project at one time.

Prior to perform this menu, confirm the switch in CPU module of the PLC is at REM (Remote Stop) mode.

7.1.2. Connect

- ◆ Select Online-Connection the pull-down menu.
In case of redundancy, select the CPU to connect.

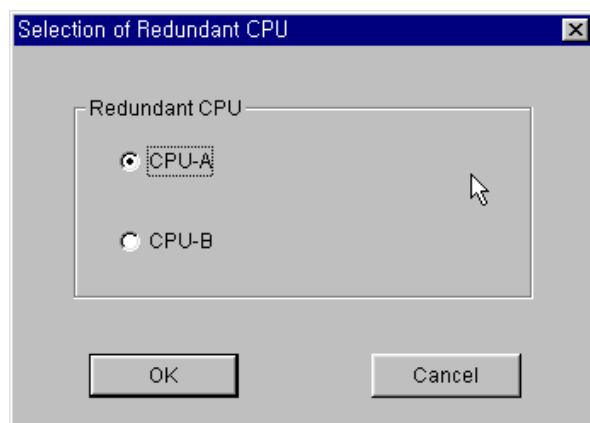

7.2. Disconnect


You can disconnect GMWIN with PLC.

- ◆ Select **Online-Disconnect** in the pull-down menu.

7.3. Read from PLC


You can read PLC parameters in GMWIN after connecting with PLC.

- ◆ Select **Online- Read** in menu.

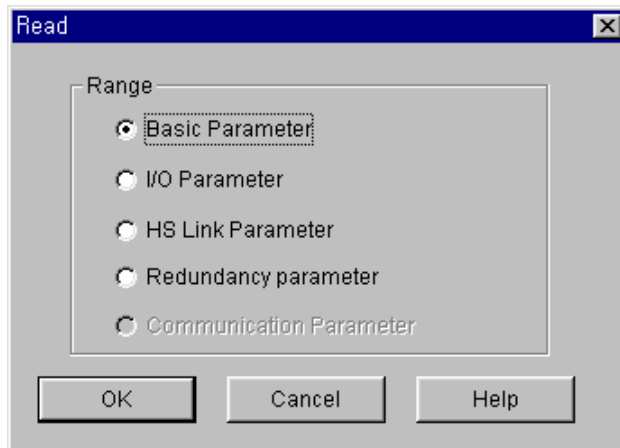

- Basic Parameter : Read only a basic parameter from PLC.
- I/O Parameter : Read only I/O parameter from PLC.
- HS Link Parameter : Read only an express link parameter from PLC.
- Redundancy Parameter : Read only a Redundancy Parameter. (In only case of redundancy, it is activated)
- Communication Parameter : Read only a Communication Parameter. (In only case of Communication, it is activated)


- ◆ In Read dialog box, select the memory area of parameter to read and click OK button.

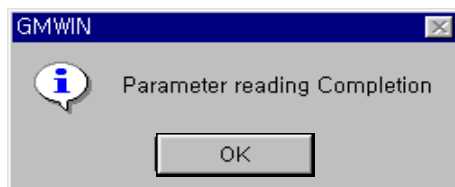


7.4. Write to PLC

This function is used for writing a parameter and program of GMWIN to PLC after the connection with PLC. In GM1 and Resource is more than two, when you write parameter and program to PLC, select the appropriate resource.


- ◆ Select **Online-Write** in the pull-down menu.
- ◆ If the state of PLC is **Run**, then following dialog box will appear.

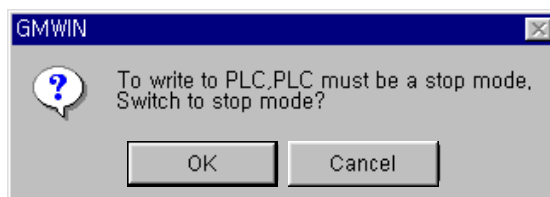

- ◆ Click YES button.

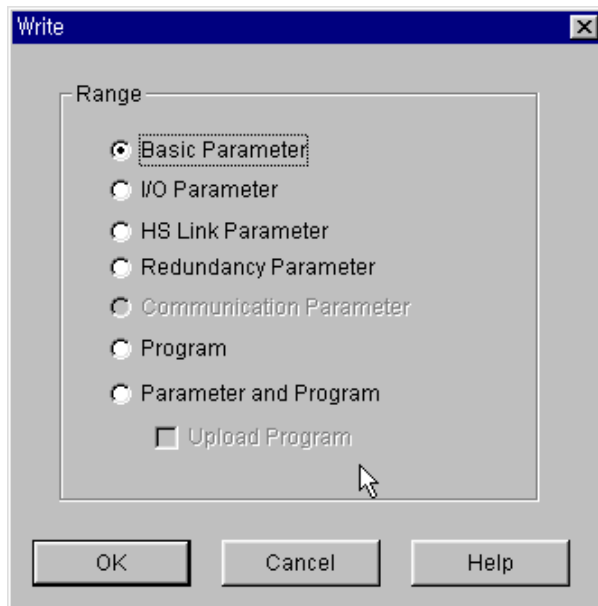

- ◆ Select the memory area to write to PLC and click **OK** button.
 - Basic Parameter : Write only a basic parameter from PLC.
 - I/O Parameter : Write only I/O parameter from PLC.
 - HS Link Parameter : Write only an express link parameter from PLC.
 - Communication Parameter : Write only a Communication Parameter. (In only case of Communication, it is activated)
 - Redundancy Parameter : Write only a redundancy parameter from PLC.
 - Program : Write only a program from PLC.
 - Parameter and Program : Write a parameter and program from PLC.
 - Upload Program : Write a program from PLC.
- ◆ When you use a **GM1 Multi CPU**, select a resource in **Selection of Resource** dialog box and click **OK** button.

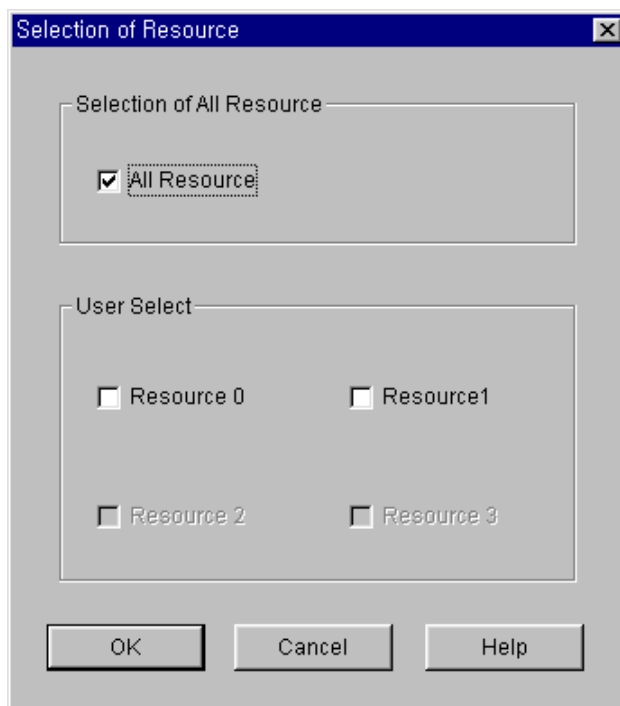

7.5. Change PLC Mode

To change PLC mode.

Run Mode

- ◆ Select **Online-Mode Change-Run** in menu.

Stop Mode

- ◆ Select **Online-Mode Change-Stop** in menu.

Pause Mode

- ◆ Select **Online-Mode Change - Pause** in menu.

Debug Mode


- ◆ Select **Online-Mode Change - Debug** in menu.

Master Change

- ◆ Select **Online-Mode Change - Master Change** in menu.
(When you use GM1 Redundancy PLC, this function changes a master CPU)

7.6. Clean PLC Data

- ◆ Select **Online-Data Clear** in menu.

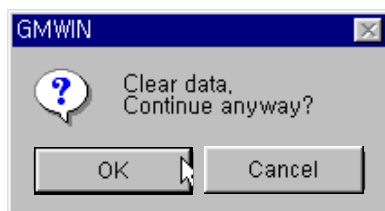


- ◆ Click Yes button.


7.7. PLC Reset

7.7.1. Reset

 - ◆ Select **Online - Reset** in menu.




- ◆ Select **Reset** in menu.

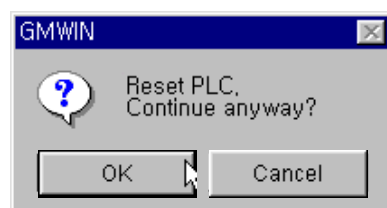

- ◆ Click Yes button.

7.7.2. Over All Reset

 - ◆ Select **Online - Reset** in menu
- ◆ Select **Overall Reset** in menu.




- ◆ Click **Yes** button.


7.8. Flash Memory

This function is used for confirming a flash memory type mounted on CPU module or transferring a program in data RAM of PLC to flash memory.

- ◆ Select **Online-Flash Memory-Flash Memory Type** in menu.

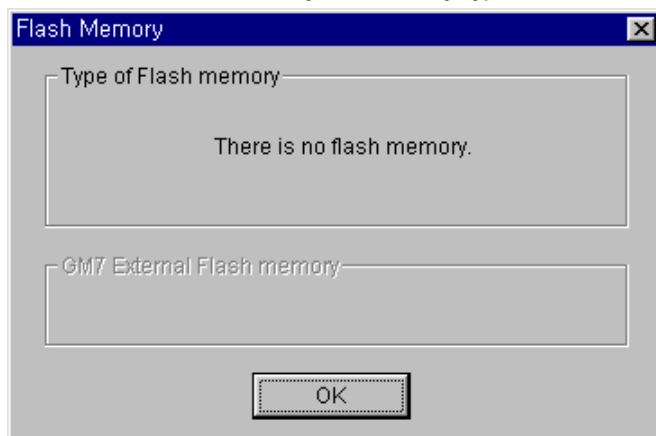

- ◆ Select **Online-Flash Memory - Flash Memory Write** in menu

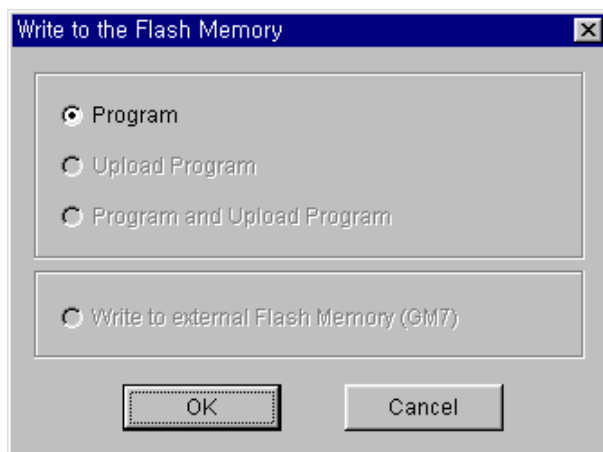


Select item(s) to be written into the flash memory, and press 'OK' button.

The GM6 CPU series has built-in flash memory.
The GM7 series has built-in flash memory, also an external memory module is available.
When write into the external memory module, select 'Write to external Flash memory (GM7)'.

- ◆ Click Yes button.

In the state that flash memory is mounted on CPU module, if you execute **Online-Write** menu, the following dialog box appears when GMWIN finishes writing a program.

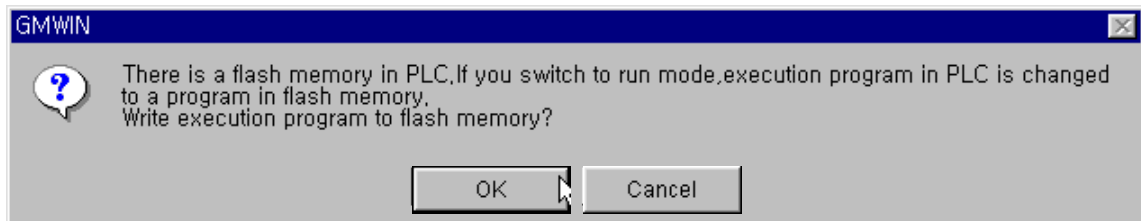


- ◆ Click Yes button and you can write the current program to memory module directly.

7.9. Setup Link Enable

This allows you to designate the block for the link parameter use.

- ◆ Select **Online-Setup Link Enable** in menu.

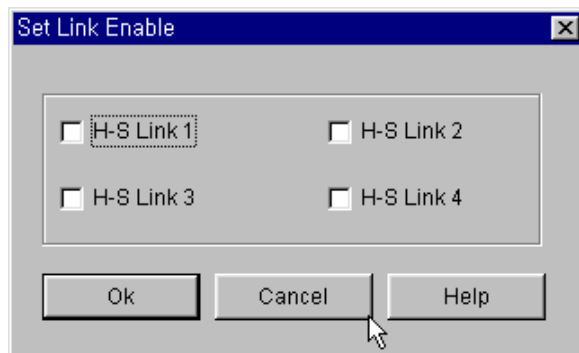

- ◆ Click OK button after selecting the HS Link


7.10. PLC Information

It is the function that indicates various information for PLC system such as 'System info', 'Error/Warning info', 'AC Fail history', 'Error history', 'Mode change history', 'I/O module fault info', and 'Base unit info'.

7.10.1. System Information

It is the function that indicates the constructive state of PLC system.
You can see system information, scan time, current time and error status.
You can also setup current time.

- ◆ Select **Online-PLC Information-System Info..** in the pull-down menu.

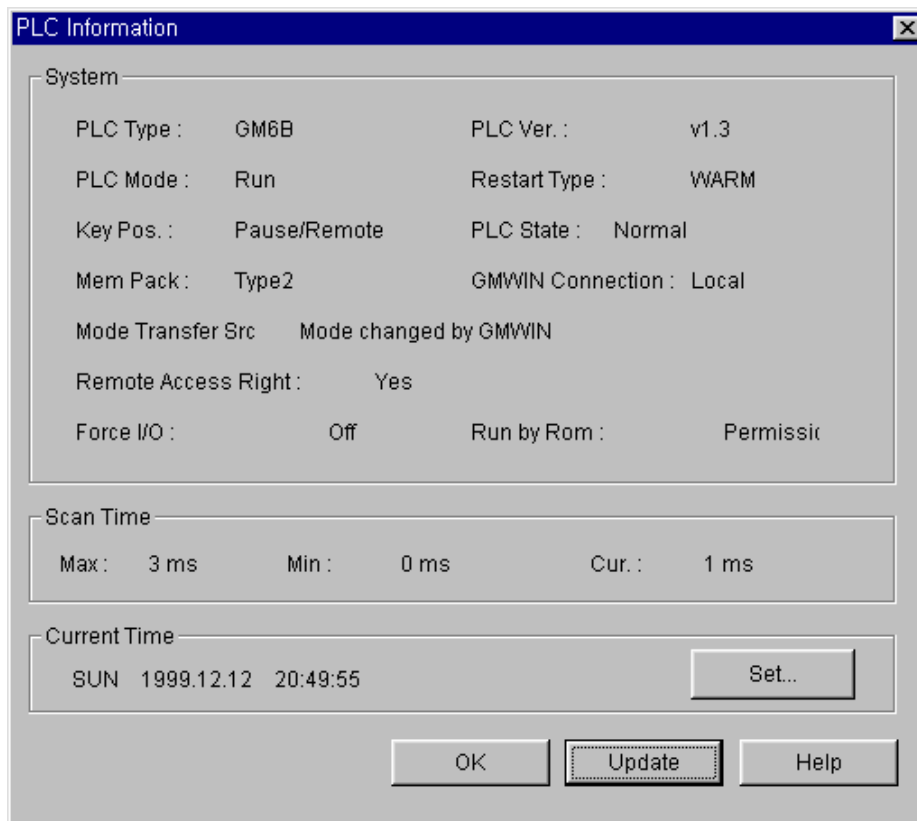

The screenshot shows the 'PLC Information' dialog box with a blue title bar and a close button. It contains three main sections: 'System', 'Scan Time', and 'Current Time'. The 'System' section lists various PLC parameters. The 'Scan Time' section shows maximum, minimum, and current scan times. The 'Current Time' section displays the current date and time, along with a 'Set...' button. At the bottom, there are 'OK', 'Update', and 'Help' buttons.

System			
PLC Type :	GM6B	PLC Ver. :	v1.3
PLC Mode :	Run	Restart Type :	WARM
Key Pos. :	Pause/Remote	PLC State :	Normal
Mem Pack :	Type2	GMWIN Connection :	Local
Mode Transfer Src Mode changed by GMWIN			
Remote Access Right :	Yes		
Force I/O :	Off	Run by Rom :	Permissic


Scan Time			
Max :	3 ms	Min :	0 ms
		Cur. :	1 ms

Current Time	
SUN 1999.12.12 20:49:55	Set...

OK Update Help

If you want to setup or edit current time,

- ◆ Select **Set...** button of current time in **PLC Information** dialog box.

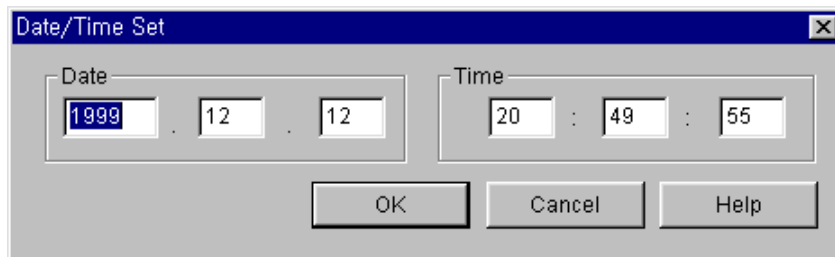

The screenshot shows the 'Date/Time Set' dialog box with a blue title bar and a close button. It has two main sections: 'Date' and 'Time'. The 'Date' section has three input fields for year, month, and day. The 'Time' section has three input fields for hour, minute, and second. At the bottom, there are 'OK', 'Cancel', and 'Help' buttons.

Date			Time		
1999	12	12	20	49	55

OK Cancel Help


- ◆ Setup Date and Time in **Date-Time Set** dialog box.

7.10.2. Error/Warning Information


When the following error occurs, you can confirm the detail information about an error.

- ① In case that I/O parameters are different from practically mounted modules.
- ② In case that module configurations are changed in Run mode.
- ③ In case that the fuse of module is blown.
- ④ In case that GMWIN cannot normally read or write program or parameter in I/O module.
- ⑤ In case that normal interface is impossible in special or communication module.
- ⑥ In case that the position of error is incorrect or there is a trouble in peripheral device.
- ⑦ In case that there is a collision between tasks.

- ◆ Select Online-PLC Information-Error/warning Information.

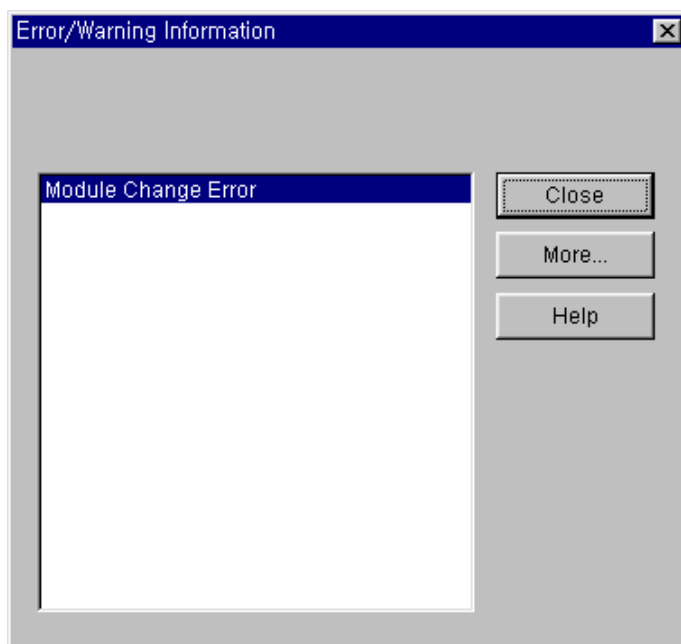


- ◆ Click More button.

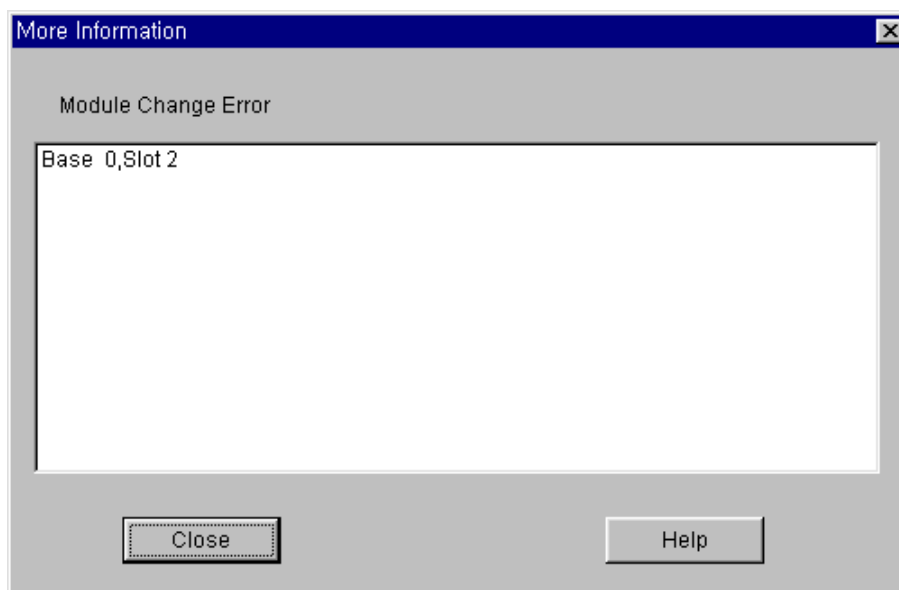


7.10.3. AC Fail History

AC Fail History shows the history of AC Fail that has occurred in PLC.
◆ Select **Online-PLC Information-AC History** in the pull down menu.

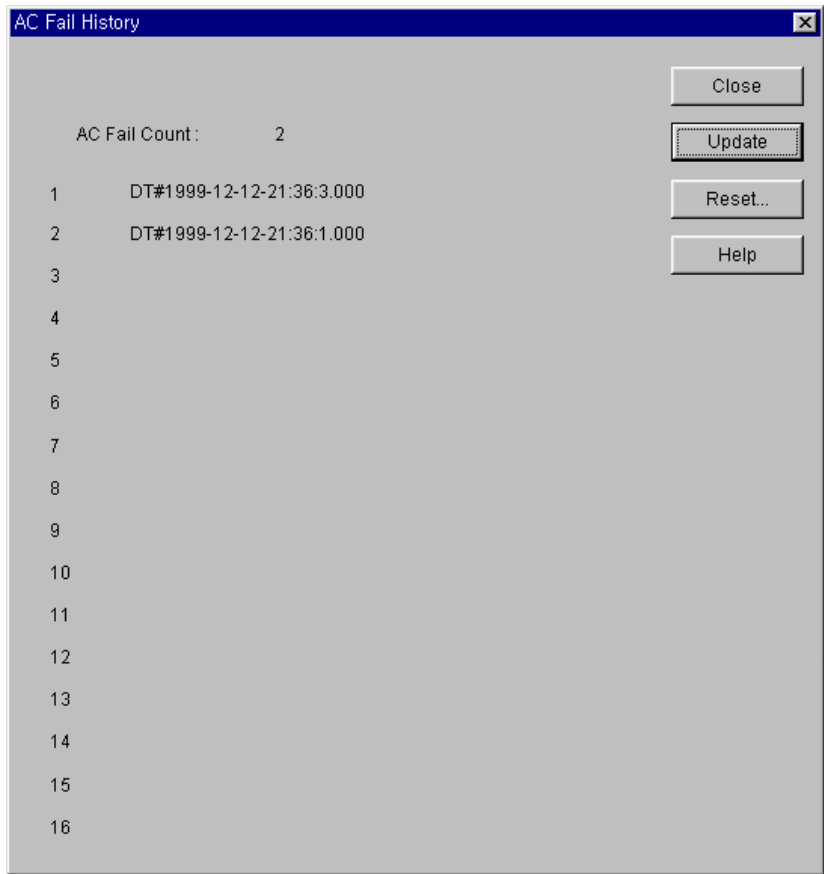

7.10.4. Error History

Error history shows the history of errors that has occurred in PLC.
◆ Select **Online-PLC Information-Error History** in the pull-down menu.

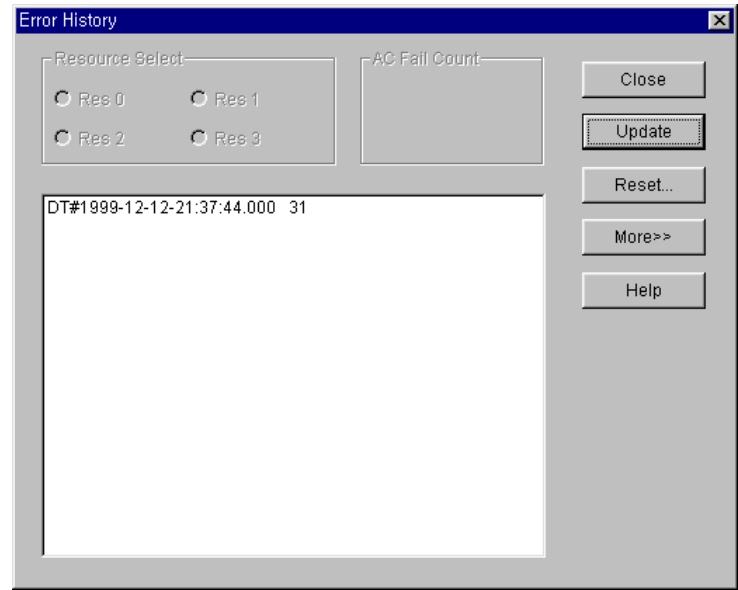


If you want to see detail information about the history of occurred error,
select the item to see the detail information in list box and click **Detail** button.

7.10.5. Mode Change History

This shows the history that has changed PLC mode.


- ◆ Select **Online-PLC Information-Mode Change History** in the pull-down menu.

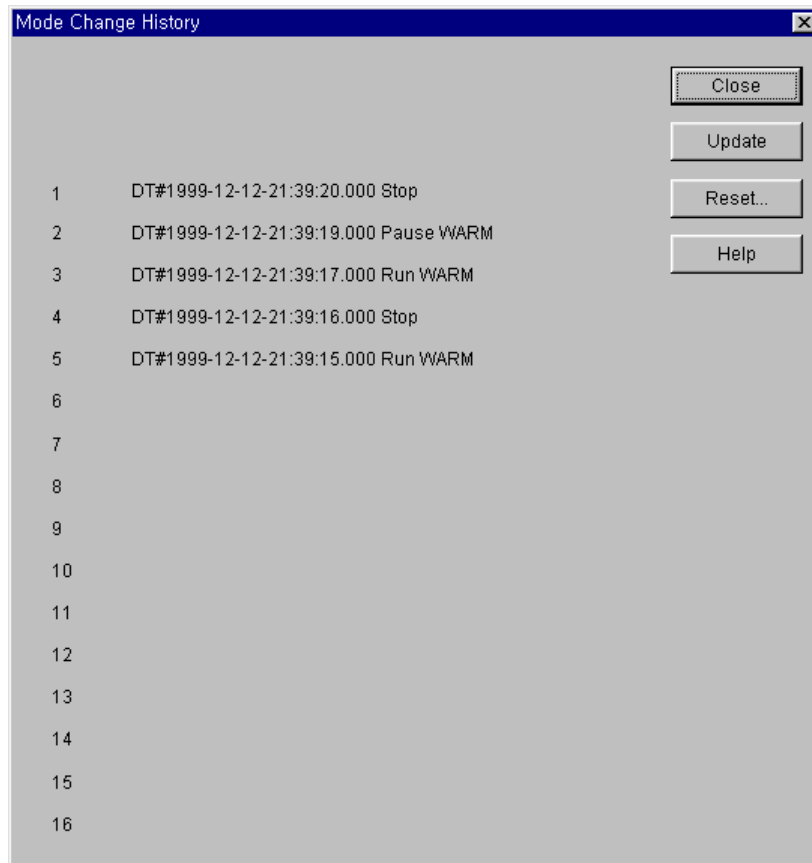

7.10.6. I/O Module Fault Information

This shows information about the fault of input/output contacts in redundant system.

- ◆ Select **Online-PLC Information-I/O Module Fault Info** in the pull-down menu.

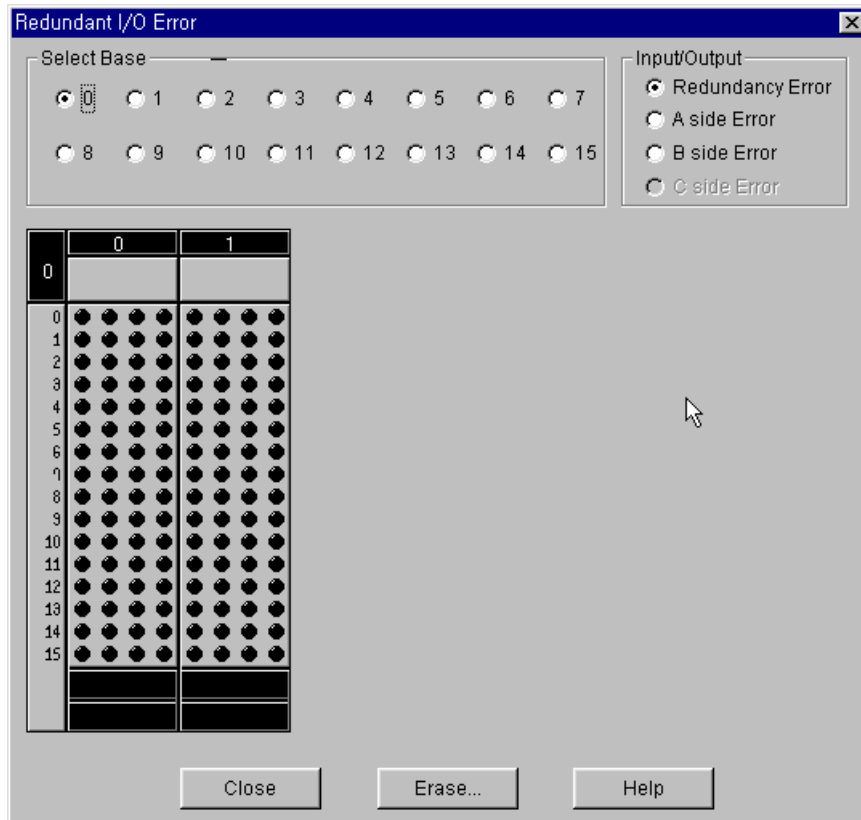


- ◆ If you want to erase the detail information about error, click **Erase...** button.
When PLC is connected as a master, you can erase a redundancy error and C side error
And when PLC is connected to each CPU, you can erase A side error and B side error.


7.11. I/O Information

This shows the configuration of I/O modules in PLC system.

- ◆ Select **Online-I/O information** in the pull-down menu.

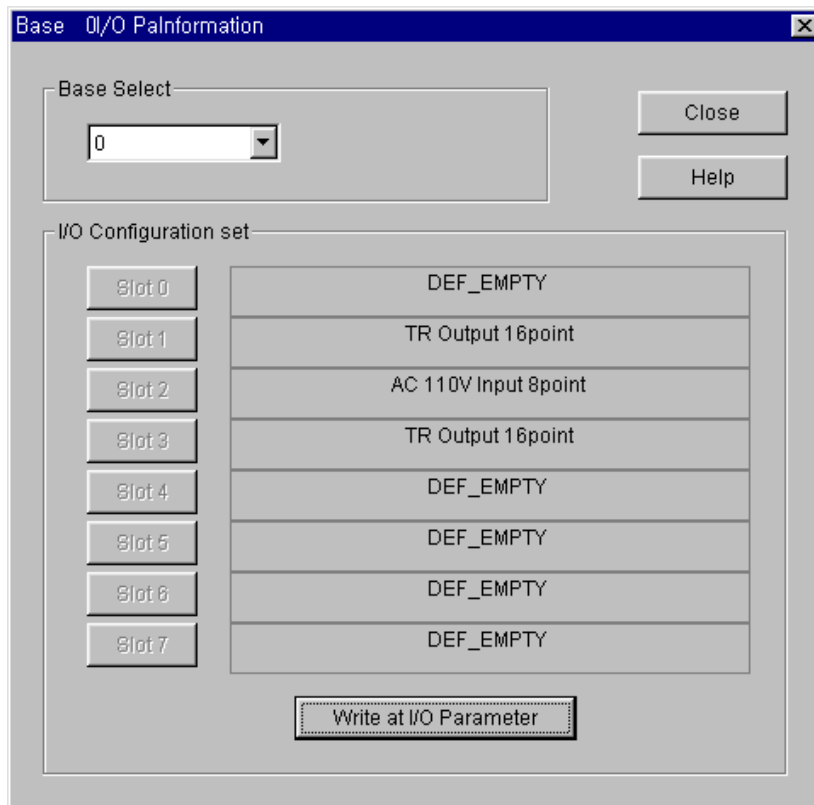

- ◆ Select the base number in **Base Select** list box.
- ◆ If you select the slot number in **I/O Configuration** dialog box, you can read the information of special module.

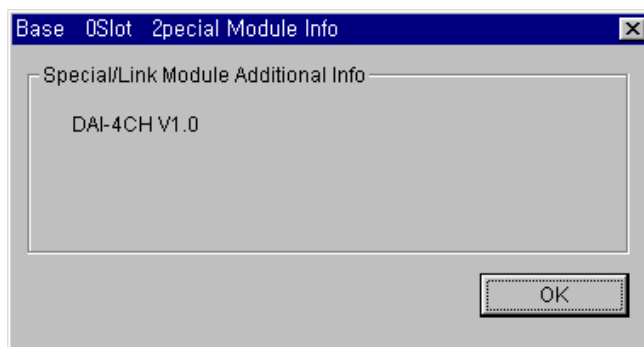


7.12. Forced I/O Setup

This is a function that sets up forced input/output of refresh area in PLC.

It is different from Forced writing of variable in program.

In the following PLC system, how to setup Forced Input of the part marked▲with () is as below.

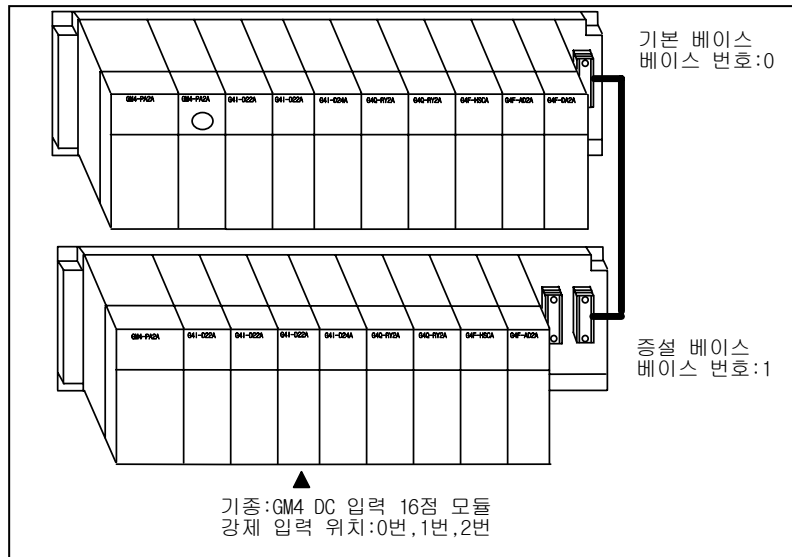

- ◆ Select **Online-I/O Forcing-Input** in the pull-down menu.

I/O Forcing Set (Input)

Base Select: 1 View...

Slot Select: 2

Flag	Data	Flag	Data	Flag	Data	Flag	Data
0	<input checked="" type="checkbox"/>	0	<input checked="" type="checkbox"/>	16	<input type="checkbox"/>	16	<input type="checkbox"/>
1	<input checked="" type="checkbox"/>	1	<input checked="" type="checkbox"/>	17	<input type="checkbox"/>	17	<input type="checkbox"/>
2	<input checked="" type="checkbox"/>	2	<input checked="" type="checkbox"/>	18	<input type="checkbox"/>	18	<input type="checkbox"/>
3	<input type="checkbox"/>	3	<input type="checkbox"/>	19	<input type="checkbox"/>	19	<input type="checkbox"/>
4	<input type="checkbox"/>	4	<input type="checkbox"/>	20	<input type="checkbox"/>	20	<input type="checkbox"/>
5	<input type="checkbox"/>	5	<input type="checkbox"/>	21	<input type="checkbox"/>	21	<input type="checkbox"/>
6	<input type="checkbox"/>	6	<input type="checkbox"/>	22	<input type="checkbox"/>	22	<input type="checkbox"/>
7	<input type="checkbox"/>	7	<input type="checkbox"/>	23	<input type="checkbox"/>	23	<input type="checkbox"/>
8	<input type="checkbox"/>	8	<input type="checkbox"/>	24	<input type="checkbox"/>	24	<input type="checkbox"/>
9	<input type="checkbox"/>	9	<input type="checkbox"/>	25	<input type="checkbox"/>	25	<input type="checkbox"/>
10	<input type="checkbox"/>	10	<input type="checkbox"/>	26	<input type="checkbox"/>	26	<input type="checkbox"/>
11	<input type="checkbox"/>	11	<input type="checkbox"/>	27	<input type="checkbox"/>	27	<input type="checkbox"/>
12	<input type="checkbox"/>	12	<input type="checkbox"/>	28	<input type="checkbox"/>	28	<input type="checkbox"/>
13	<input type="checkbox"/>	13	<input type="checkbox"/>	29	<input type="checkbox"/>	29	<input type="checkbox"/>
14	<input type="checkbox"/>	14	<input type="checkbox"/>	30	<input type="checkbox"/>	30	<input type="checkbox"/>
15	<input type="checkbox"/>	15	<input type="checkbox"/>	31	<input type="checkbox"/>	31	<input type="checkbox"/>
16	<input type="checkbox"/>	16	<input type="checkbox"/>	32	<input type="checkbox"/>	32	<input type="checkbox"/>
17	<input type="checkbox"/>	17	<input type="checkbox"/>	33	<input type="checkbox"/>	33	<input type="checkbox"/>
18	<input type="checkbox"/>	18	<input type="checkbox"/>	34	<input type="checkbox"/>	34	<input type="checkbox"/>
19	<input type="checkbox"/>	19	<input type="checkbox"/>	35	<input type="checkbox"/>	35	<input type="checkbox"/>
20	<input type="checkbox"/>	20	<input type="checkbox"/>	36	<input type="checkbox"/>	36	<input type="checkbox"/>
21	<input type="checkbox"/>	21	<input type="checkbox"/>	37	<input type="checkbox"/>	37	<input type="checkbox"/>
22	<input type="checkbox"/>	22	<input type="checkbox"/>	38	<input type="checkbox"/>	38	<input type="checkbox"/>
23	<input type="checkbox"/>	23	<input type="checkbox"/>	39	<input type="checkbox"/>	39	<input type="checkbox"/>
24	<input type="checkbox"/>	24	<input type="checkbox"/>	40	<input type="checkbox"/>	40	<input type="checkbox"/>
25	<input type="checkbox"/>	25	<input type="checkbox"/>	41	<input type="checkbox"/>	41	<input type="checkbox"/>
26	<input type="checkbox"/>	26	<input type="checkbox"/>	42	<input type="checkbox"/>	42	<input type="checkbox"/>
27	<input type="checkbox"/>	27	<input type="checkbox"/>	43	<input type="checkbox"/>	43	<input type="checkbox"/>
28	<input type="checkbox"/>	28	<input type="checkbox"/>	44	<input type="checkbox"/>	44	<input type="checkbox"/>
29	<input type="checkbox"/>	29	<input type="checkbox"/>	45	<input type="checkbox"/>	45	<input type="checkbox"/>
30	<input type="checkbox"/>	30	<input type="checkbox"/>	46	<input type="checkbox"/>	46	<input type="checkbox"/>
31	<input type="checkbox"/>	31	<input type="checkbox"/>	47	<input type="checkbox"/>	47	<input type="checkbox"/>
32	<input type="checkbox"/>	32	<input type="checkbox"/>	48	<input type="checkbox"/>	48	<input type="checkbox"/>
33	<input type="checkbox"/>	33	<input type="checkbox"/>	49	<input type="checkbox"/>	49	<input type="checkbox"/>
34	<input type="checkbox"/>	34	<input type="checkbox"/>	50	<input type="checkbox"/>	50	<input type="checkbox"/>
35	<input type="checkbox"/>	35	<input type="checkbox"/>	51	<input type="checkbox"/>	51	<input type="checkbox"/>
36	<input type="checkbox"/>	36	<input type="checkbox"/>	52	<input type="checkbox"/>	52	<input type="checkbox"/>
37	<input type="checkbox"/>	37	<input type="checkbox"/>	53	<input type="checkbox"/>	53	<input type="checkbox"/>
38	<input type="checkbox"/>	38	<input type="checkbox"/>	54	<input type="checkbox"/>	54	<input type="checkbox"/>
39	<input type="checkbox"/>	39	<input type="checkbox"/>	55	<input type="checkbox"/>	55	<input type="checkbox"/>
40	<input type="checkbox"/>	40	<input type="checkbox"/>	56	<input type="checkbox"/>	56	<input type="checkbox"/>
41	<input type="checkbox"/>	41	<input type="checkbox"/>	57	<input type="checkbox"/>	57	<input type="checkbox"/>
42	<input type="checkbox"/>	42	<input type="checkbox"/>	58	<input type="checkbox"/>	58	<input type="checkbox"/>
43	<input type="checkbox"/>	43	<input type="checkbox"/>	59	<input type="checkbox"/>	59	<input type="checkbox"/>
44	<input type="checkbox"/>	44	<input type="checkbox"/>	60	<input type="checkbox"/>	60	<input type="checkbox"/>
45	<input type="checkbox"/>	45	<input type="checkbox"/>	61	<input type="checkbox"/>	61	<input type="checkbox"/>
46	<input type="checkbox"/>	46	<input type="checkbox"/>	62	<input type="checkbox"/>	62	<input type="checkbox"/>
47	<input type="checkbox"/>	47	<input type="checkbox"/>	63	<input type="checkbox"/>	63	<input type="checkbox"/>

Set Reset

Close Cancel All Reset... Help

- ◆ Input Base Select:1, Slot Select:2 in dialog box.
- ◆ Setup the forced data and flag(0 ~ 2) in I/O forcing set of dialog box.
- ◆ Click **Close** button.

- ◆ If you click View button in dialog box, you can see the content of forced I/O setup.

Forced Output setup is same as the Forced input setup.

- ◆ Select **Online-I/O Forcing-Output** in the pull-down menu.
- ◆ Select a base and slot in dialog box.
- ◆ Setup the forced data and flag in I/O Forcing set of dialog box.
- ◆ Click **Close** button.

Note

To input/ output the data that you setup, you should setup Enable I/O Forcing in section 7.13

7.13. Enable I/O Forcing

It allows you to enable the execution of Forced input/output.


- ◆ Select **Online-I/O Forcing-Output** in the pull-down menu.

- ◆ Select the area for Forced I/O in **Enable I/O Forcing** dialog box and click **OK** button.


7.14. Link Information

This function shows the station number, type, PLC mode, error, and slot number of communication module mounted on PLC.

- ◆ Select **Online-Link Information** in the pull-down menu.

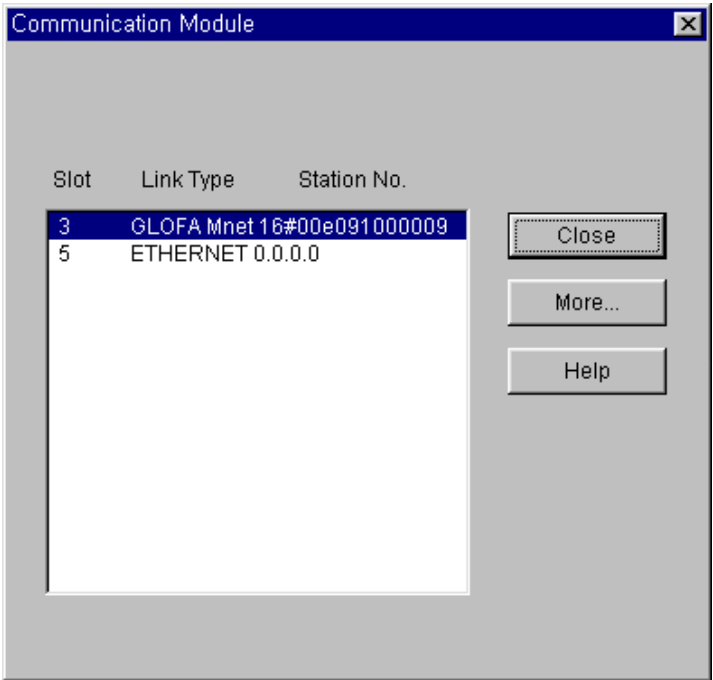


- ◆ Click **More...** button for the detail information in **Communication Module** dialog box.

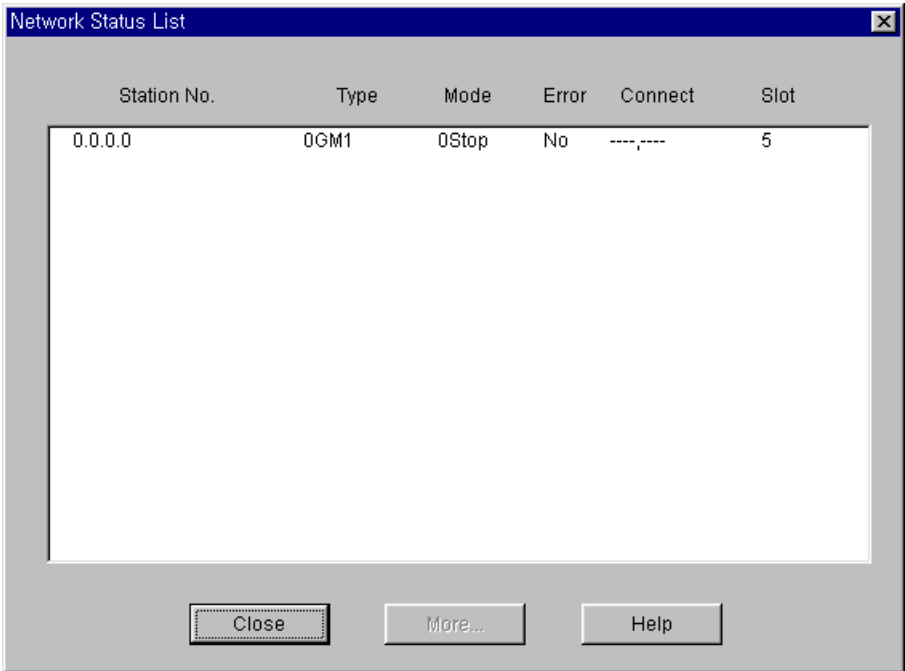

7.15. Tx/Rx Information


In GM7, you can monitor a receiving data with the selecting of Tx/Rx information through the C-net or C-net interface unit.
(In GM1-6, you can monitor through the frame editor for C-net)

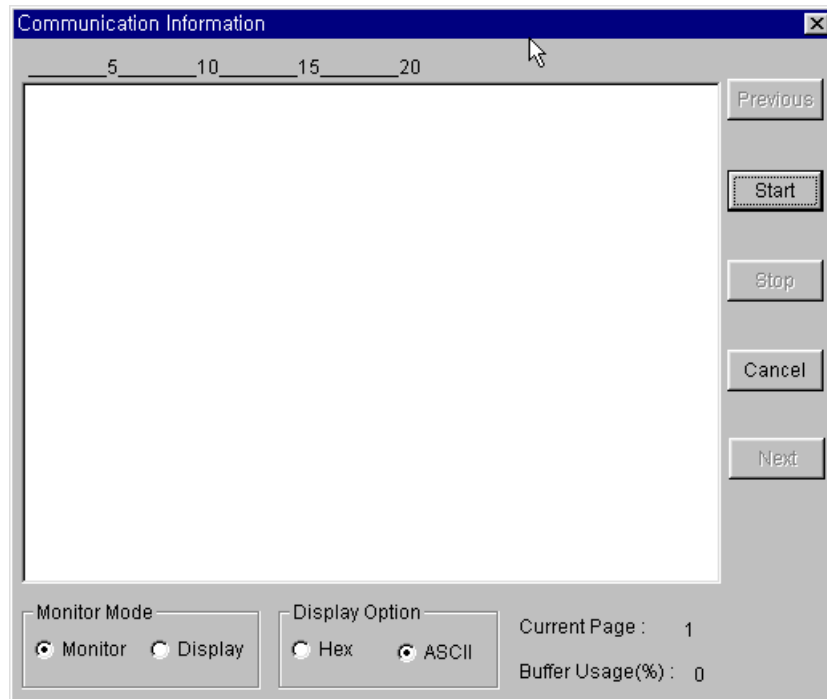

7.16. Mnet Parameter

It allows you to setup the parameter of Mnet (Mini-MAP) communication module in PLC.

- ◆ Select **Online-Mnet Parameter** in the pull-down menu.

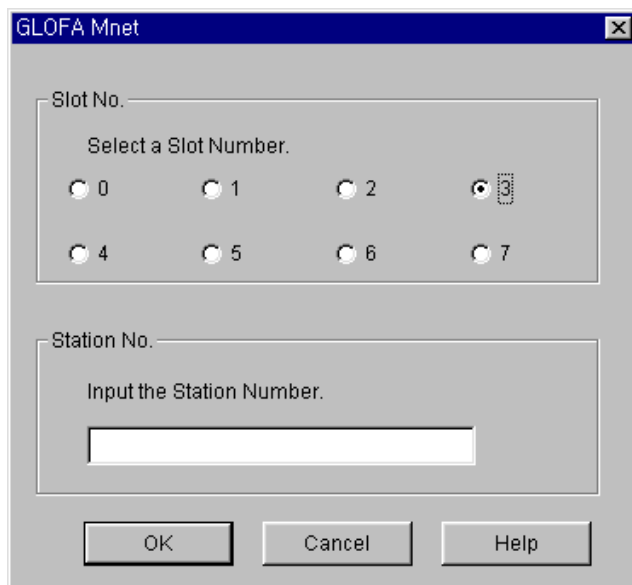


- ◆ Setup **Slot No.** and **Station No.** in GLOFA Mnet dialog box.

7.17. Mnet Information

This function indicates modern's status of Mnet(Mini-MAP) communication module in PLC.

- ◆ Select **Online- Mnet Information** in the pull-down menu.

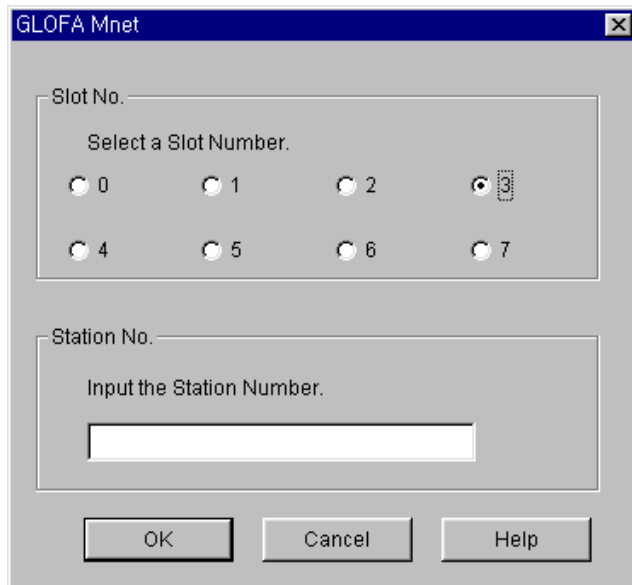


The GLOFA Mnet dialog box has a title bar with a close button. It contains two main sections. The first section is labeled 'Slot No.' and contains the text 'Select a Slot Number.' followed by eight radio buttons labeled 0 through 7. Radio button 3 is selected and highlighted with a dashed border. The second section is labeled 'Station No.' and contains the text 'Input the Station Number.' followed by a text input field. At the bottom, there are three buttons: OK, Cancel, and Help.

- ◆ Setup Slot No. and Station No. in GLOFA Mnet dialog box.

7.18. I/O Skip

To setup the I/O Skip,

- ◆ Select **Online-I/O Skip** in the pull-down menu.

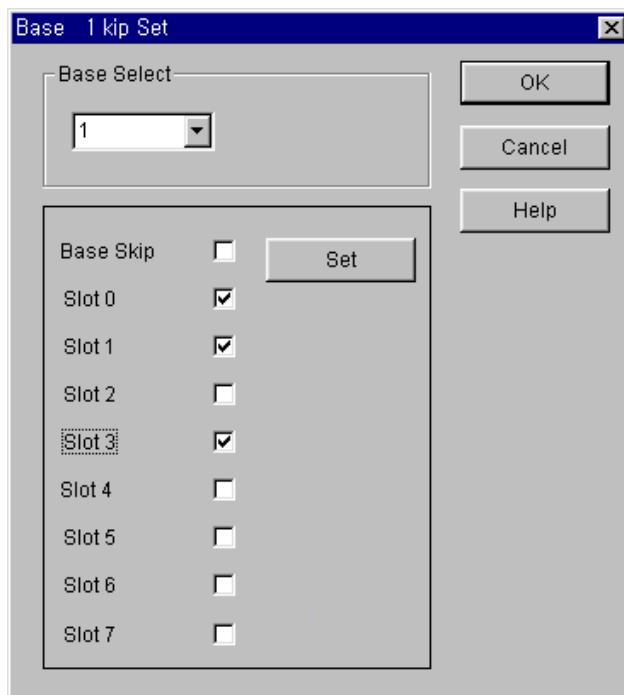


The Base 1 kip Set dialog box has a title bar with a close button. It contains a 'Base Select' section with a dropdown menu showing '1'. To the right of this section are three buttons: OK, Cancel, and Help. Below the Base Select section is a list of slots from Slot 0 to Slot 7. Each slot has a checkbox next to it. Slot 0, Slot 1, and Slot 3 are checked. Slot 3 is highlighted with a dashed border. To the right of the slot list is a 'Set' button.

- ◆ Setup a base number to skip the I/O in **Base Skip Set** dialog box.
- ◆ Setup a slot number in **Base Skip Set** dialog box and click OK button.

7.19. Fault Mask

To setup Fault Mask,

- ◆ Select **Online-Fault Mask** in the pull-down.

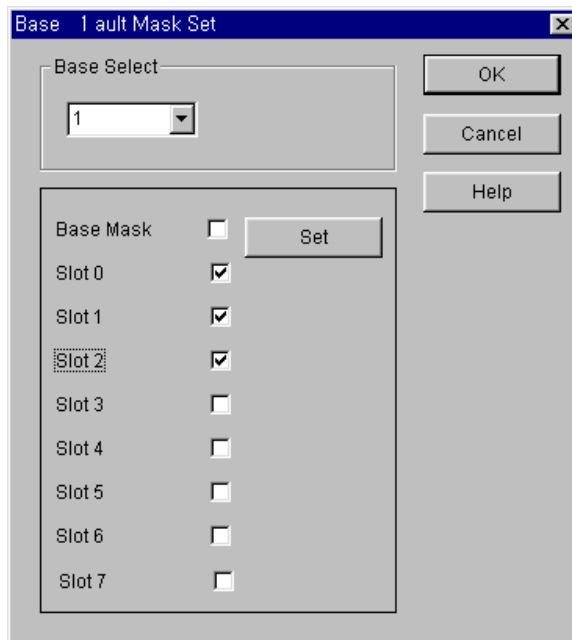


- ◆ Setup the base number to mask in **Base Fault Mask** dialog box in menu
- ◆ Setup a slot number in **Base Fault Mask** dialog box and click **OK** button.

7.20. Initializes Special Modules


It allows you to initialize a special module in PLC.

To initialize a special module,


- ◆ Select **Online-Initializes Special Modules** in the pull-down.

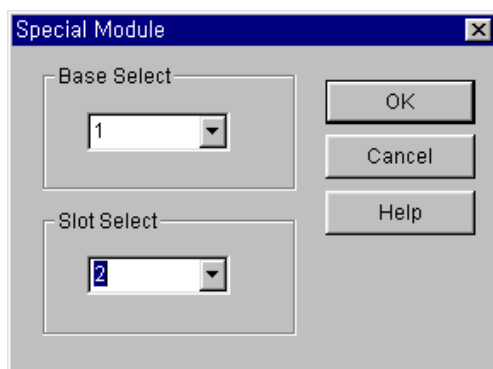


- ◆ In **Special Module** dialog box, select the slot number and base which has a special module to initialize.
- ◆ Click **OK** button.
- ◆ If you setup the wrong number, the error message box appears on the screen as below.

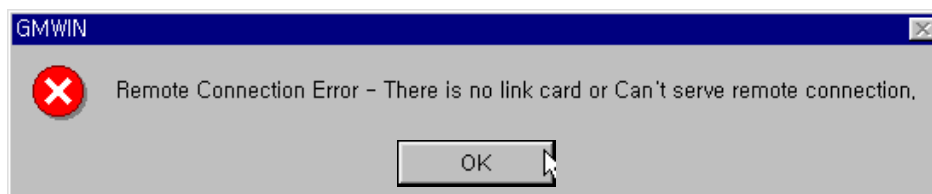

- ◆ After selecting the number correctly, click OK button.
- ◆ Select the parameter to initialize in **Initial Values Set** dialog box.

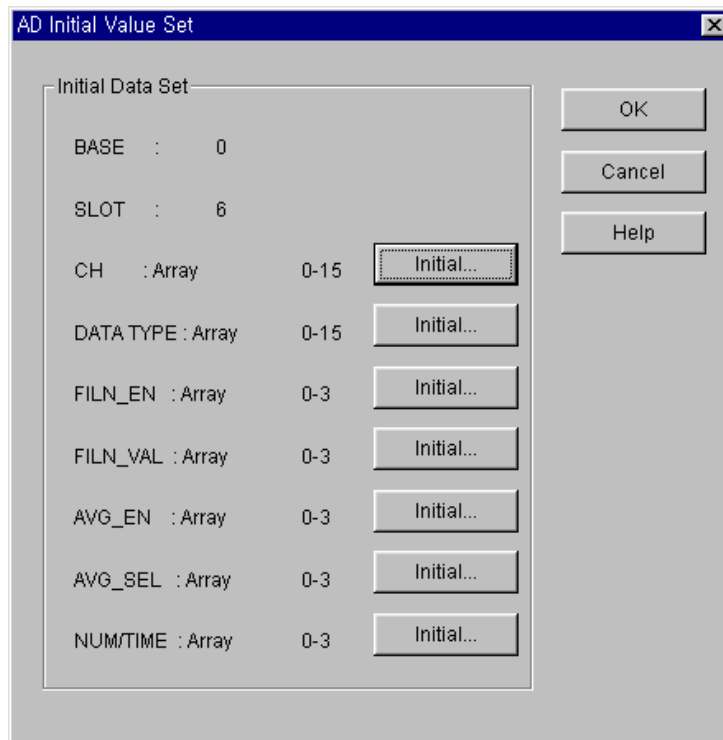

- ◆ Then **Array Initialization** dialog box appears and the designated value is outputted to the selected parameter.
- ◆ In **Array Initialization** dialog box, after selecting the item that you want to change, double-click the item or click

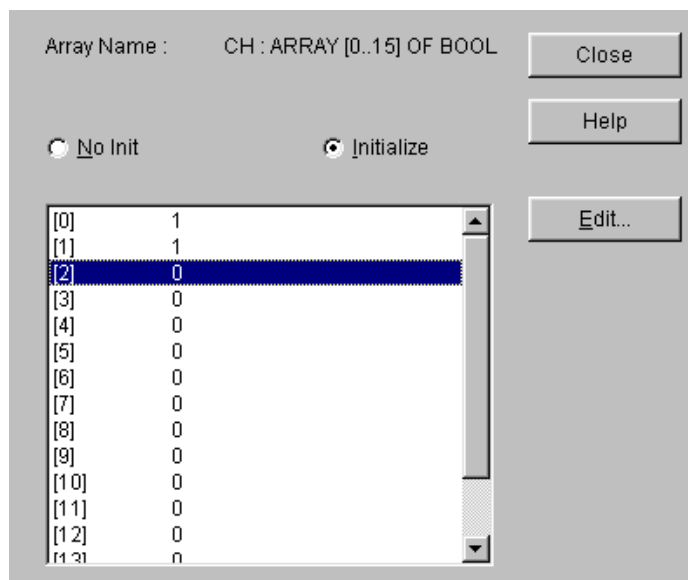

Edit button.

- ◆ Change the Value to initialize in **Array Initialization** dialog box and click OK button.

Note

Refer to section 'Chapter 13 Online Edit' for details.

Chapter 8. Monitoring


- 1) Program Monitoring
- 2) I/O Monitoring
- 3) Variable Monitoring
- 4) Variable Monitoring
- 5) Link Parameter Monitoring

8.1. Monitor a Program

To monitor the operation of PLC in Run mode,

- ◆ Select **Online-Connect** in the pull-down menu.
- ◆ Select **Monitor-Monitor On** in menu.

If there is more than 2 defined instances in a program, **Select Instance** dialog box appears.

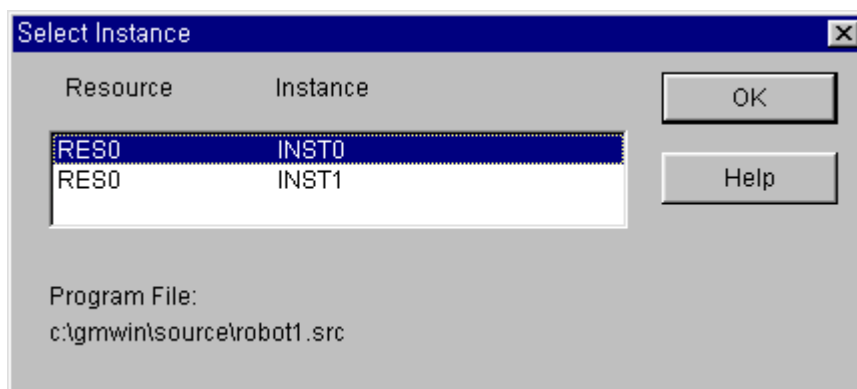

- ◆ Select an instance in the list box of **Select Instance** dialog box, and click **OK** button.

Note

To monitor in GMWIN, the program in the current window must be exactly same with a transferred program in PLC. If you monitor the program edited after downloading to PLC, monitored data of the program may be operated differently with the real one in the window. So, if you edit the program after downloading to PLC, you must execute monitoring after creating an execution file again **Compile-Make** menu. You can not edit the program in the project while execute monitoring. But you can edit the program not contain the project.

8.1.1. Monitor LD

LD Monitoring basically has two functions. One is that showing the variable status, and the other is that setting or getting ON/OFF the variable value by force.


1) Monitor a Variable

(1) Monitor a Contact or Coil variable

You can see the ON/OFF status of variable by the change of color(ON : Red, OFF : Black)of the appropriate variable name, because the variable of contact or coil is **BOOL** type in Ladder Diagram. If the color of the variable name turns to be red, the variable means **On** status, and **Off** status for black one.

(2) Monitor I/O Variable for the Function or Function Block

I/O variable for the Function or Function Block is displayed as a number or string on the line of the variable name.

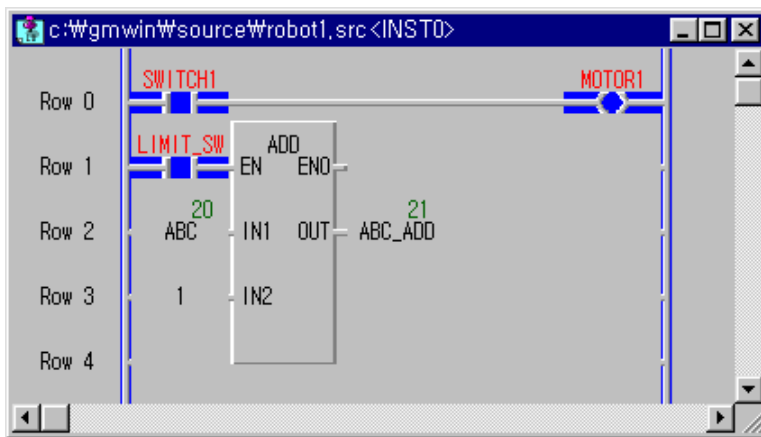

2) Forced Variable

This function allows you to turn the variable of contact or coil ON/OFF and set the variable for the function or function block as a desired value forcibly




- ◆ In LD Program, move the mouse to the variable that you want to set and double-click the left button of the mouse. Then Force Variable dialog box appears.



- ◆ In LD Program, move the cursor to the variable that you want to set.
- ◆ Press **Enter**.


The 'Force Variable' dialog box has a title bar with a close button. It contains two input fields: 'Variable Name' with the text 'LIMIT_SW' and 'Value' with the text '0'. To the right of these fields are three buttons: 'OK', 'Cancel', and 'Help'.

- ◆ Input '0'(Off) in the Value box of **Force Variable** dialog box and click **OK** button.

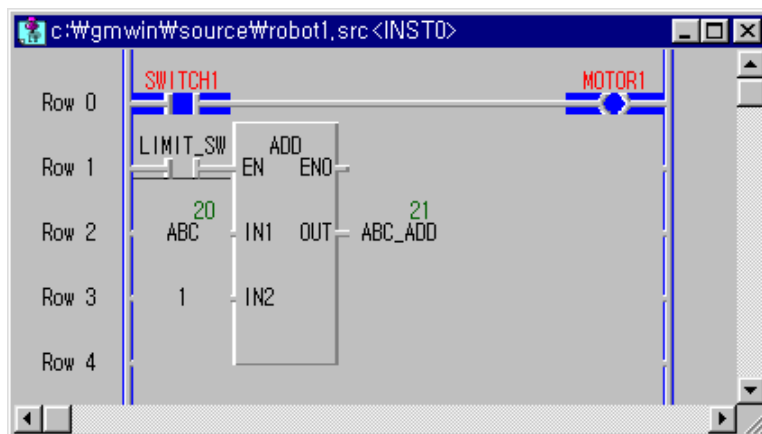

3) Forced Output I/O Variables

If Variable is I/O variable, the following dialog box appears.

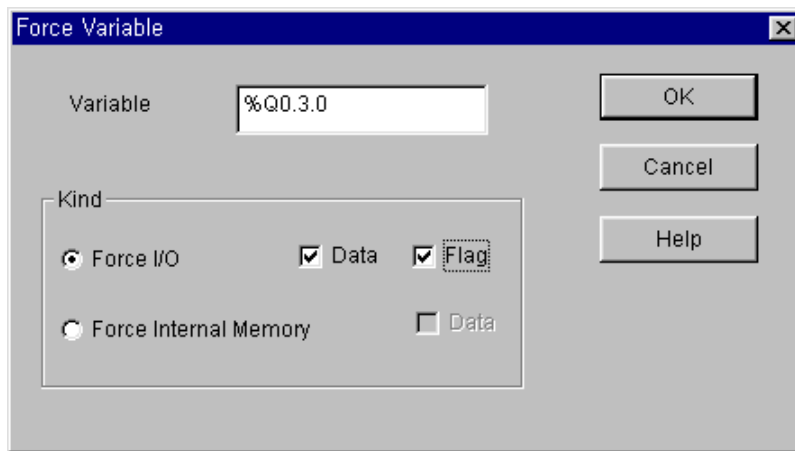


- ◆ If you want change the I/O value, select **Force I/O** and to set up '1', select **Data** and **Flag**. In this case, Forced I/O is available under the setting of forced I/O enable. (Refer to 7.12 'Forced I/O Setup and 7.13 'Enable I/O Forcing)
- ◆ If you want change the internal value, select **Force Internal Memory** and to set up '1', select **Data**.

4) Monitor Array Variable

When a program monitoring starts, array variable basically monitors the first elements of array.

If array variable name is ARR, this variable displayed as ARR(0) and monitors the first element of array.

- ◆ Move the cursor on the array variable that you want to monitor.
- ◆ Select the **Toolbox-Select Array Subscript**.

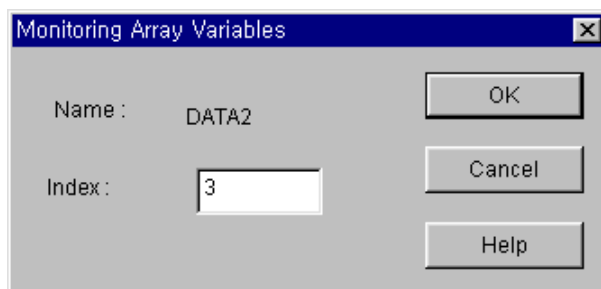


- ◆ In **Monitoring Array Variables** dialog box, enter the index of element that you want to monitor. Click **OK** button. You can also monitor an array variable with hot key without using **Monitoring Array Variables** dialog box.
- ◆ Move the cursor to the array variable.
- ◆ Increase the element index with pressing Ctrl- ↑ or decrease with pressing Ctrl- ↓

8.1.2. Monitor SFC

It allows you to know about the flow of SFC program with display of an active step and action.

If you select the **SFC Auto Scroll** in **Option** menu, SFC window automatically scrolls along the active step.

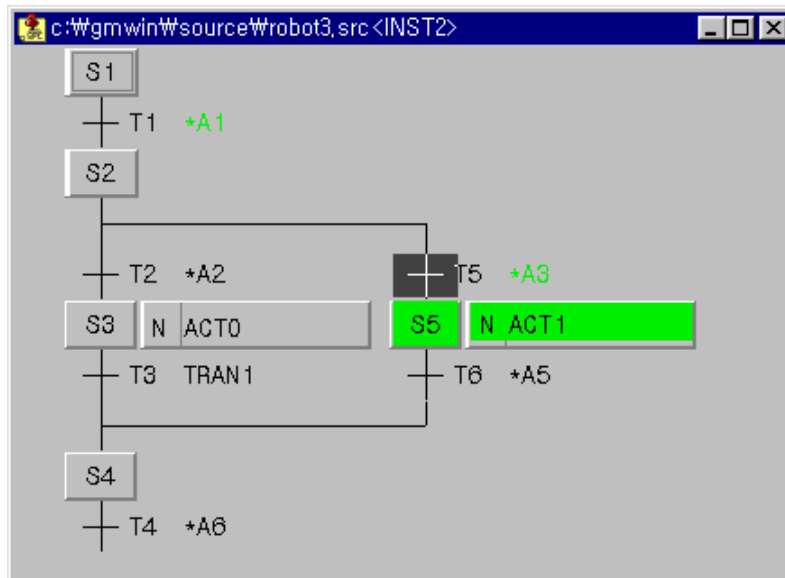

To monitor an action and transition program,



- ◆ Move the mouse on the action or transition, and double-click the left button of the mouse.



- ◆ Move the cursor on the action or transition, and select the **Toolbox-Zoom** in menu.

8.1.3. Monitor IL

It monitors only the program in a project. It is impossible to edit the program during monitoring.

Monitoring data is shown at the position of program value.

You can see the monitoring data in a desired place by adjusting the column of display region.

During the monitoring, you can see hide the comment by clicking **Toolbox-Comment Show/Hide** menu.

1) Monitor a Variable

The variable declared as an array is monitored with assigned as initial index '0'

- ◆ If you want to change the index, move the cursor in a desired line.
- ◆ Select **Toolbox-Select Array Index(I)** in the pull-down menu.
- ◆ Assign the index of array element.
- ◆ Click **OK** button, or hit the **Ctrl+ ↑** , **Ctrl+ ↓** .

Nu...	Instruction	Input...	Variable	Value
0	LD		%I0.0	0
1	ST		MOTOR3	0
2	LD		DATA1	346
3	ADD		DATA2	32
4	ST		DATA3	378
5	LD		SWITCH3	1
6	ST		LAMP3	1
7	NOP			

2) Forced Variable

- ◆ Double-click the line of variable that you want to write.

Force Variable

Variable Name: DATA2

Value: 32

Buttons: OK, Cancel, Help

- ◆ Enter the value of variable in the **Force Variable** dialog box.
- ◆ Click **OK** button.

8.2. Monitor a Variable

You can monitor a variable declared in a program, global variable, I, Q, M area, system flag and etc.

Monitor

Variabl...

Start / Stop — Stop View — Detail Display

Forced Allocation — Force Sel — Select Variable

Data Display Form — D/H

To monitor the program the program initially,

- ◆ To call the **Select Variable** dialog box, select **Online-Monitor-Monitor On** in menu.
- ◆ Select **Online-Monitor- Variable Monitor** in menu.

To monitor the program,

To call the **Select Variable** dialog box, select **Online-Monitor- Variable Monitor** in menu.

Note

If GWMWIN is not connected to PLC, select **Connect** in menu before selecting the above menu.

- ◆ In the **Register Variable** dialog box, select the variable that you want to monitor. Refer to the following section for selecting variable.

8.2.1. Register Variable


To select the variable declared in program, global variable, I, Q, M area, system flag and etc. at the same time.



- ◆ Click () in toolbox.
- ◆ Select a variable to monitor in accordance with the **Register Variable** dialog box.



- ◆ Select the **Toolbox-Select (F5)** in menu.
- ◆ Select a variable to monitor in accordance with the **Register Variable** dialog box.

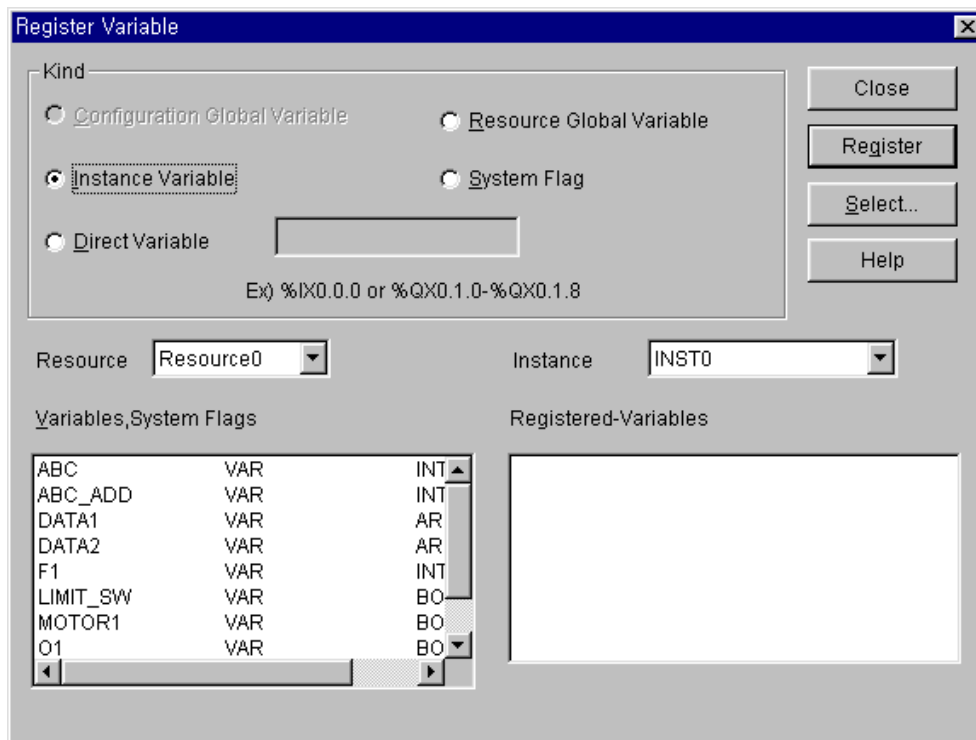

Register Variable

Kind

☐ Configuration Global Variable ☐ Resource Global Variable

☒ Instance Variable ☐ System Flag

☐ Direct Variable

Ex) %IX0.0.0 or %QX0.1.0-%QX0.1.8

Resource: Instance:

Variables, System Flags

ABC	VAR	INT
ABC_ADD	VAR	INT
DATA1	VAR	AR
DATA2	VAR	AR
F1	VAR	INT
LIMIT_SW	VAR	BO
MOTOR1	VAR	BO
O1	VAR	BO

Registered-Variables

Buttons: Close, Register, Select..., Help

1) Register Configuration Global Variable (only available in GM1)

To register configuration global variable,

- ◆ Select the **Configuration Global Variable** in option button.
- ◆ Select the variables to monitor in the **Variables, System Flags** list box.
- ◆ Click **Register** button.

2) Register Resource Global Variable

To register resource variable,

- ◆ Select the **Resource Global Variable** in option button.
- ◆ Select the variables to monitor in the **Variables, System Flags** list box.
- ◆ Click **Register** button.

3) Register Instance Variable

To register the variable declared in the designated program,.

- ◆ Select the **Instance Variable** in option button.
- ◆ Select the instance in the **Instance** list.
- ◆ Select the variables to monitor in the **Variables, System Flags** list box.
- ◆ Click **Register** button.

4) Register Direct Variable

- ◆ Select the **Direct Variable** in option button.
- ◆ Enter the address of direct variable in the input text box.
- ◆ Click **Register** button.

5) Register System Flag

- ◆ Select the **System Flag** in option button.
- ◆ Select the flag to monitor in the **Variables, System Flags** list box.
- ◆ Click **Register** button.

Registered Variable will be displayed in **Registered Variable** list box.

6) All Select

It allows you to monitor one program or the entire global variable.

- ◆ Click **Select** Button, and **Select Variable** dialog box appears.

Register Variable

Kind

☐ Configuration Global Variable ☐ Resource Global Variable

☒ Instance Variable ☐ System Flag

☐ Direct Variable

Resource: Instance:

Variables, System Flags

ABC	VAR	INT
ABC_ADD	VAR	INT
DATA1	VAR	AR
DATA2	VAR	AR
F1	VAR	INT
LIMIT_SW	VAR	BO
MOTOR1	VAR	BO
O1	VAR	BO

Registered-Variables

Buttons: Close, Register, Select..., Help

(1) Select Configuration Global Variable

To monitor only configuration global variable,

- ◆ Select the **Configuration Global Variable** in option menu, and click **OK** button.

(2) Select Resource Global Variable

To monitor only resource global variable,

- ◆ Select the **Resource Global Variable** in option menu, and click **OK** button.

(3) Select Instance Variable

To monitor only program instant variable,

- ◆ Select the **Instance Variable** in option menu, and click **OK** button.


8.2.2. Start Monitoring



- ◆ Click () in toolbox.



- ◆ Select **Toolbox-Start (F2)** in menu.

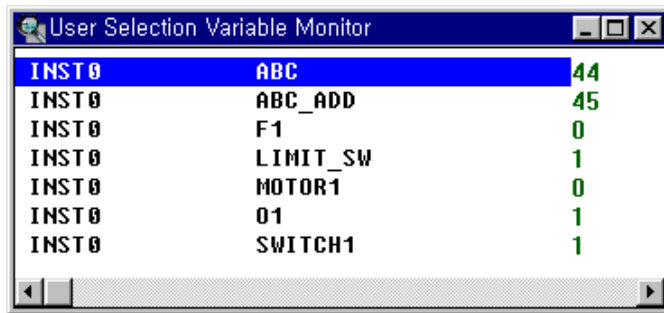


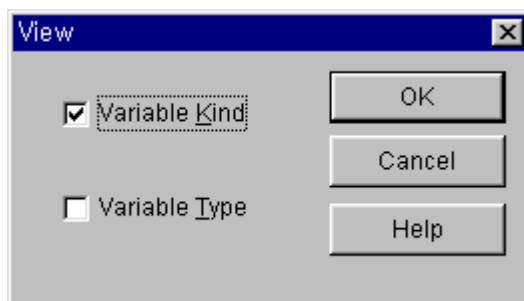
INST0	ABC	44
INST0	ABC_ADD	45
INST0	F1	0
INST0	LIMIT_SW	1
INST0	MOTOR1	0
INST0	O1	1
INST0	SWITCH1	1

8.2.3. Set the View Type of Monitoring

It allows you to monitor the detail information of variable selectively.



- ◆ Click () in toolbox.



- ◆ In the **View** dialog box, select the information that you want to displayed and click **OK** button.



- ◆ Select **Toolbox-View(F3)** in pull-down menu.
- ◆ In the **View** dialog box, select the information that you want to displayed and click **OK** button.

8.2.4. Data Display Form


To display type of variable's value as decimal, hexadecimal or by the variable type,



- ◆ Click () in toolbox.



- ◆ Select **Toolbox-Hex (F6)** in menu.

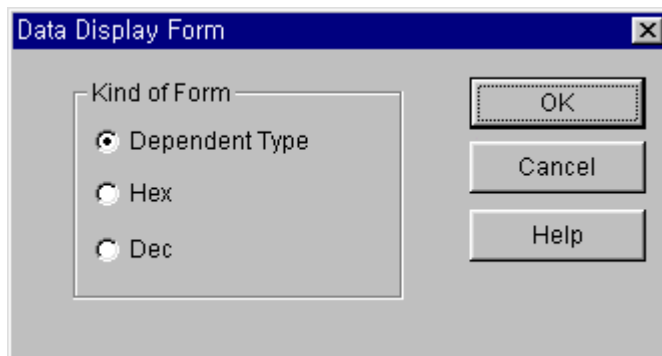


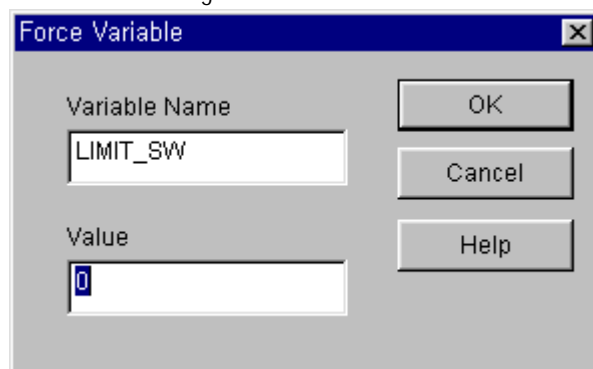
- ◆ Select display type with **Kind of Form** option radio box.
- ◆ Click **OK** button.

8.2.5. Forced Variable Output

To output the desired variable's value forcibly.



- ◆ Click () in toolbox. Or
- ◆ Move the mouse on the variable to change a value, and double-click the left button of the mouse, which calls the Force Variable dialog box.



- ◆ Enter the variable's value in the **Value** input text box.
- ◆ Click **OK** button.



- ◆ Call the **Force Variable** dialog box.
- ◆ Enter the variable's value in the **Value** input text box.
- ◆ Click **OK** button.

If the type of a variable is a direct variable and Boolean type, forced I/O setting is available and you can prevent the value from being changed by program.

Note


Although you output a variable's value forcibly, it can be changed by program.

8.2.6. Monitor Array Variable

Select array range to monitor the variable of array type.

(Use **Select** menu in monitoring of variable selected by User)


- ◆ To call the **Select Array Number** dialog box, move the cursor to Array Type Variable and select **Toolbox-Array Number Select(F7)** in menu.

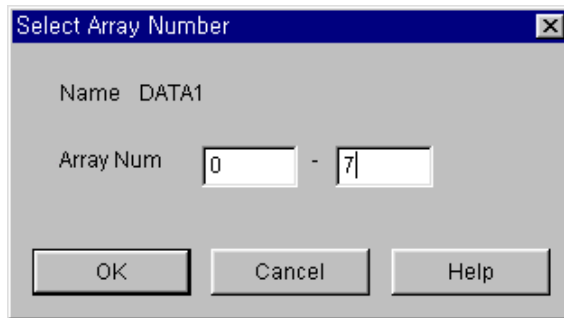

- ◆ Select the array range in the **Select Array Number** dialog box.

8.3. I/O Monitoring

It monitors I/O modules mounted on the PLC system. First assign the base to monitor, and the I/O cards mounted on the base are displayed.


And click () button in toolbox, then the PLC system starts monitoring.

Start/Stop Monitoring button in toolbox is toggled each other.

Selected base number is displayed at the left upper corner, and at the bottom of each slot the value of monitoring data is displayed as decimal scale or hexadecimal by the display type to monitor.

If you click the each contact in the I/O module with mouse, each contact are toggled into On or Off.

Toolbox for I/O Monitoring (This toolbox appears after selecting **I/O monitor** in **Online-Monitor** menu).

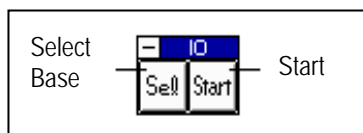

To monitor the program initially,


- ◆ Select the **Online-Monitor-Monitor on** in menu, **Online-Monitor-I/O Monitor** in menu.


To monitor the program in monitoring mode,


- ◆ Select **Online-Monitor-I/O Monitor** in menu.

To start I/O Monitoring in monitoring mode.

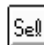


- ◆ Call the **Select Base** dialog box by clicking () button in toolbox.

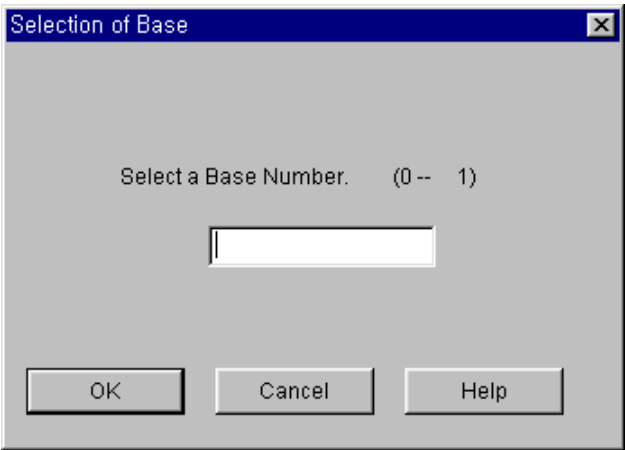

- ◆ Enter the base number to monitor in the **Select Base** dialog box and click **OK** button.
- ◆ Click () in toolbox.



- ◆ Call the **Select Base** dialog box by selecting **Toolbox-Select Base(F2)** in menu.
- ◆ Enter the base number to monitor in the **Select Base** dialog box and click **OK** button.
- ◆ Select **Toolbox-Start/Stop(F3)** in menu.

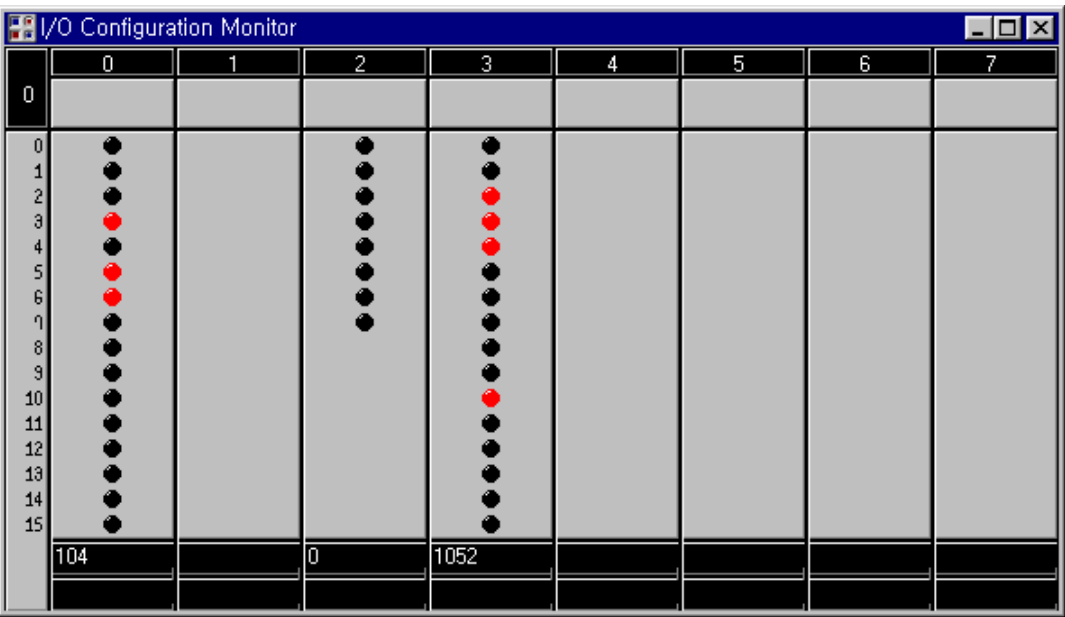

To stop the I/O monitoring,



- ◆ Click () in toolbox.




- ◆ Select **Toolbox-Start/Stop(F3)** in menu.

8.4. Monitor a Time Chart

It allows you to monitor ON/OFF status by time chart for anything that declared as Boolean type out of declared variables in the program, global variables, I, Q, M area and system flag.

If a variable to monitor is not Boolean type, you can monitor the variable in **Variable Monitor** menu.

Toolbox for Time Chart Monitoring.

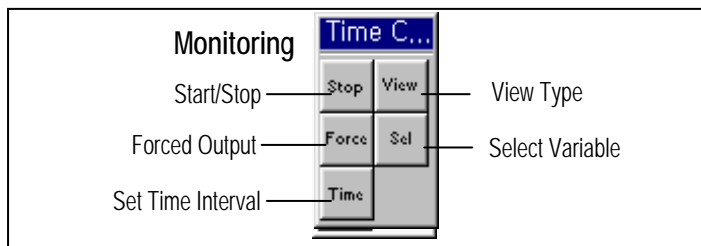

To monitor the program by time chart initially,

- ◆ Select **Online-monitor-Monitor on** in menu, **Online-Start monitor-Time Chart Monitor**.

To monitor the program by time chart in monitoring mode,

- ◆ Select **Online-Start monitor-Time Chart Monitor** in menu.

Note

If GMWIN is not connected to PLC, setup the **connect option** in project menu and select connect in online menu before selecting the above menu.


- ◆ Select a variable in the **Select Variable** dialog box.

8.4.1. Select a Variable

It is selected when you monitor the variable declared in a program, global variable, I, Q, M area, system flag and etc. at the same time.


To monitor a variable time chart,



- ◆ Click () in toolbox.
- ◆ Select variables to monitor in the **Register Variable** dialog box.



- ◆ Select **Toolbox-Select(F5)** in menu.
- ◆ Select variables to monitor in the **Register Variable** dialog box.

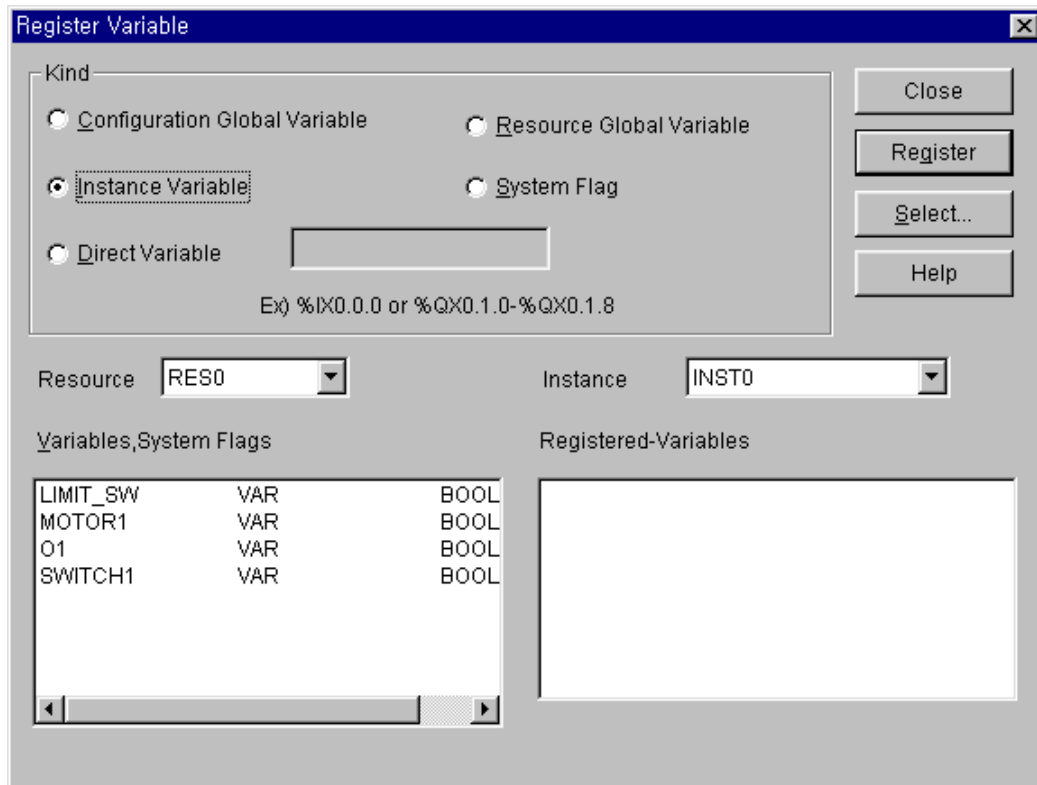

1) Configuration for the Global Variable Register (only GM1)

To register the global variable register,

- ◆ Select the **Configuration** option.
- ◆ Select variables to monitoring in the **Variable/Flag** list box.
- ◆ Click **Register**.

2) Select the Global Variable Resource

Registering the global variable resource.

- ◆ Select the **Resource** option.
- ◆ Select Variables to monitoring in the **Variable/Flag** list box.
- ◆ Click **Register**.

3) Select the Program Instance Variable

Register a stated variable in the designated program.

- ◆ Select the **Instance** option.
- ◆ Select **Instance** in the **Instance** list.
- ◆ Select Variables to monitoring in the **Variable/Flag** list box.
- ◆ Click **Register**.

4) Register the Direct Variable

- ◆ Select the **Direct Variable** option.
- ◆ Input the direct variable address.
Example) %QW0.0.1
- ◆ Click **Register**.

5) Registering the System Flag


- ◆ Select the **Flag** option.
- ◆ Input the system flag name.
- ◆ Select Flags to monitoring in the **Variable/Flag** list box.
- ◆ Click **Register**.

All registered variables appear in the Registered Variable list box.

6) Select

You can monitor one program, or all global variables.

- ◆ Click **Select**. Then the **Select Variable** dialog box appears.

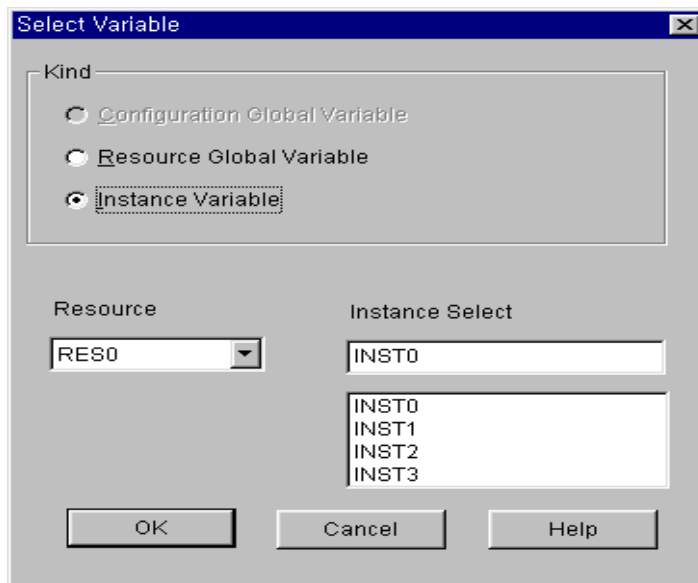

- (1) Registering the Configuration Global Variable
Select only when monitoring the configuration global variable.
 - ◆ Select the **Configuration** option and click **OK** button.
- (2) Select the Resource Global Variable
Select only when monitoring the resource global variable.
 - ◆ Select **Resource** and click **OK** button.
- (3) Select the Program Instance Variable
Select only when monitoring a stated variable in the designated program.
 - ◆ Select **Instance** and click **OK** button.


8.4.2. Start Monitoring



- ◆ Click () in toolbox.




- ◆ Select **Toolbox-Start (F2)** in menu.

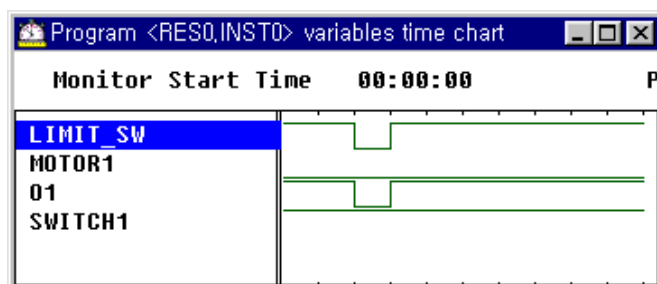

8.4.3. Set the View Type of Monitoring

It allows you to monitor the detail information of variable selectively.



- ◆ Click () in toolbox.
- ◆ Select information to display in the check box.



- ◆ Select **Toolbox-View(F3)** in menu.
- ◆ Select information to display in the check box.

8.4.4. Set Time Interval

It sets the time interval of monitoring the status of a variable's value.

It determines the time interval of collecting the PLC variable's value.

If you set the 5-second, you cannot monitor the variable's value that changes within the 5-second.




- ◆ Click () in toolbox.
- ◆ Enter the time interval to monitor in the **Time Chart Period** dialog box.




- ◆ Select **Toolbox-Time(F6)** in menu.
- ◆ Input the time interval to monitor in the **Time Chart Period** dialog box.

8.4.5. Forced Variable Output

To output the desired variable's value forcibly,

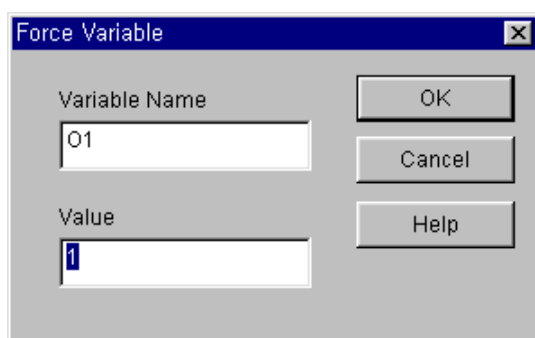

- ◆ Click () in toolbox. Or move the mouse on the variable to change a value, and double-click the left button of the mouse.
- ◆ Enter the variable's value in the **Value** input text box.
- ◆ Click **OK** button.



- ◆ Call the **Force Variable** dialog box.
- ◆ Enter the variable's value in the **Value** input text box.

- ◆ Press **Enter** key.

Note

A value is changeable by program under the forced variable output.

8.5. Monitor a Link Parameter


It allows you to monitor the status of link parameters, which is set by the parameter items in Project window.

To monitor the link parameter initially,


- ◆ Select the **Online-Monitor-Monitor on** in menu, **Online-Monitor-Link Parameter Monitor** in menu.

To monitor the link parameter in monitoring mode,

- ◆ Call the **Select Link Parameter** dialog box by selecting **Online-Monitor-Link Parameter Monitor** in menu.

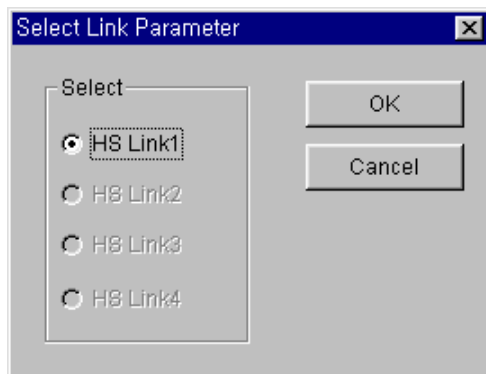

- ◆ Select **HS Link Parameter** to monitor in the **Select Link Parameter** dialog box, and click **OK** button.

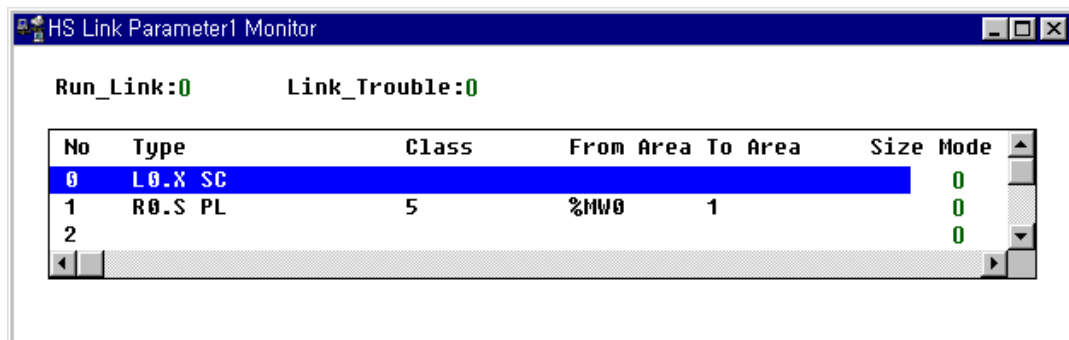

Chapter 9. Debugging

The Debugging detects an error and removes it, so that the PLC program created by user may be operated normally, the ways finding a program error are following as.

1) Step Run

Detecting an error with running the program step by step.

2) Break Run

Detecting an error after stopping the program on a specified step with break.

3) Data Break Run

Detecting an error with break on the access conditions of the specified scan account.

4) Bread Run with Specifying Scan Account

Detecting an error after making the program in execution as much as specified scan account.

In Step Run mode, it is impossible to access the program with task, but in Break Run mode, you can access the task program. Maximum number of break point is 32 points for **Program Break** and only 1 point for **Data Break**.

If the program for debugging is opened, Step Run starts from the first line of its program. If not, it starts from the first line of the first scan program assigned in project. Step run ends at the last line of the program. Break point is displayed in red color in each program, and in blue for the execution of break to the point.

If you change to debugging mode, program monitoring starts automatically.

Note

Change to debugging mode is available only in Stop mode.

In case of disconnected with PLC

- ◆ Select **Online-Connect** in menu.
- ◆ Select **Debug-Debug Start** in menu.
- ◆ Or select **Online-Mode Change-Debug** in menu.

In case of connected with PLC


- ◆ Select **Debug-Debug Start** in menu.
- ◆ or select **Online-Mode Change-Debug** in menu.

9.1. LD Debugging

9.1.1. Break Run

1) Select Break Run

- ◆ Move the cursor to the position that you want to assign as break point.
- ◆ Select the **Debug-Add/Remove Break Point(Ctrl+F5)** in the pull-down menu.

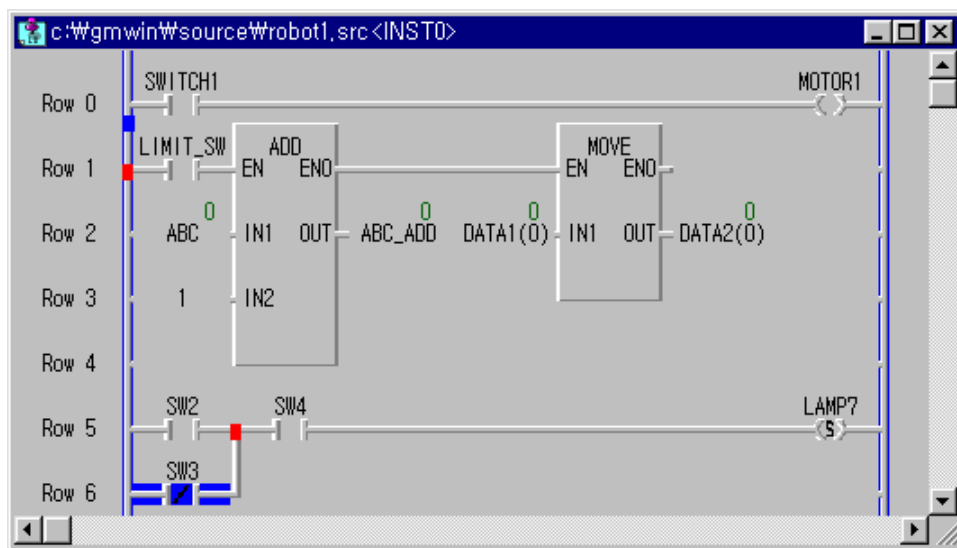


- ◆ Select the **Debug-Go**(Ctrl+F9) in menu.
As the above figure, a red square is displayed on the lower end of the left side of the position of assigned a break point and a blue square is displayed on the upper part of the left side of the position of break is on.
Then PLC program stops at the line set as break point.(row 5 in above figure)

2) Run to cursor position

- ◆ Move the cursor to the position that you want to assign as break point.
- ◆ Select the **Debug-Go to Cursor**(Ctrl+F2) in menu.

9.1.2. Step Run


You can use two types of **Step over** in LD debugging. One is step over by Point unit, the other one is step over by Line unit. It can be chosen at the **Monitor/Debug Option** folder in Option dialog box of **Project** menu..

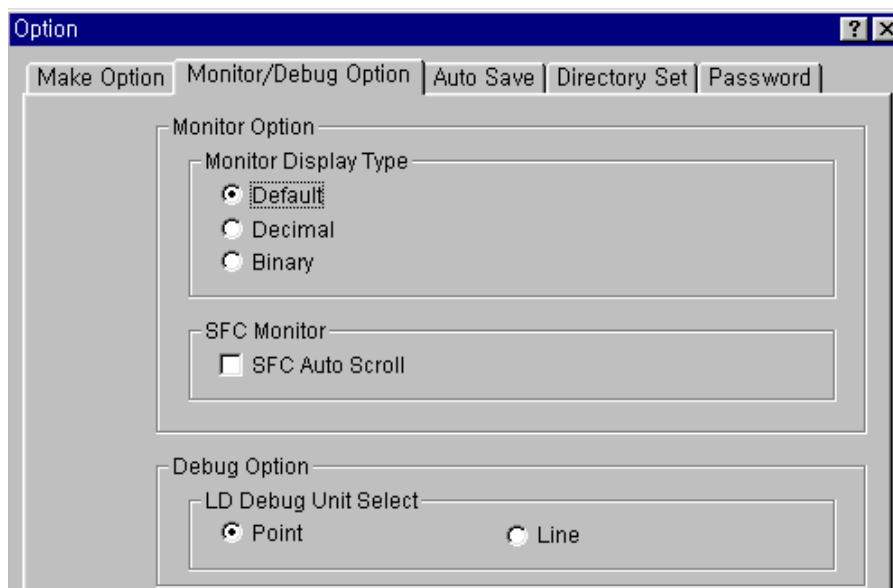


- ◆ Select the **Debug- Step Over**(Ctrl+F8) in menu.

Chapter 9. Debugging

When you run Step Over by **Point unit** for the program in 9.1.1 Break Run, the result is as below.

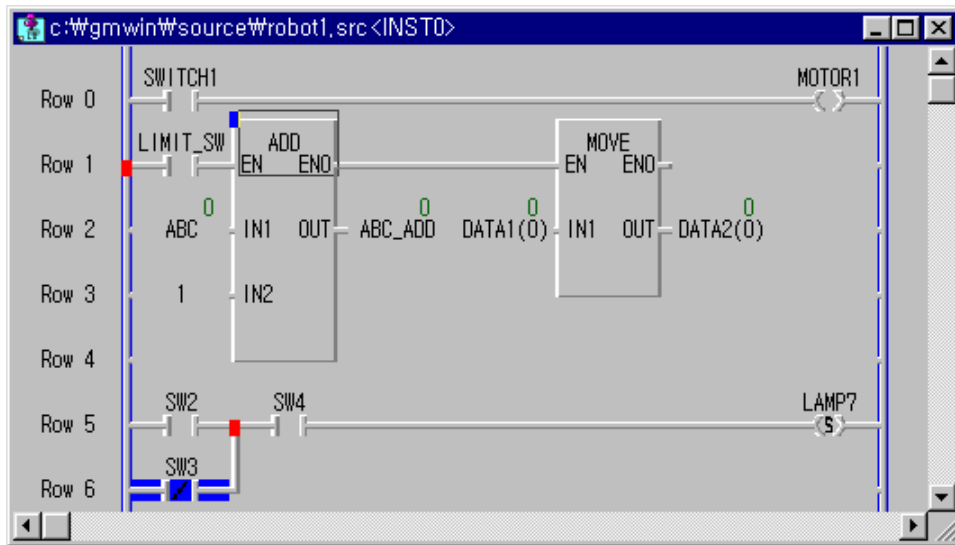


When you run Step Over by **Line unit** for the program in 9.1.1 Break Run, the result is as below .

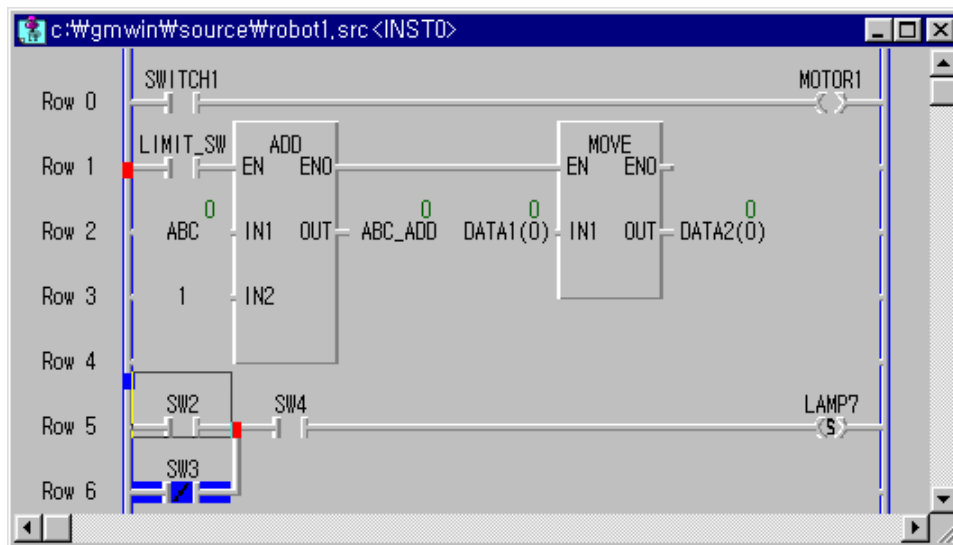

9.1.3. Step Into


In case of Break is executed on the **User Define Function/Function Block**, you can debug a **User Define Function/Function Block** using **Step Into** function.

- ◆ Add the Break point for debugging on the User Defined Function/Function Block.

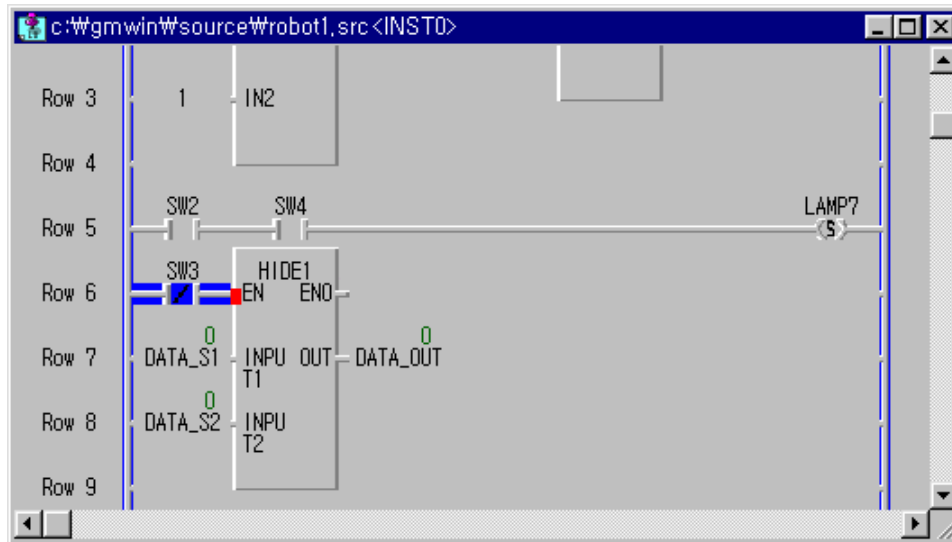

HIDDEN 1 is User Define Function on the above figure.

- ◆ Select the **Debug-Step Into**(Ctrl+F7) in menu.

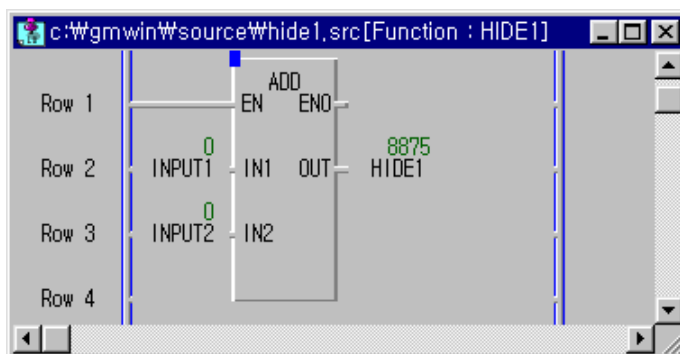

If the source program of User Defined Function/Function Block exists, you can monitor/debug it by **Step into** function.

9.1.4. Step Out

To return to the program block from the **User defined Function/Function Block** after debugging.

- ◆ Select **Debug-Step Out** in menu.


9.2. SFC Debugging

9.2.1. Break Run

In SFC, you can execute a **Break Run** function for only Step.

1) Set a Break Point

- ◆ Move the cursor to the Step that you want to assign as Break Point.
- ◆ Select the **Debug-Add/Remove break Point(Ctrl+F5)** in menu.

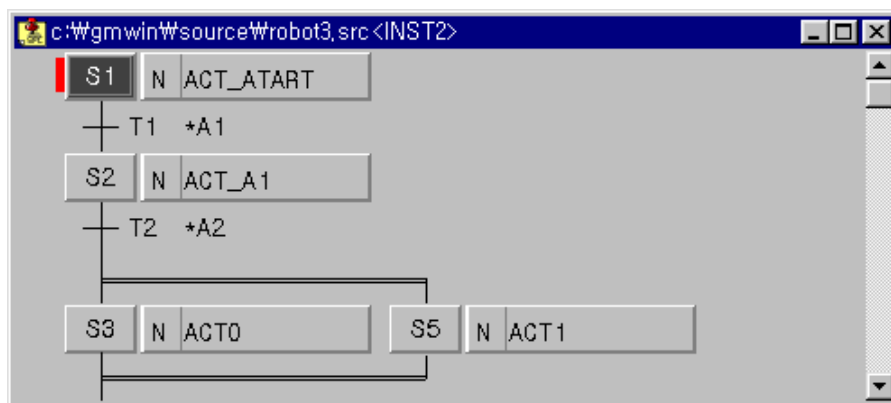

- ◆ Select the **Debug-Go(Ctrl+F9)** in menu.
Then ACTION1 is executed, after Trans1 condition is satisfied, at the moment Step2 set as Break Point is in active.


2) Run to cursor position

- ◆ Move the cursor to the step that you want to set as Break Point
- ◆ Select the **Debug-Go to Cursor(Ctrl+F2)** in menu.
At the moment Step that cursor is placed on is in active, PLC is stopped immediately.

9.2.2. Step Run

It executes a program by one step(S1, S2, S3).


- ◆ Select the **Debug-Step Over(Ctrl+F8)** in menu.

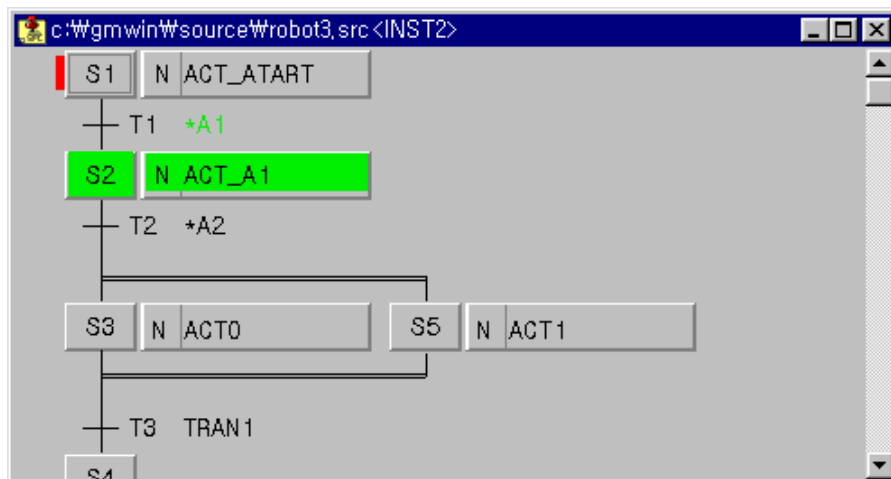

Step S3 connected with Step S2 on break is executed when SEL1 transition condition is satisfied. At the moment Step

S3 is activated, PLC is stopped immediately. If you execute Step Run here, ACTION3 connected with Step S3 is executed when TRANS3 condition is satisfied. Stop it with the next connected step is activated.

When you select **Step Run**, if the next step es a parallel branch, then you should select the branch to execute **Step Run**.

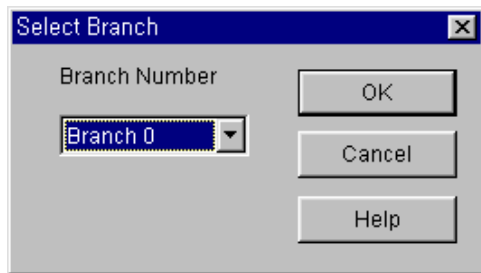

- ◆ Select a branch number(select among the 1,2 and 3 in the above figure) in the **Branch Select** dialog box, and Click **OK** button.


9.2.3. Step Into

When Step is under break condition, if you select **Step Into**, a break occurs at the first line of connected action.

9.2.4. Action Debugging

It allows you to debug the program by **Zoom** function for the action program.
It is the same as IL, LD debugging.

9.3. IL Debugging

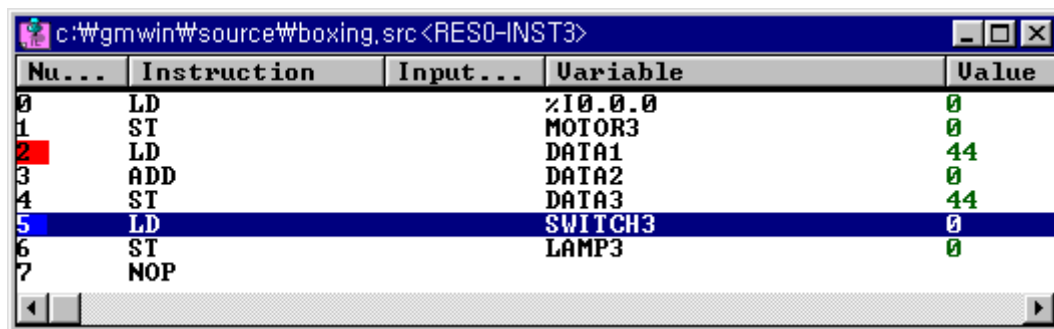

Nu...	Instruction	Input...	Variable	Value
0	LD		%I0.0.0	0
1	ST		MOTOR3	0
2	LD		DATA1	44
3	ADD		DATA2	0
4	ST		DATA3	44
5	LD		SWITCH3	0
6	ST		LAMP3	0
7	NOP			

9.3.1. Break Run

To execute a program break, you can use 2 ways as below.

1) Set a Break Point

- ◆ Move the cursor to the line that you want to set as a break.
- ◆ Select the **Debug-Add/Remove Break Point**(Ctrl+F5) in menu.
- ◆ Select the **Debug-Go**(Ctrl+F9) in menu.

2) Run to Cursor Position

- ◆ Move the cursor to the line that you want to set as a break.
- ◆ Select the **Debug-Run to Cursor**(Ctrl+F2) in menu.

9.3.2. Step Run

It runs a program by one step.

- ◆ Select the **Debug-Step Over**(Ctrl+F8) in menu.

9.3.3. Step Into

It debugs a program in the Function or Function Block.

- ◆ Select the **Debug-Step Into**(Ctrl+F7) in menu.

9.3.4. Step Out


It returns from Function or Function Block to original program.

- ◆ Select the **Debug-Step Out** in menu.

9.3.5. Watch Current Result

It allows you to view the current result in the program that is under break.


- ◆ Select the **Toolbox-Watch Current Result** in menu..

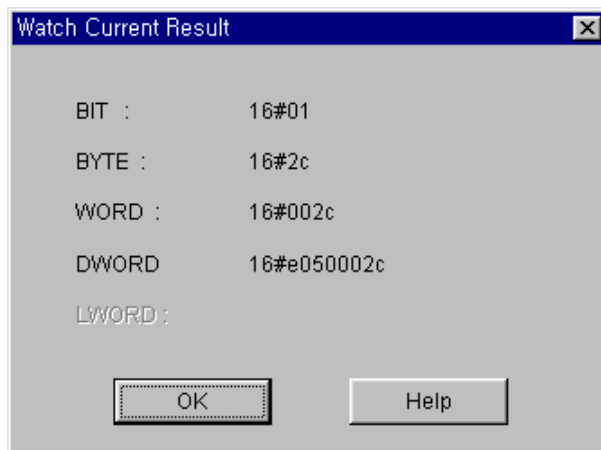

9.4. View Break Point

You can view and delete the break points in the Break Point List/Condition dialog box. GMWIN saves the break point by Project unit. That is, when you reload a project, the break points of the project are same as you set previously. If you delete a break point in the Break Point List/Condition dialog box, the break point set in the program is deleted.

- ◆ Select the **Debug-Break Point List/Condition** in menu.
- ◆ Select the **Break Points** Tab.

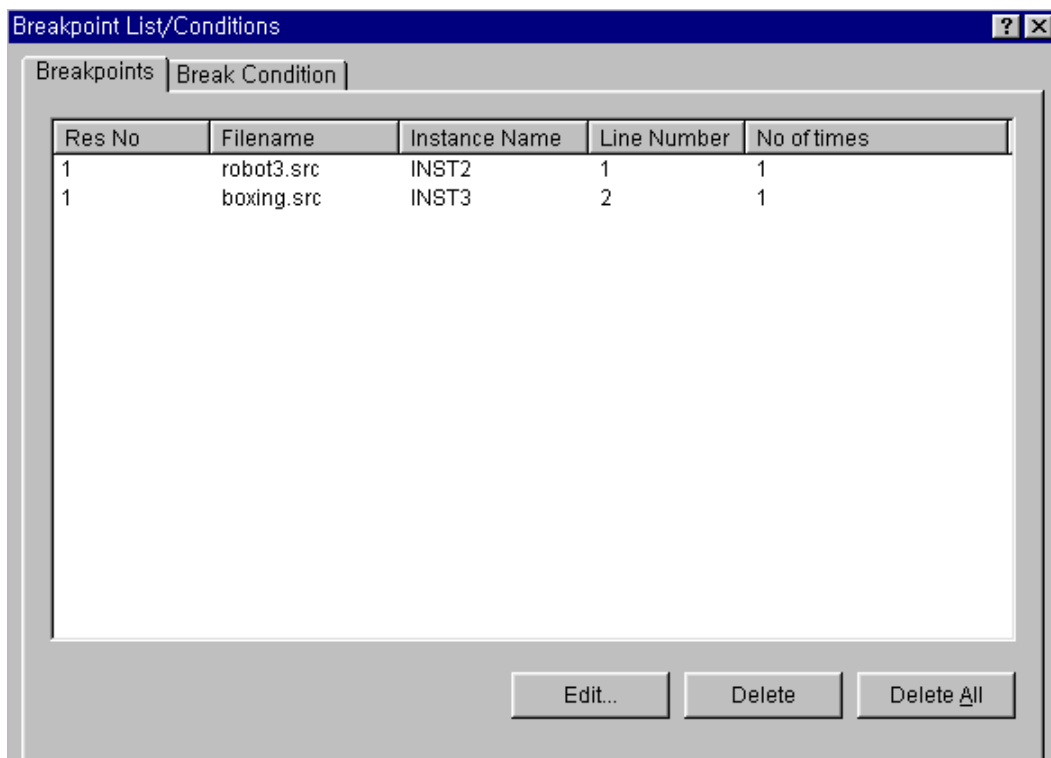

- ◆ You can view and delete the entire break points. Moreover you can set the number of break count.
- ◆ Click **OK** button.

1) Delete a Break Point

- ◆ Select the break point to delete in dialog box.
- ◆ Click **Delete** button.


2) Delete the entire Break Point

- ◆ Click **Delete All** button.

3) Edit the number of Break

After executing the breaks as many as you set the number of break count, the PLC is stopped.

- ◆ Select the break point to edit the number of break count in dialog box.
- ◆ Click **Edit...** button.

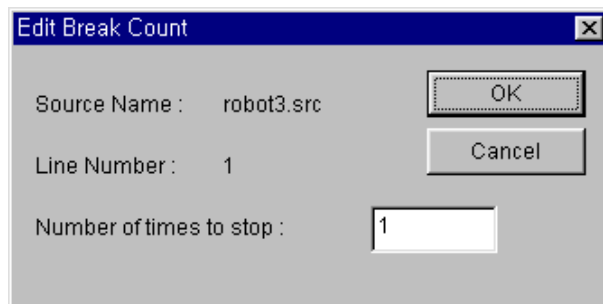


- ◆ Enter the number of Break count that want to break, and click **OK** button.

9.5. Set a Break Condition

In **Break Condition** dialog box, you can set the break condition, which is the condition to break by the state of assigned variable or number of the scan times.

- ◆ Select the **Debug-Break Point List/Condition...** in menu.
- ◆ Select the **Break Condition** Tab.

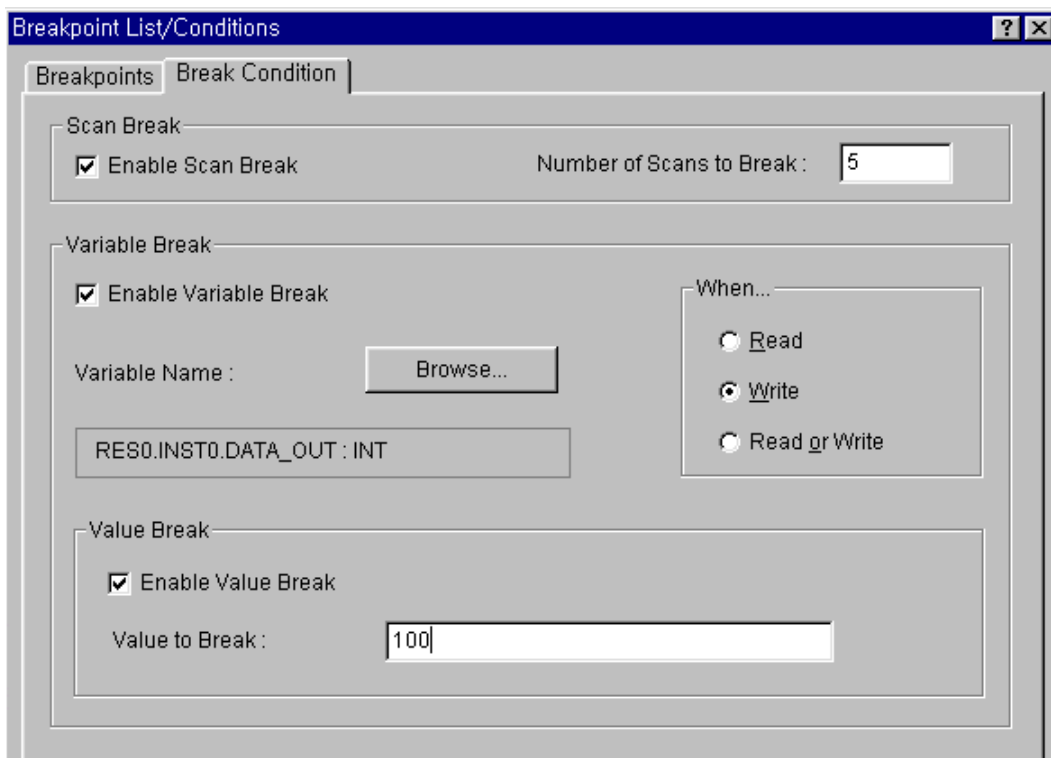

9.5.1. Break Scan

It stops the program after PLC runs as many as assigned number of scan times.

- ◆ Select the **Enable Scan Break** option check box.
- ◆ Enter the number at **Number of Scan to Break** input box.

9.5.2. Break Variable

If you read a variable or write an arbitrary value to assigned variable, PLC is stopped.

- ◆ Select the **Enable Variable Break** option check box.
- ◆ Select **Browse** button.
- ◆ Select a variable in **Register Variable** dialog box, click **OK** button.

The **Register Variable** dialog box is shown with the following elements:

- Kind** section:
 - ☐ Configuration Global Variable
 - ☐ Resource Global Variable
 - ☒ Instance Variable
 - ☐ Direct Variable
- Resource** dropdown: Resource0
- Instance** dropdown: INST0
- Variable List** table:


Variable Name	Type	Address
ABC	VAR	INT
ABC_ADD	VAR	INT
DATA_OUT	VAR	INT
DATA_S1	VAR	INT
DATA_S2	VAR	INT
DATA1	VAR	ARRAY
DATA2	VAR	ARRAY
F1	VAR	INT
- Buttons: OK, Cancel, Help

- ◆ Choose one option in **Variable...** option radio box.
 - Read** : stops, when it reads the variable.
 - Write** : stops, when it writes an arbitrary value to variable.
 - Read/Write** : stops, when it reads a variable or writes an arbitrary value to variable.
- ◆ If you want to stop when reached to a specific value, select the **Enable Variable Break** option check box, and enter the value in the input text box.

9.6. Enable Task Turnover

In a program instance with a task, if you run the program after debugging by one step, the **Task Enable...** allows you to choose either Enable or Disable of the task turnover.

- ◆ Select the **Debug-Task Enable...** in the pull-down menu.

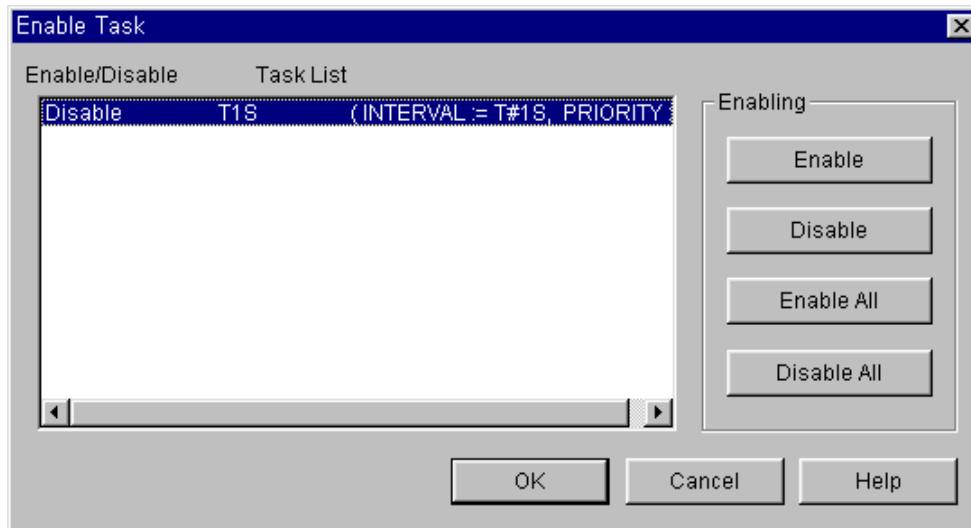

- ◆ Select a task to Enable/Disable in the **Enable Task** box.
- ◆ Click **Enable/Disable** button.
- ◆ When you want to set the entire lists as a enable/disable, click the **Enable/Disable All** button.
- ◆ Click **OK** button.

Chapte10. Library

By saving Function or Function Blocks as the files that can be used in a program, you can use them for your convenience. Sometimes you can create a new library file(defined by user).

10.1. Type of Library File

Library File consists of Function or Function Block.

Library File	Extension	Example
Function Library	. * FU	stdlib.3fu:standard function library for GM3
Function Block Library	. * FB	special.3fb:standard function block library for GM3

Note

In *.FU or *.FB indicates the type of appropriate PLC in
(In case of GM3, the type is.3FU)

Library is divided according to a use of file as below.


Library Type	Comment	Example
Standard Library	It is the files that collect basic functions/function blocks. (You can call it on the active program)	stdlib.*fu, stdlib.*fb
Exclusive Library	It is the files that collect the function blocks used in special/communication module(for A/D, D/A, Link..),etc.(To add this libraries, select ' Project-Insert Library ' menu)	special.*fb, communi.*fb
MK Standard Library	It is the files that supplied by manufacturer for the user using other LGPLC.(To add this libraries, select ' Project- Insert Library ' menu)	mkstdlib.*fu (for MASTER-K)
User defined Library	It is a library that user make personally.(It is added by ' Project-Insert Library ' menu)	(User defined name)
Extensible Library	It is the files that supplied by manufacturer for the user using other LGPLC	APP.*fb APP.*fu

10.2. Load a Library


1) Load of Standard Library

On the dialog box is appeared when you select **Project-Option Directory** in the menu, if you execute GMWIN program in the designated directory, standard library is loaded automatically.


- ◆ Select option item in Project menu.

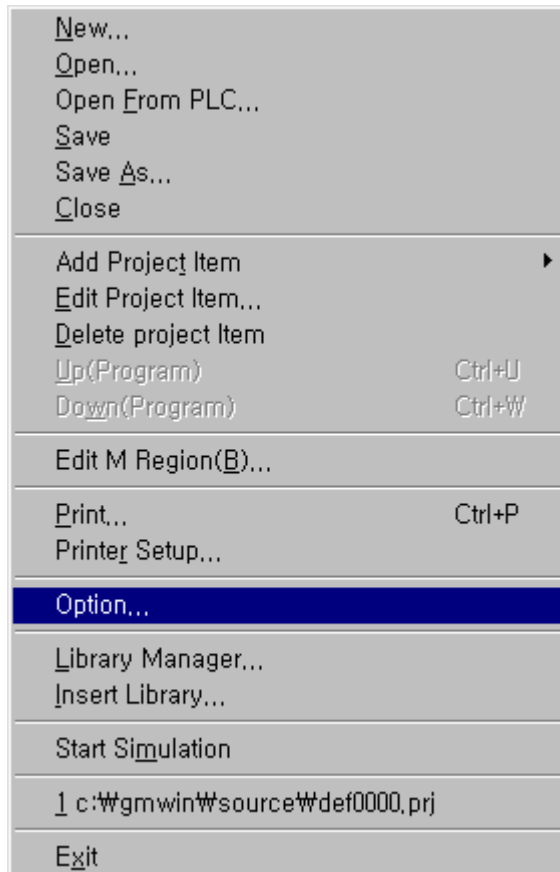

- ◆ Select folders in **Option** dialog box.

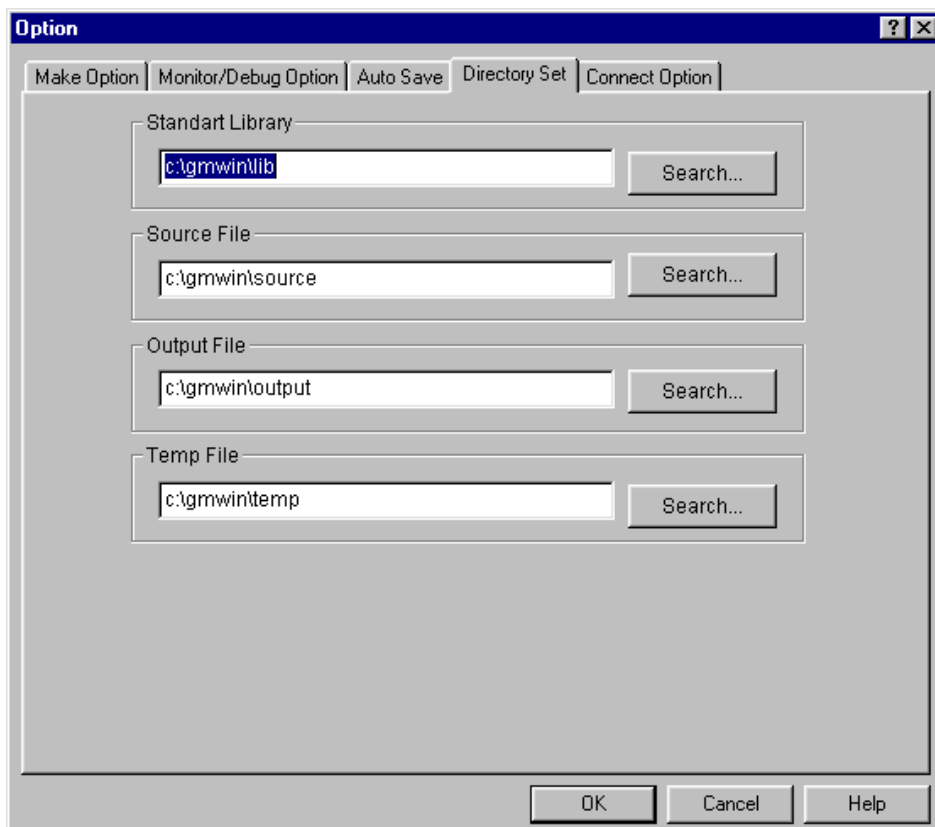

- ◆ Enter the path of library in **Standard Library** input text box or **Directory Set** menu. If you can't remember the path, select **Search** button where the library is in.

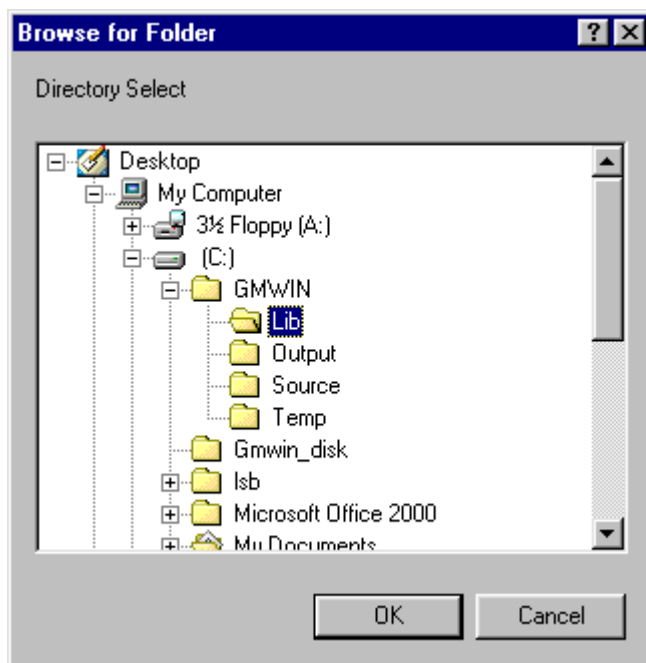

- ◆ In case that the library is not in the selected director, the error message appear as below



Note

If there are no "stdlib.*fu" and "stdlib.*fb" (*is the type of PLC. The type is stdlib.1fu for GM1) in the selected folder, an error message that cannot open appears when open a project. In this case, enter the folder correctly in **Project-Option-Directory Set** menu. Or copy the standard library to the selected folder.

2) Load a Exclusive, Extensible Library and the User defined Library


You can load selectively exclusive, extensible library and user defined library.

In the state that project file is opened, call Include Library dialog box by selecting **Project-insert Library**.

Note

You can also call **Include Library** dialog box by double clicking after moving the mouse to a appropriate library item in library file list.


- ◆ Add a desired library in **Include Library** dialog box, and click **OK** button.

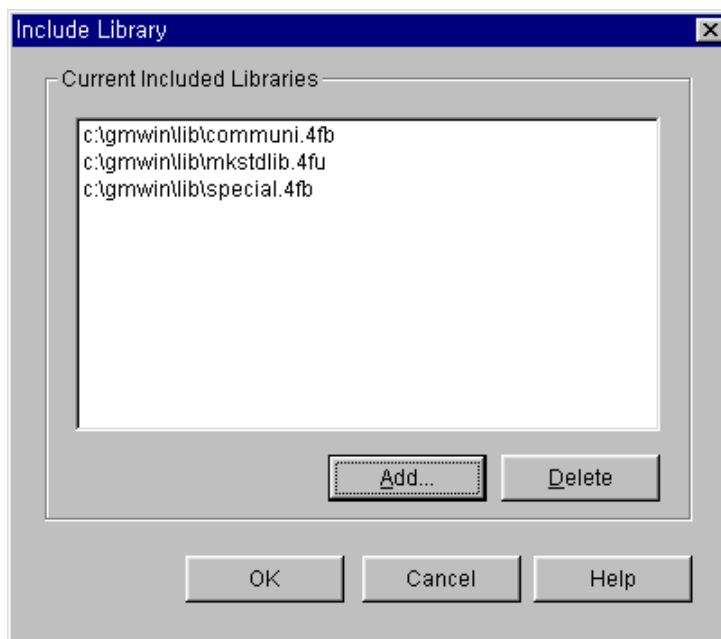


Libraries supplied by manufacturer and User define libraries are appeared in the library list as the above dialog box. If you select a desired library and click **Add** button, then added libraries appear Current Included Libraries.

- (1) communi.3fb : Function blocks for the communication in GM3 (Cnet, Fnet, Mnet)
- (2) mkstdlib.3fu : functions for MASTER-K series
- (3) remote3.3fb:Function blocks for special modules in GM3(for REMOTE communication)

- ◆ If you finish to add the libraries, added libraries appear on Project window.

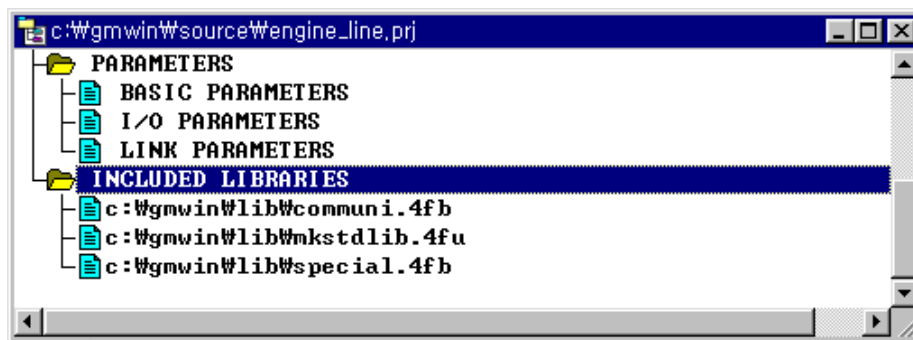


- ◆ When you add a library, If the item that selected in **Library List** is a standard library, the following error message appears.

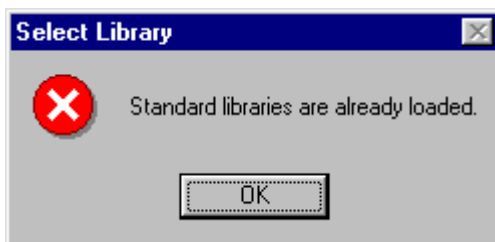


To delete the inserted library,

- ◆ In **Current Included Libraries** list box, select a desired library and click **Delete** button.

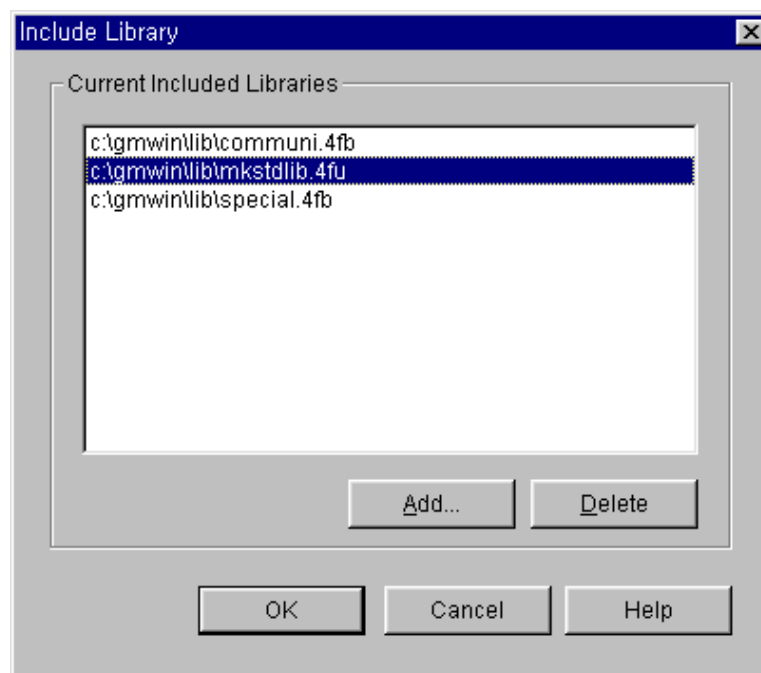

- ◆ Click OK button.
- ◆ You can confirm whether the library is deleted on project screen or not.

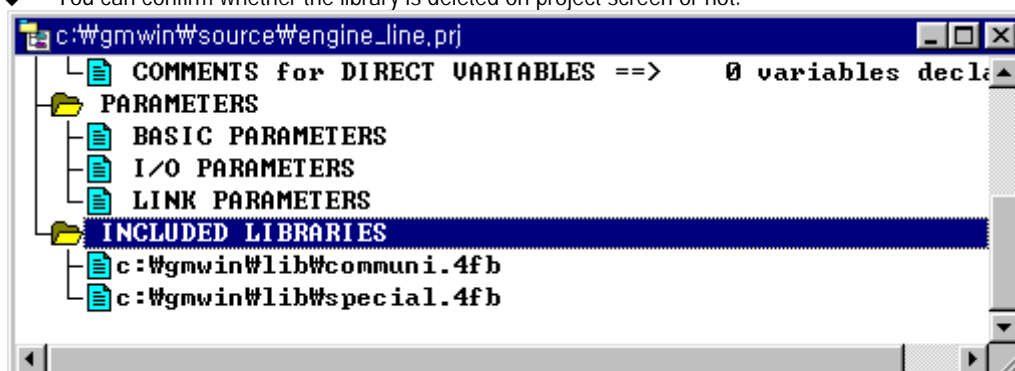


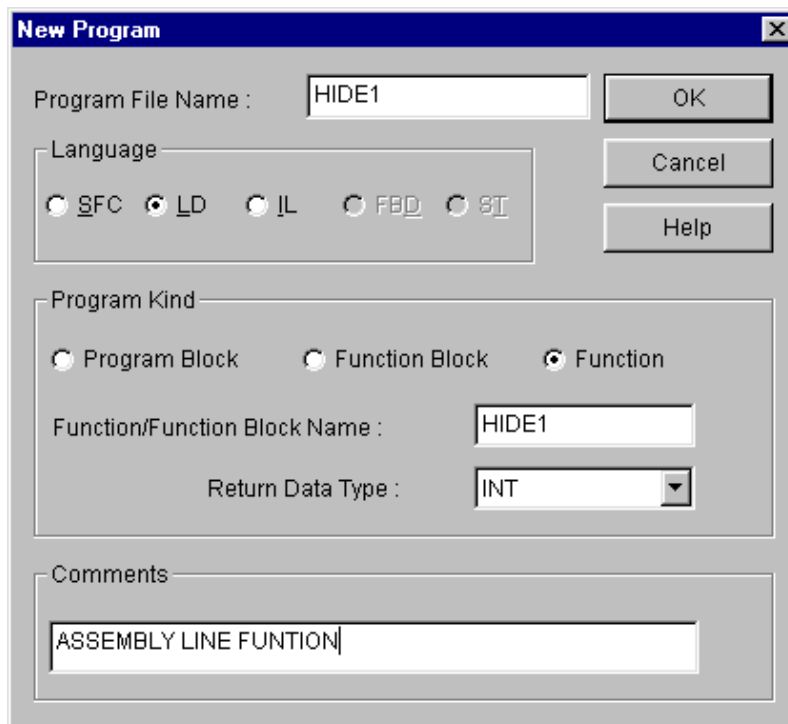
10.3. Create User Defined Library File

Besides standard library or extensible library, you can create and use a program, which is for you convenience, like as Function/Function block.

10.3.1. Create User Defined Function


1) Create a new Function Program

- ◆ Select **Program –New program** in the pull-down  menu.




- ◆ Enter the name of function program to create with **"*.src"** in Program File name box.
- ◆ In Language option radio button, select language type to use in editing the function.
- ◆ Select **Function** in **Program kind** option button.
- ◆ In **Function/Function Block Name** input text box, enter the function name to use in another program
- ◆ In Return Data Type list box, select the type of variable.
- ◆ If there is an additional comment for the function, enter the comments in Comments window.
- ◆ Click **OK** button and the following message appear

- ◆ If you click **Yes** button, **In/Out Variables List** dialog box appears.

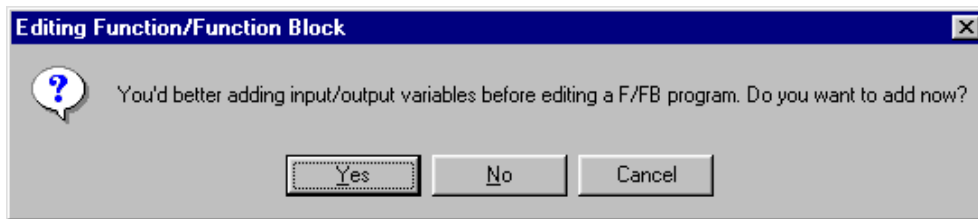


- ◆ If you click **No** button **In/Out Variables** window for the selected language appears.

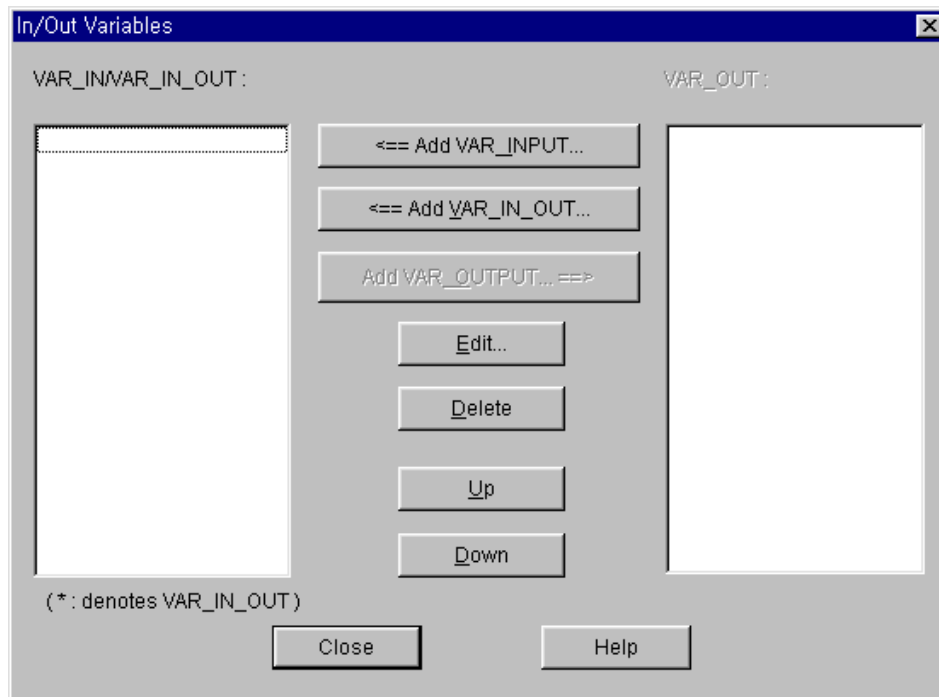


2) Create Input Variable

- ◆ Differently from editing a Program Block, select **Program-In/Out Variables** to create variables.

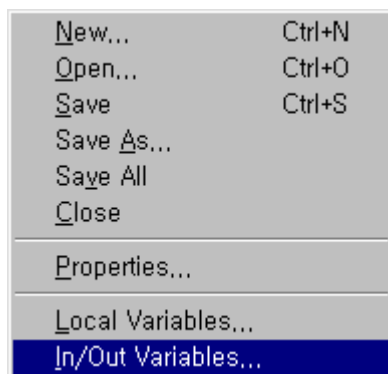

- ◆ Add a variable in I/O variable input text box of **In/Out Variables** dialog box.

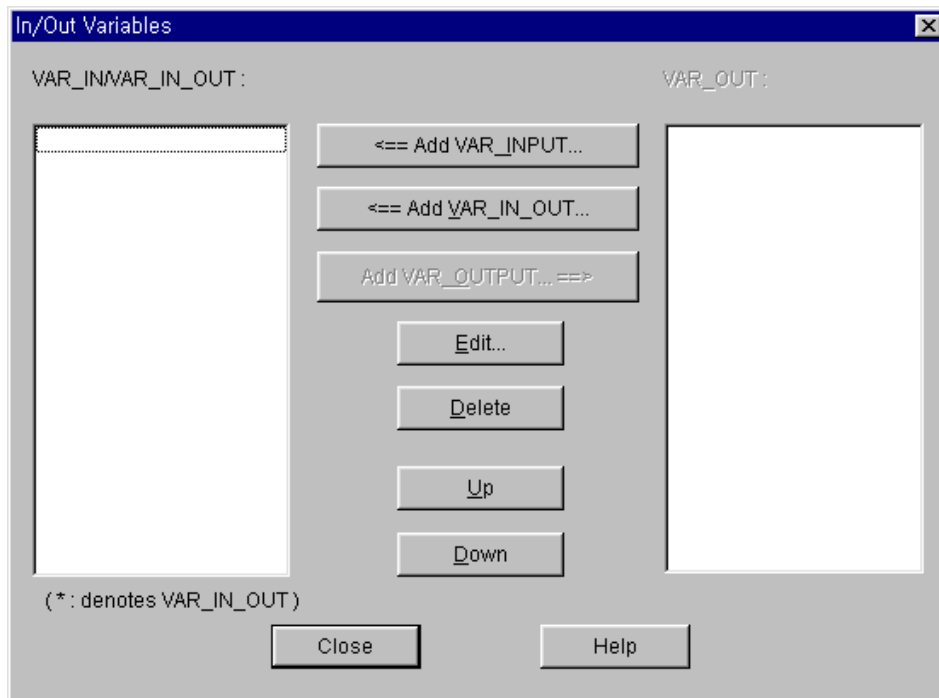


Note

VAR_IN_OUT is distinguished from VAR_IN by * mark. Differently from VAR_IN, VAR_IN_OUT means that you can change the value of parameter taken from the side that call function / function block in that function / function block.

(1) Add an Input / Output Variable

- ◆ Click Add VAR_INPUT, Add VAR_OUTPUT, or Add VAR_IN_OUT button.

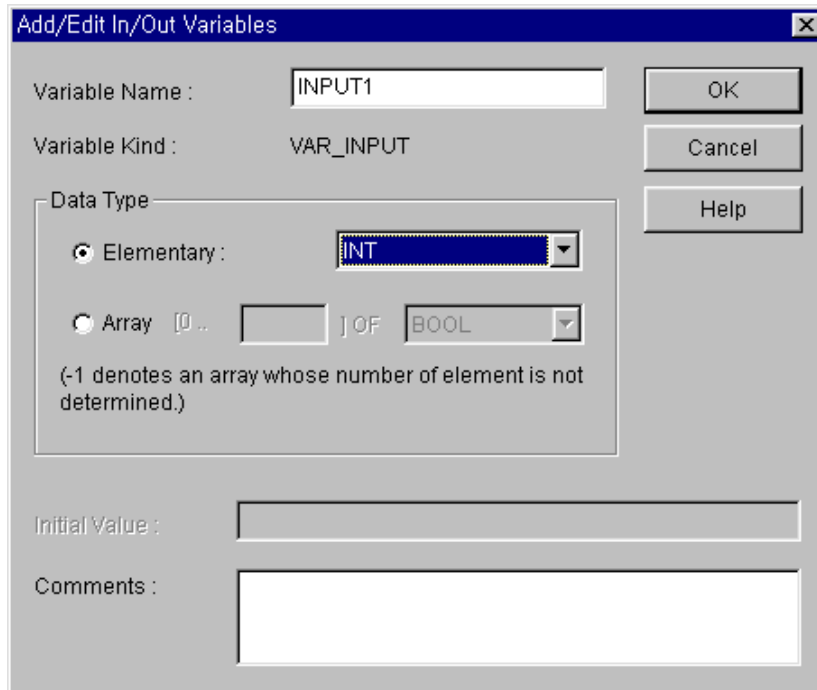

- ◆ Add a desired input/output variable name in **Variable Name** input text box. (Maximum size of name is 8 characters)
- ◆ Select a variable type in **Data Type** list box.
- ◆ If you need a comment about input/output variable, enter the comment in **Comment** window and click **OK** button.

Note

If you fix an array number as -1, it means that the array number of input variable is fixed when call the function/function block.

(2) Edit an Input/Output Variable

- ◆ Select the item that you want to edit in **In/Out Variables** list.
- ◆ Click **Edit** button.
- ◆ Edit the content that you want to correct in dialog box and click **OK** button.

(3) Delete an Input/Output variable


- ◆ Select the item that you want to delete in **In/out Variables** list.
- ◆ Click **Delete** button.

(4) Change the order of Input/Output variable

- ◆ Select the item that you want to change the order in **In/Out variables** list.
- ◆ Move the position of list by clicking **Upward** or **Downward** button as many as you want to move.

3) Create a Function Program

- ◆ You can create a program with the same way of other program.
- ◆ But, to return the result of function's calculation, an appropriate command to a name of function that was designated when created program is existed in Program.
i.e., If a name of function is ADD_MUL in the outputted dialog box when select Program-Program Properties in the menu, the following command must be in the function program is creating.

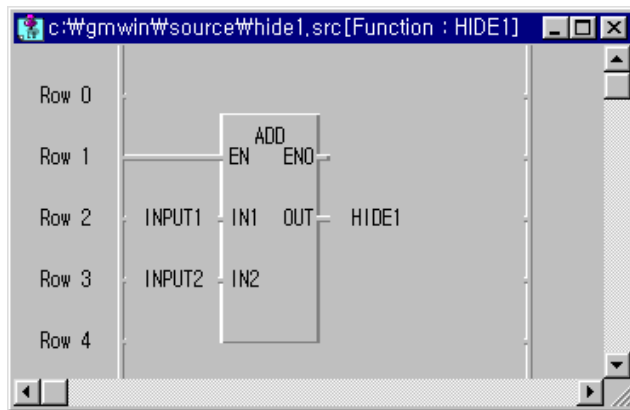

4) Compile a Function Program


- ◆ If you finish creating a program, make an execution file by selecting **Compile-Compile** in menu.

Note


The object file is created after compiling a program. It has the extension of OF?. The execution code is changed according to a compiling on the project screen of PLC. (If you create an object file on GM1, it is applicable to GM1 only)

5) Function Wizard


- ◆ If a compiling is finished without an error and warning, **Wizard** dialog box appears automatically to insert the compiled function into the library.
Fun/FB Wizard dialog box shows the various information for function/function block.

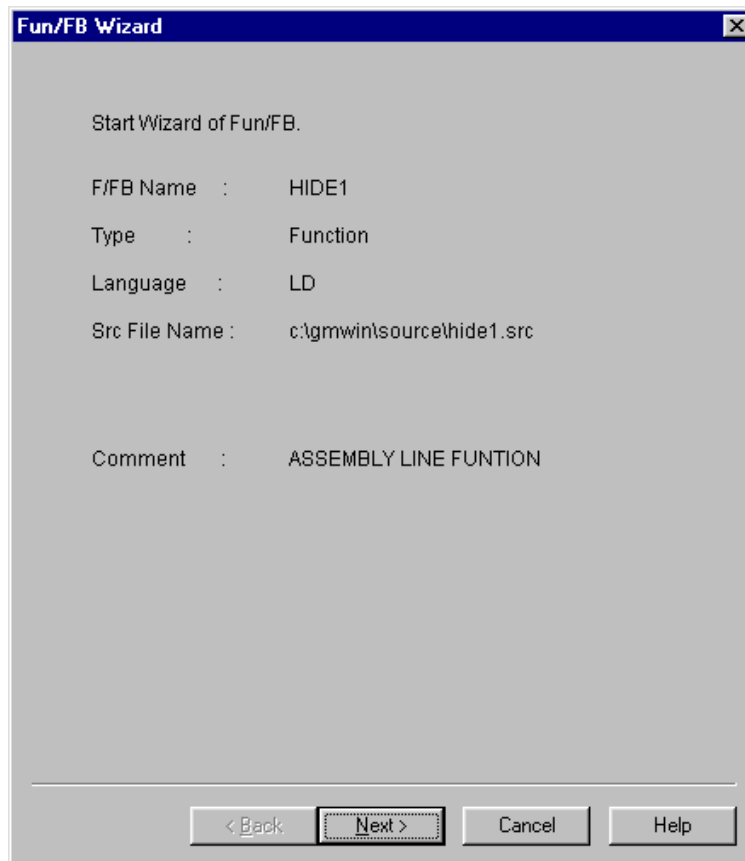

- ◆ If you select **Cancel** button, it stops inserting the compiled function into the library and project. If necessary, you can create a **User Defined Library** for the compiled function by selecting **Project Library Manager**. Similarly, you can also insert the compiled function into a project by selecting **Project-Insert Library** in menu
- ◆ If a compiling is finished with Warning messages, then the following message appears.

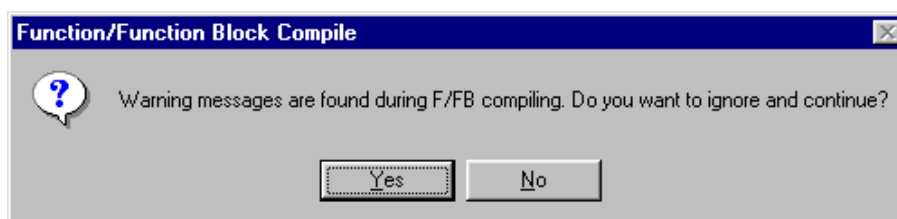


- ◆ Click the **Next** button in **Fun/FB Wizard** dialog box.

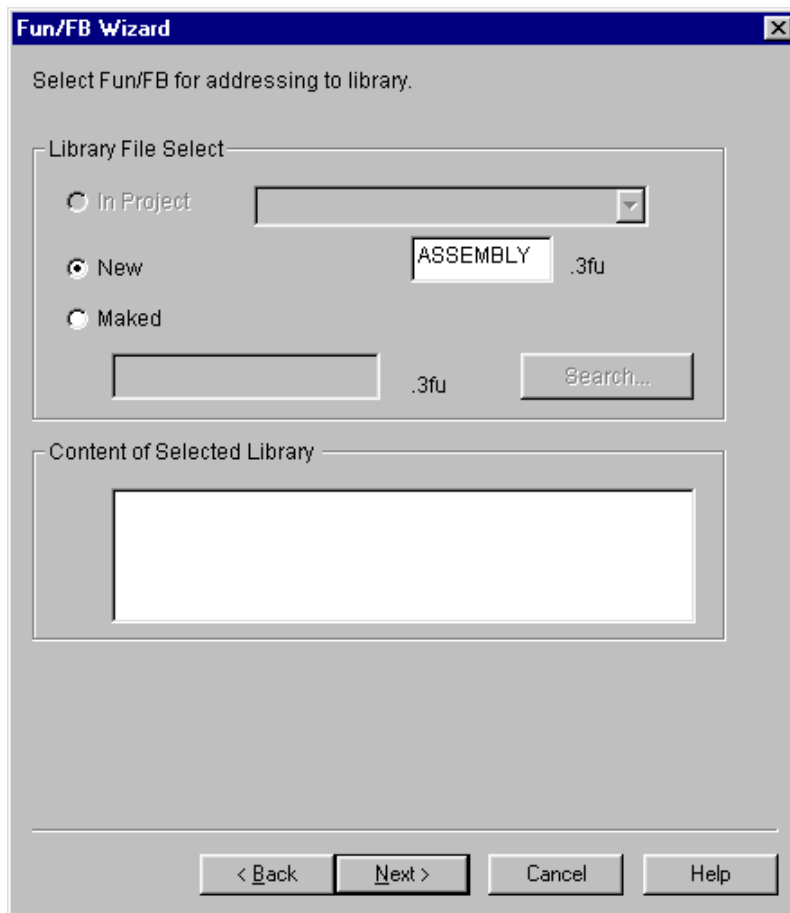


- ◆ In **Library File Select**, enter a new created library name in **New** input text box.
- ◆ If you want to insert a new created library from the user defined library that exists already in the project, click **In Project** button and select a desired library file.
- ◆ If you want to insert the library from the user defined library that does not exist in the project, select a desired user define library file after clicking **Marked** and **Search**.
- ◆ To call the 3rd dialog box, click the **Next** button.



- ◆ In this **Fun/FB Wizard** dialog box, it determines whether you insert the library into a current project. If the library selected in the previous dialog box exists in the project, the project updates the file automatically.
- ◆ Click **OK** button and **Next** button. Then the following dialog box appears.

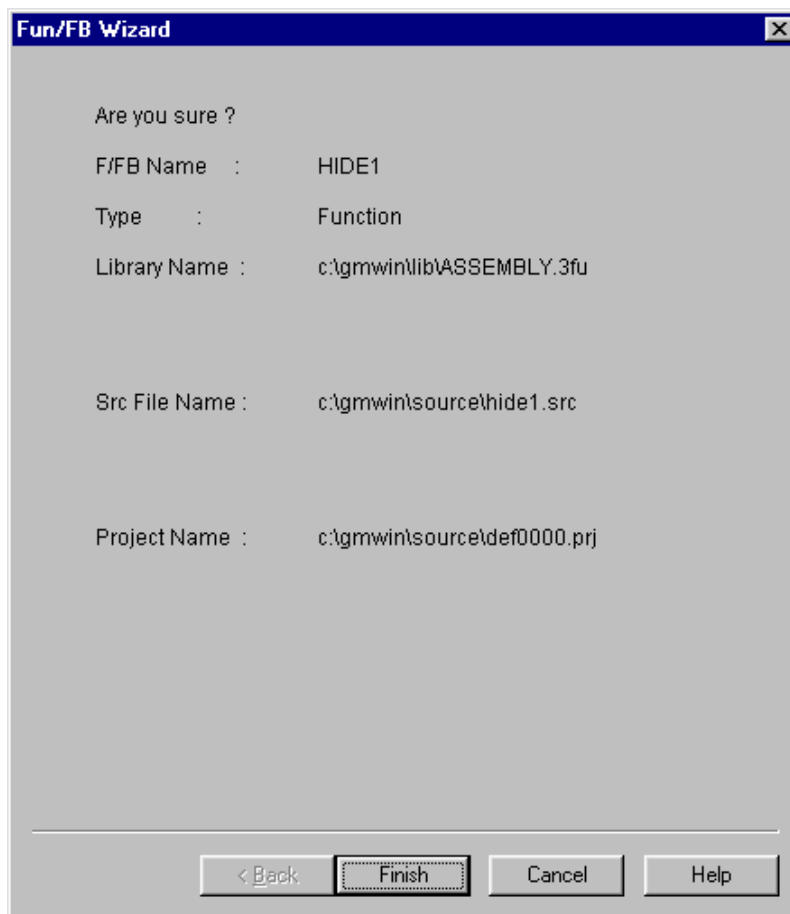

- ◆ Click **Finish** button, then the new library is added on the project window.

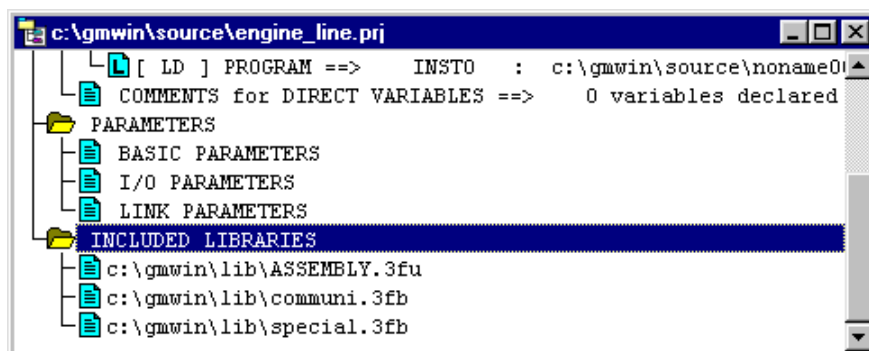


Note

If you click the **Cancel** button on each step of Library Wizard, cancelled all the processing at this time. To add a selected content on the project, please click **OK** button in the 4th dialog box.

10.3.2. Create a User Defined Function Block

1) Create a Function Block Program

- ◆ Select **Program-New Program** in menu. Then a new dialog box appears

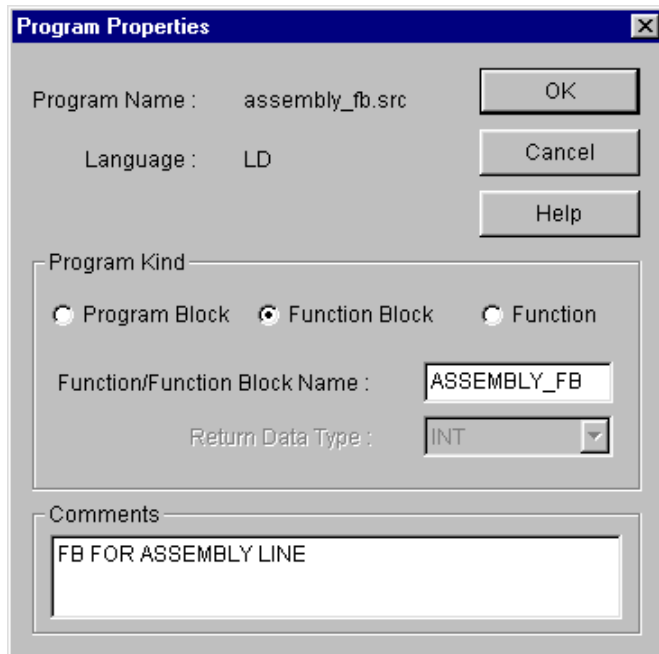


The 'Program Properties' dialog box is shown with the following fields and options:

- Program Name :** assembly_fb.src
- Language :** LD
- Program Kind :** ☐ Program Block ☒ Function Block ☐ Function
- Function/Function Block Name :** ASSEMBLY_FB
- Return Data Type :** INT (dropdown menu)
- Comments :** FB FOR ASSEMBLY LINE

Buttons: OK, Cancel, Help

- ◆ Enter the Name of Function Block Program with *.src to create in the column of Program Name.
- ◆ When you create Function Block, select the type of language to use in **Language** option button..
- ◆ Select **Function Block** in **Program Kind** option button.
- ◆ In **Function/Function Block Name** input text box, enter the function block name to be used in another program.
- ◆ Do not designate the type of variable to be return.
- ◆ Click **OK** button and the following message appears.

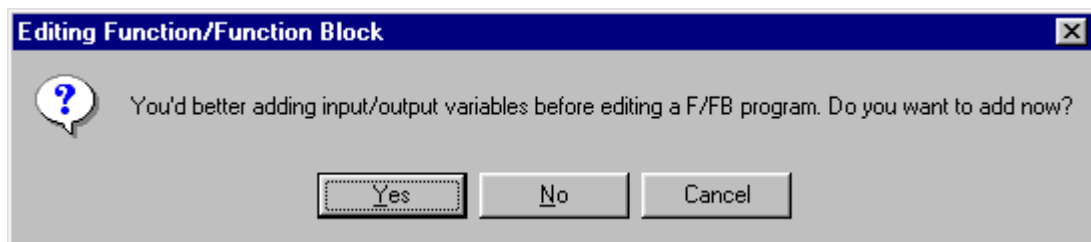


The 'Editing Function/Function Block' dialog box displays a warning message:

Editing Function/Function Block

ⓘ You'd better adding input/output variables before editing a F/FB program. Do you want to add now?

Buttons: Yes, No, Cancel


- ◆ If you click Yes button, In/Out Variables dialog box appears.

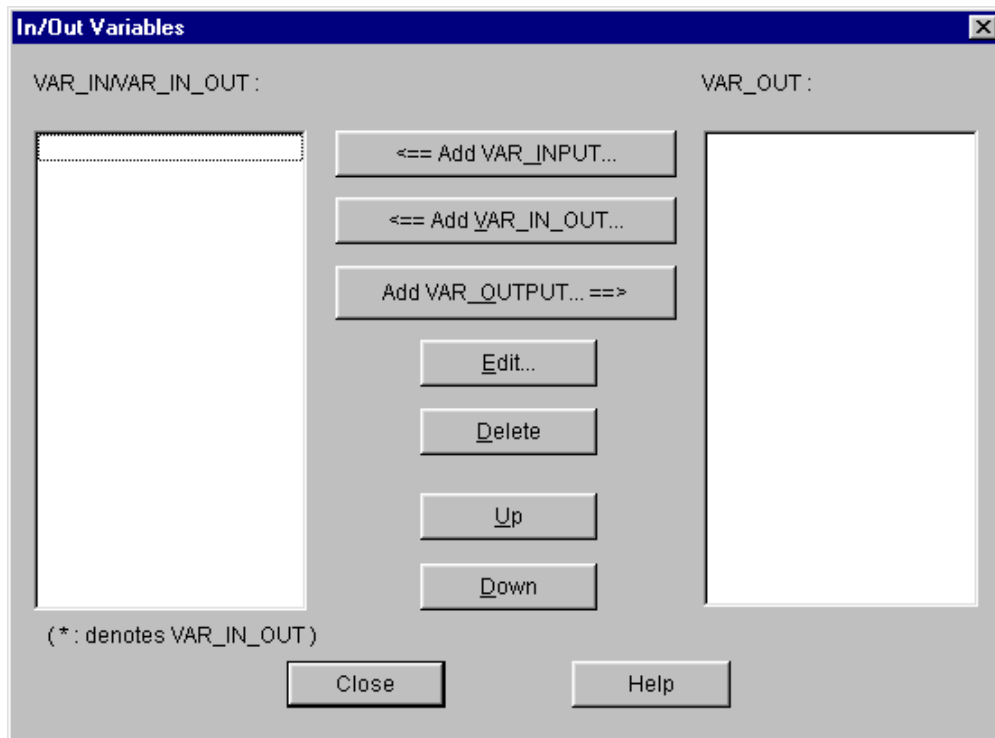


- ◆ If you click No button, edit dialog box for the selected language appears.

2) Create Input /Output Variable

- ◆ Creating method is same as the creating of function. However, in function block there must be more than one input-output variable instead of variable to return.

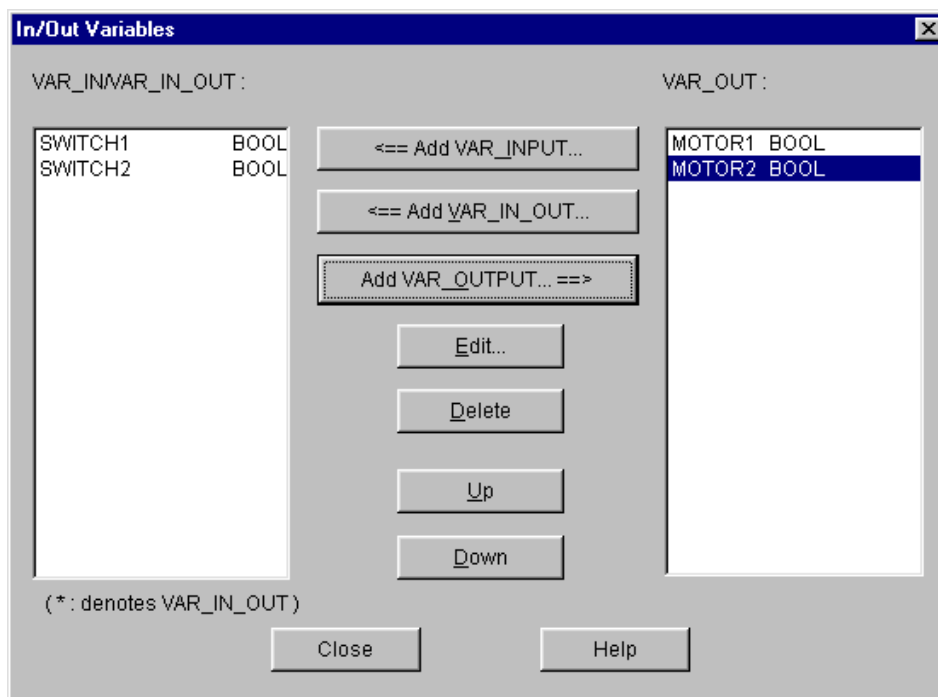


- ◆ To insert input/output variable, use **Add VAR_IN** or **_OUT...** button.
- ◆ When you insert input/output variable, the first input/output variable must be Boolean type. If it is not a Boolean type, an error message appears.

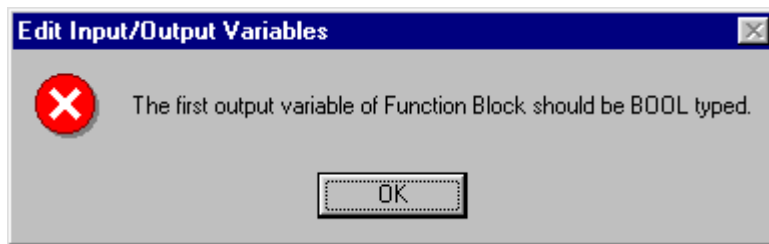


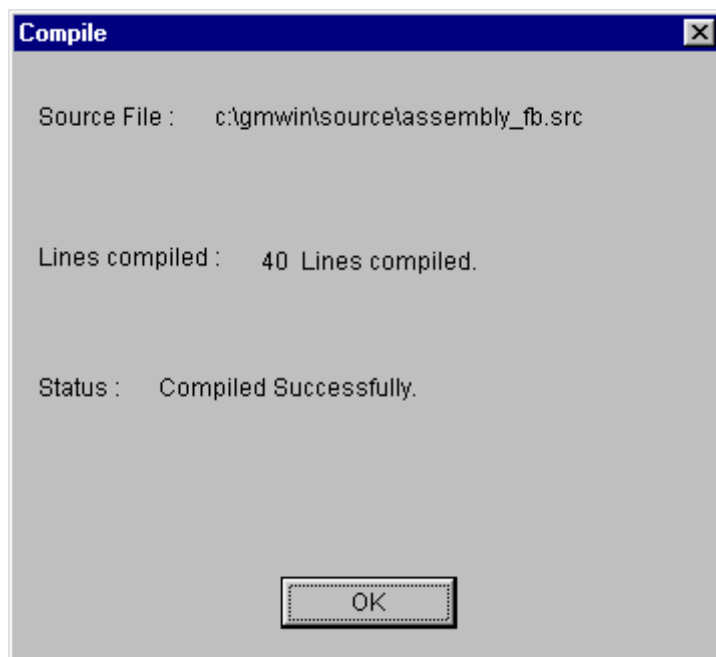
3) Create a Function Block Program

- ◆ You can create a program with the same way of other program.

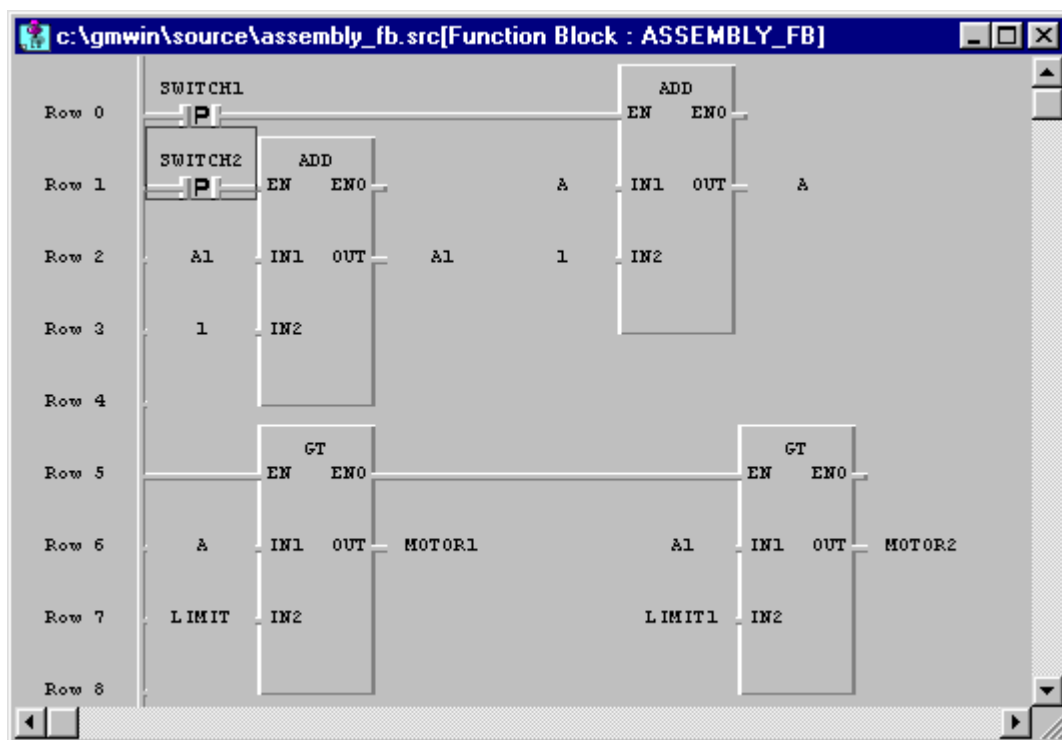

4) Compile a Function Block Program

- ◆ If you finish creating a program, make an execution file by selecting **Compile- Compile** () in menu.




Note

The object file is created after compiling a program. It has the extension of ".*OB". The execution code is changed according to a compiling on the project screen of PLC. (If you create an object file on GM1, it is applicable to GM1 only)


5) Function Block Program Wizard

- ◆ If the compiling is finished without an error and warning, Fun/FB Wizard dialog box appears automatically to insert the compiled function block into the library.

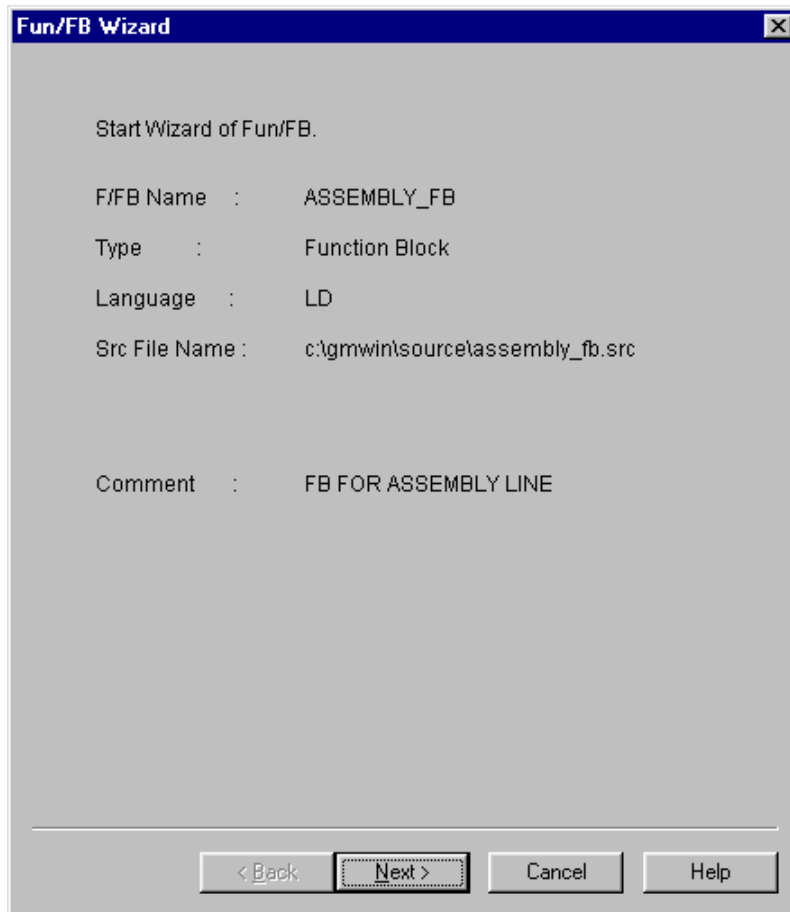

- ◆ If you select **Cancel** button in the above box, it stops inserting the compiled function block into a library and project. If necessary, you can make a **User Defined Library** for the compiled function block by selecting **Project-Library Manage**.
- ◆ If the compiling is finished with warning, the following message appears. This message asks whether you continue the function program wizard after correcting the warning.
- ◆ The first dialog box of function program wizard shows various information.


- ◆ Click **Next** button in the first dialog box of the function program wizard.

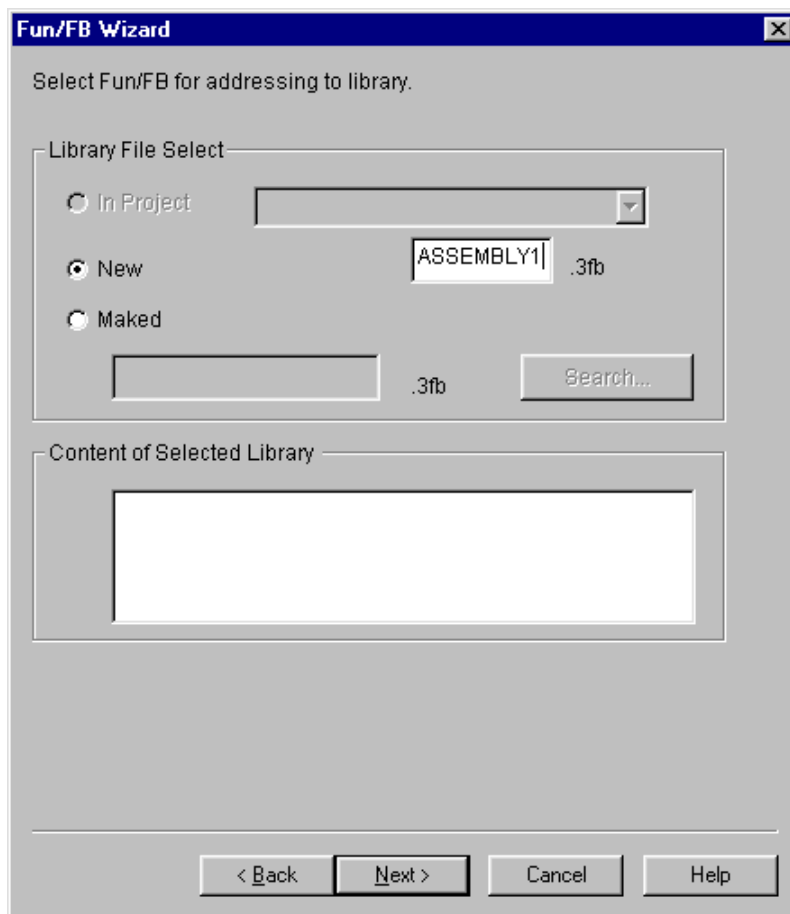


- ◆ In **Library File Select** of **Fun/FB Wizard** dialog box(the second dialog box), enter new created library name in **New** input text box.(GM3_FB1)
- ◆ If you want to insert new created library into user defined library that exists already in project, click **In Project** button and select a desired library file.
- ◆ If you want to insert the library into user defined library that does not exist in the project, select a desired library file by clicking **Maked** button.
- ◆ If you finish selecting a file, click **Next** button.



- ◆ In this Fun/FB Wizard dialog box, it is determined whether you insert the library, which has function block, into the current project. If the library selected in the previous dialog box exists in project is update automatically. In case of insert the function block into a new library file, it is optional to insert in project
- ◆ Select Yes button and press Next button. Then the **Fun/FB Wizard** dialog box appears.

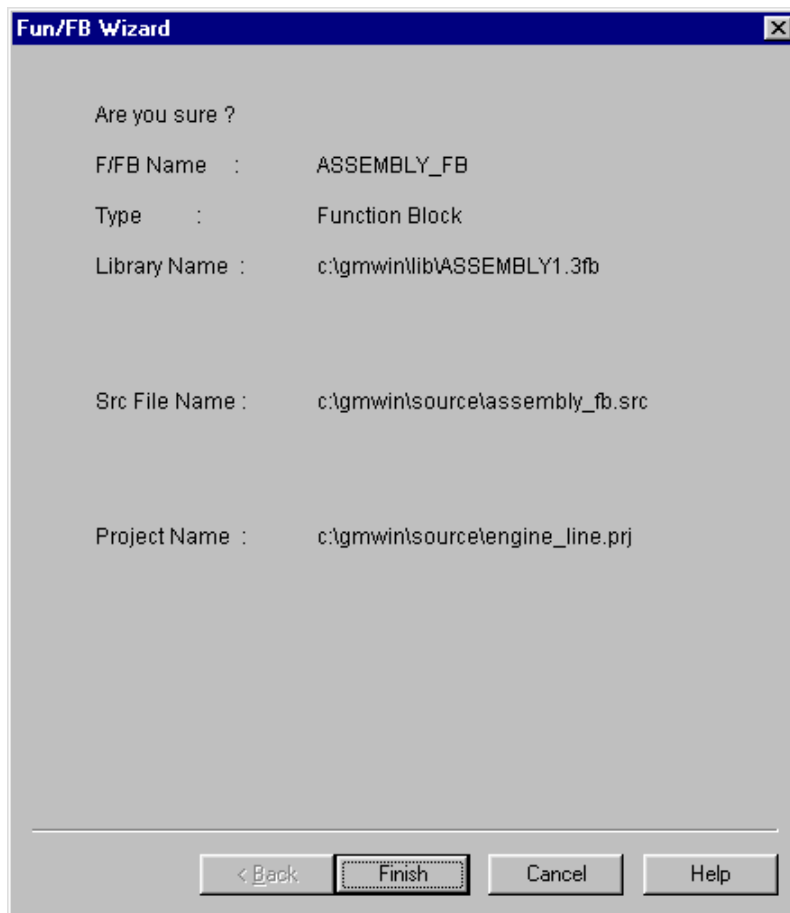


- ◆ Click **Finish** button, then a new User FB library appears on the project screen.

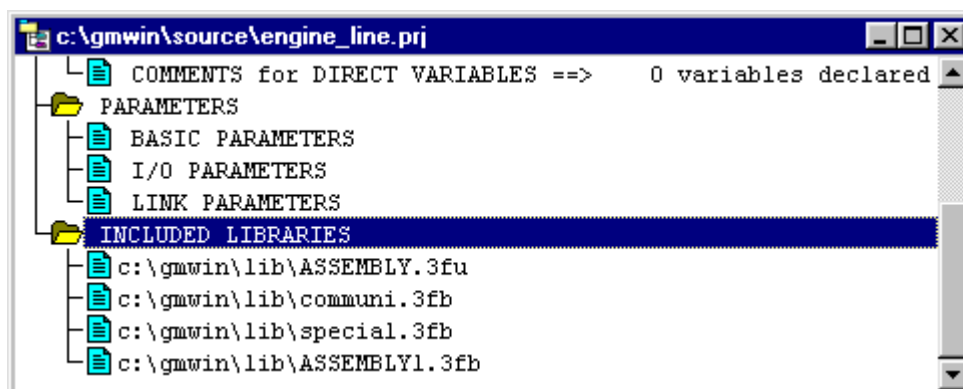


10.3.3. Library Manager

In Library Manager, you can create and edit library file that is not concerned with project.

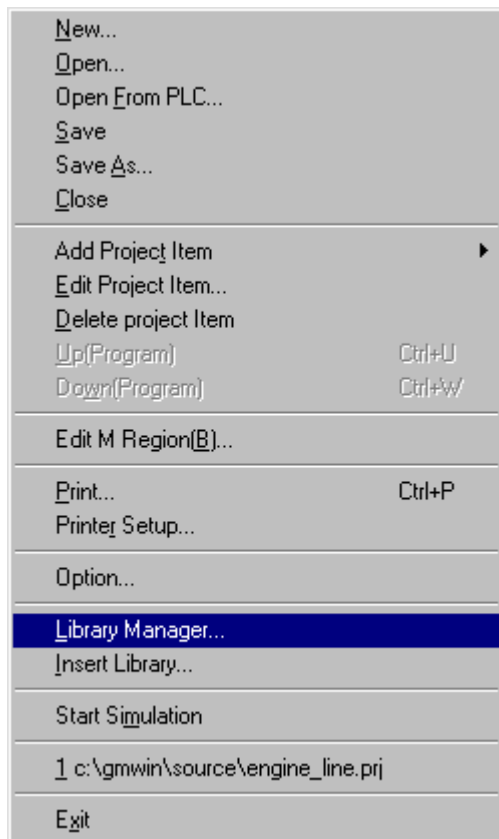


1) Create a Library File


- ◆ To call the **Library Manager** dialog box, select **Project-Library Manager** in menu.

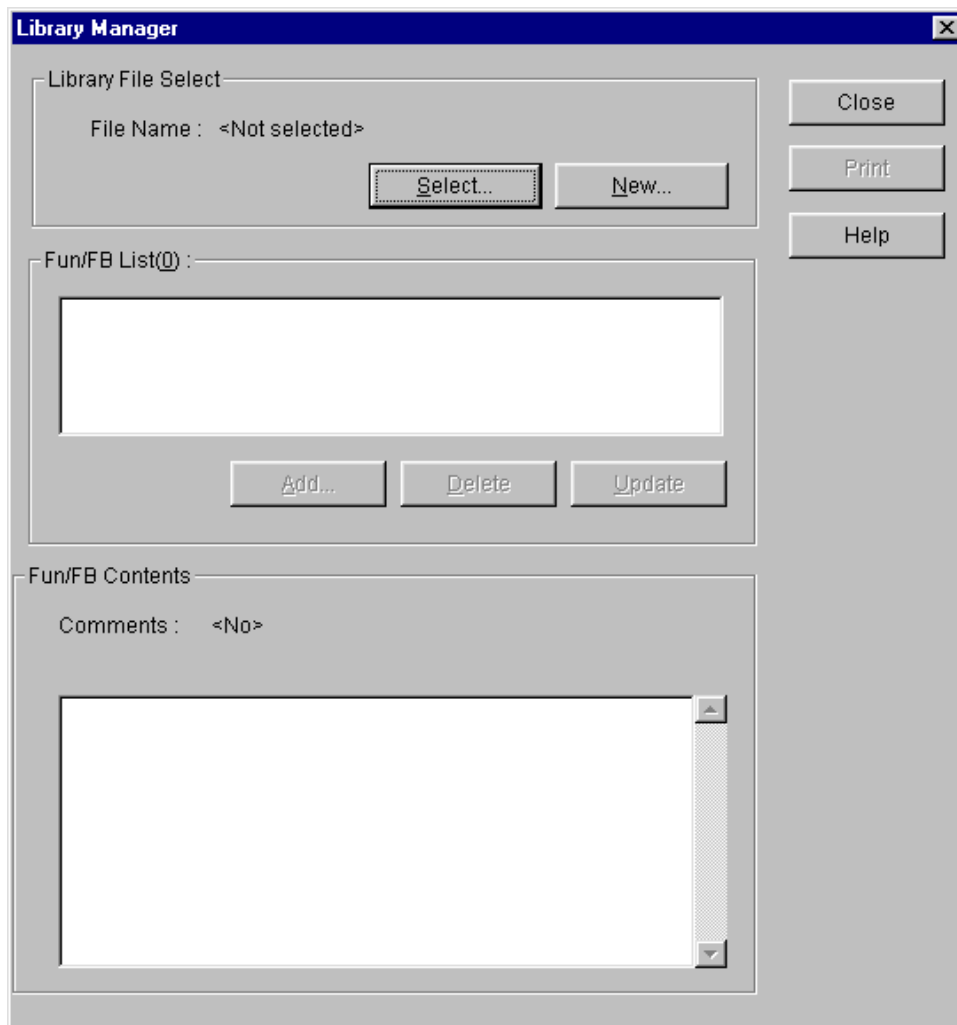

- ◆ To call the **Make New Library File** dialog box, click **New** in the **Library Manager** dialog box.

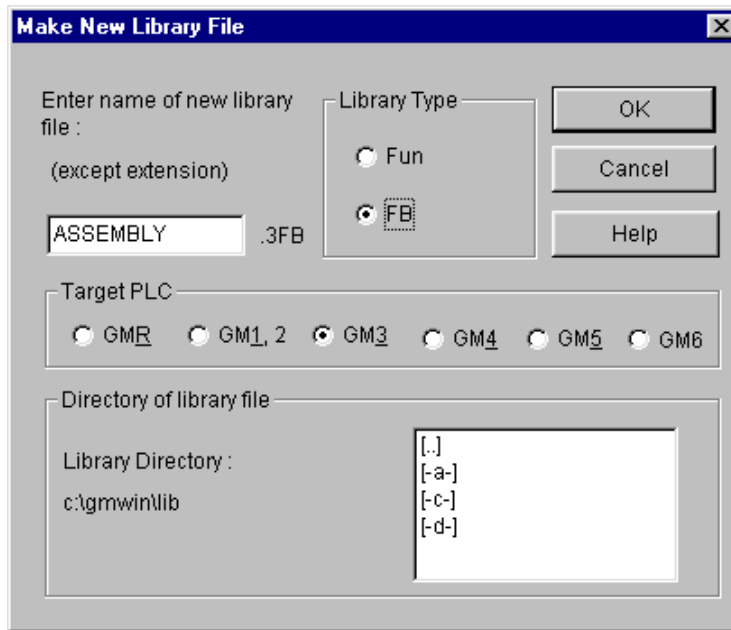


- ◆ Enter a library file name.(less than 8 characters)
- ◆ With library type option button, you can select the type of library to create newly.
- ◆ With objective PLC option button, select a PLC to which the library is applied.
- ◆ Select a directory in where the library file will be. At this time, it is important to input the same directory that fixed in **Directory of Library file** of option.
- ◆ Click OK button and library manager dialog box appears.

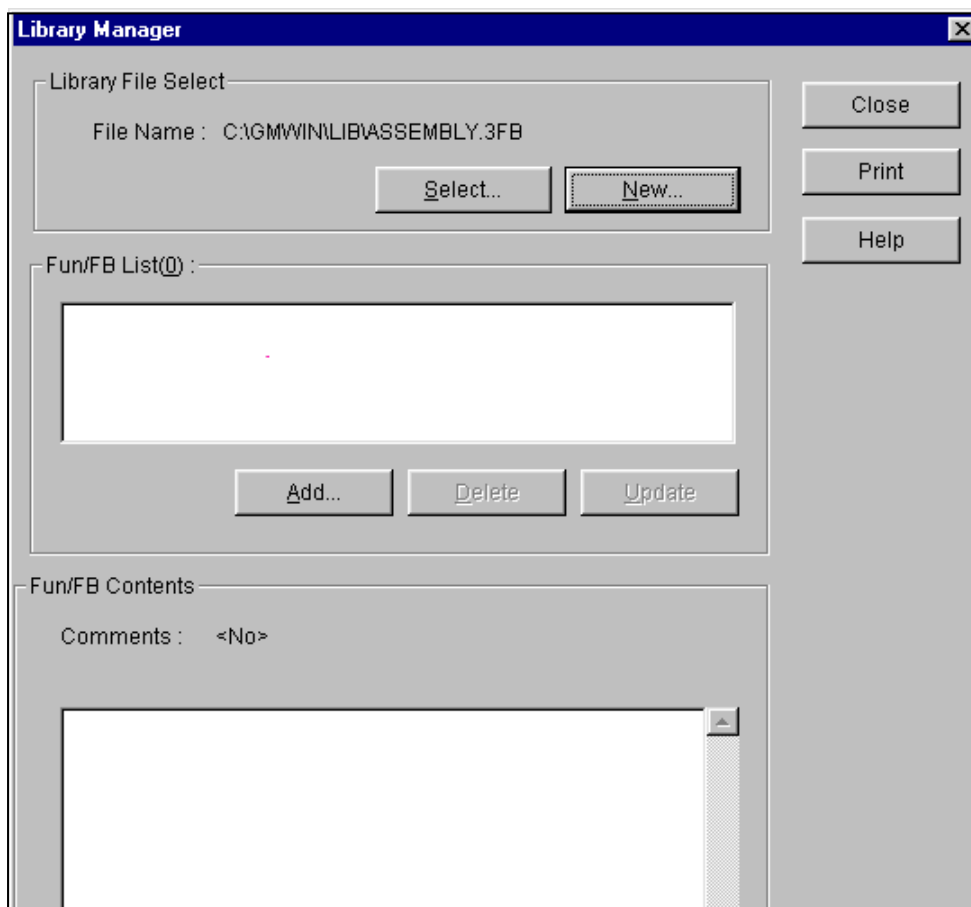


2) Select a Library File

- ◆ Click Select button in Library Manager dialog box.

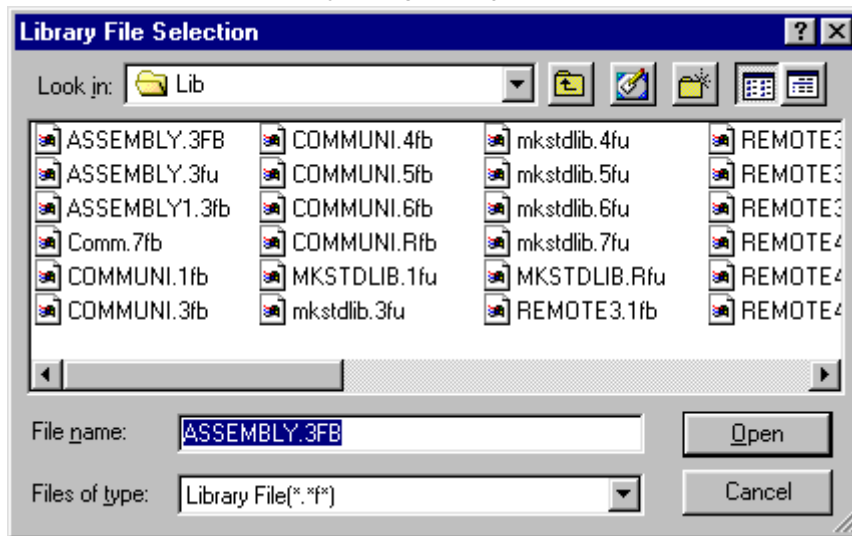

- ◆ After selecting the library file that you want to edit, click **Open** button
- ◆ Then the entire function/function block in selected library file appears automatically in **Fun/FB List**.
- ◆ If you select a desired **Fun/FB** in the **Fun/FB list**, the content of selected **Fun/FB** is appeared on the **Fun/FB**

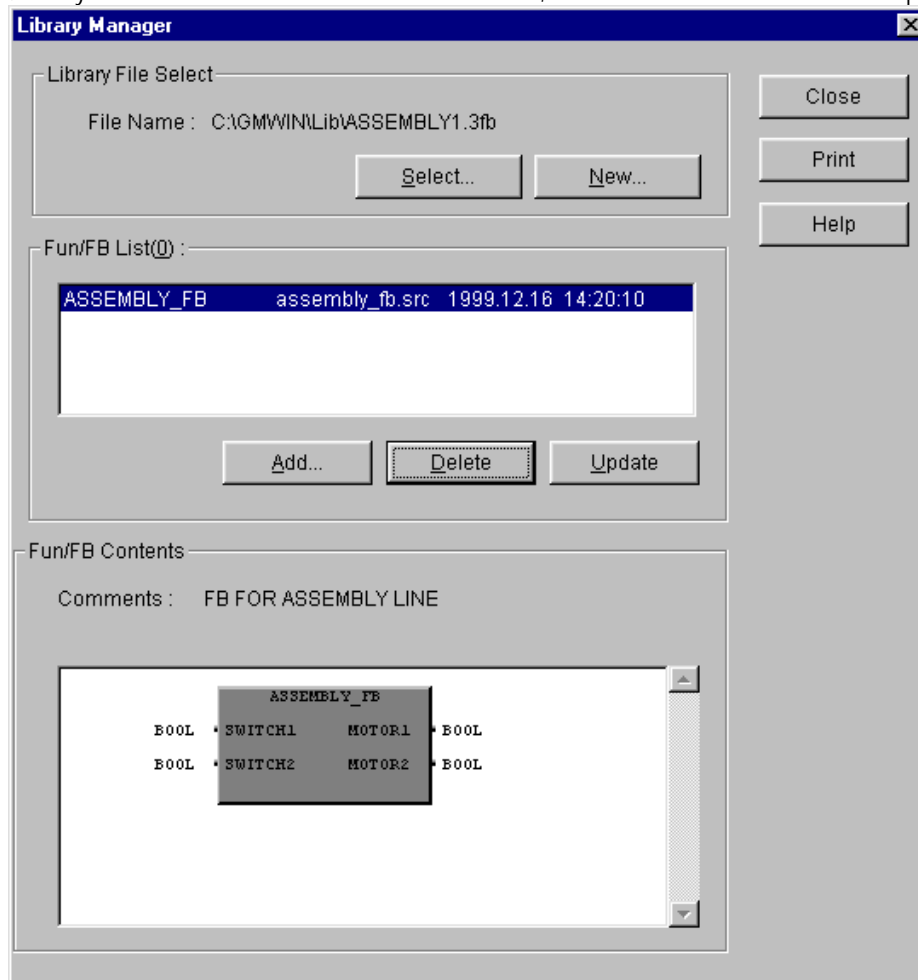

Contents.

3) Add a Function/Function Block Object File

- ◆ Enter Function/Function Block File to add in Add Function/Function Block dialog box and click **OK** button.

4) Delete a Function/Function Block Object File

- ◆ In **Fun/FB List** in **Library** of **Library Manager** dialog box, select function/function block that you want to delete and click **Delete** button.

5) Update a Function/Function Block Object File


- ◆ In **Fun/FB List** in **Library** of **Library Manager** dialog box, select function/ function block that you want to update and click **Update** button.

Chapter 11. Option

11.1. Connect Option

You should set the communication port(COM1~4) to communicate with PLC.

- ◆ Select the **Project-Option-Connect Option** in menu.
- ◆ Default Connection is RS-232C interface.

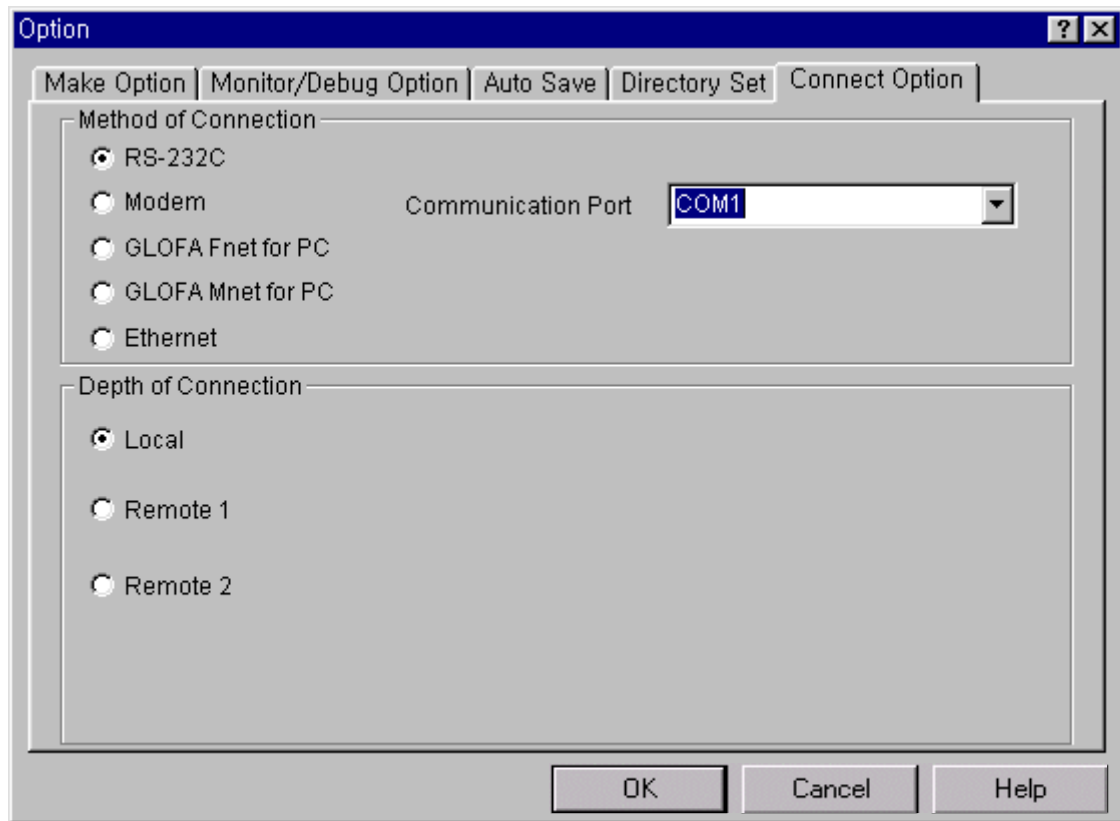

11.1.1. Connection with a Series Communication

- ◆ Click RS232-C button in the Method of Connection list box.
- ◆ Click OK button after selecting the appropriate communication port.

11.1.2. Connection with Phone

- ◆ Select **Modem** button in the Method of Connection list box.

The screenshot shows the 'Option' dialog box with the 'Connect Option' tab selected. The 'Method of Connection' section contains three radio buttons: 'RS-232C', 'Modem' (selected), and 'Dedicate Modem'. To the right of these are three input fields: 'Communication Port' (COM1), 'BPS' (38.4k), and 'Phone No.' (0417-550-8377). Below this is the 'Depth of Connection' section with two radio buttons: 'Remote 1' (selected) and 'Remote 2'. A 'Network Type' dropdown menu is visible, showing 'GLOFA Cnet'. At the bottom are 'OK', 'Cancel', and 'Help' buttons.

- ◆ Select **Communication Port** it has a modem in **Communication Port** list box.
- ◆ Select **BPS** which is supported by User's modem in **BPS** list box
- ◆ Enter the phone number of opposite station in **Phone No.** box and click **OK** button.

11.1.3. Connection with GLOFA Fnet for PC

- ◆ Select GLOFA Fnet for PC .

The screenshot shows the 'Option' dialog box with the 'Connect Option' tab selected. The 'Method of Connection' section contains five radio buttons: 'RS-232C', 'Modem', 'GLOFA Fnet for PC' (selected), 'GLOFA Mnet for PC', and 'Ethernet'. To the right of these are two list boxes: 'Port Address' (showing '0x200') and 'Memory Address' (showing '0xC000'). The 'Depth of Connection' section contains two radio buttons: 'Remote 1' (selected) and 'Remote 2'. To the right of 'Remote 1' is a 'Network Type' list box showing 'GLOFA Fnet'. To the right of 'Remote 2' is a 'Station No.' text box showing '0'. Above the 'Station No.' text box is the label 'Setting of Remote 1'. At the bottom of the dialog are three buttons: 'OK', 'Cancel', and 'Help'.

- ◆ Select an appropriate port address in **Port Address** list box.
- ◆ Select an appropriate memory address in **Memory Address** list box and click OK button.

11.1.4. Connection with GLOFA Mnet for PC

- ◆ Select GLOFA Mnet for PC.
- ◆ Select an appropriate port address in **Port Address** list box.
- ◆ Select an appropriate memory address in **Memory Address** list box and click OK button.

11.1.5. Connection with Ethernet

- ◆ Select Ethernet.


11.1.6. Computer Link Information

Item	Standard	
Serial Communication	RS-232C 1 Channel	Standard RS-232C specification
	RS-422/485 1 Channel	StandardRS-422/485 specification
User Defined Protocol	A user makes Communication Frame with Frame Editor and downloads to a link module, then a user can control the communication protocol by F/B of user program.	
PLC Interface	Queue Access type by 32K universal RAM	
Communication Protocol	Exclusive Protocol	It supports the multi drop 1 on 1 type with Exclusive Protocol of LGIS
	GMWIN Protocol	It supports Remote PLC control with GMWIN Uses by GMWIN Protocol of GLOFA PLC.
	User Defined Protocol	Download with Frame Editor. (Set the RS232 and RS422 independently)
Data Type	7 or 8	Download after setting in the Editor(Set the RS232C and RS422 Independently)
	1 or 2	
	1	
	Even/Odd	
Channel Selection	Select Independent Channel/Dependent Channel in Editor	
Synchronization Type	Supplement Synchronization Type	
Transmission Speed(BPS)	You can select among the 300/600/1200/2400/4800/9600/19200/38400	
Modem Communication	RS-232C Channel connection available	
System Configuration	1:1, 1:N, N:M configuration available (N + M ≤ 32)	
Transmission Range	RS-232C : Maximum 15M (Extension by Modem is available)	
	RS-422 : Maximum 500M	
Diagnosis	Loop-Back Test Mode	Test1/Test2 Mode
	Operating status is displayed by 16 LED Display in the Run	


11.2. Set the directory of GMWIN

You can set 4 kinds default directories and use it in GMWIN .


- (1) Standard Library Directory: Libraries for GMWIN are located in this directory, and User Defined Libraries also do.
 - (2) Source File Directory: In Source File Directory, GMWIN saves source program files of program, function, function block and etc.
 - (3) Output File Directory: Object files are saved in this directory, which are created when source file is compiled.
 - (4) Temporary File Directory: GMWIN saves temporary file in this directory during the execution.
- ◆ Select the **Project-Option-Directory Set** in menu.

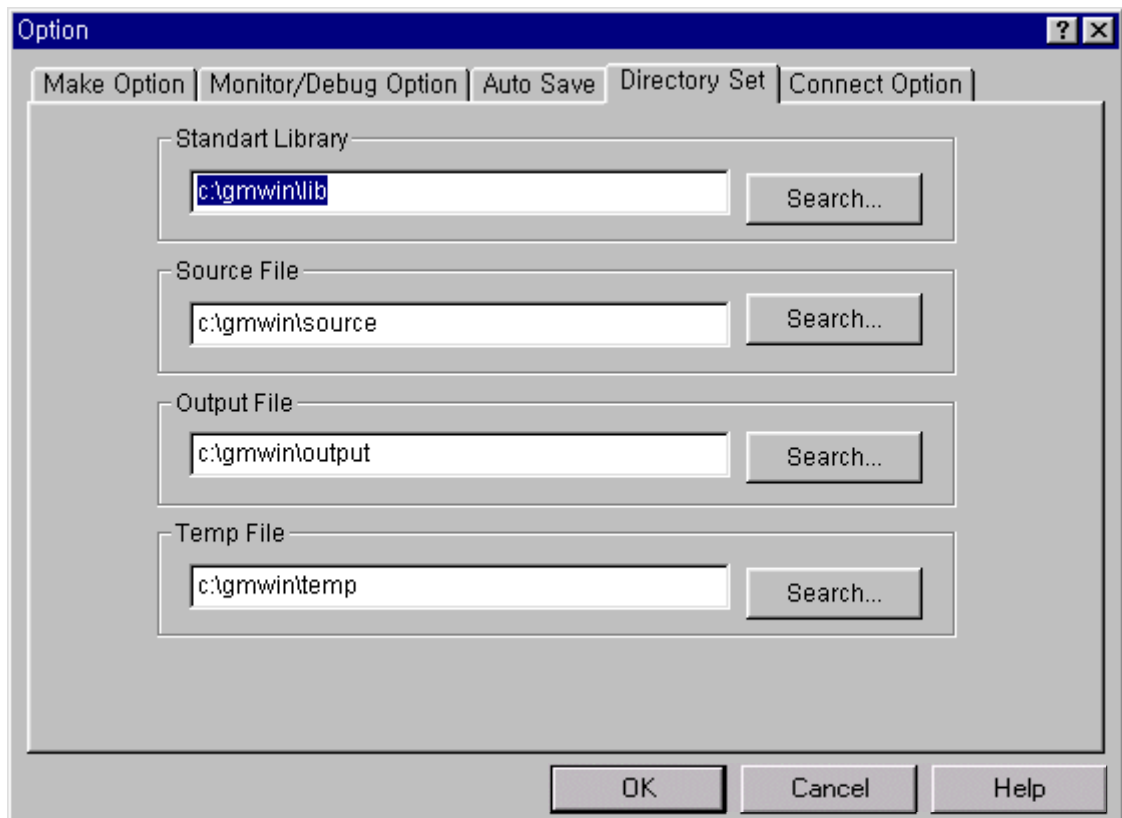


- ◆ Input a directory it contains Standard Library (STDLIB.?FU, STDLIB.?FB) in **Standard Library** box or input a searched directory it contains Standard Library after searching with click **Search...** button.

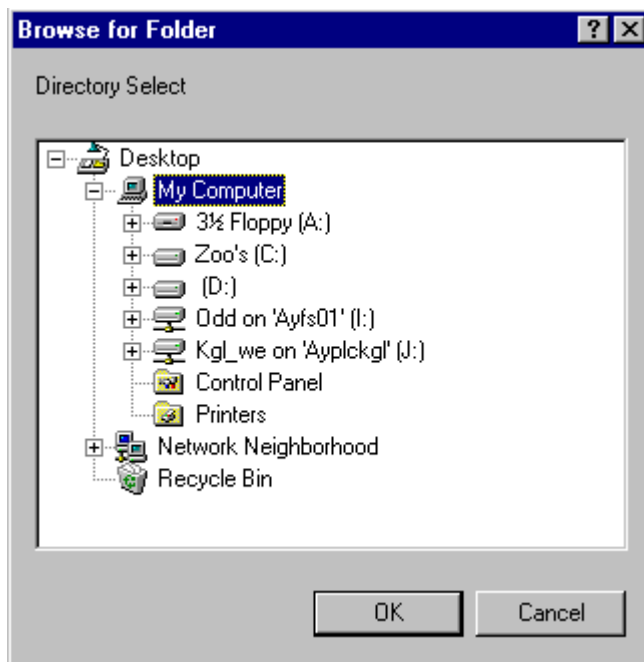

- ◆ If you finish the setup of the directory, click **OK** button.
- ◆ If the directory that you select for the standard library does not exist, the following error message box appears.

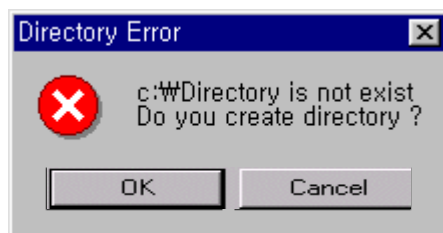


- ◆ Enter the directory to save source file in the **Source File** input text box, and click **OK** button.
- ◆ If the entered directory does not exist, the following error message box is displayed. If you want to create the entered directory, click **OK** button. Otherwise click **Cancel** button.

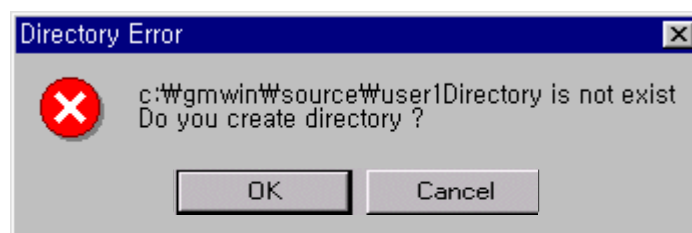

- ◆ The input method of **Output file/Temporary** file is the same as input method of source file.

11.3. Auto Save

This function is to set the time interval for Auto saving. Automatically saved file is saved with ".ASV" file in the current directory. The file is automatically deleted when the program window is closed. Therefore if a program cannot be saved by "Program Error" before program is not saved, you can recover some program by loading auto saved file.

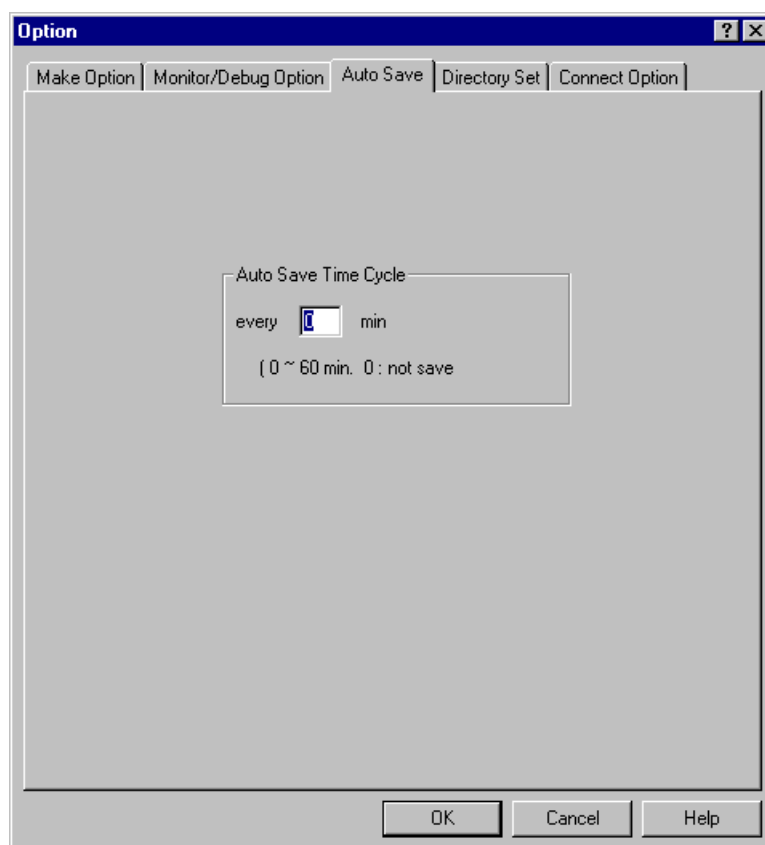


- ◆ Select the **Project-Option-Auto Save** in menu.
- ◆ Enter the time interval for auto saving.(1 to 60 minutes is available, and if you enter '0', auto save function is disabled.)
- ◆ Click **OK** button.

11.4. Set a Password

This function is to set a password in PLC.

- ◆ Select the Project-Option-Password in menu.(It is available only in Online mode)

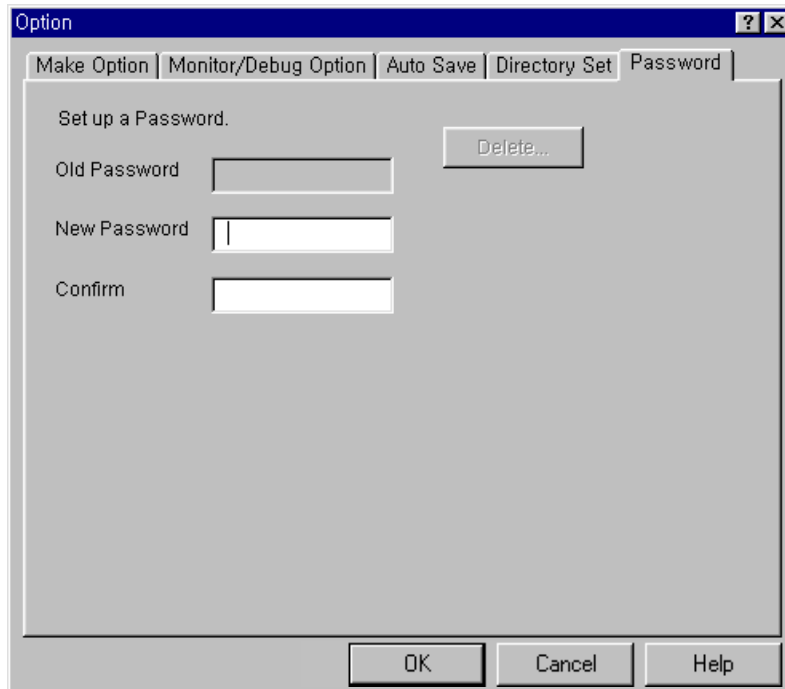


- ◆ Select the **Password** Tab, and enter the old password, new password and confirm the password.
- ◆ Click **OK** button.
- ◆ To cancel the password setting.
- ◆ Click Delete button .

11.5. Monitor/Debug Option

To set the whole options for monitoring.


- ◆ Select the Project-Option-Monitor/Debug Option in menu.

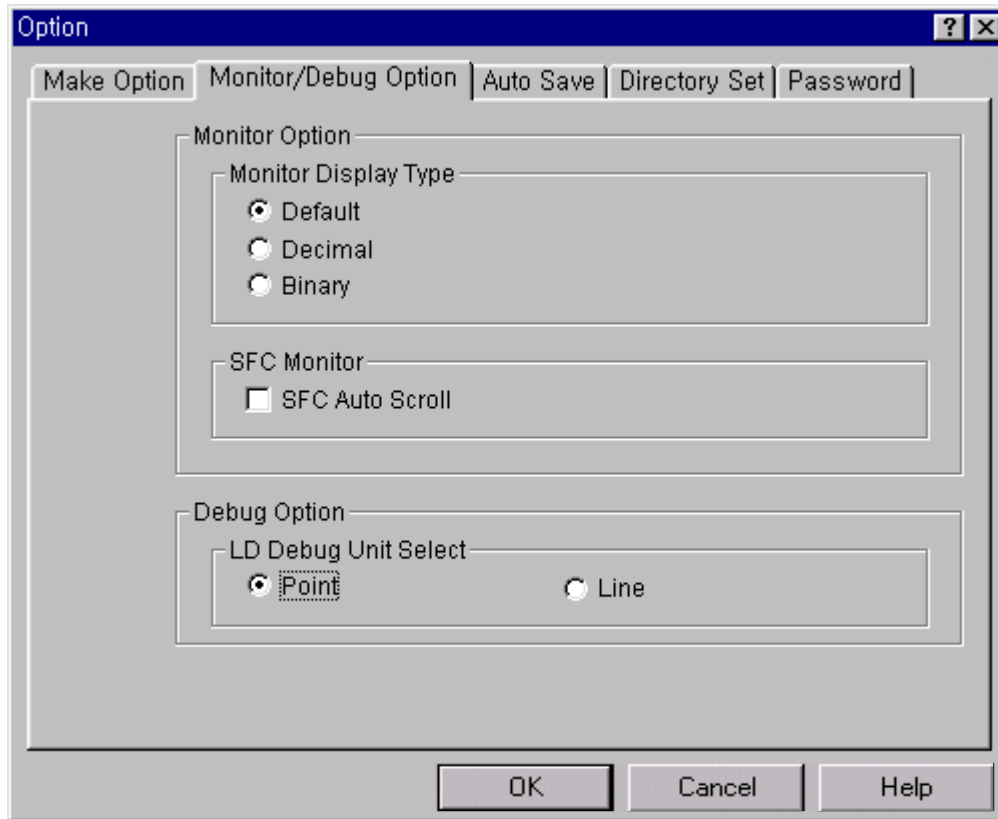

In monitoring mode, it allows you to change the display type of monitoring variable.

- ◆ Select the Project-Option-Monitor/Debug Option in menu.
- ◆ Select the desired display type in the Monitor Display Type, click OK button

Example) If you select the Default in Monitor Display Type, The value of variable monitoring is displayed as hexa type like "16#*".

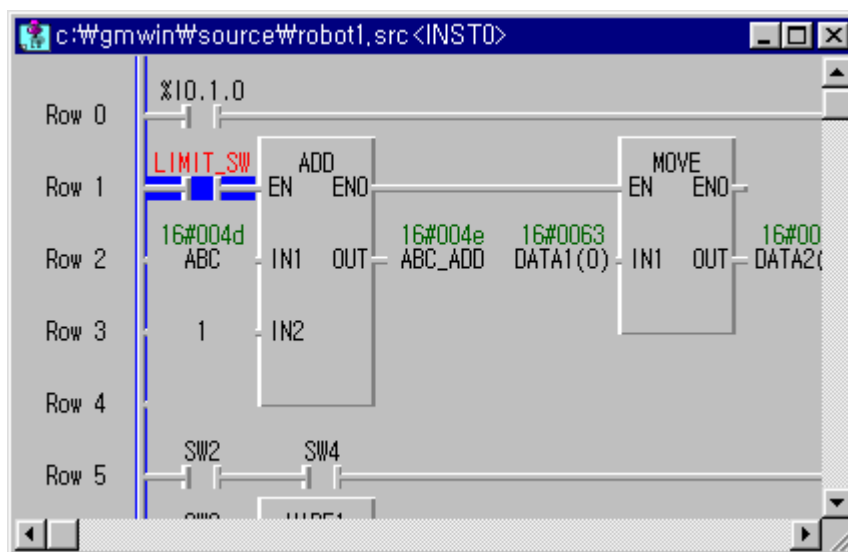

(1) SFC Auto Scroll Option

- ◆ If you check the **SFC Auto Scroll**, it scrolls automatically with monitoring position.


(2) Debug Option

- ◆ When you debug LD, you can select the **Point** or **Line** in **Debug Option** menu.

11.6. Make Option

It allows you to select **compile type**, to select **output file** and to set the size of **%M** area in Make option.

- ◆ Select the **Project-Option-Make Option** in menu.

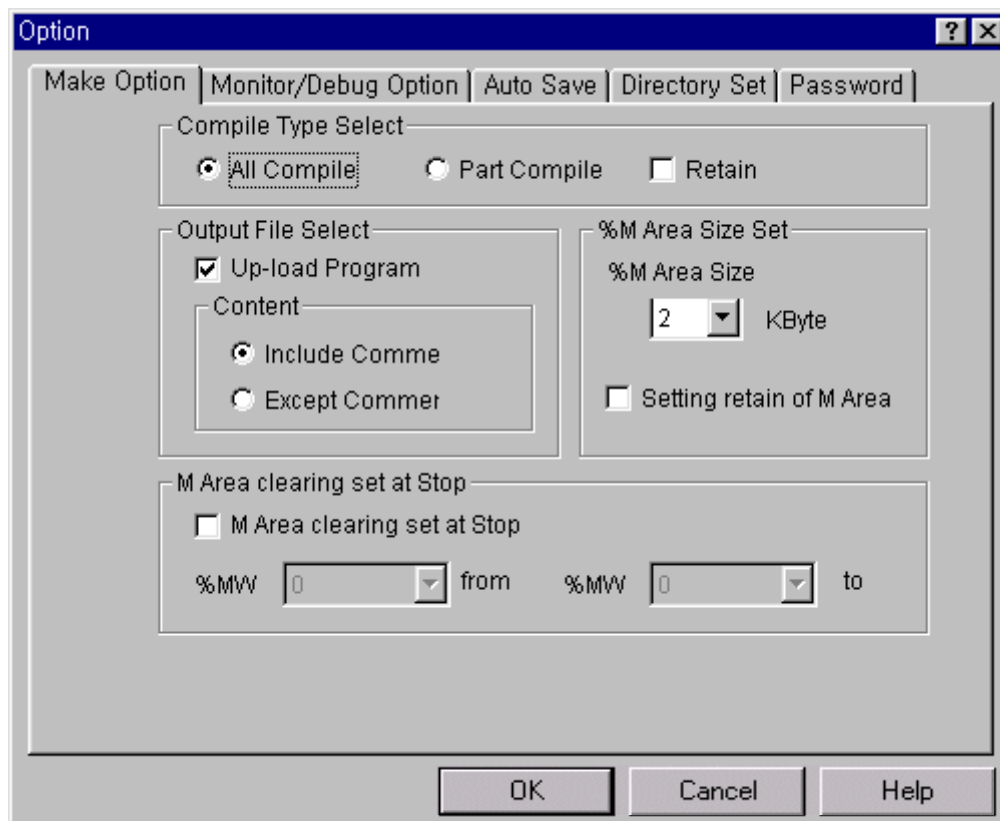

Compile Type Select Option

- ◆ **Compile Type Select** allows you to set the method of compile for the source program.
- ◆ If you select the **Compile All** in the **Compile Type Select**, GMWIN compiles again from the first line regardless editing a source program.
- ◆ If you select the **Part Compile** in the **Compile Type Select**, GMWIN compiles the updated part.
- ◆ You can select making upload program for the output file in **Output File Select**.
- ◆ You can select the size and retain of **%M** in the **%M Area Size Set**.
- ◆ You can select **%M** area to be cleared at the turning point of **STOP** Mode in the **M Area clearing cet at Stop**.

Chapter 12. Upload


It saves a compressed project file and source file to RAM(program area) or flash memory of PLC, and uploads a program from PLC.

12.1. Make Upload File


You can make an upload file by selecting Make Option menu.

An upload file includes project, program, function lock and user define function used in program.

- ◆ Select the **Project-Option** in menu. Then **Option** dialog box appears.
- ◆ Check the **Up-load Program** in **Make Option** dialog box, and click **OK** button.

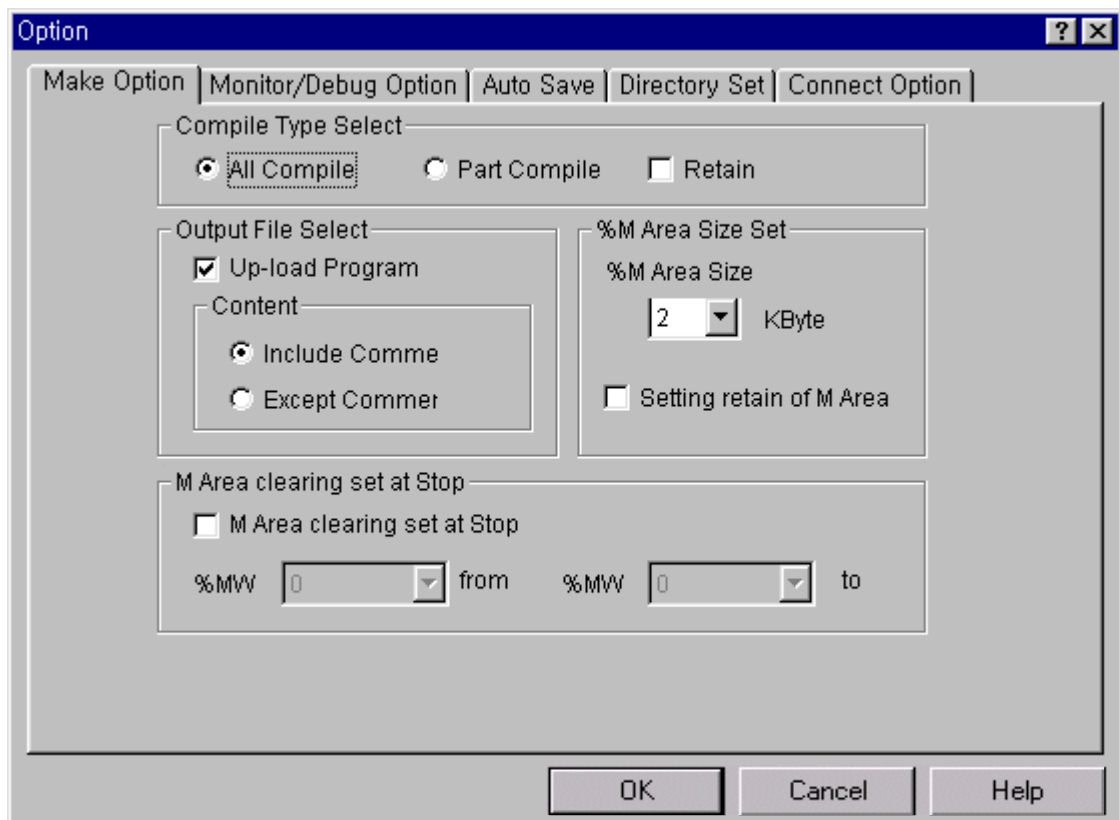


- ◆ It creates the execution file for program and Upload file with selecting **Compile-Make** in menu

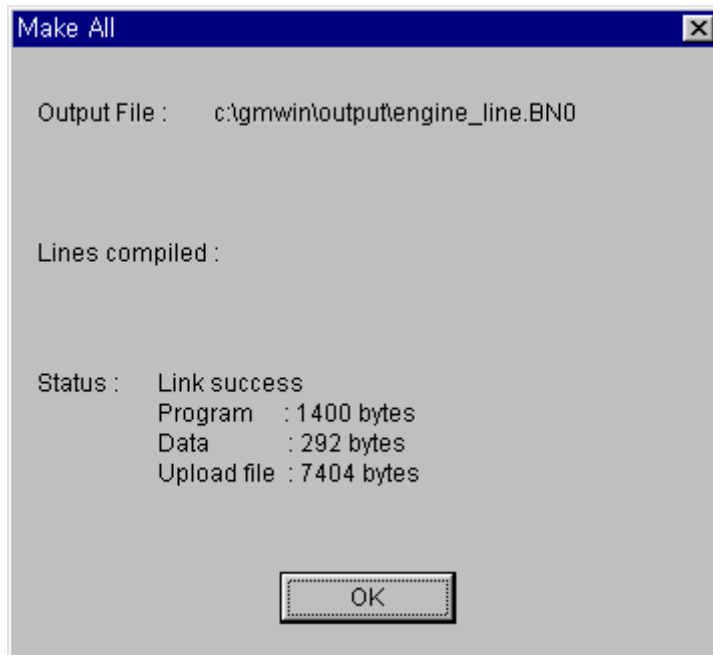

12.2. Write to PLC(Download)

Select the Upload program when writing a program to PLC.

- ◆ Select the **Online-Write** in menu.
- ◆ Select the **Parameter and Program, Upload Program** in the **Write** dialog box.

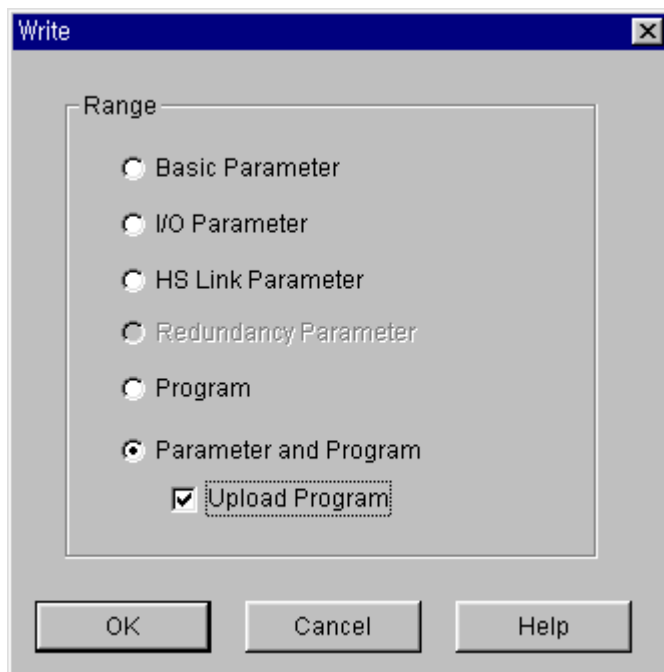


According to the program size, it runs as below.

Program Size	The place to save upload program
--------------	----------------------------------


Size of(Execution Program + Upload Program) < Size of Program RAM	It writes to RAM in CPU
Size of Program RAM < Size of (Execution Program + Upload Program)	If device has flash memory, it writes to flash memory after query to user

12.3. Read from PLC(Upload)


- ◆ Select the **Project-Open From PLC** in menu

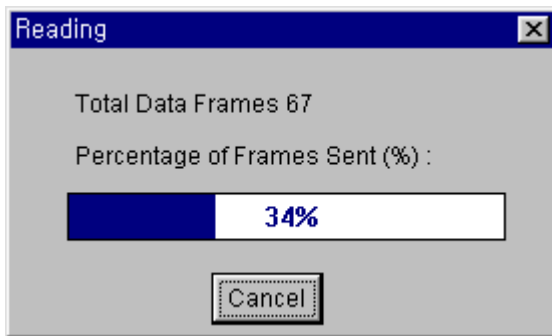


- ◆ If a file had the same name in Source directory, the following dialog box appears.

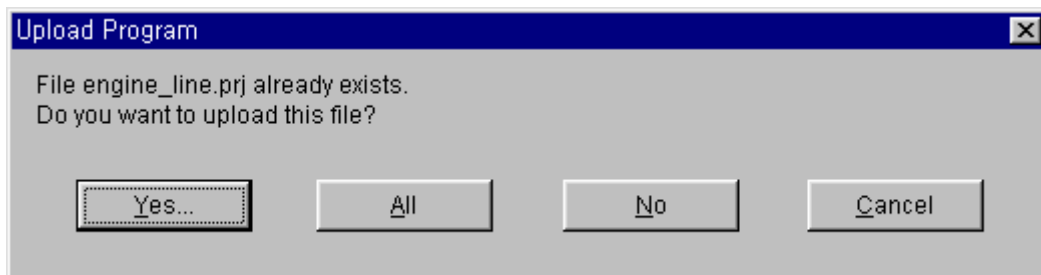

- ◆ Click **"All"** button to monitor and online-edit.
- ◆ Uploaded Project window create, then the following dialog box appears.

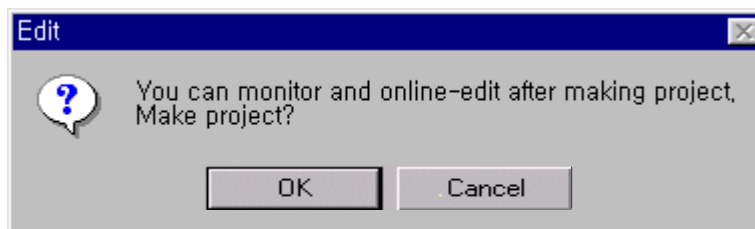

- ◆ Click **"Yes"** button to monitor and online-edit.

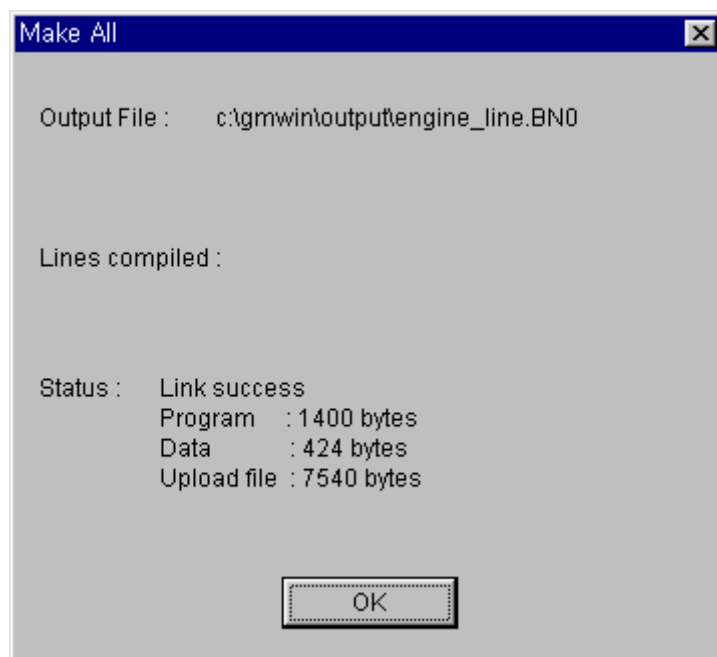

- ◆ You can monitor and online-edit after making project.


Chapter 13. Online Edit

In Run Mode, You can edit a program without changing the PLC Mode to Stop Mode.


13.1. Start Online Edit

. To edit a program in Run mode, the program to edit must be identified with the program in the PLC.


- ◆ Select the program.

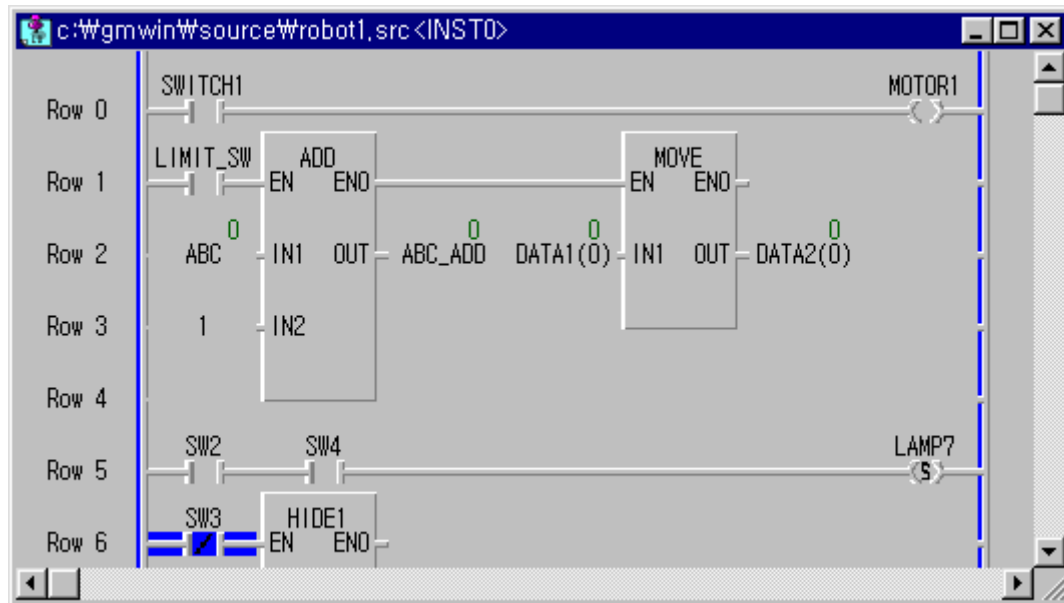

- ◆ Select **Online-Start Online Edit** in menu.
At this moment, If PLC Mode is Monitoring Mode, only the program for online editing is changed to Edit Mode.
- ◆ If there is the Upload program in PLC, the following message appears. If you click **Yes** button, the Upload program is downloaded to PLC after the online editing. But, the PLC must have an enough memory space.

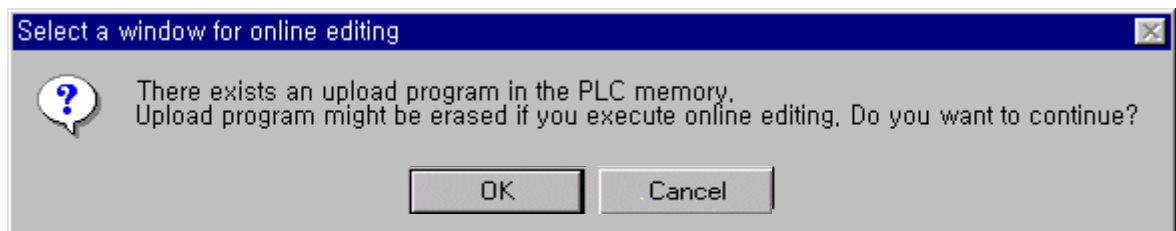


- ◆ Edit the program.

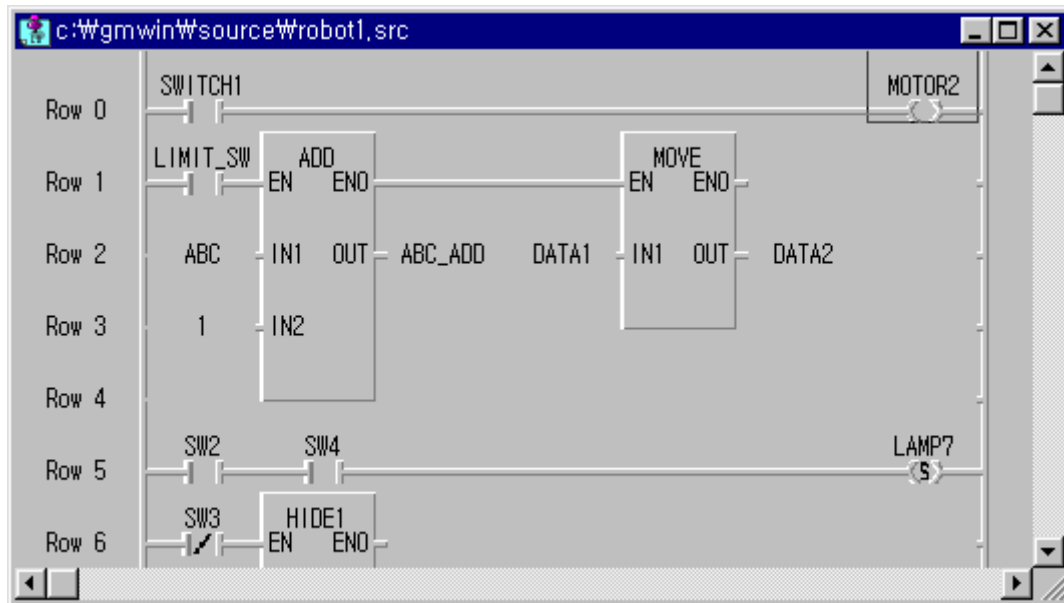

13.2. Write for Online Edit

To write the edited program to PLC,

- ◆ Select **Online-Write for Online Edit** in the pull-down menu.

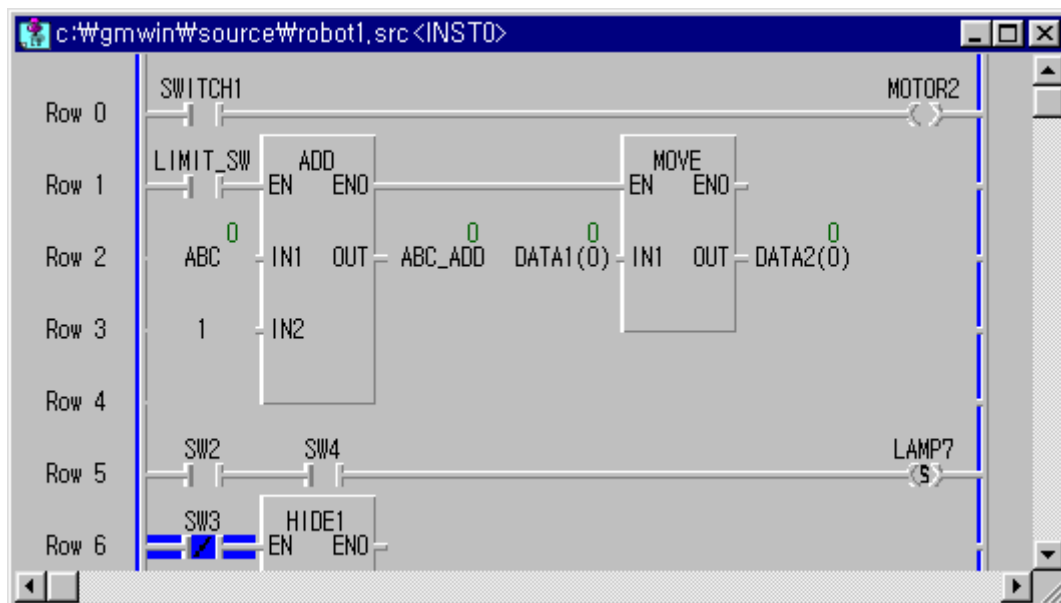

- ◆ If an error is occurred in this step, the program can't be downloaded to PLC. So, edit the program again after selecting **Online-Write for Online Edit** in the pull-down menu.

13.3. Cancel Online Edit

To cancel the online editing and return to the previous program,

- ◆ Select **Online-Cancel Online Edit** in the pull-down menu.

13.4. Available Items for Online Edit

You can edit the following items.

- ◆ Edit, Add or Delete for Contacts and Variables
- ◆ Edit for the directly used data in Program
- ◆ Add initial Variable, Retain Variable
Initial Value and Retain Variable are applicable in Mode change(from Stop to Run mode).
- ◆ Add or Delete Rung
- ◆ Edit Parameter
Only Basic Parameter and High Speed Link Parameter(including Link Enable).
Not available for I/O Parameter
- ◆ Add Jump or Label
- ◆ Delete Variable in Variable List
- ◆ Change Memory Allocation for Variable
Example) AT %I0.2.0 ==> %I0.2.1


13.5. Non-available Items for Online Edit

You cannot edit the following items.

- ◆ Change of Variable Property
Example) Standard Variable ==> Variable with Initial Value,
Local Variable (VAR) ==> Global Variable (VAR_EXTERNAL)
BYTE ==> WORD
Initial Value declared as Initial Value can be changed.
- ◆ Edit, Add or Delete Global Variable
- ◆ Add or Delete Program Block
- ◆ Add or Edit User Defined Function/Function Block (Available for Function or Function Block for already used in the Project)
- ◆ Edit many rungs at the same time
<No. of edited Rung + No. of Label included in edited Rung> must be within 256 numbers

Note

1. When complete the online-edit, to close a program, you must execute a disconnection.
If you execute a disconnection, Upload program is transmitted to PLC as below.

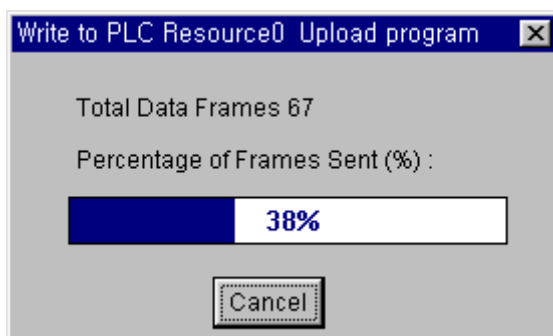

2. To online-edit an uploaded program, you must complete Make.
(Refer to the section '12.3.Read from PLC (Upload).')

Chapter 14. Simulator Function

GMWIN allows you to simulate the program logically you've created without PLC or I/O system.

14.1. Applied PLC and Specification for PC

14.1.1. Applied PLC

GLOFA GM1, GM2, GM3, GM4, GM5

14.1.2. Specification for PC

- O/S : Window 95
- Memory : 16M bytes or more
- HDD : 30M bytes or more

14.2. Create a Program

Creating a Program is same as the program in GMWIN.

According to the type of program, the number of program is limited as below.

- ◆ Scan Program: Max. 256 Programs
- ◆ Task Program: Single : Max. 32 Programs
Interval : Max. 16 Programs
Interrupt : Max. 16 Programs

14.3. Available Program for Simulation

- ◆ Program : All programs defined in a Project of GMWIN
- ◆ Standard Function/Function Block
(Only Function/Function Block of A/D and D/A modules are available for simulation)
- ◆ User Defined Function/Function Block
(Not available for Function/Function Block having special functions)
- ◆ If the compiled code for Simulator does not exist, You must compile the program again.

14.4. Start Simulation

To start Simulation,


- ◆ Select **Project- Start Simulation** in the pull-down menu.
- ◆ When you select **Start Simulation**, GMWIN executes Compile+Link+Connect+ Download+ Stop+Monitor Start Functions simultaneously.
- ◆ Run Mode in Simulation : Impossible to edit Monitor Mode
- ◆ Debug Mode : Keeps the current data of the previous mode
- ◆ Timer : Run Mode :: PC Clock base
- ◆ Debug :: Accumulated as much as the running time.

14.5. Build an I/O module

- ◆ If I/O variables or Direct variables are used in editing a Program, they are displayed in the appropriate base and slot when starting Simulation.


Data Type	16Points	32Points	64Points
X	0 ~ 15	16 ~ 31	32 ~ 63
B	0 ~ 1	2 ~ 3	4 ~ 7
W	0	1	2 ~ 3
D	X	0	1
L	X	X	0

- ◆ I/O Modules are set as 16 points as default.
If input and output contacts are used together, draw a output module.
16/32/64 I/O modules are all applicable for Input or Output module.
A/D module : Square (ON:GREEN / OFF : BLACK)
D/A module : Circle (ON:RED / OFF : BLACK)
Base : Supported as type of combination box

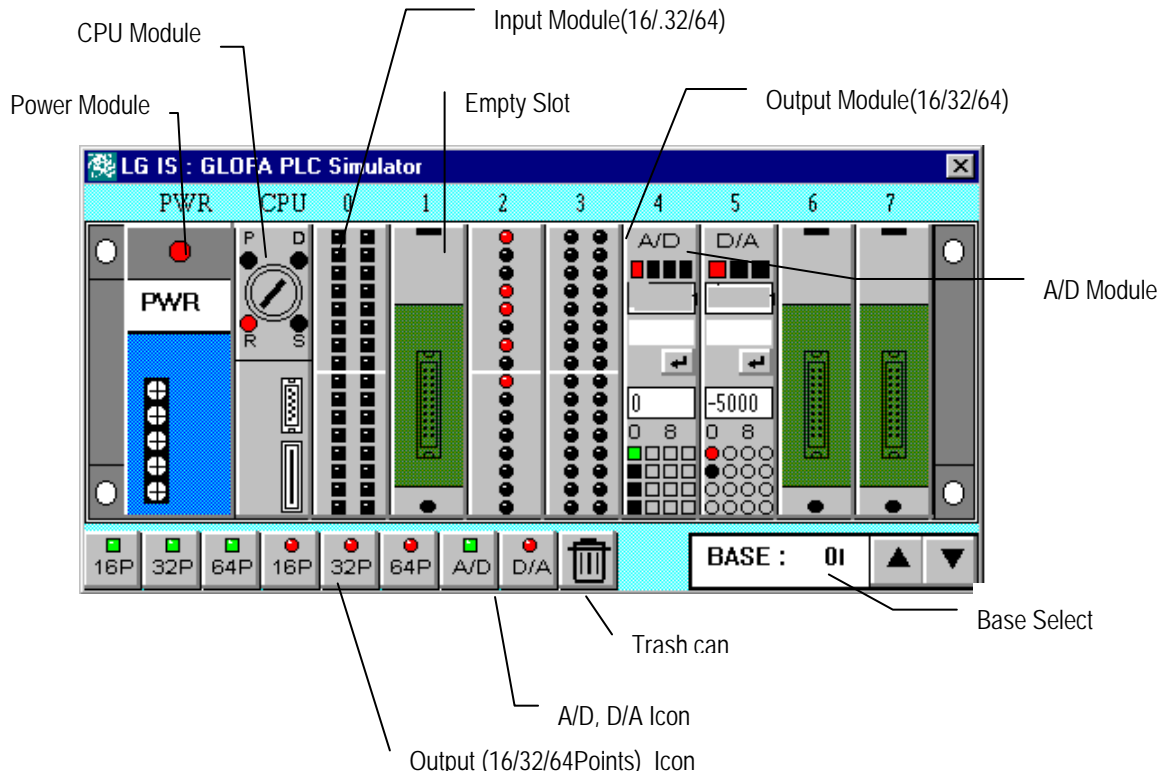

14.6. Add/Remove Module

To add or remove a module, the PLC mode must be **Stop** mode,

- ◆ Add : Drag and drop the icon which you want to add on the appropriate slot
- ◆ Remove : Drag the appropriate slot and throw it to the trash can()

14.7. Simulation of I/O Module

To turn the Input/output contacts ON/OFF,

- ◆ Click the appropriate contact on the I/O module directly.


14.8. Power Simulation

This function is only available in **Run** mode.

- ◆ When Simulator begins to start, the power gets On.
- ◆ If you click the red lamp on the power module, the power gets Off and gets On in a few moment.
This function is almost same as the power turns to be Off in a second.
If there is a program defined as Hot Restart, the program is executed.

14.9. A/D, D/A Simulation

14.9.1. Shape

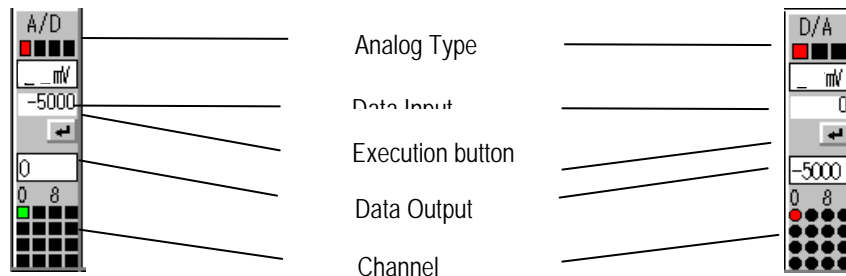

- Analog Type : Kind of A/D Input range, D/A Output range
- Data Input : Input box for Analog data of A/D or digital data of D/A
- Execution button: Converted to the inputted data
- Data Output : Display the converted data
- Channel : Currently selected channel .

14.9.2. Simulation

- ◆ A/D, D/A Simulation retains the data such as base, slot, channel and data type among the data set in the initial function block (AD?INI / DA?INI) for A/D, D/A module. Others are ignored.
- ◆ If you mount the A/D or D/A module on the slot, which is not used in the program, the base and slot are effective. But, the data type is all '0' i.e., DT=0 (0~16,000) and all channels are supposed to be used
- ◆ After entering the data in data input position, click execution button.

14.9.3. Analog type of A/D, D/A module

- ◆ A/D Input : +- 5V, +-10V, +-20mA, 4 ~ 20mA
- ◆ D/A Output : +- 5V, +-10V, 4 ~ 20mA

14.9.4. Change of Analog type and Display of converted data by channel

- ◆ Change of analog type is only available in Stop mode
- ◆ The selected channel is changed into the property of changed channel.
- ◆ Change of channel is available in all modes and the converted data of the changed channel is displayed.
- ◆ According to each channel of A/D module, the kind of analog can be set.
If a channel is changed, the property of the channel is also changed.
- ◆ In case of D/A module, Only one type of analog for all channels is available.
(You can't setup the type of analog by channel.)

14.9.5. Analog Input of A/D module and Display of converted data

- ◆ Input Unit - Voltage: mV, Current : uA
- ◆ Input value for the input data window in A/D module is analog data.
The value can't exceed the range of the current analog type. If the value exceeds the maximum upper limit, the data will be the maximum upper limit.
Example) Let's say Analog type is +-5V(DT=0). If inputted analog value is -6,000, the data is regarded as -5,000. The converted digital data is displayed as '0'.

14.9.6. Digital Input of D/A module and Display of converted data

- ◆ Input Range : It is up to Data type (DT) of D/A module.
DT = 0 : 0 ~ 16000, DT = 1 : -8000 ~ 8000
- ◆ Input value for the input data window in D/A module is digital data.
The value can't exceed the range of the current digital type. If the value exceeds the maximum upper limit, the data will be the maximum upper limit.
Example) Let's say Analog type is +-5V(DT=0). If inputted digital value is 17,000, the data is regarded as 16,000 and the converted analog data is displayed as 5,000.

A/D Simulation Step

- | | |
|-------------------------------|---|
| 1. Add A/D module | : Stop Mode |
| 2. Change of Analog type | : Stop Mode. Executes whenever it is necessary. |
| 3. Run | : Executes whenever it is necessary. |
| 4. Select Channel | : Display analog type and converted data |
| 5. Enter the analog value | : consider the input range |
| 6. Click execution button | : Execute the conversion! |
| 7. Display the converted data | : Display the digital data according to DT |

- | | |
|------------|-----------------------------|
| 1 ~ 6 Step | : Executed by user |
| 7Step | : Executed in the Simulator |

14.10. Function by Online menu

Refer to Chapter 7. Online for the detail information.

14.10.1. Monitor

- . Program Monitor
- . Variable Monitor
- . Time Chart Monitor
- . I/O Monitor

14.10.2. Forced I/O Setup

- . I/O Flag, Data Setup
- . Forced I/O Enable

14.10.3. Data Clear


- . Only available in Stop mode.
- . Clear the current data into zero.

14.10.4. Reset

- . Reset/Overall Reset

14.10.5. Mode Change

- ◆ GMWIN : *Online – Mode Change*
- ◆ Simulator : Click each mode in CPU module.
- ◆ Stop → Pause mode is not available. .

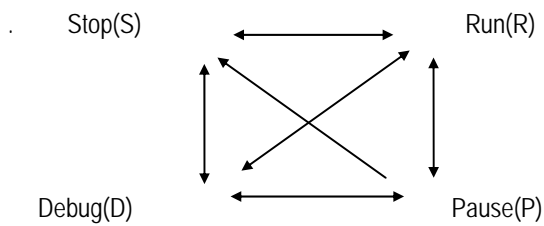

14.11. Debugging

Refer to Chapter 9 Debugging for the detail information.

◆ GMWIN : ***Debugging***

Simulator : Click Debug (D) Mode in CPU Module

◆ Debug function in Simulator is same as GMWIN excluding Variable Break.

◆ When each mode is changed to Debug mode, the current value is retained.

- . Debug Start/Stop
- . Debug Run/Pause
- . Step Over/Step In/Step Out
- . Run to Cursor
- . Add/Remove Break Point
- . Break Point List/Condition
- . Task Enable

14.12. Stop Simulation

◆ GMWIN : ***Project – Stop Simulation***

Simulator : Click (X) to close the simulator window.

◆ A. GMWIN Error Code

- ◆ **Warning! Cannot find library files. You should reassign library directory or copy library files in that directory!**
It is the case that this library file is not in this directory when you open project-file.
- ◆ **HS Link Parameter Set Error**
Download after making express link parameter again.
- ◆ **Abnormal HS Link parameter**
It is the Cases that download fails because error causes while you download the program, so you should download again.
- ◆ **Abnormal Common RAM**
Reboot the PLC.
- ◆ **Current variable type should be same as one before left parenthesis.**
Data type of current Result in IL has to continue before beginning bracket and after ending bracket.
- ◆ **This Operator cannot be placed in parenthesis.**
LD, LDN, JMP(C,N), CAL(C,N) and etc. cannot exist inside the bracket in IL, so delete it.
Cannot define any more global variable.
300 units of global variable is available.
- ◆ **Abnormal Basis parameter.**
In Case of download failure during program download, do download again.
- ◆ **Cannot declare local variables over 32kBytes. Delete redundant variables.**
PLC cannot use internal memory over 32k, so Delete the variable that is not used among the declared variable or reduce the number of variable.
- ◆ **Wrong Single variable name is given.**
It is the case that wrong single variable name is given if you select Single task.
(See also 4.4.7 task definition in GMWIN user guide)
- ◆ **Single variable task number over Maximum number : N**
Reduce the number with deleting internal contact task in the task definition of the project window.
Task number for Single task is between 48 to 63.
(See also 4.4.7 task definition in GMWIN user guide)
- ◆ **Too many input or output parameters declared.**
The maximum size of input/output parameter is 32
- ◆ **The given FB instance name refers to a different FB.**
It causes when instance name of the function block has been used with another instance name of the function block. You should give different names to each function block.
- ◆ **Cannot add resources any more.**
The maximum number of resource is 4 case of GM1.
- ◆ **Cannot add any break point. If you want to add a break point, delete another one.**
The maximum number of break point is 32.


- ◆ No more In/Out variable can be added.
The maximum number of input/output variable is 32 each.
- ◆ No more programs can be added.
The maximum number of the program item is 180 in case of GM1-4, 90 in case of GM5.
- ◆ Data size over error..All: byte, using: N byte.
It is the case that the memory size(N byte) which is used in the project exceeds(M byte) which is permitted in PLC. You should change your PLC version to the upper PLC version or reduce the declared variable in 32 each.
- ◆ Data type and Direct variable type are mismatched.
It is the case that X, B, W, D, L which indicate the memory size do not match Data type, if you select user define of memory allocation.
- ◆ Data type of current result is not determined yet. Use "LD" command.
It is the case that you make program, which has the integer or the direct variable, as the object without using LD command after CAL command in IL. USE LD command because you cannot know the data type of the object after CAL command.
- ◆ Cannot progress compiling because data type is not determined.
Use the variable that has the data type or start the program from LD.
- ◆ Wrong data type is assigned.
It is the case that the data type of the object and operator do not match when the object is given as variable.
- ◆ Abnormal Data RAM.
Reboot the PLC.
- ◆ Library file<library file name> not found.
It is the case that the library file cannot be found. Confirm
- ◆ Can not open<file name> of the library file.
Confirm the existence of the selected library-file on the option in the declared directory.
- ◆ Can not open <file name> of the library file.
Confirm the existence of the selected library-file on the option in the declared directory.
- ◆ Library-file error
Library-file is damaged. Copy backup-library-file to library-directory again.
- ◆ Can't find object in that library file.
Confirm the existence of the object-file that is included in library on setting directory.
- ◆ Cannot open library file(S).
Confirm the existence of the selected library-file on the option in the declared directory.
- ◆ This function/function block is not in the library.
It is the case that the used function/function block is not in the library, which is inserted in the present project.
Insert a related library file and compile/make again.
- ◆ F/FB is not registered in library
The function or the function block that is using now is not the basic library or the function/function block which is inserted in the project. It happen when the inserted library is deleted on the project after editing LD. Insert the function which is using now or the library which has function block.

- ◆ Cannot find function block '<function block name?>' from library files.
It is not inserted that the library-file that has function-block that is assigned in library insert list
In certain case, some CPU has not this function block, so please attend using function block.
- ◆ This is Rung comment area
It causes when insert the command to the area of rung comment, Command cannot be inserted in the rung comment area.
- ◆ This is Rung Comment area. Only line insertion is allowed here.
It causes when insert the command in rung comment area. It is impossible to insert and delete cells, possible to insert and delete row. If you want to delete the rung comment row, delete comment row.
- ◆ Rung comment cannot be longer than 170characters.
The maximum size of the rung comment is 170 characters.
- ◆ This is Rung Comment area. To delete a rung comment by menu you must delete the whole line.
You have to delete all of row to delete the rung comment.
- ◆ The rung is too long!
The size of one rung is over 40 rows.
You should make one rung under 40 rows.
- ◆ Label <label name> position error.
The label should be in front of the step.


NEXT:



- ◆ Too many characters in label.
The maximum size of label is 16 characters.
- ◆ Same label name is used more than twice.
The same label name is used more than twice.
It is wrong that same label name exist.
- ◆ Label given cannot be longer than 16 characters.
It is the case that the label name is too long.
- ◆ The label name specified can't be allowed.
It causes when input label name is wrong, you use a special character that is not permitted, and name exceeds maximum size.
- ◆ Invalid label name.
If you input string that cannot be used, confirm it is the string that is declared as variable or the reserved character, and input again.
- ◆ In case of jumping to the label, it is impossible to jump between the main program and subroutine program with a reference of END.
- ◆ Label cannot be in the parenthesis.
The label cannot be in the parenthesis.
- ◆ Label must be placed at start line of rung!
The label is in the rung.

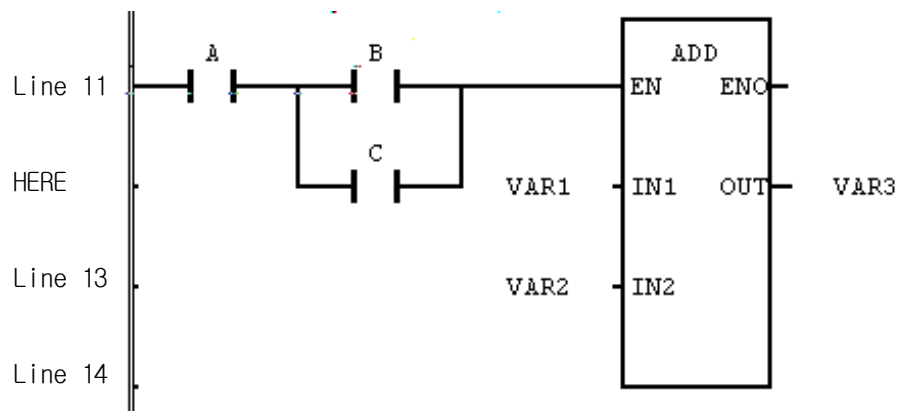

Move the label to the beginning row of rung.

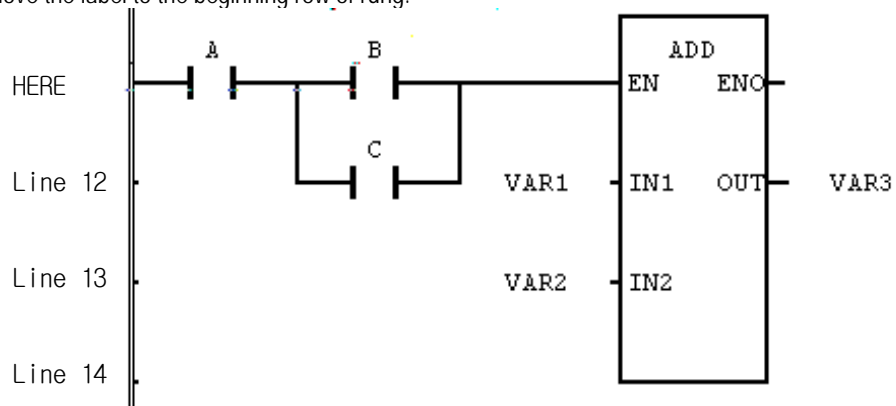

◆ Cannot find the label.


It is the case that the using label is not selected in JMP(C,N), SCAL(C,N) command.

◆ Label name has been defined in duplicate.


Label name cannot be declared twice in the program.

◆ Label is not assigned!

There is no the label name in the jump and subroutine call command.

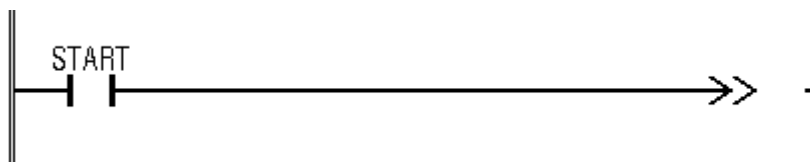

You should label the label name to the jump or the subroutine call command.

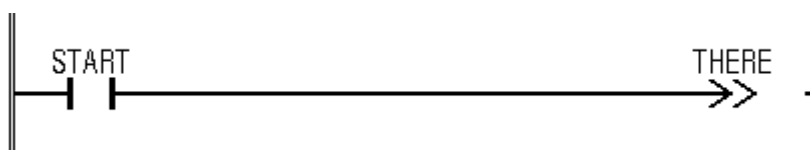

◆ Invalid resource name


You should input correct resource name for the identifier.
(See also 3.1.1. Identifier command manual)

- ◆ Resource name is duplicated.
It is the case that resource name is duplicated. You should give a different name.
- ◆ Impossible to step over at the last step.
You should declare a break point to the position you want and debug.
- ◆ Nothing can be inserted on the last column.
It causes when you insert cells right beside the last column, a right power line. You cannot insert cells at the left to the right power line
- ◆ Can't proceed the stepover at the last row of the program
It is impossible to proceed with step-over at the last row of the program. You can go to the next break point by using debug run or step out.
- ◆ Step-over cannot be done at the last line(rung) of LD program.
It is the case of trying to step over at the end of the program block, or function/function block. Step over cannot be continued, therefore try to debug run or debug run after declaration of a break point to the position you want.
- ◆ Abnormal Memory Module
After confirmation of fitting with memory module, reboot the PLC.
If you have an error again, replace the memory module.
- ◆ Memory error
It is Memory allocation error to write input/output information from PLC to the computer.
- ◆ Insufficient memory
The memory is not enough; you should shut down other application and restart, or expand the memory.
- ◆ Memory Allocation Error
It is the case that it cannot be continued to running the tasking due to a lacking of memory. You should shut down other program that is being used and try again.
- ◆ Insufficient memory
It is the case that it cannot use memory because main memory is not enough of other program except GMWIN is using a large memory. Shut down applications and try again or expand a memory.
- ◆ Insufficient memory
The memory allocation has an error due to a lacking of memory in a using computer. Expand memory by shutting down programs that is not using now and try again.
- ◆ Insufficient memory. Use after expand the memory.
It causes when system memory is not enough. Try again after shutting down other applications.
- ◆ Too many characters in the instruction.
It is the case that the characters of inputted command are too long. The maximum command character has 17 characters.
- ◆ Cannot open down-load information file. Make project and write it to PLC
Select COMFILE-MAKE in menu to make executive file, and select ONLINE-CONNECT+WRITE+RUN+MONITOR START in meny.
- ◆ Variables to be monitored are too many. Use user selction variables.
It is the case that there are so many bundles of selected program instance variables that it cannot monitor. You should decrease the variable that you want to select.

- ◆ **Module type Inconsistent Error**
It is the case that a declared module in the parameter and an installed module of PLC do not match. Download again after modification of module in wrong slot, restart, and parameter.
- ◆ **Array number over**
You should input numbers in the range of declared array.
- ◆ **Invalid array range**
You should input numbers in the range in the range of declared array.
- ◆ **Invalid array index**
It is the case that there is no a selected array element. Confirm the size of array and input again.
- ◆ **Array name cannot exceed 8 characters.**
You should declare array name within 8 characters.
- ◆ **Invalid array size.**
The array size can be designated from 1 to 2048.
- ◆ **The specified value is over the permitted range.**
It is the case that INDEXES that is inputted in monitor dialog box of array variable exceed the range(0-2047).
You should designate it below the maximum INDEX size.
- ◆ **Data type of array element is mismatched.**
LD, ST command is effective for only Arrays having the same element number.
- ◆ **Array index is out of range.**
It is the case that array number is bigger than element number of declared array.
- ◆ **Variable used as an array index should be INT type.**
Variable that indicates array element must be INT type.
- ◆ **Battery Error**
Change the battery.
- ◆ **Integer is not within the permitted range.**
It causes the inputted integer is out of range.
Input the correct integer again.
- ◆ **Select a base number.**
It is the case that base number to monitor is not inputted.
You should input the base number.
- ◆ **Invalid base number**
It is the case that there is no base number to select. Confirm the base number and input again.
- ◆ **Variable<variable name> not found. Make project and write it to PLC.**
It is the case that you cannot monitor by program to be changed.. Select COMPILE-MAKE in menu to make executive file, and select ONLINE-CONNECT+WRITE+RUN+ MONITOR START in menu.
- ◆ **Variable <variable name> "type is not BOOL.**
If you declare action or transition as variable, it should be BOOL type.

- ◆ Variable <variable name> already exists.
It is the case that there is same variable name that was declared before.
- ◆ Invalid value.
You should input value of proper variable type.
See also data type.
- ◆ Select a variable which is the object of break.
It is the case that variable to execute variable break is not declared in variable break dialog box.
- ◆ Variable name is too long.
It is the case that variable name is too long.
The maximum size of general variable is 18 characters except special variable.
- ◆ This variable name exists already in a different attribute.
It causes when variable name in block is already used in window that you want to add during block paste. You should change variable name of variable in block.
- ◆ The variable name can't be allowed.
The case inputted variable name is not correct.
It is the case that you use special character(@,\$,etc) that cannot be used. Or insert blank in string. Also it causes length of string is over 18 characters.
- ◆ Wrong name is given.
It is the case that you input the incorrect variable name. You should input a proper identifier(See also 3.1.1. Identifier command manual)
- ◆ Variable name is incorrect.
It is the case that you input the incorrect variable name. You should input a proper identifier(See also 3.1.1. Identifier command manual).
- ◆ The variable type is not ARRAY
It causes when variable of different type is inputted to window in which array variable type is inputted.
- ◆ Not defined as a BOOL variable
It causes when you insert variable of different type at the position in which only BOOL variable can be inputted
- ◆ Variable type is not BOOL
The time chart can monitor only variable of BOOL type
- ◆ Cannot jump to label<label name> across simultaneous branch (See also SFC jump of command manual)

- ◆ Branch number over 8

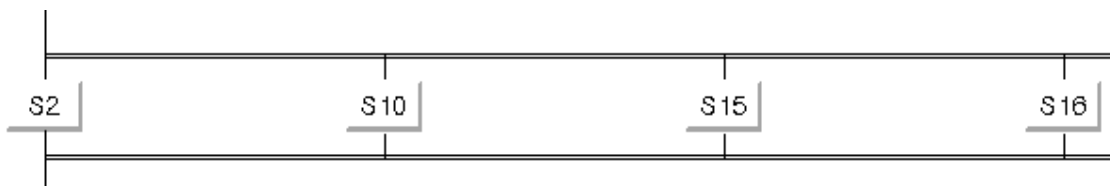


Delete the branch.


- ◆ Branch end point cannot be located at block end..
It can be at the end of block that only step, transition, label, and jumping.

- ◆ Branch start point cannot be located at block start.
It can be at the beginning of block that only step, transition, labeled.


- ◆ Step must be exist between branches
As you can see, it is the case that there is only transition between branch.
You should insert step between branch.

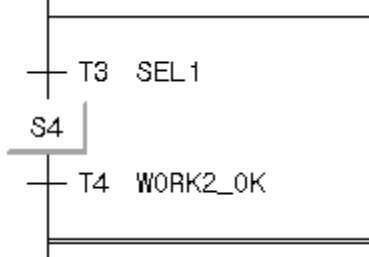

- ◆ Cannot appoint the breakpoint
The label or comment row cannot designate breakpoint.
- ◆ Wrong number of scan break is defined.
It is the case that you input not integer but string in breaks frequency. Input integer value.
- ◆ Can't find the breaded source file.
It causes when there is no the source file in case of executing step over in the state of beginning of debugging.
- ◆ If the start of block is step or label, the end should be transition.

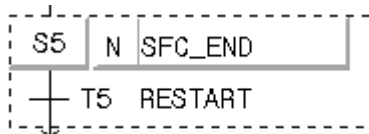

- ◆ If the start of block is transition or jump, the end should be step.

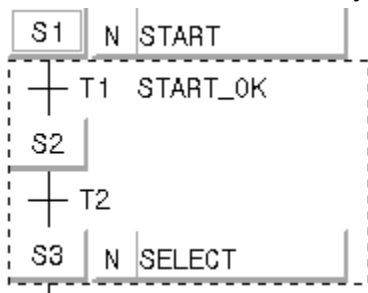

- ◆ Abnormal Shutdown Error
On executing the program, it indicates there is an error of calculating of reserved data area in case of executing warm start by starting to calculate program from the beginning when you reboot the PLC after program is paused by unusual shut down of power.
- ◆ Input variable, which is not used, is found.
It is the case that you declared input variable but you did not use it.
- ◆ Local variable, which is not used, is found.
It is the case that you declared local variable, but you did not use it.

- ◆ Output variable, which is not used, is found.
It is the case that you declared output variable but you did not use it.
- ◆ There is no label to delete.
It is the case that you try to delete cell in first column that is being empty.
- ◆ Can't find Function Block in the included libraries.
It is the case that you do not insert library file which function block is included to project, though, you declared instance of function block. Insert library file.
- ◆ Constant range over detected.
You should give constant value that is proper to range of data type of Current result when you want to give constant, which is integer, real number as the object.
- ◆ Cannot create a new program file<program filename>
It is the case that there is program file, sheikh has already existed, or insufficient disk area, or other application is using it.
- ◆ You can call subroutine Label, which is after the END operator.
You should call the only label that locates after END when you use subroutine cal command
- ◆ END operator is needed when using subroutine call.
If you want to use a call subroutine command(ex. SCAL, etc) then you should distinguish main program and subroutine by using END.
- ◆ This variable is not defined.
It is the case that used the object is not declared as variable. Declare variable in variable declaration dialog box.
- ◆ Variables selected are too many to monitor
Delete selected variable by using delete key
- ◆ There is nothing to move in the selected cell.
It causes when it is empty that the cell which you try to move.
- ◆ Selected library file is not a<GM*> Library.(*is PLC type)
The version of selected library file does not match with GMWIN.
- ◆ Selected library file is not a LGIS GMWIN library file.
The version of selected library file does not match. Confirm library-modified date.
- ◆ Cannot open selected library file.
Confirm there is selected library file in the library directory that is selected in option.
- ◆ This object file is not a LGIS GMWIN object file.
The version of selected object file does not match with GMWIN. Compile source file to GMWIN again.
- ◆ Label can't be placed on a rung comment area.
You cannot designate label in comment.
- ◆ Variable break may not be performed because the program instance which contains that variable is disabled by Task Enabling
It is the case that program instance to which declared variable belongs is prohibited by task executive condition when you declare variable break.


◆ The selected block is too large

Deletion of block is possible only.

It causes that selected block is too large to copy. Though you cannot copy it, you can delete selected block.

◆ Short circuit error

It is short circuit.

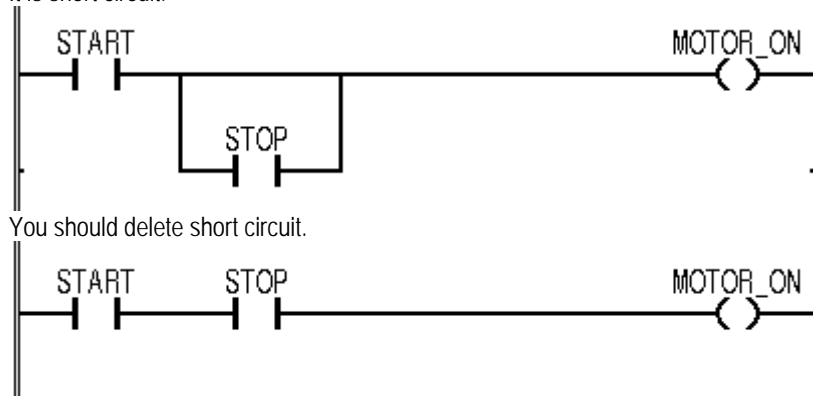

You should delete short circuit.

◆ Scan Watchdog Error

On execution, it is the cases that scan time of program exceeds the scan delay watch time that is designated by parameter, Modify parameter or program by confirming scan delay watch time that is designated by parameter, then re-download and execute it again.

◆ Wrong number of scan is given.

It is the case that frequency of scan is designated incorrectly when you designate scan break. You should designate frequency of scan between 1 to 65535.

◆ Stack area short

It is a case of the function holds an internal variable too much. Limit is 256 bytes.

◆ Stack overflow error

It causes when stack of the program is out of range while program is executing. Modify the program, re-download then execute it again.

◆ STRING variables should be allocated at the address of multiple of 4.

If you assign user define memory with the declaration of string variable, you should assign it to address of 4'multiple.

◆ Invalid string size.

The maximum size of string variable is 30 characters.

◆ Invalid string size.

The maximum size of string variable is 30 characters.

◆ String constant cannot exceed 16 letters.

The maximum size of string variable is 30 characters but when you use integer on program, you can use integer below 16 characters.

◆ String size overflow.



The string is fixed at maximum 30 characters, maximum 32 byte on memory.

◆ STRING variables should be addressed at multiple of 4 when directly assigned.


You should give a direct address to address of 4'multiple because each string needs 32 byte memory.

- ◆ **STRING initial value should start and end with apostrophe(")**
The string integer should begin/end with quotation mark(")
- ◆ **Slot-ID Error**
Reboot the PLC.
- ◆ **Wrong exponent expression.**
It is the case that incorrect expression of exponential function is found in real number expression.
- ◆ **Wrong time literal expression.**
It is the case that expression of time /date which begins with D#, T#, DT# is wrong.
- ◆ **Can't open the serial port.**
Confirm there is other program which is using serial port or not, and if there is no then restart GMWIN.
- ◆ **Abnormal Serial I/O chip**
Reboot the PLC
- ◆ **Cannot open programs because of lack of system resource. Close rarely used windows and try to open again.**
It is the case that it cannot open program file due to lacking of resource. Close other application or close program window that is not necessary in GMWIN, and execute again.
- ◆ **System Self-diagnose is Information/Abnormal CPU**
Reboot the PLC
- ◆ **Down-load file is not same as one of PLC. \nWrite it to PLC!**
Select COMFILE-MAKE in menu to make executive file and Select ONLINE-CONNECT+WRITE+RUN+MONITOR START in menu.
- ◆ **Cannot expand source file.**
It is the case that program source file is damaged.
- ◆ **Abnormal Access path**
It is the cases that download are failed because error happens on program download. You should download again.
- ◆ **Access path name error in a access variable <Access variable name>**
It is the case that it cannot be found that global variable or direct variable in access path that is declared as <access variable name>
(See also access variable editing)
- ◆ **Access variable memory error**
It is the case that memory is insufficient. Save all files, which is working, execute again after closing other application.
- ◆ **Wrong access variable name is given.**
It is the case that you input wrong access variable name. You should input a proper identifier
(See also 3.1.1. Identifier command manual)
- ◆ **Cannot define access variables any more.**
The maximum size of access variable which can be declared is 128 in case of GM1~3, 64 in case of GM4~5.

- ◆ Action<action name> is used in SFC program. You can't delete this action.
If you want to delete this action, you should not use it in SFC program.
- ◆ Action name used in transition.
You should designate it to different name.
- ◆ Invalid action name
It is the case that you input wrong action name. You should input a proper identifier
(See also 3.1.1. Identifier command manual)
- ◆ You cannot use TRANS variable in action program.
It is the case that you select TRANS variable in variable dialog box of action program.
You cannot use TRANS variable in action program.
- ◆ Wrong initial value for an array element found.
It is the case that you give wrong string when you give initial array value or integer value is out of range.
- ◆ Blanking is error.
It is the case that you do not designate blank with integer value on print.
- ◆ Invalid margin.
You should input number in left blank.
- ◆ Blanking is error
Confirm maximum range of blank, input again.
- ◆ Junk connection error
The power line does not connect.

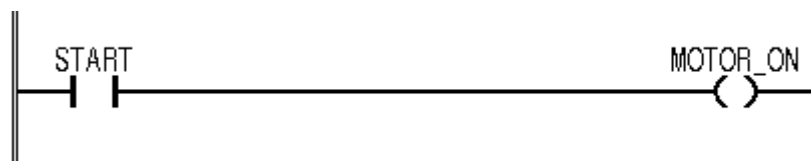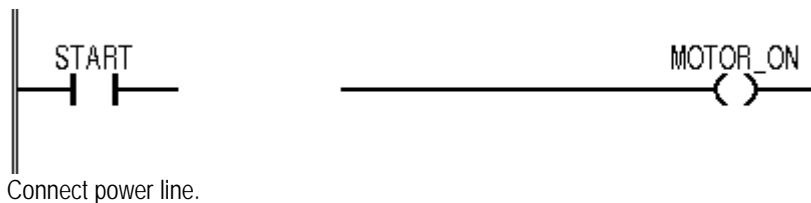


- ◆ Logic error!
You make circuit that is not good for logic.

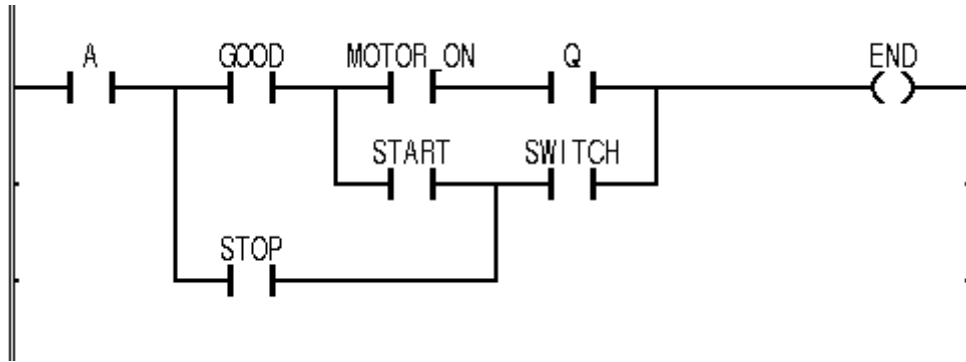

Use circuit that is good for logic.

◆ Logic branch is too deep!

The operating branch exceeds 16 levels in the operation that uses the contact.

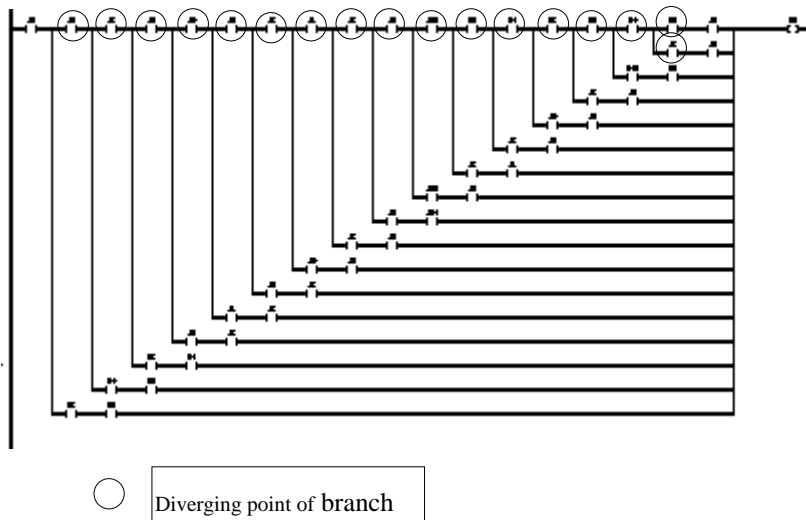

You must modify the operating branch not to exceed 16 levels in the operation that uses the contact.

◆ Right bracket(')')is expected.

It is the case that number of left bracket is too many

◆ There exist contacts on the right.

It causes when there is other command at up or right of position when you insert coil/ The coil can be inserted when it is empty that the right area of the position where you want to insert the coil.

◆ Object file open error

Confirm object file in declared directory on option.

◆ Cannot write to object file.

It is the case that there is no the file in the path, when you make new object file, other program is using it, and the disk capacity is insufficient.

◆ There needs no operand.

It is the case that you input operand to command that does not need operand. You should delete the operand.

◆ Operand Syntax Error

It is reserved word that is used in GMWIN or not a grammatical word.


- ◆ Needed a full input of operand.
It is the case that the input of operand is more needed. You should input more operands.
- ◆ An operand name is omitted
It causes when you input nothing in variable text box of variable dialog box.
- ◆ This move operation is not possible.
It causes when you cannot insert the object to this position when you try to move the cell. If you want to move cell then sufficient area needs in the position, you cannot move it to the first column.
- ◆ External Device Error
It notifies that slight error of peripheral device happens by user program on operating.
- ◆ External Device Fatal Error
It notifies that fatal error of peripheral device happens by user program on operating. Fix peripheral device and operate again.
- ◆ Wrong interrupt input number is given.
The maximum size of external contact input number is 0 to 15 in case of GM1~2, 0 to 7 in case of GM3~5
- ◆ Interrupt task number over. Maximum number: N
You should reduce number by deleting external contact task in task definition of project window.
- ◆ Task number for Interrupt task is between 32 to 47 for GM1~3, 32 to 39 for GM4~5.
The task number which is assign to external contact task is 32 to 47 in case of GM1~3, 32 to 39 in case of GM4~5.
(See also 4.4.7 –task definition in GMWIN user guide)
- ◆ Left bracket '(' is expected.
It is the case that number of right bracket is too many
- ◆ Left margin should be an integer between 0 to 30(mm)
It is the case that it is not integer value of 0~30 mm that left blank on print.
- ◆ Memory allocation error!
It is failed to take necessary memory on LD compile.
You should take sufficient memory by shut down the window application program to execute except GMWIN.
- ◆ If you send the array, which contained an unfixed number of elements, to the parameter, it may be possible access a wrong position when you execute a program. So please use with care.
It is warning, when designated an input parameter of array at the ANY_ARRAY which was stated as VAR_IN_OUT, the value is changeable because of the memory position is out of a range of array it was designated as input is accessed under the internal code of function.
- ◆ Invalid position or other range error
It causes when you insert command in wrong position. It is the case that command cannot be inserted in selected position
It happens when you double click mouse in the position in which variable cannot be inserted.
- ◆ Invalid IP address.
Confirm IP address of PLC, which you want to connect, connect again.
- ◆ There is no response.
Connect the power of PLC again.
- ◆ Search string not found
It is the case that selected string at find/change is not used in IL.

- ◆ This is Rung Comment area
It causes when you insert the command to the area of rung comment.
Command cannot be inserted in the rung comment area.
- ◆ Cannot select this variable type.
The data break for this variable type cannot be declared in present PLC model.
- ◆ This string is a keyword.
It is the case that inputted string is being used for reserved character.
- ◆ Cannot add this action name because it has been used already.
You should add it as different name because it has been used already.
- ◆ This object file is not compiled for PLC.
Load source file and compile again.
- ◆ This object file is compiled as a Program Block.
The selected file is program block. Select function/function block source program again.
- ◆ This element can't be deleted.
You cannot delete SFC element that is incorrect for SFC composition.
- ◆ This element can't be inserted at this position.
It causes when you insert SFC element in position that is incorrect for SFC composition.
- ◆ Break points cannot be set here.
You cannot declare break point at the position.
Cannot declare break point on contacts, coils, and first column of function/function block and END.
- ◆ Input contacts cannot be placed here.
It causes when you cannot insert input in selected position.
- ◆ Insertion of empty cell is not possible at this location.
It causes when row that you try to insert cell is full. It is the case that you cannot insert cell any more.
- ◆ This transition name already exists.
You should add it as another name because it has been used already.
- ◆ This file is not a GMWIN source file.
It is the case that selected file is not GMWIN source file or damaged source file.
- ◆ This project was not made an execution file. Make project and write it to PLC!
Select COMPILE-MAKE in menu to make executive file, and select ONLINE-CONNECT+WRITE+RUN+MONITOR START in menu.
- ◆ This Flag/Keyword is READ_ONLY.(Cannot Store)
It is the case that you use command like ST, S, and R in read only flag/keyword or output of function/function block.
- ◆ Cannot write value to this flag.
You cannot change the value because this flag is read only.
- ◆ This flag is not used with given PLC type.
Confirm it can be used or not, because available flag is different in PLC CPU mode or GM1-5.


- ◆ END can't be placed in this line.
It causes when you input END again in line that you already inputted it.
You can input end in empty line.
- ◆ Cannot assign break point at this element.
In SFC, You can declare break point only in step.
- ◆ Library file already exists.
The additional library file has already existed in library.
- ◆ F/FB name you want to insert is already exists is the library.
The additional library file has already existed in library.
- ◆ This interrupt input number is already used in another task.
It is the case that external contact input number is duplicated.
- ◆ This task number is already used.
It is the case that there is same variable name that was declared before.
- ◆ Variable already exists.
It the case that there is same accesses variable name which was declared before.
- ◆ Access variable <access variable name> already exists.
It is the case that there is same accesses variable name which was declared before.
- ◆ Instance name is already defined.
It is case that there is same task name that was declared before.
- ◆ This Task name is already defined.
It is the case that there is same task name that was defined before.
- ◆ Same data type as previous result expected.
You should use same data type object that is same to current result that is previous operating result according to operator model in IL.
- ◆ I/O contact Error
It is the case that one of module that is composes of duality is error, replace module of wrong slot, and executes again.

- ◆ FB instance string cannot exceed 8 characters.
The instance name cannot exceed eight characters.
Because general variable that includes instance name and input/output variable name is used in program.
- ◆ Wrong instance name is given.
It is the case that you input wrong instance name. You should input correct instance name for the identifier.
(See also 3.1.1. Identifier command manual)
- ◆ Wrong instance name is given.
You should input correct instance name for the identifier.
(See also 3.1.1. Identifier command manual)
- ◆ Multiple use for interrupt number N.
Confirm tasks, which are declared as number N, are over two. Do not duplicate it.
- ◆ Abnormal Interrupt Controller
Connect power again.
- ◆ This keyword is READ_ONLY.
It is the case that you cannot use read-only flag as object of ST command.
- ◆ Temporary variables can't be made!
It failed to create temporary variable on LD compile.
Temporary variable is created in TEMP directory. So it causes when capacity of TEMP directory is insufficient or disk has an error. If capacity is not enough then you should delete unnecessary file and if disk has an error then replace the disk.
- ◆ Temporary file read/seek error!
It is failed to create/read temporary variable on LD compile.
Temporary variable is created in TEMP directory. So it causes when capacity of TEMP directory is insufficient or disk has an error. If capacity is not enough then you should delete unnecessary file and if disk has an error then replace the disk.
- ◆ Cannot Edit/Delete In/Out variables here.
It is possible input/output variable to be modified/deleted in input/output variable dialog box.
- ◆ Invalid line number.
You should input the input value, which is proper to range.
- ◆ You must not exceed the maximum input number.
It causes when you define number of input variable more than maximum number when you insert the function that is varied to number of input variable
- ◆ Cannot Store(or STN, S, R) to variables defined as VAR_INPUT.
You cannot use command (ex: ST, S, R, etc) that input the value in input variable.
- ◆ Inputted value is not number.
The inputted number is not number.
- ◆ There must be at least two input variables.
You should define over two numbers of input variable at least when you insert the function that is varied to number of input variable,
Because of the first variable in function should be EN.
- ◆ The specified variable type is not allowed for this Fun/FB.
It causes when inputted variable type is differ from input/output variable type of function/function block.


- ◆ The type of inputted variable is not matched with F/FB.
It is the case that the type of inputted variable is not matched with the I/O variable of F/FB.
- ◆ Cannot find such variable type.
It is the case that date type of the object does not match operator when you give an object as variable.
- ◆ Power flow must be only one!
There are several power lines in one rung.

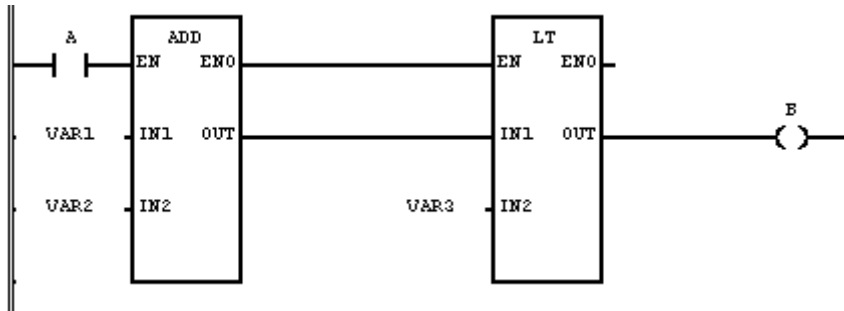

You should one power line in one rung and input the other variable directly.

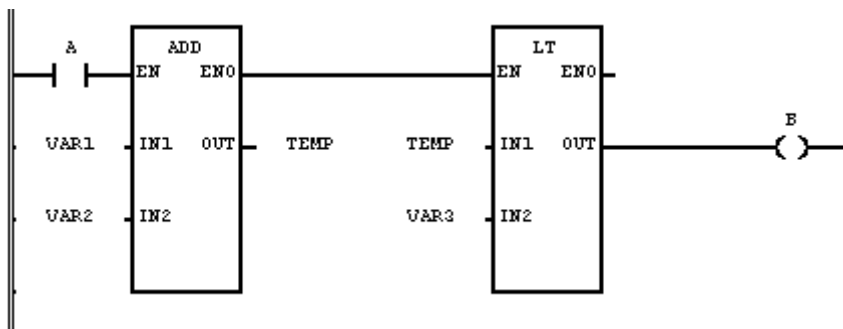


- ◆ Jump %s position error.
The jump should be next to the transition where is at end of the selected branch of SFC program.

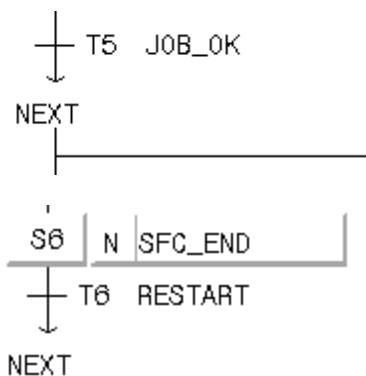


- ◆ Label %s not found.
There is no label name<label name>, which is same to jump name. Confirm that there is label name, which is same to jump name.

◆ Contact can't placed in this area!

The contact should be where variable or integer must be.

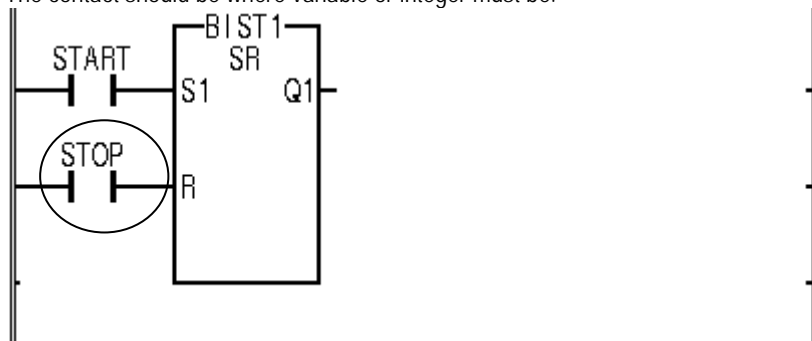

Attach the variable or integer.

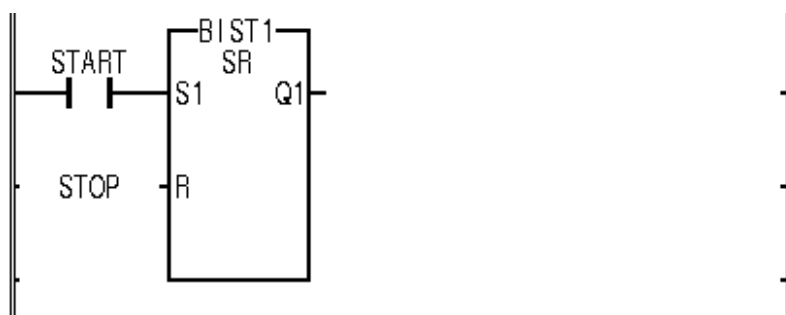

◆ You must enter an integer

It causes when you input real number value(ex:9.43)in input window to input integer.

◆ Interval task number over. Maximum number : N.

You should reduce number by deleting interval task in task definition of project window.

◆ Task number for interval task in between 0 to 31.

(See also 4.4.7 task definition in GMWIN user guide)

◆ Wrong interval value is given.

It is the case that you give wrong interval time in case of selection the interval task.
(See also 4.4.7 task definition in GMWIN user guide).

◆ Given value string is wrong or over-ranged.

It is the cases that string of given variable value are wrong of out of range on selecting variable value break.

◆ A variable of same name as given function name is already defined.

It is the case that there is same variable name among the variables, which is declared already when you try to modify function name to another in program property dialog box.

◆ Warning : time constant unit under 10 ms will be ignored.

On definition of interval task, time value of below 10ms unit is negligible.

◆ Warning : Included library file library filename's not for GM? So that F/FBs in that library will not be shown and used.

It is the case that you change PLC type for project or insert library that is not matched in proper type.

- ◆ Warning : Included library file library filename's not for PLC so that F/FBs in that library will not be shown and used.

It is the case that the object file's version to be insert is not matched to library.

- ◆ Duplicated label. Found.

You cannot declare label repeatedly.

- ◆ Abnormal Extended Power

It causes when PLC operation is abnormal because power module of the increasing base has an error.

- ◆ You cannot delete this item.

You cannot delete the item besides program and resource(over two) in project item.

- ◆ There is no selected string.

You should input the name in name text box.

- ◆ The margin given is too large.

It causes when blank is too large in printer setup.
Decrease blank and input again.

- ◆ Too large margin

You should input the number that is below 30 in left blank.

- ◆ Invalid direct address.

You should modify direct variable name.
(See. Also 3.3.1 variable expression in command manual)

- ◆ Wrong directly represented variable expression found.

It is the case that it is wrong that direct variable expression starting with %I, %Q, %M.

- ◆ Wrong directly assigned memory allocation is found.

It is the cases that direct variable allocation in case that you select user definition of memory allocation.(See also 3.3.1 variable expression in command manual)

- ◆ Invalid direct variable range.

Two variable must be same area(same base, same slot), same type.

Wrong example	Correct example	Note
%I0.1.0-%I0.2.10	%I0.1.0-%I0.1.10	Different slot number
%MW10-%MB12	%MW10-%MB12	Different type

- ◆ Not found.

It causes when there is no anymore object(string or command) to be found.

- ◆ Contacts cannot be placed in the first column.

It causes when you insert the cell at the first column. You cannot insert cell at the first column.

- ◆ Wrong initial value is assigned.

It is case that the initial value designation is wrong.

- ◆ Initial value is not correctly given.

It is the case that initial value is wrong.
(See also 3.1.1. Identifier command manual)

◆ Initial value is out of range.

It is the case that initial value is out of range which data type allow when you declare initial value.

◆ You must not exceed the maximum line number.

It is the case that you input number which is bigger than maximum in find dialog box.


You should value that is below the number which is bigger than maximum number that exists in file.

◆ Enter or select on e object file to add.

Confirm that object fill is in the directory on option.

◆ Output branch is too deep!

It is over 16 levels that branch that uses the output good command(coil, function, function block, jump, return, subroutine call)

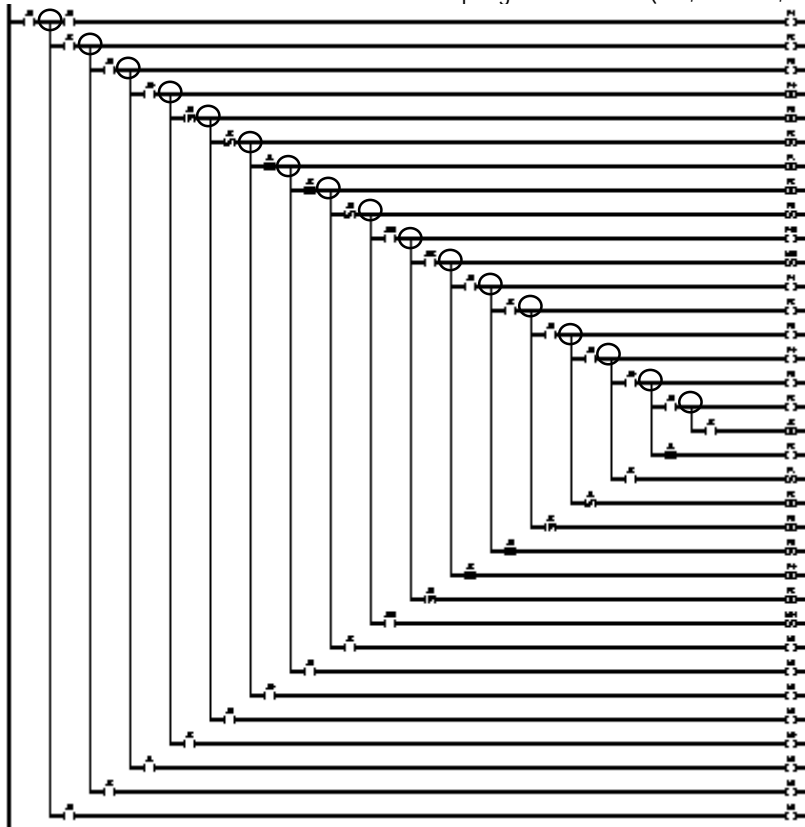

○ Branch point

You should make the branch that uses the output good command not to be over 16 level.

◆ Configuration global variable are declared too many.Maximum 4K Byte.

You should delete unnecessary configuration global variable.

◆ Size of configuration global variables cannot exceed 4K byte.

Total size of the configuration global variable cannot exceed 4K Byte

You should delete unnecessary configuration global variable.

◆ File related error happened while compiling.

It is case that you have difficulty to deal with file because there is no file that is used temporarily and is used in open/close object file or disk capacity is insufficient on compiling.

◆ Maybe there'll be some errors in compiling.


It is the case that you cancel without declaring same name for duplicated variable on attach operating. Error can be caused on compiling because over two types for same variable name are needed.

◆ There is nothing to compile.


It is the case that there is no content to compile because of nothing in program content.

◆ Coil can't be placed in this area.

The coil is in the position, which the variable or the integer or the integer connects to.

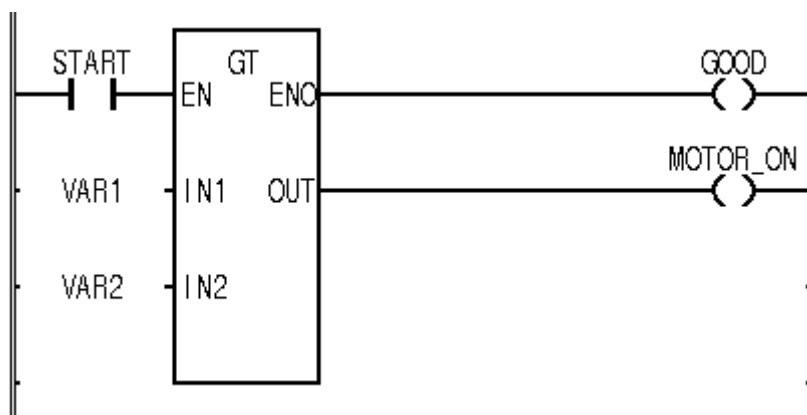

Attach the variable or integer.

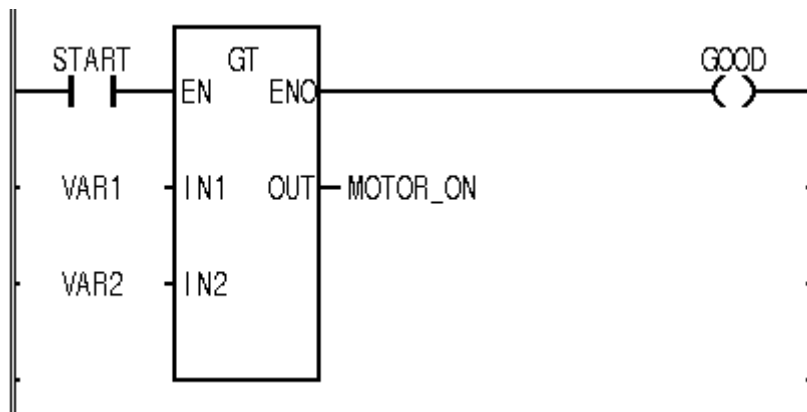

◆ Cannot Store from/to different size of array.

LD, ST command is effective for only Arrays having the same element number.

◆ Maybe out of memory(from clipboard routines)

It causes when memory cannot be taken because memory is not enough in the system on dealing with clipboard

◆ Keyword cannot be used as an identifier.

The reserved word(variable name etc) cannot use as identifier.
(See. Also 3.3.3. reserved variable and 3.4 reserved word in command manual)

◆ Invalid time value.

You should designate time value if you select the action qualifier among D, L, SD, SL, and DS, confirm that time value is

imputed correctly or not.

(See also 3.1.2.3.1 proceeding time in command manual)

◆ Task <task name> not bound.

It is the case that used task name is not defined in program definition

Confirm task name of task and program definition in project.

◆ Bool type variable of task ,task name. Not found.

It is the case that the used variable is not declared as the global variable in case that you select the single task executive condition.

Confirm ruse variable name and global variable name in task definition.

◆ Task memory error.

It is the case that memory is not enough. Shut down other application after saving all files that is executing, and restart.

◆ Wrong task number is given.

You should give proper task number according to kind of task.

(See also 4.4.7 task definition in GMWIN user guide)

◆ Wrong task name is given.

It is case that you input wrong task name. You should input correct task name for the identifier.

(See also 3.1.1. Identifier command manual)

◆ Task Conflict Error

It causes when same task is demanded to execute repeatedly on use program operation.

◆ Communication Internal Error

Disconnect the connection of PLC and GMWIN and connect again.

◆ Composition of Communication Module Error

It is occurred when installed Communication Module more than 4 units or 8 units included Computer Communication Module.

◆ Communication Error

Communication error is occurred for bring a data from PLC

◆ Transition <transition name> is used. You can't delete this transition.

If you want to delete this transition you should not use it in SFC program.

◆ Transition <transition name> has no program.

You should make executive condition program in transition.

◆ Invalid transition name

It is the case that you input wrong transition name. You should input correct transition name for the identifier.

(See also 3.1.1 Identifier command manual)

◆ S/C Module Interface Error

It is the case that data of special/communication module do not access normally on operating, so replace module of wrong slot and execute again.

◆ Cannot save file<file name>to the disk.


It is the case that other program is using on saving project file or there is insufficient capacity to save shut down other program or enlarge save capacity of disk.

◆ Can't print %s.


It is the case that there is no printer or file to print does not exists.

- ◆ Cannot open file(S).
When you open/make the file, it is the case that it does not exist in the path or other program is using it or disk capacity is insufficient.
- ◆ Cannot find function<function name>
This function is not in selected library.
- ◆ Can't find FB<function block name> in the included libraries.
It is the case that it is not in library life that function/function block which is used in the program. Register this function/function block in library file and insert this library to project.
- ◆ Line insertion is impossible in case the I/Os of FUN/FB have some contacts.
If you try to insert line in the line that function/function block exists then you should insert the cell without changing the function/function block.
However, in case that contact is connected to input/output of function/function block, you cannot insert line.
- ◆ FB(Function block name) is not existed in inserted libraries.
It is the case that it is not inserted that library file which has function block that is assigned in library insert list of present project.
In certain case, some CPU has not this function block, so please attend using function block.
- ◆ Wrong function block name is given.
It is the case that wrong function block name is given in program property dialog box or in case of making new program.
- ◆ Function block instance name cannot exceed eight characters.
The function block instance name should be declared below eight characters.
- ◆ Not defined as a FB instance
It causes when function block instance name has been using as other general variable.
- ◆ Function block instance name cannot have initial value.
It is the case that you declare initial value with defining data type as function block instance.
- ◆ Cannot edit/delete function block independently.
Function block output is the item that is added/deleted automatically on declaration or deletion of function block. So function block output cannot modify/delete.
- ◆ Function Block should have at least 1 BOOL variable at the input & output parameter each and the first I/O variable must be BOOL.
Function block has to have over one BOOL variable in input/output for LD power line and first input/output variable must be BOOL.
- ◆ Cannot add object of function block to the library of function.
Library does not match the form of program. Extension of library in function block is nFB.
(N is PLC type. For example : if library file name is USER and PLC is GM4 then user.4fb)
- ◆ Not defined as a FB instance.
It is the case that object of CAL(C,N) command is not declared as function block instance.
- ◆ The first input variable of Function Block should be BOOL typed.
First input variable of function block must be BOOL type because of power line in LD.
- ◆ The first output variable of Function Block should be BOOL typed.
First output variable of function block must be BOOL type because of power line in LD.

- ◆ Cannot assign a value to an output variable of function block.
You should give variable that will take the operating result to the output of function block.
- ◆ The appropriate F/FB library does not exist. Base type may not match the FB library.
It is the case that wrong function name is given in program property dialog box or in case of making new program.
- ◆ Wrong function name is given.
It is the case that wrong function name is given in program property dialog box or in case of making new program.
- ◆ There is no function/function block library.
It causes when it is not inserted in project that library that includes using function/function block.
- ◆ Contacts cannot be placed in Fun/FB area.
It causes when you try to insert contact in function/function block area.
- ◆ Adjacent line in Fun/FB area.
Other command cannot be inserted in function/function block.
- ◆ You should use operand that is proper to data type of function/function block input parameter.
You should input object of proper data type to the input parameter on inputting function/function block input parameter.
- ◆ Input of F/FB is not assigned!
You do not declare input value(Variable, integer) to input of the function/function block.

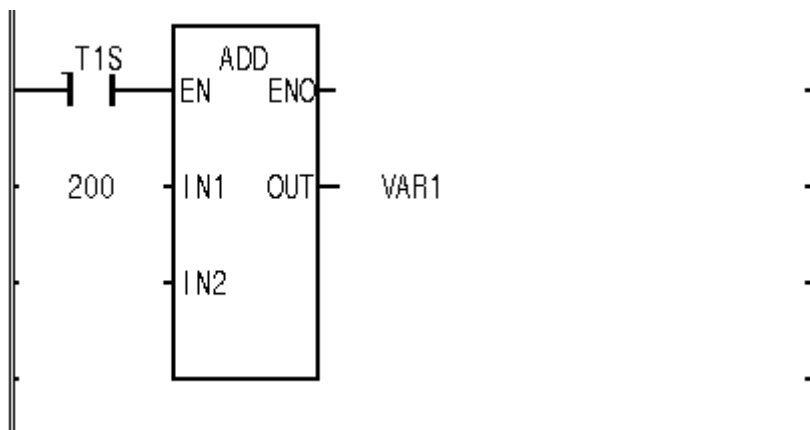

You should connect power line, integer, variable, etc to input of the function/function block

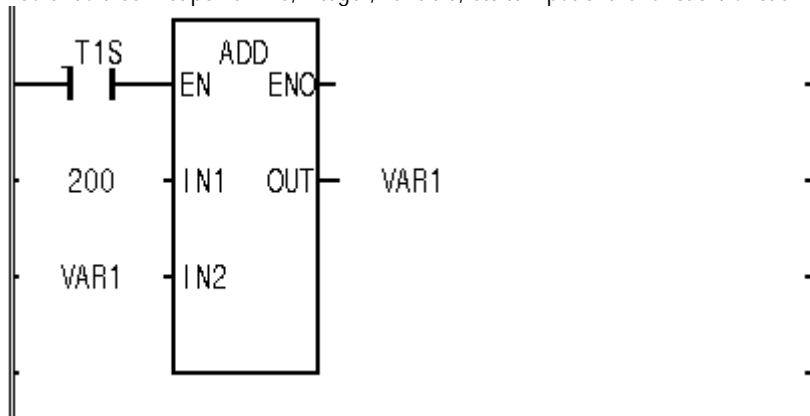

- ◆ Do you wish to delete the Fun/FBs along the way
It is the case that function/function block is in deleted line.
If you want to delete function/function block also then push YES button, otherwise push NO button. If you want to cancel cell deletion then push CANCEL button.
- ◆ Cannot use directly represented variable expression as an operand in F/FB.
You cannot use direct variable expression in function/function block.
- ◆ Function/function block should have at least one input & output parameter each.
Function/function block has to have over one variable in input/output. You can add input/output variable in input/output variable dialog box.
- ◆ Function/function block cannot call itself.
It is the case that function/function block calls itself, so function/function block cannot call itself because it makes infinite loop or computer to be unstable.
- ◆ Function/function block "<F/FB name>" you want to include is already loaded from library file named "<library filename>". Do you want to replace it with one in "<library filename>"?
It is the message whether you change previous file or not when it is loaded from other library that object file that has same name one that is loaded before.
- ◆ You cannot load F/FB named "<F/FB name>" in <library filename> because it is a standard F/FB which is already loaded.
After changing the name of user definition function/function block, insert it to the library again.
- ◆ Insertion is not possible because Fun/FB too close.
It is the case that you try to delete cell between function/function block.
It causes when capacity to write input/output variable is not enough after deleting cell.
- ◆ There's not enough space for Fun/FB.
It is the case that function/function block cannot be inserted because free space is insufficient in the position in which function/function block is inserted.
When you insert function/function block, you should it in the blank that has 3 lines at least for input/output variable space.
- ◆ String constants cannot be used in Function
It is the case that you use string integer in function.
- ◆ Cannot declare or call any Function Block in Function.
It is the case that you declare/call function block in function.
- ◆ Functions can't be changed to other elements.
It is the case that you select function as command to replace in dialog box.
You cannot use REPLACE command for the function.
- ◆ Function cannot have VAR_OUTPUT variable.
Function cannot have VAR_OUTPUT variable.
- ◆ Cannot assign an initial value to a local variable of Function.
There is no variable, which can declare initial value in function.
- ◆ Cannot add function object to Function Block Library.
The library does not match the form of program to add.
Extension of library in function block is nFU.


(N is PLC type. For example, if library file name is USER and PLC is GM\$ then USER.4FU).

◆ Return value of function is indeterminate.


It is the case that the function does not work, because you do not insert the output value.
If you input the value to the output value in case of the function, the function works.

◆ Output of function is not assigned!

Nothing is connected to the function output.

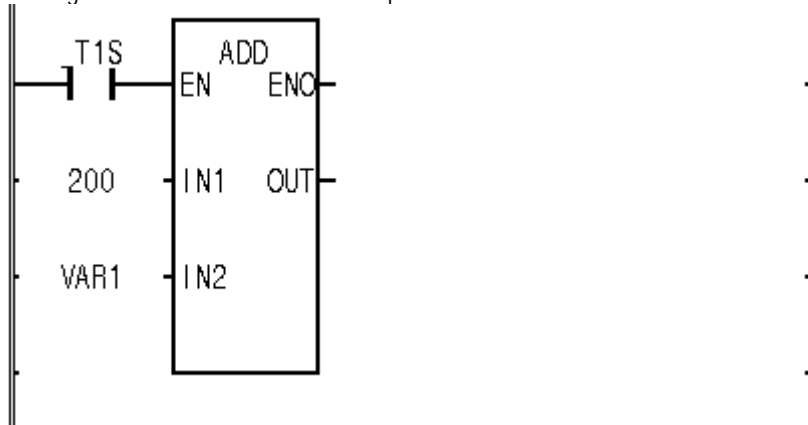

Declare variable to function output or connect to power line(case of BOOL output).

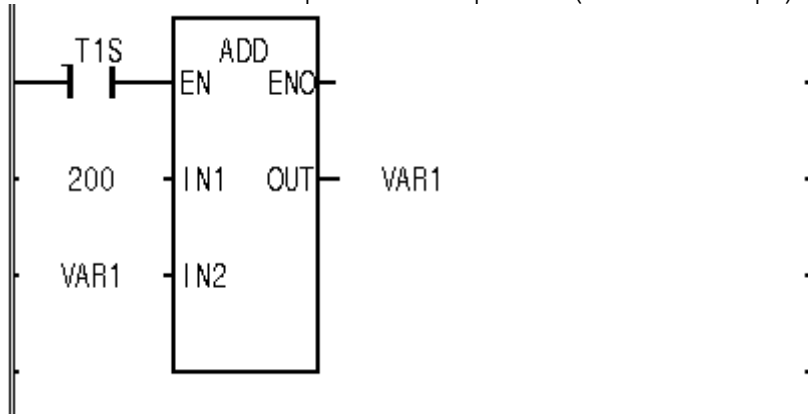

◆ You cannot edit standard library files. Select again.

The general library cannot be used by modifying it with user's will. You can select only user definition library to executing modification, deletion.

◆ Standard libraries are already loaded.

The general library was already loaded in memory.

◆ Fuse Cutoff Error

It causes the case that FUSE break of FUSE attach module on operating. Replace the fuse of wrong slot and execute again.

◆ Program<program name> is not defined in project, Make project and write it to plc.

Select COMFILE-MAKE in menu to make executive file, and
Select ONLINE-CONNECT+WRITE+RUN+MONITOR START in menu.

◆ Program <program name> not found.

It causes when there is no program file that is relevant to used program name in program definition. Confirm that there is program name. SRC in relevant directory.

◆ Program Error

It is the case that program to operate is abnormal. Download again.

◆ Program Abnormal

It is the case of an abnormal is occurred in download a program. Download again.

◆ Program define number over.

Delete program definition.

You declare too many program definition of project.

You should reduce program definition by Selecting the project-project item delete in menu.

◆ Program Code Error

It is the case that command that cannot be decoded is met on user program operating.

Download program again and execute again.

◆ Program size over error. Total: M bytes, Used N bytes

It is the case that program size (N bytes) is used in project exceeds capable program size(M bytes) is used in project exceeds capable program size (M bytes) in present PLC.

Change PLC model to upper model or reduce program size.

◆ Program file;<program file name>' has already opened.

It is the case that you declare filename which has already opened when you make new project or program.

◆ Program file'<program file name>' has already existed.

It is the case that you declare file name which has already existed when you make new project or program.

◆ Program file name does not defined.

It is the case that you are not surd that you open which item because program file name of this item does not defined when you open the window by double click the program item in project.

Give program file name.

◆ Abnormal Program RAM

Reboot the PLC.

◆ FB<FB name> not found in a library!

IT is the case that function block which is used in program is not in library file.

Resister relevant function block to library file and insert this library to project.

◆ Condense rate for printing is out of range. Check condense range.

It causes when compression proportion is out of range.

◆ Flay array index is out of range.


You have not to use it over defined array number in case of using flag element that is defined as array.

◆ There needs no operand.


It is the case that function (for example ABS) that does not need object in IL. You should delete the object.

◆ Operand is not assigned!

Variable or integer is not at contact or coil.

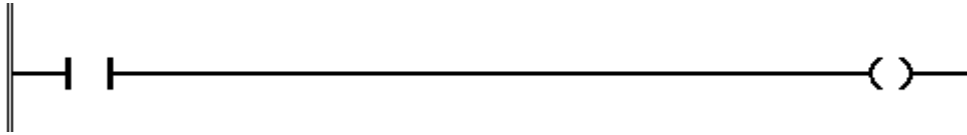


 You should attach variable or integer value at used contact or coil.




- ◆ Too many characters in the operand.
The case characters if inputted object is too many. You should input the object below 16 characters.
- ◆ Wrong data type of operand.
It is the case that data type of the object does not match the operator or data type of Current Result in IL.
- ◆ Wrong operand string found.
It is the case that the string that is inputted as the object does not match the word form.
- ◆ Cannot find the function/function block.
Confirm that library is in the library that is designated in option.
- ◆ Hot Restart Backup Error.
On operating the program, it causes when hot-restart time is exceeded at the stoppage of electric current is restored, or the restart is operated by parameter **because** it is impossible to operate the hot-restart operating. Because operating data, which is needed in hot-restart operating, was not done backup.
- ◆ Wrong line number is designated.
It is the case that you input wrong line number in FIND. You should input it within last line number.

- ◆ One of ANY__NUM data type expected.
The object (for example: SINT, INT, DINT, REAL, etc), which has a general concept of number, has to be given for the operator (for example: ADD, SUB, MUL, DIV, etc), which has a general concept of the number. Especially, it causes when you give the object (for example: WORD type) to ADD.
- ◆ Variable used as an array index should be INT type.
It causes when the variable type of the ARRAY index is not INT.
You should use INT variable type in ARRAY index.
- ◆ Not ARRAY type variable.
You cannot select array number because present selected variable type is not ARRAY type.
- ◆ Variable used as an array index is not defined.
It is the case that INT variable B, which expresses array element such as A [B] , is not declared in declaration part.
You should declare B as INT variable in declaration part.
- ◆ Boolean array variables should be allocated at the address of multiple of 8.
When you declare an address in GLOFAPLC, beginning position of BOOL array should be at the beginning of 8-bit unit, Therefore, if you declare user definition position at the position, which is not 8's multiple such as %MX7 then you will have an error message.
- ◆ BOOL type operand expected.
The object of BOOL type should be given in LD contact or BOOL output.
- ◆ Cannot use this kind of Operators to CONSTANT variables.
It is the case that you use the command that can change the value of ST for variable that is declared as CONSTANT.
- ◆ CPU Error
On the composition of the multi-CPU, it is the case that other CPU error causes. You should modify this CPU error and execute again.
- ◆ CPU Combination Error
Reboot the PLC.
- ◆ The data of DATE AND TIME is indicated in 1/100 second.
When you input the value of DATE AND TIME, you cannot input the 1/1000 second unit.
- ◆ END operator is duplicated.
You cannot use over one END command in one program or one action/transition.
- ◆ ENO can't be assigned to variable!
Variable or integer is connected at the ENO output of the function.

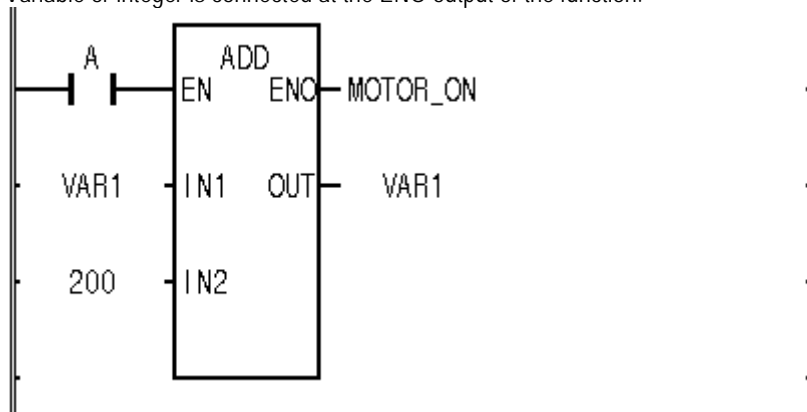


Only power line can be connected at the ENO output of the function. Connect it at power line or nothing.

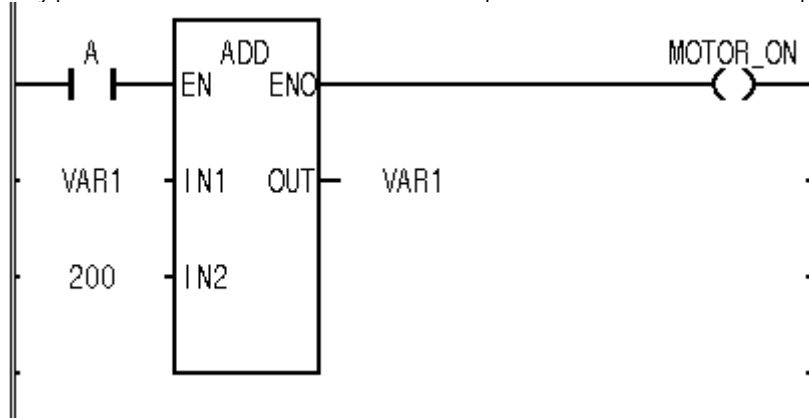

- ◆ Not defined as a FB instance.
It is the case that the inputted string as the instance name is not the string that is declared as FB instance.
- ◆ This FB output variable type isn't an array.
The type of the FB output variable must be array. Confirm output variable type of FB and input again.
- ◆ A kind of FB is not matched.
The inputted instance name is the string that is declared as different kind of FB instance.
- ◆ This variable is not a FB output.
It must be output variable of FB. Confirm FB and input again.
- ◆ Abnormal Gate Array.
Reboot the PLC.
- ◆ Can't use a GLOFA F net or GLOFAM net.
After confirming the communication module for PC is fitted in PC, if it is, then you should confirm that the declaration of port and base address is correct or not, and connect again.
- ◆ This data type is not supported for GM3-GM5
Data type (for example: REAL, LREAL, LINT) applies only for GM1-2, therefore GM3-5 are not used.
- ◆ There is no I/O card in that base. Select a base number again.
You cannot monitor because I/O module is not in selected base.
- ◆ I/O Module Read/Write Error
On operating, it is the case that the data of I/O module is not accessed normally. Therefore, replace the module of wrong slot and execute again.
- ◆ Abnormal I/O parameter
It is the case that the download does not succeed because of error on downloading the program. Download again.
- ◆ Can't Monitor according to the order of I/O parameter.
Can't monitor because the present I/O is not matched with I/O parameter in project window.
- ◆ It is not an IL operator.
It is not IL operator that is used in GMWIN.

- ◆ Number of lines exceeds IL capacity.
IL cannot edit over 32000 lines.
- ◆ Can't load LD cursors.
- ◆ M area can be monitored at only RES area.
Declare direct variable area with resource.
- ◆ Abnormal O/S Watchdog
It is the case that the watchdog error is caused by Os program.
- ◆ Abnormal O/s RAM
Reboot the PLC.
- ◆ Abnormal O/S ROM
Reboot the PLC.
- ◆ Q area cannot be monitored at Configuration area.
The direct variable area cannot be designated as configuration
- ◆ Cannot define RETAIN or CONSTANT the variable located at %I or %Q area.
You cannot declare RETAIN, CONSTANT besides variable that is allocated in automatic variable or %M area.
- ◆ Cannot assign initial value to the variable located at %I or %Q area.
You cannot give initial value besides variable that is allocated in automatic variable or %M rear.
- ◆ Cannot assign direct address to this array variable which is out of I/Q address range.
In care that array is the variable which is allocated in I, Q area by user definition, if total size exceeds maximum of the I,Q area from the beginning then error can be caused by memory overlap. Therefore, make array size small.
- ◆ RTC Data Error
Confirm that there is an error of battery or not, if it is not then set the time in GMWIN.
- ◆ Abnormal RTC
Set the time again.
- ◆ You cannot insert SFC element any more.
You cannot insert new element any more because it exceeds the size of SFC program.
- ◆ Impossible to delete SFC transition variable.
User cannot delete/modify SFC transition variable because it is inserted in GMWIN automatically.
- ◆ Impossible to modify SFC transition variable.
User cannot delete/modify SFC transition variable because it is inserted in GMWIN automatically.

◆ Tn has no name

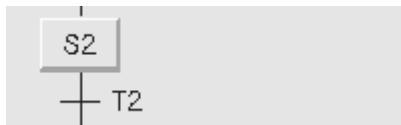

- 1) You should input the transition name and make operating condition program.
Or Designate BOOL type variable in the transition
Input it by selecting toolbox-zoom in menu or double-click at the position of transition.



- ◆ VAR_IN_OUT variables cannot be placed the first item of INPUT/INOUT variable list.
VAR_IN_OUT variable cannot be at the beginning of the input/output variable of function block, because of the power line on LD.
- ◆ A constant cannot be given to VAR_IN_OUT parameter.
VAR_IN_OUT variable cannot have integer value because its address is transferred to parameter.
(Special characters)
- ◆ BOOL type operator is needed before 'C' or 'N' specifier.
The object of the BOOL data type must be used in the variable that has suffix of 'C', 'N'(ex. CALC, CALN, JMPN, JPN).
- ◆ Cannot Store to directly represented or assigned input variables(%I).
You cannot use command that substitute the value in the input direct variable area.
- ◆ Transition name : Output transition condition to variable TRANS.
You have to output the condition to TRANS variable in transition program.
Ex) LD %I0.0.0
ST TRANS
- ◆ Cannot print %s!
It is the case that you cannot print selected file.
It causes when printer has a problem.
- ◆ <Program name> : <direct variable name> is not in M area. Set M area of basic parameters to large size
Because selected variable as <direct variable name> exceeds declared M area, You should declare the variable again(ex: %MW20000%MW20), make it large with selecting the project-option in menu(ex: 4K Byte 8K Byte).
- ◆ Program <program name> : Variable <variable name> is not declared or type mismatched in Global Variables.
Declare the variable <variable name>, which is declared by VAR_EXTERN in <program name>, or if it is declared already, then confirm that the type is same.
(See also configuration global variable edit(in case of GM! And multi resource) or resource global variable edit).
- ◆ Cannot give duration of task which is under 10 ms.
If you give the task operating interval that is smaller than 10ms on the definition of interval task, then it is negligible. Therefore, you should give time interval, which is over 10ms.

Appendix B. GMWIN Glossary

Access Variable	A variable name to be used in a local station during the communication between PLC's Function Block.
Action	A block having a program to performed actually in SFC language.
Allocation	If a user declares only the variable name and type in the declaration of the symbolic variable, the memory area is allocated automatically by GMWIN (←→User defined memory allocation).
Array	An aggregate that consists of data objects, with identical attributes.
Automatic memory allocation	Refer to User defined memory allocation.
Automatic Variable	A variable to be allocated as the automatic memory.(←→User defined variable, Direct variable)
(B) Branch	To divide control flow in SFC language. There are parallel branch and selective branch.
Break point	The position at Which a user wants to stop when debugging a program element.
(C) Cell	A unit of LD component element such as contact, coil, function, and function block in LD language.
Cold Restart	One of restart modes. Erase all data to 0 except the variable that is declared for the initial value.
Communication Port	Serial port in PC to connect GMWIN and GLOFA-GM.
Compile	To translate PLC program, which user creates, into the machine language equivalent or an intermediate form, which a user can execute in PLC.
Configuration	An language element corresponding to one PLC system as software model in GMWIN.
Configuration Global Variable	A variable that can be used in common between resources (between CPUs in the multi CPU system). It includes the symbolic variable that is declared as the configuration global. It has one memory area on the coordinator module. It is used after declaring symbolic variable with a same name for 'VAR__EXTERNAL' when a user creates each program block.
(D) Data type	Features if data that represents the declared variable SINT, INT, DINT, USINT, UNET, ULINT, REAL, LREAL, TIME, DATE, TIME__OF__DAY, STRING, BOOL, BYTE, WORD, DWORD, LWORD, DATE__AND__TIME.
Direct Variable	A variable to use without the declaration of the name/dato type. I,Q, and M area. (%1*0.02, %MD1234, etc)
(E) Ethernet	A network technology is applied the upper network for observation and control of system. And to send/receive data using TCP/IP (Transmission Control Protocol/Internet Protocol) as the upper protocol and selecting CSMA/CD (Carrier sense Multiple Access with Collision Detection) as the media access formula.
(F) Flassh Memory	An auxiliary memory module to be used in GLOFA PLC.

Forced I/O setup	A method to have a constant value without a card of the execution of program by taking the special value in I/O forcibly.
Function	Program organization unit to output operating results for the input without storing the results into the internal area. (Arithmetic operation, Comparison, etc)
Function Block	Program organization unit to store the operating results into the internal area. (Timer, Counter, etc)
(G) Global variable	A variable which can be used in all resources within a project or all programs within a resource(←→local variable).
GLOFA Fnet	It is the lowest network which connects a control device or instrumentation device, and the standard which adapted three layers among seven layers of OSI. Three layers consist of Physical layer, which consists of H2 (1Mbps electric), H1 (31.23Kbps electric), Optical, Wireless, etc, Data link layer, which adapted Scheduled and Circulated token bus, and Application layer, which take the responsibility of the application role, This standard, additionally, adapted User's layer.
GLOFA Mnet	It is a comparable concept with the Full Map, which contained the entire concept and function of seven layers of OSI. GLOFA Mnet consists of the lower two layers (Physical layer, Data Link layer), one layer of application and user's layer for user and interface to meet the needs of the factory automatization including confidence, quick response and real time control.
(H) High Speed link	A communication method to send/receive the data through GLOFA Mnet, Fnet modules
Hot Restart	One of the restart modes. It reconstructs all data and performed elements to the previous status and performs them.
(I) Input/Output Variable	A variable to define input/output of the function/function block.
Instance	Assembled data to use in the program blocks or the function blocks.
Interrupt	During the normal execution of the program, If a user want to execute any program firstly after stopping the normal program, a user can define the program as Interrupt execution.
(L) Library	Files to assemble several functions or function blocks as an executive code form.
Library Manager	A manager to execute the function of addition/deletion of a function or a function blocks in the Library.
Local Connect	A method to connect to RS-232C port in CPU module when a user tries to download, monitor or debug a program.(←→Remote connect)
Local Variable	A variable to be effective only in one program element. It is declared in each program element and used in the program of the declared program element. It is impossible to read/write in the other program element.(←→ Global variable)
(M) Make	A work to compile program blocks in a project and to make One executive file, which PLC can execute, by linking each object files.
Mnet	Refer to the GLOFA Mnet.

Appendix B. GMWIN Glossary

Modem	A device that you can send/receive a data at a long distance between PC installed GMWIN and GLOFA-PLC mounted computer link module by using a PSTN. In addition, this device alter a digital signal \longleftrightarrow a analog signal to a smoothly communication between long distance computers.
Module	A component having an independent function. Adding it up onto baseboard uses it. (CPU module, power module, input/output module, special function module, communication module, etc).
(O) Operator	A symbol that represents the action to be performed in an operation. LD, ST, AND, OR, CAL, JUMP, EQ, etc.
(P) Partial compile	To compile a modified part only when you modify a part of one program element which finished compiling before. You can reduce a compile time. (\longleftrightarrow Total compile)
PLC System	The system that has the complete configuration element for the PLC operating and can control the target system by the user program.
Power Flow	Suppose that the power is supplied on the left power line and this power is transferred to the right by the logic in LD language.
Priority	A number to designate which task is executed firstly when several tasks to execute wait. '0' is a highest priority.
Program	A code to execute PLC, which is reserved in the program area of the PLC. (Program block, Function and Function block) On the other hand, it is called program organization unit.
Program organization unit	Function and Function block or Program block
Project	It is the executive element of GMWIN that includes a program that is needed in PLC that composes one PLC system, a system configuration, parameter and communication.
(Q) Qualifier	The executive condition of the action in SFC language.
(R) Remote connect	A method to connect to CPU module that user tries to download, monitor or debug a program through GLOFA Fnet, Mnet with connecting GMWIN to RS-232c port of other CPU module.
Resource	Original meaning is resources, but indicate one CPU module in GLOFA PLC. It has the saving area of a program and data.
Resource Global variable	A common variable among several programs in Resource. It includes the symbolic variable that is declared as a direct variable and resource global. It has one memory area physically. A direct variable can be used in each program and you can use a symbolic variable after you declare variable kinds of symbolic variable having s same name as 'VAR __EXTERNAL' when making each program block.
Restart Mode	An operating start mode for the user's program at the restart of PLC system. There are three restart modes, which are cold, warm and hot.

Rung	Program element that does not have a line to connect to up/down in LD language.
(S) Scan	Total time to execute input refresh, user program execution, and output refresh in Run mode.
Scan Break	The debug method to stop PLC after the designated scan amount is execute.
Scan Watchdog Time	The longest scan time to be permitted by PLC. If scan time is longer than designate one, scan watchdog error is occurred and PLC stops the execution.
Step	The control element of the procedure in SFC language.
Step In	Step In is execute in where you want to call for debugging the function/function block or action/transition.
Step Out	To return to the calling program element from function/function block or action/transition when the function/function block or action/transition is debugged.
Step Over	To execute debugging for the program element as a minimum unit of the language.
(T) Task	An execution control element for starting condition of the program. (Interval task, Single task, Interrupt task and Scan task)
Task Program	Program containing the execution control element as Task.
Total compile	To compile one program element from beginning to end. (←→ Partial compile)
Transition	The condition to perform the next step in SFC language.
(U) Upload Program	A program that is compressed to store the program, which a user created, in PLC. You can call the upload program in PLC by using 'Open From PLC' function in Project menu of GMWIN.
User defined memory allocation	A method to designate memory area to be matched as the direct variable form when a user declares a variable on the declaration of a symbolic variable.
(V) Variable Break	A debugging method to stop the execution when the value of specified variable meets the designated value of function to read/write the variable is executed.
(W) Warm Restart	One of the restart mode. It erases all data to 0. except variable that is declared for retention of the pervious value and the initial value.

Appendix C. Structure of GMWIN Menu

A Structure of GMWIN Menu is as follows.

