

IP3496\_906Y\_QG\_Eng\_USA\_03\_110523.indd

nd	removing	the	memory	card (	(MicroSD card	١.

must unmount the storage card (Settings\SD card, USB Mass Storage & phone storage\Unmount SD card) from the cellphone first, to prevent corrupting or damaging the storage

is fully charged, disconnect your charger from the plug; switch off advantage of Google's location service, then touch Next. Wi-Fi, GPS, Bluetooth or background-running applications when

 
#### 1.2.2 Power on your cellphone

Hold down the End key until the cellphone powers on. It will take some Hold down the End key from the Home screen until the cellphone seconds before the screen lights up. options appear, select Power off.

### Set up your cellphone for the first time

The first time you power on the cellphone, you are required to touch You can bring all the items (applications, shortcuts, folders and widgets) Touch and Hold the Android logo to begin and then sign into your Google account to you love or use most frequently to your home screen for quick access. her on the second second





Read the setup information on the screen.

• Set up the date and time then touch Next

4.1 Adding a contact

accounts

star will turn gold in color).

gold star on contact details screen

Touch Finish setup.

### This initial set up can be skipped and enabled via Settings Accounts & sync.

In power on screen without SIM card inserted, you can also connect Touch & hold the small dots or application tab can display the thumbnails to a Wi-Fi network to sign into your Google account and to use some of extended home screen, touch the thumbnail to open it. Press Back key or touch an empty area to return to Home screen. You can customize the features number of home screens by settings (Press Menu key on Home screen)

Application availability depends on country and operator

press Menu key from contacts list screen and touch New contact

4.2 Importing and exporting contacts

SIM card, Import from SD card or Export to SD card.

check box, then press Menu key and touch OK to confirm.

touch Import/Export, then select Import from SIM card, Export to

To import/export a single contact from/to SIM card, touch the contact you

want to import/export, then press Menu key and touch OK to confirm.

To import/export all contacts from/to SIM card, mark Select all contacts

Synchronizing contacts in multiple

Touch and hold a contact, then, touch Add to favorites. Or touch a

contact to view details then touch to add the contact to favorites (the

Select Remove from favorites on the contact's option menu or touch

accounts, depending on the applications installed on your cellphone.



To access this feature, touch Application tab from Home screen, then added. From Contacts screen, press Menu key to open contacts list option menu, select Messaging.

> All messages you receive or send out can only be saved in phone 5.2 Adjust message settings memory. To consult messages stored in SIM card, press Menu key from Messaging screen, then touch Settings\Manage SIM You can adjust a set of message settings. From Messaging application messages.

# Write message

On message list screen, touch New message to write text/multimedia and multimedia message.

recipients, touch Type to compose bar to enter the text of the message. the management.

An SMS of more than 160 characters will be charged as several Multimedia message settings SMS. Specific letters (accent) will also increase the size of the Pressing the right mark to green, you can request a delivery report and



To access an application, touch it with your finger

To enter the available options for an item, touch and hold the item. For example, select a contact in Contacts, touch and hold this contact, options list will then appear on screen

#### Drag Touch and Drag down to open notification

Touch

Place your finger on the screen to drag an object to another location. Slide/Swipe

# ouch 0 to enter text search screen.

Slide the screen to scroll up and down the applications, images, web pages... at your convenien

Flick	G-€→
Similar to	wiping, but flicking makes it move quicker.

<u>Rotate</u>		l

Automatically change the screen orientation from portrait to landscape by turning the cellphone leftward to have a better screen view.

## 1.3.2 Status bar

From status bar you can view both phone status (to the right side) and Home screen is provided in an extended format to allow more space for notification information (to the left side). When the status bar is full, "G" icon adding applications, shortcuts etc. Slide the Home screen horizontally left will appear, touch to display hidden icons. You can touch twice an empty and right to get a complete view of the Home screen. Small dots at the area on the Home screen to hide/show the Status bar.

5	GPRS connected	G	Speakerphone is on
5	GPRS in use	ßıl	Roaming
Ð	GPRS is disabled	11	No signal
Ę	EDGE connected		No SIM card installed
Ę,	EDGE in use		Vibrate mode
5	EDGE is disabled	٩×	Ringer is silenced
•1]	Connected to a Wi-Fi network	1 H	Cellphone microphone is mute
*	Bluetooth is on		Battery is very low
*	Connected to a Bluetooth device		Battery is low
<u>م</u> ا	Airplane mode		Battery is partially drained
ପ୍ର	Alarm is set		Battery is full
al	Signal strength	C	Battery is charging
	GPS is on	Q	Headset connected
۲	Receiving location data from GPS		

tatus icon

# Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, slides and ounds to other compatible mobiles and e-mail addresses.

video, audio, slides, etc.) are attached or Subject or email addresses IMAP email accounts in your cellphone.

screen, press Menu key and touch Settings.

#### Storage settings

To manage messages quantities limit per conversation of text message

#### Text message settings

You can request a delivery report for each message you send while the Enter cellphone number of the recipient on To bar or touch 💽 to add mark is green. Messages stored on SIM card can be delete or copy by • Enter the account name and display name in outgoing emails.

SMS, this may cause multiple SMS to be sent to your recipient. read report for each message you send, automatically retrieve messages. To create and send emails You also can set the maximum message size.

# Email .....

An SMS will be converted to MMS automatically when media files (image, Besides your Gmail account, you can also set-up external POP3 or

To access this function, touch Application tab from Home screen, ther select Email

An email wizard will guide you through the steps to set-up an email account

 Enter the email address and password of the account you want to set-up.

- · Touch Next. If the account you entered is not provided by your service provider in the cellphone, you will be prompted to go to the email account settings screen to enter settings manually. Or you can touch Manual setup to directly enter the incoming and outgoing settings for the email account you are setting up.

# Touch Done

• To add another email account, you can press Menu key and touch Add account to create.

- Press Menu key from Inbox screen, and touch Compose.
- Enter recipient(s)'s email address in To field and if necessary, press Menu key and touch Add Cc/Bcc to include a copy or a blind copy to the message.
- Enter the subject and content of the message.
- · Press Menu key, touch Add attachment to send an attachment to the receiver.
- Finally, touch Send.
- If you do not want to send the mail right away, you can touch Save as draft or press Back key to save a copy

Sending a text message

# Contacts, data or other information can be synchronized from multiple

When finished, touch Send to send the text message.

# Touch Application tab on the Home screen, select Contacts, then You can create, edit and receive SMS and MMS with this cellphone.

1.2.3 Power off your cellphone

Press Home key to switch to Home screen

Status bai

nanel

Search bar

Touch to access Browse

Touch to open applications list

Touch to access **Call log** if you have

missed call(s), or access the tab you

Application tab

exit last time.

lower left and right of the screen indicate which screen you are viewing.

Status/Notification indicators

ouch 🛛 to enter voice search screen.

I.3 Home screen

C III @-

Settings\Sound & display).

# Getting connected.....

To connect to the internet with this cellphone, you can use GPRS HSDPA/3G networks or WI-FI whichever is most convenient

# 7.1 Connecting to the Internet

# 7.1.1 GPRS/HSDPA/3G

automatically configure network service: GPRS\_HSDPA\_or\_3G

To check the network connection you are using, press Menu key o Home screen, then touch Settings/Wireless & networks/Mobile networks\Network operators or Access Point Names.

## 7.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your cellphone is within range of a wireless network.Wi-Fi can be used on cellphone even • Open the Notifications panel and touch USB connected. without a SIM card inserted

# To turn Wi-Fi on and connect to a wireless network

- Press Menu key from Home screen.
- Touch Settings\Wireless & networks\Wi-Fi
- Mark/Unmark the checkbox to turn on/off Wi-Fi
- networks is displayed in the Wi-Fi networks section.

Touch a Wi-Fi network to connect. If the network you selected is MicroSD card: secured, you are required to enter a password or other credentials • Touch Application tab from Home screen to open the applications list (you may contact network operator for details). When finished, touch

### 7.2 Browser

Using Browser, you can enjoy surfing the Web

To access this function, touch Application tab from Home screen, then touch Browser.



Note: This equipment has been tested and found to comply with the limits for be Wi Fi a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio equency energy and, if not installed and used in accordance with the structions, may cause harmful interference to radio communications However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receive nect the equipment into an outlet on a circuit different from that to which the receiver is connected.

nsult the dealer or an experienced radio/ TV technician for help. Changes or modifications not expressly approved by the party responsible for npliance could void the user's authority to operate the equipment. or the receiver devices associated with the operation of a licensed radio service (e.g. FM broadcast), they bear the following statement: his device complies with Part 15 of the FCC Rules. Operation is subject to

he condition that this device does not cause harmful interference. For other devices, they bear the following statement

the following two conditions: ) this device may not cause harmful interference

1) this device must accept any interference received, including interference according to availability on our server; www.alcatelonetouch.com that may cause undesired operation

other than against your ear. In such circumstances the device will be complia with the guidelines when used with headset or usb data cable. If you are using Protection against theft (1) another accessory ensure that whatever product is used is free of any metal and that it positions the cellphone at least 1.5 cm away from the body.

# LICENCES microSD Logo is a trademark.

The Bluetooth word mark and logos are owned by the Bluetooth SIG. Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under licens Other trademarks and trade names are those of their respective owners.

### one touch 906Y Bluetooth QD ID B017760

TouchPal<sup>™</sup> and CooTek<sup>™</sup> are trademarks of Shangha TouchPal HanXiang (CooTek)Information Technology Co., Ltd. and/or its Affiliates.

# To go to a web page

On Browser screen touch the LIBL box at the top enter the address of the web page, then touch Go.

# More options on the web page

Touch the Menu, you have more options, such as, add new window, add Receive bookmark, select text, and so on. Press Menu key from Home scree

# 7.3 Connecting to a computer via USB

The first time you turn on your cellphone with SIM card inserted it will. With the LISB cable you can transfer media files and other files between your cellphone's MicroSD card and the computer

# To connect your cellphone to the computer

- Use the USB cable that came with your cellphone to connect the cellphone to a USB port on your computer. You will receive a notification that the USB is connected
- Touch **Mount** in the dialog that opens to confirm that you want to
- transfer files. To disconnect:
- Unmount the microSD card on your computer
- Open the Notifications panel and touch Turn off USB storage
- Touch Wi-Fi settings The detailed information of detected Wi-Fi Touch Turn off in the dialog that opens.
  - To locate data you have transferred or downloaded in your
  - Touch FileManager
  - All data you have downloaded are stored in FileManager, where you can view media files (videos, photos, music and others), rename files, install ations into your cellphone, etc.

#### The Wi-Fi Logo is a certification mark of the Wi-Fi Disclaime

here may be certain differences between the user manual description and the cellphone's operation, depending on the software release of your Limited Warranty cellphone or specific operator services.

Locate my location

Touch Settings\Location & security\Use GPS satellites

When open Maps, you can find your location:

Mark the checkbox

TCT Mobile shall not be held legally responsible for such differences, if any, TCT Mobile North America LTD warrants to the original retail purchaser may not apply to you. or for their potential consequences, which responsibility shall be borne of this wireless device, that should this product or part thereof during by the operator exclusively.

Q

Use your cellphone's GPS satellites receiver to pinpoint your location

within an accuracy as close as several meters ("street level") The process

This cellphone enables you to back up your cellphone's settings to Google

only need 20-40 seconds to identify your precise location

Data backup.

Servers, with your Google Accourt

naterials in this handset are provided "as is", without warranty of any directly related to the defect(s). kind, whether express or implied, including the implied warranties of merchantability, fitness for a particular purpose or use/third party Batteries, power adapters, and other accessories sold as in box items are section. You can also contact us by e-mail to ask any questions you may for the inability or failure of the Third Party Materials to operate on this is device compliance with are 1.5 of the FCC Rules. Operation is subject to handset or in interaction with any other devices of the purchaser. To The limited warranty for your wireless device will be voided if any of the card, memory cards, or any other accessories such as the power adapter. • Press the ()-> Press the () the maximum extent permitted by law, TCT Mobile disclaims all liability following conditions occur: The may cause understree operation. Your cellphone is a transceiver that operates on GSM/HSDPA/GPRS in use, by whatever means, or attempts to use, such Third Party Materials. Your cellphone is a transceiver that operates on GSM/HSDPA/GPRS in use, by whatever means, or attempts to use, such Third Party Materials. Your cellphone is used; snould avoid tourning it or degrading it. As mobile devices offer a range of functions, they can be used in positions quad-band (850/900/1800/1900 MHz) and UMTS (850/1900/2100 MHz). Moreover, the present Third Party Materials, Mate charge by TCT Mobile, may be subject to paid updates and upgrades in Mobile the future; TCT Mobile waives any responsibility regarding such additional • Modification or repair performed by individuals not authorized by TCT costs, which shall be borne exclusively by the purchaser. The availability of the applications may vary depending on the countries and the operators • Acts of god such as Inclement weather, lightning, power surges, fire where the handset is used; in no event shall the list of possible applications and software provided with the handsets be considered as an undertaking files, crash, high voltage, corrosion, oxidation; from TCT Mobile; it shall remain merely as information for the purchase Therefore, TCT Mobile shall not be held responsible for the lack of (IMEI); vailability of one or more applications wished for by the purchaser, as • Damage from exposure to water or other liquids, moisture, humidity ts availability depends on the country and the operator of the purchaser TCT mobile reserves the right at any time to add or remove Third Party 1aterials from its handsets without prior notice; in no event shall TCT Mobile be held responsible by the purchaser for any consequences that such removal may have on the purchaser regarding the use or attempt to

use such applications and Third Party Materials.

If you replace your cellphone, the settings you've backed up are restored onto the new cellphone the first time you sign in with your Google using GPS satellites...... Account. To activate this function

# To activate your cellphone's global positioning system (GPS) satellite • Press Menu key from Home screen

 Touch Settings\Privacy\Back up my settings Mark the checkbox

Activated this function, a wide variety of settings are backed up, including your Wi-Fi passwords bookmarks a list of the applications you've installed the words you've added to the dictionary used by the onscreen keyboard, • Track you location, yiew traffic situations, search for locations and get and most of the settings that you configure with the Settings application. If you deactivated this option, you stop backing up your settings, and any

Download more applications from Android Market



### To activate factory data reset:

Mark the checkbox

Press Menu key from Home screen

# Touch Settings\Privacy\Factory data reset

**Alcatel Mobile Phones** 

humidity, infiltration of liquids or foods, chemical products, download of

• Removal or altering of the wireless devices event labels or serial number

excessive temperatures or extreme environmental conditions, sand

· Defects in appearance, cosmetic, decorative or structural items such as

There are no express warranties, whether written, oral or implied, other

than this printed limited warranty or the mandatory warranty provided by

your jurisdiction. In no event shall TCT Mobile or any of its affiliates be

excess dust and any condition outside the operating guidelines;

of accessing the GPS satellite and setting your cellphone's precise location Cellphone reset will erase all of your personal data from internal for the first time will require up to 5 minutes. You will need to stand in a cellphone storage, including information about your Google Account, any 2. PC suite place with a clear view of the sky and avoid moving. After this, GPS will other accounts, your system and application settings, and any downloaded applications. Resetting the cellphone does not erase any system software updates you've downloaded or any files on your microSD card, such as • Contacts music or photos. If you reset the cellphone in this way, you're prompted to re-enter the same kind of information as when you first started Android.

Applications....

With this cellphone, some build-in Google applications and other third party applications are available for your convenience.

With the built-in applications, you can Communicate with friends

Exchange messages or emails with friends

- navigation information to your destination
- and more

For more information about these applications, please check user manual It allows you to organize Handset files with just a few clicks and files on airbags. To ensure that there is no problem: online: www.alcatelonetouch.com

Making the most of

# your cellphone.....

You can download software upgrade for free from the website: www

Message

The PC suite includes:

It allows you to back up contact entries so that you don't have to worry Your cellphone's software will now have the latest software. about losing, breaking, switching cellphone or changing service providers.

It frees you from painstakingly inputting text on the keypads. All of your messages are easily accessible and well-organized

liable for incidental or consequential damages of any nature whatsoever, including but not limited to commercial loss, to the full extent those **Troubleshooting...** damages can be disclaimed by law. Some states do not allow the exclusio or limitation of incidental or consequential damages, or limitation of the Before contacting the aftersales department, you are advised to follow

normal consumer usage and condition, be proven to be defective in How to obtain Support: Contact the customer care center by calling (877material or workmanship that results in product failure within the first 702-3444) or going to www.alcatelonetouch.com. We have placed many This handset may contain materials, including applications and software twelve (12) months from the date of purchase as shown on your original self-help tools that may help you to isolate the problem and eliminate the in executable or source code form, which is submitted by third parties sales receipt. Such defect(s) will be repaired or replaced (with new or need to send your wireless device in for service. In the case that your affect the performance of your cellphone. or inclusion in this handset ("Third Party Materials"). All third party rebuilt parts) at the company's option without charge for parts or labor wireless device is no longer covered by this limited warranty due to time or condition we have other options that you may utilize our out of and carry out the following checks: warranty repair options.

pplication, interoperability with other materials or applications of the also warranted against defects and workmanship that results in product To obtain hardware repairs or replacement within the terms of this • Press 😑 until the screen comes on purchaser and non-infringement of copyright. The purchaser undertakes failure within the first six (6) months period from the date of purchase as warranty, contact TCT Mobile to get an RMA number, include a copy of • Check the battery charge level that TCT Mobile has complied with all quality obligations incumbent upon shown on your original sales receipt. Such defect(s) will be repaired or the original proof of warranty coverage (e.g. original copy of the dated bill • Check the battery contacts, remove and reinstall your battery, there it as a manufacturer of mobile devices and handsets in complying with replaced (with new or rebuilt parts) and the company's option without of sale, invoice), the consumer's return address, your wireless carrier's turn your cellphone back on name, alternate daytime phone number, and email address with a complete problem description. Only ship the wireless device. Do not ship the SIM My cellphone has not responded for several minutes

You must properly package and ship the wireless device for any claims, demands, suits or actions, and more specifically - but not . Non-compliance with the instructions for use or installation, or with to the repair center. TCT Mobile is not responsible for wireless devices limited to - tort law actions, under any theory of liability, arising out of the technical and safety standards applicable in the geographical area where that do not arrive at the service center. Upon receipt, the service center My cellphone turns off by itself

will verify the warranty conditions, repair, and return your wireless device - Check that your keypad is locked when you are not using your Connection to any equipment not supplied or not recommended by TCT
 to the address provider

- the hox
- in the charger

framing and non-operative parts.

Mobile or its affiliates

General information ..... Website: www.alcatelonetouch.com

trademarks of Google Inc.

Google, the Google logo, Android, the Android

logo, Google Search, Google Maps, Gmail, YouTube

Android Market, Google latitude and Google Talk are

- Facebook: http://www.facebook.com/alcatelonetouchtrib
- Twitter: http://www.twitter.com/Alcateltribeus Hot Line Number: In the United States, call 877-702-3444 for technical

On our Internet site, you will find our FAQ (Frequently Asked Questions) Intellectual Property rights. TCT Mobile will at no stage be responsible charge for parts or labor directly related to the defect(s).

An electronic version of this user guide is available in English and other languages

our cellphone is identified by an IMEI (cellphone serial number) show


on the packaging label and in the product's memory. We recommend th

you note the number the first time you use your cellphone by entering

Contact your network operator to check service availability

your operator if your cellphone is stoler

#06# and keep it in a safe place. It may be requested by the police of

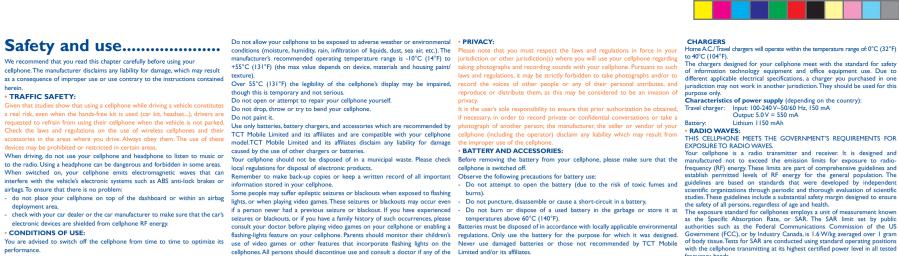

equency band This symbol on your cellphone, the battery and the accessories Although the SAR is determined at the highest certified power level, the means that these products must be taken to collection points actual SAR level of the cellphone while operating can be well below the timum value. This is because the cellphone is designed to operate a - Municipal waste disposal centers with specific bins for these multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the cellphone Before a cellphone model is ailable for sale to the public, compliance with nation tandards must be shown.

The highest SAR value for this model cellphone when tested is XX W/Kg for use at the ear and XX W/Kg for use close to the body.

- If your hands, wrists, or arms become tired or sore while playing, stop and rest These collection points are accessible free of charge. All products with this sign While there may be differences between the SAR levels of various cellphone: and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the cellphone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the andset at least 1.5 cm from the body. Use of other accessories may not

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of cellphones. If individuals are concerned, they might choose to limit their own CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN or their children's RF exposure by limiting the length of calls, or using "handsn° 193). Additional WHO information about electromagnetic fields and public health are available on the following website: http://www.who.int/peh-emf.

and is used under license by

All rights reserved

the right to alter material or technical specification without prior notice.

# Safety and use.....

deployment area.

to the device, if any,

CONDITIONS OF LISE

It allows you to easily import photos from PC or the handset and org them in different albums for better management

It allows you to insert video files from PC for playback and then upload TRAFFIC SAFETY to handset folder

It allows you to quickly search your favorites in PC, manage the ultimate Library and enjoy the easiest digital jukebox in your own mobile way Application

It allows you to import downloaded mobile applications and have them When driving do not use your cellphone and headphone to listen to music or installed into your handset upon synchronizatio

the Handset can be at where you want them to be

It allows you to synchronize the Contacts and Calendar in Outlook/ Outlook Express and handset

## Supported Operating Systems

Windows XP/Vista/Windows 7

File

Syn

# **12.2** One Touch Upgrade

Using One Touch Upgrade tool you can update your cellphone's software from your PC.

Download One Touch Upgrade from the website and install it on your PC plant, or in any potentially explosive atmosphere Launch the tool and update your cellphone by following the step by step When the cellphone is switched on, it should be kept at least 15 cm from any - Take a minimum of a 15-minute break every hour of game playing nstructions (refer to the User Guide provided together with the tool). medical device such as a pacemaker, a hearing aid or insulin pump. In particular

when using the cellphone you should hold it against the ear on the opposite side All personal information will be permanently lost following To avoid hearing impairment, answer the call before holding your cellphone to the update process. We recommend you backup your your ear. Also move the handset away from your ear while using the "hands-free" personal data using PC Suite before upgrading. option because the amplified volume might cause hearing damage.

the instructions below

You are advised to switch off the cellphone from time to time to

• You are advised to fully charge ( Avoid storing large amounts of data in your cellphone as this may

My cellphone can not switch on

Remove the battery and re-insert it, then switch the cellphone back or

Check the battery charge level

My cellphone will not charge properly

Make sure you are using an Alcatel battery and charger provided in Make sure your battery is inserted. It must be inserted before plugging

Make sure that your battery is not completely discharged; the battery

charge indicator can take several minutes • Make sure charging is carried out under normal conditions (0°C - +40°C) • Check that you have subscribed to this service with your operator When abroad, check that the electrical current is compatible

#### SIM card error Make sure the SIM card has been correctly inserted Verify with your operator that your SIM card is 3V. 1.8V compatible the old 5V SIM cards cannot be used

 Make sure the chip on your SIM card is not damaged or scratched Touch screen does not respond

Remember to abide by local authority rules of cellphone use on aircrafts.

t is recommended to have proper supervision while small children use you

When replacing the cover please note that your cellphone may contain

### Make sure your cellphone is not locked

substances that could create an allergic reaction.

My cellphone can not connect to a network

Verify the network coverage with your operator

Check with your operator that your SIM card is valid

Try connecting in another location

Launch touch screen calibration (Touch Application tab-->Select TSCalibration)

#### Unable to make outgoing call

• Make sure you have dialled a valid number and press the 😑 key For international calls, check the country and area codes Make sure your cellphone is connected to a network, and that the network is not overloaded or unavailable Check your subscription status with your operator (credit, SIM card valid, etc.) Make sure you have not barred outgoing calls

# Unable to receive incoming calls

Make sure your cellphone is switched on and connected to a network (check for overloaded or unavailable network) Check your subscription status with your operator (credit, SIM card valid, etc.)

Make sure you have not forwarded incoming calls

The caller's name or number does not appear when a call is

Your caller has concealed his/her number.

# I cannot find my contacts

Make sure your SIM card is correctly inserted Import all contacts stored in SIM card to cellphone The sound quality of the calls is not optimal You can adjust the volume during a call by means of the Volume key

 Check the signal strength level I am unable to use the features described in the manual

 Check with your operator to make sure that your subscription includes this service

I am unable to add a contact in my directory Make sure that your phone memory is not full; delete some contacts or save the contacts in the product directory (i.e. your professional or personal directories)

My callers are unable to leave messages on my voicema Contact your network operator to check service availability I cannot access my voicemail

Make sure your operator's voicemail number is correctly entered Try later if the network is busy

I am unable to send and receive MMS Check your phone memory available as it might be full Contact your network operator to check service availability and check MMS parameters

Verify the server center number or your MMS profile with your

 The server center may be swamped; try again late "No service" is displayed

# You are outside of the network coverage area.

I have already entered 3 incorrect PIN codes · Contact your network operator to obtain the PUK code (Personal Unblocking Key)

I am unable to connect my cellphone to my computer Install Alcatel's PC suite first of all Open Notification panel to check if the PC Suite Agent has activated

Check that you have marked the checkbox of USB debugging in Settings\Applications\Development\USB debugging Check that your computer system meets the requirements for Alcatel's PC Suite installation

# Delete some files

 Make sure that Bluetooth is turned on and your cellphone is visible to other users

How to make your battery last longer

Make sure you followed the complete charge time (minimum 3 hours) After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication

ALCATEL is a trademark of Alcatel-Lucent TCT Mobile Limited.

© Copyright 2011 TCT Mobile Limited

TCT Mobile Limited reserves



items of equipment Collection bins at points of sale

Switch the cellphone off when you are near gas or flammable liquids. Strictly discomfort in your hands, arms, shoulders, neck, you or other parts of your body. They will then be recycled, preventing substances being disposed of in t environment, so that their components can be reused. In European Union countries

> must be brought to these collection points. In non European Union jurisdictions:

Items of equipment with this symbol are not be thrown into ordinary bins it Prolonced exposure to music at full volume using the music player may your jurisdiction or your region has suitable recycling and collection facilities; ensure compliance with FCC RF exposure juridelines. damage your hearing. Set your cellphone's volume to it's lowest setting prior instead they are to be taken to collection points for them to be recycled. to inserting headphones in your ears and adjust the volume to your In the United States you may learn more about CTIA's Recycling Program at preference. Only use headphones that are recommended by TCT Mobile www.recyclewirelessphones.com

INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE free" devices to keep cellphones away from the head and body. (fact sheet INSTRUCTIONS

I am unable to download new files

# Check for free space of your MicroSD card

Check your subscription status with your operator

The cellphone can't be detected by others via Bluetooth

Switch on the backlight upon request

Extend email auto-check interval as long as possible

• Exit background-running applications if they are not being used for a

Deactivate Bluetooth, Wi-Fi, or GPS when not in use

Try selecting the available network(s) manually Try connecting at a later time if the network is overloaded

areas. As with many other types of equipment now in regular use, cellphones can such symptoms, please take the following safety precautions:

nterfere with other electrical or electronic devices, or equipment using radio - Play at the farthest distance possible from the screen.

Always handle your cellphone with care and keep it in a clean and dust-free place

Limited and it's affiliates

# obey all signs and instructions posted in a fuel depot, gas station, or chemical Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders: for several hours before playing again.

If you continue to have sore hands, wrists, or arms during or after playing, stor the game and see a doctor.

When you play games on your cellphone, you may experience occasion