



User Guide



Notice

1. When disconnecting the display from an electrical outlet, the plug must be pulled out from the socket. Do not remove power cord from outlet by pulling from the cord. Pull from the plug head.
2. **WARNING** – To reduce the risk of fire or electric shock, do not expose this appliance to rain or other forms of moisture.
3. Display must not be exposed to liquids via dripping or splashing. Please do not place liquid –filled items such as vases near the display.
4. Use only a properly grounded plug and receptacle.
5. **CAUTION** – These instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any service other than that contained in the operating instructions unless you are qualified to do so.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		



This symbol is intended to alert the user to the presence of insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. Clean only with dry microfiber cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other display (including amplifiers) that produce heat.
9. Do not remove ground prong from three-pronged plugs. If your outlet will not accept three-pronged plugs, consult an electrician for replacement.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the display.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the display. When a cart is used, exercise caution when moving the cart/display combination to avoid injury from tip-over.
13. Unplug this display during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the display has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the display, the display has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not expose this display to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the display.
16. To completely disconnect this display from the wall outlet, disconnect the power supply cord plug from the AC receptacle./wall socket
17. The mains plug of the power supply cord shall remain readily operable.
18. An display with CLASS I construction shall be connected to a wall socket outlet with a protective grounding connection.
19. Note: Prolonged use of headphones at a high volume may cause damage your ears.
20. **Notice to users : This is a Class A digital device**
21. This device is designed for commercial use and features safety certificates for electromagnetic interference (EMI). Users should be mindful of EMI issues.

Cautions for consisting product system

•Environmental condition for installation

As the LCD panel is very sensitive to physical impact, installation requires considerable caution.

Minimum clearance (20cm) must be secured for smooth ventilation. Installation must avoid air tight or near air tight places. Improper ventilation causes malfunction and shortens product lifetime by rapid internal temperature rise. If Product has to installed at the improper ventilation, additional ventilation openings or fans must be provided to keep the internal temperature between 0~35°C.

•For ground of Product and application devices, it should be connected as frame ground.

•Please refer to the special installation instruction guide carefully if the display monitor shall install on not enough solid and/or unevenness surface wall and build into wall.

•Ensure that electrical outlet(s) are capable of supporting this product's power consumption

 
•Clearance for Ventilation

When installing the product, make sure there is at least 20cm clearance on all sides for effective ventilation and do not seal the product in an enclosed space.

If the product is installed in a location with poor ventilation, the internal temperature can be raised rapidly and it can cause frequent malfunctions and rapid reduction of the product life

Embedded Product

In case of no space of 20cm from each side of the SET, make sure adding cooling fans at the upper part of the set to reduce inner temperature.

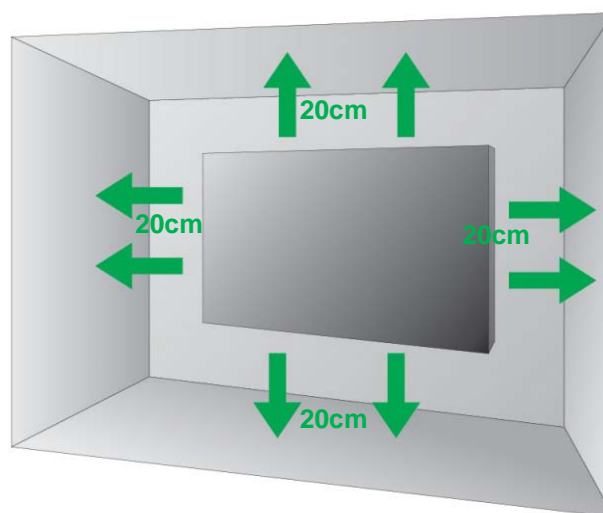

Mounting on a wall surface

Please secure minimum clearance as shown in the picture for adequate ventilation and technical service.

•Ventilation space in front of Product must be furnished for heat dispersion. If the front space of Product has to be sealed, there must be consideration for the heat dispersion in the rear side of Product.



Accessories



CD



Remote Control



Batteries (AAA x 2)



HDMI Cable



Power Cable



1. **SOURCE** : Selects Input Source
2. **POWER** : Turns the LCD Display On and Off
3. **UP** : Controls the UP cursor in the menu
4. **LEFT** : Controls the LEFT cursor in the menu
5. **RIGHT** : Controls the RIGHT cursor in the menu
6. **DOWN** : Controls the DOWN cursor in the menu
7. **ENTER** : Controls the ENTER cursor in the menu
8. **MENU** : Displays the main On-Screen menu
9. **EXIT** : Exits the On-Screen menu

1. MENU OVERVIEW

In this menu system, there are several ways to customize the menu settings provided.

Most menus consist of three levels to set up the options, but some require greater depth for the variety of settings.

If you press the **MENU** button, only the first and second level of the menu system will appear on the monitor screen.

The third level can be displayed by pressing **SELECT**. If a menu has more than three levels, the pop-up dialogue box will be displayed as the fourth or fifth level.

1) To show and remove the Menu:

 
Press the **MENU** button on the Remote Control to display the menu. A second press of the **MENU** button or a press of the **EXIT** button will take you back to monitor viewing.

2) To go to the next level:

Press **ENTER** on the Remote Control.

3) To go back to the previous level:

Press **MENU** (or **EXIT**) on the Remote Control.

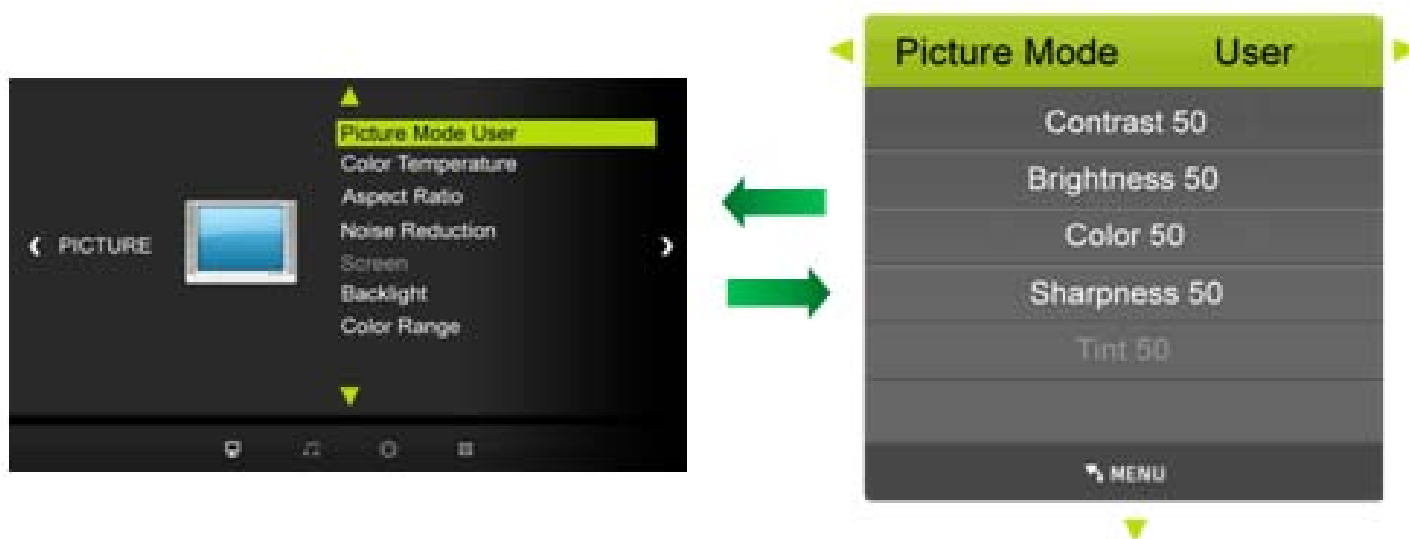

4) Typical Menu Operation

- Press **MENU** button: The main menu will appear.
- Use **▲/▼** buttons to select the desired menu option (icon).
- While the desired menu option is selected, press **ENTER** to move to the second level.
- Press **ENTER** to move to the third level: Some menu options require additional steps.
- Press **MENU** to return to the previous menu or press **EXIT** on the Remote Control to return to monitor viewing.

2. Basic Operation

 
1) Turning On the Monitor

- First, connect power cord and ensure the plug head is fully inserted. Flip the power switch located adjacent to the AC inlet. The monitor will then switch to standby or “power on” mode. In standby mode, in order to turn monitor on, press the **POWER** button on the remote control or power button in the OSD KEY located on the side of the monitor .
- Select the input source by using **SOURCE** button on the remote control.

2) Volume Adjustment (A/V extension option)

- Press the VOL+/- ◀/▶ button to adjust the volume.
- If you wish to switch the sound off, press the **MUTE** button on the remote control.
- You can cancel this function by pressing the **MUTE** or VOL+/- ◀/▶ button.

3) On Screen Menu Language Selection

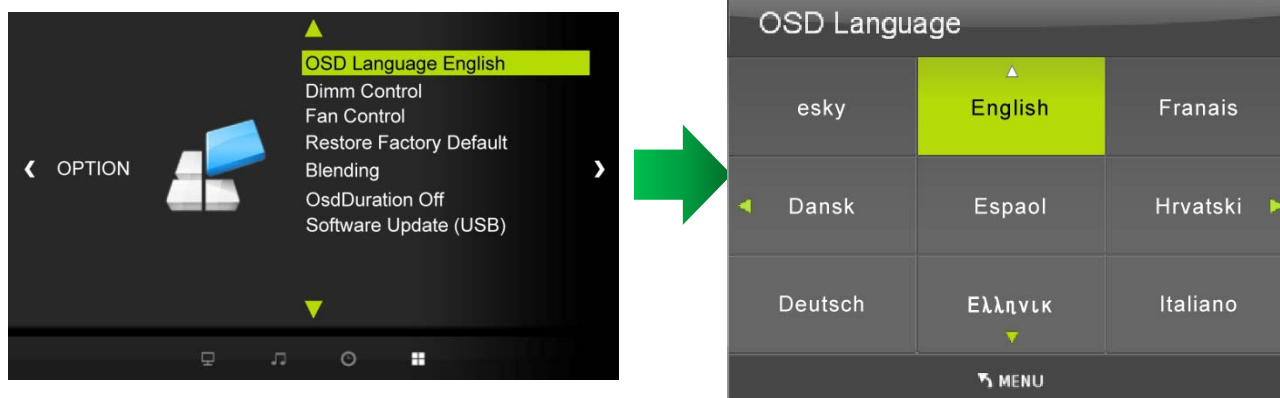

There are several languages in which the menus can be displayed. Select your desired language by following these steps:

- Press the **MENU** button and then use ▲/▼ button to select the **OPTION** icon.
- Press the ▲/▼ button to select **Menu Language** menu.
- Press the **ENTER** button and then use ▲/▼, ◀/▶ button to select your desired language:
From this point on, the on-screen menus will be shown in the selected language.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

 
Supported Languages :

English, French, Italian, Portuguese, Russian, Chinese, etc.

3. On Screen Menus Selection and Adjustment

1) How to adjust the OSD screen

- a. Press the **MENU** button and then ◀/▶ button to select each menu.
- b. Press the **ENTER** button and then use ▲/▼ button to display the available menus.

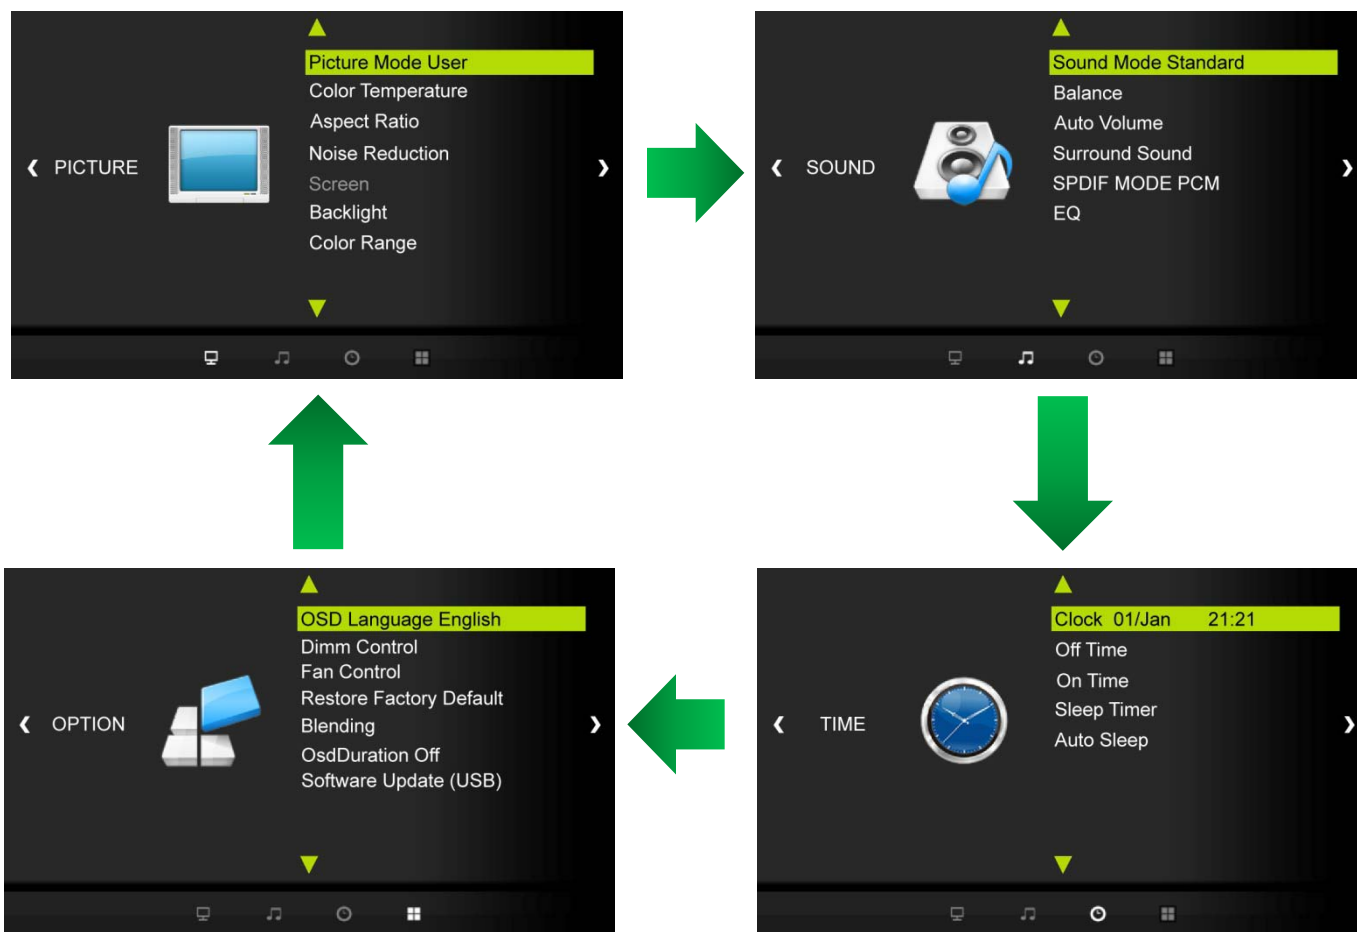


• Your monitor's OSD (On Screen Display) may differ slightly from what is shown in this manual.

4. Select Video Input


1) How to Select USB Source by OSD [PC-RGB, HDMI1, HDMI2, DMP]

 - Press the **SOURCE** button and then ▲/▼ button to select each video source.
- Press the **ENTER** button to go to desired video source

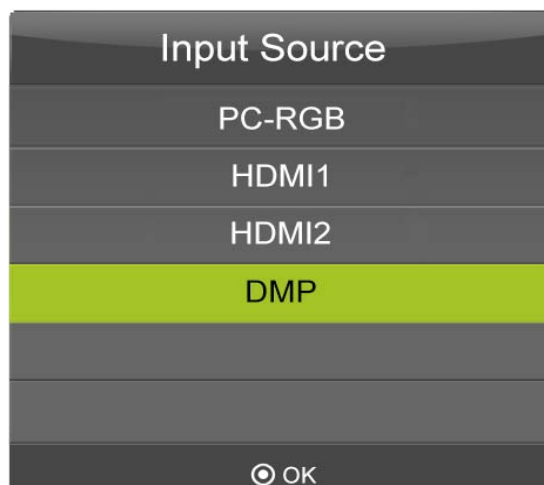

5. Picture Menu Options

 
1) Picture Mode

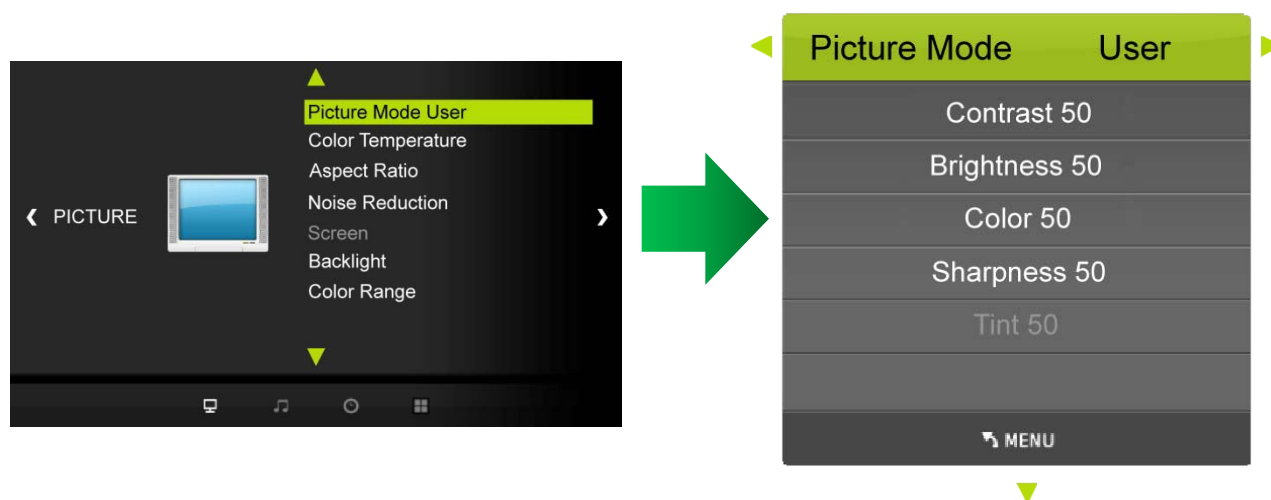

Adjust the picture appearance to suit your preference and viewing situations.

- Press the **MENU** ◀/▶ buttons and then button to select the **PICTURE** mode.
- Press the ◀/▶ buttons and then use **ENTER** button to select **Picture Mode** menu.
Standard, Dynamic, Mild, User
- Press the ▲/▼ button to select **Picture Mode - User** menu
Contrast, Brightness, Color, Sharpness, Tint.
- Press **ENTER** button and then use ◀/▶ buttons to make appropriate adjustments.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

 
2) Color Temperature Control

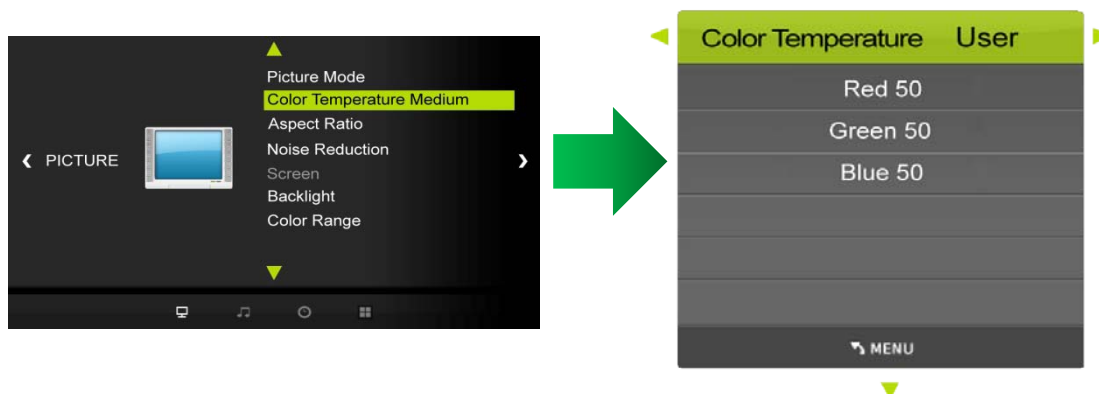

-Choose one of five automatic color adjustments. Set to **Warm** to enhance hotter colors such as red, or set to **Cool** to see less intense colors with more blue.

- Press the **MENU** button and then use ◀/▶ buttons to select the **PICTURE** icon.
- Press the ▲/▼ button and then use **ENTER** buttons to select **Color Temperature** menu.
- Press the **ENTER** button and then use ◀/▶ buttons to select desired option:
User, Cool, Medium, Warm.
- Press the ▲/▼ buttons to select **Picture Mode - User** menu
Red, Green, Blue
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

 
3) Aspect Ratio

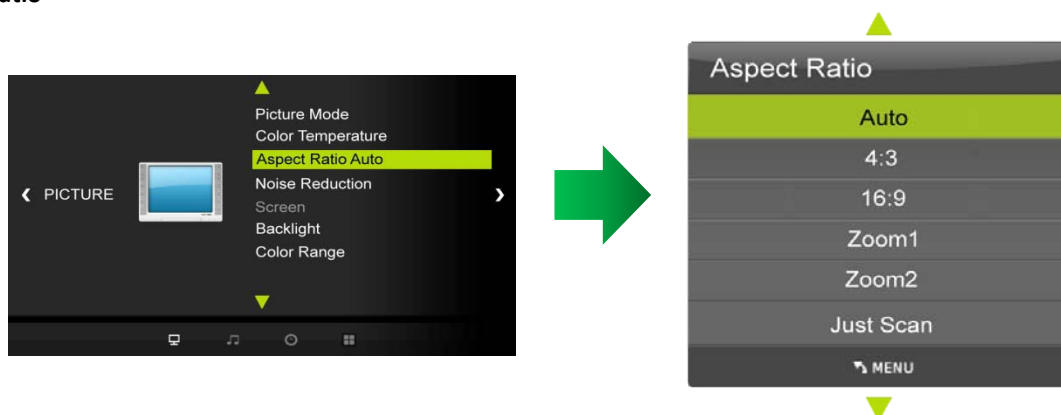

Selects the screen format.

- Press the **MENU** button and then use ◀/▶ buttons to select the **PICTURE** icon.
- Press the ▲/▼ buttons and then use **ENTER** button to select **Aspect Ratio** menu.
- Press the **ENTER** button and then use ▲/▼ buttons to select desired option:
Auto, 4:3, 16:9, Zoom1, Zoom2, Just Scan.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

 
4) Noise Reduction

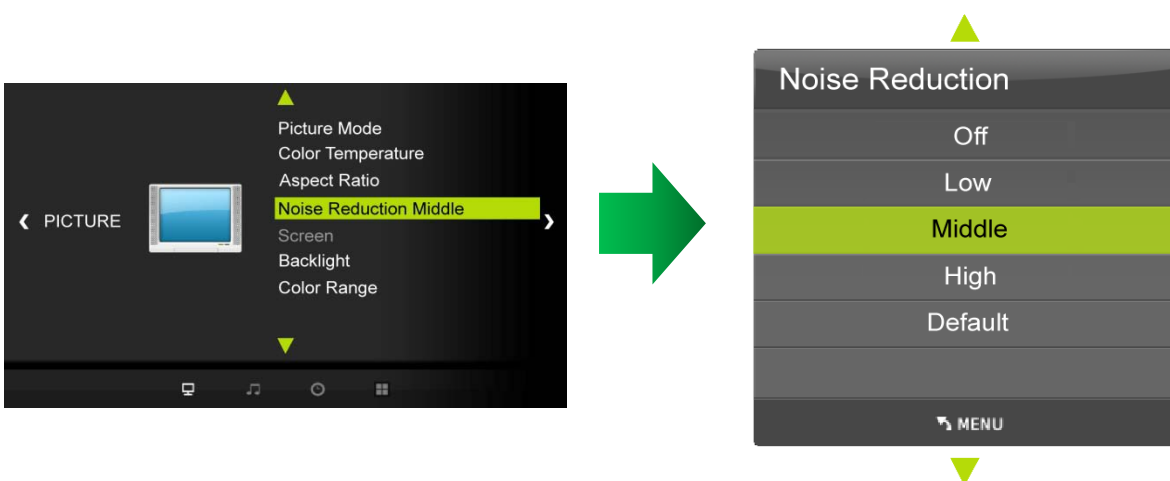

Select the picture appearance to suit your preference and viewing situations.

- Press the **MENU** button and then ◀/▶ buttons to select the **PICTURE** icon.
- Press the ▲/▼ buttons and then use **ENTER** button to select **Noise Reduction** menu
- Press the **ENTER** button and then use ▲/▼ buttons to select the desired picture option; **Off, Low, Middle, High, Default**.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

 5) PC Menu

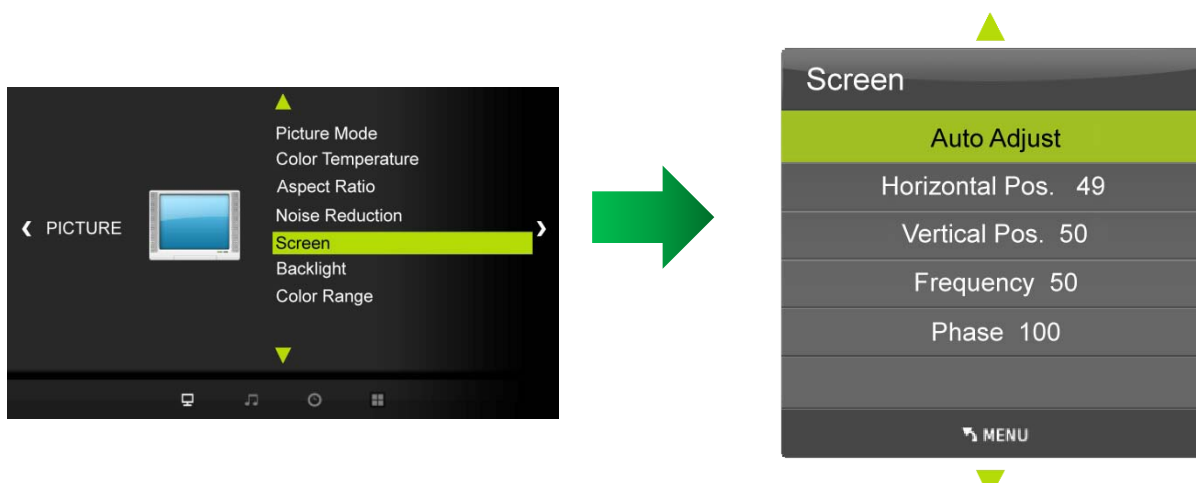

- Press the **MENU** button and then use ◀/▶ buttons to select the **PICTURE** icon.
- Press the ▲/▼ buttons and then use **ENTER** button to select **Screen Menu**.
- Press ▲/▼ buttons and then use ◀/▶ buttons to make desired adjustments.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

6) Backlight



- Press the **MENU** button and then use ◀/▶ buttons to select the **PICTURE** icon.
- Press the ▲/▼ buttons and then use **ENTER** button to select **Backlight Menu**.
- Press ▲/▼ buttons and then use ◀/▶ buttons to make appropriate adjustments.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

7) Color Range

- Press the **ENTER** button. [Range scaling changes from 16-234 to 0-255]

6. Sound Menu Options

 
1) Sound standard Mode



Adjust the sound to suit your taste and room situations.

- Press the **MENU** button and then use ◀/▶ button to select the **SOUND** icon.
- Press the ▲/▼ button and then use **ENTER** button to select **Sound Mode** menu :
Standard, Music, Movie, Sports, User.
- Press the ◀/▶ button and then use ▲/▼ button to select - **User** menu : **Treble, Bass.**
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.


2) Sound Balance

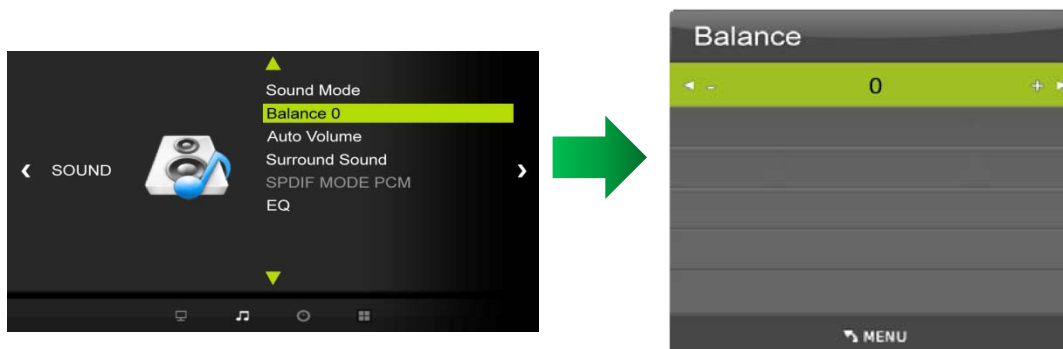

Adjust the sound to suit your taste and room situations.

- Press the **MENU** button and then use ◀/▶ buttons to select the **SOUND** icon.
- Press the ▲/▼ buttons and then use **ENTER** button to select the **Balance** menu.
- Press ◀/▶ buttons to make appropriate adjustments. [-50 ~ 0 ~ +50]
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

 3) Auto Volume- Automatic Volume Level Control

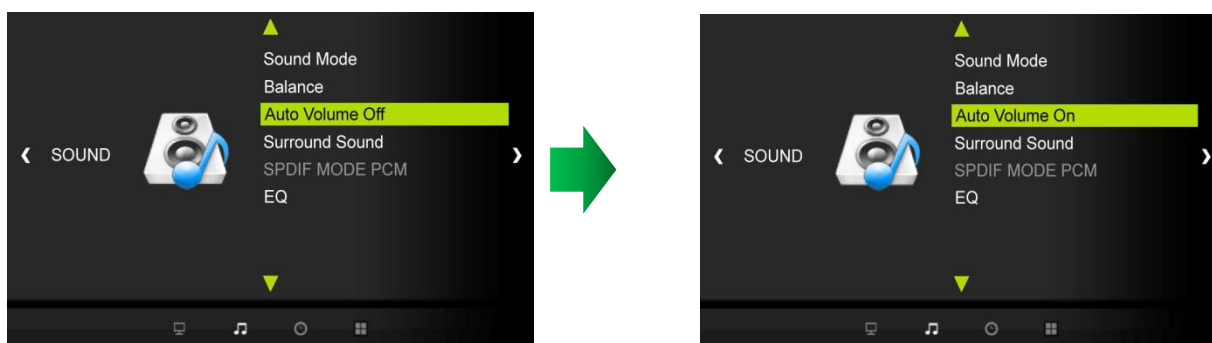


Adjust the sound to suit your taste and room situations.

- Press the **MENU** button and then use ◀/▶ buttons to select the **SOUND** icon.
- Press the ▲/▼ buttons and then use **ENTER** button to select the **Auto Volume** menu.
- Press **ENTER** button to make desired adjustments : **On, Off**
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu


4) Surround Sound

Adjust the sound to suit your taste and room situations.

 - Press the **MENU** button and then use ◀/▶ buttons to select the **SOUND** icon.
- Press the ▲/▼ buttons and then use **ENTER** button to select the **Surround Sound** menu.
- Press the ▲/▼ buttons **ENTER** button to make desired adjustments :
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

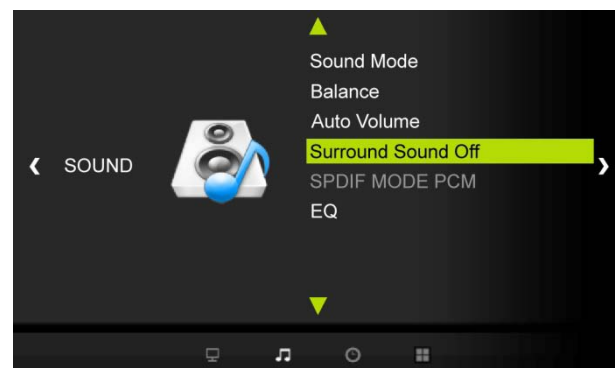

 5) User Control for 5 Band Equalizer

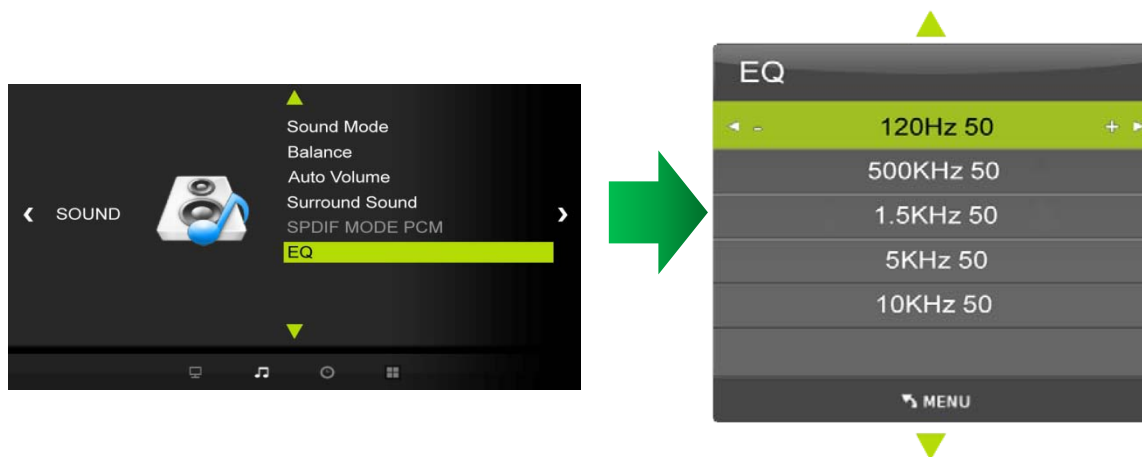


-f the Equalizer settings are changed, sound mode setting is switched to **User** automatically.

- Press the **MENU** button and then use ◀/▶ buttons to select the **SOUND** icon.
- Press the ▲/▼ buttons to select the **EQ(Equalizer)** menu.
- Press the **ENTER** button and then use ◀/▶ buttons to make desired adjustments;
20Hz, 500Hz, 1.5KHz, 5KHz, 10KHz.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

7. Setup Menu Options

 1) Language

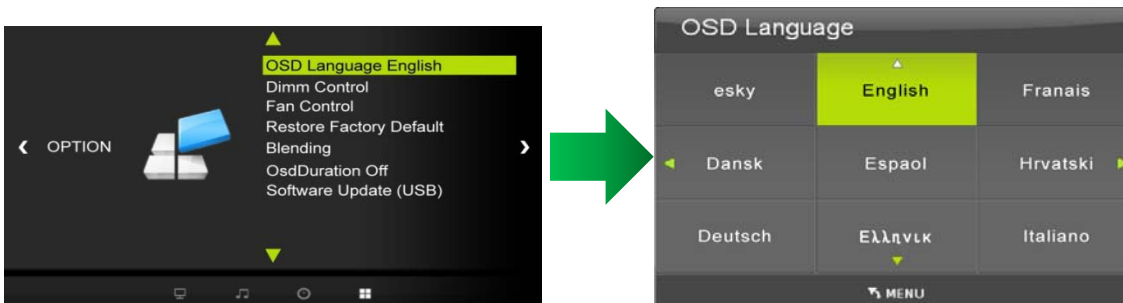

Selecting a menu language

 
- Press the **MENU** button and then use ◀/▶ buttons to select the **OPTION** icon.
- Press the ▲/▼ buttons to select the **OSD Language** menu.
- Press the **ENTER** button and then use ▲/▼, ◀/▶ buttons to select the desired option:

Supports Language

English, French, Español, Deutsch, Italiano, Portugues, Chinese, etc.

- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.


2) Set ID

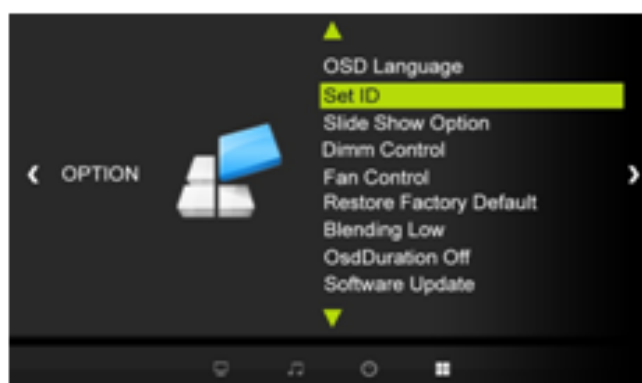

- Press the **MENU** button and then use ◀/▶ buttons to select the **OPTION** icon.
- Press the ▲/▼ buttons to select the **SET ID** Menu.
- Press the **ENTER** button and then use ◀/▶ buttons to select SET ID options.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.


3) Slide Show Option) [Option]

 3-1) Slide Show Option Menu – Show Time (Slide Show Time)

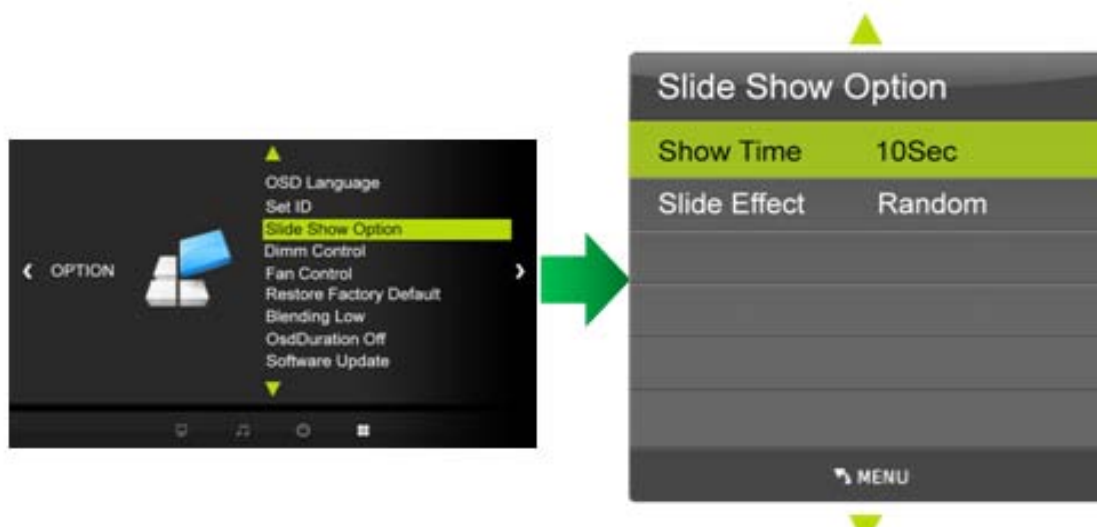

- Press the **MENU** button and then use ◀/▶ buttons to select the **OPTION** icon.
- Press the ▲/▼ buttons to select the **Slide Show Option** Menu.
- Press the **ENTER** button and then use ▲/▼ buttons to select the **Show Time** Menu.
- Press the ◀/▶ buttons to set Show Time options.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

 3-2) Slide Show Option Menu – Show Time (Show Effect)

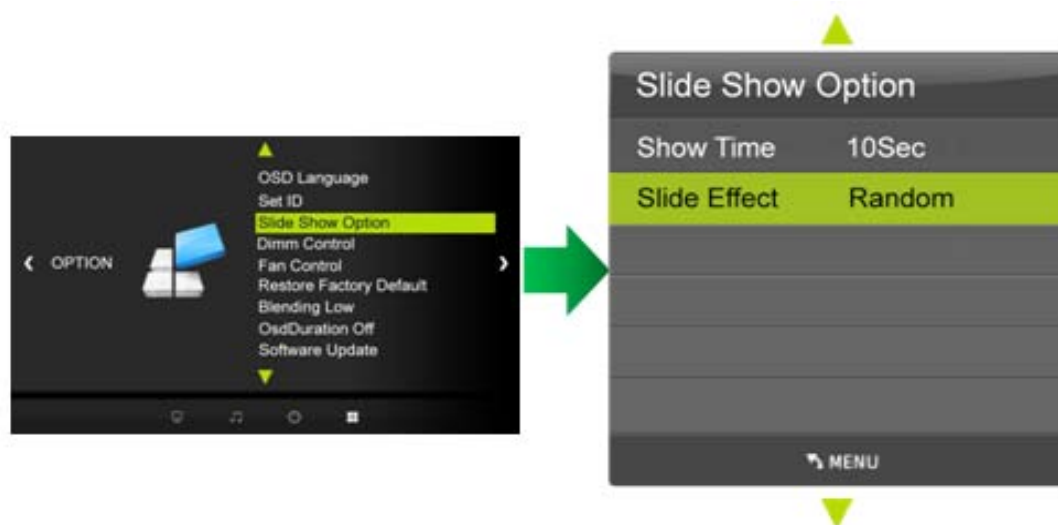


- Press the **MENU** button and then use ◀/▶ buttons to select the **OPTION** icon.
- Press the ▲/▼ buttons to select the **Slide Show Option** Menu.
- Press the **ENTER** button and then use ▲/▼ buttons to select the **Show Effect** Menu.
- Press the ◀/▶ buttons to set Show Effect options.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

4) Dimming Control [Option]


4-1) Dimming

-Automatic dimming controls by light sensor in Dimming menu.

 - Press the **MENU** button and then use ◀/▶ buttons to select the **OPTION** icon.
- Press the ▲/▼ buttons to select the **Dimm Control** Menu.
- Press the **ENTER** button and then use ▲/▼ buttons to select the **Dimming** Menu.
- Press the ▲/▼, ◀/▶ buttons to set Dimming options.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

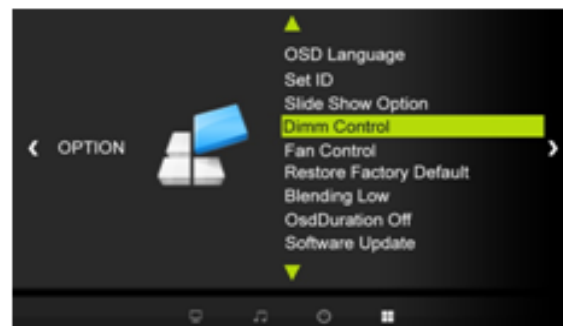

 4-1-1) Dimming Menu – Auto Dimming (Light Ambient Sensor Option only)

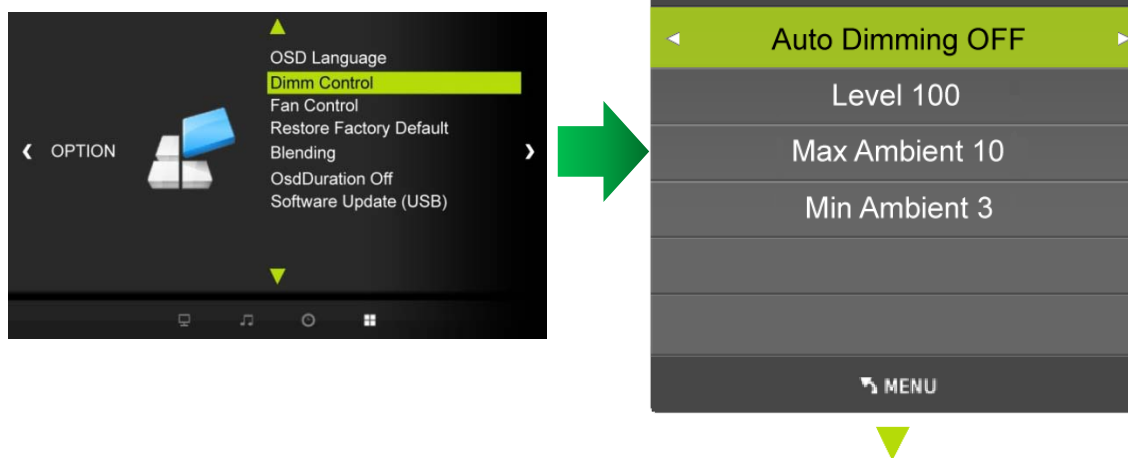

-Enables/disables auto dimming control by light ambient sensor

 
- Press the **MENU** button and then use ◀/▶ buttons to select the **OPTION** icon.
- Press the ▲/▼ buttons to select the **Dimm Control** Menu.
- Press the **ENTER** button and then use ▲/▼ buttons to select the **Dimming** Menu.
- Press the ▲/▼ buttons to select the **Auto Dimming** functions.
- Press the ◀/▶ buttons to set Auto Dimming options.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

ON : Dim level is adjusted by light sensor

OFF : Dim level is adjusted by manual control


4-1-2) Dim Level – Auto Dimming - off

- Controls Inverter dimming level – Inverter brightness control.
- a. Press the **MENU** button and then use button to select the **OPTION** icon.
- b. Press the **▲/▼** buttons to select the **Dimm Control** Menu.
- c. Press the **ENTER** button and then use **◀/▶** buttons to select the **Dimming** Menu.
- d. Press the **▲/▼** buttons to select the **Level** functions.
- e. Press the **◀/▶** buttons to set **Level** functions.
- f. Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu

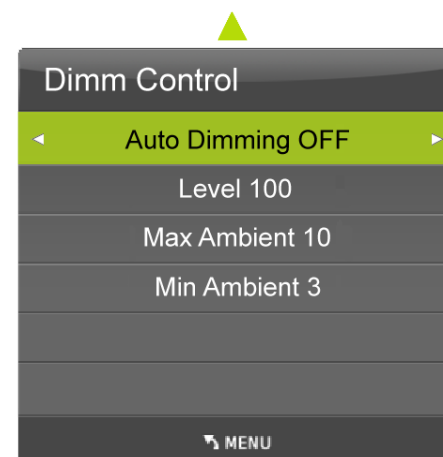


4-1-3) Dimming Menu – MAX Ambient (Light Ambient Sensor Option only)

 - Adjusts detected light ambient to set the maximum dimming
- a. Press the **MENU** button and then use **◀/▶** buttons to select the **OPTION** icon.
- b. Press the **▲/▼** buttons to select the **Dimm Control** Menu.
- c. Press the **ENTER** button and then use **▲/▼** buttons to select the **Dimming** Menu.
- d. Press the **▲/▼** buttons to select the **Max Ambient** functions.
- e. Use **◀/▶** buttons to set detected light ambient value by LUX unit.
- f. Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

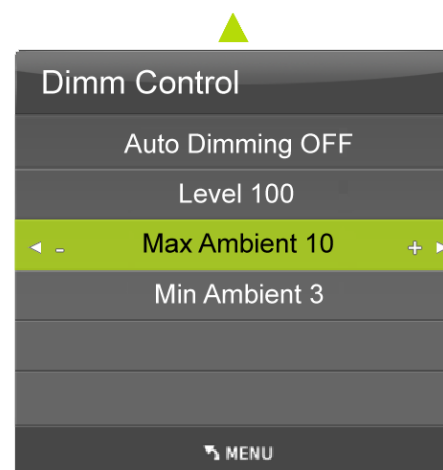

4-1-4) Dimming Menu – MIN Ambient (Light Ambient Sensor Option only)

 
- Adjusts detected ambient light level at which to set the minimum dimming value
- a. Press the **MENU** button and then use **◀/▶** buttons to select the **OPTION** icon.
- b. Press the **▲/▼** buttons to select the **Dimm Control** Menu.
- c. Press the **ENTER** button and then use **▲/▼** buttons to select the **Dimming** Menu.
- d. Press the **▲/▼** buttons to select the **Min Ambient** functions.
- e. Use **◀/▶** buttons to set detected light ambient value by LUX unit.
- f. Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

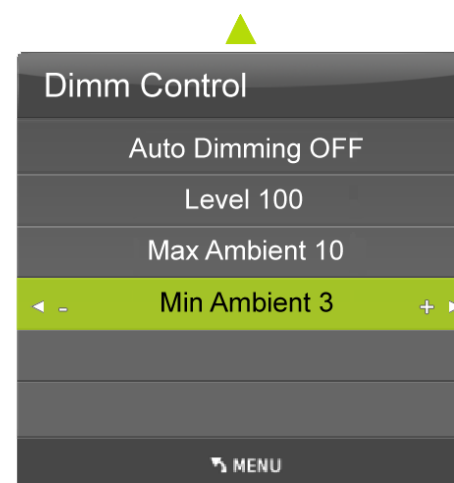


5) Heat Control

-Automatic Fan controls activated by internal/external temperature sensor

 - Press the **MENU** button and then use **◀/▶** buttons to select the **OPTION** icon.
- Press the **▲/▼** buttons to select the **Fan Control** Menu.
- Press the **ENTER** button and then use **▲/▼, ◀/▶** buttons to set Heat Control options.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu

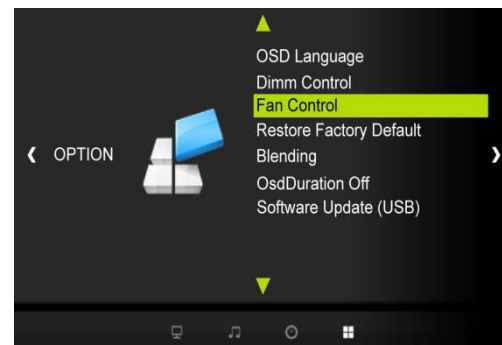

5-1) Fan Control Menu

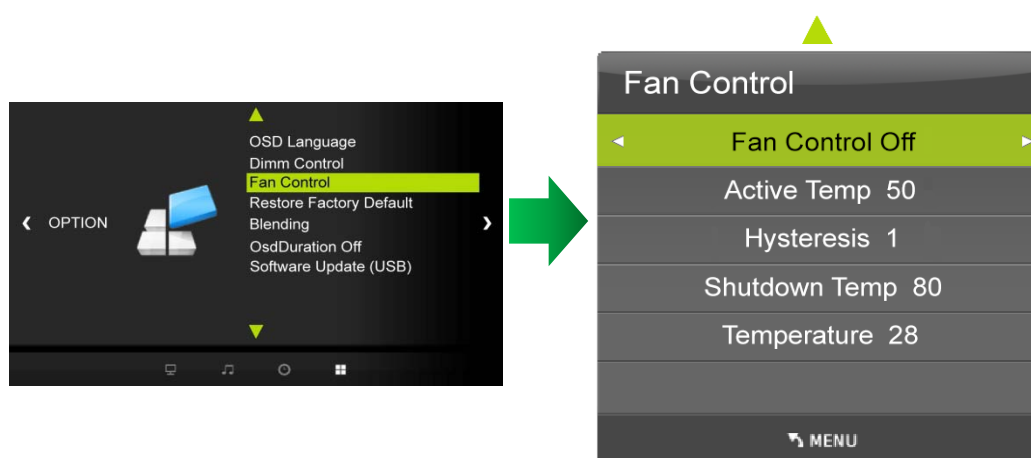 


-Controls fan driving option by temperature sensor / force on / force off

- Press the **MENU** button and then use **◀/▶** buttons to select the **OPTION** icon.
- Press the **▲/▼** buttons to select the **Fan Control** Menu.
- Press the **ENTER** button and then use **▲/▼** buttons to select the **Fan Control** functions.
- Press the **◀/▶** buttons to set **Off, On, Auto** options.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

5-2) Fan Control Menu – Active Temperature

-Adjusts fan driving temperature by degrees Celsius. It works only when the **Fan Control** setting is **Auto**.

 
- Press the **MENU** button and then use **◀/▶** buttons to select the **OPTION** icon.
- Press the **▲/▼** buttons to select the **Fan Control** Menu.
- Press the **ENTER** button and then use **▲/▼** buttons to select the **Active Temperature** Menu.
- Use **◀/▶** buttons to set fan driving temperature by Celsius degree unit.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

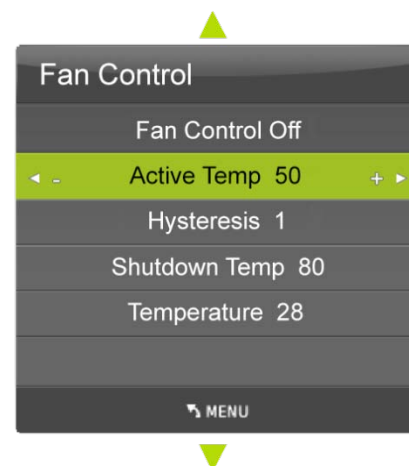

5-3) Fan Control Menu – Hysteresis

-Adjusts fan driving hysteresis temperature by degrees Celsius.

 - Press the **MENU** button and then use ◀/▶ buttons to select the **OPTION** icon.
- Press the ▲/▼ buttons to select the **Fan Control** Menu..
- Press the **ENTER** button and then use ▲/▼ buttons to select the **Hysteresis** Menu.
- Use ◀/▶ buttons to set fan driving hysteresis temperature by Celsius degree unit.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

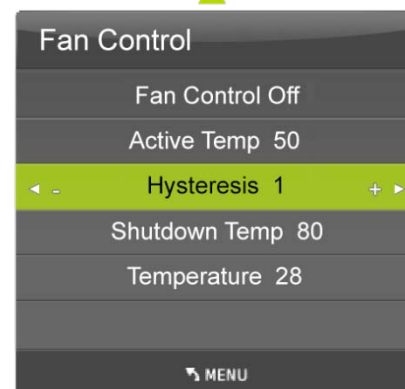


5-4) Fan Control – Shutdown Temperature

- Adjusts shutdown mode temperature by degrees Celsius.

When current temperature reaches the shutdown temp, the monitor enters shutdown mode.

 - Press the **MENU** button and then use ◀/▶ buttons to select the **OPTION** icon.
- Press the ▲/▼ button to select the **Heat Control** Menu..
- Press the **ENTER** button and then use ▲/▼ buttons to select the **Shutdown Temperature** Menu.
- Use ◀/▶ buttons to set fan driving hysteresis temperature by degrees Celsius.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.


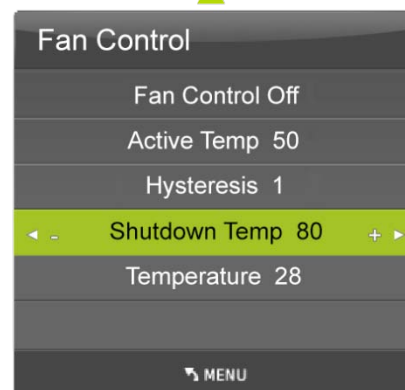


5-5) Fan Control – Current temperature

Displays current detected main sensor's temperature and auxiliary sensor's (option) temperature Read Only.

6) Reset

  Resets user setting values as default

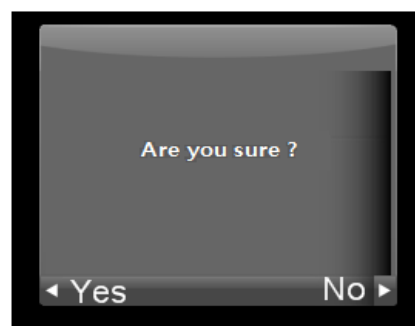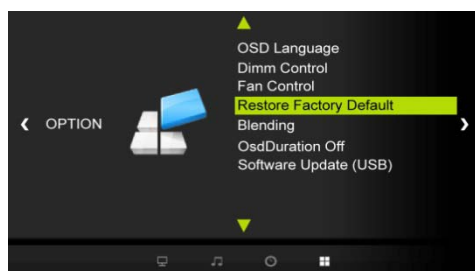


- Press the **MENU** button and then use ◀/▶ buttons to select the **OPTION** icon.
- Press the ▲/▼ buttons to select **Restore Factory Default** menu
- Press the **ENTER** button and then use ▲/▼ button to make a selection in the **Are you sure?** menu.
- Press the ◀/▶ buttons and then monitor's

7) Adjusting the transparency of OSD

Adjusting the transparency of OSD.

 
- a. Press the **MENU** button and then use ◀/▶ button to select the **OPTION** icon.
- b. Press the ▲/▼ button to select **Blending** menu
- c. Press the **ENTER** button to select the Details Menu. ; **Off, Low, Middle, High**

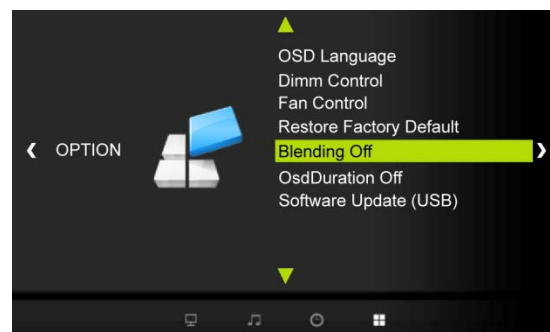


8) OSD Duration

Adjusting the keep the time OSD.

 - a. Press the **MENU** button and then use ◀/▶ button to select the **OPTION** icon.
- b. Press the ▲/▼ button to select **OsdDuration** menu
- c. Press the **ENTER** button to select the Details Menu : **Off, 5sec, 10sec, 15sec**

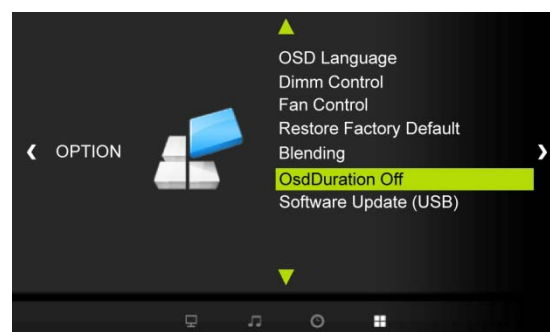

 9) Software Update (USB)

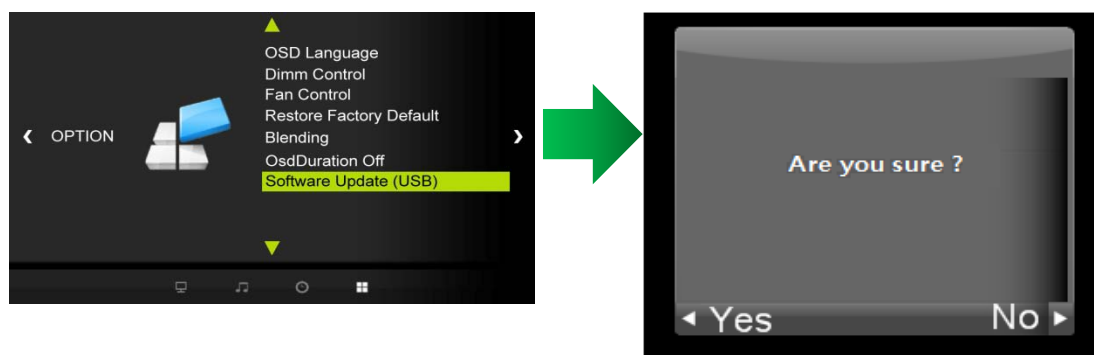


When downloading software via USB memory.a. Press the **MENU** button and then use -
Must be new version software (merge.bin) in USB memory

8. Clock Menu


1) Time Settings

 Enables user to set up the clock information

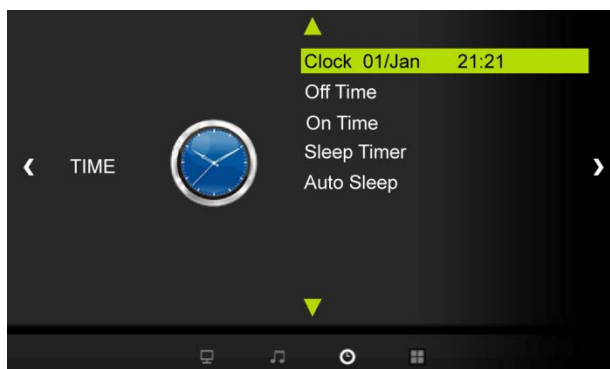

1-1) Clock

 
If current time setting is wrong, reset the clock manually

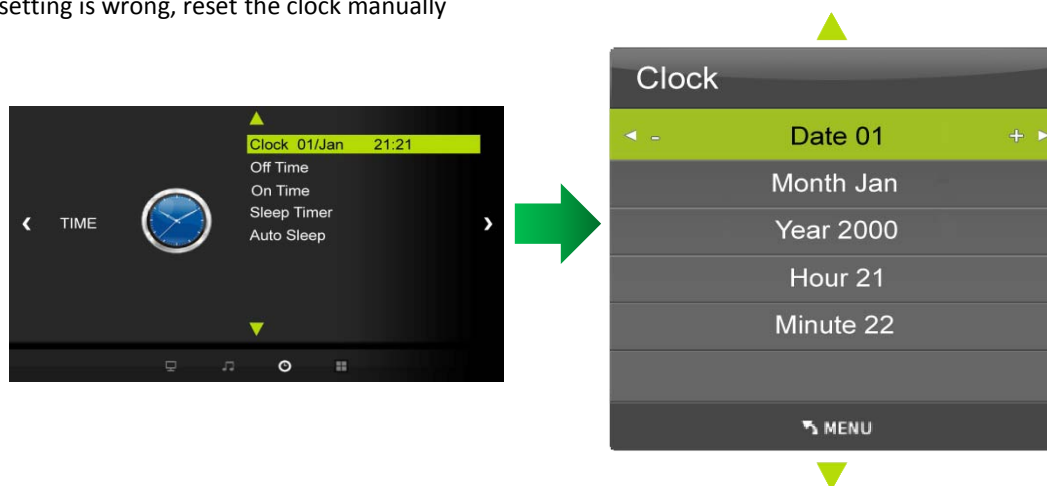

- Press the **MENU** button and then use ◀/▶ buttons to select the **TIME** icon.
- Press the **ENTER** button and then use ▲/▼ buttons to select **Clock**.
- Press the ▲/▼ buttons to select the **Hour, Minute**.
- Use ◀/▶ buttons to adjust clock.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

2) On Timer

 
Timer function operates only if current time has been set.

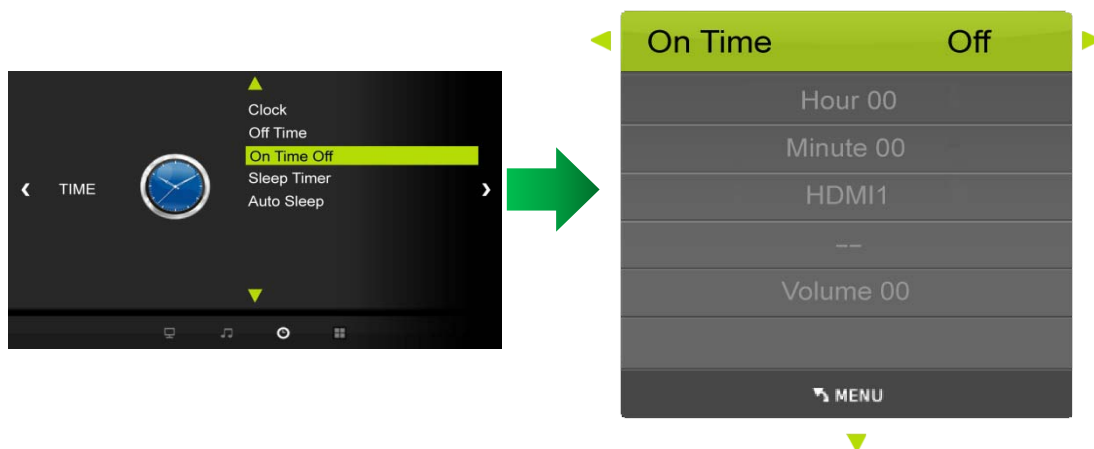

- Press the **MENU** button and then use ◀/▶ buttons to select the **TIME** icon.
- Press the ▲/▼ button to select **On Timer**.
- Press the **ENTER** button and then use ◀/▶ buttons to select the **On, Off**.
- Use ▲/▼ buttons, ◀/▶ buttons to adjust on time schedule and activation.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

3) Off Timer

 Timer function operates only if current time has been set.

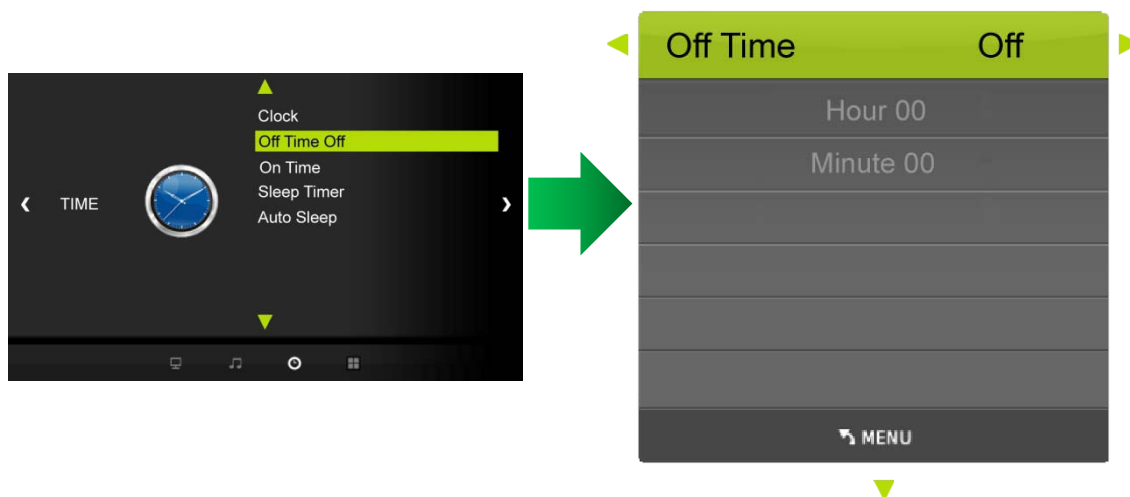


- Press the **MENU** button and then use ◀/▶ buttons to select the **TIME** icon.
- Press the **ENTER** button and then use ▲/▼ buttons to select **Off Timer**.
- Press the ▶ button and then use ◀/▶ buttons to select the **On, OFF**.
- Use ▲/▼ buttons, ◀/▶ buttons to adjust off time schedule and activation.
- Press **EXIT** button to return to monitor viewing or press **MENU** button to return to the previous menu.

9. Media Player



1) Select the input signal (USB)

 - a. Press the **SOURCE** button and then ▲/▼ button to select USB source.
- b. Press the **ENTER** button to go to desired USB source

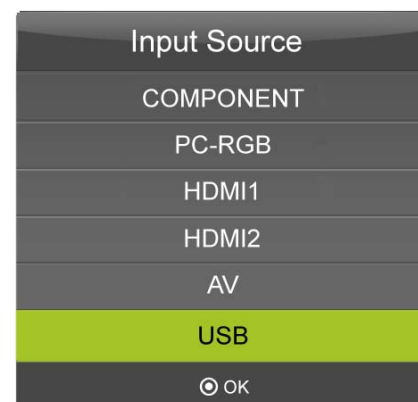

2) USB Menu

  - a. Press ◀/▶ button to select the desired menu icon using remote control.
- b. After selecting the menu, press the ENTER button.
- c. Using ◀/▶ button in the remote control to select the content to play.
- d. To go back to the previous menu, press ◀/▶ button then select Return item and then press ENTER button.
- e. To exit from the Menu, press SOURCE button in the remote control and change the input source.

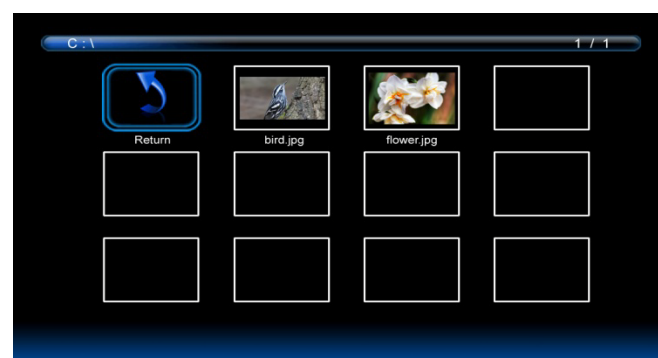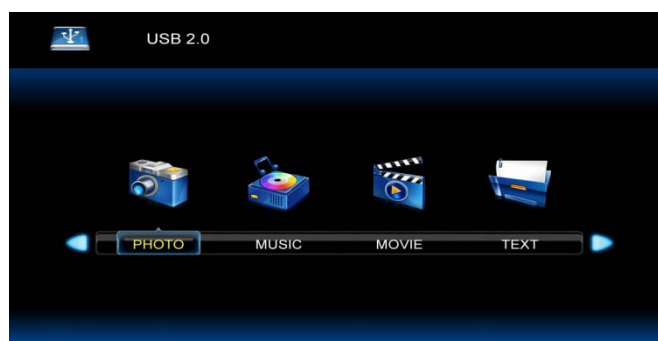



Press the ENTER button to see the Play menu.

- * The menu will be showed during playing the contents
- * To Auto play, save the content (Video & Photo) in the memory USB stick and turn power off and on the monitor.



10 . Notes on Content Creation

Update Content Guidelines using USB memory
To use the USB Memory stick, make sure it is formatted.
The USB memory stick should not have any other file except the files that will be played. If there are any unrelated files, there may be interruptions.
If the content format is not supported by the media board, it will not play the content.
<p data-bbox="354 646 657 674">This type is Recommended.</p> <div data-bbox="386 695 581 842">A black USB-A connector with a gold-plated tip and a white USB symbol on the side.</div> <p data-bbox="472 867 496 894">○</p> <div data-bbox="971 684 1182 842">A black USB-B connector with a gold-plated tip and a white USB symbol on the side.</div> <p data-bbox="1089 867 1114 894">X</p>

11. Supporting Media Spec

	File Extension	Container	Codec	Maximum Resolution	Bit rate
Video	dat, mpg, mpeg	MPG, MPEG	MPEG1,2	1080P 30fps	20M bit
	ts,trp,tp,m2ts	MPEG2-TS	MPEG2,H.264	1080P 30fps	20M bit
	vob	MPEG2-PS	MPEG2	1080P 30fps	20M bit
	avi	AV(1.0,2.0)	MPEG2,XviD 1.00, XviD 1.01, XviD 1.02, XviD 1.03, XviD 1.10-beta1/2 H.264	1080P 30fps	20M bit

	Codec	File Extension	Bit rate
Audio	MPEG1 Layer2	MP3	32Kbps ~ 448Kbps (Bit rate) 32KHz ~ 48KHz (Sampling rate)
	MPEG1 Layer3	MP3	32Kbps ~ 320Kbps (Bit rate) 32KHz ~ 48KHz (Sampling rate)
	AAC	M4A/AAC	24Kbps ~ 384Kbps (Bit rate) 8KHz ~ 48KHz (Sampling rate)
	OGG	Vorbis	free format (Bit rate) ~48KHz (Sampling rate) only support stereo decoding

	Image	Photo	Size
Photo	JPEG	Base-line	15360 X 8704 (1920x8 X 1088x8)
		Progressive	1024 X 768
	PNG	non-interlace	9600 X 6400
		interlace	1200 X 800
	BMP	.	9600 X 6400

12. Supporting Timing

PC Modes

Display Mode	Horizontal Frequency(KHz)	Vertical Frequency(Hz)	Pixel Clock (MHz)	Sync Polarity (H/V)
IBM, 640 x 480	31.469	59.940	25.175	-/-
IBM, 720 x 400	31.469	70.087	28.322	-/-
VESA, 640 x 480	37.861	72.809	31.500	-/-
VESA, 640 x 480	37.500	75.000	31.500	-/-
VESA, 640 x 480	43.269	85.008	36.000	-/-
VESA, 800 x 600	35.156	56.250	36.000	+/+
VESA, 800 x 600	37.879	60.317	40.000	+/+
VESA, 800 x 600	48.077	72.188	50.000	+/+
VESA, 800 x 600	46.875	75.000	49.500	+/+
VESA, 800 x 600	53.674	85.061	56.250	+/+
VESA, 1024 x 768	48.363	60.004	65.000	-/-
VESA, 1024 x 768	56.476	70.069	75.000	-/-
VESA, 1024 x 768	60.023	75.029	78.750	+/+
VESA, 1152 x 864	67.500	75.000	108.000	+/+
VESA, 1280 x 960	60.000	60.000	108.000	+/+
VESA, 1280 x 1024	63.981	60.020	108.000	+/+
VESA, 1280 x 1024	79.976	75.025	135.000	+/+
1366 x 768	47.712	60.015	85.500	+/+
1920 x 1080	67.500	60.000	148.500	+/+
1920 x 1200	74.000	60.000	154.000	+/-

DTV Modes

Display Mode	Horizontal Frequency(KHz)	Vertical Frequency(Hz)	Pixel Clock (MHz)	Sync Polarity (H/V)
720x480	15.735	59.94	13.500	Interlaced
720x576	15.735	50.00	13.595	Interlaced
720x480	31.469	59.94	25.175	
720x576	31.250	50.00	26.566	
1280x720	44.964	59.94	74.176	
1280x720	37.500	50.00	60.466	
1920x1080	33.750	60.00	74.25	Interlaced
1920x1080	28.125	50.00	70.723	Interlaced
1920x1080	31.250	50.00	72.000	Interlaced
1920x1080	67.500	60.00	148.500	Progressive
1920x1200	74.000	60.00	154.000	Progressive