


# Panasonic®

## Basic Owner's Manual Digital Camera

Model No. **DMC-TS5**

# LUMIX

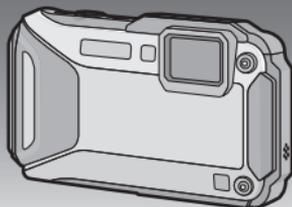

Please read these instructions carefully before using this product, and save this manual for future use.



More detailed instructions on the operation of this camera are contained in “Owner’s Manual for advanced features (PDF format)” in the supplied CD-ROM. Install it on your PC to read it.



Register online at [www.panasonic.com/register](http://www.panasonic.com/register) (U.S. customers only)

For USA and Puerto Rico assistance, please call: 1-800-211-PANA(7262) or, contact us via the web at: <http://www.panasonic.com/contactinfo>



VQT4T99  
F0113YS0

**Dear Customer,**

***Thank you for choosing Panasonic!***

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, we're sure it will bring you and your family years of enjoyment. Please take time to fill in the information on the below. The serial number is on the tag located on the underside of your camera. Be sure to **retain this manual** as your convenient camera information source.

Date of Purchase	Dealer Phone No.
Dealer Purchased From	Model No.
Dealer Address	Serial No.

Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in this Owner's Manual.

**Carefully observe copyright laws.**

- Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

**-If you see this symbol-**

**Information on Disposal in other Countries outside the European Union**

This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.



## Information for Your Safety

### **WARNING:**

To reduce the risk of fire, electric shock or product damage,

- Do not let water or other liquids drip or splash inside the unit.
- Do not expose accessories (battery pack, battery charger, AC adaptor, SD memory card and etc.) to rain, moisture, dripping or splashing.
- Use only the recommended accessories.
- Do not remove covers.
- Do not repair this unit by yourself. Refer servicing to qualified service personnel.

The socket outlet shall be installed near the equipment and shall be easily accessible.

### ■ Product identification marking

Product	Location
Digital Camera	Bottom
Battery Charger	Bottom

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65.

This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption ratio (SAR).

**FCC Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** To assure continued compliance, follow the attached installation instructions and use only shielded interface cables with ferrite core when connecting to computer or peripheral devices.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**Declaration of Conformity**

Trade Name: Panasonic  
Model No.: DMC-TS5  
Responsible Party: Panasonic Corporation of North America  
One Panasonic Way, Secaucus, NJ 07094  
Support Contact: Panasonic Consumer Marketing Company of North America  
1-800-211-PANA (7262)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Certification and Compliance

See Camera for the certification and compliance mark specific to that device.

- 1 Select [Wi-Fi Setup] in the [Wi-Fi] menu.
- 2 Press ▲/▼ to select [Approved Regulations], and press [MENU/SET].

Contains FCC ID: VPYLBXN604



### ■ About the battery pack

#### CAUTION

Battery pack (Lithium ion battery pack)

- Use the specified unit to recharge the battery pack.
- Do not use the battery pack with equipment other than the specified unit.
- Do not get dirt, sand, liquids, or other foreign matter on the terminals.
- Do not touch the plug terminals (+ and -) with metal objects.
- Do not disassemble, remodel, heat or throw into fire.

If any electrolyte should come into contact with your hands or clothes, wash it off thoroughly with water.

If any electrolyte should come into contact with your eyes, never rub the eyes. Rinse eyes thoroughly with water, and then consult a doctor.

#### CAUTION

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- When disposing the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.

- Do not heat or expose to flame.
- Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.

#### Warning

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C (140 °F) or incinerate.

## ■ About the battery charger

### **CAUTION!**

**To reduce the risk of fire, electric shock or product damage,**

- **Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.**

### **Battery charger**

This battery charger operates on AC between 110 V and 240 V.

But

- In the U.S.A. and Canada, the battery charger must be connected to a 120 V AC power supply only.
- When connecting to an AC supply outside of the U.S.A. or Canada, use a plug adaptor to suit the AC outlet configuration.
- When connecting to a supply of greater than AC 125 V, ensure the cord you use is suited to the voltage of the AC supply and the rated current of the battery charger.
- Contact an electrical parts distributor for assistance in selecting a suitable AC plug adaptor or AC cord set.

## ■ Cautions for Use

- Do not use any other USB connection cables except the supplied one or a genuine Panasonic USB connection cable (DMW-USBC1: optional).
- Always use a genuine Panasonic AV cable (DMW-AVC1: optional).
- Always use a genuine Panasonic HDMI micro cable (RP-CHEU15: optional).  
Part number: RP-CHEU15 (1.5 m) (5 feet)

**Keep this unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).**

- If you use this unit on top of or near a TV, the pictures and/or sound on this unit may be disrupted by electromagnetic wave radiation.
- Do not use this unit near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect this unit, disturbing the pictures and/or sound.
- If this unit is adversely affected by electromagnetic equipment and stops functioning properly, turn this unit off and remove the battery or disconnect AC adaptor (DMW-AC5PP: optional). Then reinsert the battery or reconnect AC adaptor and turn this unit on.

**Do not use this unit near radio transmitters or high-voltage lines.**

- If you record near radio transmitters or high-voltage lines, the recorded pictures and/or sound may be adversely affected.

# Contents

Information for Your Safety .....	3
Before Use .....	8
Standard Accessories.....	9
(Important) About the Waterproof/Dustproof and Anti-shock Performance of the Camera.....	10
Names and Functions of Main Parts .....	15
Charging the Battery.....	17
Inserting and Removing the Card (optional)/the Battery .....	18
Sequence of operations .....	19
Recording using the GPS function.....	21
Sensors (compass/altimeter/barometer) are operated.....	24
Remote Shooting .....	25
• Installing the smartphone/tablet app “Image App” .....	25
• Connecting Easily to a Smartphone/tablet (NFC).....	26
• Connecting to a smartphone/tablet.....	28
• Taking pictures via a smartphone/tablet (remote recording).....	30
• Playing back pictures in the camera .....	30
Reading the Owner’s Manual (PDF format) .....	31
Installing supplied software .....	32
Specifications.....	33
Digital Camera Accessory System .....	37
Digital Camera Accessory Order Form .....	38
Limited Warranty (ONLY FOR U.S.A. AND PUERTO RICO).....	39


## Before Use

Please be sure to read “(Important) About the Waterproof/Dustproof and Anti-shock Performance of the Camera” (P10) before using this unit underwater to prevent the unit from being mishandled, which may cause water to seep in.

- Do not apply strong shock or vibration by dropping or knocking the camera. Also, do not apply strong pressure to the camera.
  - Waterproof performance may be impaired.
  - Lens or LCD monitor may be damaged.
  - It may cause malfunction in the performance or the function.

### ■ When inner side of the lens is fogged (condensation)

This unit has been designed to prevent condensation by Anti-fog glass, however it may be caused by the environment in which the camera is used. It is not a malfunction or failure of the camera.

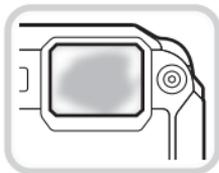

### What to do when inner side of the lens is fogged

- Turn off the power and open the side door in a place with constant ambient temperature, away from high temperatures, humidity, sand and dust. The fog will disappear naturally in 10 minutes to 2 hours with the side door open when the temperature of the camera gets close to the ambient temperature.
- Contact Panasonic if the fogging does not disappear.

### Conditions in which inner side of the lens may be fogged

Condensation may occur and the inner side of the lens may be fogged when the camera is used in areas that undergo a significant change in temperature or in high humidity, such as the following:

- When the camera is used underwater suddenly after being on a hot beach etc.
- When the camera is moved to a warm area from a cold area, such as at a ski resort or at high altitude
- When the side door is opened in a high-humidity environment

# Standard Accessories

Check that all the accessories are supplied before using the camera.  
Product numbers correct as of January 2013. These may be subject to change.

- 1 Battery Pack  
(Indicated as **battery pack** or **battery** in the text)  
Charge the battery before use.
- 2 Battery Charger  
(Indicated as **battery charger** or **charger** in the text)
- 3 AC Cable
- 4 USB Connection Cable
- 5 CD-ROM
  - Software
  - Owner's Manual for advanced featuresInstall on your PC before use.
- 6 Hand Strap



- Supplied accessories are not waterproof.
- SD Memory Card, SDHC Memory Card and SDXC Memory Card are indicated as **card** in the text.
- **The card is optional.**  
**You can record or play back pictures on the built-in memory when you are not using a card.**
- For information about optional accessories, refer to the "Digital Camera Accessory System".
- If any accessories are lost, customers should contact Panasonic's parts department at 1-800-833-9626 for further information about obtaining replacement parts.

## (Important) About the Waterproof/ Dustproof and Anti-shock Performance of the Camera

### Waterproof/Dustproof Performance

This camera's waterproof/dustproof rating complies with the "IPX8" and "IP6X" ratings. Provided the care and maintenance guidelines described in this document are strictly followed, this camera can operate underwater, to a depth not exceeding 13 m (43 feet) for a time not exceeding 60 minutes. (\*1)

### Anti-shock Performance

This camera also complies with "MIL-STD 810F Method 516.5-Shock". The camera has cleared a drop test from a height of 2 m (6.6 feet) onto 3 cm (0.1 feet) thick plywood. In most cases this camera should not sustain any damage if dropped from a height not exceeding 2 m (6.6 feet). (\*2)

### Withstand Load Performance

This camera complies with 100 kgf/220.5 lbf load tests. (\*3)

**This does not guarantee no destruction, no malfunction, or waterproofing in all conditions.**

- \*1 This means that the camera can be used underwater for specified time in specified pressure in accordance with the handling method established by Panasonic.
- \*2 "MIL-STD 810F Method 516.5-Shock" is the test method standard of the U.S. Defense Department, which specifies performing drop tests from a height of 122 cm (4 feet), at 26 orientations (8 corners, 12 ridges, 6 faces) using 5 sets of devices, and passing the 26 orientation drops within 5 devices. (If failure occurs during the test, a new set is used to pass the drop orientation test within a total of 5 devices)  
Panasonic's test method is based on the above "MIL-STD 810F Method 516.5-Shock". However, the drop height was changed from 122 cm (4 feet) to 200 cm (6.6 feet) dropping onto 3 cm (0.1 feet) thick plywood. This drop test was passed.  
(Disregarding appearance change such as loss of paint or distortion of the part where drop impact is applied.)
- \*3 According to the test conditions specified by Panasonic.

## ■ Handling of the camera

- Waterproofing is not guaranteed if the unit is subject to an impact as a result of being hit or dropped etc. If an impact to the camera occurs, it should be inspected (subject to a fee) by a Panasonic to verify that the waterproofing is still effective.
- When the camera is splashed with detergent, soap, hot spring, bath additive, sun oil, sun screen, chemical, etc., wipe it off immediately.
- Waterproof function of the camera is for sea water and fresh water only.
- Any malfunction caused by customer misuse, or mishandling will not be covered by the warranty.
- The inside of this unit is not waterproof. Water leakage will cause malfunction.
- Supplied accessories are not waterproof.
- Card and battery are not waterproof. Do not handle with a wet hand. Also, do not insert wet card or battery into the camera.
- Do not leave the camera for a long period of time in places where temperature is very low (at ski resorts or at high altitude etc.) or very high [above 40 °C (104 °F)], inside a car under strong sunlight, close to a heater, on the beach, etc. Waterproof performance may be degraded.

## ■ About the [Precautions] demonstration display ([Requirements for Underwater use])

- [Precautions] is displayed when the power is turned on for the first time after purchase, with the side door completely closed.
- Please check beforehand to maintain the waterproof performance.

### 1 Press ◀ to select [Yes], and press [MENU/SET].

- It will automatically skip to the clock setting screen if [No] is selected before it starts.

### 2 Press ◀/▶ to select the picture.

◀: Return to the previous screen

▶: View the next screen

- It can be forcefully ended by pressing [MENU/SET].
- When it is forcefully ended while checking by turning the unit off or pressing [MENU/SET], [Precautions] is displayed every time the power is turned on.

### 3 After the final screen (12/12), press [MENU/SET] to finish.

- When [MENU/SET] is pressed after the final screen (12/12), [Precautions] is not displayed from the next time the power is turned on.
- This can also be viewed from [Precautions] in the [Setup] menu.

## Check before using underwater

**Always wipe the rubber seal on the side door and the area where rubber seal sits with a dry, lint-free cloth.**

### 1 Check that there are no foreign objects on the inner side of the side door.

- If there is any foreign object, such as lint, hair, sand, etc., on the surrounding area, water will leak within a few seconds, causing malfunction.
- Wipe it off with a soft, dry cloth if there is any liquid.  
It may cause water leaks and malfunction if you use the camera with liquid adhered.
- If foreign objects are present, wipe them off with a dry, lint-free cloth.
- Be extremely careful to remove the small sand etc. that may adhere to the sides and corners of the rubber seal.


### 2 Check for cracks and deformation of the rubber seal on the side door.

- The integrity of the rubber seals may decrease after about 1 year, with use and age. To avoid permanently damaging the camera, the seals should be replaced once each year. Please contact Panasonic for related costs and other information.

### 3 Close the side door securely.

- Ⓐ Red part
- Ⓑ [LOCK] switch (gray part)
- Ⓒ Released state
- Ⓓ Locked state

- Lock the [LOCK] switch securely until the red part is no longer visible.
- To prevent water intrusion, be careful not to catch foreign objects such as liquids, sand, hair, dust, or the strap cord.

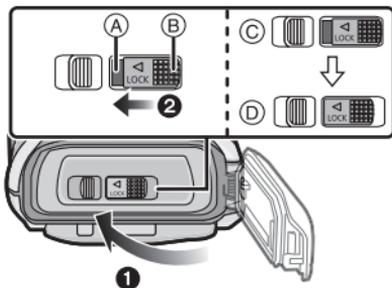

**Do not open or close the side door in places with sand and dust, close to water, or with wet hands. Sand or dust adhering may cause water leaks.**

## Using the camera underwater

- Use the camera underwater to 13 m (43 feet) with the water temperature between 0 °C and 40 °C (32 °F and 104 °F).
- Do not use for scuba diving (Aqualung).
- Do not use the camera at a depth of over 13 m (43 feet).
- Do not use it in the hot water over 40 °C (104 °F) (in the bath or hot spring).
- Do not use the camera underwater longer than 60 minutes continuously.
- Do not open or close the side door underwater.
- Do not apply shock to the camera underwater. (Waterproof performance may not be maintained, and there is a chance of water leak.)
- Do not dive into the water holding the camera. Do not use the camera in a location where the water will splash strongly, such as rapid flow or waterfall. (Strong water pressure may be applied, and it may cause malfunction.)
- The camera will sink in the water. Take care not to drop the camera and lose it underwater by securely placing the strap around your wrist or similar measure.

## Caring of the camera after using it underwater

**Do not open or close the side door until the sand and dust is removed by rinsing the camera with water.**

**Make sure to clean the camera after using it.**

- Thoroughly wipe off any water droplets, sand, and saline matter on your hands, body, hair, etc.
- It is recommended to clean the camera indoors, avoiding places where water spray or sand may fall.

**After using it underwater, always clean the camera rather than leaving it in a dirty state.**

- Leaving the camera with foreign objects or saline matter on it may cause damage, discoloration, corrosion, unusual odour, or deterioration of the waterproof performance.


### **1 Rinse with water with the side door closed.**

- After use at the seaside or underwater, soak the unit in fresh water pooled in a shallow container for 10 minutes or less.
- If the zoom button or camera [ON/OFF] button do not move smoothly, it may be caused by an adhesion of foreign objects. Using in such a state may cause malfunctions, such as locking up, so wash off any foreign objects by shaking the camera in fresh water.
- Bubbles may come out of the drainage hole when you immerse the camera in water, but this is not a malfunction.



**2 Drain water by holding the camera upside down and shaking it lightly a few times.**

- Make sure to put your hand through the strap to prevent the camera from falling.

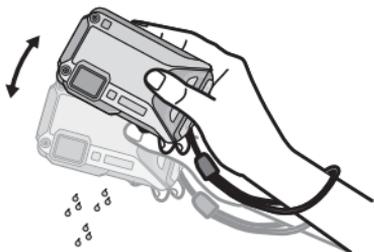

**3 Wipe off water drops on the camera with a soft, dry cloth and dry the camera in a shaded area that is well ventilated.**

- Dry the camera by standing it on a dry cloth. This unit incorporates drain design, draining water in gaps in the camera [ON/OFF] button and zoom button etc.
- Do not dry the camera with hot air from dryer or similar. Waterproof performance will deteriorate due to deformation.
- Do not use chemicals such as benzine, thinner, alcohol or cleanser, soap or detergents.




**4 Confirm that there are no water droplets, open the side door, and wipe off any water droplets or sand left inside using a soft, dry cloth.**

- Water droplets may adhere to the card or battery when the side door is opened without thoroughly drying. Also, water may accumulate in the gap around the card/battery slot or the terminal connector. Be sure to wipe any water off with a soft, dry cloth.
- The water droplets may seep into the camera when the side door is closed while it is still wet, causing condensation or failure.

# Names and Functions of Main Parts

- 1 Flash
- 2 Self-timer indicator/  
AF Assist Lamp/  
LED light
- 3 Lens
- 4 Speaker


- Be careful not to cover the speaker with your finger. Doing so may make sound difficult to hear.

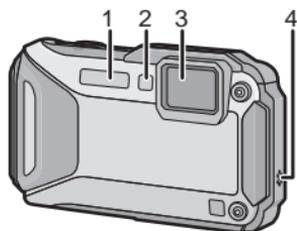


- 5 LCD monitor
- 6 [Wi-Fi] button
- 7 Wi-Fi® connection lamp
- 8 Zoom button
- 9 [▶] (Playback) button
- 10 Strap eyelet

- Be sure to attach the strap when using the camera to ensure that you will not drop it.
- Be sure to attach the strap to the strap eyelet.


- 11 Decorative hole
- 12 [MODE] button
- 13 [Q.MENU/ ] button/[ ] (Delete) button
- 14 [DISP.] button
- 15 [MENU/SET] button
- 16 Cursor buttons

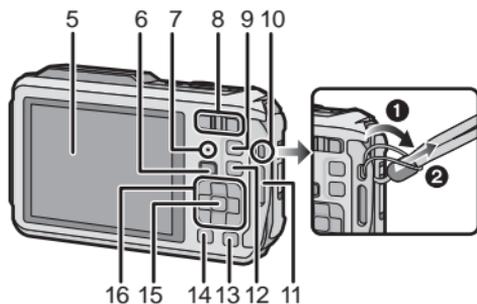


- 
- 17 Microphones
  - 18 GPS antenna
  - 19 Camera [ON/OFF] button
  - 20 GPS status indicator
  - 21 Shutter button
  - 22 Motion picture button

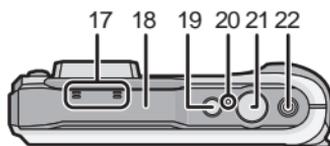

- 
- 23 Tripod mount
    - A tripod with a screw length of 5.5 mm (0.22 inch) or more may damage this unit if attached.
  - 24 NFC antenna [📶]

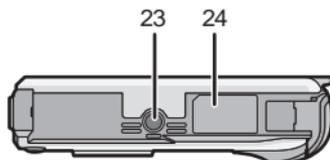

- 
- 25 [HDMI] socket
    - Do not connect with any cable other than an HDMI micro cable (RP-CHEU15: optional). Doing so may cause malfunction.
  - 26 Card slot
  - 27 Battery slot
    - When using an AC adaptor, ensure that the Panasonic DC coupler (DMW-DCC14: optional) and AC adaptor (DMW-AC5PP: optional) are used.
    - Always use a genuine Panasonic AC adaptor (DMW-AC5PP: optional).
    - When using an AC adaptor, use the AC cable supplied with the AC adaptor.

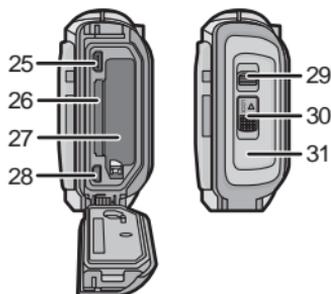


- 28 [AV OUT/DIGITAL] socket
  - 29 Release lever
  - 30 [LOCK] switch
  - 31 Side door
-

# Charging the Battery

Use the dedicated charger and battery.


- The battery is not charged when the camera is shipped. Charge the battery before use.
- Charge the battery with the charger indoors [10 °C to 30 °C (50 °F and 86 °F)].

## 1 Connect the AC cable.

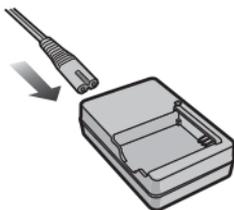

## 2 Attach the battery, paying attention to the direction of the battery.

- The [CHARGE] indicator (A) lights up and charging begins.

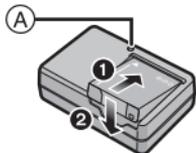

### ■ About the [CHARGE] indicator

On: Charging.

Off: Charging has completed. (Charging time: Approx. 165 min)

### ■ About batteries that you can use with this unit

The battery that can be used with this unit is DMW-BCM13PP.


# Inserting and Removing the Card (optional)/the Battery

- Check that this unit is turned off.
- **Confirm that there is no foreign object.**
- We recommend using a Panasonic card.

**1** **1:** Slide the [LOCK] switch (A), and release the lock.


**2:** Slide the release lever (B) and open the side door.

- Always use genuine Panasonic batteries (DMW-BCM13PP).
- If you use other batteries, we cannot guarantee the quality of this product.

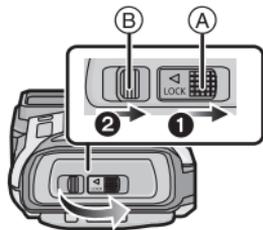

**2** **Battery:** Being careful about the battery orientation, insert all the way until you hear a locking sound and then check that it is locked by lever (C). Pull the lever (C) in the direction of the arrow to remove the battery.


**Card:** Push it securely all the way until you hear a “click” while being careful about the direction in which you insert it. To remove the card, push the card until it clicks, then pull the card out upright.

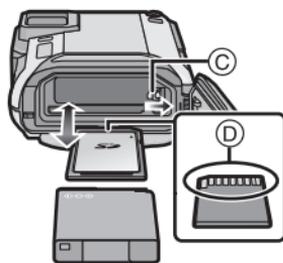

(D): Do not touch the connection terminals of the card.

**3** **Close the side door until it clicks, and then lock the [LOCK] switch by sliding it toward [◀].**

- Confirm that the red part on the [LOCK] switch is not showing.

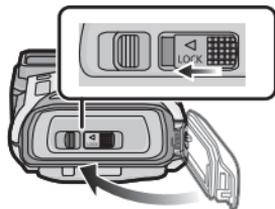

## Note


- Keep the Memory Card out of reach of children to prevent swallowing.

# Sequence of operations

## 1 Press camera [ON/OFF] button.

- The clock is not set when the camera is shipped. Set the date and time before using the camera.

## 2 Press the shutter button halfway to focus and then press it fully to take the picture.

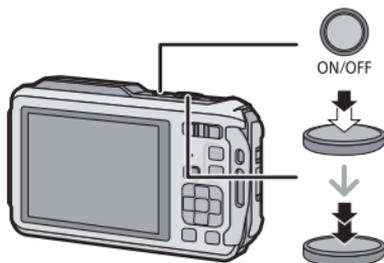

### ■ Selecting the Recording Mode

Press [MODE] to select the Recording Mode.

**A**: Take pictures with automatic settings.

**P**: Take pictures with your own settings.

**M**: The exposure is adjusted by the aperture value and the shutter speed that are manually adjusted.

**☺**: Record while checking the image effect.

**🏊**: This mode is optimal for taking pictures of sporting events, etc.

**⚙️**: This mode is optimal for taking pictures that show the snow as white as possible at a ski resort or a snow-covered mountain.

**🐠**: This mode is optimal for taking pictures underwater and at the beach.

**🐠**: This is optimal for taking pictures underwater deeper than 13 m (43 feet) by the use of the marine case (DMW-MCFT5: optional).

**🖼️**: This mode allows you to take panorama pictures.

**SCN**: Take pictures according to scene.

---

## ■ Recording Motion Pictures

Start recording by pressing the motion picture button.

- Stop the recording by pressing the motion picture button again.
  - Maximum time to record motion pictures continuously with [FHD/60p][G]/[FHD/60p]/[FHD/60i][G]/[FHD/60i] in [AVCHD] is 29 minutes 59 seconds.
  - Maximum time to record motion pictures continuously with [MP4] is 29 minutes 59 seconds or up to 4 GB. (For [FHD/30p] in [MP4] format, the file size is large and so the recordable time will drop below 29 minutes 59 seconds.)
- 

## ■ Setting the Menu

Press [MENU/SET] to display the menu screen to change the recording function, camera settings, and other settings.

---

## ■ Playing Back Pictures

Press [▶].

- Press ◀/▶ to select the picture.
- 

## ■ Deleting Pictures

Select the picture, and then press [🗑️].

- Confirmation screen is displayed. Picture is deleted by selecting [Yes].
- 

### ■ About the [LED Light] ([Setup])

If you set to [🔦], and press and hold down ▶ (⚡) on the recording standby screen, the LED light will come on for 60 seconds.



# Recording using the GPS function

## ■ About the “GPS”

GPS is an abbreviation of [Global Positioning System], which is a system that allows you to check your position utilizing GPS satellites.

Calculating the current position by receiving radio waves including orbit information and clock information from multiple GPS satellites is called positioning.

This unit is also compatible with the “GLONASS” satellite positioning system operated by the Russian government.

The unit can record location name information and latitude/longitude for the recorded image and automatically correct the time.

Your Panasonic Lumix digital still camera is GPS-equipped which can automatically record the precise location coordinates of where the photo was taken. The specific physical address of this location can easily be derived from this information.

If you upload such “geotagged” photos to the Internet, a social networking site or any other electronic media, the precise location of where the photo was taken will remain embedded in the photo and can be viewed by others.

Therefore, when taking digital still photos, care should be taken in determining whether you wish to have the GPS feature enabled or disabled.

## ■ Receiving signals from GPS satellites

- **It is recommended to use by holding the camera still for a while at an outdoor location clear to the sky, with the antenna pointed upward.**
- Radio waves from GPS satellites cannot be received properly at the following locations, so the positioning may not be possible or a significant error may occur.
  - Indoor/underground or underwater/in the woods/traveling in a train or a car etc./close to or between buildings/close to high voltage lines/inside a tunnel/close to mobile phones working on 1.5 GHz band etc.
- Do not cover the GPS antenna with your hands etc.
- Do not carry the unit inside a metallic case or similar when positioning. Positioning is not possible when the unit is covered by metal etc.

## Acquiring of the GPS information

When [GPS Setting] is set to [ON], positioning is performed at regular intervals. When the positioning is successful, location name information and latitude/longitude are acquired.

- 1 Press [MENU/SET].
- 2 Press ▲/▼/◀/▶ to select [GPS/Sensor] menu, and then press [MENU/SET].
- 3 Press ▲/▼ to select [GPS Setting], and then press [MENU/SET].
- 4 Press ▲/▼ to select [ON], and then press [MENU/SET].

- Exit the menu after it is set.

### ■ About the Icon indicating positioning status

Positioning is performed by this unit when radio waves from 3 or more GPS satellites are received.



- The bar moves up the scale according to the number of GPS satellites from which signals are being received. When the bar has filled the scale and positioning has been successful, the indicator goes blue.

## Update the GPS information

When the displayed location name information is different from the current location or when the positioning is not successful, move to a location where the radio waves from GPS satellites can be received better and perform the positioning update.

- 1 Press [MENU/SET].**
- 2 Press ▲/▼/◀/▶ to select [GPS/Sensor] menu, and then press [MENU/SET].**
- 3 Press ▲/▼ to select [Repositioning], and then press [MENU/SET].**
  - Positioning is started and the current location information is updated once the positioning is successful.

### **When used during overseas travel etc.**

- The GPS may not operate in China or close to the Chinese border in neighbouring countries. (As of January 2013)
- The usage of GPS, etc., may be restricted depending on the country or the region. This camera has a GPS function, so check with the embassies or travel agencies etc. prior to your overseas travel regarding any restrictions on cameras with a built-in GPS function.


# Sensors (compass/altimeter/barometer) are operated

The direction, altitude, and atmospheric pressure can be measured and recorded in the recorded images.

- Information measured on this unit is only a rough indication. Do not use it for technical purposes.
- When using this unit for full-scale mountain climbing, trekking, or underwater, use the measured information (direction, altitude, depth, atmospheric pressure) only as a rough indication, and always carry a map and purpose-built measurement tools.

- 1 Press [MENU/SET].
- 2 Press ▲/▼/◀/▶ to select [GPS/Sensor] menu, and then press [MENU/SET].
- 3 Press ▲/▼ to select [Sensor Settings], and then press [MENU/SET].
- 4 Press ▲/▼ to select [ON], and then press [MENU/SET].

- Exit the menu after it is set.
- To switch the environment information screen, press [DISP.] several times.

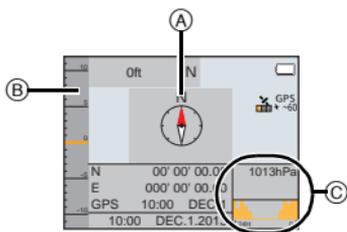

## (A) Compass

- 16 bearings are measured based on the direction the lens of the camera is pointing in.
- The colored portion of the compass needle points north.

## (B) Altimeter

You can check the altitude of the current location.

- Displaying range is -600 m (-2000 feet) to 9000 m (30000 feet).

## (C) Barometer

With the current atmospheric pressure as a reference, it is displayed on the graph within the range of -10 hPa to +10 hPa.

(Atmospheric pressure out of range cannot be displayed in details)

# Remote Shooting

You can remotely operate the camera using a smartphone/tablet.

You need to install “Panasonic Image App” (referred to as “Image App” from this point on) on your smartphone/tablet.

## Installing the smartphone/tablet app “Image App”

The “Image App” is an application provided by Panasonic.

	For Android™ apps	For iOS apps
Version	1.2 or higher	
OS	Android 2.2~ Android 4.2*	iOS 4.3~iOS 6.0
Installation procedure	<ol style="list-style-type: none"><li>1 Connect your Android device to a network.</li><li>2 Select “Google Play™ Store”.</li><li>3 Enter “Image App” into the search box.</li><li>4 Select “Image App” and install it.</li></ol> <p>• The icon will be added to the menu.</p> 	<ol style="list-style-type: none"><li>1 Connect the iOS device to the network.</li><li>2 Select “App Store™”.</li><li>3 Enter “Image App” into the search box.</li><li>4 Select “Image App” and install it.</li></ol> <p>• The icon will be added to the menu.</p> 

• The service may not be able to be used properly depending on the type of smartphone/tablet being used. For compatible devices, see the following support site.

<http://panasonic.jp/support/global/cs/dsc/> (This Site is English only.)

• When downloading the app on a mobile network, high packet communication fees may be incurred depending on the details of your contract.

\* Connecting to this unit with [Wi-Fi Direct] requires Android OS 4.0 or higher and Wi-Fi Direct™ support.

## Connecting Easily to a Smartphone/tablet (NFC)

Using the NFC "Near Field Communication" function, you can easily transfer data necessary for a Wi-Fi connection between this camera and the smartphone/tablet.

### ■ Compatible models

This function can be used with the NFC compatible device with Android (OS version 2.3.3 or higher). (excluding some models)

#### Preparation:

(On the camera)

- Set [NFC Operation] to [ON].

(On your smartphone/tablet)


- Check that your smartphone/tablet is a compatible model.
- Turn on the Wi-Fi function.
- Install the "Image App" in advance. (P25)

### ■ Controlling this camera remotely with a smartphone/tablet by using the NFC function

You can use the following functions by controlling this camera remotely with your smartphone/tablet.

- Remote recording (P30)
- Playing back the pictures in the camera (P30)
- Saving the pictures in the camera to the smartphone/tablet, or sending them to WEB services (P30)

- 1 Launch "Image App" on your smartphone/tablet.**
- 2 Touch the smartphone/tablet to [  ] of the camera.**
  - This function can be used even while the camera is turned off.
- 3 When the connection confirmation screen is displayed, press /▶ to select [Yes], and then press [MENU/SET].**
- 4 Touch the smartphone/tablet to [  ] of the camera again.**
  - When the smartphone/tablet has connected, an image of this camera will be displayed on the smartphone/tablet.
  - The connected smartphone/tablet is registered to this camera. A connection can be established with the operation of steps **1** and **2** from the second time onwards.

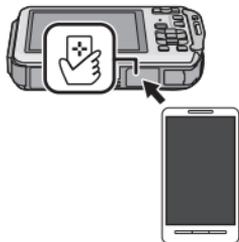


#### Note

- You can register up to 20 smartphones/tablets. When the number exceeds 20, registrations will be deleted, starting from the oldest touched one.
- Performing [Reset Wi-Fi Settings] will delete the smartphone/tablet registration.

## ■ Transferring images in this camera to a smartphone/tablet one at a time by using the NFC function

You can transfer pictures in this camera to the smartphone/tablet. This function is useful when you want to transfer an image to the smartphone/tablet of your family or friend.

- 1 Launch “Image App” on the smartphone/tablet at the transfer destination.
  - 2 Play back the picture you want to transfer to the smartphone/tablet in this camera.
  - 3 Touch the smartphone/tablet to [  ] of the camera.
- Multiple pictures cannot be transferred as a batch.
  - Depending on the environment you are using, it may take a few minutes to complete the image transfer.

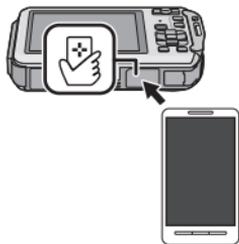

## ■ About NFC function

- If the camera is not recognized even when touching the smartphone/tablet, change positions and try again.
- Do not touch this camera to the smartphone/tablet strongly.
- For information on the operation and settings of NFC-compatible smartphones/tablets, refer to the operating instructions of your device.
- If there is a metal object between this camera and the smartphone/tablet, reading may fail. Also, putting a sticker around the NFC area may deteriorate the communication performance.

## Connecting to a smartphone/tablet

### Preparations:

- Install the “Image App” in advance. (P25)

### 1 Press [Wi-Fi].




### 2 Press $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ to select [New Connection], and then press [MENU/SET].

- When connecting with the setting you used before, you can select the connection destination from [History Connection] or [Favorite Connection].



### 3 Press $\blacktriangle/\blacktriangledown$ to select [Remote Shooting], and then press [MENU/SET].

- The information (SSID and password) required for directly connecting your smartphone/tablet to this unit is displayed.
- To change the connection method, press [DISP.], and then select the connection method. For details, refer to “Changing the connection method”. (P29)

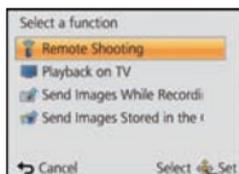

### On your smartphone/tablet (The default connection method is set to [Manual Connection].)

- 4 On the setting menu of your smartphone/tablet, turn on the Wi-Fi function.
- 5 Select the SSID that matches the one displayed on the screen of this unit, and then enter the password.
- 6 Start “Image App” on your smartphone/tablet. (P25)
  - When the connection is complete, live images being captured by the camera are displayed on the smartphone/tablet.

## ■ Changing the connection method

- When connecting with [Via Network]

(On the camera)

- 1** Press ▲/▼ to select [Via Network], and then press [MENU/SET].
- 2** Select the method for connecting to a wireless access point, and set.

(On your smartphone/tablet)

- 3** On the setting menu of your smartphone/tablet, turn on the Wi-Fi function.
- 4** Select the wireless access point you want to connect to, and set.
- 5** Start “Image App” on your smartphone/tablet. (P25)

- 
- When connecting with [Wi-Fi Direct] or [WPS Connection]

(On the camera)

- 1** Press ▲/▼ to select [Direct], and then press [MENU/SET].


Connection method	Description of settings
[Wi-Fi Direct]	<ol style="list-style-type: none"><li>1 Set the device to Wi-Fi Direct™ mode.</li><li>2 Press ▲/▼ to select [Wi-Fi Direct] and then press [MENU/SET].</li><li>3 Press ▲/▼ to select the device to connect to, and then press [MENU/SET].<ul style="list-style-type: none"><li>• Read the operating instructions of your device for details.</li></ul></li></ol>
[WPS Connection]	<b>[WPS (Push-Button)]</b> <ol style="list-style-type: none"><li>1 Press ▲/▼ to select [WPS (Push-Button)] and then press [MENU/SET].</li><li>2 Set the device to WPS mode.<ul style="list-style-type: none"><li>• You can wait longer for a connection by pressing the [DISP.] button on this unit.</li></ul></li></ol>
	<b>[WPS (PIN code)]</b> <ol style="list-style-type: none"><li>1 Press ▲/▼ to select [WPS (PIN code)] and then press [MENU/SET].</li><li>2 Enter the PIN code of the device into this unit.</li></ol>

(On your smartphone/tablet)

- 2** Start “Image App” on your smartphone/tablet. (P25)

## Taking pictures via a smartphone/tablet (remote recording)


Select [  ] on the smartphone/tablet.

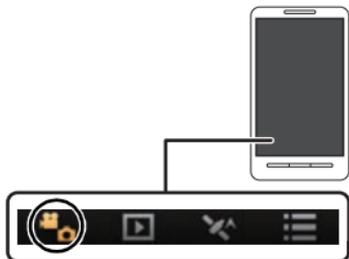

- The recorded images are saved in the camera.
- Motion pictures can also be recorded (excluding [FHD/60p/G]/[FHD/60p]).
- Some settings are not available.
- The screen differs depending on the operating system.

## Playing back pictures in the camera

Select [  ] on a smartphone/tablet.

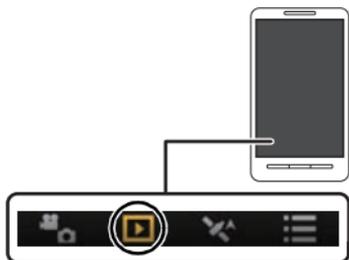


- You can save pictures on the smartphone/tablet.
- Motion pictures cannot be played back.
- You can send pictures to a WEB service, etc.
- The screen differs depending on the operating system.

# Reading the Owner's Manual (PDF format)

More detailed instructions on the operation of this camera are contained in "Owner's Manual for advanced features (PDF format)" in the supplied CD-ROM. Install it on your PC to read it.

## ■ For Windows

- 1 Turn the PC on and insert the CD-ROM containing the Owner's Manual (supplied).
- 2 Click the [Owner's Manual].
- 3 Select the desired language and then click [Owner's Manual] to install.  
Ⓐ To return to the install menu.
- 4 Double-click the "Owner's Manual" shortcut icon on the desktop.

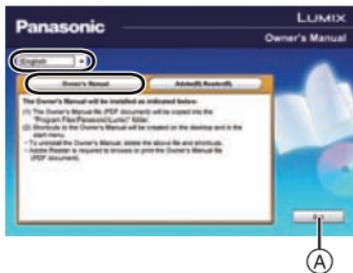

## ■ When the Owner's Manual (PDF format) will not open

You will need Adobe Acrobat Reader 5.0 or later, or Adobe Reader 7.0 or later to browse or print the Owner's Manual (PDF format).

- You can download and install a version of Adobe Reader that you can use with your OS from the following website.

<http://get.adobe.com/reader/otherversions/>

# Installing supplied software

- The supplied CD-ROM includes the following software.
  - PHOTOfunSTUDIO 9.1 PE (WindowsXP/Vista/7/8)
  - LoiLoScope 30 day full trial version (WindowsXP/Vista/7/8)  
(This will only install a shortcut to the trial version download site.)
- Before inserting the CD-ROM, close all running applications.

## 1 Check the environment of your PC.

- For details about information such as the operating environment or operating method, refer to the “Owner’s Manual for advanced features (PDF format)” or the operating instructions for the respective software programs.

## 2 Insert the CD-ROM with the supplied software.

- When you insert the supplied CD-ROM, the install menu will start.

## 3 Click on the [Applications] on the install menu.

## 4 Click on the [Recommended Installation].

- Proceed with installation according to messages appearing on the screen.

### Note

- The software compatible with your PC will be installed.
- “PHOTOfunSTUDIO” and “LoiLoScope” are not compatible with Mac.

# Specifications

Specifications are subject to change without notice.

## Digital Camera:

Information for your safety

<b>Power Source:</b>	DC 5.1 V
<b>Power Consumption:</b>	1.5 W (When recording) 1.1 W (When playing back)

<b>Camera effective pixels</b>	16,100,000 pixels	
<b>Image sensor</b>	1/2.33" MOS sensor, total pixel number 17,500,000 pixels, Primary color filter	
<b>Lens</b>	Optical 4.6× zoom, f=4.9 mm to 22.8 mm (35 mm film camera equivalent: 28 mm to 128 mm)/F3.3 (Wide) to F5.9 (Tele)	
<b>Image stabilizer</b>	Optical method	
<b>Focus range</b>	Normal	30 cm (0.98 feet) to ∞
	Macro/ Intelligent auto/ Motion Picture	5 cm (0.16 feet) (Wide)/30 cm (0.98 feet) (Tele) to ∞
	Scene Mode	There may be differences in the above settings.
<b>Shutter system</b>	Electronic shutter+ Mechanical shutter	
<b>Minimum Illumination</b>	Approx. 12 lx (when i-low light is used, the shutter speed is 1/30th of a second)	
<b>Shutter speed</b>	4 seconds to 1/1300th of a second [Starry Sky] Mode: 15 seconds, 30 seconds	
<b>Exposure</b>	Program AE (P)/Manual Exposure (M)	
<b>Metering mode</b>	Multiple	

<b>LCD monitor</b>	3.0" TFT LCD (4:3) (Approx. 460,000 dots) (field of view ratio about 100%)
<b>Microphones</b>	Stereo
<b>Speaker</b>	Monaural
<b>Recording media</b>	Built-in Memory (Approx. 10 MB)/SD Memory Card/ SDHC Memory Card/SDXC Memory Card
<b>Recording file format</b>	
<b>Still Picture</b>	JPEG (based on "Design rule for Camera File system", based on "Exif 2.3" standard, DPOF corresponding)/MPO
<b>Motion pictures</b>	AVCHD/MP4
<b>Audio compression format</b>	AVCHD: Dolby® Digital (2 ch) MP4: AAC (2 ch)
<b>Interface</b>	
<b>Digital</b>	"USB 2.0" (High Speed)
<b>Analog video</b>	NTSC
<b>Audio</b>	Audio line output (monaural)
<b>Terminal</b>	
<b>[AV OUT/DIGITAL]</b>	Dedicated jack (8 pin)
<b>[HDMI]</b>	MicroHDMI TypeD
<b>Dimensions</b> (excluding the projecting parts)	Approx. 109.2 mm (W)×67.4 mm (H)×28.9 mm (D) [4.30"(W)×2.65"(H)×1.14"(D)]
<b>Mass (weight)</b>	Approx. 214 g/0.471 lb (with card and battery) Approx. 188 g/0.414 lb (excluding card and battery)
<b>Operating temperature</b>	−10 °C* to 40 °C (14 °F* to 104 °F) * The performance of the battery (number of recordable pictures/operating time) may decrease temporarily when using in a temperature between −10 °C and 0 °C (14 °F and 32 °F) (cold places such as ski resorts or places at high altitude).
<b>Operating humidity</b>	10%RH to 80%RH
<b>Language select</b>	[ENGLISH]/[ESPAÑOL]

<b>Bearing sensor</b>	16 bearing detection (with angular position correction function by the 3 axes acceleration sensor, with automatic declination correction, and with automatic offset adjustment function)
<b>Atmospheric pressure/altitude sensor</b>	
<b>Atmospheric pressure</b>	Measurement range 300 hPa to 1100 hPa, with 24 hour memory function in 1 hPa unit (every 1.5 hours)
<b>Altitude</b>	Convert atmospheric pressure to altitude using ISA [International Standard Atmosphere], accuracy: -5 m (-16 feet) to +5 m (16 feet)
<b>Depth</b>	Displays in 3 levels [displays 0 m (0 feet) to 13 m (43 feet) in 3 levels]
<b>Waterproof performance</b>	Equivalent to IEC 60529 "IPX8". [Usable for 60 minutes in 13 m (43 feet) water depth]
<b>Crash resistance performance</b>	<p>The test method of the camera is in compliance with "MIL-STD 810F Method 516.5-Shock"*.</p> <p>* "MIL-STD 810F Method 516.5-Shock" is the test method standard of the U.S. Defense Department, which specifies performing drop tests from a height of 122 cm (4 feet), at 26 orientations (8 corners, 12 ridges, 6 faces) using 5 sets of devices, and passing the 26 orientation drops within 5 devices.</p> <p>(If failure occurs during the test, a new set is used to pass the drop orientation test within a total of 5 devices)</p> <ul style="list-style-type: none"> <li>• Panasonic's test method is based on the above "MIL-STD 810F Method 516.5-Shock". However, the drop height was changed from 122 cm (4 feet) to 200 cm (6.6 feet) dropping onto 3 cm (0.1 feet) thick plyboard. This drop test was passed. (Disregarding appearance change such as loss of paint or distortion of the part where drop impact is applied.)</li> </ul> <p><b>There is no guarantee of not breaking or malfunctioning under all conditions.</b></p>
<b>Withstand Load Performance</b>	100 kgf/220.5 lbf (According to the test conditions specified by Panasonic)
<b>Dustproof performance</b>	Equivalent to IEC 60529 "IP6X".

## Wireless transmitter

<b>Compliance standard</b>	IEEE 802.11b/g/n (standard wireless LAN protocol)
<b>Frequency range used (central frequency)</b>	2412 MHz to 2462 MHz (1 to 11ch)
<b>Encryption method</b>	Wi-Fi compliant WPA <sup>TM</sup> /WPA2 <sup>TM</sup>
<b>Access method</b>	Infrastructure mode

## Battery Charger (Panasonic VSK0800):

Information for your safety

<b>Input:</b>	~ 110 V to 240 V, 50/60 Hz, 0.2 A
<b>Output:</b>	=== 4.2 V, 0.65 A
<b>Operating temperature:</b>	0 °C* to 40 °C (32 °F* to 104 °F) * The battery cannot be recharged in a temperature less than 0 °C (32 °F). (The [CHARGE] indicator blinks when the battery cannot be recharged.)

## Equipment mobility:

Movable

## Battery Pack (lithium-ion) (Panasonic DMW-BCM13PP):

Information for your safety

<b>Voltage/capacity:</b>	3.6 V/1250 mAh
--------------------------	----------------

# Digital Camera Accessory System

Accessory#	Illustration	Description
DMW-BCM13		Battery Pack
DMW-AC5		AC Adaptor*
DMW-DCC14		DC Coupler*
RP-CHEU15		HDMI micro Cable
DMW-MCFT5		Marine Case
DMW-USBC1		USB Connection Cable
DMW-AVC1		AV Cable

Product numbers correct as of January 2013. These may be subject to change.

\* The AC Adaptor (optional) can only be used with the designated Panasonic DC Coupler (optional). The AC adaptor (optional) cannot be used by itself.

• NOTE: Accessories and/or model numbers may vary between countries. Consult your local dealer.

# Digital Camera Accessory Order Form

Please photocopy this form when placing an order.

1. Digital Camera Model # \_\_\_\_\_

2. Items Ordered

Accessory #	Description	Price Each	Quantity	Total Price
Shipping & Handling				\$6.95
Subtotal				
Your State & Local Sales Tax				
Total				

3. Method of payment (check one)

American Express

VISA

Credit Card # \_\_\_\_\_

MasterCard

Expiration Date \_\_\_\_\_

Discover

Customer Signature \_\_\_\_\_

(Please do not send cash)

4. Shipping information (UPS delivery requires complete street address)

Ship To:

Mr.

Mrs.

Ms.

First \_\_\_\_\_ Last \_\_\_\_\_

Phone#:

Day ( ) \_\_\_\_\_

Street Address \_\_\_\_\_

Night ( ) \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

TO OBTAIN ANY OF OUR DIGITAL CAMERA ACCESSORIES YOU CAN DO ANY OF THE FOLLOWING:

VISIT YOUR LOCAL PANASONIC DEALER

OR

CALL PANASONIC'S ACCESSORY ORDER LINE AT 1-800-332-5368

[6 AM-6 PM M-F, PACIFIC TIME]

OR

MAIL THIS ORDER TO: PANASONIC NATIONAL PARTS CENTER

20421 84th Ave S., Kent, WA 98032

# Limited Warranty

## (ONLY FOR U.S.A. AND PUERTO RICO)

**Panasonic Consumer Marketing Company of North America,  
Division of Panasonic Corporation of North America**  
One Panasonic Way, Secaucus, New Jersey 07094

### Panasonic Products Limited Warranty

#### Limited Warranty Coverage (For USA and Puerto Rico Only)

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Marketing Company of North America (referred to as “the warrantor”) will, for the length of the period indicated on the chart below, which starts with the date of original purchase (“warranty period”), at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

Product or Part Name	Parts	Labor
Digital Camera	1 Year	1 Year
All included Accessories (Except Non-Rechargeable Batteries)	90 Days	Not Applicable
Only Non-Rechargeable Batteries	10 Days	Not Applicable

During the “Labor” warranty period there will be no charge for labor. During the “Parts” warranty period, there will be no charge for parts. This Limited Warranty excludes both parts and labor for non-rechargeable batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold “as is”.

#### Mail-In Service

For assistance in the U.S.A. and Puerto Rico in obtaining repairs, please ship the product prepaid to:

**Panasonic Exchange Center**  
4900 George McVay Drive  
Suite B  
McAllen, TX 78503  
[panacare@us.panasonic.com](mailto:panacare@us.panasonic.com)

#### Online Repair Request

To submit a new repair request and for quick repair status visit our Web Site at [www.panasonic.com/repair](http://www.panasonic.com/repair).

When shipping the unit, carefully pack, include all supplied accessories listed in the Owner's Manual, and send it prepaid, adequately insured and packed well in a carton box. When shipping Lithium Ion batteries please visit our Web Site at [www.panasonic.com/BatteryHandling](http://www.panasonic.com/BatteryHandling) as Panasonic is committed to providing the most up to date information. Include a letter detailing the complaint, a return address and provide a daytime phone number where you can be reached. A valid registered receipt is required under the Limited Warranty.

**IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD, THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.**

### **Limited Warranty Limits And Exclusions**

This warranty ONLY COVERS failures due to defects in materials ONLY workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE".**

**THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.**

(As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but for illustration only.)

**ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

**PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.**

## **Customer Services Directory (United States and Puerto Rico)**

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/help>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at:

1-800-211-PANA (7262)

Monday-Friday 9am-9pm, Saturday-Sunday 10am-7pm EST

**For hearing or speech impaired TTY users, TTY: 1-877-833-8855**

## **Accessory Purchases (United States and Puerto Rico)**

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pstc.panasonic.com>

Or, send your request by E-mail to:

[npcparts@us.panasonic.com](mailto:npcparts@us.panasonic.com)

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only)

(Monday-Friday 9am-9pm EST)

Panasonic National Parts Center

20421 84th Ave S., Kent, WA 98032

(We accept Visa, Master Card, Discover Card and American Express.)

**For hearing or speech impaired TTY users, TTY: 1-866-605-1277**

**As of October 2012**

This product incorporates the following software:

- (1) the software developed independently by or for Panasonic Corporation,
- (2) the software owned by third party and licensed to Panasonic Corporation and/or,
- (3) open sourced software including the software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>), and the software written by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)).

For the software categorized as (1) and (2), please view the information by pressing [MENU/SET], displaying [Setup] → [Version Disp.], and then pressing [MENU/SET]. For the software categorized as (3), please refer to the applicable license terms in the following "Owner's Manual for advanced features (PDF format)".

- SDXC Logo is a trademark of SD-3C, LLC.
- Manufactured under license from Dolby Laboratories.  
Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- HDAVI Control™ is a trademark of Panasonic Corporation.
- Mac and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- App Store is a service mark of Apple Inc.
- Android and Google Play are trademarks or registered trademarks of Google Inc.

• “AVCHD”, “AVCHD Progressive” and the “AVCHD Progressive” logo are trademarks of Panasonic Corporation and Sony Corporation.

• QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.

• The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance.

• The Wi-Fi Protected Setup Mark is a mark of the Wi-Fi Alliance.

• “Wi-Fi”, “Wi-Fi Protected Setup”, “Wi-Fi Direct”, “WPA” and “WPA2” are marks or registered marks of the Wi-Fi Alliance.

• DLNA, the DLNA Logo and DLNA CERTIFIED are trademarks, service marks, or certification marks of the Digital Living Network Alliance.

• This product uses “DynaFont” from DynaComware Corporation. DynaFont is a registered trademark of DynaComware Taiwan Inc.

• Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard (“AVC Video”) and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC.

See <http://www.mpegla.com>.

**AVCHD**™  
Progressive



Panasonic Consumer Marketing Company of North America,  
Division of Panasonic Corporation of North America

One Panasonic Way, Secaucus, NJ 07094

© Panasonic Corporation 2013

Printed in Japan