



GIMA

PROFESSIONAL MEDICAL PRODUCTS

Gima S.p.A. – Via Marconi, 1 - 20060 Gessate (MI) Italy
Italia: tel 199 400 401 – fax 199 400 403 – gima@gimaitaly.com
Export: phone + 39 02 953854209/221/225 – fax + 39 02 95380056
- export@gimaitaly.com – www.gimaitaly.com

CODE 25567 BATH THERMOMETER – USER MANUAL

Please read the instructions carefully to ensure accurate temperatures and safe operation.

IMPORTANT SAFETY INFORMATION:

- Do not allow children to take bath temperature unattended.
- Never leave children alone and unsupervised in the bath.
- The bath thermometer is only a simple water temperature indicator. Always check the temperature of the bath water with the back of your hand before putting child into bath.
- Do not use thermometer if broken or damaged.
- Do not place it into water beyond 70° C.
- Do not recharge battery. Properly dispose of the battery, keeping it from small children and heat.
- Always replace with new battery.

FEATURES:

- Measurement range: 0° C to 70° C
- When water temperature is higher than 70° C, the LCD displays “Hi” and it displays “Lo” when water temperature is lower than 0° C.

OPERATION:

- Press the On/Off button; the LCD displays the room temperature.
- Put the Bath Thermometer on the water, LCD displays the accurate water temperature within 90 seconds.
- When water temperature ranges from 38° C to 42° C, LED lights persistently, which means the temperature is suitable for bath.
- Press and hold the On/Off button to turn off the thermometer.

HOW TO CARE FOR THIS PRODUCT:

- Clean the thermometer by using isopropyl alcohol or soap and water before and after use.
- Store Bath Thermometer in a cool, dry place and away from direct sunlight while not in use.
- Do not open the bath thermometer except to replace the battery.
- Do not drop the thermometer, as this may ruin the unit.
- Turn off the bath thermometer soon after use to save battery and prolong the battery life.

CHANGING THE BATTERY:

- Make sure a battery of the same type (L1142) is on hand.
- Remove battery compartment lid with screwdriver.
- Replace the batteries.
- Properly dispose of the old batteries.



Disposal: The product must not be disposed of along with other domestic waste. The users must dispose of this equipment by bringing it to a specific recycling point for electric and electronic equipment. For further information on recycling points contact the local authorities, the local recycling center or the shop where the product was purchased. If the equipment is not disposed of correctly, fines or penalties may be applied in accordance with the national legislation and regulations.

GIMA WARRANTY CONDITIONS

Congratulations for purchasing a GIMA product.

This product meets high qualitative standards both as regards the material and the production.

The warranty is valid for 12 months from the date of supply of GIMA.

During the period of validity of the warranty, GIMA will repair and/or replace free of charge all the defected parts due to production reasons. Labor costs and personnel traveling expenses and packaging not included.

All components subject to wear are not included in the warranty.

The repair or replacement performed during the warranty period shall not extend the warranty.

The warranty is void in the following cases: repairs performed by unauthorized personnel or with non-original spare parts, defects caused by negligence or incorrect use.

GIMA cannot be held responsible for malfunctioning on electronic devices or software due to outside agents such as: voltage changes, electro-magnetic fields, radio interferences, etc.

The warranty is void if the above regulations are not observed and if the serial code (if available) has been removed, cancelled or changed.

The defected products must be returned only to the dealer the product was purchased from.

Products sent to GIMA will be rejected.



Fabbricante/Manufacturer:
Gima S.p.A. - Gessate (MI) - Italy