



XP-8000-Atom Quick Start Guide

Version 1.2, April 2012

Congratulations!

Congratulations on purchasing XP-8000-Atom - the most popular automation solution for remote monitoring and control application. This Quick Start Guide will provide information needed to get started with XP-8000-Atom. Please also consult the User Manual for detailed information on the setup and use of XP-8000-Atom.

What's in the Box?

In addition to this guide, the package includes the following items:



XP-8000-Atom Module

XP-8141-Atom
XP-8341-Atom
XP-8741-Atom



8 GB CF Card



Software Utility CD



Screw Driver

1C016
2.4 mm


Preparing for Start-up Your XP-8000-Atom

- **Power Supply: +10 ~ +30 VDC (Ex: DP-665)**
http://www.icpdas.com/products/Accessories/power_supply/power_list.htm
- **Monitor: 800 x 600 ~ 1600 x 1200**
- **USB Mouse**
- **USB Keyboard**

1

Connecting to PC and Other Supported Devices

- i. Connect PC to the LAN port through a hub.
- ii. Connect the USB mouse and USB keyboard to the USB port.
- iii. Connect the monitor to the VGA port.
- iv. Connect the +24 V_{DC} power supply to PWR1 and GND terminals.

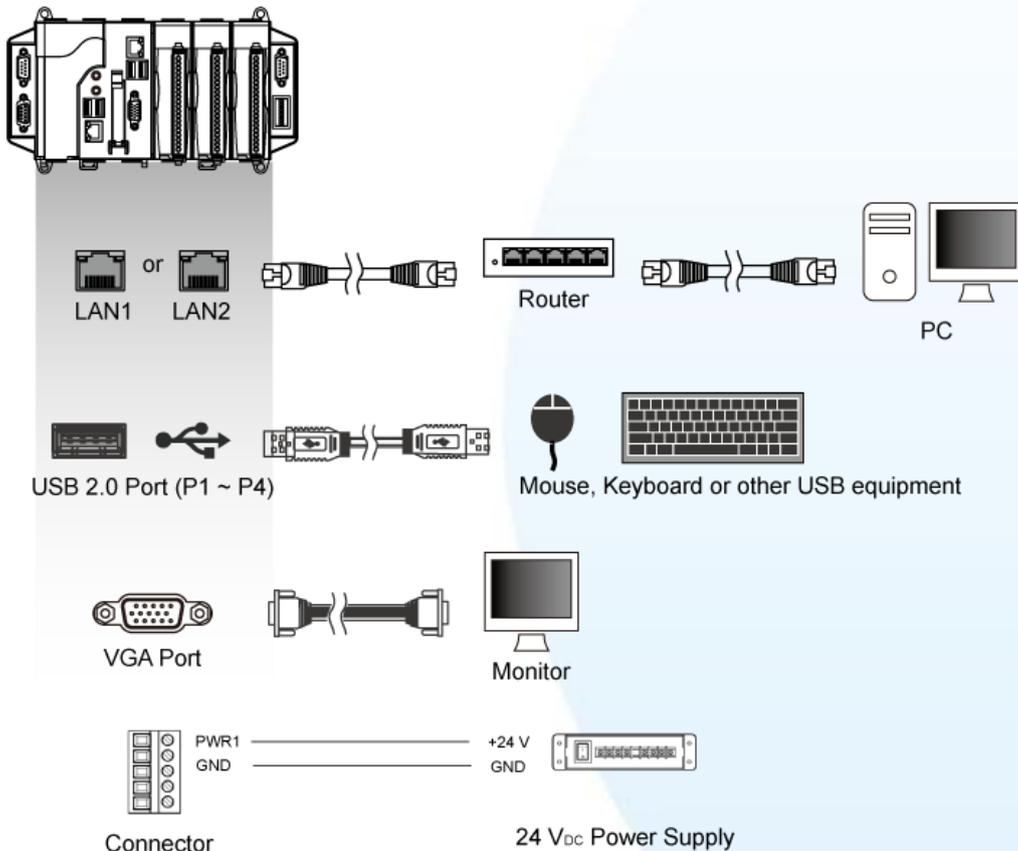


2

Inserting the I/O Modules

Only high profile I-8K and I-87K series modules can be plugged.

For more information about this expansion I/O modules, please refer to http://www.icpdas.com/products/PAC/xpac/IO_Expansion.htm

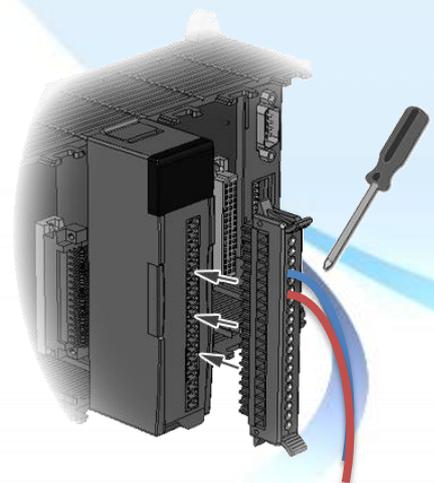


3

Enabling/Disabling the EWF for Disc Protection

The EWF protects the C disk on XP-8000-Atom for protecting the system from virus infection and harsh environments, if you want to install the application or modify the system settings, you must first disable it. After the operation has been completed, EWF needs to be enabled.

Step 1 Disable EWF:

- i. Double-Click XPAC Utility located on desktop
- ii. Click EWF operation tab, Check Disable option and click Setting button

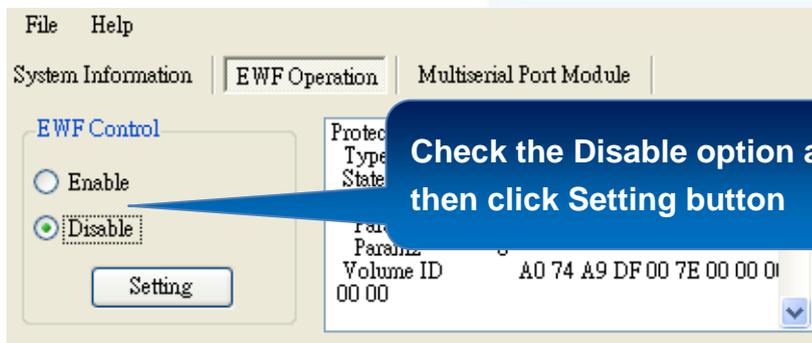


- iii. Click OK button on pop-up message box, then reboot the XP-8000-Atom

Step 2 Install the application or modify the system settings

Step 3 Enable EWF:

- i. Double-Click XPAC Utility located on desktop
- ii. Click EWF operation tab, Check Enable option and click Setting button

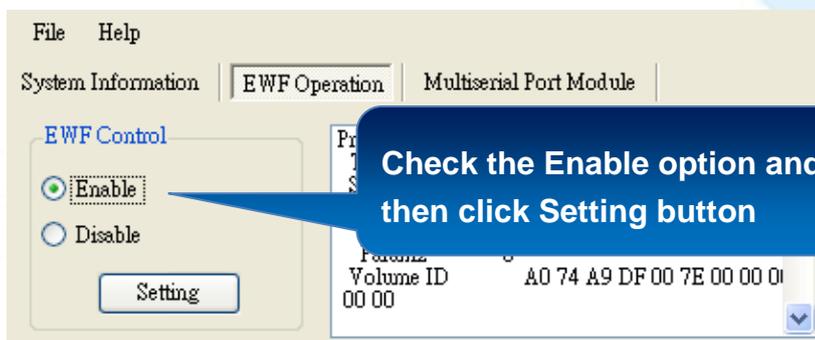


- iii. Click OK button on pop-up message box, then reboot the XP-8000-Atom


4 Changing System Settings

When you turn on the XP-8000-Atom and learned how to enable and disable the EWF, next you need to configure two system settings for your XP-8000-Atom target – language and time zone. Before you begin the configuration, make sure that you have disabled the EWF.

Step 1 Click “Start” menu, point to “Settings”, click “Control Panel”, and then click “Date and Time”

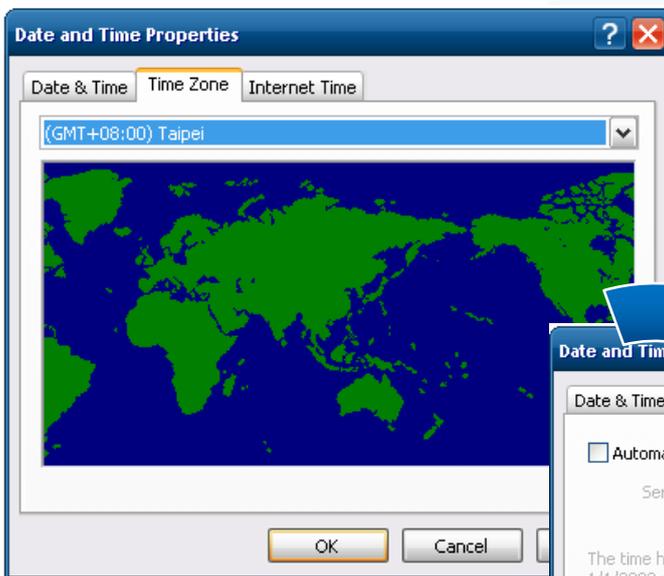


Step 2 Click “Time Zone” tab, choose your local time zone, and then click “Apply” button

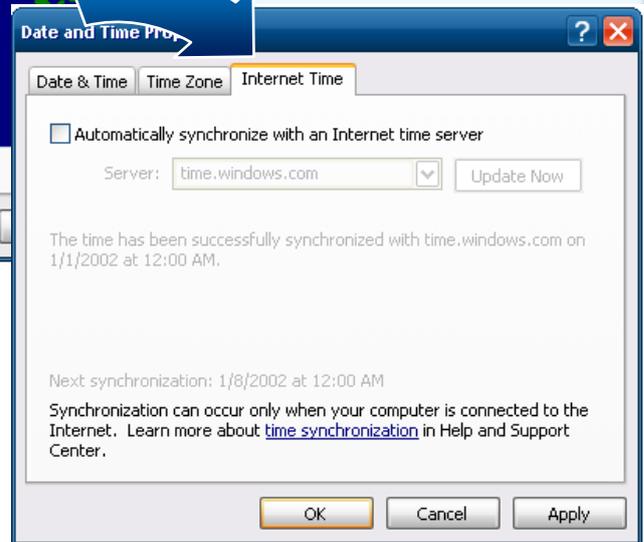

Step 3 Click “Internet Time” tab, click to clear the “Automatically synchronize with an Internet time server” check box, and then click “OK” button


Step 4 Go back to the control panel, and then click “Date and Time”



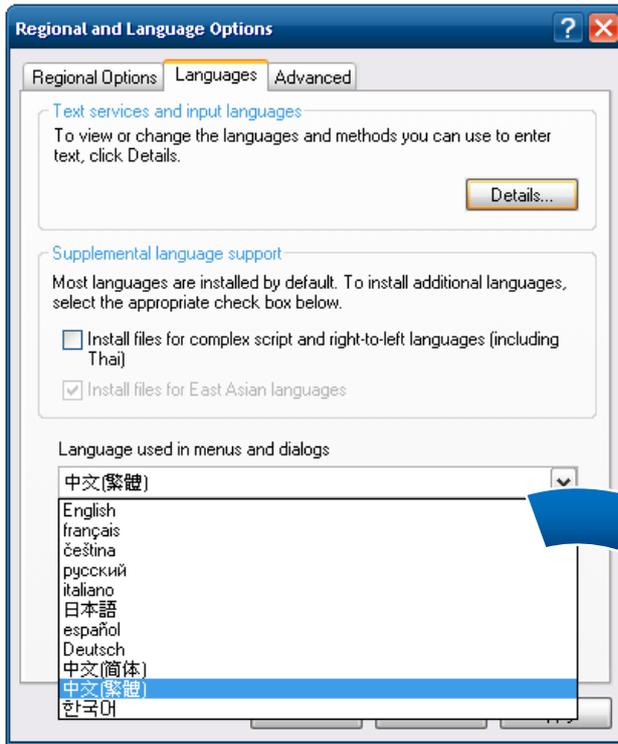


Step 5 Click “Language” tab, choose your local language from drop-down menu, and then click “Apply” button

Step 6 Click “Advanced” tab, choose your language for non-unicode programs from drop-down menu, and then click “OK” button

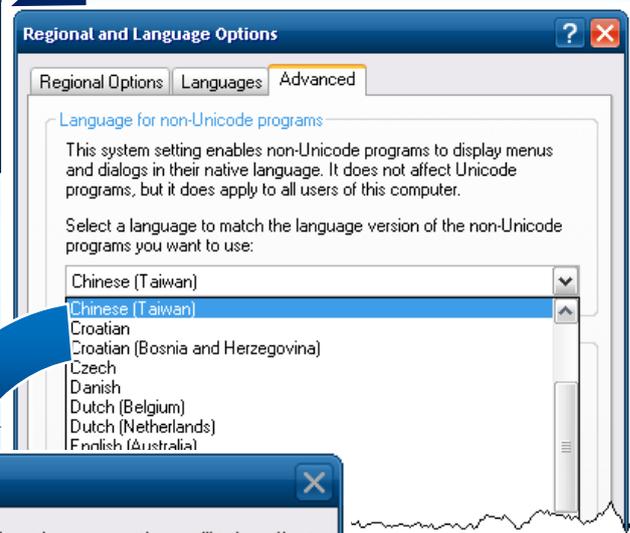

Step 7 Click “Yes” button on pop-up message box for restarting the XP-8000-Atom to take effect

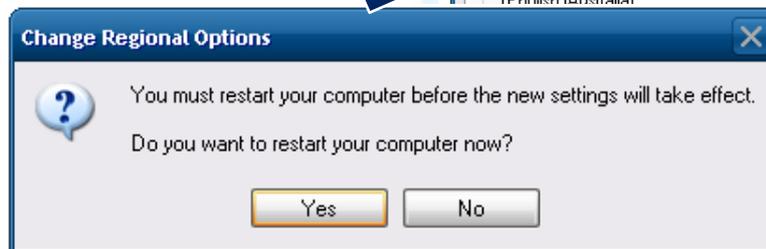

5 Using DCON Utility to Configure I-87K Modules

DCON Utility is a tool kit that can be used to quickly control and manage I-87K series expansion I/O modules.

Step 1 Double-click “DCON Utility” located on desktop



DCON Utility



Step 2 Click “Search” button



**Step 2:
Click Search Button**



Step 3 Click the module name to enter the I/O configuration form

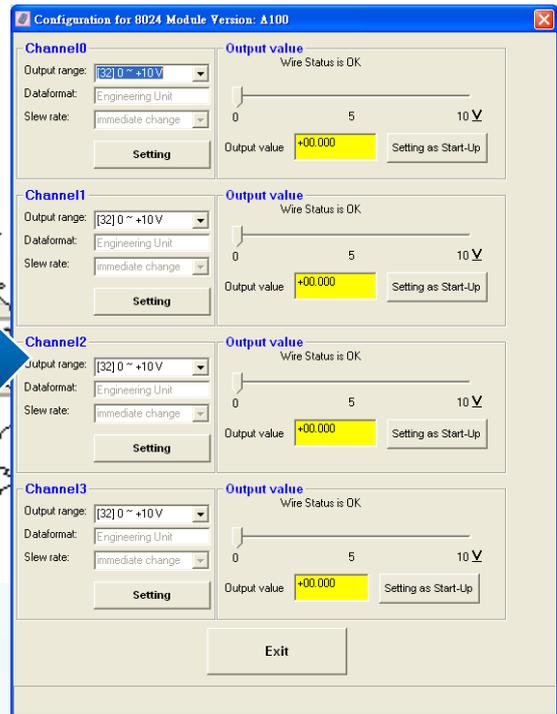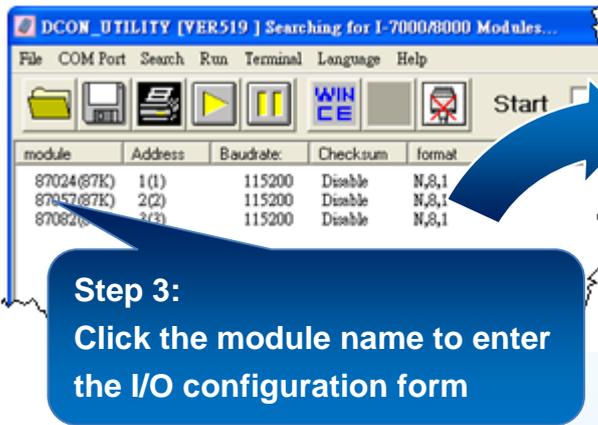

6 Recovering your XP-8000-Atom

Before recovering the OS, please make sure your data is well backed up.

Step 1 Plug the “Rescue” marked CF card in CF slot

Step 2 Reboot the XP-8000-Atom and go to the BIOS by pressing “Delete” key

Step 3 Select “Boot” menu, and then select “Hard Disk Drives” and then press “Enter” key

BIOS Setup Utility	
Main	Advanced
▶ Boot Settings	Security
▶ Boot Settings Configuration	Chipset
▶ Hard Disk Drives	Exit
	Specifies the Boot Device Priority sequence from available Hard drives

Step 4 **Select “1st Drive” and press “Enter” key**

Step 5 **Set “1st Drive” as “PS-XXX”, it specifies the XP-8000-Atom to boot form CF card**

BIOS Setup Utility						
Main	Advanced	PCIPnP	Boot	Security	Chipset	Exit
Hard Disk Drivers						Specifies the Boot sequence from available drives
1st Drive			[SATA: PS-XXX]			
2nd Drive			[SATA: PM-XXX]			

Step 6 **Press “F10” to save and select “OK” to exit setup utility**

Step 7 **After restarting, the system will enter the XP-8000-Atom Rescue Utility, and then enter (1) Recover XP-8000-Atom to factory default**

```
*****
*      XP-8000-Atom Rescue Disk -- Main Menu      *
*****

Choose one of the followings:

(1) Recover XP-8000-Atom to factory default
(2) Upgrade XP-8000-Atom manually
(3) Display Drive [C]
(4) Quit rescue disk and reboot
(5) Command shell

Enter choice: 1
```

Step 8 **After taking about 30 minutes to recover the XP-8000, we enter the XP-8000-Atom Rescue Utility again, and then enter (4) Quit rescue disk and reboot**

Step 9 Repeat step 2 ~ 6 to set “1st Drive” as “PM-XXX”

BIOS Setup Utility						
Main	Advanced	PCIPnP	Boot	Security	Chipset	Exit
Hard Disk Drivers						Specifies the Boot sequence from available drives
1st Drive			[SATA: PM-XXX]			
2nd Drive			[SATA: PS-XXX]			

Step 10 After rebooting the XP-8000-Atom, the system takes about 8 minutes to set up, and then it has been recovered

Technical Support

After you have finished configuring your module(s), you may start to develop your own applications. For detailed instructions and more applications, please refer to the following information list:

- **XP-8000-Atom User Manual**

CD:\Document\user_manual\

ftp://ftp.icpdas.com/pub/cd/xpac-atom/document/user_manual/

- **XPacSDK API**

CD:\SDK\

<ftp://ftp.icpdas.com/pub/cd/xpac-atom/sdk/>

- **XPacSDK API Documents**

CD:\Document\sdk\xpacsdk\

<ftp://ftp.icpdas.com/pub/cd/xpac-atom/document/sdk/>

- **DCON Utility User Manual**

CD:\Tools\DCON_Utility\Manual\

ftp://ftp.icpdas.com/pub/cd/xpac-atom/tools/dcon_utility/manual/

- **XP-8000-Atom Website**

http://www.icpdas.com.tw/product/solutions/pac/xpac-atom/xp_8x41_atom.html