

---

# Portable DVD Multimedia Player

 
 
 
## User Manual



Please read the user manual carefully before using the machine.

● **Schematic Diagram of Keys and Interfaces of the Machine**

**Style 1 Schematic Diagram**

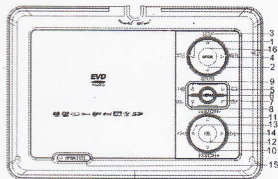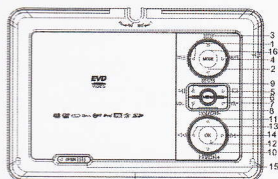


1. TITLE: get into dice menu during VCD
2. USB/SD: Change between DISC and CARD/USB
3. SETUP system setting:  
Press setup button and open system menu, set up related parameter
4. MUTE: press mute can get into voiceless and back to voice press it again

5. STOP/AUTO SEARCH
6. MENU: Press this button get into main menu
7. VOL+: Press the key to turn up the volume
8. VOL-: Press the key to turn down the volume.
9. PLAY/PAUSE
- 10.11 Previous section or page; next section or page
12. OK: Confirmed
- 13.14: Fast backward button / Fast forward button
15. OPEN
16. MODE:

Press the key in DVD mode in turn to switch to TV mode AV input mode return to DVD mode.

- 17: USB Port: Connect with USB equipment
18. SD/MMC/MS
19. Earphone jack  
Connect with earphone. (when the earphone is inserted, the built-in loudspeaker
20. AV-OUT: Audio and video output
21. AV-IN: Audio and Video input
22. Power: Power on or off
23. Power plug: The machine's power adaptor is DC9.5V.
24. GAME: To connect Joystick.
25. Antenna interface: To connect TV antenna

## Style 2 Schematic Diagram

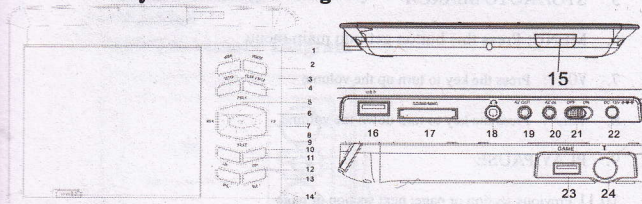 

1. **MODE:** Press the key in DVD mode in turn to switch to → TV mode → AV input mode → return to DVD mode.
2. **Power:** Power on or off.
3. **SETUP** system setting:  
Press setup button and open system menu, set up related parameter
4. **PLAY/PAUSE**
- 5,6,7,8. Previous, Reward, Forward, Next
9. **OK:** Confirm
- 10,11. **CH-/CH+**
- 12,13. **VOL+/VOL-**
14. **OPEN**
15. **Indicator light**
16. **USB**
17. **SD/MMC**
18. **Antenna**
- 19,20. **AV IN/AV OUT**





21. **OFF/ON**

22. **Power plug:** The machine's power adaptor is DC9.5V.

23. **GAME:** To connect joystick.

24. **Antenna interface:** To connect TV antenna

## Style 3 Schematic Diagram

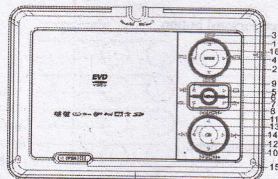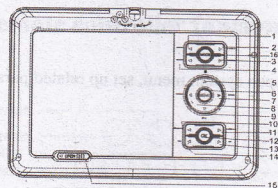    

1. **MODE:** Press the key in DVD mode in turn to switch to → TV mode → AV



input mode → return to DVD mode.

2. VOL-: Press the key to turn down the volume.
3. MENU: Press this button get into main menu
4. VOL+: Press the key to turn up the volume
5. SD/MMC
6. AUDIO and Channel Change
7. SETUP system setting:

Press setup button and open system menu, set up related parameter

8. PALY/PAUSE
9. STOP/AUTO SEARCH
- 10.14 Previous section or page; next section or page
- 11.12 Fast backward button / Fast forward button
13. ENTER: Confirmed
15. OPEN: Open the disc cover
16. USB port: Connect with USB equipment
17. SD/MMC
18. Earphone jack

Connect with earphone. (when the earphone is inserted, the built-in loudspeaker)

19. AV-OUT: Audio and video output
20. AV-IN: Audio and Video input
21. Power: Power on or off
22. Power plug: The machine's power adaptor is DC9.5V.


23. GAME: To connect Joystick.

24. Antenna interface: To connect TV antenna

25. TITLE: get into dice menu during VCD

26. MUTE: press mute can get into voiceless and back to voice press it again

### ● Remote controller function diagram

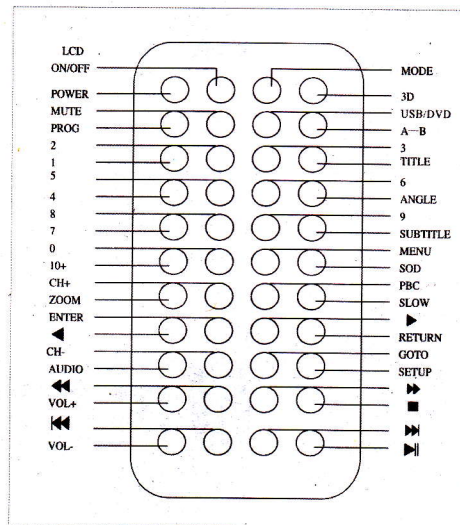 

## ● Function Setting

### Menu setting

Press the transcribe information of disc, external equipment, set up following DVD player functions to get best playback:

#### 1. General Setup Page

##### TV SISPLAY

##### ANGLE MARK

##### CAPTIONS

##### SCREEN SAVER

##### LAST MEMORY

GENERAL	AUDIO	VIDEO	PREFERENCE
General Setup Page			
TV DISPLAY		PS	
ANGLE MARK		ON	
OSD LANG		ENG	
CAPTIONS		OFF	
SCREEN SAVER		ON	
LAST MEMORY		OFF	
GOTO GENERAL SETUP PAGE			

#### A. TV DISPLAY

① 4:3 PS, choose when this machine connect with general TV, When wide screen image will display in whole screen, only few of parts will be cut

② 4:3 LB, choose when this machine connect with general TV, When wide screen image will display in whole screen, there is black belt in the top and bottom of the screen

③ 16:9 wide sliver screen, choose when this machine connect with wide screen TV

#### B. Angel Mark

C. OSD language: English; Chinese; French; Spanish; German; Italian; Polish, Russian

#### D. Captions

#### E. Screen Save

#### F. Last Memory

#### 2. Dolby Digital Setup

##### DUAL MONO

##### DYNAMIC

A. Dual Mono: Can choose difference audio input

B. Dynamic: Can choose Dolby range

GENERAL	AUDIO	VIDEO	PREFERENCE
DOLBY DIGITAL SETUP			
DUAL MONO			
DYNAMIC			
GOTO AUDIO SETUP PAGE			

#### 3. Video Setup Page

##### SHARPNESS

##### BRIGHTNESS

##### CONTRAST

##### HUE

##### SATURATION

##### TV SCAN

##### FM RADIO SCAN

GENERAL	AUDIO	VIDEO	PREFERENCE
Video Setup Page			
SHARPNESS		MID	
BRIGHTNESS		00	
CONTRAST		00	
HUE		00	
SATURATION		00	
TV SCAN			
FM RADIO SCAN			
GOTO VIDEO SETUP PAGE			

A. Sharpness: adjust sharpness

B. Brightness: adjust brightness

C. Contrast: adjust contrast

D. Hue: adjust hue

E. Saturation: adjust saturation

F. TV Scan: press "MODE" to "TV" and choose auto or manual to scan TV station

G. FM radio scan: press "MODE" to "FM" and choose auto or manual to scan station and choose image formats or audio formats

#### 4. PREFERENCE

##### TV TYPE

##### PBC

##### AUDIO

##### SUBTITLE

##### DISC MENU

##### PARENTAL

##### PASSWORD

##### DEFAULT

GENERAL	AUDIO	VIDEO	PREFERENCE
Preference Page			
TV TYPE		NTSC	
PBC		ON	
AUDIO		ENG	
SUBTITLE		ENG	
DISC MENU		ENG	
PARENTAL			
PASSWORD			
DEFAULT			
GOTO PREFERENCE PAGE			



 
## ● Multi-ways of playing Disc

### MP3 function:

1. put in disc, after loading, display MP MENU
2. or press ◀ ▶ to the file, and enter into choose music
3. Choose MP3 directory, press ▼▲ to enter into directory, press number to choose, or press ◀▶ remote key to the directory and press "ENTER" to choose music, after chose, this machine will play next music.

### Playing of JPG picture

Press ◀▶ enter into directory, then press ▼▲ to choose photo, press ENTER to play JPG photos. Press ▶▶ ◀◀ play previous or next pictures. Back to menu, press ENTER, remote key to choose directory

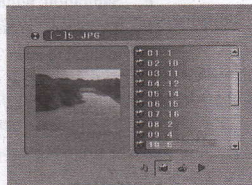

## ● FM &TV Program Reception and Troubleshooting

### Before TV reception

1. Connect in the connector or antenna or cable TV
2. Press "Mode" key to switch to TV mode.
3. Press SETUP enter into main menu; get to video setup, auto or manual scan station with direction keys. Using direction keys choose related image or audio formats.
4. Scan finished after few minutes , the station will saved
5. Place the antenna to good reception place when using digital antenna to have a good reception

### Channel Choose

 
1. Choose one to ten channels by number 1 to 10. for more, please press 10+, choose "--"double digit display, then press number into tens digit, press number into single digit
2. Press, CH+ or CH- to previous or next channel

### Before get into FM tuner

1. Connect the antenna,
2. Press MODE, get into FM mode,
3. Press SETUP get into main menu; get into video setup, using director keys to automatically or manually scan the station

### Game Operation

1. Insert game handle into GAME plugs.
2. Switch the mode to DVD mode.
3. Put the game disc in, close the disc cover, and the machine will read the disc
4. Press the ▶▶ ◀◀ key to move the cursor to the directory area.
5. Press the number button can choose related game, and then press Start/Pause button get into game.
6. When you want to playing other game during the one game, press start/Pause and choose button in same time, you can quit the game and choose other game.
7. Schematic Diagram of Game Handle

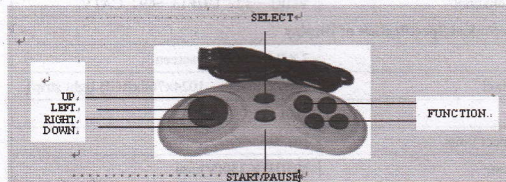

## ● DVD/TV Technical Parameters

Partial Technical Parameters of DVD Player		
Laser wavelength		Wavelength 650NM/780NM
Video system		PAL/AUTO/NTSC
Acoustic frequency response		20HZ—20KHZ
Audio signal to Noise ratio		≥80dB
Frequency infidelity + noise		≤-70dB
Channel separation		≥80dB
Dynamic range		≥80dB
Output	Audio output (analog audio)	Output level: 2Vp-p, load impedance: 10K Ω
	Video output, CVBS	Output level: 1Vp-p, load impedance: 75 Ω, non-equilibrium, negative, output level: Y: 1Vp-p, C: 0.28Vp-p, load impedance 75 Ω
Power supply		AC100 — 240V DC input 9V 1.5A output
Allowable operating temperature		0~40℃
Power		≤20W
Size		375*245*40mm
Weight (net weight)		About 1.95kg
Partial Technical Specification of TV Receiver		
Analog TV system		PAL/NTSC /SECAM system
Received channel		VHF1—12、UHF13—69、CATV
Partial Technical Specification of Display		
Display		7.8/9.8inch LCD screen
Display pixel		786432pixels, 1024x768xRGB light strip)
Contrast		250: 1
Screen aspect ratio		16: 9
Display zone		205(H)×330(V)mm

## ● List of Accessories

Name	Quantity
Remote control	1
Power Adaptor (9V 1.5A)	1
User manual	1
AV Cable	1
Antenna	1
Game Disc	1
Joystick	1