

# Holmes®

## Oscillating Clip Fan

HACP9TG



Owner's Guide


**PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS**

# PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1) Read all instructions before using the appliance.
- 2) To avoid fire or shock hazard, plug the appliance directly into a 120 V AC electrical outlet.
- 3) Keep the cord out of heavy traffic areas. DO NOT let the cord hang over the edge of a table or counter. To avoid fire hazard, NEVER put the cord under rugs, near heat registers, radiator, stoves, or heaters.
- 4) To protect against electrical hazards, DO NOT immerse in water or other liquids. Do not use near water.
- 5) Close supervision is necessary when any appliance is used by or near children, or by disabled people.
- 6) Always unplug the fan before moving it, putting on or taking off parts, cleaning, or whenever the fan is not in use. Be sure to pull by the plug and not the cord.
- 7) Avoid contact with moving parts. DO NOT operate without fan grills properly in place.
- 8) DO NOT operate any appliance with a damaged cord or plug, if motor fan fails to rotate, after the appliance malfunctions, or if it has been dropped or damaged in any manner. Return appliance to manufacturer for examination, electrical or mechanical adjustment, or repair.
- 9) DO NOT operate in the presence of explosive and/or flammable fumes.
- 10) Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by The Holmes Group may cause hazards.
- 11) DO NOT use outdoors.
- 12) Always use on a dry, level surface.
- 13) Keep unit away from heated surfaces and open flames.
- 14) **WARNING:** To reduce the risk of fire or electric shock, DO NOT use this fan with any solid-state speed control device.
- 15) DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.

## ILLUSTRATION

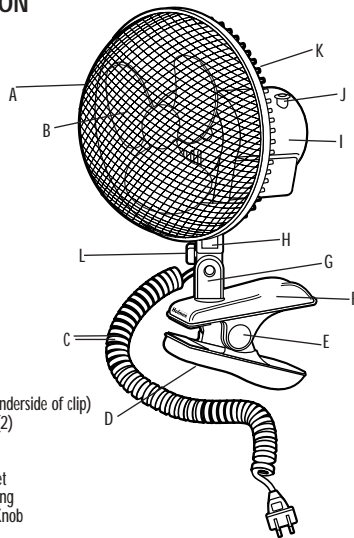

- A. Front Grill
- B. Fan Blade
- C. Power Cord
- D. Key Slots (underside of clip)
- E. Pivot Caps (2)
- F. Clip
- G. Clamp Pivot
- H. Pivot Bracket
- I. Motor Housing
- J. Oscillation Knob
- K. Rear Grill
- L. Tilt Adjustment Knob

# PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS



THIS PRODUCT IS EQUIPPED WITH A POLARIZED AC (Alternating Current) PLUG (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact qualified personnel to install the proper outlet.

**DO NOT DEFEAT THE SAFETY PURPOSE OF THIS POLARIZED PLUG IN ANY WAY.**

---

## IMPORTANT INSTRUCTIONS

**THIS OSCILLATING CLIP FAN COMES FULLY ASSEMBLED AND IS READY FOR IMMEDIATE USE.**

---

## OPERATING INSTRUCTIONS

- Step 1: Clip fan onto a dry, level surface
- Step 2: Please make sure the On/Speed switch is in the "Off" position. Plug the cord into any standard 120-volt A/C outlet.
- Step 3: The SPEED is adjusted by moving the switch left or right to the desired setting.
- Step 4: The OSCILLATION control knob is located on the top of the fan motor housing. To start oscillation, push control knob down. To stop oscillation, pull control knob up

---

## WALL MOUNTING INSTRUCTIONS

**NOTE: On the underside of the fan's clip there are "KEY SLOTS" (2).**

Select a suitable spot on a wall (away from curtains, draperies, or heat sources) where you want to mount the fan. Use a No. 10 pan head wood screw (1 1/4" length) and thread into a 2x4 wood stud behind the dry wall. Please refer to the warning below if you are unable to locate a wood stud in the wall.

When threading the screw into the wall, leave approximately 1/4" clearance between the screw and wall. This will allow the clip's "KEY SLOTS" to fit easily and securely over the screws. If necessary, the screw may be tightened further to ensure the fan is firmly attached to the wall.

**WARNING: WHEN MOUNTING THE FAN TO PLASTER, DRYWALL OR SHEETROCK, YOU MUST USE A MOLLY BOLT, OR SIMILAR FASTENER. DOING SO WILL PREVENT THE FAN FROM BECOMING DISLODGED WHILE IN OPERATION.**

---

## ADJUSTMENT INSTRUCTIONS

### Vertical Angle Adjustment

- Step 1: To change the tilting angle of the fan head, simply loosen the tilt adjustment knob.
- Step 2: Move the fan head to the desired angle, then firmly tighten the knob to lock the fan head in place.

### Horizontal Angle Adjustment

Turn the motor housing to the desired direction.

**WARNING: MAKE SURE TO SUPPORT THE FAN HEAD ASSEMBLY WHEN LOOSENING THE ADJUSTABLE HEIGHT NUT, AS THE WEIGHT OF THE FAN HEAD MAY CAUSE THE EXTENSION POLE TO COLLAPSE.**

---

## CLEANING/MAINTENANCE

**Follow these instructions to correctly and safely care for your Holmes oscillating clip fan. Please remember:**

- Always unplug the fan before cleaning or disassembling.
- Do not allow water to drip on or into the fan motor housing.
- Do not use any of the following as a cleaner: gasoline, thinner, benzene

Step 1: To access the fan blade, remove the front grill by pressing the tabs on the grill ring away from the fan.

Step 2: Clean the fan blade, both front and rear grills with a soft cloth moistened with a mild soap solution.

**NOTE: FAN BLADE SHOULD NOT BE REMOVED**

Step 3: Replace the front grill by snapping back into rear grill.

### Fan Head and Clip Cleaning

Using a soft, moist cloth, with or without a mild soap solution, carefully clean the fan head. Please use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water.

---

## FAN STORAGE

In the off-season:

- **IMPORTANT:** Keep your fan in a safe dry location, where the fan is not likely to fall or be crushed.
- Your fan should be stored fully assembled.
- Remember to protect the fan head from dust or moisture.

## SERVICE INSTRUCTIONS

1. Do NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
2. If you have any questions regarding this unit's operation or believe any repair is necessary, please write to our Consumer Service Department.
3. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed warranty.
4. If you have any other questions or comments, see our correspondence below:

Please visit our website:

[www.holmesproducts.com](http://www.holmesproducts.com)

Or write to:

The Holmes Group, Inc.

P.O. Box 769

Milford, MA 01757-0769

For your own records, staple or attach your sales receipt to this manual. Also, please take a moment to write the store name/location and date purchased below.

STORE NAME: \_\_\_\_\_

LOCATION: \_\_\_\_\_

DATE PURCHASED: \_\_\_\_\_

(STAPLE RECEIPT HERE)

## FIVE (5) YEAR LIMITED WARRANTY

### SAVE THIS WARRANTY INFORMATION

- A. The quality controls used in the manufacture of this Holmes product are to ensure your satisfaction.
- B. The Warranty Registration Card enclosed with this product must be completed and returned within 10 days of purchase for your Warranty to be effective. This Warranty applies only to the original purchaser of this product.
- C. This Warranty applies ONLY to repair or replacement of any supplied or manufactured parts of this product that, upon inspection by Holmes authorized personnel, proves to have failed in normal use due to defects in material or workmanship. Holmes will determine whether to repair or replace the unit. This Warranty does not apply to installation expenses.
- D. Operating this unit under conditions other than those recommended or at voltages other than the voltage indicated on the unit, or attempting to service or modify the unit, will render this WARRANTY VOID.
- E. Unless otherwise proscribed by law, Holmes shall not be liable for any personal injury, property or any incidental or consequential damages of any kind (including water damage) resulting from malfunctions, defects, misuse, improper installation or alteration of this product.
- F. All parts of this Holmes product are guaranteed for a period of 5 years as follows:
  1. Within the first 30 days from date of purchase, the store from which you purchased your Holmes product should replace this product if it is defective in material or workmanship (provided the store has in-stock replacement.)
  2. Within the first sixty months from date of purchase, subject to the conditions in paragraph H, Holmes will repair or replace the product if it is defective in material or workmanship providing it is returned to Holmes, freight prepaid, with PROOF OF PURCHASE date, together with \$5.00 for handling and return packing/shipping charges.
- G. If you have any problem with this product, please write to our Consumer Service Dept.
- H. IMPORTANT Return INSTRUCTIONS Your warranty depends on your following these instructions if you are returning the unit more than 30 days after the date of purchase:
  1. Carefully pack the item in its original carton or other suitable box to avoid damage in shipping.
  2. Before packing your unit for return; be sure to enclose:
    - a) your name, full address with zip code and telephone number,
    - b) a dated sales receipt or PROOF OF PURCHASE,
    - c) your \$5.00 check for return packaging, and
    - d) The model number of the unit and the problem you are having. (Enclose in an envelope and tape directly to the unit before the box is sealed.)
  3. Holmes recommends you insure the package (as damage in shipment is not covered by your warranty).
  4. All shipping charges must be prepaid by you (as noted in paragraph F).
  5. Mark the outside of your package:

HOLMES  
The Holmes Group, Inc.  
Consumer Returns  
32B Spur Drive  
El Paso, TX 79906

SHIPPING AND HANDLING CHARGES: \$5.00

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. The provisions of this warranty are in addition to, and not a modification of, or subtraction from, the statutory warranties and other rights and remedies contained in any applicable legislation. To the extent that any provision of this warranty is inconsistent with any applicable law, such provision shall be deemed voided or amended, as necessary, to comply with such law.