### **Model 42***i*

#### Instruction Manual

Chemiluminescence NO-NO<sub>2</sub>-NO<sub>x</sub> Analyzer Part Number 101350-00 28Dec2007





© 2007 Thermo Fisher Scientific Inc. All rights reserved.

Specifications, terms and pricing are subject to change. Not all products are available in all countries. Please consult your local sales representative for details.

Thermo Fisher Scientific Air Quality Instruments 27 Forge Parkway Franklin, MA 02038 1-508-520-0430 www.thermo.com/aqi

# **WEEE Compliance**

This product is required to comply with the European Union's Waste Electrical & Electronic Equipment (WEEE) Directive 2002/96/EC. It is marked with the following symbol:



Thermo Fisher Scientific has contracted with one or more recycling/disposal companies in each EU Member State, and this product should be disposed of or recycled through them. Further information on Thermo Fisher Scientific's compliance with these Directives, the recyclers in your country, and information on Thermo Fisher Scientific products which may assist the detection of substances subject to the RoHS Directive are available at: www.thermo.com/WEEERoHS.

# **Reference Method Designation**

The Thermo Scientific Model 42*i* is designated by the United States Environmental Protection Agency (US EPA) as a Reference Method for the measurement of ambient concentrations of nitrogen dioxide pursuant with the requirements defined in the Code of Federal Regulations, Title 40, Part 53.

Designated Reference Method Number: RFNA-1289-074

EPA Designation Date: December 11, 1989 (amended for Model 42*i*)

The Model 42*i* Chemiluminescence NO-NO<sub>2</sub>-NO<sub>x</sub> Analyzer meets EPA reference designation requirements when operated with the following:

Range	50 to 1000 ppb
Averaging Time	10 to 300 seconds
Temperature Range	15 to 35 °C
Line Voltage	90 to 110 Vac @50/60 Hertz 105 to 125 Vac @50/60 Hertz 210 to 250 Vac @50/60 Hertz
Pressure Compensation	ON or OFF
Temperature Compensation	ON or OFF
Flow Rate	0.5 to 1 LPM
RS-232/RS-485 Interface	

#### With or without the following options:

**Teflon Particulate Filter** 

Ozone Particulate Filter

Internal Zero/Span and Sample Valves

Ozone Permeation Dryer

Permeation Oven

Rack Mounts

I/O Expansion Board

# **About This Manual**

This manual provides information about operating, maintaining, and servicing the analyzer. It also contains important alerts to ensure safe operation and prevent equipment damage. The manual is organized into the following chapters and appendixes to provide direct access to specific operation and service information.

- Chapter 1 "Introduction" provides an overview of product features, describes the principles of operation, and lists the specifications.
- Chapter 2 "Installation" describes how to unpack, setup, and startup the analyzer.
- Chapter 3 "Operation" describes the front panel display, the front panel pushbuttons, and the menu-driven software.
- Chapter 4 "Calibration" provides the procedures for calibrating the analyzer and describes the required equipment.
- Chapter 5 "Preventive Maintenance" provides maintenance procedures to ensure reliable and consistent instrument operation.
- Chapter 6 "Troubleshooting" presents guidelines for diagnosing analyzer failures, isolating faults, and includes recommended actions for restoring proper operation.
- Chapter 7 "Servicing" presents safety alerts for technicians working on the analyzer, step-by-step instructions for repairing and replacing components, and a replacement parts list. It also includes contact information for product support and technical information.
- Chapter 8 "System Description" describes the function and location of the system components, provides an overview of the software structure, and includes a description of the system electronics and input/output connections.
- Chapter 9 "Optional Equipment" describes the optional equipment that can be used with this analyzer.
- Appendix A "Warranty" is a copy of the warranty statement.
- Appendix B "C-Link Protocol Commands" provides a description of the C-Link protocol commands that can be used to remotely control an analyzer using a host device such as a PC or datalogger.

- Appendix C "MODBUS Protocol" provides a description of the MODBUS Protocol Interface and is supported both over RS-232/485 (RTU protocol) as well as TCP/IP over Ethernet.
- Appendix D "Geysitech (Bayern-Hessen) Protocol" provides a description of the Geysitech (Bayern-Hessen or BH) Protocol Interface and is supported both over RS-232/485 as well as TCP/IP over Ethernet.

Safety

**Y** Review the following safety information carefully before using the analyzer. This manual provides specific information on how to operate the analyzer, however, if the calibrator is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

### Safety and Equipment Damage Alerts

This manual contains important information to alert you to potential safety hazards and risks of equipment damage. Refer to the following types of alerts you may see in this manual.

#### Safety and Equipment Damage Alert Descriptions

Alert		Description
$\triangle$	DANGER	A hazard is present that will result in death or serious personal injury if the warning is ignored. $\blacktriangle$
$\triangle$	WARNING	A hazard is present or an unsafe practice can result in serious personal injury if the warning is ignored.
$\triangle$	CAUTION	The hazard or unsafe practice could result in minor to moderate personal injury if the warning is ignored. ▲
$\triangle$	Equipment Damage	The hazard or unsafe practice could result in property damage if the warning is ignored. ▲

		Description
7	WARNING	If the equipment is operated in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
		The service procedures in this manual are restricted to qualified service personnel only. $\blacktriangle$
		The Model 42 <i>i</i> is supplied with a three-wire grounding cord. Under no circumstances should this grounding system be defeated. ▲
7	CAUTION	If the LCD panel breaks, do not to let the liquid crystal contact your skin or clothes. If the liquid crystal contacts your skin or clothes, wash it off immediately using soap and water.
7	Equipment Damage	Do not attempt to lift the analyzer by the cover or other external fittings. $\blacktriangle$
		Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.
		This adjustment should only be performed by an instrument service technician. ▲
		Handle all printed circuit boards by the edges only. $lacksquare$
		Do not remove the panel or frame from the LCD module. $\blacktriangle$
		The LCD module polarizing plate is very fragile, handle it carefully. $\blacktriangle$
		Do not wipe the LCD module polarizing plate with a dry cloth, it may easily scratch the plate. $\blacktriangle$
		Do not use Ketonics solvent or aromatic solvent to clean the LCD module, use a soft cloth moistened with a naphtha cleaning solvent.
		Do not place the LCD module near organic solvents or corrosive gases. $\blacktriangle$
		Do not shake or jolt the LCD module. $lacksquare$

### **FCC Compliance**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. ▲

### **WEEE Symbol**

The following symbol and description identify the WEEE marking used on the instrument and in the associated documentation.

#### Symbol Description



Marking of electrical and electronic equipment which applies to electrical and electronic equipment falling under the Directive 2002/96/EC (WEEE) and the equipment that has been put on the market after 13 August 2005. ▲

### Where to Get Help

Service is available from exclusive distributors worldwide. Contact one of the phone numbers below for product support and technical information or visit us on the web at www.thermo.com/aqi.

1-866-282-0430 Toll Free

1-508-520-0430 International

# Contents

Chapter 1	Introduction	
	Specifications	
Chapter 2	Installation2	2-1
-	Lifting	-1
	Unpacking and Inspection 2	-1
	Setup Procedure	-3
	Connecting External Devices	-5
	Terminal Board PCB Assemblies	
	I/O Terminal Board2	-5
	D/O Terminal Board2	-7
	25-Pin Terminal Board2	-8
	Startup 2	-9
Chantor 2	Onoration 2	2_1
Chapter 3	Operation	
	Display	
	Soft Keys	
	Soft Reys	
	Power-Up Screen	
	Run Screen	
	Main Menu	
	Range Menu	
	Single Range Mode	
	Dual Range Mode	
	Gas Units	
	NO, NO <sub>2</sub> , and NO <sub>x</sub> Ranges	
	Custom Ranges	
	Averaging Time	
	Calibration Factors Menu	
	NO and NO <sub>x</sub> Backgrounds	
	NO, NO <sub>2</sub> , and NO <sub>x</sub> Coefficients	
	Calibration Pressure	
	Reset User Calibration Default	
	Calibration Menu	
	Calibrate NO and NO <sub>x</sub> Backgrounds	
	Candiate in $O$ and in $O_x$ backgrounds	42

Calibrate NO, NO <sub>2</sub> , and NO <sub>x</sub> Coefficients	3-22
Calibrate Pressure	3-23
Zero/Span Check	3-23
Next Time	3-24
Period Hours	3-24
Zero/Span/Purge Duration Minutes	3-25
Zero/Span Averaging Time	
Zero/Span Ratio	
Instrument Controls Menu	3-26
Ozonator	3-26
PMT Supply	3-27
Auto/Manual Mode	3-27
Datalogging Settings	3-28
Select SREC/LREC	3-28
View Logged Data	3-29
Number of Records	3-29
Date and Time	3-30
Erase Log	3-30
Select Content	3-31
Choose Item Type	3-31
Concentrations	3-32
Other Measurements	3-32
Analog Inputs	3-33
Commit Content	3-33
Reset to Default Content	3-34
Configure Datalogging	3-34
Logging Period Min	
Memory Allocation Percent	
Data Treatment	3-35
Communication Settings	3-36
Baud Rate	
Instrument ID	
Communication Protocol	3-37
Streaming Data Configuration	3-37
Streaming Data Interval	
Choose Item Signal	
Concentrations	3-39
Other Measurements	3-39
Analog Inputs	3-40
RS-232/RS-485 Selection	
TCP/IP Settings	3-41
Use DHCP	
IP Address	3-42
Netmask	3-42
Default Gateway	3-43
Host Name	3-43

I/O Configuration	3-43
Output Relay Settings	3-44
Logic State	3-44
Instrument State	3-44
Alarms	3-45
Non-Alarm	3-46
Digital Input Settings	3-46
Logic State	
Instrument Action	
Analog Output Configuration	
Select Output Range	
Minimum and Maximum Value	
Choose Signal to Output	
Analog Input Configuration	
Descriptor	
Units	
Decimal Places	
Number of Table Points	
Table Point	
Volts	
User Value	
Temperature Compensation	
Pressure Compensation	
Screen Contrast	
Service Mode	
Date/Time	
Diagnostics Menu	
Program Version	
Voltages	
Motherboard Voltages	
Interface Board Voltages	
I/O Board Voltages	
Temperatures	
Pressure	
Flow	
Analog Input Readings	
Analog Input Voltages	
Digital Inputs Delay States	
Relay States	
Test Analog Outputs	
Set Analog Outputs	
Instrument Configuration	
Contact Information	
Alarms Menu	
Internal Temperature	
Min and Max Internal Temperature Limits	3-65

Chamber Temperature	3-65
Min and Max Chamber Temperature Limits	3-66
Cooler Temperature	3-66
Min and Max Cooler Temperature Limits	3-67
Converter Temperature	3-67
Min and Max Converter Temperature Limits	3-67
Permeation Oven Gas Temperature	3-68
Min and Max Permeation Oven Temperature Limits	3-68
Pressure	
Min and Max Pressure Limits	3-69
Flow	3-69
Min and Max Flow Limits	3-70
Ozonator Flow	3-70
Zero and Span Check	3-71
Max Zero and Span Offset	3-71
Zero and Span Auto Calibration	3-71
NO, NO <sub>2</sub> , and NO <sub>x</sub> Concentration	
Min and Max NO, NO <sub>2</sub> , and NO <sub>x</sub> Concentration Limits	3-72
Min Trigger	3-73
Service Menu	3-73
PMT Voltage Adjustment	3-74
Range Mode Select	3-74
Converter Set Temperature	
Pressure Calibration	3-75
Calibrate Pressure Zero	3-76
Calibrate Pressure Span	3-76
Restore Default Pressure Calibration	3-77
Flow Calibration	3-77
Calibrate Flow Zero	3-78
Calibrate Flow Span	3-78
Restore Default Flow Calibration	3-79
Input Board Calibration	
Manual Input Calibration	3-79
Automatic Input Calibration	3-80
Input Frequency Display	3-81
Temperature Calibration	3-81
Analog Output Calibration	3-82
Analog Output Calibrate Zero	3-83
Analog Output Calibrate Full-Scale	3-83
Analog Input Calibration	3-83
Analog Input Calibrate Zero	
Analog Input Calibrate Full-Scale	3-84
Permeation Oven Settings	
Calibrate Gas Thermistor	3-85
Water Bath	3-86
Resistor	3-86

	Calibrate Oven Thermistor	86
	Permeation Oven Selection	87
	Factory Calibrate Gas Thermistor	87
	Low and High Points	87
	Set Defaults	88
	Factory Calibrate Oven Thermistor	88
	Low and High Points	89
	Set Defaults	89
	Ozonator Safety	89
	Dilution Ratio	90
	Display Pixel Test	90
	Restore User Defaults	91
	Password Menu	91
	Set Password	92
	Lock Instrument	92
	Change Password	92
	Remove Password	93
	Unlock Instrument	93
Chapter 4	Calibration4	I-1
	Equipment Required4	
	Zero Gas Generator	
	Compression	
	Drying	
	Oxidation	
	Scrubbing	
	Gas Phase Titrator	
	Flow Controllers	-3
	Pressure Regulator4	
	Ozone Generator	
	Diverter Valve	-4
	Reaction Chamber	
	Mixing Chamber4	
	Output Manifold 4	
	Reagents	
	NO Concentration Standard4	-4
	Assaying a Working NO Standard Against a NIST-traceable NO	
	Standard	-5
	Zero Air	-6
	Dynamic Parameter Specifications for Gas Titrator	-6
	Determining GPT System Flow Conditions	
	Pre-Calibration 4	
	Calibration	-9
	Connect GPT Apparatus to the Analyzer	
	Adjust Instrument Gain	
	Set NO and NO <sub>x</sub> Background to Zero4-	
	-	

	Calibrate the NO Channel to the NO Calibration Gas
	Calibrate the NO <sub>x</sub> Channel to the NO <sub>x</sub> Calibration Gas
	Preparing NO, NO <sub>x</sub> , and NO <sub>2</sub> Calibration Curves
	Alternative Calibration Procedure Using NO <sub>2</sub> Permeation Tube 4-16
	Calibration in Dual Range and Auto Range Mode 4-16
	Set NO and NO <sub>x</sub> Background Readings to Zero
	Calibrate Low NO
	Calibrate Low NO <sub>x</sub>
	Calibrate Low NO <sub>2</sub>
	Calibrate High NO 4-19
	Calibrate High NO <sub>x</sub>
	Calibrate High NO <sub>2</sub>
	Zero and Span Check 4-21
Chapter 5	Preventive Maintenance5-1
•	Safety Precautions
	Replacement Parts
	Cleaning the Outside Case
	Ozonator Air Feed Drying Column Replacement
	Capillaries Inspection and Replacement
	Thermoelectric Cooler Fins Inspection and Cleaning
	Fan Filters Inspection and Cleaning
	Pump Rebuilding
Chapter 6	Troubleshooting6-1
	Safety Precautions
	Troubleshooting Guides
	Board-Level Connection Diagrams
	Connector Pin Descriptions
	Service Locations
Chapter 7	Servicing7-1
	Safety Precautions7-2
	Firmware Updates7-4
	Accessing the Service Mode7-4
	Replacement Parts List7-4
	Cable List7-6
	External Device Connection Components7-6
	Removing the Measurement Bench and Lowering the Partition Panel 7-8
	Pump Replacement
	Fan Replacement7-10
	PMT Cooler and Reaction Chamber Assembly Replacement
	Photomultiplier Tube Replacement7-13
	PMT High Voltage Power Supply Replacement7-14
	PMT Voltage Adjustment7-16

Reaction Chamber Cleaning or Removal	7-17
NO <sub>2</sub> -to-NO Converter Replacement	7-18
Solenoid Valve Replacement	7-20
Ozonator Assembly Replacement	
Ozonator Transformer Replacement	7-23
Input Board Replacement	
Input Board Calibration	
DC Power Supply Replacement	
Analog Output Testing	
Analog Output Calibration	
Analog Input Calibration	
Calibrating the Input Channels to Zero Volts	
Calibrating the Input Channels to Full-Scale	
Pressure Transducer Assembly Replacement	
Pressure Transducer Calibration	
Temperature Control Board Replacement	
Ambient Temperature Calibration	
Fuse Replacement	
Scrubber Replacement	
I/O Expansion Board (Optional) Replacement	
Digital Output Board Replacement	
Motherboard Replacement	
Measurement Interface Board Replacement	
Flow Transducer Replacement	
Flow Transducer Calibration	
Front Panel Board Replacement	
LCD Module Replacement	
Service Locations	
System Description	
Hardware	
NO <sub>2</sub> -to-NO Converter	
Mode Solenoid	
Reaction Chamber	
Optical Filter	
Pressure Transducer	
Sample Flow Sensor	
Ozonator	
Ozonator Flow Switch	
Photomultiplier Tube	
Photomultiplier Tube Cooler	
Pump	
Sample Capillary	
Dry Air Capillary	
Software	
Instrument Control	8-4

Chapter 8

	Monitoring Signals	
	Measurement Calculations	
	Output Communication	
	Electronics	
	Motherboard	8-6
	External Connectors	
	Internal Connectors	8-6
	Measurement Interface Board	
	Measurement Interface Board Connectors	
	Flow Sensor Assembly	
	Pressure Sensor Assembly	
	Temperature Control Board	
	PMT Power Supply Assembly	
	Input Board Assembly	8-8
	Digital Output Board	
	I/O Expansion Board (Optional)	
	Front Panel Connector Board	
	I/O Components	
	Analog Voltage Outputs	
	Analog Current Outputs (Optional)	8-10
	Analog Voltage Inputs (Optional)	
	Digital Relay Outputs	
	Digital Inputs	
	Serial Ports	
	RS-232 Connection	
	RS-485 Connection	
	Ethernet Connection	
	External Accessory Connector	
Chapter 9	Optional Equipment	9-1
	Internal Zero/Span and Sample Valves	
	Internal Permeation Span Source	
	Permeation Tube Installation	
	Computation of Concentrations	
	Oven Installation and Configuration	
	Permeation Tube Oven Calibration	
	Setting Perm Oven Temperature	
	Setting Temperature with Water Bath	
	Setting Temperature with Known Resistance	
	Determining Permeation Rate by Weight Loss	
	Determining Release Rate by Transfer Standard	
	Ozonator Permeation Dryer	
	Sample Permeation Dryer	
	Lag Volume	
	Principle of Operation	
	Lag Volume Test	

	Ammonia Scrubber	
	Teflon Particulate Filter	
	Ozone Particulate Filter	
	NO <sub>2</sub> -to-NO Converter	
	I/O Expansion Board Assembly	
	Terminal Block and Cable Kits	
	Cables	
	Mounting Options	
Appendix A	Warranty	A-1
Appendix B	C-Link Protocol Commands	B-1
••	Instrument Identification Number	B-1
	Commands	B-2
	Commands List	B-2
	Measurements	B-9
	Alarms	B-13
	Diagnostics	B-17
	Datalogging	
	Calibration	B-25
	Keys/Display	B-29
	Measurement Configuration	B-31
	Hardware Configuration	B-35
	Communications Configuration	B-39
	I/O Configuration	B-42
	Record Layout Definition	B-47
	Format Specifier for ASCII Responses	B-48
	Format Specifier for Binary Responses	B-48
	Format Specifier for EREC Layout	B-49
	Text	B-49
	Value String	B-49
	Value Source	B-49
	Alarm Information	B-50
	Translation Table	B-50
	Selection Table	B-50
	Button Designator	B-50
	Examples	B-51
Appendix C	MODBUS Protocol	C-1
	Serial Communication Parameters	C-1
	TCP Communication Parameters	C-2
	Application Data Unit Definition	C-2
	Slave Address	
	MBAP Header	C-2
	Function Code	C-3

	Data	C-3
	Error Check	C-3
	Function Codes	C-3
	(0x01/0x02) Read Coils / Read Inputs	C-3
	(0x03/0x04) Read Holding Registers / Read Input Registers	
	(0x05) Force (Write) Single Coil	
	MODBUS Parameters Supported	
Appendix D	Geysitech (Bayern-Hessen) Protocol	D-1
	Serial Communication Parameters	
	TCP Communication Parameters	
	Instrument Address	D-2
	Abbreviations Used	D-2
	Basic Command Structure	D-2
	Block Checksum <bcc></bcc>	D-3
	Geysitech Commands	D-3
	Instrument Control Command (ST)	
	Data Sampling/Data Query Command (DA)	
	Measurements reported in response to DA command	
	Single Range Mode	
	Dual/Auto Range Mode	
	Operating and Error Status	

# **Figures**

Figure 1–1. Model 42 <i>i</i> Flow Schematic	1-3
Figure 2–1. Remove the Packing Material	2-2
Figure 2–2. Remove the Shipping Screws	2-2
Figure 2–3. Model 42 <i>i</i> Rear Panel	2-3
Figure 2–4. Atmospheric Dump Bypass Plumbing	2-4
Figure 2–5. I/O Terminal Board Views	
Figure 2–6. D/O Terminal Board Views	2-7
Figure 2–7. 25-Pin Terminal Board Views	2-8
Figure 3–1. Front Panel Display	3-2
Figure 3–2. Front Panel Pushbuttons	3-2
Figure 3–3. Flowchart of Menu-Driven Software	3-5
Figure 3–4. Pin-Out of Rear Panel Connector in Single Range Mode	3-9
Figure 3–5. Pin-Out of Rear Panel Connector in Dual Range Mode	. 3-10
Figure 3–6. Analog Output in Auto Range Mode	. 3-11
Figure 3–7. Pin-Out of Rear Connector in Auto Range Mode	. 3-12
Figure 4–1. GPT System	4-3
Figure 5–1. Inspecting and Replacing the Capillaries	5-3
Figure 5–2. Inspecting and Cleaning the Fan Filters	5-5
Figure 5–3. Rebuilding the Pump	5-7
Figure 6–1. Board-Level Connection Diagram - Common Electronics	6-6
Figure 6–2. Board-Level Connection Diagram - Measurement System	6-7
Figure 7–1. Properly Grounded Antistatic Wrist Strap	7-4
Figure 7–2. Component Layout	7-7
Figure 7–3. Removing the Measurement Bench and Lowering the Partition	
Panel	7-8
Figure 7–4. Replacing the Pump	. 7-10
Figure 7–5. Replacing the Fan	. 7-11
Figure 7–6. PMT Cooler and Reaction Chamber	. 7-12
Figure 7–7. Replacing the PMT	. 7-14
Figure 7–8. Replacing the PMT HVPS	. 7-15
Figure 7–9. Cleaning or Removing the Reaction Chamber	. 7-18
Figure 7–10. NO <sub>2</sub> -to-NO Molybdenum Converter Assembly	. 7-19
Figure 7–11. Replacing the Solenoid Valve	. 7-21
Figure 7–12. Replacing the Ozonator Assembly	7-22
Figure 7–13. Replacing the Input Board	. 7-24

Figure 7–14. Replacing the DC Power Supply	7-26
Figure 7–15. Rear Panel Analog Input and Output Pins	7-27
Figure 7–16. Replacing the Pressure Transducer	7-32
Figure 7–17. Replacing the Scrubber	7-37
Figure 7–18. Replacing the I/O Expansion Board (Optional)	7-38
Figure 7–19. Rear Panel Board Connectors	7-38
Figure 7–20. Replacing the Measurement Interface Board	7-41
Figure 7–21. Replacing the Flow Transducer	7-42
Figure 7–22. Replacing the Front Panel Board and the LCD Module	7-45
Figure 8–1. Hardware Components	8-2
Figure 9–1. Flow Diagram, Zero/Span Option	9-2
Figure 9–2. Flow Diagram, Internal Permeation with Zero/Span Valve	9-3
Figure 9–3. Flow Diagram, Lag Volume	9-12
Figure 9–4. Rack Mount Option Assembly	9-15
Figure 9–5. Bench Mounting	9-16
Figure 9–6. EIA Rack Mounting	9-17
Figure 9–7. Retrofit Rack Mounting	9-18
Figure B–1. Flags	В-13

# **Tables**

Table 1–1. Model 42i Specifications	1-3
Table 1–2. Model 42i Optional Permeation Oven Specifications	1-4
Table 2–1. I/O Terminal Board Pin Descriptions	
Table 2–2.       D/O Terminal Board Pin Descriptions	
Table 2–3.       25-Pin Terminal Board Pin Descriptions	
Table 3–1. Front Panel Pushbuttons	
Table 3–2.       Default Analog Outputs in Single Range Mode	3-9
Table 3–3. Default Analog Outputs in Dual Range Mode	
Table 3–4. Default Analog Outputs in Auto Range Mode	
Table 3–5. Standard Ranges	
Table 3–6.     Extended Ranges	
Table 3–7. Analog Output Zero to Full-Scale Table	
Table 3–8. Signal Type Group Choices	
Table 4–1. Scrubbing Materials	
Table 6–1.       Troubleshooting - General Guide	
Table 6–2.       Troubleshooting - Alarm Messages	6-4
Table 6–3.       Motherboard Connector Pin Descriptions	
Table 6–4. Measurement Interface Board Connector Pin Descriptions	6-13
Table 6–5.       Front Panel Board Connector Pin Diagram	6-15
Table 6–6. I/O Expansion Board (Optional) Connector Pin Descriptions	6-17
Table 6–7. Digital Output Board Connector Pin Descriptions	6-18
Table 6–8.       Input Board Connector Pin Descriptions	6-20
Table 6–9.       Temperature Control Board Connector Pin Descriptions	6-20
Table 7–1. Model 42i Replacement Parts	
Table 7–2. Model 42i Cables	7-6
Table 7–3. External Device Connection Components	7-6
Table 7–4. Analog Output Channels and Rear Panel Pin Connections	7-28
Table 7–5.       Analog Input Channels and Rear Panel Pin Connections	7-28
Table 8–1. RS-232 DB Connector Pin Configurations	8-12
Table 8–2.       RS-485 DB Connector Pin Configuration	8-12
Table 9–1. Cable Options	9-14
Table 9–2.       Color Codes for 25-Pin and 37-Pin Cables	9-14
Table 9–3. Mounting Options	9-15
Table B–1. C-Link Protocol Commands	B-2
Table B–2. Averaging Times	В-10

Table B–3.       Alarm Trigger Values	B-17
Table B-4. Record Output Formats	B-22
Table B–5.       Stream Time Values	B-25
Table B–6. Standard Ranges	B-32
Table B–7. Extended Ranges	B-32
Table B–8. Contrast Levels	B-36
Table B–9. Reply Termination Formats	B-41
Table B–10.       Analog Current Output Range Values	B-43
Table B–11. Analog Voltage Output Range Values	В-44
Table B–12.       Default Output Assignment	B-45
Table C–1. Read Coils for 42 <i>i</i>	C-8
Table C–2. Read Registers for 42 <i>i</i>	C-9
Table C–3.  Write Coils for 42i	
Table D–1. Operating Status for Model 42 <i>i</i>	D-7
Table D–2.       Error Status for Model 42 <i>i</i>	
Table D-1. Operating Status for Model 42 <i>i</i>	D-7

# Chapter 1 Introduction

The Model 42i Chemiluminescence NO-NO<sub>2</sub>-NO<sub>x</sub> Analyzer combines proven detection technology, easy to use menu-driven software, and advanced diagnostics to offer unsurpassed flexibility and reliability. The Model 42i has the following features:

- 320 x 240 graphics display
- Menu-driven software
- Field programmable ranges
- User-selectable single/dual/auto range modes
- Multiple user-defined analog outputs
- Analog input options
- High sensitivity
- Fast response time
- Linearity through all ranges
- Internal sample pump (except with internal permeation span source option)
- Independent NO-NO<sub>2</sub>-NO<sub>x</sub> ranges
- Replaceable NO<sub>2</sub> converter cartridge
- User-selectable digital input/output capabilities
- Standard communications features include RS232/485 and Ethernet
- C-Link, MODBUS, Geysitech (Bayern-Hessen), and streaming data protocols

For details of the analyzer's principle of operation and product specifications, see the following topics:

- "Principle of Operation" on page 1-2
- "Specifications" on page 1-3

Thermo Fisher Scientific is pleased to supply this NO-NO<sub>2</sub>-NO<sub>x</sub> analyzer. We are committed to the manufacture of instruments exhibiting high standards of quality, performance, and workmanship. Service personnel are available for assistance with any questions or problems that may arise in the use of this analyzer. For more information on servicing, see Chapter 7, "Servicing".

### Principle of Operation

The Model 42i operates on the principle that nitric oxide (NO) and ozone (O<sub>3</sub>) react to produce a characteristic luminescence with an intensity linearly proportional to the NO concentration. Infrared light emission results when electronically excited NO2 molecules decay to lower energy states. Specifically:

$$NO + O_3 \rightarrow NO_2 + O_2 + h \nu$$

Nitrogen dioxide (NO<sub>2</sub>) must first be transformed into NO before it can be measured using the chemiluminescent reaction. NO<sub>2</sub> is converted to NO by a molybdenum NO<sub>2</sub>-to-NO converter heated to about 325 °C (the optional stainless steel converter is heated to 625 °C).

The ambient air sample is drawn into the Model 42i through the *sample* bulkhead, as shown in Figure 1–1. The sample flows through a capillary, and then to the mode solenoid valve. The solenoid valve routes the sample either straight to the reaction chamber (NO mode) or through the NO<sub>2</sub>-to-NO converter and then to the reaction chamber (NO<sub>x</sub> mode). A flow sensor to the reaction chamber measures the sample flow.

Dry air enters the Model 42i through the *dry air* bulkhead, passes through a flow switch, and then through a silent discharge ozonator. The ozonator generates the ozone needed for the chemiluminescent reaction. At the reaction chamber, the ozone reacts with the NO in the sample to produce excited NO<sub>2</sub> molecules. A photomultiplier tube (PMT) housed in a thermoelectric cooler detects the luminescence generated during this reaction. From the reaction chamber, the exhaust travels through the ozone (O<sub>3</sub>) converter to the pump, and is released through the vent.

The NO and NO<sub>x</sub> concentrations calculated in the NO and NO<sub>x</sub> modes are stored in memory. The difference between the concentrations is used to calculate the NO<sub>2</sub> concentration. The Model 42i outputs NO, NO<sub>2</sub>, and NO<sub>x</sub> concentrations to the front panel display, the analog outputs, and also makes the data available over the serial or Ethernet connection.





### **Specifications**

Table 1–1 lists the specifications for the Model 42*i*.

Table 1–1. Model 42*i* Specifications

Preset ranges	0-0.05, 0.1, 0.2, 0.5, 1, 2, 5, 10, 20 ppm 0-0.1, 0.2, 0.5, 1, 2, 5, 10, 20, 30 mg/m <sup>3</sup>
Extended ranges	0-0.2, 0.5, 1, 2, 5, 10, 20, 50, 100 ppm
	0-0.5, 1, 2, 5, 10, 20, 50, 100, 150 mg/m <sup>3</sup>
Custom ranges	0-0.05 to 20 ppm (0-0.2 to 100 ppm in extended ranges)
	0-0.1 to 30 mg/m <sup>3</sup> (0-0.5 to 150 mg/m <sup>3</sup> in extended ranges)
Zero roise	0.20 ppb RMS (60 second averaging time)
Lower detectable limit	0.40 ppb (60 second averaging time)
Zero drift (24 hour)	< 0.40 ppb
Span drift	±1% full-scale
Response time (in	40 seconds (10 second averaging time)
automatic mode)	80 seconds (60 second averaging time)
	300 seconds (300 second averaging time)
Linearity	±1% full-scale
Sample flow rate	0.6–0.8 LPM
Operating temperature	15–35 °C (may be safely operated over the 0–45 °C)*

Power requirements	100 VAC @ 50/60 Hz
	115 VAC @ 50/60 Hz
	220–240 VAC @ 50/60 Hz
	300 watts
Physical dimensions	16.75" (W) X 8.62" (H) X 23" (D)
Weight	Approximately 55 lbs.
Analog outputs	6 voltage outputs; 0–100 mV, 1, 5, 10 V (User selectable), 5% of full-scale over/under range, 12 bit resolution, user programmable
Digital outputs	1 power fail relay Form C, 10 digital relays Form A, user selectable alarm output, relay logic, 100 mA @ 200 VDC
Digital inputs	16 digital inputs, user select programmable, TTL level, pulled high
Serial Ports	1 RS-232 or RS-485 with two connectors, baud rate 1200– 115200, Protocols: C-Link, MODBUS, Geysitech (Bayern-Hessen), and streaming data (all user selectable)
Ethernet connection	RJ45 connector for 10Mbs Ethernet connection, static or dynamic TCP/IP addressing

\*In non-condensing environments. Performance specifications based on operation in 15–35 °C range.

#### Table 1–2. Model 42*i* Optional Permeation Oven Specifications

Temperature control     Single Point 45 °C       Temperature stability     ±0.1 °C       Warm-up time     1 hour (permeation device can take 24 to 48 hours to stabilize)       Carrier gas flow     ≈ 70 scc/min       Chamber size     Accepts permeation tubes up to 9 cm in total length; 1 cm in diameter       Temperature range     15–30 °C		
Warm-up time     1 hour (permeation device can take 24 to 48 hours to stabilize)       Carrier gas flow     ≈ 70 scc/min       Chamber size     Accepts permeation tubes up to 9 cm in total length; 1 cm in diameter	Temperature control	Single Point 45 °C
Carrier gas flow     ≈ 70 scc/min       Chamber size     Accepts permeation tubes up to 9 cm in total length; 1 cm in diameter	Temperature stability	±0.1 °C
Chamber size Accepts permeation tubes up to 9 cm in total length; 1 cm in diameter	Warm-up time	1 hour (permeation device can take 24 to 48 hours to stabilize)
diameter	Carrier gas flow	≈ 70 scc/min
Temperature range 15–30 °C	Chamber size	
	Temperature range	15–30 °C
Power requirements 120 VAC @ 50/60 Hz, 50 watts (in addition to the standard Model 42 <i>i</i> )	Power requirements	
Weight Approximately 5 lbs. (in addition to the standard Model 42 <i>i</i> )	Weight	Approximately 5 lbs. (in addition to the standard Model 42 <i>i</i> )

# Chapter 2 Installation

Installing the Model 42*i* includes the following recommendations and procedures:

- "Lifting" on page 2-1
- "Unpacking and Inspection" on page 2-1
- "Setup Procedure" on page 2-3
- "Connecting External Devices" on page 2-5
- "Startup" on page 2-9

**Lifting** When lifting the instrument, use procedure appropriate to lifting a heavy object, such as, bending at the knees while keeping your back straight and upright. Grasp the instrument at the bottom in the front and at the rear of the unit. Although one person can lift the unit, it is desirable to have two persons lifting, one by grasping the bottom in the front and the other by grasping the bottom in the rear.



**Equipment Damage** Do not attempt to lift the instrument by the cover or other external fittings. ▲

### Unpacking and Inspection

The Model 42i is shipped complete in one container. If there is obvious damage to the shipping container when you receive the instrument, notify the carrier immediately and hold for inspection. The carrier is responsible for any damage incurred during shipment.

Use the following procedure to unpack and inspect the instrument.

- 1. Remove the instrument from its shipping container and set it on a table or bench that allows easy access to both the front and rear.
- 2. Remove the cover to expose the internal components.
- 3. Remove the packing material (Figure 2–1).



Figure 2–1. Remove the Packing Material

4. Remove the three shipping screws (Figure ).



Figure 2–2. Remove the Shipping Screws

- 5. Check for possible damage during shipment.
- 6. Check that all connectors and circuit boards are firmly attached.

- 7. Re-install the cover.
- 8. Remove any protective plastic material from the case exterior.

### **Setup Procedure**

Use the following procedure to setup the instrument:

 Connect the sample line to the SAMPLE bulkhead on the rear panel (Figure 2–3). Ensure that the sample line is not contaminated by dirty, wet, or incompatible materials. All tubing should be constructed of FEP Teflon<sup>®</sup>, 316 stainless steel, borosilicate glass, or similar tubing with an OD of 1/4-inch and a minimum ID of 1/8-inch. The length of the tubing should be less than 10 feet.



Figure 2–3. Model 42*i* Rear Panel

**Note** Gas must be delivered to the instrument free of particulates. It may be necessary to use the Teflon particulate filter as described in "Teflon Particulate Filter" on page 9-12. ▲

**Note** Gas must be delivered to the instrument at atmospheric pressure. It may be necessary to use an atmospheric bypass plumbing arrangement as shown in Figure 2-4 if gas pressure is greater than atmospheric pressure.



Figure 2–4. Atmospheric Dump Bypass Plumbing

- 2. Connect the air dryer to the DRY AIR bulkhead.
- 3. Connect the EXHAUST bulkhead to a suitable vent or ozone scrubber. The exhaust line should be 1/4-inch OD with a minimum ID of 1/8inch. The length of the exhaust line should be less than 10 feet. Verify that there is no restriction in this line.
- 4. Connect a suitable recording device to the rear panel connector. For detailed information about connecting to the instrument, refer to:

"Connecting External Devices" on page 2-5

"External Device Connection Components" on page 7-6

"Terminal Block and Cable Kits" on page 9-13

"Instrument Controls Menu" on page 3-26

For detailed information about troubleshooting a connection, refer to "Analog Output Testing" on page 7-26.

5. Plug the instrument into an outlet of the appropriate voltage and frequency.



**WARNING** The Model 42i is supplied with a three-wire grounding cord. Under no circumstances should this grounding system be defeated.

### Connecting External Devices

Several components are available for connecting external devices to *i*Series instruments.

These connection options include:

- Individual terminal board PCB assemblies
- Terminal block and cable kits (optional)
- Individual cables (optional)

For detailed information on the optional connection components, refer to the "Optional Equipment" chapter. For associated part numbers, refer to "External Device Connection Components" on page 7-6.

Terminal Board PCB Assemblies	The following terminal board PCB assemblies are available for <i>i</i> Series instruments:
	• I/O terminal board PCB assembly, 37 pin (standard)
	• D/O terminal board PCB assembly, 37 pin (standard)
	• 25-pin terminal board PCB assembly, (included with optional I/O Expansion Board)
I/O Terminal Board	Figure 2–5 shows the recommended method for attaching the cable to the terminal board using the included tie-down and spacer. Table 2–1 identifies the connector pins and associated signals.
	<b>Note</b> All of the I/O available in the instrument are not brought out on this terminal board, if more I/O is desired, an alternative means of connection is required. $\blacktriangle$



Component Side Viewed from Top of Board





Detail "A"



Assembled (	Connector
-------------	-----------

# Figure 2–5. I/O Terminal Board Views

#### Table 2–1. I/O Terminal Board Pin Descriptions

Pin	Signal Description	Pin	Signal Description
1	Analog1	13	Power_Fail_NC
2	Analog ground	14	Power_Fail_COM
3	Analog2	15	Power_Fail_NO
4	Analog ground	16	TTL_Input1
5	Analog3	17	TTL_Input2
6	Analog ground	18	TTL_Input3
7	Analog4	19	TTL_Input4
8	Analog ground	20	Digital ground
9	Analog5	21	TTL_Input5
10	Analog ground	22	TTL_Input6
11	Analog6	23	TTL_Input7
12	Analog ground	24	Digital ground

# **D/O Terminal Board** Figure 2–6 shows the recommended method for attaching the cable to the terminal board using the included tie-down and spacer. Table 2–2 identifies the connector pins and associated signals.



Assembled Connector

#### Figure 2–6. D/O Terminal Board Views Table 2–2. D/O Terminal Board Pin Descriptions

Pin	Signal Description	Pin	Signal Description
1	Relay1_ContactA	13	Relay7_ContactA
2	Relay1_ContactB	14	Relay7_ContactB
3	Relay2_ContactA	15	Relay8_ContactA
4	Relay2_ContactB	16	Relay8_ContactB
5	Relay3_ContactA	17	Relay9_ContactA
6	Relay3_ContactB	18	Relay9_ContactB
7	Relay4_ContactA	19	Relay10_ContactA
8	Relay4_ContactB	20	Relay10_ContactB
9	Relay5_ContactA	21	(not used)
10	Relay5_ContactB	22	+24V
11	Relay6_ContactA	23	(not used)
12	Relay6_ContactB	24	+24V

### 25-Pin Terminal Board





Component Side Viewed from Top of Board





Detail "A"

Detail "B"

Assembled Connector

#### **Figure 2–7.** 25-Pin Terminal Board Views **Table 2–3.** 25-Pin Terminal Board Pin Descriptions

Pin	Signal Description	Pin	Signal Description
1	lOut1	13	Analog_In1
2	Isolated ground	14	Analog_In2
3	lOut2	15	Analog_In3
4	Isolated ground	16	GNDD
5	IOut3	17	Analog_In4
6	Isolated ground	18	Analog_In5
7	lOut4	19	Analog_In6
8	Isolated ground	20	GNDD
9	IOut5	21	Analog_In7
10	Isolated ground	22	Analog_In8
11	IOut6	23	GNDD
12	Isolated ground	24	GNDD
## **Startup** Use the following procedure when starting the instrument.

- 1. Turn the power ON.
- 2. Allow 90 minutes for the instrument to stabilize.

**Note** it is best to turn the ozonator on and let the instrument run overnight before calibration in order to obtain the most accurate information.  $\blacktriangle$ 

- 3. Set instrument parameters such as operating ranges and averaging times to appropriate settings. For more information about instrument parameters, see the "Operation" chapter.
- 4. Before beginning the actual monitoring, perform a multipoint calibration as described in the "Calibration" chapter.

# Chapter 3 Operation

This chapter describes the front panel display, front panel pushbuttons, and menu-driven software. For details, see the following topics:

- "Display" on page 3-1
- "Pushbuttons" on page 3-2
- "Software Overview" on page 3-4
- "Range Menu" on page 3-8
- "Averaging Time" on page 3-16
- "Calibration Factors Menu" on page 3-17
- "Calibration Menu" on page 3-21
- "Instrument Controls Menu" on page 3-26
- "Diagnostics Menu" on page 3-57
- "Alarms Menu" on page 3-64
- "Service Menu" on page 3-73
- "Password Menu" on page 3-91
- **Display** The 320 x 240 graphics liquid-crystal display (LCD) shows the sample concentrations, instrument parameters, instrument controls, help, and error messages. Some menus contain more items than can be displayed at one time. For these menus, use ↑ and ↓ to move the cursor up and down to each item.







**CAUTION** If the LCD panel breaks, do not to let the liquid crystal contact your skin or clothes. If the liquid crystal contacts your skin or clothes, wash it off immediately using soap and water. ▲

### **Pushbuttons**

The Pushbuttons allow the user to traverse the various screens/menus.



Figure 3–2. Front Panel Pushbuttons

Table 3–1 lists the front panel pushbuttons and their functions.

 Table 3–1. Front Panel Pushbuttons

Key Name	Function
= Soft Keys	The (soft keys) are used to provide shortcuts that allow the user to jump to user-selectable menu screens. For more information on processing soft keys, see "Soft Keys" below
► = Run	The $\blacktriangleright$ is used to display the Run screen. The Run screen normally displays the NO, NO <sub>2</sub> , and NO <sub>x</sub> concentrations.
🗨 = Menu	The sis used to display the Main Menu when in the Run screen, or back up one level in the menu system. For more information about the Main Menu, see "Main Menu" later in this chapter.
<b>?</b> = Help	The <b>?</b> is context-sensitive, that is, it provides additional information about the screen that is being displayed. Press <b>?</b> for a brief explanation about the current screen or menu. Help messages are displayed using lower case letters to easily distinguish them from the operating screens. To exit a help screen, press <b>o</b> or <b>?</b> to return to the previous screen, or <b>b</b> to return to the Run screen.
<ul> <li>★ = Up, Down</li> <li>★ = Left, Right</li> </ul>	The four arrow pushbuttons ( , , , , , , and ) move the cursor up, down, left, and right or change values and states in specific screens.
= Enter	The is used to select a menu item, accept/set/save a change, and/or toggle on/off functions.

**Soft Keys** The Soft Keys are multi-functional keys that use part of the display to identify their function at any moment. The function of the soft keys allows immediate access to the menu structure and most often used menus and screens. They are located directly underneath the display and as the keys' functions change this is indicated by user-defined labels in the lower part of the display, so that the user knows what the keys are to be used for.

To change a soft key, place the menu cursor ">" on the item of the selected menu or screen you wish to set. Press followed by the selected soft key within 1 second of pressing the right-arrow key. The edit soft key prompt will be displayed for configuration for the new label.

**Note** Not all menu items may be assigned to soft keys. If a particular menu or screen item cannot be assigned, the key assignment screen will not come up upon entering right-arrow-soft key combinations. All items under the Service menu (including the menu itself) cannot be assigned soft keys. ▲



# Software Overview

The Model 42*i* utilizes the menu-driven software as illustrated by the flowchart in Figure 3–3. The Power-Up screen, shown at the top of the flowchart, is displayed each time the instrument is turned on. This screen is displayed while the instrument is warming up and performing self-checks. After the warm-up period, the Run screen is automatically displayed. The Run screen is the normal operating screen. It displays the NO, NO<sub>2</sub>, and NO<sub>x</sub> concentrations, depending on operating mode. From the Run screen, the Main Menu can be displayed by pressing . The Main Menu contains a list of submenus. Each submenu contains related instrument settings. This chapter describes each submenu and screen in detail. Refer to the appropriate sections for more information.



Figure 3–3. Flowchart of Menu-Driven Software

#### **Power-Up Screen**

The Power-Up screen is displayed on power up of the Model 42*i*. The Self-Test is displayed while the internal components are warming up and diagnostic checks are performed.



**Run Screen** The Run screen displays the NO, NO<sub>2</sub>, and NO<sub>x</sub> concentrations. The status bar displays optional zero/span solenoid valves, if installed, time, and alarm status. The word "SAMPLE" on the bottom left of the display indicates the analyzer has the span/zero valve option and is in "SAMPLE" mode. Other modes appear in the same area of the display as "ZERO" or "SPAN". For more information about the optional solenoid valves, see Chapter 9, "Optional Equipment".

When operating in dual or auto range mode two sets of coefficients are used to calculate the NO-NO<sub>2</sub>-NO<sub>x</sub> "High" and "Low" concentrations. Also, two averaging times are used—one for each range. The title bar indicates which range concentrations are displayed. The words "LOW RANGE CONCENTRATION" on the top of the display indicates that the low concentration is displayed. In dual range mode, pressing the and arrows will toggle between high and low concentrations. The example below shows the Run screen in single range mode.

CO	NCENTRATION
NO	62.7 ppb
NO2	25.5 PPB
NO×	88.2 ppb
SAMPLE	12:34 ALARM
RANGE	AVG DIAGS ALARM

**Main Menu** The Main Menu contains a number of submenus. Instrument parameters and settings can be read and modified within the submenus according to their function. The concentration appears above the main menu and submenus in every screen. The SERVICE menu is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" later in this chapter.

- Use 🔶 and 🕨 to move the cursor up and down.
- Press 🔶 to select a choice.
- Press **•** to return to the Main Menu or **•** to return to the Run screen.

NO 62.7 PPB NO2 25.5 PPB NOX 88.2 PPB SAMPLE 12:34 ALARM MAIN MENU: >RANGE AVERAGING TIME CALIBRATION FACTORS CALIBRATION INSTRUMENT CONTROLS
NOX 88.2 PPB SAMPLE 12:34 ALARM MAIN MENU: >RANGE AVERAGING TIME CALIBRATION FACTORS CALIBRATION
MAIN MENU: >RANGE AVERAGING TIME CALIBRATION FACTORS CALIBRATION
>RANGE AVERAGING TIME CALIBRATION FACTORS CALIBRATION
CALIBRATION FACTORS
CALIBRATION
I TRICTDI IMERIT PARITDAL C
DIAGNOSTICS
ALARMS +
RANGE AVG DIAGS ALARM

SERVICE PASSWORD

## **Range Menu**

The Range menu allows the operator to select the gas units, NO-NO<sub>2</sub>-NO<sub>x</sub> ranges, and to set the custom ranges. The screens below show the range menu in single range mode and dual/auto range modes. The only difference between the screens are the words "HI" and "LO" to indicate which range is displayed. For more information about the single, dual and auto range modes, see "Single Range Mode", "Dual Range Mode", and "Auto Range Mode" below.

• In the Main Menu, choose **Range** 



SET CUSTOM RANGES

#### Single Range Mode

In the single range mode, the NO,  $NO_2$ , and  $NO_x$  channels each have one range, one averaging time, and one span coefficient.

By default, the three analog outputs are arranged on the rear panel connector as shown in Figure 3–4. See Table 3–2 for channels and pin connections. Single range mode may be selected from the "Range Mode Select" on page 3-74.



Figure 3–4. Pin-Out of Rear Panel Connector in Single Range Mode Table 3–2. Default Analog Outputs in Single Range Mode

Channel	<b>Connector Pin</b>	I/O Terminal Pin	Description
1	14	1	NO Analog Output
2	33	3	NO <sub>2</sub> Analog Output
3	15	5	NO <sub>x</sub> Analog Output
4	34	7	None
5	17	9	None
6	36	11	None
Ground	16, 18, 19, 35, 37	2, 4, 6, 8, 10, 12	Signal Ground

**Note** All channels are user definable. If any customization has been made to the analog output configuration, the default selections my not apply. ▲

**Dual Range Mode** In the dual range mode, there are two independent analog outputs. These are labeled simply as the "High Range" and the "Low Range". Each channel has its own analog output range, averaging time, and span coefficient.

This enables the sample concentration reading to be sent to the analog outputs at two different ranges. For example, the low NO analog output can be set to output concentrations from 0 to 50 ppb and the high NO analog output set to output concentrations from 0 to 500 ppb.

In addition to each channel having two ranges, each channel has two span coefficients. There are two span coefficients so that each range can be calibrated separately. This is necessary if the two ranges are not close to one another. For example, the low NO range is set to 0-50 ppb and the high NO range is set to 0-20,000 ppb.

By default, in the dual range mode, the analog outputs are arranged on the rear panel connector as shown in Figure 3–5. See Table 3–3 for channels and pin connections. Dual range mode may be selected from the "Range Mode Select" on page 3-74.



**Figure 3–5.** Pin-Out of Rear Panel Connector in Dual Range Mode **Table 3–3.** Default Analog Outputs in Dual Range Mode

Channel	<b>Connector Pin</b>	I/O Terminal Pin	Description
1	14	1	NO High Range
2	33	3	NO Low Range
3	15	5	NO <sub>2</sub> High Range
4	34	7	NO <sub>2</sub> Low Range
5	17	9	NO <sub>x</sub> High Range
6	36	11	NO <sub>x</sub> Low Range
Ground	16, 18, 19, 35, 37	2, 4, 6, 8, 10, 12	Signal Ground

**Note** All channels are user definable. If any customization has been made to the analog output configuration, the default selections my not apply. ▲

#### Auto Range Mode

The auto range mode switches the NO,  $NO_2$ , and  $NO_x$  analog outputs between high and low ranges, depending on the  $NO_x$  concentration level. The high and low ranges are defined in the Range menu.

For example, suppose the low range is set to 50 ppb and the high range is set to 100 ppb (Figure 3–6). Sample concentrations below 50 ppb are presented to the low ranges analog outputs and sample concentrations above 50 ppb are presented to the high ranges analog outputs. When the low range is active, the status output is at 0 volts. When the high range is active, the status output is at half of full-scale.

When the high ranges are active, the  $NO_x$  concentration must drop to 95% of the low  $NO_x$  range for the low ranges to become active.

In addition to each channel having two ranges, each channel has two span coefficients. There are two span coefficients so that each range can be calibrated separately. This is necessary if the two ranges are not close to one another. For example, the low NO range is set to 0–50 ppb and the high NO range is set to 0–20,000 ppb.



Figure 3–6. Analog Output in Auto Range Mode

Thermo Fisher Scientific

By default, in the auto range mode, the analog outputs are arranged on the rear panel connector as shown in Figure 3–7. See Table 3–4 for channels and pin connections. Auto range mode may be selected from the "Range Mode Select" on page 3-74.



**Figure 3–7.** Pin-Out of Rear Connector in Auto Range Mode **Table 3–4.** Default Analog Outputs in Auto Range Mode

Channel	<b>Connector Pin</b>	I/O Terminal Pin	Description
1	14	1	NO Analog Output
2	33	3	NO <sub>2</sub> Analog Output
3	15	5	NO <sub>x</sub> Analog Output
4	34	7	Range Status: half-scale = high range zero scale = low range
5	17	9	None
6	36	11	None
Ground	16, 18, 19, 35, 37	2, 4, 6, 8, 10, 12	Signal Ground

**Note** All channels are user definable. If any customization has been made to the analog output configuration, the default selections my not apply. ▲

**Gas Units** The Gas Units screen defines how the NO, NO<sub>2</sub>, and NO<sub>x</sub> concentration readings are expressed. Gas units of parts per billion (ppb), parts per million (ppm), micrograms per cubic meter (µg/m<sup>3</sup>), or milligrams per cubic meter (mg/m<sup>3</sup>) are available. The µg/m<sup>3</sup> and mg/m<sup>3</sup> gas concentration modes are calculated using a standard pressure of 760 mmHg and a standard temperature of 20 °C.

When switching the selected units from ppb or ppm to  $\mu g/m^3$  or  $mg/m^3$ , the analog ranges all default to the highest range in that mode. For example, when switching from  $mg/m^3$  to ppm, all the ranges default to 20 ppm. Therefore, whenever you change units, you should also check the range settings.

• In the Main Menu, choose Range > **Gas Units**.

**Note** If the units change from ppb/ppm to  $\mu g/m^3/mg/m^3$  or vice versa, the instrument should be re-calibrated, particularly if the user's standard temperature is different from 20 °C. A display warning will appear that ranges will be defaulted and calibration parameters reset.



## NO, NO<sub>2</sub>, and NO<sub>x</sub> Ranges

The NO, NO<sub>2</sub>, and NO<sub>x</sub> Ranges screen defines the concentration range of the analog outputs. For example, a NO<sub>2</sub> range of 0-50 ppb restricts the NO<sub>2</sub> analog output to concentrations between 0 and 50 ppb.

The display shows the current NO, NO<sub>2</sub>, or NO<sub>x</sub> range. The next line of the display is used to change the range. The range screen is similar for the single, dual, and auto range modes. The only difference between the screens are the words "High" and "Low" to indicate which range is displayed. The example below shows the NO range screen in single mode. For more information about the dual and auto range modes, see "Single Range Mode", "Dual Range Mode", and "Auto Range Mode" earlier in this chapter.

Table 3–5 lists the available operating ranges. Table 3–6 lists the extended ranges. When switching from standard to extended ranges, the PMT voltage must be readjusted. For more information about readjusting the PMT voltage, see Chapter 7, "Servicing".

• In the Main Menu, choose Range > NO, NO2, or NOx Range.

RANGE: CURRENTLY SET TO	2 2 2 2	50 100 ?
	♦ CHANG ♥ SAVE	E VALUE VALUE
RANGE AV	G DIAGS	ALARM

#### Table 3–5. Standard Ranges

ppb	ppm	μgm³	mgm <sup>3</sup>
50	0.05	100	0.1
100	0.10	200	0.2
200	0.20	500	0.5
500	0.50	1,000	1.0
1,000	1.00	2,000	2.0
2,000	2.00	5,000	5.0
5,000	5.00	10,000	10.0
10,000	10.00	20,000	20.0
20,000	20.00	30,000	30.0
C1	C1	C1	C1
C2	C2	C2	C2
C3	C3	C3	C3

ppb	ppm	μgm³	mgm <sup>3</sup>
200	0.2	500	0.5
500	0.5	1,000	1
1,000	1	2,000	2
2,000	2	5,000	5
5,000	5	10,000	10
10,000	10	20,000	20
20,000	20	50,000	50
50,000	50	100,000	100
100,000	100	150,000	150
C1	C1	C1	C1
C2	C2	C2	C2
C3	С3	C3	C3

C1, C2, and C3 are custom ranges. For more information about custom ranges, see "Set Custom Ranges" below.

**Set Custom Ranges** The Set Custom Ranges menu lists three custom ranges: C1, C2, and C3. Custom ranges are user-defined ranges. In the standard range mode, any value between 50 ppb (0.05 ppm) and 20,000 ppb (20 ppm) can be specified as a range. In the µg/m<sup>3</sup> (mg/m<sup>3</sup>) mode, any value between 100 µg/m<sup>3</sup> (0.1 mg/m<sup>3</sup>) and 30,000 µg/m<sup>3</sup> (30 mg/m<sup>3</sup>) can be specified as a range. In the extended range mode, any value between 200 ppb (0.02 ppm) and 100,000 ppb (100 ppm) can be specified as a range. In the µg/m<sup>3</sup> (mg/m<sup>3</sup>) mode, any value between 500 µg/m<sup>3</sup> (0.5 mg/m<sup>3</sup>) and 150,000 µg/m<sup>3</sup> (150 mg/m<sup>3</sup>) can be specified as a range.

• In the Main Menu, choose Range > Set Custom Ranges.

CUSTOM F >CUSTOM CUSTOM CUSTOM	RANGES RANGI RANGI RANGI	12	55.6 75.0 125.0
RANGE	AVG	DIAGS	ALARM

**Custom Ranges** The Custom Ranges screen is used to define the custom ranges.

The display shows the current custom range. The next line of the display is used to set the range. To use the custom full-scale range, be sure to select it (Custom range 1, 2, or 3) in the NO,  $NO_2$ , or  $NO_x$  Ranges screen. For more information about selecting ranges, see "NO, NO2, and NOX Ranges" above.

• In the Main Menu, choose Range > Set Custom Ranges > Custom range 1, 2, or 3.



# **Averaging Time**

The Averaging Time defines a time period (10 to 300 seconds) over which NO, NO<sub>2</sub>, and NO<sub>x</sub> measurements are taken. The average concentration of the NO, NO<sub>2</sub>, and NO<sub>x</sub> readings are calculated for that time period. The front panel display and analog outputs are updated every 10 seconds for averaging times between 10 and 300 seconds. An averaging time of 10 seconds, for example, means that the average concentration of the last 10 seconds will be output at each update. An averaging time of 300 seconds means that the moving average concentration of the last 300 seconds will be output at each update. Therefore, the lower the averaging time the faster the front panel display and analog outputs respond to concentration changes. Longer averaging times are typically used to smooth output data.

The Averaging Time screen for the single range mode is shown below. In the dual and auto range modes, an Averaging Time Menu is displayed before the averaging time screens. This additional menu is needed because the dual and auto range modes have two averaging times (high and low). The Averaging Time screen functions the same way in the single, dual, and auto range modes. The following averaging times are available: 10, 20, 30, 60, 90, 120, 180, 240, and 300 seconds. Additional averaging times are available in NO and NO<sub>x</sub> modes: 1, 2, and 5 seconds. For more information about the manual mode, see "Auto/Manual Mode" later in this chapter.

• In the Main Menu, choose **Averaging Time**.



# Calibration Factors Menu

Calibration factors are used to correct the NO,  $NO_2$ , and  $NO_x$  concentrations readings that the instrument generates using its own internal calibration data. The Calibration Factors menu displays the calibration factors. The screens below show the calibration factors menu in single mode and dual/auto range modes. The only difference between the screens are the words "HI" and "LO" to indicate which range is displayed.

Normally, the instrument is calibrated automatically using the Calibration menu described in "Calibration Menu" later in this chapter. However, the instrument can also be calibrated manually using the Calibration Factors menu.

To manually calibrate the instrument, see "NO and NOx Backgrounds", "NO, NO2, and NOx Coefficients" and "Calibration Pressure" below for more information.

• In the Main Menu, choose Calibration Factors.

	CALIBRATION FACTORS: >NO BKG 0.0 NO× BKG 0.0 NO COEF 1.000 NO2 COEF 1.000 NO2 COEF 1.000 NO× COEF 1.000 CAL PRESSURE 150.0 mmHg RESET USER CAL DEFAULTS •	CALIBRATION FACTORS: >NO BKG 0.0 NO× BKG 0.0 HI NO COEF 1.000 HI NO2 COEF 1.000 HI NO× COEF 1.000 LO NO COEF 1.000 LO NO2 COEF 1.000
RANGE AVG DIAGS ALARM RANGE AVG DIAGS ALARM	RANGE AVG DIAGS ALARM	RANGE AVG DIAGS ALARM

LO NOX COEF 1.000 CAL PRESSURE 150.0 mmHg RESET USER CAL DEFAULTS

#### **NO and NO<sub>x</sub> Backgrounds**

The NO and NO<sub>x</sub> background corrections are determined during zero calibration. The NO background is the amount of signal read by the analyzer in the NO channel while sampling zero air. The NO<sub>x</sub> background is the amount of signal read by the analyzer in the NO<sub>x</sub> channel while sampling zero air. Although the background is expressed in terms of concentration, the background signal is actually the combination of electrical offsets, PMT dark currents, and trace substances undergoing chemiluminescence. Before the analyzer sets the NO and NO<sub>x</sub> readings to zero, it stores these values as the NO and NO<sub>x</sub> background corrections, respectively. The NO<sub>2</sub> background correction is determined from the NO and NO<sub>x</sub> background corrections and is not displayed. The background corrections are typically below 15 ppb.

The NO and NO<sub>x</sub> Background screens are used to perform a manual zero calibration of the instrument. Before performing a zero calibration, allow the analyzer to sample zero air until stable readings are obtained. The NO channel should be calibrated first. Both the NO and NO<sub>x</sub> Background screens operate the same way. Therefore, the following description of the NO background applies to the NO<sub>x</sub> background screen as well. The first line of the display shows the current NO reading. The second line of the display shows the NO background correction that is stored in memory. The NO background correction is a value, expressed in the current gas units, that is subtracted from the NO reading to produce the NO reading that is displayed.

In the example below, the analyzer is displayed 4.4 ppb of NO while sampling zero air. A background correction is 0.0 ppb means that 0 ppb is being subtracted from the NO concentration being displayed. Therefore, the background correction must be increased to 4.4 ppb in order for the NO reading to be at 0 ppb, i.e., a NO reading of 4.4 ppb minus a NO background reading of 4.4 ppb gives the corrected NO reading of 0 ppb.

To set the NO reading in the example below to zero, use  $\checkmark$  to increment the NO background correction to 4.4 ppb. As the NO background correction is increased, the NO concentration is decreased. Note that at this point, pressing  $\checkmark$  and  $\checkmark$  however, has no affect on the analog outputs or the stored NO background correction of 0.0 ppb. A question mark following both the NO reading and the NO background correction indicates that these are proposed changes as opposed to implemented changes. To escape this screen without saving any changes, press  $\bullet$  to return to the Calibration Factors menu or  $\triangleright$  to return to the Run screen. Press  $\leftarrow$  to actually set the NO reading to 0 ppb and store the new background correction of 4.4 ppb. Then the question mark prompt beside the NO reading disappears. • In the Main Menu, choose Calibration Factors > **NO** or **NOx Bkg**.



# NO, NO<sub>2</sub>, and NO<sub>x</sub> Coefficients

The NO, NO<sub>2</sub>, and NO<sub>x</sub> span coefficient are usually calculated by the instrument processor during calibration. The span coefficients are used to correct the NO, NO<sub>2</sub>, and NO<sub>x</sub> readings. The NO and NO<sub>x</sub> span coefficients normally has a value near 1.000. The NO<sub>2</sub> span coefficient normally has a value between 0.95 and 1.050.

The NO, NO<sub>2</sub>, and NO<sub>x</sub> Coefficient screens allow the NO, NO<sub>2</sub>, and NO<sub>x</sub> span coefficients to be manually changed while sampling span gas of known concentration. The NO, NO<sub>2</sub>, and NO<sub>x</sub> Coefficient screens operate the same way. Therefore, the following description of the NO coefficient screen applies to the NO<sub>2</sub>, and NO<sub>x</sub> coefficient screens as well.

The display shows the current NO concentration reading. The next line of the display shows the NO span coefficient that is stored in memory and is being used to correct the NO concentration. Notice that as the span coefficient value is changed, the current NO concentration reading on the above line also changes. However, no real changes are made to the value stored in memory until  $\checkmark$  is pressed. Only proposed changes, as indicated by a question mark prompt, are displayed until  $\checkmark$  is pressed.

In dual or auto range modes, "HIGH" or "LOW" is displayed to indicate the calibration of the high or low coefficient. The example below shows the coefficient screen in dual/auto range mode.

**Note** The concentration value will show "ERROR" if the measured concentration is not a valid span value (either higher than the selected range, or 0 or lower).  $\blacktriangle$ 

 In the Main Menu, choose Calibration Factors > NO, NO2, or NOx Coef.

NO COEFF	FICIENT: NO: F TO:	51.4 1.000
		INC/DEC SAVE VALUE
RANGE	AVG DI	AGS ALARM

### **Calibration Pressure**

The Calibration Pressure screen reports the reactor pressure at which current calibration was performed. The screen also allows this value to be edited by the operator. This value should not be changed unless a complete manual calibration is being performed. The calibration pressure is set equal to the reactor pressure at the time of calibration. The acceptable range for calibration pressure is between 150 and 300 mmHg.

**Note** Turning the pressure compensation ON and OFF can produce significant artificial jumps in the apparent sample concentration. If the pressure compensation feature is to be used, the instrument must be calibrated with the pressure compensation feature ON. For more information about calibration, see Chapter 4, "Calibration". ▲

CALIBRATION PRESSURE: PRESSURE: 232.5 SET CAL PRES TO: 150.0
♣♥ INC/DEC ♥ SAVE VALUE
RANGE AVG DIAGS ALARM

#### Reset User Calibration Default

The Reset User Calibration Default screen allows the user to reset the calibration configuration values to factory defaults.

• In the Main Menu, choose Service > Calibration Factors > Reset User Cal Defaults.



# **Calibration Menu**

The Calibration menu is used to calibrate the analyzer, including zero backgrounds, the NO,  $NO_2$ , and  $NO_x$  coefficients, and the calibration pressure. The screens below show the calibration menu in single mode and dual/auto range modes. The zero/span check is visible only if the zero/span option is installed in single range mode.

The calibration procedure is the same in dual, auto, or single range, however, there are two sets of gas coefficients in dual or auto range (i.e. low and high coefficients). This enables each range to be calibrated separately. When calibrating the instrument in dual or auto range, be sure to use a low span gas to calibrate the low range and a high span gas to calibrate the high range.

Whether dual or singe range, the first step in calibrating the instrument is to assign the calibration pressure. The calibration pressure is used to account for slight pressure fluctuation brought on by changing weather. The calibration pressure is set equal to the reactor pressure at the time of calibration. For more information about calibration, see Chapter 4, "Calibration".

• In the Main Menu, choose **Calibration**.



CAL LO NO× COEFFICIENT CALIBRATE PRESSURE

# Calibrate NO and NO<sub>x</sub> Backgrounds

The Calibrate NO and  $NO_x$  Background screens are used to adjust the background, or perform a "zero calibration". Be sure the analyzer samples zero air until the readings stabilize. The display shows the current NO or  $NO_x$  reading.

It is important to note the averaging time when calibrating. The longer the averaging time, the more accurate the calibration will be. To be most accurate, use the 300-second averaging time. For more information about calibration, see Chapter 4, "Calibration".

• In the Main Menu, choose Calibration > Calibrate NO or NOx Background.



# Calibrate NO, NO<sub>2</sub>, and NO<sub>x</sub> Coefficients

The Calibrate NO Coefficient screen is used to adjust the NO span concentration while sampling span gas of known concentration. All calibration screens operate the same way. Therefore, the following description of the NO calibration screen applies to the  $NO_2$  and  $NO_x$  calibration screens as well.

The display shows the current NO concentration reading and the current NO range. The next line of the display is where the NO calibration gas concentration is entered.

It is important to note the averaging time when calibrating. The longer the averaging time, the more accurate the calibration will be. To be most accurate, use the 300-second averaging time. For more information about calibration, see Chapter 4, "Calibration".

 In the Main Menu, choose Calibration > Cal NO, NO2 or NOx Coefficient.



#### **Calibrate Pressure**

The Calibrate Pressure screen is used to set the calibration pressure.

The Calibration pressure should be set only when calibrating the instrument.

• In the Main Menu, choose Calibration > **Calibrate Pressure**.



**Zero/Span Check** The Zero/Span Check menu is available with the zero/span valve option when in NO or NO<sub>x</sub> measurement modes. It is used to program the instrument to perform fully automated zero and span checks or adjustments. Total Duration Hour is the sum of zero, span, and purge duration minutes. Zero and Span Calibration Reset are toggle items that change between yes or no when selected, and displayed if auto calibration is installed.

• In the Main Menu, choose Calibration > **Zero/Span Check**.



- **Next Time** The Next Time screen is used to view and set the next zero/span check date and time. Once the initial zero/span check is performed, the date and time of the next zero/span check is calculated and displayed.
  - In the Main Menu, choose Calibration > Zero/Span Check > Next Time.



- **Period Hours** The Zero/Span Period Hours screen defines the period or interval between zero/span checks. Periods between 0 and 999 hours are acceptable. To turn the zero/span check off, set the period to 0.
  - In the Main Menu, choose Calibration > Zero/Span Check > Period Hours.

SPAN PERIOD: RH URRENTLY: HRS HRS TO: 02 9 MOVE JRSOR • • SAVE CHANGE VALUE 44 DIAGS ALARM RANGE AVG

#### Zero/Span/Purge Duration Minutes

The Zero Duration Minutes screen defines how long zero air is sampled by the instrument. The span and purge duration screens look and function the same way as the zero duration screen, and are used to set how long the span gas and sample gas are sampled by the instrument. Durations between 0 and 60 minutes are acceptable. Each time a zero/span check occurs the zero check is done first, followed by the span check. To perform just a zero check, set the span and purge duration screen to 0 (off). The same applies to perform just a span or purge check.

 In the Main Menu, choose Calibration > Zero/Span Check > Zero, Span or Purge Duration Min.



#### Zero/Span Averaging Time

The Zero/Span Averaging Time screen allows the user to adjust the zero/span averaging time. The zero/span averaging time is used by the analyzer only when performing an automatic zero or span check. The analyzer's averaging time is used for all other functions. The following averaging times are available: 1, 2, 5, 10, 20, 30, 60, 90, 120, 180, 240, and 300 seconds.

• In the Main Menu, choose Calibration > Zero/Span Check > Zero/Span Avg Sec.



**Zero/Span Ratio** The Zero/Span Ratio screen is used to adjust the ratio of zeros to spans. For example, if this value is set to 1, a span check will follow every zero check. If this value is set to 3, there will be two zero checks between each zero/span check. This value may be set from 1 to 10, with 1 as default.

In the Main Menu, choose Calibration > Zero/Span Check > Zero/Span Ratio.

ZERO/SPI CURREN SET	TLY:	TIO: 1:1 2:1 ?
	₹ \}	CHANGE VALUE SAVE VALUE
RANGE	AVG	DIAGS ALARM

# Instrument Controls Menu

The Instrument Controls menu contains a number of items. The software controls listed in this menu enable control of the listed instrument functions.

• In the Main Menu, choose Instrument Controls.



Ozonator

The Ozonator screen is used to turn the internal ozonator on or off. The display shows the status of the control line that turns the ozonator on or off. The next line of the display shows the user-specified ozonator setting. Under most conditions, the control line status and ozonator set status are the same. However, as a safety precaution, the microprocessor can override the user-specified ozonator setting. This occurs only if the ozonator flow

doesn't indicate any flow or if the  $NO_2$  converter temperature is below the minimum alarm limit. In this case, an alarm is activated and the ozonator is turned off. This is done to prevent the ozonator from overheating, which will result in permanent damage to the ozonator, or if the converter temperature drops below the minimum limit, which reduces the effectiveness of the ozone destruct.

It is possible, however, to override the ozonator shut-off due to converter temperature being out of range, by setting the ozonator safety "OFF" in the "Service Mode".

**Note** The ozonator must be "ON" to obtain NO, NO<sub>2</sub>, and NO<sub>x</sub> readings. As an additional safety precaution, a lit LED mounted on the measurement interface board indicates that the ozonator is on.  $\blacktriangle$ 

• In the Main Menu, choose Instrument Controls > **Ozonator**.



# **PMT Supply** The PMT Supply screen is used to turn the PMT power supply on or off. This is useful in a troubleshooting situation.

• In the Main Menu, choose Instrument Controls > **PMT Supply**.



#### **Auto/Manual Mode**

The Auto/Manual Mode screen allows selection of the automatic mode  $(NO/NO_x)$ , NO mode (manual NO), or NO<sub>x</sub> mode (manual NO<sub>x</sub>). The auto cycle mode switches the mode solenoid valve automatically on a 10

second cycle so that NO, NO<sub>2</sub>, and NO<sub>x</sub> concentrations are determined. The manual NO mode puts the mode solenoid valve into the open position so that the sample gas bypasses the NO<sub>2</sub>-to-NO converter. Therefore, only the NO concentration is determined. The manual NOx mode puts the mode solenoid valve into the closed position so that the sample gas passes through the NO<sub>2</sub>-to-NO converter. Therefore, only the NO<sub>x</sub> concentration is determined. In the manual modes, additional averaging times of 1, 2, and 5 seconds are available from the Averaging Times screen.

• In the Main Menu, choose Instrument Controls > Auto/Manual Mode.



#### **Datalogging Settings**

The Datalogging Settings menu deals with datalogging.

• In the Main Menu, choose Instrument Controls > **Datalogging Settings**.

SELECT	iING S SREC/ IGGED		IS <b>:</b> SREC
ERASE L	.ŌĠ Conte	ыт	
COMMIT	CONTE	INT	OUTTUT
RESET T CONFIGL	IRE DF	AULT C TALOGE	:ONTENT iING
RANGE	AVG	DIAGS	ALARM

Select SREC/LREC The

The Select SREC/LREC is used to select short record or long record format for other operations in this menu.

• In the Main Menu, choose Instrument Controls > Datalogging Settings > Select SREC/LREC.

SELECT I CURREN SET	LOG T' TLY: TO:	YPE: SREC LREC ?
	4	TOGGLE VALUE
RANGE	AVG	DIAGS ALARM

#### View Logged Data

The View Logged Data screen is used to select the start point to view the logged data by number of records or date and time.

• In the Main Menu, choose Instrument Controls > Datalogging Settings > Select SREC or LREC > **View Logged Data**.

SELE	 	POIN # OF	 
<b>1</b> RAŀ	 ANGE AVG		 CEPT Alarm

**Number of Records** The Number of Records screen is used to select the starting point to display the number of records back to view.

SET # BACK FROM	CURRENT: 0000003 20
♦♦ MO	VE CURSOR
♦₽ CHANGE VALU	E & SAVE

The Record Display screen (read only) displays the selected records.

Time 10:01 10:02 10:03	date 06/20/05 06/20/05 06/20/05	FC0088900
10:04	06/20/05 iUP/DN ◆	i FC0088900 I⇒ PAN L/R AGS ALARM

**Date and Time** The Date and Time screen is used to set a start date and time for which to view logged data. For example, if "20 JUN 2005 10:00" is entered, then the first logged data record that is displayed is the first record after this time. If set to one minute logging, this would be at "20 JUN 2005 10:01".



The Record Display screen (read only) displays the selected records.

Time 10:02 10:02	dat( 06/20, 06/20, 06/20,	/05   /05   /05	FC008 FC008	38900 38900 38900
10:04 ▲♥ P0 RANGE	06/20, SUP/DN AVG		PAN	38900 L/R _ARM

- **Erase Log** The Erase Log is used to erase all saved data for the selected record type (not all short records and long records).
  - In the Main Menu, choose Instrument Controls > Datalogging Settings > **Erase Log**.



- **Select Content** The Select Content submenu displays a list of 32 record fields to use and a submenu list of the analog output signal group choices to choose from. Choices are Concentrations, Other Measurements, and Analog Inputs (if the I/O expansion board is installed). This is a temporary list of items for the selected record type that must be committed via the datalogging menu before the changes will apply. Note that committing any changes to this list will erase all currently logged data, as the format of the stored data is changed.
  - In the Main Menu, choose Instrument Controls > Datalogging Settings > Select Content.



**Choose Item Type** The Choose Item Type submenu displays a list of data that can be loggd for the current field. Choices are Concentrations, Other Measurements, and Analog Inputs (if the I/O expansion board is installed).

• In the Main Menu, choose Instrument Controls > Datalogging Settings > Select Content > **Field 1-32**.

DATA IN >CONCEN OTHER ANALOG	TRATI MEASU	REMENTS	1:
RANGE	AVG	DIAGS	ALARM

**Note** The ANALOG INPUTS item is only displayed if the I/O Expansion Board option is installed. ▲

- **Concentrations** The Concentrations screen allows the user to select the output signal that is tied to the selected field item. The selected item is shown by "<---" after it. Note that at this point, pressing indicates that these are proposed changes as opposed to implemented changes. To change the selected record format and erase record log file data, see "Commit Content" below. Range (NO<sub>x</sub>) is visible only in auto range mode.
  - In the Main Menu, choose Instrument Controls > Datalogging Settings
     > Select Content > Select Field > Concentrations.



HI NOX RANGE (NOX)

**Other Measurements** The Other Measurements screen allows the user to select the output signal that is tied to the selected field item. The selected item is shown by "<--" after it. Items displayed are determined by the options installed. Note that at this point, pressing  $\checkmark$  indicates that these are proposed changes as opposed to implemented changes. To change the selected record format and erase record log file data, see "Commit Content" below.

In the Main Menu, choose Instrument Controls > Datalogging Settings
 > Select Content > Select Field > Other Measurements.



Analog Inputs The Analog Inputs screen allows the user to select the output signal (none or analog inputs 1-8) that is tied to the selected field item. The selected item is shown by "<---" after it. Note that at this point, pressing </li>
 indicates that these are proposed changes as opposed to implemented changes. To change the selected record format and erase record log file data, see "Commit Content" below.

In the Main Menu, choose Instrument Controls > Datalogging Settings
 > Select Content > Select Field > Analog Inputs.

ANALOG >NONE	INPUTS	5:		
ANALOG	IN 1 IN 2			
ANALOG ANALOG	ÎN 3 IN 4			
ANALOG ANALOG	ÎN 5 IN 6			Ŧ
RANGE	AVG	DIAGS	ALARM	

**Commit Content** The Commit Content screen is used to save the selected output signal that is tied to the selected field item. If no changes have been made "NO CHANGES TO RECORD LIST!" will appear. For more information about selecting the analog output signal group choices, see "Select Content" above.

• In the Main Menu, choose Instrument Controls > Datalogging Settings > Commit Content.



**Reset to Default Content** The Reset to Default Content screen is used to reset all of the datalogging field items to default values. For more information about selecting the analog output signal group choices, see "Select Content" above.

In the Main Menu, choose Instrument Controls > Datalogging Settings
 > Reset to Default Content.



**Configure Datalogging** The Configure Datalogging menu deals with datalogging configuration for the currently selected record type.

In the Main Menu, choose Instrument Controls > Datalogging Settings
 > Configure Datalogging.

DATALOG >LOGGIN MEMORY DATA TI	G PER	IOD MIN CATION	35: 4 60 % 50 AVG
RANGE	AVG	DIAGS	ALARM
**Logging Period Min** The Logging Period Min screen is used to select the logging period in minutes for the record format (srec or lrec). List of choices include: off, 1, 5, 15, 30, and 60 minutes (default).

> In the Main Menu, choose Instrument Controls > Datalogging Settings > Configure Datalogging > **Logging Period Min**.

> > τ.

SET PERIOD FOR SREC: CURRENTLY: 60 MIN SET TO: OFF MIN
◆● CHANGE VALUE
RANGE AVG DIAGS ALARM

**Memory Allocation** Percent

The Memory Allocation Percent screen is used to select the percentage of each record type for both short records and long records. Percentages between 0 and 100% are available in increments of 10. Changing this value results in log erasure for both short records and long records.

In the Main Menu, choose Instrument Controls > Datalogging Settings > Configure Datalogging > Memory Allocation %.

SET PERCENT LRECS: CURRENTLY: SET TO:	50% 60% ?
<b>↑</b> CHANGE VALUE	← SAVE
RANGE AVG DIAGS	ALARM

**Data Treatment** The Data Treatment screen is used to select the data type for the selected record type: whether the data should be averaged over the interval, the minimum or maximum measured during the interval, or the current value (last value measured). Data treatment doesn't apply to all data, just to the concentration measurement. All other data points log the current value at the end of the interval.

> In the Main Menu, choose Instrument Controls > Datalogging Settings > Configure Datalogging > **Data Treatment**.

Thermo Fisher Scientific



### Communication Settings

The Communication Settings menu is used with communications control and configuration.

• In the Main Menu, choose Instrument Controls > **Communication Settings**.



- **Baud Rate** The Baud Rate screen is used to set the RS-232/RS-485 interface baud rate. Baud rates of 1200, 2400, 4800, and 9600, 19200, 38400, 57600, and 115200 are available.
  - In the Main Menu, choose Instrument Controls > Communication Settings > **Baud Rate**.



- Instrument ID The Instrument ID screen allows the operator to edit the instrument ID. The ID is used to identify the instrument when using the C-Link or MODBUS protocols to control the instrument or collect data. It may be necessary to edit the ID number if two or more of the same instruments are connected to one computer. Valid Instrument ID numbers are from 0 to 127. The Model 42*i* has a default Instrument ID of 42. For more information about the Instrument ID, see Appendix B "C-Link Protocol Commands" or Appendix C "MODBUS Protocol".
  - In the Main Menu, choose Instrument Controls > Communication Settings > Instrument ID.



**Communication Protocol** The Communication Protocol screen is used to change the instrument communication protocol for serial communications.

• In the Main Menu, choose Instrument Controls > Communication Settings > Communication Protocol.

COMMUNICATION CURRENTLY: SET TO:	N PROTOCOL: CLINK STREAMING ?
<b>‡</b> ‡ ₩	
RANGE AVG	DIAGS ALARM

#### Streaming Data Configuration

The Streaming Data Configuration menu is used to allow for configuration of the 8 streaming data output items, streaming interval, current data format, and current timestamp setting. The Choose Item Signal submenu displays a list of the analog output signal group choices to choose from. Choices are Concentrations, Other Measurements, and Analog Inputs (if the I/O expansion board option is installed).

**Note** Add Labels, Prepend Timestamp, and Add Flags are toggle items that change between yes or no when selected. ▲

• In the Main Menu, choose Instrument Controls > Communication Settings > **Streaming Data Config**.



**Streaming Data Interval** The Streaming Data Interval screen is used to adjust the streaming data interval. The following interval times are available: 1, 2, 5, 10, 20, 30, 60, 90, 120, 180, 240, and 300 seconds.

AVG

RANGE

.

• In the Main Menu, choose Instrument Controls > Communication Settings > Streaming Data Config > **Streaming Data Interval**.

DIAGS

ALARM

STREAMIN CURRENT SET	G DAT LY: TO:	A INTERVAL: 10 SEC 20 SEC ?
	<b>₽</b> ₩	CHANGE VALUE SAVE VALUE
RANGE	AVG	DIAGS ALARM

**Choose Item Signal** The Choose Signal screen displays a submenu of the analog output signal group choices. Group choices are Concentrations, Other Measurements, and Analog Inputs (if the I/O expansion board is installed).

• In the Main Menu, choose Instrument Controls > Communication Settings > Streaming Data Config > **Item 1-8**.

>CONCEN"	1EASU	ONS REMENTS		
RANGE	AVG	DIAGS	ALARM	

**Concentrations** The Concentrations screen allows the user to select the output signal that is tied to the selected streaming data item. The selected item is shown by "<--" after it. In dual or auto range mode, "HI" or "LO" is displayed to indicate high or low concentrations. Range (NO<sub>x</sub>) is visible only in auto range mode

• In the Main Menu, choose Instrument Controls > Communication Settings > Streaming Data Config > Select Item > **Concentrations**.

CONCENT >NONE NO2 NO2 RANGE		45:	<
RANGE	AVG	DIAGS	ALARM

Other Measurements

The Other Measurements screen allows the user to select the output signal that is tied to the selected streaming data item. The selected item is shown by "<---" after it. Items displayed are determined by the options installed.

 In the Main Menu, choose Instrument Controls > Communication Settings > Streaming Data Config > Select Item > Other Measurements.

OTHER M >NONE INT TE CHAMBE COOLER NO2 CN CHAMBE FLOW	MP R TEMI TEMP V TEMI	Þ		ŧ
RANGE	AVG	DIAGS	ALARM	
PMT VO OZONAT	LTS OR FL	ΟW		

- **Analog Inputs** The Analog Inputs screen allows the user to select the analog input signal (none or analog inputs 1-8) that is tied to the selected streaming data item. The selected item is shown by "<--" after it.
  - In the Main Menu, choose Instrument Controls > Communication Settings > Streaming Data Config > Select Item > **Analog Inputs**.

NONE	INPUTS	5:		
ANALOG	IN 1 IN 2 IN 3 IN 4			
ANALOG ANALOG	IN 3 IN 4			
ANALOG ANALOG	IN 5 IN 6			Ŧ
RANGE	AVG	DIAGS	ALARM	

RS-232/RS-485 Selection

The RS-232/RS-485 Selection screen allows the user to choose between the RS-232 or RS-485 specification for serial communication.

**Note** Disconnect the serial cable before changing RS-232 and RS-485 selection to prevent damage to the connected equipment. ▲

• In the Main Menu, choose Instrument Controls > Communication Settings > **RS-232/RS-485 Selection**.



**TCP/IP Settings** The TCP/IP Settings menu is used for defining TCP/IP settings

**Note** The instrument power must be cycled after any of these parameters have been changed for the change to take effect. ▲

• In the Main Menu, choose Instrument Controls > Communication Settings > **TCP/IP Settings**.

>USE [		10.209.4 255.255 10.209	
RANGI	a AVG	DIAGS A	ALARM

- **Use DHCP** The Use DHCP screen is used to specify whether to use DHCP or not. When DHCP is enabled, the network dynamically provides an IP address for the instrument.
  - In the Main Menu, choose Instrument Controls > Communication Settings > TCP/IP Settings > **Use DCHP**.

DHCP: CURRENTLY: SET TO:	OFF ON ?
CYCLE POWER	TOGGLE VALUE TO CHANGE DHCP
RANGE AVG	DIAGS ALARM

- **IP Address** The IP Address screen is used to edit the IP address. The IP address can only be changed when DHCP is OFF. For more information on DHCP, see "Use DHCP" above.
  - In the Main Menu, choose Instrument Controls > Communication Settings > TCP/IP Settings > **IP Address**.



- **Netmask** The Netmask screen is used to edit the netmask. The netmask is used to determine the subnet for which the instrument can directly communicate to other devices on. The netmask can only be changed when DHCP is OFF. For more information on DHCP, see "Use DHCP" above.
  - In the Main Menu, choose Instrument Controls > Communication Settings > TCP/IP Settings > Netmask.

NETMASK: CURRENT SET TO	: 255 ♦♦	•255•254•0 •255•254•0 MOVE CURSOR CHANGE VALUE SAVE VALUE
RANGE	aVG	DIAGS ALARM

- **Default Gateway** The Default Gateway screen is used to edit the gateway address. The default gateway can only be changed when DHCP is OFF. For more information on DHCP, see "Use DHCP" above. Any traffic to addresses that are not on the local subnet will be routed through this address.
  - In the Main Menu, choose Instrument Controls > Communication Settings > TCP/IP Settings > Gateway.



- **Host Name** The host name screen is used to edit the host name. When DHCP is enabled, this name is reported to the DHCP server.
  - In the Main Menu, choose Instrument Controls > Communication Settings > TCP/IP Settings > **Host Name**.

HOST NAI	ME:		
CURREI		SERIES	
ORI		SERIES HIJKLMN	BKSP
	<u></u> JŔSTŬ		PAGE
01:	23456	789 ./-	SAVE
RANGE	AVG	DIAGS A	LARM

#### I/O Configuration

The I/O Configuration menu deals with configuration of the analyzer's I/O system. The analog input configuration is displayed only if the I/O expansion board option is installed.

• In the Main Menu, choose Instrument Controls > I/O Configuration.

**Note** The digital outputs may take up to one second after the assigned state occurs to show up on the outputs. ▲

I/O CONF >OUTPUT DIGITAL ANALOG ANALOG	RELA INP OUTP	ATION: Y SETT UT SET UT CONM T CONF:	INGS TINGS TIG IG
RANGE	AVG	DIAGS	ALARM

**Output Relay Settings** The Output Relay Settings menu displays a list of the 10 digital output relays available, and allows the user to select the logic state or instrument parameter for the relay selected.

• In the Main Menu, choose Instrument Controls > I/O Configuration > **Output Relay Settings**.

0UTF 212154 567	PUT I NOI NOI NOI NOI NOI NOI NOI		SETTIN GEN CONC	4GS: ALARM NONE UNITS ALARM NONE NONE 0 MODE ♥
	AGE	AVG	DIAGS	ALARM

- **Logic State** The Logic State screen is used to change the I/O relay to either normally open or normally closed.
  - Press 🖝 to toggle and set the logic state open or closed.

OUTPUT >LOGIC INSTRU	STATE		OPEN
RANGE	AVG	DIAGS	ALARM

**Instrument State** The Instrument State submenu allows the user to select the instrument state that is tied to the selected relay output. A submenu lists signal types of either alarm or non-alarm to choose from.

• In the Main Menu, choose Instrument Controls > I/O Configuration > Output Relay Settings > Select Relay > **Instrument State**.



- Alarms The Alarms status screen allows the user to select the alarm status for the selected relay output. The selected item is shown by "<---" after it. The I/O board status alarm is only present if the I/O expansion board is installed. The zero and span check/calibration alarms are only present if the zero/span valve option is installed and the instrument is operating in manual mode.
  - In the Main Menu, choose Instrument Controls > I/O Configuration > Output Relay Settings > Select Relay > Instrument State > Alarms.



**Non-Alarm** The Non-Alarm status screen allows the user to select the non-alarm status for the selected relay output. The selected item is shown by "<--" after it.

 In the Main Menu, choose Instrument Controls > I/O Configuration > Output Relay Settings > Select Relay > Instrument State > Non-Alarm.



**Digital Input Settings** The Digital Input Settings menu displays a list of the 16 digital inputs available, and allows the user to select the logic state and instrument parameter for the relay selected.

**Note** The digital inputs must be asserted for at least one second for the action to be activated.  $\blacktriangle$ 

• In the Main Menu, choose Instrument Controls > I/O Configuration > **Digital Input Settings**.

DIGI >1 20 34 56 7	TAL I NOP NOPP NOPP NOPP NOPP NOPP	NPUT SET CAL AO	TO LO	) MODE ( MODE ROUND ) SPAN	₽
RANI	GE P	AVG [	)IAGS	ALARM	

**Logic State** The Logic State screen is used to change the I/O relay to either normally open or normally closed. The default state is open, which indicates that a relay connected between the digital input pin and ground is normally open

and closes to trigger the digital input action. If nothing is connected to the digital input pin, the state should be left at open to prevent the action from being triggered.

• Press 🗭 to toggle and set the logic state open or closed.



## **Instrument Action** The Instrument Action screen allows the user to choose the instrument action that is tied to the selected digital input.

• In the Main Menu, choose Instrument Controls > I/O Configuration > Digital Input Settings > Select Relay > Instrument Action.



Analog Output Configuration

The Analog Output Configuration menu displays a list of the analog output channels available for configuration. Channel choices include all voltage channels, all current channels, voltage channels 1-6, and current channels 1-6 (if the I/O expansion board option is installed). Configuration choices include selecting range, setting minimum/maximum values, and choosing signal to output.

• In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Output Config.



RANGE

AVG

#### Select Output Range

The Select Output Range screen is used to select the hardware range for the selected analog output channel. Possible ranges for the voltage outputs are: 0-100 mV, 0-1, 0-5, 0-10 V.

ALARM

DIAGS

• In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Output Config > Select Channel > **Select Range**.



#### Minimum and Maximum Value

The Minimum Value screen is used to edit the zero (0) to full-scale (100) value in percentages for the selected analog output channel. See Table 3–7 for a list of choices. In dual or auto range mode, "HI" or "LO" is displayed to indicate high or low concentrations. Range Status is visible only in auto range mode. The minimum and maximum output value screens function the same way. The example below shows the set minimum value screen.

 In the Main Menu, choose Instrument Controls > IO Configuration > Analog Output Config > Select Channel > Set Minimum or Maximum Value.



 Table 3–7.
 Analog Output Zero to Full-Scale Table

_			
Output	Zero % Value	Full-Scale 100% Value	
NO	Zero (0)	Range Setting	
NO <sub>2</sub>	Zero (0)	Range Setting	
NO <sub>x</sub>	Zero (0)	Range Setting	
LO NO	Zero (0)	Range Setting	
LO NO <sub>2</sub>	Zero (0)	Range Setting	
LO NO <sub>x</sub>	Zero (0)	Range Setting	
HI NO	Zero (0)	Range Setting	
HI NO <sub>2</sub>	Zero (0)	Range Setting	
HI NO <sub>x</sub>	Zero (0)	Range Setting	
Range (NO <sub>x</sub> )	Recommend not to change the setting for this output		
Internal Temp	User-set alarm min value	User-set alarm max value	
Chamber Temp	User-set alarm min value	User-set alarm max value	
Cooler Temp	User-set alarm min value	User-set alarm max value	
NO <sub>2</sub> Converter Temp	User-set alarm min value	User-set alarm max value	
Perm Oven Gas Temp	Perm Oven Gas alarm min value	Perm Oven Gas alarm max value	
Perm Oven Heater Temp	Perm Oven Heater alarm min value	Perm Oven Heater alarm max value	
Chamber Pressure	User-set alarm min value	User-set alarm max value	
Flow	User-set alarm min value	User-set alarm max value	
PMT Volts	700 volts	1100 volts	
Ozonator Flow	User-set alarm min value	User-set alarm max value	
Everything Else	0 Units	10 Units	

#### Choose Signal to Output

The Choose Signal to Output screen displays a submenu list of the analog output signal group choices. Group choices are Concentrations, Other Measurements, and Analog Inputs (if the I/O expansion board option is installed). This allows the user to select the output signal to the selected output channel. In dual or auto range mode, "HI" or "LO" is displayed to indicate high or low concentrations. Range (NO<sub>x</sub>) is visible only in auto range mode. The Concentrations screen is shown below. See Table 3–8 below for a list of items for each signal group choice.

• In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Output Config > Select Channel > **Choose Signal to Output**.

CHOOSE CONCEN OTHER ANALOG	TRATI MEASU	ONS REMENTS	
RANGE	AVG	DIAGS	ALARM
CHOOSE SELECTI CURREN SET	ED OU	TPUT: NO	CONC V1 ?
<b>↑</b> • CHA RANGE	NGE V <u>AVG</u>	ALUE DIAGS	← SAVE ALARM

Concentrations	Other Measurements	Analog Inputs
None	None	None
NO (single/auto range mode)	Internal Temp	Analog Input 1
NO <sub>2</sub> (single/auto range mode)	Chamber Temp	Analog Input 2
NO <sub>x</sub> (single/auto range mode)	Cooler Temp	Analog Input 3
LO NO (dual mode)	NO <sub>2</sub> Converter Temp	Analog Input 4
LO NO <sub>2</sub> dual mode)	Perm Oven Gas	Analog Input 5
LO NO <sub>x</sub> (dual mode)	Perm Oven Heater	Analog Input 6
HI NO (dual mode)	Chamber Pressure	Analog Input 7
HI NO <sub>2</sub> (dual mode)	Flow	Analog Input 8
HI NO <sub>x</sub> dual mode)	PMT Volts	
Range (NO <sub>x</sub> ) (auto range mode)	Ozonator Flow	

#### Analog Input Configuration

The Analog Input Configuration menu displays a list of the 8 analog input channels available for configuration. This screen is only displayed if the I/O expansion board option is installed. Configuration includes entering descriptor, units, decimal places, choice of 1-10 points in the table, and corresponding number of points selected.

 In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config.

ANALOG INPUT	CONFIG:
>CHANNEL 1	IN1
CHANNEL 2	IN2
CHANNEL 3	IN3
CHANNEL 4	IN4
CHANNEL 5	IN5
CHANNEL 6	IN6
CHANNEL 7	IN7+
RANGE AVG	DIAGS ALARM

>DESCRI UNITS DECIMA TABLE POINT		ES	VFIG: IN1 2 2
RANGE	AVG	DIAGS	ALARM

- **Descriptor** The Descriptor screen allows the user to enter the descriptor for the selected analog input channel. The descriptor is used in datalogging and streaming data to report what data is being sent out. The descriptor may be from 1 to 3 characters in length, and defaults to IN1 to IN8 (user input channel number).
  - In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config > Select Channel > **Descriptor**.



- **Units** The Units screen allows the user to enter the units for the selected analog input channel. The units are displayed on the diagnostic screen and in datalogging and streaming data. The units may be from 1 to 3 characters in length, and defaults to V (volts).
  - In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config > Select Channel > **Units**.

ANALOG INPUT UNITS: CURRENTLY: <u>V</u>
ABCDEFGHIJKLMN BKSP
OPQRSTUVWXYZ PAGE 0123456789 ./- SAVE
RANGE AVG DIAGS ALARM

**Decimal Places** The Decimal Places screen allows the user to select how many digits are displayed to the right of the decimal, from 0 to 6, with a default of 2.

• In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config > Select Channel > **Decimal Places**.



#### Number of Table Points

The Number of Table Points screen allows the user to select how many points are used in the conversion table. The points range from 2 to 10, with a default of 2.

• In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config > Select Channel > **Table Points**.

NUMBER OF TAI CURRENTLY: SET TO:	BLE POINTS: 2 10 ?
	CHANGE VALUE SAVE VALUE
RANGE AVG	DIAGS ALARM

**Table Point**The Table Point submenu allows the user to set up an individual table<br/>point.

• In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config > Select Channel > **Point 1-10**.

TABLE POINT	01 CONFIG:
>YOLTS	0.00
USER VALUE	0.00
RANGE AVG	DIAGS ALARM

- **Volts** The Volts screen allows the user to set the input voltage for the selected table point in the conversion table, from 0.00 to 10.50. The default table is a two-point table with point 1: 0.00 V = 000.0 U and point 2: 10.00 V = 10.0 U.
  - In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config > Select Channel > Select Point > **Volts**.

TABLE POINT 01 VOLTS: CURRENTLY: 0.00 SET TO: 00.02
←→ MOVE CURSOR ↑↓ CHANGE VALUE ← SAVE
RANGE AVG DIAGS ALARM

- **User Value** The User Value screen allows the user to set the output value for the corresponding input voltage for the selected table point in the conversion table, from -99999999 to 999999999. The default table is a two-point table with point 1: 0.00 V = 000.0 U and point 2: 10.00 V = 10.0 U.
  - In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config > Select Table Point > **User Value**.

	VAL: 0.00 0.0 <b>1</b>
	• SAVE
RANGE AVG DIAGS A	LARM

#### Temperature Compensation

Temperature compensation provides compensation for any changes to the instrument's output signal due to internal instrument temperature variations. The effects of internal instrument temperature changes on the analyzer's subsystems and output have been empirically determined. This empirical data is used to compensate for any changes in temperature. This compensation can be used for special applications, or when operating the instrument outside the recommended temperature range, even though the Model 42*i* does not require temperature compensation for EPA equivalency.

When temperature compensation is on, the display shows the current internal instrument temperature (measured by a thermistor on the Interface board). When temperature compensation is off, the display shows the factory standard temperature of 30 °C.

• In the Main Menu, choose Instrument Controls > **Temperature Compensation**.



**Pressure Compensation** Pressure compensation provides compensation for any changes to the instrument's output signal due to reaction chamber pressure variations. The effects of reaction chamber pressure changes on the analyzer's subsystems and output have been empirically determined. This empirical data is used to compensate for any change in reaction chamber pressure. This compensation can be used even though the Model 42*i* does not require pressure compensation for EPA equivalency.

> When pressure compensation is on, the first line of the display represents the current pressure in the reaction chamber. When pressure compensation is off, the first line of the display shows the factory standard pressure of 150 mmHg.

• In the Main Menu, choose Instrument Controls > **Pressure Compensation**.



#### Screen Contrast

t The Screen Contrast screen is used to change the contrast of the display. Intensities between 0 and 100% in increments of 10 are available. Changing the screen contrast may be necessary if the instrument is operated at extreme temperatures.

• In the Main Menu, choose Instrument Controls > Screen Contrast.



**Service Mode** The Service Mode screen is used to turn the service mode on or off. The service mode locks out any remote actions and includes parameters and functions that are useful when making adjustments or diagnosing the Model 42*i*. For more information about the service mode, see "Service Menu" later in this chapter.

**Note** The service mode should be turned off when finished, as it prevents remote operation. ▲

• In the Main Menu, choose Instrument Controls > **Service Mode**.



**Date/Time** The Date/Time screen allows the user to view and change the system date and time (24-hour format). The internal clock is powered by its own battery when instrument power is off.

• In the Main Menu, choose Instrument Controls > **Date/Time**.



**Diagnostics Menu** 

The Diagnostics menu provides access to diagnostic information and functions. This menu is useful when troubleshooting the instrument. The analog input readings and analog input voltages are only displayed if the I/O expansion board option is installed.

• In the Main Menu, choose **Diagnostics**.



DIGITAL INPUTS RELAY STATES TEST ANALOG OUTPUTS INSTRUMENT CONFIGURATION CONTACT INFORMATION

#### **Program Version**

The Program Version screen (read only) shows the version number of the program installed. Prior to contacting the factory with any questions regarding the instrument, please note the product model name and program version number.

• In the Main Menu, choose Diagnostics > **Program Version**.

F	PROD /ERS	VERSI UCT: ION: IRRE:	MOD 01.00.	EL 42i 01.074 .06.19
RANG	ΞE	AVG	DIAGS	ALARM

**Voltages** The Voltages menu displays the current diagnostic voltage readings. This screen enables the power supply to be quickly read for low or fluctuating voltages without having to use a voltage meter. The I/O board is only displayed if the I/O expansion board option is installed.

• In the Main Menu, choose Diagnostics > **Voltages**.

YOL TAGE >MOTHER INTERF I/O BO	BOARD ACE B	OARD	
RANGE	AVG	DIAGS	ALARM

**Motherboard Voltages** The Motherboard screen (read only) is used to display the current voltage readings on the motherboard.

• In the Main Menu, choose Diagnostics > Voltages > Motherboard Voltages.

MOTHERE 3.3 5.0 24.0 -3.3		Yoltage Y Y Y Y	5:3 V 5.0 V 24.1 V -3.3 V
RANGE	AVG	DIAGS	ALARM

#### Interface Board Voltages

The Interface Board screen (read only) is used to display the current voltage readings on the interface board.

• In the Main Menu, choose Diagnostics > Voltages > Interface Board Voltages.

INTERFF 35.00 155.00 P1245. -15.00	ACE BOARD SUPPLY SUPPLY SUPPLY SUPPLY SUPPLY SUPPLY SUPPLY SUPPLY	VOLTAGES: 785.5 V 5.0 V 15.0 V 15.0 V 24.0 V -15.0 V
RANGE	AVG DIA	AGS ALARM

**I/O Board Voltages** The I/O Board screen (read only) is used to display the current voltage readings on the I/O expansion board. This menu is only displayed if the I/O expansion board option is installed.

• In the Main Menu, choose Diagnostics > Voltages > I/O Board Voltages.

I/0_BOP 3.0 15.0 24.0 -3.3	SUPPL SUPPL SUPPL SUPPL SUPPL	LTAGES: Y Y Y Y Y Y	3999 5999 5999 5999 5999 29 29
RANGE	AVG	DIAGS	ALARM

#### **Temperatures**

The Temperatures screen (read only) displays the internal temperature, reaction chamber temperature, cooler temperature, converter temperatures, and perm oven temperatures (if the permeation oven option is installed).

The internal temperature is the air temperature measured by a sensor located on the interface board.

• In the Main Menu, choose Diagnostics > **Temperatures**.

TEMPERATURES: INTERNAL 28.6 °C CHAMBER 49.0 °C COOLER -10.0 °C NO2 CONVERTER 320.7 °C NO2 CONV SET 325.0 °C NO2 CONV SET 325.0 °C PERM OVEN GAS 45.0 °C	
RANGE AVG DIAGS ALARM	

- **Pressure** The Pressure screen (read only) displays the reaction chamber pressure. The pressure is measured by a pressure transducer at the reaction chamber.
  - In the Main Menu, choose Diagnostics > **Pressure**.

PRESSURE:		232.	5	mmHg
RANGE	AVG	DIAGS	AL	_ARM

- **Flow** The Flow screen (read only) displays the sample and ozonator flow rate. The flows are measured by internal flow sensors.
  - In the Main Menu, choose Diagnostics > **Flow**.

.

FLOW:		0.700	LPM
OZONATO	R FLO	W	OK
RANGE	AVG	DIAGS ALI	ARM

#### **Analog Input Readings**

The Analog Input Readings screen (read only) displays the 8 current userscaled analog readings (if the I/O expansion board option is installed).

• In the Main Menu, choose Diagnostics > Analog Input Readings.

ANALOG >CO SO2 FL1 WND FL2 IO7	INPUT	READINGS: 10.2 PPM 18.2 PPB 250 PPM 20.42 LPM 9.86 V 1.865 LPM 0.0 V↓
RANGE	AVG	DIAGS ALARM

#### **Analog Input Voltages**

The Analog Input Voltages screen (read only) displays the 8 raw analog voltage readings (if the I/O expansion board option is installed).

• In the Main Menu, choose Diagnostics > Analog Input Voltages.

ANALOG >ANALOG ANALOG ANALOG ANALOG ANALOG ANALOG ANALOG	INPUT IN IN IN IN IN IN IN IN IN IN IN IN IN	VOLTA	3ES:
RANGE	AVG	DIAGS	ALARM

**Digital Inputs** 

The Digital Inputs screen (read only) displays the state of the 16 digital inputs.

• In the Main Menu, choose Diagnostics > Digital Inputs.

DIGITAL NPUT 12 INPUT 2 INPUT 3 INPUT 4 INPUT 4 INPUT 4 INPUT 7		`S⊧	لمحلة لمحلة لمحلة لمحلة لمحلة	-
RANGE	AVG	DIAGS	ALARM	

# **Relay States** The Relay States screen displays the state of the 10 digital outputs and allows toggling of the state to either on (1) or off (0). The relays are restored to their original states upon exiting this screen.

- In the Main Menu, choose Diagnostics > **Relay States**.
- Press 🗲 to toggle and set the relay state open or closed.

RELAY ST OUTPUT OUTPUT OUTPUT OUTPUT OUTPUT OUTPUT OUTPUT	ATE: 1204507		00000
RANGE	AVG	DIAGS	ALARM

**Test Analog Outputs**The Test Analog Outputs menu contains a number of digital to analog<br/>converter (DAC) calibration items. Channel choices include all analog<br/>outputs, 6 voltage channels, and 6 current channels (if the I/O expansion<br/>board option is installed).

• In the Main Menu, choose Diagnostics > Test Analog Outputs.

TEST ANA  >ALL	LOG (	OUTPUTS	
VOLTAGE VOLTAGE			
VÕLTAGE VOLTAGE	CHAP	NEL 3	
VOLTAGE VOLTAGE	CHAN CHAN	INEL 5 INEL 6	
RANGE	AVG	DIAGS	ALARM

**Set Analog Outputs** The Set Analog Outputs screen contains three choices: Set to full-scale, set to zero, or reset to normal. Full-scale sets the analog outputs to the full-scale voltage, zero sets the analog outputs to 0 volts, and normal operation. The example below shows the selected output state "ALL" is set to normal.

• In the Main Menu, choose Diagnostics > Test Analog Outputs > ALL, Voltage Channel 1-6, or Current Channel 1-6.



#### **Instrument Configuration**

The Instrument Configuration screen displays information on the hardware configuration of the instrument.

Note If the analyzer is in service mode, pressing ← on the item will toggle it yes or no (with the exception of purchased options such as dilution and auto calibration). ▲

• In the Main Menu, choose Diagnostics > **Instrument Configuration**.



**Contact Information** 

The Contact Information screen displays the customer service information.

ı

• In the Main Menu, choose Diagnostics > **Contact Information**.

CONTACT	INFOR	MATION	-
CALL CI	ENTER:	508-5	520-0430
WEB:	WI	JW∙THE	RMO.COM
RANGE	AVG [	DIAGS	ALARM

#### **Alarms Menu**

The alarms menu displays a list of items that are monitored by the analyzer. If the item being monitored goes outside the lower or upper limit, the status of that item will go from "OK" to either "LOW" or "HIGH", respectively. If the alarm is not a level alarm, the status will go from "OK" to "FAIL". The number of alarms detected is displayed to indicate how many alarms have occurred. If no alarms are detected, the number zero is displayed.

To see the actual reading of an item and its minimum and maximum limits, move the cursor to the item and press [

Items displayed are determined by the options installed. The zero/span check and auto calibration screens are visible only if the zero/span check or auto calibration options are enabled. The perm oven temperature screen is visible only if the perm oven option is installed. The motherboard status, interface board status, and I/O Expansion board status (if installed) indicate that the power supplies are working and connections are successful. There are no setting screens for these alarms.

In the Main Menu, choose Alarms.



**Internal Temperature** The Internal Temperature screen displays the current internal temperature and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 8 to 47 °C. If the internal temperature reading goes beyond

either the minimum or maximum alarm limit, an alarm is activated. The word "ALARM" appears in the Run screen and in the Main Menu.

• In the Main Menu, choose Alarms > **Internal Temp**.

INTERNAL ACTUAL >MIN MAX	2	RE:00 000 000 000
RANGE A	AVG DIAGS	ALARM

#### Min and Max Internal Temperature Limits

The Minimum Internal Temperature alarm limit screen is used to change the minimum internal temperature alarm limit. The minimum and maximum internal temperature screens function the same way.

• In the Main Menu, choose Alarms > Internal Temp > Min or Max.



#### **Chamber Temperature**

The Chamber Temperature screen displays the current chamber temperature and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 47 to 51 °C. If the chamber temperature reading goes beyond either the minimum or maximum limit, an alarm is activated. The word "ALARM" appears in the Run screen and in the Main Menu.

• In the Main Menu, choose Alarms > **Chamber Temp**.

CHAMBER ACTUAL >MIN MAX	TEMP	ERATURE: 49.0 °C 47.0 °C 51.0 °C
RANGE	AVG	DIAGS ALARM

#### Min and Max Chamber Temperature Limits

The Minimum Chamber Temperature alarm limit screen is used to change the minimum chamber temperature alarm limit. The minimum and maximum chamber temperature screens function the same way.

• In the Main Menu, choose Alarms > Chamber Temp > **Min** or **Max**.



#### **Cooler Temperature**

The Cooler Temperature screen displays the current cooler temperature and sets the minimum and maximum alarm limits. Acceptable alarm limits range from -40 to 10 °C. If the cooler temperature reading goes beyond either the minimum or maximum limit, an alarm is activated. The word "ALARM" appears in the Run screen and in the Main Menu.

• In the Main Menu, choose Alarms > **Cooler Temp**.

COOLER ACTUAL >MIN MAX	TEMPEF	-20	9.8 °C	
RANGE	AVG	DIAGS	ALARM	

# Min and Max CoolerThe Minimum CoolerTemperature Limitsthe minimum cooler

The Minimum Cooler Temperature alarm limit screen is used to change the minimum cooler temperature alarm limit. The minimum and maximum cooler temperature screens function the same way.

• In the Main Menu, choose Alarms > Cooler Temp > Min or Max.

COOLER TEMPERATURE ACTUAL MIN -2 SET MIN TO: -1 RANGE AVG DIAGS ALARM

**Converter Temperature** 

The Converter Temperature screen displays the current converter temperature and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 300 to 700 °C. The actual alarm setpoints should be set for the installed converter. If the converter temperature reading goes beyond either the minimum or maximum limit, an alarm is activated. The word "ALARM" appears in the Run screen and in the Main Menu.

• In the Main Menu, choose Alarms > **Converter Temp**.

CONVERTE ACTUAL >MIN MAX	ER TE	MPERATURE: 320.7 °C 300.0 °C 350.0 °C
RANGE	AVG	DIAGS ALARM

Min and Max Converter Temperature Limits The Minimum Converter Temperature alarm limit screen is used to change the minimum converter temperature alarm limit. The minimum and maximum converter temperature screens function the same way.

• In the Main Menu, choose Alarms > Converter Temp > Min or Max.

CONVERTER TEL	1PERATURE:
ACTUAL MIN	300.0 °C
SET MIN TO:	310.0 °C ?
<b>₽</b>	INC/DEC
₩	SAVE VALUE
RANGE AVG	DIAGS ALARM

## Permeation Oven Gas Temperature

The Permeation Oven Gas Temperature screen displays the current permeation oven gas temperature and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 25.00 to 50.00 °C. If the temperature reading goes beyond either the minimum or maximum limit, an alarm is activated. The word "ALARM" appears in the Run screen and in the Main Menu.

• In the Main Menu, choose Alarms > **Perm Gas Temp**.

POVEN GF ACTUAL >MIN MAX	)S TE	MPERATURE: 45.00 °C 44.90 °C 45.10 °C
RANGE	AVG	DIAGS ALARM

#### Min and Max Permeation Oven Temperature Limits

The Minimum Permeation Oven Gas Temperature alarm limit screen is used to change the minimum temperature alarm limit. The minimum and maximum permeation gas temperature screens function the same way.

• In the Main Menu, choose Alarms > Perm Gas Temp > **Min** or **Max**.

POVEN GAS TEMPERA ACTUAL MIN 3 SET MIN TO: 3 ITURE: 00.0 10.0 INC/DEC SAVE VALUE DIAGS ALARM RANGE AYG

- **Pressure** The Pressure screen displays the current reaction chamber pressure reading and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 150 to 300 mmHg. If the pressure reading goes beyond either the minimum or maximum limit, an alarm is activated. The word "ALARM" appears in the Run screen and in the Main Menu.
  - In the Main Menu, choose Alarms > **Pressure**.



Min and Max Pressure Limits

ure The Minimum Pressure alarm limit screen is used to change the minimum temperature alarm limit. The minimum and maximum pressure screens function the same way.

• In the Main Menu, choose Alarms > Pressure > **Min** or **Max**.

PRESSURE: ACTUAL MIN: SET MIN TO:	200.0 mmHg 210.0 mmHg?
	INC/DEC SAVE VALUE
RANGE AVG	DIAGS ALARM

- **Flow** The Flow screen displays the current sample flow reading and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 0 to 1 LPM. If the sample flow reading goes beyond either the minimum or maximum limit, an alarm is activated. The word "ALARM" appears in the Run screen and in the Main Menu.
  - In the Main Menu, choose Alarms > **Flow**.

FLOW: ACTUAL >MIN MAX		0.531 LPM 0.750 LPM 1.000 LPM	
RANGE	AVG	DIAGS ALARM	

#### Min and Max Flow Limits

The Minimum Flow alarm limit screen is used to change the minimum sample flow alarm limit. The minimum and maximum flow screens function the same way.

• In the Main Menu, choose Alarms > Flow > Min or Max.



**Ozonator Flow** The Ozonator Flow screen (read only) is used to display the ozonator flow readings. If the ozonator flow reading is 0.050 LPM (50 cc) or below, an alarm is activated, and an alarm condition screen appears as "LOW". If the ozonator flow is above 0.050, the no alarm condition screen is displayed, indicating that the flow is acceptable. Inadequate ozonator flow will cause the ozonator to overheat, resulting in permanent damage to the ozonator.

• In the Main Menu, choose Alarms > **Ozonator Flow**.

OZONATOR ACTUAL	FLOW		.050	LPM
RANGE F	Чγе	DIAG	is ALP	IRM
## Zero and Span Check

The Zero Span Check screen allows the user to view the status of the most recent zero check and set the maximum zero check offset. The zero and span check screens are visible only if the zero/span check option is enabled and function the same way.

• In the Main Menu, choose Alarms > Zero or Span Check.



**Max Zero and Span Offset** 

The Max Zero Check Offset screen is used to change the maximum zero check offset. The maximum zero and span offset screens function the same way.

• In the Main Menu, choose Alarms > Zero or Span Check > Max Offset.

## Zero and Span Auto Calibration

The Zero Auto Calibration screen (read only) allows the user to view the status of the most recent auto background calibration. The zero and span auto calibration screens are visible only if the auto calibration option is enabled and function the same way.

• In the Main Menu, choose Alarms > Zero or Span Autocal.

	AUTO C ALARM SPONSE			0K 5.0
RANGE	E AVE	i DIA	35 ALAF	2M

## NO, NO<sub>2</sub>, and NO<sub>x</sub> Concentration

The NO Concentration screen displays the current NO concentration and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 0 to 100,000 ppb (0 to 100 ppm) and 0 to 150,000  $\mu$ g/m<sup>3</sup> (0 to 150 mg/m<sup>3</sup>). The minimum alarm may be programmed as a floor trigger (alarm is triggered when the concentration falls below the minimum value) or a ceiling trigger (alarm is triggered when the concentration goes above the minimum value). If the NO concentration goes beyond either the minimum or maximum limit, an alarm is activated. The word "ALARM" appears in the Run screen and in the Main Menu. The NO<sub>2</sub> and NO<sub>x</sub> concentration screens function the same way.

 In the Main Menu, choose Alarms > NO, NO2, or NOx Concentration.



Min and Max NO, NO2, and NOx<br/>Concentration LimitsThe Minimum NO Concentration alarm limit screen is used to change the<br/>minimum NO concentration alarm limits. The minimum and maximum<br/>NO, NO2, and NOx concentration alarm limit screens function the same<br/>way.

 In the Main Menu, choose Alarms > Select Concentration > Min or Max.



Min TriggerThe Minimum Trigger screen allows the user to view and set the NO,<br/>NO2, and NOx concentration alarm trigger type to either floor or ceiling.<br/>The minimum alarm may be programmed as a floor trigger (alarm is<br/>triggered when the concentration falls below the minimum value) or a<br/>ceiling trigger (alarm is triggered when the concentration goes above the<br/>minimum value).

• In the Main Menu, choose Alarms > Select Concentration > Min Trigger.

MIN TRIG(CEILING/FLOOR): ACTUAL TRIGGER: CEILING SET TRIGGER TO: FLOOR ?
← TOGGLE AND SAVE VALUE
RANGE AVG DIAGS ALARM

Service Menu

The Service menu appears only when the instrument is in the service mode. To put the instrument into the service mode:

• In the Main Menu, choose Instrument Controls > **Service Mode**.

Advanced diagnostic functions are included in the service mode. Meaningful data should not be collected when the instrument is in the service mode.

• In the Main Menu, choose **Service**.



#### **PMT Voltage Adjustment**

The PMT Voltage Adjustment screen is used to manually adjust the PMT supply voltage. The PMT voltage adjustment screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in this chapter.

**Note** This adjustment should only be performed by an instrument service technician. ▲

• In the Main Menu, choose Service > **PMT Voltage Adjustment**.

#### **Range Mode Select**

The Range Mode Select screen is used to switch between the various range modes: single, dual, and auto range. The range mode select screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in this chapter.

• In the Main Menu, choose Service > **Range Mode Select**.

**Operation** Service Menu



**Converter Set Temperature** 

The Converter Set Temperature screen is used to change the converter set temperature. The converter set temperature reading is updated every second. The converter set temperature screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

**Note** This adjustment should only be performed by an instrument service technician.  $\blacktriangle$ 

• In the Main Menu, choose Service > **Converter Set Temperature**.



**Pressure Calibration** The Pressure Calibration submenu is used to calibrate the pressure sensor to zero, span, or restore factory default values. The pressure calibration is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in this chapter.

The pressure sensor's zero counts and span slope are displayed on the menu.

**Note** This adjustment should only be performed by an instrument service technician. ▲

• In the Main Menu, choose Service > **Pressure Calibration**.

PRESSURI >ZERO SPAN SET DEI				72 1416
RANGE	AVG	DIAG	s AL	ARM

#### Calibrate Pressure Zero

The Calibrate Pressure Zero screen calibrates the pressure sensor at zero pressure.

**Note** A vacuum pump must be connected to the pressure sensor before performing the zero calibration. ▲

• In the Main Menu, choose Service > Pressure Calibration > Zero.

ZEKU: ;2.5 mmHg 0.0 mmHg VACUUM PUMP AND E ZERO PRESSURE RANGE AVG DIAGS ALARM

**Calibrate Pressure Span** The Calibrate Pressure Span screen allows the user to view and set the pressure sensor calibration span point.

**Note** The plumbing going to the pressure sensor should be disconnected so the sensor is reading ambient pressure before performing the span calibration. The operator should use an independent barometer to measure the ambient pressure and enter the value on this screen before calibrating. ▲

• In the Main Menu, choose Service > Pressure Calibration > **Span**.



#### Restore Default Pressure Calibration

The Restore Default Pressure Calibration screen allows the user to reset the pressure calibration configuration values to factory defaults.

• In the Main Menu, choose Service > Pressure Calibration > **Set Defaults**.



**Flow Calibration** The Flow Calibration submenu is used to calibrate the flow sensor to zero, span, or restore factory default values. The flow calibration is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

**Note** This adjustment should only be performed by an instrument service technician.  $\blacktriangle$ 

• In the Main Menu, choose Service > **Flow Calibration**.

⇒ZERO SPAN	ENSOR (		200 1.0000
RANGE	e Avg	DIAGS	ALARM

**Calibrate Flow Zero** The Calibrate Flow Zero screen calibrates the flow sensor at zero flow.

**Note** The pump must be disconnected before performing the zero calibration.  $\blacktriangle$ 

• In the Main Menu, choose Service > Flow Calibration > Zero.

CALIBRATE FLOW ZERO: CURRENTLY: 0.004 LPM SET TO: 0.000 LPM ?
DISCONNECT PUMP AND ← SAVE CURRENT FLOW
RANGE AVG DIAGS ALARM

**Calibrate Flow Span** The Calibrate Flow Span screen allows the user to view and set the flow sensor calibration span point.

**Note** An independent flow sensor is required to read the flow, then the operator enters the flow value on this screen to perform the calibration. ▲

• In the Main Menu, choose Service > Flow Calibration > **Span**.

CALIBRATE FLOW SPAN: CURRENTLY: 1.000 LPM SET TO: 0.800 LPM ?
♦ MOVE CURSOR ♦ CHANGE VALUE
RANGE AVG DIAGS ALARM

## Restore Default Flow<br/>CalibrationThe Restore Default Flow Calibration screen allows the user to reset the<br/>flow calibration configuration values to factory defaults.

• In the Main Menu, choose Service > Flow Calibration > Set Defaults.



**Input Board Calibration** The Input Board Calibration menu is used to initiate a calibration of the input A/D stages. The input board calibration menu is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

**Note** This adjustment should only be performed by an instrument service technician. ▲

• In the Main Menu, choose Service > Input Board Calibration.

INPUT B			SULION:
AUTOMA INPUT	TIC IH FRFOUR		CAL XISP
1			
RANGE	AVG	DIAGS	5 ALARM

Manual Input CalibrationThe Manual Input Calibration screen is used to do a manual calibration of<br/>the input board A/D stages per the following procedure:

**Note** The measurement system and the PMT are both shut off inside this screen. ▲

- 1. In the Main Menu, choose Service > Input Board Calibration > Manual Input Calibration.
- 2. Press 🕶 to leave warning screen.
- 3. Make a note of the frequency at gain of 1.
- 4. Use  $(\bullet)$  and  $(\bullet)$  to change the gain between 10 and 100.
- 5. Use and to increment or decrement the D/A counts so the frequency at gain 100 is equal to the frequency at gain 1.
- 6. Press 🗲 to save new input board calibration.



Automatic Input Calibration The Automatic Input Calibration screen is used to do an automatic calibration of the input board A/D stages. A message will be displayed after the optimum setting has been determined.

**Note** The measurement system and the PMT are both shut off inside this screen. ▲

- In the Main Menu, choose Service > Input Board Calibration > Automatic Input Calibration.
- Press 🗲 to leave warning screen and begin automatic calibration.



# **Input Frequency Display** The Input Frequency Display screen is used to manually adjust the input board gain. This may be used as a troubleshooting tool for the input board. The gain setting and test mode are reset upon exiting this screen.

- In the Main Menu, choose Service > Input Board Calibration > Input Frequency Display.
- Press 🗲 to leave warning screen.
- Use 🔹 and 🕨 to toggle the test signal and bypass the PMT.
- Use \star and 🔸 to change the gain between 1, 10 and 100.



#### **Temperature Calibration**

The Temperature calibration screen allows the user to view and set the ambient temperature sensor calibration. The temperature calibration is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

**Note** This adjustment should only be performed by an instrument service technician. ▲

• In the Main Menu, choose Service > **Temperature Calibration**.



### Analog Output Calibration

The Analog Output Calibration menu is a selection of 6 voltage channels and 6 current channels (if I/O expansion board option is installed) to calibrate, and allows the user to select the calibration action zero or span. The analog output calibration is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

**Note** This adjustment should only be performed by an instrument service technician.  $\blacktriangle$ 

• In the Main Menu, choose Service > Analog Out Calibration.

ANALOG OUTPUT CAL: >VOLTAGE CHANNEL 1 VOLTAGE CHANNEL 2 VOLTAGE CHANNEL 3 VOLTAGE CHANNEL 4 VOLTAGE CHANNEL 5 VOLTAGE CHANNEL 6 CURRENT CHANNEL 1	ŧ
RANGE AVG DIAGS ALARM	•

ANALOG >CALIBRI CALIBRI	ATE ZI	ERO	ILE
RANGE	AVG	DIAGS	ALARM

#### Analog Output Calibrate Zero

The Analog Output Calibrate Zero screen allows the user to calibrate the zero state of the selected analog output. The operator must connect a meter to the output and adjust the output until it reads 0.0 V on the meter.

• In the Main Menu, choose Service > Analog Out Calibration > Select Channel > **Calibrate Zero**.

#### Analog Output Calibrate Full-Scale

The Analog Output Calibrate Full-Scale screen allows the user to calibrate the full-scale state of the selected analog output. The operator must connect a meter to the output and adjust output until it reads the value shown in the set output to: field.

• In the Main Menu, choose Service > Analog Out Calibration > Select Channel > Calibrate Full Scale.

The Analog Input Calibration menu is a selection of 8 analog inputs (if the I/O expansion board option is installed) to calibrate, and allows the user to select the calibration action zero or span. The analog input calibration is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

**Note** This adjustment should only be performed by an instrument service technician. ▲

**Analog Input Calibration** 

• In the Main Menu, choose Service > Analog Input Calibration.



## Analog Input Calibrate<br/>ZeroThe Analog Input Calibrate Zero screen allows the user to calibrate the<br/>zero state of the selected analog input.

• In the Main Menu, choose Service > Analog Input Calibration > Select Channel > **Calibrate Zero**. (Hook up a voltage source of 0 V to the analog input channel.)

CAL SELEC CT TED INPUT: ΤN ATLY: 6 IBRATE INPUT ТО ZERO ALARM RANGE AVG DIAGS

#### Analog Input Calibrate Full-Scale

The Analog Input Calibration Full-Scale screen allows the user to calibrate the full-scale state of the selected analog input.

• In the Main Menu, choose Service > Analog Input Calibration > Select Channel > **Calibrate Full Scale**. (Hook up a voltage source of 10 V to the analog input channel.)



### **Permeation Oven Settings**

The Permeation Oven Settings menu is used for setting up and calibrating the permeation oven option. The permeation oven settings are visible only if the permeation oven option installed and when the calibrator is in service mode. For more information on the service mode, see "Service Mode" earlier in this chapter.

• In the Main Menu, choose Service > **Perm Oven Settings**.

**Note** This adjustment should only be performed by an instrument service technician.  $\blacktriangle$ 

PERM OVEN SETTINGS: >CAL GAS THERMISTOR CAL OVEN THERMISTOR PERM OVEN SELECTION FACTORY CAL GAS THERM FACTORY CAL OVEN THERM	
RANGE AVG DIAGS ALARM	

#### **Calibrate Gas Thermistor**

The Calibrate Gas Thermistor menu is used for calibrating the permeation oven gas thermistor using a water bath or known resistance.

• In the Main Menu, choose Service > Perm Oven Settings > Cal Gas Thermistor.

CALIBRA >WATER KNOWN	BATH		1ISTOR:
RANGE	AVG	DIAGS	ALARM

- Water BathThe Calibrate Gas Thermistor Water Bath screen is used to view and set<br/>the permeation oven gas temperature to a known temperature value.
  - In the Main Menu, choose Service > Perm Oven Settings > Cal Gas Thermistor > **Water Bath**.



- **Resistor** The Calibrate Gas Thermistor Resistor screen is used to view and set the permeation oven gas thermistor resistance to a known resistor value.
  - In the Main Menu, choose Service > Perm Oven Settings > Cal Gas Thermistor > **Known Resistor**.

**Calibrate Oven Thermistor** The Calibrate Oven Thermistor screen is used to view and set the permeation oven thermistor resistance to a known resistor value.

• In the Main Menu, choose Service > Perm Oven Settings > Cal Oven Thermistor.



The Permeation Oven Setpoint screen is used to select the permeation oven state to not present, or the desired temperature choice of 30, 35, and 45 °C.

• In the Main Menu, choose Service > Perm Oven Settings > Perm Oven Selection.

PERM OVEN SETPOINT: CURRENTLY: NOT PRESENT SET TO: 45 °C ?
↔ MOVE CURSOR ◆• CHANGE VALUE ↔ SAVE
RANGE AVG DIAGS ALARM

#### **Factory Calibrate Gas Thermistor**

**Permeation Oven Selection** 

The Factory Calibrate Gas Thermistor menu is used for calibrating the permeation oven gas thermistor to either low point, high point, or set defaults.

• In the Main Menu, choose Service > Perm Oven Settings > **Factory Cal Gas Therm**.

FACTORY >LOW PO HIGH PI SET DEI	INT		ERM:
RANGE	AVG	DIAGS	ALARM

#### Low and High Points

The Calibrate Gas Thermistor Low Point screen is used to view and set the permeation oven thermistor resistance. The low and high point screens function the same way.

• In the Main Menu, choose Service > Perm Oven Settings > Factory Cal Gas Therm > **Low or High Point**.



- **Set Defaults** The Set Defaults screen is used to reset the configuration values to factory defaults.
  - In the Main Menu, choose Service > Perm Oven Settings > Factory Cal Gas Therm > **Set Defaults**.



- Factory Calibrate Oven<br/>ThermistorThe Factory Calibrate Oven Thermistor menu is used for calibrating the<br/>permeation oven heater thermistor to either low point, high point, or set<br/>defaults.
  - In the Main Menu, choose Service > Perm Oven Settings > Factory Cal Oven Therm.

FACTORY >LOW PO: HIGH PO SET DEF	INT		HERM:
RANGE	AVG	DIAGS	ALARM

**Low and High Points** The Calibrate Oven Thermistor Low Point screen is used to view and set the permeation oven thermistor resistance. The low and high point screens function the same way.

• In the Main Menu, choose Service > Perm Oven Settings > Factory Cal Oven Therm > **Low or High Point**.



**Set Defaults** The Set Defaults screen is used to reset the configuration values to factory defaults.

• In the Main Menu, choose Service > Perm Oven Settings > Factory Cal Oven Therm > **Set Defaults**.



### **Ozonator Safety**

The Ozonator Safety screen is used to turn the ozonator safety feature on or off. If the ozonator safety is turned off, the ozonator will always be on, even if the converter is not up to temperature. The ozonator safety screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

• In the Main Menu, choose Service > **Ozonator Safety**.

OZONATO CURREN SET	TLY:	ETV:	ON OFF	0.
	4	TOGGLE	VALUE	
RANGE	AVG	DIAGS	ALARM	

- **Dilution Ratio** The Dilution Ratio screen allows the user to view and set the dilution ratio. Acceptable values are 1–500: 1. The default is 1:1. When this value is set, the dilution ratio is applied to all concentration measurements. This screen is only accessible if the dilution ratio option is installed.
  - In the Main Menu, choose Service > **Dilution Ratio**.

### **Display Pixel Test**

The Display Pixel Test is used to test the LCD display. The display pixel test is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

• In the Main Menu, choose Service > Display Pixel Test.



#### **Restore User Defaults**

The Restore User Defaults screen is used to reset the user calibration and configuration values to factory defaults. The restore user defaults screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

• In the Main Menu, choose Service > **Restore User Defaults**.



**Password Menu** The Password menu allows the user to configure password protection. If the instrument is locked, none of the settings may be changed via the front panel user interface. The items visible under the password menu are determined by the instrument's password status.

• In the Main Menu, choose **Password**.

	SSWOR NSTRU PASS PASS	Ď MENT WORD	
RANGE	AVG	DIAGS	ALARM

Set Password	The Set Password screen is used to set the password to unlock the front
	panel. The set password screen is shown if the instrument is unlocked and
	the password is set.

• In the Main Menu, choose Password > Set Password

ENTER NEW PASSWORD:	
OPORSTUVWXYZ P	KSP AGE AVE
RANGE AVG DIAGS ALA	IRM

## **Lock Instrument**

The Lock Instrument screen is used to lock the instrument's front panel so users can not change any settings from the front panel. The lock instrument screen is shown if the instrument is unlocked and the password is set.

• In the Main Menu, choose Password > Lock Instrument

LOCK FRI PRES PREVENT		ANEL: ENTER ( FROM )	∬ILL CHANGING
	FROM		PANEL
← LOCK		RETURN	TO RUN
RANGE	AVG	DIAGS	ALARM

## **Change Password**

The Change Password is used to change the password used to unlock the instrument's front panel. The change password screen is shown if the instrument is unlocked.

• In the Main Menu, choose Password > Change Password



**Remove Password** 

The Remove Password screen is used to erase the current password and disable password protection. The remove password screen is shown if the instrument is unlocked and the password set.

• In the Main Menu, choose Password > Remove Password



## **Unlock Instrument**

The Unlock Instrument screen is used to enter the password to unlock the front panel. The unlock instrument is shown if the instrument is locked.

• In the Main Menu, choose Password > Unlock Instrument



## Chapter 4 Calibration

This chapter describes procedures for performing a multipoint calibration of the Model 42*i*. The information described here is considered adequate to perform the calibration. However, if greater detail is desired, the user is referred to the Code of Federal Regulations, Title 40, Part 50, Appendix F.

The calibration technique is based on the rapid gas phase reaction between NO and  $O_3$  which produces stoichiometric quantities of  $NO_2$  in accordance with the reaction:

$$NO + O_3 \rightarrow NO_2 + O_2$$

The quantitative nature of this reaction is such that when the NO concentration is known, the concentration of  $NO_2$  can be determined. Ozone is added to excess NO in a dynamic calibration system, and the NO channel of the chemiluminescence NO-  $NO_2$ - $NO_x$  analyzer is used as an indicator of changes in NO concentration.

When  $O_3$  is added, the decrease in NO concentration observed on the calibrated NO channel is equivalent to the concentration of  $NO_2$  produced. Adding variable amounts of  $O_3$  from a stable  $O_3$  generator can change the amount of  $NO_2$  generated. The following sections discuss the required apparatus and procedures for calibrating the instrument:

- "Equipment Required" on page 4-1
- "Pre-Calibration" on page 4-8
- "Calibration" on page 4-9
- "Calibration in Dual Range and Auto Range Mode" on page 4-16
- "Zero and Span Check" on page 4-21

## **Equipment Required**

The following equipment is required to calibrate the analyzer:

- Zero gas generator
- Gas phase titrator

Zero Gas Generator	A zero air source, such as a Thermo S Model 1160 Zero Air Supply, free of c $O_3$ is required for dilution, calibration	
Compression	The zero air source should be at an el reproducible flow control and to aid drying, oxidation, and scrubbing. An 10 psig is usually sufficient for most a	in subsequent operations such as air compressor that gives an output of
Drying	Several drying methods are available. bed of silica gel, using a heatless air d permeation dryer are three possible aj	
Oxidation	NO is usually oxidized to NO <sub>2</sub> in ord can be accomplished by either ozonat ozonation, the air is passed through a produced reacts with the NO to form sufficient residence time for the ozon	tion or chemical contact. During in ozone generator. The O3 that is n NO2. Care must be taken to allow
	Chemical oxidation is accomplished l reacting bed. Such agents as CrO <sub>3</sub> on very efficient at oxidizing NO to NO the advantage of needing no electrica	an alumina support or Purafil® are 2. The chemical contact approach has
Scrubbing	Fixed bed reactors are commonly use to remove the remaining contaminan absorption. Table 4–1 lists materials contaminants.	-
	Table 4–1. Scrubbing Materials	
	To Remove	Use
	NO <sub>2</sub>	Soda-Lime (6-12 mesh), Purafil

Hydrocarbons

 $O_3$  and  $SO_2$ 

Molecular Sieve (4A), Activated Charcoal

Activated Charcoal

#### **Gas Phase Titrator**

A gas phase titrator (GPT), such as is included in the Thermo Scientific Model 146 Series Multigas Calibration System is used to generate  $NO_2$  concentrations from NO concentrations. Figure 4–1 shows the suggested placement of the component parts of a gas phase titration apparatus.



**Equipment Damage** All connections between components in the system should be made with glass, Teflon<sup>®</sup>, or other non-reactive material. ▲

Flow ControllersThe airflow controllers should be devices capable of maintaining constant<br/>airflows within  $\pm 2\%$  of the required flow rate. The NO flow controller<br/>should be capable of maintaining constant NO flows within  $\pm 2\%$  of the<br/>required flow rate.

## **Pressure Regulator** The pressure regulator for the standard NO cylinder must have a non-reactive diaphragm and internal parts, and a suitable delivery pressure.



Figure 4–1. GPT System

Ozone Generator	The ozone generator must be capable of generating sufficient and stable levels of ozone for reaction with NO to generate NO <sub>2</sub> concentrations in the range required.	
	<b>Note</b> Ozone generators of the electric discharge type may produce NO and $NO_2$ and are not recommended.	
Diverter Valve	A valve can be used to divert the NO flow when zero air is required at the manifold.	
<b>Reaction Chamber</b>	The reaction chamber used for the reaction of ozone with excess NO should have sufficient volume so that the residence time meets the requirements specified in this chapter.	
Mixing Chamber	The mixing chamber is used to provide thorough mixing of the reaction products and diluent air.	
Output Manifold	The output manifold should be of sufficient diameter to insure an insignificant pressure drop at the analyzer connection. The system must have a vent designed to insure atmospheric pressure at the manifold and to prevent ambient air from entering the manifold.	
Reagents	The following information describes the NO concentration standard and the method for calculating the NO concentration standard and the NO <sub>2</sub> impurity.	
NO Concentration Standard	A cylinder containing 10 to 50 ppm NO in $N_2$ with less than 1 ppm NO <sub>2</sub> is usually used as the concentration standard. The cylinder must be traceable to a National Institute of Standards and Technology (NIST) NO in $N_2$ Standard Reference Material or NO <sub>2</sub> Standard Reference Material.	
	Procedures for certifying the NO cylinder (working standard) against an NIST traceable NO or NO <sub>2</sub> standard and for determining the amount of NO <sub>2</sub> impurity are given in EPA Publication No. EPA-600/4-75-003, "Technical Assistance Document for the Chemiluminescence Measurement of Nitrogen Dioxide."	

In addition, the procedure for the certification of a NO working standard against an NIST traceable NO standard and determination of the amount of  $NO_2$  impurity in the working standard is reproduced here. The cylinder should be re-certified on a regular basis as determined by the local quality control program.

Use the NIST traceable NO standard and the GPT calibration procedure to calibrate the NO,  $NO_x$ , and  $NO_2$  responses of the instrument. Also determine the converter efficiency of the analyzer. Refer to the calibration procedure in this manual and in the Code of Federal Regulations, Title 40, Part 50, Appendix F for exact details. Ignore the recommended zero offset adjustments.

Use the following procedure to calculate the NO concentration standard and  $NO_2$  impurity.

- 1. Generate several NO concentrations by dilution of the NO working standard.
- 2. Use the nominal NO concentration, [NO]<sub>NOM</sub>, to calculate the diluted concentrations.
- 3. Plot the analyzer NO response (in ppm) versus the nominal diluted NO concentration and determine the slope, S<sub>NOM</sub>.
- 4. Calculate the [NO] concentration of the working standard, [NO]<sub>STD</sub>, from:

$$[NO]_{STD} = [NO]_{NOM} \times S_{NOM}$$

- 5. If the nominal NO concentration of the working standard is unknown, generate several NO concentrations to give on-scale NO responses.
- 6. Measure and record  $F_{NO}$  and  $F_T$  for each NO concentration generated.
- 7. Plot the analyzer NO response versus  $F_{NO}/F_T$  and determine the slope which gives  $[NO]_{STD}$  directly. The analyzer  $NO_x$  responses to the generated NO concentrations reflect any  $NO_2$  impurity in the NO working standard.

#### Assaying a Working NO Standard Against a NIST-traceable NO Standard

- 8. Plot the difference between the analyzer  $NO_x$  and NO responses versus  $F_{NO}/F_T$ . The slope of this plot is  $[NO_2]_{IMP}$ .
- **Zero Air** A source of zero air free of contaminants should be used as described earlier in this chapter. Contaminants can cause a detectable response on the instrument and may also react with the NO, O<sub>3</sub>, or NO<sub>2</sub> during the gas phase titration.

### Dynamic Parameter Specifications for Gas Titrator

Use the following definitions for the remainder of this chapter.  $P_R =$ Dynamic parameter specification to ensure complete reaction of the available O<sub>3</sub>, ppm-min  $[NO]_{RC} =$ NO concentration in the reaction chamber, ppm t<sub>R</sub> = residence time of the reactant gases in the reaction chamber, min  $[NO]_{STD} =$ Concentration of the undiluted NO standard, ppm  $F_{NO} =$ NO flow rate, sccm  $F_0 =$ O<sub>3</sub> generator air flow rate, sccm  $V_{RC} =$ Volume of the reaction chamber, cc  $F_T =$ Analyzer demand plus 10 to 50% excess

The  $O_3$  generator (ozonator) airflow rate and the NO flow rate must be adjusted such that the following relationships hold:

 $P_R = [NO]_{RC} x t_R \ge 2.75 ppm - min$ 

$$[\text{NO}]_{\text{RC}} = [\text{NO}]_{\text{STD}} \frac{F_{\text{NO}}}{(F_{\text{O}} + F_{\text{NO}})}$$
$$t_{\text{R}} = \frac{V_{\text{RC}}}{F_{\text{O}} + F_{\text{NO}}} < 2 \text{ min}$$

#### Determining GPT System Flow Conditions

Use the following procedure to determine the flow conditions to be used in the GPT system.

1. Determine FT, the total flow required at the output manifold, which should be equal to the analyzer demand plus 10 to 50 percent excess.

- Establish [NO]<sub>OUT</sub> as the highest NO concentration that will be required at the output manifold. [NO]<sub>OUT</sub> should be about equal to 90% of the upper range limit (URL) of the NO<sub>2</sub> concentration range to be covered.
- 3. Determine  $F_{NO}$  as:

$$F_{NO} = \frac{[NO]_{OUT} \times F_{T}}{[NO]_{STD}}$$

- 4. Select a convenient or available reaction chamber volume. Initially a trial volume may be selected in the range of 200 to 500 cc.
- 5. Compute F<sub>0</sub> as:

$$F_{\rm O} = \sqrt{\frac{[{\rm NO}]_{\rm STD} \ x \ F_{\rm NO} \ x \ V_{\rm RC}}{2.75}} - F_{\rm NO}$$

6. Compute  $t_R$  as:

$$t_{\rm R} = \frac{V_{\rm RC}}{F_{\rm O} + F_{\rm NO}}$$

- 7. Verify that  $t_{R}$  < 2 minutes. If not, select a reaction chamber with a smaller  $V_{RC}.$
- 8. Compute the diluent air flow rate as:

$$F_D = F_T - F_O - F_{NO}$$

9. If  $F_O$  turns out to be impractical for the desired system, select a reaction chamber having a different  $V_{RC}$  and recompute  $F_D$  and  $F_O$ .

## **Pre-Calibration**

Perform the following pre-calibration procedure before calibrating the Model 42*i*. For detailed information about the menu parameters and the icons used in these procedures, see the "Operation" chapter.

**Note** The calibration and calibration check duration times should be long enough to account for the transition (purge) process when switching from sample to zero and from zero to span. This transition time is the time required to purge the existing air. ▲

Depending on the plumbing configuration and the instrument, data from approximately the first minute of a zero calibration or check should be disregarded because of residual sample air. Also, data from approximately the first minute of a span calibration or check should be disregarded because the span is mixing with the residual zero air.

- 1. Allow the instrument to warm up and stabilize.
- 2. Be sure the ozonator is ON. If the ozonator is not ON:
  - a. Press to display the Main Menu, then choose Instrument Controls > **Ozonator**.
  - b. Press 🗲 to toggle the ozonator ON.
  - c. Press **b** to return to the Run screen.
- 3. Be sure the instrument is in the auto mode, that is, NO, NO<sub>2</sub>, and  $NO_x$  measurements are being displayed on the front panel display. If the instrument is not in auto mode:
  - a. Press to display the Main Menu, then choose Instrument Controls > Auto/Manual Mode.
  - b. Select **NO/NOx**, and press  $\leftarrow$  .
  - c. Press **b** to return to the Run screen.
- 4. Select NO, NO<sub>2</sub>, and NO<sub>x</sub> ranges, and push the AVG soft key to display the Averaging Time screen. It is recommended that a higher averaging time be used for best results. For more information about the ranges or averaging time, see the "Operation" chapter.

**Note** The averaging time should be less than the zero duration and less than the span duration.  $\blacktriangle$ 

- 5. Set the calibration pressure to the current reactor pressure.
  - a. Press to display the Main Menu, then choose Diagnostics > **Pressure**. Make a note of the current chamber pressure.
  - b. Press **•** twice, choose > Calibration Factors > **Cal Pressure**.
  - c. Use to increment/decrement the value to match the current reactor pressure, and press to save the new calibration pressure value.
- 6. Verify that any filters used during normal monitoring are also used during calibration.
- 7. If required, connect the analog/digital outputs to a strip chart recorder(s) or PC(s).

**Calibration** The following procedure calibrates the analyzer using the gas phase titrator and zero gas generator described previously in this manual. It is suggested that a calibration curve have at least seven points between the zero and full scale NO concentrations. Although the seven-point curve is optional, two of whatever number of points is chosen should be located at the zero and 90% levels and the remaining points equally spaced between these values.

**Note** When the instrument is equipped with internal zero/span and sample valves, the ZERO and SPAN ports should give identical responses to the SAMPLE port when test gases are introduced. The user should calibrate the instrument using the SAMPLE port to introduce the zero and span gas sources. ▲

After calibration, the zero and span sources should be plumbed to the appropriate ports on the rear panel of the instrument, and then reintroduced to the instrument. The instrument should give identical responses to the test gases whether they are introduced via the SAMPLE port or the ZERO or SPAN ports. If not, the plumbing and/or valves should be serviced.

Connect GPT Apparatus to the Analyzer	Use the following procedure to connect the GPT apparatus to the analyzer.		
	1. Assemble a dynamic calibration system such as the one shown in Figure 4–1.		
	2. Ensure that all flow meters are calibrated under the conditions of use against a reliable standard, such as a soap-bubble meter or wet-test meter. All volumetric flow rates should be corrected to 25 °C and 760 mmHg.		
	3. Precautions should be taken to remove $O_2$ and other contaminants from the NO pressure regulator and delivery system prior to the start of calibration to avoid any conversion of NO to NO <sub>2</sub> . Failure to do so can cause significant errors in calibration. This problem can be minimized by:		
	a. Carefully evacuating the regulator after the regulator has been connected to the cylinder and before opening the cylinder valve.		
	b. Thoroughly flushing the regulator and delivery system with NO after opening the cylinder valve.		
	c. Not removing the regulator from the cylinder between calibrations unless absolutely necessary.		
	4. Connect the analyzer sample bulkhead input to the output of the GPT system.		
Adjust Instrument Gain	Use the following procedure to adjust the instrument gain. This includes:		
	• Setting the NO and NO <sub>x</sub> background to zero		
	• Calibrating the NO channel to the NO calibration gas		
	• Calibrating the NO <sub>x</sub> channel to the NO <sub>x</sub> calibration gas		
Set NO and NO <sub>x</sub> Background to Zero	The NO and $NO_x$ background corrections are determined during zero calibration. The background signal is the combination of electrical offsets, PMT dark current, and trace substances undergoing chemiluminescence. For more detailed information, see "NO and NOx Backgrounds" in the "Operation" chapter.		

Use the following procedure to set the NO background. Both the NO and  $NO_x$  background screens operate the same way, and the following procedure also applies to the  $NO_x$  background screen.

**Note** The NO channel should be calibrated first and then calibrate the NO<sub>x</sub> channel.  $\blacktriangle$ 

For detailed information about the menu parameters and the icons used in these procedures, see the "Operation" chapter.

- 1. Determine the GPT flow conditions required to meet the dynamic parameter specifications as indicated in "Dynamic Parameter Specifications for Gas Titrator" earlier in this chapter.
- 2. Adjust the GPT diluent air and  $O_3$  generator air flows to obtain the flows determined in "Dynamic Parameter Specifications for Gas Phase Titrator" earlier in this chapter. The total GPT airflow must exceed the total demand of the analyzer. The Model 42*i* requires approximately 700 cc/min of sample flow, and a total GPT airflow of at least 1.5 liters/min is recommended.
  - a. Allow the analyzer to sample zero air until the NO, NO<sub>x</sub>, and NO<sub>2</sub> responses stabilize.
  - b. After the responses have stabilized, from the Main Menu, choose Calibration > **Cal NO Background**.
  - c. Press 🔶 to set the NO reading to zero.
  - d. Press to return to the Calibration menu and repeat this procedure to set the NO<sub>x</sub> background to zero.
  - e. Record the stable zero air responses as  $Z_{NO}$ ,  $Z_{NOX}$ , and  $Z_{NO2}$  (recorder response, percent scale).
- 3. Adjust the NO flow from the standard NO cylinder to generate a NO concentration of about 80% of the upper range limit (URL) of the NO range. The exact NO concentration is calculated from:

$$[\text{NO}]_{\text{OUT}} = \frac{F_{\text{NO}} \times \text{NO}_{\text{STD}}}{F_{\text{NO}} + F_{\text{O}} + F_{\text{D}}}$$

Where:

 $[NO]_{OUT}$  = Diluted NO concentration at the output manifold, ppm

 $NO_{STD}$  = No feed concentration

 $F_{NO}$  = No flow  $F_{O}$  = Ozone flow  $F_D$  = Dilution flow

#### **Calibrate the NO Channel to the NO Calibration Gas**

Use the following procedure to calibrate the NO channel to the NO calibration gas.

- 1. Allow the analyzer to sample the NO calibration gas until the NO, NO2, and NOx readings have stabilized.
- 2. When the responses stabilize, from the Main Menu, choose Calibration > Cal NO Coefficient.

The NO line of the Calibrate NO screen displays the current NO concentration. The SPAN CONC line of the display is where you enter the NO calibration gas concentration.

Use ( + ) to move the cursor left and right and use ( t Ŧ to increment and decrement the numeric character at the cursor.

3. Press [ + ] to calculate and save the new NO coefficient based on the entered span concentration.

The NO recorder response will equal:

Recorder Response (% scale) = 
$$\frac{[NO]_{OUT}}{URL} \times 100 + Z_{NO}$$

Where:

URL = Nominal upper range limit of the NO channel, ppm

4. Record the [NO]<sub>OUT</sub> concentration and the analyzer NO response as indicated by the recorder response.

## **NO<sub>x</sub> Calibration Gas** calibration gas.

**Calibrate the NO<sub>x</sub> Channel to the** Use the following procedure to calibrate the NO<sub>x</sub> channel to the NO<sub>x</sub>

1. Press **•** to return to the Calibration menu, and choose Cal NOx Coefficient.
2. Verify that the NO<sub>x</sub> calibration gas concentration is the same as the NO calibration gas concentration plus any known NO<sub>2</sub> impurity.

The  $NO_x$  line of the Calibrate  $NO_x$  screen displays the current  $NO_x$  concentration. The SPAN CONC line of the display is where you enter the  $NO_x$  calibration gas concentration.

Use  $\checkmark$  to move the cursor left and right and use  $\checkmark$   $\checkmark$  to increment and decrement the numeric character at the cursor.

- 3. Press  $(\frown)$  to calculate and save the new NO<sub>x</sub> coefficient based on the entered span concentration.
- 4. Press to return to the Run screen. The exact NO<sub>x</sub> concentration is calculated from:

$$[NO_{x}]_{OUT} = \frac{F_{NO} x ([NO]_{STD} + [NO_{2}]_{IMP})}{F_{NO} + F_{O} + F_{D}}$$

Where:

 $[NO_x]_{OUT}$  = diluted NO<sub>x</sub> concentration at the output manifold, ppm

 $[NO_2]_{IMP}$  = concentration of  $NO_2$  impurity in the standard NO cylinder, ppm

The NO<sub>x</sub> recorder response will equal:

Recorder Response (% scale) = 
$$\frac{[NO_x]_{OUT}}{URL} \times 100 + Z_{NO_x}$$

Where:

URL = Nominal upper range limit of the NO<sub>x</sub> channel, ppm

5. Record the  $NO_x$  concentration and the analyzer's  $NO_x$  response.

Preparing NO, NO<sub>x</sub>, and NO<sub>2</sub> Calibration Curves

Use the following procedures to prepare the NO,  $NO_x$ , and  $NO_2$  calibration curves.

- 1. Generate several additional NO and NOx concentrations by decreasing FNO or increasing FD.
- 2. For each concentration generated, calculate the exact NO and NO<sub>x</sub> concentrations using the above equations for [NO]<sub>OUT</sub> and [NO<sub>x</sub>]<sub>OUT</sub>.

- 3. Record the NO and NO<sub>x</sub> responses.
- 4. Plot the analyzer responses versus the respective calculated NO and NO<sub>x</sub> concentrations and draw or calculate the respective calibration curves. For subsequent calibrations where linearity can be assumed, these curves may be checked with a three-point calibration consisting of a zero point, NO and NO<sub>x</sub> concentrations of approximately 80% of the URL, and an intermediate concentration.
- 5. Adjust the GPT system to generate a NO concentration near 90% of the URL of the instrument range selected.
- 6. Sample this NO concentration until the NO and NO<sub>x</sub> responses have stabilized, then measure and record the NO concentration as [NO]<sub>ORIG</sub>.
- 7. Adjust the  $O_3$  generator in the GPT system to generate sufficient  $O_3$  to produce a decrease in the NO concentration equivalent to about 80% of the URL of the NO<sub>2</sub> range. The decrease must not exceed 90% of the NO concentration determined in Steps 5 and 6 above.
- 8. When the analyzer responses stabilize, record the resultant NO concentrations as [NO]<sub>REM</sub>.
- 9. From the Main Menu choose Calibration > Cal NO2 Coefficient.

The NO<sub>2</sub> line of the Calibrate NO<sub>2</sub> screen displays the current NO<sub>2</sub> concentration. The SPAN CONC line of the display is where you enter the NO<sub>2</sub> calibration gas concentration.

 Set the NO<sub>2</sub> calibration gas concentration to reflect the sum of the following: the NO<sub>2</sub> concentration generated by GPT, ([NO]<sub>ORIG</sub> -[NO]<sub>REM</sub>), and any NO<sub>2</sub> impurity.

Use  $\checkmark$  to move the cursor left and right and use  $\checkmark$   $\checkmark$  to increment and decrement the numeric character at the cursor.

$$[NO_{2}]_{OUT} = ([NO]_{ORIG} - [NO]_{REM}) + \frac{F_{NO} \times [NO_{2}]_{IMP}}{F_{NO} + F_{O} + F_{D}}$$

Where:

 $[NO_2]_{OUT}$  = diluted NO<sub>2</sub> concentration at the output manifold, ppm

 $[NO]_{ORIG}$  = original NO concentration, prior to addition of  $O_3,\,ppm$ 

 $[NO]_{REM}$  = NO concentration remaining after addition of O<sub>3</sub>, ppm

11. Press  $(\frown)$  to calculate and save the new NO<sub>2</sub> coefficient based on the entered span concentration.

The analyzer does a one point  $NO_2$  span coefficient calculation, corrects the  $NO_2$  reading for converter inefficiency, and then adds the corrected  $NO_2$  to the NO signal to give a corrected  $NO_x$  signal.

If the analyzer calculates a  $NO_2$  span coefficient of less than 0.96, either the entered  $NO_2$  concentration is incorrect, the converter is not being heated to the proper temperature, the instrument needs servicing (leak or imbalance), or the converter needs replacement or servicing. The  $NO_2$  analog output will reflect the  $NO_2$  concentration generated by GPT, any  $NO_2$  impurity, and the  $NO_2$  zero offset.

The recorder response will be as follows:

Recorder Response (% scale) = 
$$\frac{[NO_2]_{OUT}}{URL} \times 100 + Z_{NO_2}$$

Where:

URL = Nominal upper range limit of the NO<sub>2</sub> channel, ppm

- 12. Record the NO<sub>2</sub> concentration and the analyzer's NO<sub>2</sub> response.
- 13. Maintaining the same  $F_{NO}$ ,  $F_O$ , and  $F_D$ , adjust the ozone generator to obtain several other concentrations of  $NO_2$  over the  $NO_2$  range (at least five evenly spaced points across the remaining scale are suggested).
- 14. Record the stable responses and plot the analyzer's NO<sub>2</sub> responses versus the corresponding calculated (using the above equation for [NO<sub>2</sub>]<sub>OUT</sub>) concentrations and draw or calculate the NO<sub>2</sub> calibration curve.

**Note** It is important that the curve be linear within  $\pm 1\%$  FS over the NO<sub>2</sub> range. If the curve is nonlinear, the analyzer is not operating correctly, (possible leak, or converter failure, etc.), and should be serviced. Assuming the curve is linear, subsequent data should be reduced using this NO<sub>2</sub> calibration curve response.

Using the Calibration Factors menu can change the calibration factors. This is often useful in a troubleshooting situation. However, after the above calibration procedure is completed, all subsequent data reduction depends on the calibration parameters, remaining the same as during the initial calibration.

Therefore, never change any calibration factor without first recording the value so that after any troubleshooting procedure is completed, the initial value can be re-entered thereby not altering the multipoint calibration.

#### Alternative Calibration **Procedure Using NO<sub>2</sub>** Permeation Tube

#### **Calibration in Dual Range and Auto Range Mode**

Although it is recommended that a GPT system be used to calibrate the analyzer, the procedure described in the Code of Federal Regulations, Title 40, Part 50, Appendix F using a NO<sub>2</sub> permeation tube may be used as an alternative procedure for calibrating the instrument.

The dual/auto range calibration feature is used to calibrate the analyzer at two different span levels (as opposed to a single span level in the standard mode) generating a "tailored multi-point" calibration curve stored in the analyzer's memory. This feature may be used:

- When widely different gas levels are being monitored, such as a factor of 10 or greater apart
- If precision and span levels are being introduced using separate tanks
- If more than one multi-component cylinder is being used to calibrate the instrument

Properly designed chemiluminescence analyzers are inherently linear over a wide dynamic range; and under normal USEPA compliance situations this feature is not required. Dual calibration may be used for span levels less than a factor of 10 apart, however if this is done to correct for a significant non-linearity, it may mask the problems causing the effect, such as, bad calibration cylinder, leaks in sampling lines, or low ozonator output.

Use the following procedures to calibrate the analyzer in dual or auto range mode.

**Set NO and NO<sub>x</sub>** Use the following procedure to set the NO and NO<sub>x</sub> background readings to zero. Both the Set NO background and NO<sub>x</sub> background screens operate the same way, and the following procedure also applies to the NO and NO<sub>x</sub> background screen.

> For detailed information about the menu parameters and the icons used in these procedures, see the "Operation" chapter.

**Background Readings to** Zero

- 1. Follow the "Pre-Calibration" procedure described previously in this chapter.
- 2. Introduce zero air to the SAMPLE bulkhead and allow the analyzer to sample zero air until the NO, NO<sub>x</sub>, and NO<sub>2</sub> responses stabilize.
- 3. When the responses stabilize, from the Main Menu choose Calibration > Calibrate NO Background.
- 4. The Set NO Background screen displays the current NO background and NO concentration.
- 5. Press 🖝 to set the NO background to zero.
- 6. Press **•** to return to the Run screen.
- 7. Repeat Steps 3 through 6, selecting **Cal NOx Background** to set the NO<sub>x</sub> backgrounds to zero.

# **Calibrate Low NO** Use the following procedure to calibrate NO channel to the NO calibration gas.

- 1. Disconnect the source of zero air from the SAMPLE bulkhead. In its place, connect a source of NO calibration gas of about 80% of the low NO full-scale range.
- 2. Allow the analyzer to sample the low NO calibration gas until the NO,  $NO_2$ , and  $NO_x$  readings stabilize.
- 3. When the responses are stabile, from the Main Menu choose Calibration > Cal Lo NO Coefficient.
- 4. The Lo NO field displays the current NO concentration.

The Lo NO Span Conc field is where you enter the low NO calibration gas concentration.

Use  $\checkmark$  to move the cursor left and right and use  $\checkmark$   $\checkmark$  to increment and decrement the numeric character at the cursor.

5. Press  $\leftarrow$  to calculate and save the new low NO coefficient based on the entered span concentration.

#### Calibrate Low NO<sub>x</sub> Use

Use the following procedure to calibrate the  $NO_x$  channel to the  $NO_x$  calibration gas.

- 1. Press to return to the Calibration menu and choose Cal Lo NOx Coefficient.
- 2. Verify that the low NO<sub>x</sub> calibration gas concentration is the same as the low NO calibration gas concentration plus any known NO<sub>2</sub> impurity.

The Lo  $NO_x$  field displays the current  $NO_x$  concentration. The Lo  $NO_x$  Span Conc field is where you enter the low  $NO_x$  calibration gas concentration.

Use  $\checkmark$  to move the cursor left and right and use  $\checkmark$   $\checkmark$  to increment and decrement the numeric character at the cursor.

- 3. Press  $\leftarrow$  to calculate and save the new low NO<sub>x</sub> coefficient based on the entered span concentration.
- 4. Press 🕩 to return to the Run screen.

# **Calibrate Low NO<sub>2</sub>** Use the following procedure to calibrate the NO<sub>2</sub> channel to the NO<sub>2</sub> calibration gas.

- Adjust the O3 generator in the GPT system to generate sufficient O3 to produce a decrease in the low NO concentration equivalent to about 80% of the URL of the low NO2 range. The decrease must not exceed 90% of the low NO concentration determined in the "Calibrate Low NOx" procedure.
- 2. From the Main Menu choose Calibration > Cal Lo NO2 Coefficient.

The Lo  $NO_2$  field displays the current  $NO_2$  concentration. The Lo  $NO_2$  Span Conc field is where you enter the Lo  $NO_2$  calibration gas concentration.

3. Set the low NO<sub>2</sub> calibration gas concentration to reflect the sum of the NO<sub>2</sub> concentration generated by GPT and any NO<sub>2</sub> impurity.

Use  $\bullet$  to move the cursor left and right and use  $\bullet$   $\bullet$  to increment and decrement the numeric character at the cursor.

4. Press  $\frown$  to calculate and save the new low NO<sub>2</sub> coefficient based on the entered span concentration.

#### Calibrate High NO

Use the following procedure to calibrate the NO channel to the NO calibration gas.

- 1. Connect a source of high NO calibration gas of about 80% of the high NO full-scale range. Allow the analyzer to sample the high NO calibration gas until the NO, NO<sub>2</sub>, and NO<sub>x</sub> readings have stabilized.
- 2. After the responses have stabilized, from the Main Menu, choose Calibration > Cal Hi NO Coefficient.

The Hi NO field displays the current NO concentration. The Hi NO Span Conc field is where you enter the high NO calibration gas concentration.

Use  $\checkmark$  to move the cursor left and right and use  $\checkmark$   $\checkmark$  to increment and decrement the numeric character at the cursor.

3. Press 🕶 to calculate and save the new high NO coefficient based on the entered span concentration.

# **Calibrate High NO**<sub>x</sub> Use the following procedure to calibrate the $NO_x$ channel to the $NO_x$ calibration gas.

- 1. Press to return to the Calibration menu, and choose Cal Hi NOx Coefficient.
- 2. Verify that the high NO<sub>x</sub> calibration gas concentration is the same as the high NO calibration gas concentration plus any known NO<sub>2</sub> impurity.

Use  $\checkmark$  to move the cursor left and right and use  $\checkmark$   $\checkmark$  to increment and decrement the numeric character at the cursor.

3. Press  $\leftarrow$  to calculate and save the new high NO<sub>x</sub> coefficient based on the entered span concentration.

4. Press > to return to the Run screen.

#### Calibrate High NO<sub>2</sub>

Use the following procedure to calibrate the  $NO_2$  channel to the  $NO_2$  calibration gas.

- 1. Adjust the  $O_3$  generator in the GPT system to generate sufficient  $O_3$  to produce a decrease in the high NO concentration equivalent to about 80% of the URL of the high  $NO_2$  range. The decrease must not exceed 90% of the high NO concentration determined in the "Calibrate High  $NO_x$ " procedure.
- 2. From the Main Menu, choose Calibration > Cal Hi NO2 Coefficient.

The Hi  $NO_2$  field displays the current  $NO_2$  concentration. The Hi  $NO_2$  Span Conc field is where you enter the high  $NO_2$  calibration gas concentration.

3. Set the high NO<sub>2</sub> calibration gas concentration to reflect the sum of the NO<sub>2</sub> concentration generated by GPT and any NO<sub>2</sub> impurity.

Use  $\checkmark$  to move the cursor left and right and use  $\checkmark$   $\checkmark$  to increment and decrement the numeric character at the cursor.

4. Press  $\leftarrow$  to calculate and save the new high NO<sub>2</sub> coefficient based on the entered span concentration.

You can change the calibration factors by using the Calibration Factors menu. This is often useful in a troubleshooting situation. However, after the above calibration procedure is completed, all subsequent data reduction depends on the calibration parameters remaining the same as during the initial calibration.

Therefore never change any calibration factor without first recording the value so that after any troubleshooting procedure is completed, the initial value can be re-entered thereby not altering the multipoint calibration.

#### **Zero and Span Check**

The analyzer requires initial and periodic calibration according to the procedures outlined in this manual. Initially, the frequency of the calibration procedure should be determined by the stability of the zero and span checks, which may be run daily. You should generate a new calibration curve when zero and span checks indicate a shift in instrument gain of more than 10 percent from that determined during the most recent multipoint calibration. You can adjust the frequency of calibration and even zero and span checks appropriately as you gain confidence with the instrument.

You should have a quality control plan where the frequency and the number of points required for calibration can be modified on the basis of calibration and zero and span check data collected over a period of time. Note however, that the EPA requires a minimum of one multipoint calibration per calendar quarter. Such a quality control program is essential to ascertain the accuracy and reliability of the air quality data collected and to alert the user if the accuracy or reliability of the data should become unacceptable. A compilation of this kind might include items such as dates of calibration, atmospheric conditions, calibration factors, and other pertinent data.

Use the following procedure to perform a zero and span check.

- 1. Connect the zero gas to the SAMPLE bulkhead in a standard instrument or to the ZERO bulkhead in a Model 42*i* equipped with the zero/span and sample solenoid valve option.
- 2. Allow the instrument to sample zero gas until a stable reading is obtained on the NO,  $NO_2$ , and  $NO_x$  channels then record the zero readings. Unless the zero has changed by more than ±0.010 ppm, it is recommended that the zero not be adjusted. If an adjustment larger than this is indicated due to a change in zero reading, a new multipoint calibration curve should be generated.
- 3. Attach a supply of known concentration of NO and NO<sub>2</sub> (usually generated via an NIST traceable NO working standard and a GPT system) to the SAMPLE bulkhead (or SPAN bulkhead for instruments equipped with the zero/span and sample solenoid valve option) on the rear panel.
- 4. Allow the instrument to sample the calibration gas until a stable reading is obtained on the NO, NO<sub>2</sub>, and NO<sub>x</sub> channels. If the

calibration has changed by more than  $\pm 10\%$ , a new multipoint calibration curve should be generated.

- 5. When the calibration check has been completed, record the NO,  $NO_2$ , and  $NO_x$  values.
- 6. Reconnect the analyzer sample line to the SAMPLE bulkhead.

# Chapter 5 **Preventive Maintenance**

This chapter describes the periodic maintenance procedures that should be performed on the instrument to ensure proper operation. Since usage and environmental conditions vary greatly, you should inspect the components frequently until an appropriate maintenance schedule is determined.

This chapter includes the following maintenance information and replacement procedures:

- "Safety Precautions" on page 5-1
- "Replacement Parts" on page 5-2
- "Cleaning the Outside Case" on page 5-2
- "Ozonator Air Feed Drying Column Replacement" on page 5-2
- "Capillaries Inspection and Replacement" on page 5-2
- "Thermoelectric Cooler Fins Inspection and Cleaning" on page 5-4
- "Fan Filters Inspection and Cleaning" on page 5-4
- "Pump Rebuilding" on page 5-5

#### **Safety Precautions**

Read the safety precautions before beginning any procedures in this chapter.



**WARNING** If the equipment is operated in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired Do not attempt to lift the instrument by the cover or other external fittings. ▲



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component. For more information about appropriate safety precautions, see the "Servicing" chapter. ▲

#### **Replacement Parts**

#### Cleaning the Outside Case



labels on the case.

**Equipment Damage** Do not use solvents or other cleaning products to clean the outside case.

Clean the outside case using a damp cloth being careful not to damage the

See the "Servicing" chapter for a list of replacement parts.

#### Ozonator Air Feed Drying Column Replacement

Use the following procedure to replace the ozonator air feed drying column.

- 1. Remove the drying column from the connector DRY AIR bulkhead on the rear panel of the instrument.
- 2. Replace spent absorbent material (indicating Drierite or silica gel) with new or regenerated material.
- 3. Reinstall the drying column to the DRY AIR bulkhead.
- 4. Perform a Zero/Span check (see the "Calibration" chapter).

#### Capillaries Inspection and Replacement



The capillaries normally only require inspection when instrument performance indicates that there may be a flow problem.

**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component. For more information about appropriate safety precautions, see the "Servicing" chapter. ▲

Use the following procedure to inspect and replace the capillaries. This procedure can be used to check any or all of the capillaries.

- 1. Turn the instrument OFF and unplug the power cord.
- 2. Remove the instrument cover.

# and Replacement

3. Locate the capillary holders. See Figure 5–1 and Figure 7–2.



Figure 5–1. Inspecting and Replacing the Capillaries

- 4. Remove the Cajon<sup>®</sup> fitting(s) from the reaction chamber body using a 5/8-inch wrench being careful not to lose the ferrule or O-ring.
- 5. Remove the glass capillaries, ferrule, and O-ring. Inspect O-ring for cuts or abrasion, and replace as necessary.
- 6. Check capillary for particulate deposits. Clean or replace as necessary.
- 7. Replace capillary in reaction chamber body, making sure the O-ring is around the capillary before inserting it into the body.
- 8. Replace Cajon<sup>®</sup> fitting. Note that the Cajon<sup>®</sup> fitting should be tightened slightly more than hand tight.
- 9. Reconnect tubing to top of fittings, being careful to insert ferrule and O-ring properly, and tighten knurled nut finger tight.
- 10. Re-install the cover.

11. Connect the power cord and turn the instrument ON.

### Thermoelectric Cooler Fins Inspection and Cleaning



Use the following procedure to inspect and clean the thermoelectric cooler fins.

**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component. For more information about appropriate safety precautions, see the "Servicing" chapter. ▲

- 1. Turn the instrument off and unplug the power cord.
- 2. Remove the instrument cover.
- 3. Locate the PMT cooler (Figure 7–2 and Figure 7–6).
- 4. Blow off the cooler fins using clean pressurized air. It may be more convenient to vacuum the cooler fins. In either case, make sure that any particulate accumulation between the fins has been removed.
- 5. If necessary, use a small brush to remove residual particulate accumulation.
- 6. Replace the cover.
- 7. Connect the power cord and turn the instrument ON.

#### Fan Filters Inspection and Cleaning

Use the following procedure to inspect and clean the fan filters.

- 1. Remove the two fan guards from the fans and remove the filters.
- 2. Flush the filters with warm water and let dry (a clean, oil-free purge will help the drying process) or blow the filters clean with compressed air.
- 3. Re-install the filters and fan guards.



Figure 5–2. Inspecting and Cleaning the Fan Filters

### **Pump Rebuilding**

Use the following procedure to rebuild the pump Figure 5–3. To replace the pump, see "Pump Replacement" in the "Servicing" chapter.

Equipment Required:

Pump Repair Kit Allen Wrench, 3 mm Wrench, 9/16-inch Needlenose Pliers



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component. For more information about appropriate safety precautions, see the "Servicing" chapter. ▲

- 1. Turn instrument off, unplug the power cord, and remove the cover.
- 2. Loosen fittings and remove both lines going to the pump.
- 3. To ensure proper reassembly, mark the position of the pump head by using a pencil or other marker to draw a line from the top plate down across the bottom plate to the pump body. Refer to this reference line when reassembling the pump head.

- 4. Remove four screws from top plate using the 3 mm Allen wrench.
- 5. Remove top plate, flapper valve, and bottom plate.
- 6. Using needlenose pliers, remove clamping disk holding diaphragm and Teflon protection wafer onto clamping rod, and remove the diaphragm and Teflon wafer.



Figure 5–3. Rebuilding the Pump

7. Assemble pump by following above procedure in reverse. Refer to the marks you made in Step three to position the components. Make sure not to over-tighten clamping disk. Be sure that the Teflon side of diaphragm faces up and that the flapper valves cover the holes of the top and bottom plate.

- 8. Re-install the cover, reconnect the power cord, and turn the instrument ON.
- 9. Check that the reaction chamber pressure reads between 150 and 250 mmHg.

## Chapter 6 Troubleshooting

This instrument has been designed to achieve a high level of reliability. In the event of problems or failure, the troubleshooting guidelines, board-level connection diagrams, connector pin descriptions, and testing procedures presented in this chapter should be helpful in isolating and identifying problems.

For additional fault location information refer to the "Preventive Maintenance" chapter in this manual.

The service mode in the "Operation" chapter includes parameters and functions that are useful when making adjustments or diagnosing problems.

The Technical Support Department at Thermo Fisher Scientific can also be consulted in the event of problems. See "Service Locations" on page 6-21 for contact information. In any correspondence with the factory, please note both the serial number and program number of the instrument.

This chapter provides the following troubleshooting and service support information:

- "Safety Precautions" on page 6-1
- "Troubleshooting Guides" on page 6-1
- "Board-Level Connection Diagrams" on page 6-6
- "Connector Pin Descriptions" on page 6-8
- "Service Locations" on page 6-21

#### **Safety Precautions**

#### Troubleshooting Guides

Read the safety precautions in the Preface and "Servicing" chapter before performing any actions listed in this chapter.

The troubleshooting guides presented in this chapter are designed to help isolate and identify instrument problems.

Table 6–1 provides general troubleshooting information and indicates the checks that you should perform if you experience an instrument problem.

Table 6–2 lists all the alarm messages you may see on the graphics display and provides recommendations about how to resolve the alarm condition. See "Alarms Menu" in the "Operation" chapter for detailed information.

	-	
Malfunction	Possible Cause	Action
Does not start up	No power	Check that the instrument is plugged into the proper source (115 or 220 VAC, 50 or 60Hz).
		Check instrument fuses.
	Power Supply	Check voltages using a digital voltmeter.
No output signal (or very low output)	No sample gas reaching the analyzer	Check input sample flow.
	Ruptured pump diaphragm	Rebuild pump head.
	Blocked sample capillary	Unplug power cord. Clean or replace capillary.
	No ozone reaching the reaction chamber	Check the Instrument Control menu to see if the ozonator is ON. If it is ON, check dry air supply.
No output signal	Disconnected or defective input or high voltage supply	Unplug power cord. Check tha cables are connected properly Check cable resistance.
	Analyzer not calibrated	Recalibrate.
	Defective ±15 volt	Check supply voltages (Diagnostics menu).
Calibration Drift	Dryer to ozonator depleted	Replace.
	Line voltage fluctuations	Check to see if line voltage is within specifications.
	Defective pump	Rebuild pump.
	Unstable NO or $NO_2$ source	Replace.
	Clogged capillaries	Unplug power cord. Clean or replace capillary.
	Clogged sample air filter	Replace filter element.
Excessive Noise	Defective or low sensitivity PMT	Unplug power cord. Remove PMT. Install known good PMT Plug in power cord. Check performance.
	Defective input board	Replace board.

Table 6–1. Troubleshooting - General Guide

Malfunction	Possible Cause	Action
	Defective cooler	Check temperature (less than - 2 °C at $T_{amb}$ = 25 °C).
Non-linear response	Incorrect calibration source	Verify accuracy of multipoint calibration source gas.
	Leak in sample probe line	Check for variable dilution.
Excessive response time	Partially blocked sample capillary	Unplug power cord. Clean or replace capillary.
	Hang up/blockage in sample filter	Change element.
Improper converter operation	Questionable calibration gas	Verify accuracy.
	Converter temperature too high or too low	Temperature should be approximately 325 °C for Molybdenum, 625 °C for stainless steel.
	Low line voltage	Check to see if line voltage is within specifications.
	Molybdenum consumed	Replace Molybdenum converter cartridge.

#### Table 6–2. Troubleshooting - Alarm Messages

Alarm Message	Possible Cause	Action
Alarm - Internal Temp	Check fan operation	Replace fan if not operating properly.
	Check fan filter	Clean or replace foam filter, refer to "Preventive Maintenance" chapter in this manual.
Alarm - Chamber Temp	Chamber temperature below set point of 50 °C	Check 10K ohm thermistor, replace if bad.
		Check temperature control board to insure the LEDs are coming on. If not, temperature control board could be defective.
Alarm - Cooler Temp	Check fan operation	Replace defective fan.
	Check fan filter	Clean or replace foam filter.
Cooler reads 80 °C	Bad cooler	Replace cooler.
	Cooler does not hold set point of -3 °C	Replace cooler — thermoelectric module inside cooler failed.
	Cooler reads -20 °C	Replace cooler – thermocouple bad.
Alarm - Conv. Temp	Converter temperature low	Molybdenum converter should be hot to the touch, if not the heater may have failed. Check that converter temp. set point is approximately 325 °C. Check that voltage to the heater is 115 VAC.
Alarm - Perm Gas Temp	Incorrect Perm oven set temperature or alarm settings	Check that the alarm settings match the set temp.
	Perm oven heater thermistor or gas thermistor is out of calibration	Calibrate the thermistor.
	Perm oven failure	Replace the Perm oven.
Alarm - Pressure	High pressure indication	Check the pump for a tear in the diaphragm, replace with pump repair kit if necessary. Refer to "Preventive Maintenance" chapter in this manual. Check that capillaries are properly installed and O- rings are in good shape.

**Troubleshooting** Troubleshooting Guides

Alarm Message	Possible Cause	Action
		Replace if necessary. Check flow system for leaks.
Alarm - Flow	Flow low	Check sample capillary (0.020 inch ID) for blockage. Replace as necessary.
		If using sample particulate filter make sure it is not blocked. Disconnect sample particulate filter from the sample bulkhead, if flow increases, replace the filter.
Alarm – Ozonator Flow	Ozone flow low	Check ozone capillary (0.008 inch ID) for blockage. Replace as necessary.
Alarm - Zero Check Alarm - Span Check	Instrument out of calibration	Recalibrate instrument.
Alarm - Zero Autocal Alarm - Span Autocal		Check gas supply. Perform manual calibration.
Alarm – NO, NO <sub>2</sub> , NO <sub>x</sub> Conc.	Concentration has exceeded range limit	Check to insure range corresponds with expected value. If not select proper range.
	Concentration low	Check user-defined low set point, set to zero.
Alarm - Motherboard Status Alarm - Interface Status Alarm - I/O Exp Status	Internal cables not connected properly Board is defective	Check that all internal cables are connected properly. Recycle AC power to instrument. If still alarming, change board.

#### Board-Level Connection Diagrams

Figure 6–1 and Figure 6–2 are board-level connection diagrams for the common electronics and measurement system. These illustrations can be used along with the connector pin descriptions in Table 6–3 through Table 6–9 to troubleshoot board-level faults.



Figure 6–1. Board-Level Connection Diagram - Common Electronics



Figure 6-2. Board-Level Connection Diagram - Measurement System

### Connector Pin Descriptions

The connector pin descriptions in Table 6–3 through Table 6–9 can be used along with the board-level connection diagrams to troubleshoot board-level faults.

"Motherboard Connector Pin Descriptions" on page 6-8

"Measurement Interface Board Connector Pin Descriptions" on page 6-13

"Front Panel Board Connector Pin Diagram" on page 6-15

"I/O Expansion Board (Optional) Connector Pin Descriptions" on page 6-17

"Digital Output Board Connector Pin Descriptions" on page 6-18

"Input Board Connector Pin Descriptions" on page 6-20

"Temperature Control Board Connector Pin Descriptions" on page 6-20

Connector Label	Reference Designator	Pin	Signal Description
INTF DATA	J1	1	Ground
		2	+RS485 to Interface Board
		3	-RS485 to Interface Board
10-BASE-T	J2	1	Ethernet Output (+)
		2	Ethernet Output (-)
		3	Ethernet Input (+)
		4	NC
		5	NC
		6	Ethernet Input (-)
		7	NC
		8	NC
EXPANSION BD	J3	1	+5V
		2	+24V
		3	+24V
		4	Ground
		5	Ground
		6	Ground
		7	+RS485 to Expansion Board

Table 6–3. Motherboard Connector Pin Descriptions

# **Troubleshooting** Connector Pin Descriptions

Connector Label	Reference Designator	Pin	Signal Description
		8	-RS485 to Expansion Board
SPARE DATA	J4	1	+5V
		2	+24V
		3	+24V
		4	Ground
		5	Ground
		6	Ground
		7	+RS485 to Spare Board
		8	-RS485 to Spare Board
I/O	J5	1	Power Fail Relay N.C. Contact
		2	Ground
		3	TTL Input 1
		4	TTL Input 2
		5	Ground
		6	TTL Input 5
		7	TTL Input 7
		8	TTL Input 8
		9	TTL Input 10
		10	Ground
		11	TTL Input 13
		12	TTL Input 15
		13	Ground
		14	Analog Voltage 1
		15	Analog Voltage 3
		16	Ground
		17	Analog Voltage 5
		18	Ground
		19	Ground
		20	Power Fail Relay COM
		21	Power Fail Relay N.O. Contact
		22	Ground
		23	TTL Input 3
		24	TTL Input 4
		25	TTL Input 6

Connector Label	Reference Designator	Pin	Signal Description
		26	Ground
		27	TTL Input 9
		28	TTL Input 11
		29	TTL Input 12
		30	TTL Input 14
		31	TTL Input 16
		32	Ground
		33	Analog Voltage 2
		34	Analog Voltage 4
		35	Ground
		36	Analog Voltage 6
		37	Ground
SER EN	J7	1	Serial Enable Jumper
		2	+3.3V
24V IN	J10	1	+24V
		2	Ground
DIGITAL I/O	J14	1	+5V
		2	+24V
		3	+24V
		4	Ground
		5	Ground
		6	Ground
		7	SPI Reset
		8	SPI Input
		9	SPI Output
		10	SPI Board Select
		11	SPI Clock
EXT. RS485	J15	1	-RS485 to Rear Panel
		2	-RS485 to Rear Panel
		3	+5V
		4	+5V
		5	+5V
		6	Ground

#### **Troubleshooting** Connector Pin Descriptions

Connector Label	Reference Designator	Pin	Signal Description
		8	Ground
		9	NC
		10	NC
		11	+24
		12	+24
		13	+24
		14	+24
		15	+24
24 MONITOR	J17	1	24V Power Monitor
		2	Ground
FRONT PANEL BD	J18	1	Ground
		2	Ground
		3	LCLK – LCD Signal
		4	Ground
		5	Ground
		6	LLP – LCD Signal
		7	LFLM – LCD Signal
		8	LD4 – LCD Signal
		9	LDO — LCD Signal
		10	LD5 – LCD Signal
		11	LD1 – LCD Signal
		12	LD6 – LCD Signal
		13	LD2 – LCD Signal
		14	LD7 – LCD Signal
		15	LD3 – LCD Signal
		16	LCD Bias Voltagel
		17	+5V
		18	Ground
		19	Ground
		20	LCD_ONOFF – LCD Signal
		21	Keypad Row 2 Input
		22	Keypad Row 1 Input
		23	Keypad Row 4 Input

Connector Label	Reference Designator	Pin	Signal Description
		24	Keypad Row 3 Input
		25	Keypad Col 2 Select
		26	Keypad Col 1 Select
		27	Keypad Col 4 Select
		28	Keypad Col 3 Select
		29	Ground
		30	Ground
		31	Ground
		32	Ground
		33	+24V
		34	+24V
RS232/RS485:A	P1:A	1	NC
		2	Serial Port 1 RX (-RS485 IN)
		3	Serial Port 1 TX (-RS485 OUT)
		4	NC
		5	Ground
		6	NC
		7	Serial Port 1 RTS (+RS485 OUT)
		8	Serial Port 1 CTS (+RS485 IN)
		9	NC
RS232/RS485:B	P1:B	1	NC
		2	Serial Port 2 RX (-RS485 IN)
		3	Serial Port 2 TX (-RS485 OUT)
		4	NC
		5	Ground
		6	NC
		7	Serial Port 2 RTS (+RS485 OUT)
		8	Serial Port 2 CTS (+RS485 IN)
		9	NC
AC IN	PJ1	1	AC-HOT
		2	AC-NEUT
		3	AC-Ground
AC 24VPWR	PJ2	1	AC-HOT
		2	AC-NEUT

Connector Label	Reference Designator	Pin	Signal Description
		3	AC-Ground
AC INTF BD	PJ3	1	AC-HOT
		2	AC-NEUT
		3	AC-Ground

#### Table 6-4. Measurement Interface Board Connector Pin Descriptions

	m Motherboard
3 -RS485 from	
PRES MJ3 1 Pressure Se	n Motherboard
	ensor Input
2 Ground	
3 +15V	
4 -15V	
INPUT BD MJ8 1 +15V	
2 Ground	
3 -15V	
4 +5V	
5 Ground	
6 Measureme	ent Frequency Output
7 Amplifier Ze	ero Adjust Voltage
8 SPI Output	
9 SPI Clock	
10 SPI Board S	elect
AMB TEMP MJ9 1 Ambient Te	mperature Thermistor
2 Ground	
HVPS MJ10 1 HV Power S	Supply Voltage Adjust
2 Ground	
3 HV Power S	Supply On/Off
4 Ground	
	Supply Voltage Monitor

Connector Label	Reference Designator	Pin	Signal Description
		7	Ground
FLOW SW	MJ14	1	NC
		2	Ground
		3	Ozonator Flow OK Switch
FLOW	MJ15	1	Flow Sensor Input
		2	Ground
		3	+15V
		4	-15V
		5	Ground
TEMP CTRL	MJ17	1	Bench Temperature Input
		2	Ground
		3	-15V
		4	Converter Heater On/Off
		5	Converter Temperature Input
		6	+15V_PWR
OZONATOR	OJ1	1	Ozonator Output A
		2	Ozonator Output B
24V IN	P1	1	+24V
		2	Ground
AC PUMP	PJ1	1	AC-HOT
		2	AC-NEUT
		3	AC-Ground
FAN 1	PJ4	1	+24V
		2	Ground
FAN 2	PJ5	1	+24V
		2	Ground
AC IN	PJ6	1	AC-HOT
		2	AC-NEUT
		3	AC-Ground
COOLER	PJ7	1	Cooler Thermistor
		2	Ground
		3	+15V_PWR
		4	Cooler On/Off Control
AC TEMP	PJ8	1	AC-HOT

Connector Label	Reference Designator	Pin	Signal Description
		2	AC-NEUT
		3	AC-Ground
NO/NOX SOL.	PJ9	1	+24V
		2	NO/NOX Solenoid Control
SAMPLE SOL.	PJ10	1	+24V
		2	Sample Solenoid Control
Z/S SOL.	PJ11	1	+24V
		2	Zero/Span Solenoid Control
SPARE1 SOL.	PJ12	1	+24V
		2	Spare 1 Solenoid Control
SPARE2 SOL.	PJ13	1	+24V
		2	Spare 2 Solenoid Control
PERM OVEN THERM	POJ1	1	Perm Oven Gas Thermistor
		2	Ground
PERM OVEN	POJ3	1	Perm Oven Heater On/Off
		2	+15V_PWR
		3	Perm Oven Thermistor
		4	Ground

 Table 6–5.
 Front Panel Board Connector Pin Diagram

Connector Label	Reference Designator	Pin	Signal Description
MOTHER BOARD	J1	1	Ground
		2	Ground
		3	LCLK – LCD Signal
		4	Ground
		5	Ground
		6	LLP – LCD Signal
		7	LFLM — LCD Signal
		8	LD4 – LCD Signal
		9	LDO — LCD Signal
		10	LD5 – LCD Signal
		11	LD1 — LCD Signal

Connector Label	Reference Designator	Pin	Signal Description
		12	LD6 – LCD Signal
		13	LD2 – LCD Signal
		14	LD7 – LCD Signal
		15	LD3 – LCD Signal
		16	LCD Bias Voltage
		17	+5V
		18	Ground
		19	Ground
		20	LCD_ONOFF – LCD Signal
		21	Keypad Row 2 Input
		22	Keypad Row 1 Input
		23	Keypad Row 4 Input
		24	Keypad Row 3 Input
		25	Keypad Col 2 Select
		26	Keypad Col 1 Select
		27	Keypad Col 4 Select
		28	Keypad Col 3 Select
		29	Ground
		30	Ground
		31	Ground
		32	Ground
		33	+24V
		34	+24V
LCD DATA	J2	1	LD0_5V – LCD Signal
		2	LD1_5V – LCD Signal
		3	LD2_5V – LCD Signal
		4	LD3_ONOFF_5V – LCD Signal
		5	LCD_ONOFF_5V – LCD Signal
		6	LFLM_5V – LCD Signal
		7	NC
		8	LLP_5V – LCD Signal
		9	LCLK_5V – LCD Signal
		10	+5V
		11	Ground

Connector Label	Reference Designator	Pin	Signal Description
		12	-25V
		13	LCD Bias Voltage
		14	Ground
KEYBOARD	J3	1	Keypad Row 1 Input
		2	Keypad Row 2 Input
		3	Keypad Row 3 Input
		4	Keypad Row 4 Input
		5	Keypad Col 1 Select
		6	Keypad Col 2 Select
		7	Keypad Col 3 Select
		8	Keypad Col 4 Select
LCD BACKLIGHT	J4	1	+5V Supply
		2	NC
		3	Ground

#### **Table 6–6.** I/O Expansion Board (Optional) Connector Pin Descriptions

Connector Label	Reference Designator	Pin	Signal Description
EXPANSION I/O	J1	1	Analog Voltage Input 1
		2	Analog Voltage Input 2
		3	Analog Voltage Input 3
		4	Ground
		5	Analog Voltage Input 4
		6	Analog Voltage Input 5
		7	Analog Voltage Input 6
		8	Ground
		9	Analog Voltage Input 7
		10	Analog Voltage Input 8
		11	Ground
		12	NC
		13	Current Output Return
		14	Ground
		15	Current Output 1

Connector Label	Reference Designator	Pin	Signal Description
		16	Current Output Return
		17	Current Output 2
		18	Current Output Return
		19	Current Output 3
		20	Current Output Return
		21	Current Output 4
		22	Current Output Return
		23	Current Output 5
		24	Current Output Return
		25	Current Output 6
MOTHER BD	J2	1	+5V
		2	+24V
		3	+24V
		4	Ground
		5	Ground
		6	Ground
		7	+RS485 to Motherboard
		8	-RS485 to Motherboard

#### Table 6–7. Digital Output Board Connector Pin Descriptions

Connector Label	Reference Designator	Pin	Signal Description
MOTHER BD	J1	1	+5V
		2	+24V
		3	+24V
		4	Ground
		5	Ground
		6	Ground
		7	SPI Reset
		8	SPI Input
		9	SPI Output
		10	SPI Board Select
		11	SPI Clock
#### **Troubleshooting** Connector Pin Descriptions

Connector Label	Reference Designator	Pin	Signal Description
DIGITAL OUTPUTS	J2	1	Relay 1 Contact a
		2	Relay 2 Contact a
		3	Relay 3 Contact a
		4	Relay 4 Contact a
		5	Relay 5 Contact a
		6	Relay 6 Contact a
		7	Relay 7 Contact a
		8	Relay 8 Contact a
		9	Relay 9 Contact a
		10	Relay 10 Contact a
		11	NC
		12	Solenoid Drive Output 1
		13	Solenoid Drive Output 2
		14	Solenoid Drive Output 3
		15	Solenoid Drive Output 4
		16	Solenoid Drive Output 5
		17	Solenoid Drive Output 6
		18	Solenoid Drive Output 7
		19	Solenoid Drive Output 8
		20	Relay 1 Contact b
		21	Relay 2 Contact b
		22	Relay 3 Contact b
		23	Relay 4 Contact b
		24	Relay 5 Contact b
		25	Relay 6 Contact b
		26	Relay 7 Contact b
		27	Relay 8 Contact b
		28	Relay 9 Contact b
		29	Relay 10 Contact b
		30	+24V
		31	+24V
		32	+24V
		33	+24V

Connector Label	Reference Designator	Pin	Signal Description
		34	+24V
		35	+24V
		36	+24V
		37	+24V

Connector Label	Reference Designator	Pin	Signal Description
PMT IN	J1	1	PMT Input
		2	Ground
INTF BD	J2	1	+15V
		2	Ground
		3	-15V
		4	+5V
		5	Ground
		6	Measurement Frequency Output
		7	Amplifier Zero Adjust Voltage
		8	SPI Input
		9	SPI Clock
		10	SPI Board Select

#### Table 6–8. Input Board Connector Pin Descriptions

#### **Table 6–9.** Temperature Control Board Connector Pin Descriptions

Connector Label	Reference Designator	Pin	Signal Description
INTERFACE	J1	1	Bench Temperature Input
		2	Ground
		3	-15V
		4	Converter Heater On/Off
		5	Converter Temperature Input
		6	+15V_PWR
AC INPUT	J2	1	AC-HOT
		2	AC-NEUT
BENCH	J3	1	Bench Heater AC Output

Connector Label	Reference Designator	Pin	Signal Description
		2	Bench Heater AC Return
		3	Ground
		4	Bench Thermistor
CONVERTER	J4	1	Ground
		2	Converter Heater AC Output
		3	Converter Heater AC Return
CONV TC	J5	1	Converter Thermocouple TC
		2	Converter Thermocouple TC+
SS TEMP	J6	1	SS Temperature Range Jumper A
		2	SS Temperature Range Jumper B

# Service Locations

For additional assistance, service is available from exclusive distributors worldwide. Contact one of the phone numbers below for product support and technical information or visit us on the web at www.thermo.com/aqi.

1-866-282-0430 Toll Free 1-508-520-0430 International

# Chapter 7 Servicing

This chapter explains how to replace the Model 42*i* subassemblies. It assumes that a subassembly has been identified as defective and needs to be replaced.

For fault location information refer to the "Preventive Maintenance" chapter and the "Troubleshooting" chapter in this manual.

The service mode in the "Operation" chapter also includes parameters and functions that are useful when making adjustments or diagnosing problems.

For additional service assistance, see "Service Locations" at the end of this chapter.

This chapter includes the following parts information and component replacement procedures:

"Safety Precautions" on page 7-2

"Firmware Updates" on page 7-4

"Accessing the Service Mode" on page 7-4

"Replacement Parts List" on page 7-4

"Cable List" on page 7-6

"External Device Connection Components" on page 7-6

"Removing the Measurement Bench and Lowering the Partition Panel" on page 7-8

"Pump Replacement" on page 7-9

"Fan Replacement" on page 7-10

"PMT Cooler and Reaction Chamber Assembly Replacement" on page 7-11

"Photomultiplier Tube Replacement" on page 7-13

"PMT High Voltage Power Supply Replacement" on page 7-14

"PMT Voltage Adjustment" on page 7-16

"Reaction Chamber Cleaning or Removal" on page 7-17

"NO2-to-NO Converter Replacement" on page 7-18 "Solenoid Valve Replacement" on page 7-20 "Ozonator Assembly Replacement" on page 7-21 "Ozonator Transformer Replacement" on page 7-23 "Input Board Replacement" on page 7-23 "Input Board Calibration" on page 7-25 "DC Power Supply Replacement" on page 7-25 "Analog Output Testing" on page 7-26 "Analog Output Calibration" on page 7-29 "Analog Input Calibration" on page 7-30 "Pressure Transducer Assembly Replacement" on page 7-31 "Pressure Transducer Calibration" on page 7-32 "Temperature Control Board Replacement" on page 7-34 "Ambient Temperature Calibration" on page 7-35 "Fuse Replacement" on page 7-36 "Scrubber Replacement" on page 7-36 "I/O Expansion Board (Optional) Replacement" on page 7-37 "Digital Output Board Replacement" on page 7-39 "Motherboard Replacement" on page 7-39 "Measurement Interface Board Replacement" on page 7-40 "Flow Transducer Replacement" on page 7-41 "Flow Transducer Calibration" on page 7-42 "Front Panel Board Replacement" on page 7-44 "LCD Module Replacement" on page 7-45 "Service Locations" on page 7-46

#### **Safety Precautions**

Read the safety precautions before beginning any procedures in this chapter.



**WARNING** The service procedures in this manual are restricted to qualified service representatives. ▲

If the equipment is operated in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.  $\blacktriangle$ 



**CAUTION** Carefully observe the instructions in each procedure. Avoid contact with converter heated components. ▲

Allow converter to cool to room temperature before handling converter components. ▲



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component (Figure 7–1). If an antistatic wrist strap is not available, be sure to touch a grounded metal object before touching any internal components. When the instrument is unplugged, the chassis is not at earth ground. ▲

Handle all printed circuit boards by the edges.

Do not point the photomultiplier tube at a light source. This can permanently damage the tube.  $\blacktriangle$ 

Do not remove the LCD panel or frame from the LCD module. ▲

The LCD polarizing plate is very fragile, handle it carefully. ▲

Do not wipe the LCD polarizing plate with a dry cloth, it may easily scratch the plate.  $\blacktriangle$ 

Do not use alcohol, acetone, MEK or other Ketone based or aromatic solvents to clean the LCD module, use a soft cloth moistened with a naphtha cleaning solvent. ▲

Do not place the LCD module near organic solvents or corrosive gases.

Do not shake or jolt the LCD module.  $\blacktriangle$ 



Figure 7–1. Properly Grounded Antistatic Wrist Strap

#### **Firmware Updates**

The firmware can be updated by the user in the field via the serial port or over the Ethernet. This includes both the main processor firmware and the firmware in all low-level processors. Refer to the *iPort* manual for the firmware update procedure.

# Accessing the Service Mode

If the Service Menu is not displayed on the Main Menu, use the following procedure to display it.

1. At the Main Menu, press to scroll to Instrument Controls > press + to scroll to Service Mode > and press +.

The Service Mode screen appears.

- 2. Press 🔶 to toggle the Service Mode to ON.
- 3. Press > to return to the Main Menu.
- 4. Return to the procedure.

#### Replacement Parts List

Table 7–1 lists the replacement parts for the Model 42i major subassemblies. Refer to Figure 7–2 to identify the component location.

 Table 7–1. Model 42i Replacement Parts

Part Number	Description
100480-00	Front Panel Pushbutton Board
101491-01	Processor Board
100533-00	Motherboard
100539-00	Digital Output Board
100542-00	I/O Expansion Board (Optional)

Part Number	Description
102340-00	Front Panel Connector Board
102496-00	Front Panel Display
101399-00	Transformer, 220-240VAC (Optional)
101863-00	Transformer, 100VAC (Optional)
100536-00	Measurement Interface Board
100856-00	Temperature Control Board (Molybdenum Converter)
100856-01	Temperature Control Board (Stainless Steel Converter)
101167-00	Input Board Assembly
9973	Ozonator Assembly
101419-00	Ozonator Transformer
101023-00	Pressure Transducer
101021-00	Flow Transducer (Sample)
101620-00	Flow Switch (Ozone)
9367	Photomultiplier Tube (PMT)
101024-00	PMT High Voltage Power Supply
101324-00	PMT Base Socket Assembly
101390-00	Solenoid Valve
101020-00	Cooler Assembly
102648-01	Reaction Chamber Assembly
101009-00	NO <sub>2</sub> -to-NO Converter Assembly (Molybdenum 110VAC)
101214-00	NO <sub>2</sub> -to-NO Converter Assembly (Stainless Steel 110VAC)
9269	Molybdenum Converter Cartridge
101011-00	Pump 100VAC w/Plate and Fittings
9267	Pump Repair Kit (for 101011-00)
101055-00	AC Receptacle Assembly
101681-00	Power Supply Assembly, 24VDC, w/Base Plate and Screws
100907-00	Fan, 24VDC
8630	Fan Filter
101905-00	Fuse, 250VAC, 4.0 Amp, SlowBlow (for 100VAC and 110VAC models)
101904-00	Fuse, 250VAC, 2.0 Amp, SlowBlow (for 220-240VAC models)
101688-00	Ambient Temperature Connector with Thermistor
4119	Capillary 0.008-inch ID
4127	Capillary 0.015-inch ID
6556	Optical Filter Kit (Red Filter, Quartz Window, Rubber Washer)

Part Number	Description
6998	DriRite

# **Cable List** Table 7–2 describes the Model 42*i* spare cables. See the "Troubleshooting" chapter for associated connection diagrams and board connector pin descriptions.

Part Number	Description
101036-00	DC Power Supply 24V Output
101037-00	115VAC Supply to Interface Board
101048-00	RS-485/Data
101038-00	AC Power Switch to Motherboard
101364-00	DC Power Supply Status Monitor
101054-00	Motherboard to Front Panel Board
101035-00	DC Power Supply AC Input
101033-00	AC from Receptacle
101377-00	AC to Power Switch
101267-00	Fan Power Cable
101346-00	Temperature Control
101355-00	Signal Output Ribbon
101695-00	Permeation Oven
101050-00	Heater Power
101055-00	Main AC Receptacle Assembly
102057-00	AC to External Pump

# External Device Connection Components

Table 7–3 lists the standard and optional cables and components used for connecting external devices such as PCs and data loggers to an *i*Series instrument.

#### Table 7–3. External Device Connection Components

Part Number	Description
102562-00	Terminal Block and Cable Kit (DB25) (optional)
102556-00	Terminal Block and Cable Kit (DB37) (optional)
102645-00	Cable, DB37M to Open End Cable, Six Feet (optional)
102646-00	Cable, DB37F to Open End, Six Feet (optional)

Part Number	Description
102659-00	Cable, DB25M to Open End, Six Feet (optional)
6219	Cable, RS-232 (optional)
102888-00	Terminal Board PCB Assembly, DB37F (standard with all instruments)
102891-00	Terminal Board PCB Assembly, DB37M (standard with all instruments)
103084-00	Terminal Board PCB Assembly, DB25M (optional) Included with optional I/O Expansion Board in all instruments.



Figure 7–2. Component Layout

# Removing the<br/>Measurement Bench<br/>and Lowering the<br/>Partition PanelThe measurement bench can be removed and the partition panel can be<br/>lowered to improve access to connectors and components. Refer to the<br/>lowered to improve access to connectors and components. Refer to the<br/>following steps when a procedure requires lowering the partition panel (see<br/>Figure 7–3).





Equipment Required:

Philips screwdriver



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

1. Turn instrument OFF and unplug the power cord.

- 2. If the instrument is mounted in a rack, remove it from the rack.
- 3. Remove the cover.
- 4. Disconnect the plumbing connections at the rear of the measurement bench.
- 5. Disconnect the three connectors that pass through the center of the partition panel.
- 6. Remove two screws from the left side of the case (viewed from front).
- 7. Remove one screw from the bottom front of the case.
- 8. Remove one screw from the top front of the partition panel.
- 9. While holding the case securely, loosen the captive screw at the rear of the measurement bench, and pull the measurement bench from the rear of the case.
- 10. Remove the screw at the top rear of the partition panel securing the top of partition panel to the measurement bench, and lower the panel being careful not to put excessive tension on the cables.
- 11. Replace the measurement bench by following previous steps in reverse.

#### **Pump Replacement**

Use the following procedure to replace the pump (see Figure 7–4).To rebuild the pump, see "Pump Rebuilding" in the "Preventive Maintenance" chapter.

**Equipment Required:** 

110V pump

Screwdriver



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

1. Turn instrument OFF, unplug the power cord, and remove the cover

2. Disconnect pump power line from AC PUMP connector on the measurement interface board.



Figure 7–4. Replacing the Pump

- 3. Remove both lines from pump.
- 4. Loosen the four captive screws on the mounting plate and remove the pump.
- 5. Install the new pump by following the previous steps in reverse.

#### Fan Replacement

Use the following procedure to replace the fan (Figure 7-5).

Equipment Required:

Fan

Philips screwdriver



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

1. Turn instrument OFF, unplug the power cord, and remove the cover.

- 2. Remove the fan guard from the fan and remove the filter.
- 3. Pull the power connectors off the fan.
- 4. Remove the four fan mounting screws and remove the fan.
- 5. Install a new fan following the previous steps in reverse.





PMT Cooler and Reaction Chamber Assembly Replacement

Use the following procedure to replace the PMT cooler and reaction chamber assembly (see Figure 7-6).

Equipment Required: PMT cooler Wrench, 7/16-inch Wrench, 9/16-inch Nut driver, 1/4-inch Philips screwdriver Wire cutters



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Refer to "Removing the Measurement Bench and Lowering the Partition Panel" in this chapter to lower the partition panel, then proceed to the next step below.
- 2. Disconnect the reaction chamber connector from the temperature control board.
- 3. Snap off the temperature control board from the board mounts.
- 4. Remove the four screws securing the cooler shroud to the rear panel and remove the shroud.



Figure 7–6. PMT Cooler and Reaction Chamber

5. Disconnect plumbing connections from the reaction chamber.

- 6. Disconnect the cables from the PMT high voltage power supply, the input board, and the measurement interface board. Remove all tie-wraps securing the cables.
- 7. Loosen four captive screws holding cooler to floor plate and remove the cooler assembly with the reaction chamber.

**Note** If only the cooler is being replaced, remove the PMT and reaction chamber from the old cooler and install them on the new cooler. ▲

8. Install new cooler by following previous steps in reverse.

Note Fasten knurled fittings on reaction chamber finger tight. ▲

Make sure that the heat shrink covered tubing between the reaction chamber and the converter is light tight at the connections.  $\blacktriangle$ 

9. Re-install the measurement bench. Refer to "Removing the Measurement Bench and Lowering the Partition Panel" in this chapter.

#### Photomultiplier Tube Replacement

Use the following procedure to replace the PMT tube. Equipment Required:

Photomultiplier tube and PMT base

Nut driver, 5/16-inch

Flat blade screwdriver

Philips screwdriver, small



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Turn instrument OFF, unplug the power cord, and remove the cover.
- 2. Disconnect the high voltage cable from the PMT power supply and unplug the BNC cable from the Input Board.

3. Remove six external screws holding PMT cover plate and the four screws holding the PMT shroud to the panel and remove the PMT cover plate (Figure 7–7). If the cooler fan is attached, unplug the fan power cord if necessary.



Figure 7–7. Replacing the PMT

4. Remove the three retaining screws holding PMT base assembly to the cooler using a 5/16-inch nut driver.



**Equipment Damage** Do not point the photomultiplier tube at a light source. This can permanently damage the tube.  $\blacktriangle$ 

- 5. Pull the PMT and PMT base from cooler assembly by twisting it slightly back and forth.
- 6. To install PMT, follow previous steps in reverse making sure to backfill the cooler with dry air or nitrogen prior to replacing the PMT.
- 7. Perform a photomultiplier tube calibration. See "PMT Voltage Adjustment" in the "Operation" chapter.

## PMT High Voltage Power Supply Replacement

Use the following procedure to replace the PMT high voltage power supply (Figure 7–8).

Equipment Required:

PMT high voltage power supply

Nut driver, 1/4-inch

Philips screwdriver



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Turn instrument OFF, unplug the power cord, and remove the cover.
- 2. Disconnect the two PMT high voltage supply cables.
- 3. Loosen the two retaining screws securing the assembly bracket to the floor plate and slide the assembly towards the rear slightly and lift it off the base screws.
- 4. Loosen two screws on the input box assembly and lift the input box assembly off the power supply.
- 5. Remove the four screws securing the power supply to the bracket and remove the power supply.



Figure 7–8. Replacing the PMT HVPS

PMT Voltage Adjustment

Use the following procedure to adjust the PMT voltage after switching from standard to extended ranges or vice versa.

7. Recalibrate the instrument. Refer to the calibration procedures in the

6. To install the power supply, follow the previous steps in reverse.

"Calibration" chapter.



**WARNING** The service procedures in this manual are restricted to qualified service representatives. ▲

- 1. Select the NO, NO<sub>2</sub>, and NO<sub>x</sub> ranges. Refer to "Range Menu" in the "Operation" chapter.
- 2. Set the NO BKG and NO<sub>x</sub> BKG calibration factors to 0.0. Refer to "Calibration Factors Menu" in the "Operation" chapter.
- 3. Set the NO COEF, NO<sub>x</sub> COEF, and NO<sub>2</sub> COEF to 1.000.
- 4. Set the Averaging Time to 10 seconds. Refer to "Averaging Time" in the "Operation" chapter.
- 5. Connect the calibration gas and allow the instrument to sample calibration gas until the reading stabilizes.
- 6. From the Main Menu, press → to scroll to Service > press → to scroll to PMT Voltage Adjustment > and press →.

The Set PMT Voltage screen appears.

**Note** If Service Mode is not displayed, refer to "Accessing the Service Mode" on page 7-4, then return to the beginning of this step. ▲

At the Set PMT Voltage screen, use to increment/decrement the counts until the instrument displays the calibration gas concentration value.

#### **Reaction Chamber Cleaning or Removal**

Use the following procedure to clean or remove the reaction chamber (see Figure 7–9).

Equipment Required: Allen Wrench, 9/64-inch Wrench, 7/16-inch Wrench, 9/16-inch



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Remove PMT cooler as described in "PMT Cooler and Reaction Chamber Assembly Replacement" in this chapter.
- 2. Disconnect all plumbing connections from the reaction chamber.
- 3. Remove the three socket head screws fastening front of reaction chamber to rear (Figure 7–9). This exposes the inner surfaces of both sections of the reaction chamber and the quartz window. To clean these surfaces use cotton swabs and methanol.
- 4. To continue removing rear of reaction chamber remove the three socket head screws holding it to cooler, being careful to keep quartz window and red filter in cooler body.
- 5. To reinstall reaction chamber, follow previous steps in reverse, making sure to backfill the cooler with dry air or nitrogen prior to installing reaction chamber.
- 6. Re-install the measurement bench. Refer to "Removing the Measurement Bench and Lowering the Partition Panel" in this chapter.



Figure 7–9. Cleaning or Removing the Reaction Chamber

#### NO<sub>2</sub>-to-NO Converter Replacement

Use the following procedure to replace the converter (Figure 7–10). Equipment Required: NO<sub>2</sub>-to-NO Converter Wrench, 7/16-inch Wrench, 9/16-inch Wrench, 1/2-inch Wrench, 5/8-inch Screwdriver Nut driver, 1/4-inch Nut driver, 5/16-inch



**CAUTION** Avoid contact with converter heated components. Allow converter to cool to room temperature before handling converter components. ▲



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Turn instrument OFF, unplug the power cord, and remove the cover.
- 2. Allow converter to cool to room temperature to prevent contact with heated components.
- 3. Disconnect plumbing at converter inlet and outlet.
- 4. Disconnect thermocouple leads and heater connector from temperature control board.
- 5. Loosen the four captive screws holding converter housing to floor plate.



Figure 7–10. NO<sub>2</sub>-to-NO Molybdenum Converter Assembly

- 6. Remove the six screws holding the top housing assembly to the bottom half.
- 7. Remove the converter cartridge/heater assembly from the bottom housing assembly.
- 8. Loosen the heater clamp, pry heater apart no wider than necessary and remove the converter cartridge noting the proper orientation of heater wires and thermocouple probe.
- 9. To replace converter, follow previous steps in reverse. Note Be sure to wrap the  $O_3$  converter tube snugly around the heater.

#### Solenoid Valve Replacement

Use the following procedure to replace the solenoid valve (Figure 7–11). Equipment Required:

Solenoid valve Wrench, 5/16-inch Philips screwdriver



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component. ▲

- 1. Refer to "Removing the Measurement Bench and Lowering the Partition Panel" in this chapter to lower the partition panel, then proceed to the next step below.
- 2. Disconnect solenoid from the Measurement Interface board (NO/NO $_x$  connector). Note electrical connections to facilitate re-connection.
- 3. Remove plumbing from solenoid. Note plumbing connections to facilitate re-connection.
- 4. Pull solenoid valve from mounting clip.
- 5. To replace solenoid, follow previous steps in reverse.

6. Re-install the measurement bench. Refer to "Removing the Measurement Bench and Lowering the Partition Panel" in this chapter.



Figure 7–11. Replacing the Solenoid Valve

#### Ozonator Assembly Replacement

Use the following procedure to replace the ozonator assembly (Figure 7–12).

Equipment Required:

Ozonator assembly

Wrench, 5/8-inch

Philips screwdriver



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

1. Refer to "Removing the Measurement Bench and Lowering the Partition Panel" in this chapter to lower the partition panel, then proceed to the next step below.

- 2. Carefully disconnect the plumbing at the glass inlet and outlet of the ozonator.
- 3. Disconnect the stainless steel tubing from the flow transducer.
- 4. Loosen the four captive screws securing the ozonator bracket to the floor plate.



Ozonator Assembly – Top View



Figure 7–12. Replacing the Ozonator Assembly

- 5. Remove the two screws securing the ozonator to the ozonator bracket.
- 6. Unplug the ozonator from the ozonator transformer by lifting the ozonator straight up.
- 7. To install the ozonator, follow the previous steps in reverse.

8. Re-install the measurement bench. Refer to "Removing the Measurement Bench and Lowering the Partition Panel" in this chapter.

#### Ozonator Transformer Replacement

Use the following procedure to replace the ozonator transformer (Figure 7–12).

Equipment Required:

Ozonator transformer

Philips screwdriver



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Turn instrument OFF, unplug the power cord, and remove the cover.
- 2. Remove the ozonator assembly as described in "Ozonator Assembly Replacement".
- 3. Disconnect the plug connecting the ozonator transformer to the measurement interface board (OZONATOR connector).
- 4. Remove the four screws holding the ozonator transformer to the ozonator bracket and remove the ozonator transformer.
- 5. To install the ozonator transformer, follow the previous steps in reverse.
- 6. Re-install the measurement bench. Refer to "Removing the Measurement Bench and Lowering the Partition Panel" in this chapter.

#### Input Board Replacement

Use the following procedure to replace the input board (Figure 7–13).

Equipment Required:

Input board

Philips screwdriver



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Refer to "Removing the Measurement Bench and Lowering the Partition Panel" in this chapter to lower the partition panel, then proceed to the next step below.
- 2. Disconnect the coaxial cable with BNC connector and the ribbon cable.
- 3. Loosen the two screws holding the assembly bracket to the floor plate, move the assembly towards the rear, and lift the assembly off the screws.
- 4. Loosen the two screws holding the input box to the assembly bracket and lift the input box off the screws.



Figure 7–13. Replacing the Input Board

- 5. Remove the four screws holding the input board to the input box and remove the input board.
- 6. Install the input board by following the previous steps in reverse.
- 7. Re-install the measurement bench. Refer to "Removing the Measurement Bench and Lowering the Partition Panel" in this chapter.
- 8. Perform an input board calibration. See the "Input Board Calibration" procedure that follows.

# Input Board Calibration

After replacing the input board, use the following procedure to calibrate the input board.



**WARNING** The service procedures in this manual are restricted to qualified service representatives.  $\blacktriangle$ 

The Input Board Calibration screen appears.

**Note** If Service Mode is not displayed, refer to "Accessing the Service Mode" on page 7-4, then return to the beginning of this step.  $\blacktriangle$ 

2. At the Input Board Calibration screen, press 🔶 to select Manual Input Cal, and press 🗲 to calibrate.

The screen displays the frequency at GAIN 1.

- 3. Make a note of the FREQ value displayed at GAIN 1, then press 
  or 
  to change the GAIN to 100.
- 4. At the GAIN 100 screen, use  $\bullet$   $\bullet$  to increment the D/A counts until the FREQ value matches or is slightly above (within 50 counts) the value noted in the previous step.
- 5. Press 🔶 to store the value.

The screen flashes Calculating - Please Wait! and Done - Values Saved! messages.

### DC Power Supply Replacement

Use the following procedure to replace the DC power supply (Figure 7–14).

Equipment Required:

DC power supply

Philips screwdriver



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Turn instrument OFF, unplug the power cord, and remove the cover.
- 2. Disconnect all the power supply electrical connections. Note connector locations to facilitate re-connection.
- 3. Loosen the captive screw securing the power supply to the chassis plate and lift out the power supply.



Figure 7–14. Replacing the DC Power Supply

- 4. Turn the power supply upside down and remove the four retaining screws securing the power supply to the power supply plate and remove the power supply.
- 5. To install the DC power supply, follow the previous steps in reverse.

The analog outputs should be tested if the concentration value on the front panel display disagrees with the analog outputs. To check the analog outputs, you connect a meter to an analog output channel (voltage or current) and compare the meter reading with the output value set on the Test Analog Outputs screen.

#### **Analog Output Testing**

Equipment Required:

Multimeter

Use the following procedure to test the analog outputs.

1. Connect a meter to the channel to be tested. Figure 7–15 shows the analog output pins and Table 7–4 identifies the associated channels.



Figure 7–15. Rear Panel Analog Input and Output Pins

2. From the Main Menu, press to scroll to Diagnostics, > press
 → to scroll to Test Analog Outputs, and press ...

The Test Analog Outputs screen appears.

The Set Analog Outputs screen appears.

4. Press 🕨 to set the output to zero.

The Output Set To line displays Zero.

5. Check that the meter is displaying the zero value. If the meter reading differs by more than one percent, the analog outputs should be

adjusted. Refer to the "Analog Output Calibration" procedure that follows.

6. Press **t** to set the output to full-scale.

The Output Set To line displays Full-Scale.

- 7. Check that the meter is displaying a full-scale value. If the meter reading differs by more than one percent, the analog outputs should be adjusted. Refer to the "Analog Output Calibration" procedure that follows.
- 8. Press 🔶 to reset the analog outputs to normal.

Voltage Channel	Pin	Current Channel	Pin
1	14	1	15
2	33	2	17
3	15	3	19
4	34	4	21
5	17	5	23
6	36	6	25
Ground	16, 18, 19, 35, 37	Current Output Return	13, 16, 18, 20, 22, 24

Table 7–4. Analog Output Channels and Rear Panel Pin Connections

Input Channel	Pin	
1	1	
2	2	
3	3	
4	5	
5	6	
6	7	
7	9	
8	10	
Ground	4, 8, 11, 14	

## Analog Output Calibration

Use the following procedure to calibrate the analog outputs if a meter reading in the "Analog Output Testing" procedure differed by more than one percent or after replacing the optional I/O expansion board.

Equipment Required:

Multimeter

- 1. Connect a meter to the channel to be adjusted and set to voltage or current as appropriate. Figure 7–15 shows the analog output pins and Table 7–4 identifies the associated channels.
- 2. From the Main Menu, press → to scroll to Service > press → to scroll to Analog Output Calibration > and press →.

The Analog Output Cal screen appears.

**Note** If Service Mode is not displayed, refer to "Accessing the Service Mode" on page 7-4, then return to the beginning of this step.  $\blacktriangle$ 

- At the Analog Output Cal screen, press to scroll to the desired voltage channel or current channel corresponding to the rear panel terminal pin where the meter is connected, then press .
- 4. With the cursor at Calibrate Zero, press  $\frown$ .

The Analog Output Cal line displays Zero

**Note** When calibrating the analog output, always calibrate zero first and then calibrate full-scale. ▲

- 5. Use • until the meter reads 0.0V (or 0.0 or 4.0 mA for a current channel), then press to save the value.
- 6. Press **•** to return to the previous screen.
- 7. Press + + to select Calibrate Full-Scale.
- 8. Use until the meter reads the value shown in the Set Output To line, then press to save the value.

## Analog Input Calibration

#### Calibrating the Input Channels to Zero Volts

Use the following procedures to calibrate the analog inputs after replacing the optional I/O expansion board. These procedures include selecting analog input channels, calibrating them to zero volts, and then calibrating them to full-scale using a known voltage source.

Use the following procedure to calibrate the input channels to zero volts.

- 1. From the Main Menu, press to scroll to Service, press to scroll to Service, press to scroll to Analog Input Calibration, and press to scroll to Analog Input Calibration, and press to scroll to Service, press to scroll to
- 2. The Analog Input Cal screen displays.

**Note** If Service Mode is not displayed, refer to "Accessing the Service Mode" on page 7-4, then return to the beginning of this step. ▲

- 4. With the cursor at Calibrate Zero, press 🗲.

The screen displays the input voltage for the selected channel.

5. Make sure that nothing is connected to the channel input pins and press to calibrate the input voltage on the selected channel to zero volts.

The screen displays 0.00 V as the voltage setting.

- 6. Press > to return to the Analog Input Cal screen and repeat Steps 2 through 4 to calibrate other input channels to zero as necessary.
- 7. Continue with the "Calibrating the Input Channels to Full-Scale" procedure that follows.

#### Calibrating the Input Channels to Full-Scale

Use the following procedure to calibrate the input channels to full scale by applying a known voltage to the channels.

Equipment Required:

DC voltage source (greater than 0 volts and less than 10 volts)

- 1. Connect the known DC voltage source to the input channel (1-8) to be calibrated. Figure 7–15 shows the analog output pins and Table 7–5 identifies the associated channels.
- 2. From the Main Menu, press to scroll to Service, press >
  ↓ to scroll to Analog Input Calibration, and press .

The Analog Input Cal screen displays input channels 1-8.

- 3. At the Analog Input Cal screen, press 🔸 to scroll to the channel selected in Step 1, and press 🗲.
- 4. Press 🔹 to scroll to Calibrate Full Scale, and press 🗲.

The screen displays the current input voltage for the selected channel.

- 5. Use • and • to enter the source voltage, and press
   to calibrate the input voltage for the selected channel to the source voltage.
- Press > to return to the input channels display and repeat Steps 3-5 to calibrate other input channels to the source voltage as necessary.

# Use the following procedure to replace the pressure transducer assembly (Figure 7–16).

Equipment Required:

Pressure transducer assembly

Philips screwdriver



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

1. Turn instrument OFF, unplug the power cord, and remove the cover.

#### Pressure Transducer Assembly Replacement

- 2. Disconnect plumbing from the pressure transducer assembly. Note the plumbing connections to facilitate reconnection.
- 3. Disconnect the pressure transducer cable.



Figure 7–16. Replacing the Pressure Transducer

- 4. Remove the two pressure transducer assembly retaining screws and remove the pressure transducer assembly.
- 5. To install the pressure transducer assembly, follow previous steps in reverse.
- 6. Calibrate the pressure transducer. Refer to the "Pressure Transducer Calibration" procedure that follows.

#### Pressure Transducer Calibration

Use the following procedure to calibrate the pressure transducer.

Equipment Required:

Vacuum pump



**WARNING** The service procedures in this manual are restricted to qualified service representatives. ▲
If the equipment is operated in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.  $\blacktriangle$ 



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component. ▲

**Note** An error in the zero setting of the pressure transducer does not introduce a measurable error in the output concentration reading. Therefore, if only a barometer is available and not a vacuum pump, only adjust the span setting. ▲

A rough check of the pressure accuracy can be made by obtaining the current barometric pressure from the local weather station or airport and comparing it to the pressure reading. However, since these pressures are usually corrected to sea level, it may be necessary to correct the reading to local pressure by subtracting 0.027 mmHg per foot of altitude.

Do not try to calibrate the pressure transducer unless the pressure is known accurately.  $\blacktriangle$ 

- 1. Remove the cover.
- 2. Disconnect the tubing from the pressure transducer and connect a vacuum pump known to produce a vacuum less than 1 mm Hg.
- 3. From the Main Menu, press to scroll to Service > press >
  ↓ to scroll to Pressure Calibration > and press .

The Pressure Sensor Cal menu appears.

**Note** If Service Mode is not displayed, refer to "Accessing the Service Mode" on page 7-4, then return to the beginning of this step. ▲

- 5. Wait at least 10 seconds for the zero reading to stabilize, then pressto save the zero pressure value.

- 6. Disconnect the pump from the pressure transducer.
- 7. Press to return to the Pressure Sensor Cal menu.
- 8. At the Pressure Sensor Cal menu, press 

  to select Span.

  The Calibrate Pressure Span screen appears.
- 9. Wait at least 10 seconds for the ambient reading to stabilize, use
  and 
  to enter the known barometric pressure, and press 
  to save the pressure value.
- 10. Reconnect the instrument tubing to the pressure transducer.
- 11. Install the cover.

# Use the following procedure to replace the temperature control board (Figure 7–6).

Equipment Required:

Temperature control board

Small flat-blade screwdriver



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component. ▲

- 1. Turn instrument OFF, unplug the power cord, and remove the cover.
- 2. Disconnect all connectors from the temperature control board. Use a small flat-blade screwdriver to loosen the two screws securing the CONV TC cable. Note that the red wire is towards the rear and the yellow wire is towards the front.
- 3. Snap off the board from the board mounts.
- 4. To install the temperature control board, follow previous steps in reverse.

# Temperature Control Board Replacement

# Ambient Temperature Calibration

Use the following procedure to calibrate the ambient internal temperature for the instrument.

Equipment Required:

Calibrated thermometer or 10K ±1% Resistor



**WARNING** The service procedures in this manual are restricted to qualified service representatives. ▲

If the equipment is operated in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.  $\blacktriangle$ 



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Remove the instrument cover.
- 2. Tape the thermistor (plugged into the measurement interface board) to a calibrated thermometer (Figure 7–2).

**Note** Since the thermistors are interchangeable to an accuracy of  $\pm 0.2$  °C, and have a value of 10K ohms at 25 °C, an alternate procedure is to connect an accurately known 10K resistor to the thermistor input (AMB TEMP) on the measurement interface board, and enter the temperature reading.

A 1 °C change corresponds to a  $\pm$ 5% change in resistance, thus this alternative procedure can be quite accurate as a check; however, it clearly is not NIST traceable.

3. From the Main Menu, press → to scroll to Service > press → to scroll to **Temperature Calibration** > and press →.

The Calibrate Ambient Temperature screen appears.

**Note** If Service Mode is not displayed, refer to "Accessing the Service Mode" on page 7-4, then return to the beginning of this step. ▲

- 4. Wait at least 10 seconds for the ambient reading to stabilize, use
  and
  to enter the known temperature, and press
  to save the temperature value.
- 5. Install the cover.

### **Fuse Replacement**

Use the following procedure to replace the fuse.

Equipment Required:

Replacement fuses:

250VAC, 4 Amp, SlowBlow (for 100VAC and 110VAC models) 250VAC, 2 Amp, SlowBlow (for 220-240VAC models)

- 1. Turn instrument OFF and unplug the power cord.
- 2. Remove fuse drawer, located on the AC power connector.
- 3. If either fuse is blown, replace both fuses.
- 4. Insert fuse drawer and reconnect power cord.

### Scrubber Replacement

Use the following procedure to replace the ammonia scrubber (Figure 7–17).

Equipment Required:

Ammonia scrubber

Nut driver, 3/16-inch



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Turn instrument OFF, unplug the power cord, and remove the cover.
- 2. Unscrew the Teflon tubing at both ends of the scrubber.
- 3. Pull the scrubber off the mounting clips.

- 4. Push the replacement scrubber into the mounting clips.
- 5. Attach the Teflon tubing at both ends of the scrubber.
- 6. Replace the cover.



Figure 7–17. Replacing the Scrubber

# I/O Expansion Board (Optional) Replacement

Use the following procedure to replace the optional I/O expansion board (Figure 7–18).

Equipment Required:

I/O expansion board

Nut driver, 3/16-inch



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Turn instrument OFF, unplug the power cord, and remove the cover.
- 2. Unplug the I/O expansion board cable from the EXPANSION BD connector on the motherboard.

- 3. Remove the two standoffs holding the I/O expansion board connector to the rear panel (Figure 7–19).
- 4. Pop off the board from the mounting studs and remove the board.
- 5. To install the I/O expansion board, follow previous steps in reverse.
- 6. Calibrate the analog current outputs and analog voltage inputs as defined earlier in this chapter.







Figure 7–19. Rear Panel Board Connectors

# Digital Output Board Replacement

Use the following procedure to replace the digital output board (Figure 7–18).

Equipment Required:

Digital output board

Nut driver, 3/16-inch



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Turn instrument OFF, unplug the power cord, and remove the cover.
- 2. Remove the I/O expansion board (optional), if used. See the "I/O Expansion Board (Optional) Replacement" procedure in this chapter.
- 3. Disconnect the digital output board ribbon cable from the motherboard.
- 4. Using the nut driver, remove the two standoffs securing the board to the rear panel (Figure 7–19).
- 5. Pop off the digital output board from the mounting studs and remove the board.
- 6. To install the digital output board, follow previous steps in reverse.

### Motherboard Replacement

Use the following procedure to replace the motherboard (Figure 7-18).

Equipment Required:

Motherboard

Philips screwdriver

Nut driver, 3/16-inch



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component. ▲

- 1. Turn instrument OFF, unplug the power cord, and remove the cover.
- 2. Remove the I/O expansion board (optional), if used. See the "I/O Expansion Board Replacement" procedure in this chapter.
- 3. Remove the digital output board. See the "Digital Output Board Replacement" procedure in this chapter.
- 4. Unplug all connectors from the motherboard. Note connector locations to facilitate reconnection.
- 5. Using the nut driver, remove the eight standoffs securing the board to the rear panel.
- 6. Pop off the motherboard from motherboard support bracket, and remove the motherboard.
- 7. To install the motherboard, follow previous steps in reverse.
- 8. Calibrate the analog voltage outputs as defined earlier in this chapter (all ranges).

# Measurement Interface Board Replacement

Use the following procedure to replace the measurement interface board (Figure 7–20).

**Equipment Required:** 

Measurement interface board

Philips screwdriver



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component. ▲

- 1. Lower the partition panel, then proceed to the next step below. Refer to "Removing the Measurement Bench and Lowering the Partition Panel" on page 7-8 in this chapter.
- 2. Unplug all connectors. Note the locations of the connectors to facilitate reconnection.

- 3. Unscrew the two screws at the top of the measurement interface board. Pop off the measurement interface board from the two bottom mounting studs and remove the board (Figure 7–20).
- 4. To install the measurement interface board, follow previous steps in reverse.
- 5. Re-install the measurement bench.
- 6. Calibrate the PMT voltage, pressure transducer, flow transducer, input board, and ambient temperature sensor as defined earlier in this chapter.



Figure 7–20. Replacing the Measurement Interface Board

# Flow Transducer Replacement

Use the following procedure to replace the flow transducer (Figure 7–21). Equipment Required:

Flow transducer



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

1. Turn instrument OFF, unplug the power cord, and remove the cover.

2. Disconnect the plumbing connections from the flow transducer. Note the plumbing connections to facilitate reconnection.



Figure 7–21. Replacing the Flow Transducer

- 3. Disconnect the flow transducer cable from the measurement interface board.
- 4. Loosen the two retaining nuts securing the flow transducer to the ozonator bracket and remove the flow transducer.
- 5. To install the flow transducer, follow previous steps in reverse.
- 6. Calibrate the flow transducer. Refer to the "Flow Transducer Calibration" procedure that follows.

### Flow Transducer Calibration

Use the following procedure to calibrate the flow transducer. Equipment Required:

Calibrated flow sensor



**WARNING** The service procedures in this manual are restricted to qualified service representatives. ▲

If the equipment is operated in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. ▲



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Remove the cover.
- 2. Disconnect the pump cable from AC PUMP connector on the measurement interface board.
- 3. From the Main Menu, press to scroll to Service > press >
  ↓ to scroll to Flow Calibration > and press .

The Flow Sensor Cal menu appears.

**Note** If Service Mode is not displayed, refer to "Accessing the Service Mode" on page 7-4, then return to the beginning of this step. ▲

4. At the Flow Sensor Cal menu, press 🗲 to select Zero.

The Calibrate Flow Zero screen appears.

- 5. Wait at least 10 seconds for the zero reading to stabilize, then pressto save the zero flow value.
- 6. Reconnect the pump cable to the AC PUMP connector on the measurement interface board.
- 7. Connect a calibrated flow sensor at the SAMPLE bulkhead on the rear panel.
- 8. Press **•** to return to the Flow Sensor Cal menu.
- 9. At the Flow Sensor Cal menu, press 

  The Calibrate Flow Span screen appears.

- 10. Wait at least 10 seconds for the reading to stabilize, use (
  and 
  to enter the flow sensor reading, and press 
  to save the value.
- 11. Install the cover.

### Front Panel Board Replacement

Use the following procedure to replace the front panel board (Figure 7–22).

Equipment Required:

Front panel board



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component. ▲

- 1. Turn instrument OFF, unplug the power cord, and remove the cover.
- 2. Remove the three ribbon cables and the two-wire connector from the front panel board.
- 3. Pop off the board from the two top mounting studs and remove the board by lifting it up and off the slotted bottom support.
- 4. Replace the front panel board by following previous steps in reverse.



Figure 7–22. Replacing the Front Panel Board and the LCD Module

## LCD Module Replacement

Use the following procedure to replace the LCD module (Figure 7–22).

Equipment Required:

LCD module

Philips screwdriver



**CAUTION** If the LCD panel breaks, do not to let the liquid crystal contact your skin or clothes. If the liquid crystal contacts your skin or clothes, wash it off immediately using soap and water.



**Equipment Damage** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

Do not remove the LCD panel or frame from the LCD module.  $\blacktriangle$ 

The LCD polarizing plate is very fragile, handle it carefully. ▲

	Do not wipe the LCD polarizing plate with a dry cloth, it may easily scratch the plate. ▲ Do not use alcohol, acetone, MEK or other Ketone based or aromatic solvents to clean the LCD module, use a soft cloth moistened with a naphtha cleaning solvent. ▲ Do not place the LCD module near organic solvents or corrosive gases. ▲	
	Do not shake or jolt the LCD module. ▲	
	1. Turn instrument OFF, unplug the power cord, and remove the cover.	
	2. Disconnect the ribbon cable and the two-wire connector from the front panel board.	
	3. Remove the four screws at the corners of the LCD module.	
	4. Slide the LCD module out towards the right of the instrument.	
	5. Replace the LCD module by following previous steps in reverse.	
Service Locations	For additional assistance, service is available from exclusive distributors worldwide. Contact one of the phone numbers below for product support and technical information or visit us on the web at www.thermo.com/aqi.	
	1-866-282-0430 Toll Free	
	1-508-520-0430 International	

# Chapter 8 System Description

This chapter describes the function and location of the system components, provides an overview of the software structure, and includes a description of the system electronics and input/output connections and functions as follows:

- "Hardware" on page 8-1
- "Software" on page 8-4
- "Electronics" on page 8-6
- "I/O Components" on page 8-9

### **Hardware** Model 42*i* hardware components (Figure 8–1) include:

- NO<sub>2</sub>-to NO converter
  - Mode solenoid
- Reaction chamber
  - Optical filter
  - Pressure transducer
  - Sample flow sensor
- Ozonator
  - Ozone flow switch
- Photomultiplier tube
- Photomultiplier tube cooler
- Pump
  - Sample capillary
  - Dry air capillary



Figure 8–1. Hardware Components

NO <sub>2</sub> -to-NO Converter	The NO <sub>2</sub> -to-NO converter heats molybdenum to approximately 325 °C in order to convert and detect NO <sub>2</sub> . The converter consists of an insulated housing, heater, replaceable cartridge, and a type K thermocouple sensor.
Mode Solenoid	The mode solenoid valve switches analyzer operation between the NO mode and $NO_x$ mode. It routes the ambient air sample either through the reaction chamber (NO mode) or through the NO <sub>2</sub> -to-NO converter and then to the reaction chamber (NO <sub>x</sub> mode).
<b>Reaction Chamber</b>	The reaction chamber is where the sample reacts with ozone and produces excited NO <sub>2</sub> that gives off a photon of energy when it decays.
	The reaction chamber is heated and controlled to approximately 50 °C in order to ensure the greatest instrument stability. The sample and ozone flow capillaries and a thermistor sensor are also housed in/on the reaction chamber assembly.

Optical Filter	The optical filter housed in the reaction chamber limits the spectral region viewed by the detector and eliminates possible interferences due to other chemiluminescent reactions.	
Pressure Transducer	The pressure transducer measures the reaction chamber pressure.	
Sample Flow Sensor	The sample flow sensor located at the reaction chamber inlet measures the sample flow into the reaction chamber.	
Ozonator	The Ozonator generates the necessary ozone concentration required for the chemiluminescent reaction. The ozone reacts with the NO in the ambient air sample to produce the electronically excited NO <sub>2</sub> molecules.	
Ozonator Flow Switch	The ozonator flow switch located at the ozonator inlet completes an electrical safety circuit when air flows through the sensor to the ozonator. If airflow stops, the flow sensor breaks the electrical circuit to the ozonator and shuts it off to prevent the ozonator from overheating.	
Photomultiplier Tube	The Photomultiplier tube (PMT) provides the infrared sensitivity required to detect the $NO_2$ luminescence resulting from the reaction of the ozone with the ambient air sample.	
	Optical energy from the reaction is converted to an electrical signal by the PMT and sent to the input board that transmits it to the processor.	
Photomultiplier Tube Cooler	The thermoelectric PMT cooler reduces the PMT temperature to approximately -3 °C to minimize dark current and increase instrument sensitivity. The cooler helps to increase zero and span stability over a wide ambient temperature range. The cooler housing also shields the PMT from external electrical and optical interferences.	
Pump	The vacuum pump draws the reacted gasses out of the reaction chamber.	
Sample Capillary	The sample capillary along with the pump is used to control flow in the sample line.	

Dry Air Capillary	The dry air capillary along with the pump is used to control flow in the dry air line.
Software	The processor software tasks are organized into four areas:
	Instrument Control
	Monitoring Signals
	Measurement Calculations
	Output Communication
Instrument Control	Low-level embedded processors are used to control the various functions on the boards, such as analog and digital I/O and heater control. These processors are controlled over a serial interface with a single high-level processor that also controls the front-panel user interface. The low-level processors all run a common piece of firmware that is bundled with the high-level firmware and loaded on power-up if a different version is detected.
	Each board has a specific address that is used to identify to the firmware what functions are supported on that board. This address is also used for the communications between the low-level processors and the high-level processor.
	Every tenth of a second the frequency counters, analog I/O, and digital I/O are read and written to by the low-level processor. The counters are accumulated over the past second and the analog inputs are averaged over that second. The high-level processor polls the low-level processors once per second to exchange the measurement and control data.
Monitoring Signals	Signals are gathered from the low-level processors once per second, and then processed by the high-level processor to produce the final measurement values. The one-second accumulated counts representing the NO/NO <sub>x</sub> are accumulated and reported for the user-specified averaging time. If this averaging time is greater than ten seconds, the measurement is reported every 10 seconds. The one-second average of the other analog inputs are reported directly (no additional signal conditioning is performed by the high-level processor).
	In auto mode, every ten seconds the NO/NO <sub>x</sub> solenoid switches and the processor waits three seconds for the reaction chamber to flush and

stabilize. After those three seconds, it accumulates the signal counts for seven seconds before again switching the solenoid.

Measurement Calculations	The calculation of the NO and $NO_x$ concentrations is lengthy and uses the high-level processor to provide the most accurate readings. The calculation begins by subtracting the appropriate electronic offset from the seven-second count accumulation. Following this correction, the raw accumulated counts are scaled according to the gain setting of the input board.
	Next, the uncorrected NO and NO <sub>x</sub> values are determined according to a unique averaging algorithm which minimizes errors resulting from rapidly changing gas concentrations. This algorithm results in NO and NO <sub>x</sub> values which are stored in RAM in a circular buffer that holds all the ten second data from the previous five minutes. This data is averaged over the selected time interval, which can be any multiple of ten between 10 and 300 (the manual modes have additional intervals of 1, 2, and 5 seconds).
	The background values for NO and NO <sub>x</sub> , which are corrected for temperature, are subtracted from their respective averages. The NO reading is corrected by the stored span factor and by the temperature factor. The NO <sub>x</sub> reading is partially corrected by the span factor, temperature factor, and balance factor. The corrected NO value is subtracted from the partially corrected NO <sub>x</sub> value to yield an uncorrected NO <sub>2</sub> value. The NO <sub>2</sub> value is then corrected for converter efficiency to give a corrected NO <sub>2</sub> reading. Finally, the corrected NO <sub>2</sub> reading is added to the corrected NO reading to yield a fully corrected NO <sub>x</sub> value.
Output Communication	The front panel display, serial and Ethernet data ports, and analog outputs are the means of communicating the results of the above calculations. The front panel display presents the NO, $NO_2$ , and $NO_x$ concentrations simultaneously. The display is updated every 1-10 seconds, depending on the averaging time.
	The analog output ranges are user selectable via software. The analog outputs are defaulted based on the measurement range. The defaults are calculated by dividing the data values by the full-scale range for each of the three parameters and then multiplying each result by the user-selected output range. Negative concentrations can be represented as long as they are within -5% of full-scale. The zero and span values may be set by the user to any desired value.

Electronics	All electronics operate from a universal switching supply, which is capable of auto-sensing the input voltage and working over the entire operating range.
	Internal pumps and heaters all operate on 110VAC. An optional transformer is required if operating on the 210-250VAC or 90-110VAC ranges.
	An on/off switch controls all power to the instrument, and is accessible on the front panel.
Motherboard	The motherboard contains the main processor, power supplies, a sub- processor and serves as the communication hub for the instrument. The motherboard receives operator inputs from the front panel mounted function key panel and/or over I/O connections on the rear panel and sends commands to the other boards to control the functions of the instrument and to collect measurement and diagnostic information. The motherboard outputs instrument status and measurement data to the front- panel mounted graphics display and to the rear-panel I/O. The motherboard also contains I/O circuitry and the associated connector to monitor external digital status lines and to output analog voltages that represent the measurement data. Connectors located on the motherboard include:
External Connectors	External connectors include:
	• External Accessory
	• RS-232/485 Communications (two connectors)
	Ethernet Communications
	<ul> <li>I/O connector with Power Fail Relay, 16 Digital Inputs, and 6 Analog Voltage Outputs.</li> </ul>
Internal Connectors	Internal connectors include:
	• Function key panel and Display
	• Measurement Interface Board Data
	• I/O Expansion Board Data
	• Digital Output Board
	AC distribution

### Measurement Interface Board

The measurement interface board serves as a central connection area for all measurement electronics in the instrument. It contains power supplies and interface circuitry for sensors and control devices in the measurement system. It sends status data to the motherboard and receives control signals from the motherboard.

#### Measurement Interface Board Connectors

Connectors located on the measurement interface board include:

- Data communication with the motherboard
- 24V and 120VAC power supply inputs
- Fans and solenoid outputs
- Cooler control
- 120VAC outputs for the pump and temperature control board
- Ozonator
- Flow and pressure sensors
- Ambient temperature sensor
- Temperature control board
- PMT high voltage supply
- Measurement input board
- Permeation oven option

Flow Sensor	The flow sensor assembly consists of a board containing an instrumentation
Assembly	amplifier and a flow transducer with input and output gas fittings. The
•	flow transducer output is produced by measuring the pressure difference
	across a precision orifice. This unit is used for measuring the flow of sample
	gas in the measurement system.

Pressure Sensor<br/>AssemblyThe pressure sensor assembly consists of a board containing an<br/>instrumentation amplifier and a pressure transducer with a gas input<br/>fitting. The pressure transducer output is produced by measuring the<br/>pressure difference between the sample gas pressure and ambient air<br/>pressure.

### Temperature Control Board

The temperature control board regulates and sets the temperature of the reaction chamber and converter.

	The reaction chamber temperature is measured with a thermistor. The voltage across the thermistor is fed to the main processor for use in calculating and displaying the reaction chamber temperature. The voltage across the thermistor is also compared to a set-point voltage and used to control that the reaction chamber heaters to maintain a constant temperature of 50 °C. Protective circuitry prevents over heating in the event of broken wires to the thermistor.	
	The converter temperature is measured by a conditioned thermocouple signal and fed back to the main processor to be used to display and control the converter temperature. The temperature control board receives control signals from the main processor software to control the converter heater to the desired set point. Protective circuitry prevents over heating in the event of broken wires to the thermocouple or processor faults.	
PMT Power Supply Assembly	The PMT power supply produces high voltage to operate the photo multiplier tube used in the measurement system. The output voltage is adjustable from approximately 600 to 1200 volts under software control.	
Input Board Assembly	The input board accepts the current signal from the PMT and converts it to a voltage, which is scaled by a factor of approximately 1, 10, or 100 depending on the full-scale range of the NO channel. The scaled voltage signal is converted to a frequency and sent to the microprocessor.	
	The input board includes a test signal that can be activated under software control. The test signal is injected at the first stage of the input board in parallel with the PMT input. This allows the input board and the connection to the processor system to be tested and calibrated without using the PMT.	
Digital Output Board	The digital output board connects to the motherboard and provides solenoid driver outputs and relay contact outputs to a connector located on the rear panel of the instrument. Ten relay contacts normally open (with power off) are provided which are electrically isolated from each other. Eight solenoid driver outputs (open collector) are provided along with a corresponding +24VDC supply pin on the connector.	
I/O Expansion Board (Optional)	The I/O expansion board connects to the motherboard and adds the capability to input external analog voltage inputs and to output analog currents via a connector located on the rear panel of the instrument. It contains local power supplies, a DC/DC isolator supply, a sub-processor and analog circuits. Eight analog voltage inputs are provided with an input	

voltage range of 0V to 10VDC. Six current outputs are provided with a normal operating range of 0 to 20 mA.

# **Front Panel Connector Board** The front panel connector board interfaces between the motherboard and the front panel mounted function key panel and Graphics display. It serves as central location to tie the three connectors required for the function key panel, the graphics display control lines, and the graphics display backlight to a single ribbon cable extending back to the motherboard. This board also includes signal buffers for the graphics display control signals and a high voltage power supply for the graphics display backlight.

# **I/O Components** External I/O is driven from a generic bus that is capable of controlling the following devices:

- Analog output (voltage and current)
- Analog input (voltage)
- Digital output (TTL levels)
- Digital input (TTL levels)

The instrument has spare solenoid valve drivers and I/O support for future expansion. 5

**Note** The instrument has spare solenoid valve drivers and I/O support for future expansion. ▲

# Analog Voltage<br/>OutputsThe instrument provides six analog voltage outputs. Each may be software<br/>configured for any one of the following ranges, while maintaining a<br/>minimum resolution of 12 bits:

- 0-100mV
- 0-1V
- 0-5V
- 0-10V

The user can calibrate each analog output zero and span point through firmware. At least 5% of full-scale over and under range are also supported.

The analog outputs may be assigned to any measurement or diagnostic channel with a user-defined range in the units of the selected parameter. The voltage outputs are independent of the current outputs.

Analog Current Outputs (Optional)	The optional I/O Expansion board includes six isolated current outputs. These are software configured for any one of the following ranges, while maintaining a minimum resolution of 11 bits:
	• 0-20 mA
	• 4-20 mA
	The user can calibrate each analog output zero and span point through firmware. At least 5% of full-scale over and under range are also supported.
	The analog outputs may be assigned to any measurement or diagnostic channel with a user-defined range in the units of the selected parameter. The current outputs are independent of the voltage outputs. The current outputs are isolated from the instrument power and ground, but they share a common return line (Isolated GND).
Analog Voltage Inputs (Optional)	The optional I/O expansion board includes eight analog voltage inputs. These inputs are used to gather measurement data from third-party devices such as meteorological equipment. The user may assign a label, unit, and a voltage to user-defined unit conversion table (up to 16 points). All voltage inputs have a resolution of 12 bits over the range of 0 to 10 volts.
Digital Relay Outputs	The instrument includes one power fail relay on motherboard and ten digital output relays on the digital output board. These are reed relays rated for at least 500 mA @ 200VDC.
	The power fail relay is Form C (both normally opened and normally closed contacts). All other relays are Form A (normally opened contacts) and are used to provide alarm status and mode information from the analyzer, as well as remote control to other devices, such as for controlling valves during calibration. The user may select what information is sent out each relay and whether the active state is opened or closed.
<b>Digital Inputs</b>	Sixteen digital inputs are available which may be programmed to signal instrument modes and special conditions including:
	NO Measure Mode
	• NO <sub>x</sub> Measure Mode
	• Zero Gas Mode
	• Span Gas Mode
	Set Background

- Cal to low span
- Cal to high span
- Analog outputs to zero
- Analog outputs to full-scale

The actual use of these inputs will vary based on analyzer configuration.

The digital inputs are TTL level compatible and are pulled up within the analyzer. The active state can be user defined in firmware.

**Serial Ports** Two serial ports allow daisy chaining so that multiple analyzers may be linked using one PC serial port.

The standard bi-directional serial interface can be configured for either RS-232 or RS-485. The serial baud rate is user selectable in firmware for standard speeds from 1200 to 19,200 baud. The user can also set the data bits, parity, and stop bits. The following protocols are supported:

- C-Link
- Modbus Slave
- Geysitech (Bayern-Hessen)
- Streaming Data

The Streaming Data protocol transmits user-selected measurement data via the serial port in real-time for capture by a serial printer, data logger, or PC.

**RS-232 Connection** A null modem (crossed) cable is required when connecting the analyzer to an IBM Compatible PC. However, a straight cable (one to one) may be required when connecting the analyzer to other remote devices. As a general rule, when the connector of the host remote device is female, a straight cable is required and when the connector is male, a null modem cable is required.

Data Format:

1200, 2400, 4800, 9600, 19200, 38400, 57600, or 115200 BAUD 8 data bits 1 stop bit no parity All responses are terminated with a carriage return (hex 0D) Refer to Table 8–1 for the DB9 connector pin configuration.

DB9 Pin	Function
2	RX
3	ТХ
7	RTS
8	CTS
5	Ground

#### **Table 8–1.** RS-232 DB Connector Pin Configurations

### **RS-485** Connection

The instrument uses a four wire RS-485 configuration with automatic flow control (SD). Refer to Table 8–2 for the DB9 connector pin configuration.

Table 8–2. RS-485 DB Connector Pin Configuration

DB9 Pin	Function
2	+ receive
8	- receive
7	+ transmit
3	- transmit
5	ground

**Ethernet Connection** 

An RJ45 connector is used for the 10Mbs Ethernet connection supporting TCP/IP communications via standard IPV4 addressing. The IP address may be configured for static addressing or dynamic addressing (set using a DHCP server).

Any serial port protocols may be accessed over Ethernet in addition to the serial port.

# External Accessory<br/>ConnectorThe external accessory connector is not used in the Model 42i analyzer.ConnectorThis port is used in other models to communicate with smart external<br/>devices that may be mounted hundreds of feet from the analyzer using an<br/>RS-485 electrical interface.

# Chapter 9 Optional Equipment

The Model 42*i* is available with the following options:

- "Internal Zero/Span and Sample Valves" on page 9-1
- "Internal Permeation Span Source" on page 9-2
- "Ozonator Permeation Dryer" on page 9-10
- "Sample Permeation Dryer" on page 9-10
- "Lag Volume" on page 9-10
- "Ammonia Scrubber" on page 9-12
- "Teflon Particulate Filter" on page 9-12
- "Ozone Particulate Filter" on page 9-13
- "NO2-to-NO Converter" on page 9-13
- "I/O Expansion Board Assembly" on page 9-13
- "Terminal Block and Cable Kits" on page 9-13
- "Cables" on page 9-13
- "Mounting Options" on page 9-15

### Internal Zero/Span and Sample Valves

With the zero/span assembly option, a source of span gas is connected to the SPAN port and a source of zero air is connected to the ZERO port as shown in Figure 9–1. Zero and span gas should be supplied at atmospheric pressure. It may be necessary to use an atmospheric dump bypass plumbing arrangement to accomplish this.

For more information, refer to the "Installation" chapter and the "Operation" chapter.



Figure 9–1. Flow Diagram, Zero/Span Option

### Internal Permeation Span Source

The Internal Permeation Span Source option is designed to provide a simple source of span gas. It is intended as a quick, convenient check to be used between zero and span calibrations for determining instrument malfunction or drift. Because this option does not precisely control dilution gas flow, it should not be used as a basis for instrument zero and span adjustments, calibration updates, or adjustment of ambient data.

Whenever there is an indication of instrument drift or malfunction, a full zero and multipoint calibration (Level 1) should be performed prior to corrective action. For further information on zero, span and calibration of air pollution monitors, refer to Section 2.0.9 of the US EPA's *Quality Assurance Handbook for Air Pollution Measurement Systems (Volume II).* 

Figure 9–2 shows how this option is integrated with the Model 42i components. Energizing the sample valve V1 shuts off the sample flow and permits the flow of zero air for analysis. When valves V1 and V2 are energized, the flow of zero air mixes with air containing NO<sub>2</sub> from the permeation oven. This mode of operation provides a single point span check.



Figure 9–2. Flow Diagram, Internal Permeation with Zero/Span Valve

### Permeation Tube Installation

Use the following procedure to install the optional permeation tube.

- 1. Remove the oven cover.
- 2. Remove the glass chamber assembly by loosening the white plastic retaining collar, loosening (not removing) the knurled screw, and gently pulling the assembly upward. Completely remove the oven.
- 3. Separate the glass chamber from the top assembly by twisting and gently pulling the glass away from the top.

**Note** Keep the glass clean when handling it.  $\blacktriangle$ 

- 4. Place the permeation tube(s) in the glass chamber.
- 5. Attach the glass chamber to the top assembly by gently pushing the two together with a slight twisting motion.

6. Replace the glass chamber assembly into the oven until the top of the assembly is flush or slightly below the top of the oven.



**Equipment Damage** Do not use tools to tighten the knurled screw in the following step. ▲

- 7. Tighten the knurled screw finger tight. Do not use tools to tighten.
- 8. Tighten the white plastic retaining collar.
- 9. Replace the oven cover being careful to place the tubing and wiring into the cover slot.

### Computation of Concentrations

The computation of  $NO_2$  output level is shown in the following information. Note that is assumed that all devices are properly calibrated and that all flows are corrected to 25 °C and 1 atm.

Permeation Tube:

$$Output(ppm) = \frac{(R)(K)}{Q_o}$$

Where:

R = permeation rate in ng/min

 $Q_0$  = flow rate of gas (scc/min) during span mode

K = constant for the specific permeant = 24.45 / MW

MW = molecular weight

 $K(NO_2) = 0.532$ 

### Oven Installation and Configuration

Use the following procedure to install and configure the permeation oven.

- 1. Physically install the permeation oven and valves into the instrument and connect the cables and plumbing.
- 2. From the Perm Oven Settings menu in the Service menu, select **Perm Oven Selection**, then select **45** °C.

- 3. Remove the thermistor from POJ1 on the measurement interface board.
- 4. Connect a resistance of approximately 4.2 K $\Omega$  across pins 1 and 2 of POJ1.
- Go to the Factory Cal Gas Therm menu from the Perm Oven Settings menu in the Service menu. Select Low Point, enter the exact value of the resistor and press to calibrate the low resistance point.
- 6. Press **b** to return to the Factory Cal Gas Therm menu.
- 7. Connect a resistance of approximately 5 K $\Omega$  across pins 1 and 2 of POJ1.
- 9. Press **•** to return to the Factory Cal Gas Therm menu.
- 10. Remove resistor from POJ1 and re-attach the gas thermistor.
- 11. Connect a resistance of approximately 4.2 K $\Omega$  across pins 3 and 4 of POJ3.
- 12. Go to the Factory Cal Oven Therm menu from the Perm Oven Settings menu in the Service menu. Select Low Point, enter the exact value of the resistor and press to calibrate the low resistance point.
- 13. Press **•** to return to the Factory Cal Oven Therm menu.
- 14. Connect a resistance of approximately 5 K $\Omega$  across pins 3 and 4 of POJ3.
- 15. Go to the High Point screen, enter the exact value of the resistor and press to calibrate the high resistance point.
- 16. Press **1** to return to the Factory Cal Oven Therm menu.

	17. Remove resistor from POJ3 and re-attach the permeation oven.
	18. Perform a thermistor calibration using the "Permeation Tube Oven Calibration" procedure that follows.
Permeation Tube Oven Calibration	There are two general approaches that can be used to calibrate the permeation tube oven. The first is to calibrate the temperature indicator very accurately (to better than 0.02 °C) and to use a permeation tube whose weight loss has been previously determined at that temperature.
	<b>Note</b> An error of approximately 0.1 °C corresponds to an error of 1% in release rate. $\blacktriangle$
	The second approach is to note that the thermistors used to measure temperature are interchangeable to better than $\pm 0.2$ °C. Thus a 1% resistor of the proper value (4.369 K $\Omega$ for 45 °C) can be used to set the span on the measurement interface board. The release rate for the permeation tube is then determined by weight loss in the actual oven being used.
Setting Perm Oven Temperature	You can use either of the two calibration methods presented here. One method involves performing the "Setting Perm Oven Temperature" procedure and then continuing with the "Setting Temperature with Water Bath" procedure.
	Alternatively, you can perform the "Setting Perm Oven Temperature" procedure and then continue with the "Setting Temperature with Known Resistance" procedure.
	In either case, use the following procedure for setting the perm oven temperature.
	1. Unplug POJ3 from the measurement interface board. Place a 4.369 $K\Omega$ resistor across pins 3 and 4 on the board.
	<ol> <li>In the Main Menu, choose Service &gt; Perm Oven Settings &gt; Cal Oven Thermistor.</li> </ol>

CURRENTLY: 385	ISTOR): 0 Ohms 1 <b>2</b> Ohms
♦ MOVE CURSOR ♦ CHANGE VALUE	
RANGE AVG DIAGS	ALARM

- 2. Enter the exact value of the attached resistor and press 🕶 to save the offset.
- 3. Press **•** to return to the Permeation Oven menu.
- 4. Remove the resistor and re-attach the permeation oven to POJ3.

Use the following procedure for setting the measure temperature with water bath.

- 1. Remove the thermistor from the permeation tube oven, but leave the thermistor connected to the measurement interface board. Insert the thermistor into the water bath next to an NIST traceable thermometer (if necessary, use an extension cable to reach).
- 2. Turn on the power to the water bath. Using an NIST traceable thermometer with a resolution of  $\pm 0.01$  °C, adjust the water bath to 45 °C.
- 3. In the Main Menu, choose Service > Perm Oven Settings > Cal Gas Thermistor > Water Bath.



#### Setting Temperature with Water Bath

- 4. Enter the thermistor temperature from the thermometer and press
- 5. Remove the thermistor from the water bath, dry, and replace into the permeation tube oven.
- 6. Make sure the source of zero air is connected to the ZERO bulkhead on the rear panel.
- 7. Wait for the permeation gas temperature reading to stabilize.

#### Setting Temperature with Known Resistance

Use the following procedure to set the gas temperature with an accurate known resistance.

- 1. Remove the thermistor from POJ1 on the measurement interface board.
- 2. Connect a 4.369 K $\Omega$  resistor across pins 1 and 2 of POJ1 (use a resistance substitution box and an accurate meter, if necessary).
- 3. In the Main Menu, choose Service > Perm Oven Settings > Cal Gas Thermistor > **Known Resistor**.



- 4. Enter the exact value of the attached resistor and press 🗲 to save the offset.
- 5. Remove the resistor and reconnect the gas thermistor.
- 6. Make sure the source of zero air is connected to the ZERO bulkhead on the rear panel.

7. Wait for the permeation gas temperature reading to stabilize.

### Determining Permeation Rate by Weight Loss

Use the following procedure to determine the permeation rate by weight loss.

- 1. Make sure the oven has been calibrated as described in the "Permeation Tube Oven Calibration" procedure described previously.
- 2. Insert the permeation tube carefully. Do not touch with fingers.
- 3. Turn on the instrument.
- 4. Wait 24-48 hours for the permeation tube to stabilize.
- 5. Carefully remove the permeation tube from the oven and weigh to an accuracy of 0.1 mg. Perform this measurement as quickly as possible.
- 6. Replace the permeation tube into the oven of the instrument.
- 7. Repeat Steps 5 and 6 after two weeks.
- 8. Compute the weight loss of the permeation tube from the values determined in Steps 5 through 7.
- 9. Repeat Steps 5 through 8 until the weight loss has been determined to a precision of 1-2%.
- 10. For the most accurate work, use the permeation tube in the same oven that was used to determine the weight loss of permeation tube.

### Determining Release Rate by Transfer Standard

Use the following procedure to determine the release rate by transfer standard.

1. Make sure the oven has been calibrated as described in the "Permeation Tube Oven Calibration" procedure described previously. Also make sure that the Transfer Standard has been properly calibrated.

- 2. Determine the permeation rate for the permeation tube in the Transfer Standard, or install a certified permeation tube.
- 3. Allow the permeation tubes in both the 42*i* and the Transfer Standard to stabilize for at least 24-48 hours.
- 4. Carefully calibrate the 42*i* using the Transfer Standard. The output of the Transfer Standard should be connected to the SAMPLE bulkhead on the rear panel of the 42*i*.
- 5. Switch the calibrated 42*i* into the span mode.
- 6. Measure the flow rate into the ZERO bulkhead on the rear panel of the 42i. Be sure that the source of zero air is connected. Note the flow and measured NO<sub>2</sub> concentration.
- 7. From the flow and measured concentration, compute the permeation tube release rate.

### Ozonator Permeation Dryer

## Sample Permeation Dryer

The permeation dryer minimizes routing maintenance procedures by providing a continuous stream of dry air to the ozonator (using the selective water permeation characteristics of the dryer). With the permeation dryer option, it is not necessary to constantly replenish the ozonator air-drying column as in the standard instrument.

The sample permeation dryer option is used when there may be widely varying levels of ambient water vapor present. The dryer stabilizes the moisture content of the sample stream providing a constant dew-point at the outlet over a wide range of inlet ambient moisture levels.

A secondary benefit of the sample dryer option is its ability to remove ambient levels of ammonia (NH<sub>3</sub>) from the sample stream.

### Lag Volume

### Principle of Operation

The Model 42*i* is available with the following Lag Volume option.

The Model 42i is based on the principle that nitric oxide (NO) and ozone react to produce a characteristic luminescence with an intensity linearly proportional to the NO concentration. Infrared light emission results when electronically excited NO<sub>2</sub> molecules decay to lower energy states.
Specifically,

$$NO + O_3 \rightarrow NO_2 + O_2 + hv$$

Nitrogen dioxide (NO<sub>2</sub>) must first be transformed into NO before it can be measured using the chemiluminescent reaction. NO<sub>2</sub> is converted to NO by a molybdenum NO<sub>2</sub>-to-NO converter heated to about 325 °C.

 $3 \text{ NO}_2 + \text{Mo} \rightarrow 3 \text{ NO} + \text{MoO}_3$ 

The ambient air sample enters the Model 42i through an inline Teflon<sup>®</sup> particulate filter, through a flow control capillary, and then splits between the NO and the NO<sub>x</sub> channel. In the NO channel, the spilt sample is directed to the common port of the three-way solenoid valve. The sample is then routed either to the inlet tee of the reaction chamber or joins the exhaust of the reaction chamber. In the NO<sub>x</sub> channel, the split sample is directed to the common port of a second three-way solenoid valve after having passed through the NO<sub>2</sub> converter and a lag volume, as shown in Figure 9–3. The "delayed" sample is then routed identically to the NO channel.

The two channels operate  $180^{\circ}$  out of phase, that is, when the instrument is monitoring NO, the NO<sub>x</sub> sample is being bypassed, and when the instrument is monitoring NO<sub>x</sub>, the NO sample is being bypassed. The solenoids switch every 5 seconds and the size of the lag volume has been chosen so the same original sample is being monitored by both the NO and the NO<sub>x</sub> channels. In this way, any positive or negative errors in the NO<sub>2</sub> signal (determined by the difference between the NO<sub>x</sub> and NO readings) is minimized - especially in a situation where the sample is changing rapidly, e.g., an urban traffic environment.

The Model 42i stores the NO signal obtained during the first half of the solenoid cycle, determines the NO<sub>x</sub> signal during the second half of the solenoid cycle, and then calculates and updates a NO, NO<sub>2</sub>, and NO<sub>x</sub> signal every 10 seconds. Averages are available then from 10 to 300 seconds.



Figure 9–3. Flow Diagram, Lag Volume

### **Lag Volume Test** Use the following procedure to test the Model 42*i* with lag volume option.

- 1. Set the NO range to 1,000 ppb and the averaging time to 10 seconds.
- 2. Introduce approximately 800 ppb NO into the Model 42*i*. Wait for a stable reading and then record the NO<sub>2</sub> reading. Next, introduce zero air into the Model 42*i*. Wait until the instrument reads close to zero (<3 ppb). Repeat the above procedure two more times. Take the average of the three NO<sub>2</sub> readings. The average NO<sub>2</sub> reading should be less than 50 ppb.

# **Ammonia Scrubber** The ammonia scrubber is mounted internally and removes ammonia from the sample air.

# Teflon Particulate<br/>FilterA 5-10 micron pore size, two-inch diameter Teflon® element is available for<br/>the Model 42*i*. This filter should be installed just prior to the SAMPLE<br/>bulkhead. When using a filter, all calibrations and span checks must be<br/>performed through the filter.

# Ozone Particulate Filter

NO<sub>2</sub>-to-NO Converter

# I/O Expansion Board Assembly

# Terminal Block and Cable Kits

The ozone particulate filter minimizes the potential for contamination of the ozonator by trapping any particulate matter before passing through the ozonator.

The Model 42*i* includes a Molybdenum NO<sub>2</sub>-to-NO converter as standard equipment. A stainless steel converter is available as an option.

The I/O expansion board provides six analog current output channels (0-20 mA or 4-20 mA) and eight analog voltage inputs (0-10V). The DB25 connector on the rear panel provides the interface for these inputs and outputs.

The optional terminal block and cable kits provide a convenient way to connect devices to the instrument. These kits break out the signals on the rear panel connector to individual numbered terminals.

Two types of terminal block and cable kits are available. One kit is for the DB37 connectors and can be used for either the analog output connector or the relay output connector. The other kit is for the DB25 connector and can be used for the optional I/O expansion board. For associated part numbers, refer to "External Device Connection Components" on page 7-6.

Each kit consists of:

- one six-foot cable
- one terminal block
- one snap track

**Note** Supporting all of the connections on units with the optional I/O expansion board requires:

- two DB37 kits
- one DB25 kit

# Cables

Table 9–1 identifies the optional individual cables that are available for the instrument and Table 9–2 provides the cable color codes. For associated part numbers, refer to "External Device Connection Components" on page 7-6.

**Note** Table 9–2 provides the color coding for both 25-pin cables and 37-pin cables. Color codes for pins 1-25 are for 25-pin cables; color codes for pins 1-37 are for 37-pin cables.  $\blacktriangle$ 

### Table 9–1. Cable Options

Description	Cable Length
DB37M to open end	Six feet
DB37F to open end	Six feet
DB25M to open end	Six feet
RS-232	

### Table 9–2. Color Codes for 25-Pin and 37-Pin Cables

Pin	Color	Pin	Color
1	BLACK	20	RED/BLACK
2	BROWN	21	ORANGE/BLACK
3	RED	22	YELLOW/BLACK
4	ORANGE	23	GREEN/BLACK
5	YELLOW	24	GRAY/BLACK
6	GREEN	25	PINK/BLACK
7	BLUE		odes for 25-pin cables r 37-pin cables.
8	VIOLET	26	PINK/GREEN
9	GRAY	27	PIND/RED
19	WHITE	28	PINK/VIOLET
11	PINK	29	LIGHT BLUE
12	LIGHT GREEN	30	LIGHT BLUE/BROWN
13	BLACK/WHITE	31	LIGHT BLUE/RED
14	BROWN/WHITE	32	LIGHT BLUE/VIOLET
15	RED/WHITE	33	LIGHT BLUE/BLACK
16	ORANGE/WHITE	34	GRAY/GREEN
17	GREEN/WHITE	35	GRAY/RED
18	BLUE/WHITE	36	GRAY/VIOLET
19	VIOLET/WHITE	37	LIGHT GREEN/BLACK

# **Mounting Options**

The analyzer can be installed in the configuration described in Table 9–3 and shown in Figure 9–4 through Figure 9–7.

### Table 9–3. Mounting Options

Mounting Type	Description
Bench	Positioned on bench, includes mounting feet, and front panel side-trim handles.
EIA rack	Mounted in an EIA-style rack, includes mounting slides, and front panel EIA-rack mounting handles.
Retrofit rack	Mounted in a Thermo non-EIA rack, includes mounting slides, and retrofit front panel rack-mounting handles.



Figure 9–4. Rack Mount Option Assembly



Figure 9–5. Bench Mounting



Figure 9–6. EIA Rack Mounting



Figure 9–7. Retrofit Rack Mounting

# Appendix A Warranty

Seller warrants that the Products will operate or perform substantially in conformance with Seller's published specifications and be free from defects in material and workmanship, when subjected to normal, proper and intended usage by properly trained personnel, for the period of time set forth in the product documentation, published specifications or package inserts. If a period of time is not specified in Seller's product documentation, published specifications or package inserts, the warranty period shall be one (1) year from the date of shipment to Buyer for equipment and ninety (90) days for all other products (the "Warranty" Period"). Seller agrees during the Warranty Period, to repair or replace, at Seller's option, defective Products so as to cause the same to operate in substantial conformance with said published specifications; provided that (a) Buyer shall promptly notify Seller in writing upon the discovery of any defect, which notice shall include the product model and serial number (if applicable) and details of the warranty claim; (b) after Seller's review, Seller will provide Buyer with service data and/or a Return Material Authorization ("RMA"), which may include biohazard decontamination procedures and other product-specific handling instructions; and (c) then, if applicable, Buyer may return the defective Products to Seller with all costs prepaid by Buyer. Replacement parts may be new or refurbished, at the election of Seller. All replaced parts shall become the property of Seller. Shipment to Buyer of repaired or replacement Products shall be made in accordance with the Delivery provisions of the Seller's Terms and Conditions of Sale. Consumables, including but not limited to lamps, fuses, batteries, bulbs and other such expendable items, are expressly excluded from the warranty under this warranty.

Notwithstanding the foregoing, Products supplied by Seller that are obtained by Seller from an original manufacturer or third party supplier are not warranted by Seller, but Seller agrees to assign to Buyer any warranty rights in such Product that Seller may have from the original manufacturer or third party supplier, to the extent such assignment is allowed by such original manufacturer or third party supplier.

In no event shall Seller have any obligation to make repairs, replacements or corrections required, in whole or in part, as the result of (i) normal wear and tear, (ii) accident, disaster or event of force majeure, (iii) misuse, fault or negligence of or by Buyer, (iv) use of the Products in a manner for which

they were not designed, (v) causes external to the Products such as, but not limited to, power failure or electrical power surges, (vi) improper storage and handling of the Products or (vii) use of the Products in combination with equipment or software not supplied by Seller. If Seller determines that Products for which Buyer has requested warranty services are not covered by the warranty hereunder, Buyer shall pay or reimburse Seller for all costs of investigating and responding to such request at Seller's then prevailing time and materials rates. If Seller provides repair services or replacement parts that are not covered by the warranty provided in this warranty, Buyer shall pay Seller therefor at Seller's then prevailing time and materials rates. ANY INSTALLATION, MAINTENANCE, REPAIR, SERVICE, RELOCATION OR ALTERATION TO OR OF, OR OTHER TAMPERING WITH, THE PRODUCTS PERFORMED BY ANY PERSON OR ENTITY OTHER THAN SELLER WITHOUT SELLER'S PRIOR WRITTEN APPROVAL, OR ANY USE OF REPLACEMENT PARTS NOT SUPPLIED BY SELLER, SHALL IMMEDIATELY VOID AND CANCEL ALL WARRANTIES WITH RESPECT TO THE AFFECTED PRODUCTS.

THE OBLIGATIONS CREATED BY THIS WARRANTY STATEMENT TO REPAIR OR REPLACE A DEFECTIVE PRODUCT SHALL BE THE SOLE REMEDY OF BUYER IN THE EVENT OF A DEFECTIVE PRODUCT. EXCEPT AS EXPRESSLY PROVIDED IN THIS WARRANTY STATEMENT, SELLER DISCLAIMS ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, ORAL OR WRITTEN, WITH RESPECT TO THE PRODUCTS, INCLUDING WITHOUT LIMITATION ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. SELLER DOES NOT WARRANT THAT THE PRODUCTS ARE ERROR-FREE OR WILL ACCOMPLISH ANY PARTICULAR RESULT.

# Appendix B C-Link Protocol Commands

This appendix provides a description of the C-Link protocol commands that can be used to remotely control a Model 42*i* analyzer using a host device such as a PC or a datalogger. C-Link protocol may be used over RS-232, RS-485, or Ethernet. C-Link functions can be accessed over Ethernet using TCP/IP port 9880.

Streaming data is sent out the serial port or the Ethernet port on a userdefined periodic basis. Streaming data over Ethernet is only generated when a connection is made on TCP port 9881.

For details, see the following topics:

- "Instrument Identification Number" on page B-1
- "Commands" on page B-2
- "Measurements" on page B-9
- "Alarms" on page B-13
- "Diagnostics" on page B-17
- "Datalogging" on page B-17
- "Calibration" on page B-25
- "Keys/Display" on page B-29
- "Measurement Configuration" on page B-31
- "Hardware Configuration" on page B-35
- "Communications Configuration" on page B-39
- "I/O Configuration" on page B-42
- "Record Layout Definition" on page B-47

# Instrument Identification Number

Each command sent to the analyzer over the serial port must begin with the American Standard Code for Information Interchange (ASCII) symbol or byte value equivalent of the instrument's identification number plus 128. For example, if the instrument ID is set to 25, then each command must begin with the ACSII character code 153 decimal. The analyzer ignores any command that does not begin with its instrument identification number. If the instrument ID is set to 0, then this byte is not required. For more information on changing Instrument ID, see Chapter 3, "Operation".

### Commands

The analyzer must be in the remote mode in order to change instrument parameters via remote. However, the command "set mode remote" can be sent to the analyzer to put it in the remote mode. Report commands (commands that don't begin with "set") can be issued either in the remote or local mode. For information on changing modes, see Chapter 3, "Operation".

The commands can be sent in either uppercase or lowercase characters. Each command must begin with the proper instrument identification number (ASCII) character. The command in the example below begins with the ASCII character code 170 decimal, which directs the command to the Mode

l 42*i*, and is terminated by a carriage return "CR" (ASCII character code 13 decimal).

<ascii 170=""></ascii>	Т	Ι	М	E	<cr></cr>
------------------------	---	---	---	---	-----------

If an incorrect command is sent, a "bad command" message will be received. The example below sends the incorrect command "set unit ppm" instead of the correct command "set gas unit ppm."

Send: set unit ppm Receive: set unit ppm bad cmd

The "save" and "set save params" commands stores parameters in FLASH. It is important that each time instrument parameters are changed, that this command be sent. If changes are not saved, they will be lost in the event of a power failure.

# **Commands List** Table B–1 lists the 42*i* C-Link protocol commands. The interface will respond to the command strings outlined below.

### Table B–1. C-Link Protocol Commands

Command	Description	Page
addr dns	Reports/sets domain name server address for Ethernet port	B-39
addr gw	Reports/sets default gateway address for Ethernet port	B-39
addr ip	Reports/sets IP address for Ethernet port	B-39

Command	Description	Page
addr nm	Reports/sets netmask address for Ethernet port	B-39
alarm chamber temp max	Reports/sets chamber temperature alarm maximum value	B-13
alarm chamber temp min	Reports/sets chamber temperature alarm minimum value	B-13
alarm conc no max	Reports/sets current NO concentration alarm maximum value	B-14
alarm conc no min	Reports/sets current NO concentration alarm minimum value	B-14
alarm conc no2 max	Reports/sets current NO $_{\rm 2}$ concentration alarm maximum value	B-14
alarm conc no2 min	Reports/sets current $NO_2$ concentration alarm minimum value	B-14
alarm conc nox max	Reports/sets current NO <sub>x</sub> concentration alarm maximum value	B-14
alarm conc nox min	Reports/sets current $NO_x$ concentration alarm minimum value	B-14
alarm converter temp max	Reports/sets $NO_2$ converter temperature alarm maximum value	B-14
alarm converter temp min	Reports/sets $NO_2$ converter temperature alarm minimum value	B-14
alarm cooler temp max	Reports/sets PMT cooler temperature alarm maximum value	B-15
alarm cooler temp min	Reports/sets PMT cooler temperature alarm minimum value	B-15
alarm internal temp max	Reports/sets internal temperature alarm maximum value	B-15
alarm internal temp min	Reports/sets internal temperature alarm minimum value	B-15
alarm pressure max	Reports/sets pressure alarm maximum value	B-15
alarm pressure min	Reports/sets pressure alarm minimum value	B-15
alarm sample flow max	Reports/sets sample flow alarm maximum value	B-16
alarm sample flow min	Reports/sets sample flow alarm minimum value	B-16
alarm trig conc no	Reports/sets current NO concentration alarm warning value	B-16
alarm trig conc no2	Reports/sets current $NO_2$ concentration alarm warning value	B-16
alarm trig conc nox	Reports/sets current NO <sub>x</sub> concentration alarm warning value	B-16
analog iout range	Reports analog current output range per channel	B-42
analog vin	Retrieves analog voltage input data per channel	B-43
analog vout range	Reports analog voltage output range per channel	B-43
avg time	Reports/sets averaging time	B-9

Command	Description	Page
baud	Reports/sets current baud rate	B-40
bkg no	Reports/sets current NO background	B-28
bkg nox	Reports/sets current NOx background	B-28
cal high no coef	Sets/auto-calibrates high range NO coefficient	B-26
cal high no2 coef	Sets/auto-calibrates high range NO2 coefficient	B-26
cal high nox coef	Sets/auto-calibrates high range NOx coefficient	B-26
cal low no coef	Sets/auto-calibrates low range NO coefficient	B-26
cal low no2 coef	Sets/auto-calibrates low range $NO_2$ coefficient	B-26
cal low nox coef	Sets/auto-calibrates low range NOx coefficient	B-26
cal no bkg	Sets/auto-calibrates NO background	B-25
cal no coef	Sets/auto-calibrates NO coefficient	B-26
cal no2 coef	Sets/auto-calibrates NO2 coefficient	B-26
cal nox bkg	Sets/auto-calibrates NO <sub>x</sub> background	B-25
cal nox coef	Sets/auto-calibrates NO <sub>x</sub> coefficient	B-26
cal perm gas offset res	Sets/calibrates permeation gas temperature sensor offset using a calibrating resistor in ohms	B-28
cal perm gas offset temp	Sets/calibrates permeation gas temperature sensor offset to a temperature of degrees C	B-28
cal perm oven offset res	Sets/calibrates permeation oven temperature sensor offset using a calibrating resistor in ohms	B-29
cal pres	Sets current measured pressure as pressure during calibration (for pressure compensation)	B-29
clr lrecs	Clears away only long records that have been saved	B-17
clr records	Clears away all logging records that have been saved	B-17
clr srecs	Clears away only short records that have been saved	B-17
contrast	Reports/sets current screen contrast	B-35
conv set temp	Reports/sets temperature setpoint for NO2 converter	B-36
conv temp	Reports current NO <sub>2</sub> converter temperature	B-10
cooler temp	Reports temperature of PMT cooler (same as PMT temperature)	B-11
copy lrec to sp	Sets/copies current lrec selection into the scratch pad	B-24
copy sp to lrec	Sets/copies current selections in scratch pad into Irec list	B-24
copy sp to srec	Sets/copies current selections in scratch pad into srec list	B-24
copy sp to stream	Sets/copies current selections in scratch pad into stream list	B-24
copy srec to sp	Sets/copies current srec selection into the scratch pad	B-24

Command	Description	Page
copy stream to sp	Sets/copies current streaming data selection into the scratch pad	B-24
custom	Reports/sets defined custom range concentration	B-32
data treatment lrec	Reports/sets data treatment for concentrations values in long records	B-18
data treatment srec	Reports/sets data treatment for concentrations values in short records	B-18
date	Reports/sets current date	B-36
default params	Sets parameters to default values	B-37
dhcp	Reports/sets state of use of DHCP	B-40
diag volt iob	Reports diagnostic voltage level for I/O expansion board	B-17
diag volt mb	Reports diagnostic voltage level for motherboard	B-17
diag volt mib	Reports diagnostic voltage level for measurement interface board	B-17
dig in	Reports status of the digital inputs	B-44
din	Reports/sets digital input channel and active state	B-44
do (down)	Simulates pressing down pushbutton	B-29
dout	Reports/sets digital output channel and active state	B-44
dtoa	Reports outputs of the digital to analog converters per channel	B-45
en (enter)	Simulates pressing enter pushbutton	B-29
er	Returns a brief description of the main operating conditions in the format specified in the commands	B-19
erec	Returns a brief description of the main operating conditions in the format specified in the command	B-19
erec format	Reports/sets erec format (ASCII or binary)	B-21
erec layout	Reports current layout of erec data	B-22
flags	Reports 8 hexadecimal digits (or flags) that represent the status of the ozonator, PMT, gas mode, and alarms	B-12
flow	Reports current measured sample flow in LPM	B-11
format	Reports/sets current reply termination format	B-41
gas mode	Reports current mode of sample, zero, or span	B-33
gas unit	Reports/sets current gas units	B-34
he (help)	Simulates pressing help pushbutton	B-29
high avg time	Reports/sets high range averaging time	B-9
high no	Reports NO concentration calculated with high range coefficients	B-10

Command	Description	Page
high no coef	Reports/sets high range NO coefficients	B-26
high no gas	Reports/sets high range NO span gas concentration	B-27
high no2	Reports $NO_2$ concentration calculated with high range coefficients	B-10
high no2 coef	Reports/sets high range NO <sub>2</sub> coefficients	B-26
high no2 gas	Reports/sets high range $NO_2$ span gas concentration	B-27
high nox	Reports NOx concentration calculated with high range coefficients	B-10
high nox coef	Reports/sets high range NO <sub>x</sub> coefficients	B-26
high nox gas	Reports/sets high range NO <sub>x</sub> span gas concentration	B-27
high range no	Reports/selects current NO high range	B-31
high range no2	Reports/selects current $NO_2$ high range	B-31
high range nox	Reports/selects current $NO_x$ high range	B-31
host name	Reports/sets host name string	B-41
instr name	Reports instrument name	B-41
instrument id	Reports/sets instrument id	B-41
internal temp	Reports current internal instrument temperature	B-11
isc (iscreen)	Retrieves framebuffer data used for the display	B-29
layout ack	Disables stale layout/layout changed indicator ('*')	B-42
le (left)	Simulates pressing left pushbutton	B-29
list din	Lists current selection for digital input	B-18
list dout	Lists current selection for digital output	B-18
list Irec	Lists current selection Irec logging data	B-18
list sp	Lists current selection in the scratchpad list	B-18
list srec	Lists current selection srec logging data	B-18
list stream	Lists current selection streaming data output	B-18
list var aout	Reports list of analog output, index numbers, and variables	B-46
list var din	Reports list of digital input, index numbers, and variables	B-46
list var dout	Reports list of digital output, index numbers, and variables	B-46
low avg time	Reports/sets low averaging time	B-9
low no	Reports NO concentration calculated with low range coefficients	B-10
low no coef	Reports/sets low range NO coefficient	B-26
low no gas	Reports/sets low range NO span gas concentration	B-27

Command	Description	Page
low no2	Reports NO $_{\rm 2}$ concentration calculated with low range coefficients	B-10
low no2 coef	Reports/sets low range NO <sub>2</sub> coefficient	B-26
low no2 gas	Reports/sets low range $NO_2$ span gas concentration	B-27
low nox	Reports NO $_{\rm x}$ concentration calculated with low range coefficients	B-10
low nox coef	Reports/sets low range NO <sub>x</sub> coefficient	B-26
low nox gas	Reports/sets low range $NO_x$ span gas concentration	B-27
low range no	Reports/sets current NO low range	B-31
low range no2	Reports/sets current NO <sub>2</sub> low range	B-31
low range nox	Reports/sets current NO <sub>x</sub> low range	B-31
lr	Outputs long records in the format specified in the command	B-19
lrec	Outputs long records	B-20
lrec format	Reports/sets output format for long records (ASCII or binary)	B-21
lrec layout	Reports current layout of Irec data	B-22
lrec mem size	Reports maximum number of long records that can be stored	B-22
lrec per	Reports/sets long record logging period	B-22
malloc lrec	Reports/sets memory allocation for long records	B-23
malloc srec	Reports/sets memory allocation for short records	B-23
me (menu)	Simulates pressing menu pushbutton	B-29
meas mode	Reports/sets which measurement mode is active	B-34
mode	Reports operating mode in local, service, or remote	B-42
no	Reports current NO concentration	B-10
no bkg	Reports/sets current NO background	B-28
no coef	Reports/sets current NO coefficient	B-26
no gas	Reports/sets NO span gas concentration	B-27
no of Irec	Reports/sets number of long records stored in memory	B-23
no of srec	Reports/sets number of short records stored in memory	B-23
no2	Reports current NO <sub>2</sub> concentration	B-10
no2 coef	Reports/sets current NO <sub>2</sub> coefficient	B-26
no2 gas	Reports/sets $NO_2$ span gas concentration	B-27
nox	Reports current NO <sub>x</sub> concentration	B-10
nox bkg	Reports/sets current NO <sub>x</sub> background	B-28
nox coef	Reports/sets current NO <sub>x</sub> coefficient	B-26

Command	Description	Page
nox gas	Reports/sets NO <sub>x</sub> span gas concentration	B-27
ozonator	Reports/sets ozonator on or off	B-37
ozonator flow	Reports current ozonator flow	B-37
ozonator safety	Reports/sets ozonator safety on or off	B-37
ozonator status	Reports status of ozonator and safety	B-38
perm gas temp	Reports current permeation gas temperature	B-11
pmt status	Reports/sets PMT status on or off	B-38
pmt temp	Reports temperature of the PMT cooler (same as cooler temperature)	B-11
pmt voltage	Reports current PMT voltage	B-11
pres	Reports current reaction chamber pressure	B-12
pres cal	Reports/sets pressure used for calibration	B-28
pres comp	Reports/sets pressure compensation on or off	B-35
program no	Reports analyzer program number	B-42
push	Simulates pressing a key on the front panel	B-29
range mode	Reports/sets current range mode	B-33
range no	Reports/sets current NO range	B-31
range no2	Reports/sets current $NO_2$ range	B-31
range nox	Reports/sets current NO <sub>x</sub> range	B-31
react temp	Reports current reaction chamber temperature	B-12
relay stat	Reports/sets relay logic status to for the designated relay(s)	B-46
ri (right)	Simulates pressing right pushbutton	B-29
ru (run)	Simulates pressing run pushbutton	B-29
sample	Sets zero/span valves to sample mode	B-33
sample flow	Reports current measured sample flow in LPM	B-11
sample gas	Sets zero/span valves to sample gas mode	B-33
save	Stores parameters in FLASH	B-38
save params	Stores parameters in FLASH	B-38
sc (screen)	C-series legacy command that reports a generic response (Use iscreen instead)	B-31
sp field	Reports/sets item number and name in scratch pad list	B-24
span	Sets zero/span valves to span mode	B-34
span gas	Sets zero/span valves to span gas mode	B-34
sr	Reports last short record stored	B-19

Command	Description	Page
srec	Reports maximum number of short records	B-20
srec format	Reports/sets output format for short records (ASCII or binary)	B-21
srec layout	Reports current layout of short record data	B-22
srec mem size	Reports maximum number of short records	B-22
srec per	Reports/sets short record logging period	B-22
stream per	Reports/sets current set time interval for streaming data	B-25
stream time	Reports/sets a time stamp to streaming data or not	B-25
temp comp	Reports/sets temperature compensation on or off	B-35
time	Reports/sets current time (24-hour time)	B-38
up	Simulates pressing up pushbutton	B-29
zero	Sets zero/span valves to zero mode	B-34
zero gas	Sets zero/span valves to zero gas mode	B-34

### Measurements

# avg time

# high avg time

### low avg time

These commands report the averaging time in seconds when operating in single range, or averaging time used with the high and low ranges when operating in dual or auto range mode. The example below shows that the averaging time is 300 seconds, according to Table B–2.

Send: avg time Receive: avg time 11:300 sec

### set avg time selection

set high avg time selection

set low avg time selection

These commands set the averaging time, high and low averaging times, according to Table B-2. The example below sets the low range averaging time to 120 seconds.

Send: set low avg time 8 Receive: set low avg time 8 ok

Selection	Time, NO Measure Mode, NO <sub>x</sub> Measure Mode	Time, NO/NO <sub>x</sub> Measure Mode
0	1 seconds	
1	2	
2	5	
3	10	10 seconds
4	20	20
5	30	30
6	60	60
7	90	90
8	120	120
9	180	180
10	240	240
11	300	300

### Table B–2. Averaging Times

### no no2

nox high no high no2 high nox low no low no2

low nox

These commands report the measured NO,  $NO_2$ , and  $NO_x$  concentrations when operating in single range, or high and low NO,  $NO_2$ , and  $NO_x$  when operating in dual or auto range mode. The example below shows that the NO concentration is 67.2 ppb.

Send: no Receive: no 6720E-2 ppb

### conv temp

This command reports the current  $NO_2$  converter temperature. The example below reports that the current converter temperature is 320.7 °C.

Send:	conv	temp			
Receive:	conv	temp	320.7	deg	С

### cooler temp

This command reports the current PMT cooler temperature. The example below reports that the current PMT cooler temperature is -2.8 °C.

Send: pmt temp Receive: pmt temp -2.8 deg C

### flow

### sample flow

These commands report the current measured flow. The example below reports that the flow measurement is 0.700 liters/minute.

Send: flow Receive: flow 0.7 1/m

### internal temp

This command reports the current internal instrument temperature. The first reading is the temperature being used in instrument calculations. The second temperature is the actual temperature being measured. If temperature compensation is on, then both temperature readings are the same. If temperature compensation is off, a temperature of 30 °C is used as the default temperature even though the actual internal temperature is 27.2 °C. The example below shows that temperature compensation is on and that the internal temperature is 27.2 °C.

Send: internal temp Receive: internal temp 027.2 deg C, actual 027.2

### perm gas temp

This command reports the current permeation gas temperature. The example below reports that the permeation gas temperature is 45 °C.

```
Send: perm gas temp
Receive: perm gas temp 45 deg C
```

### pmt temp

This command reports the PMT cooler temperature. The example below reports that the PMT cooler temperature is -2.8 °C.

```
Send: pmt temp
Receive: pmt temp -2.8 deg C
```

### pmt voltage

This command reports the PMT voltage. The example below reports that the current PMT voltage is -750 volts.

Send:	pmt	voltage	
Receive:	pmt	voltage	-750

### pres

This command reports the current reaction chamber pressure. The first pressure reading is the pressure reading being used in instrument calculations. The second pressure is the actual pressure reading being measured. If pressure compensation is on, then both pressure readings are the same. If pressure compensation is off, a pressure of 300 mmHg is used as default pressure even though the actual pressure is 306.3 mmHg. The example below shows that the actual reaction chamber pressure is 306.3 mmHg.

Send: pres Receive: pres 753.4 mm Hg, actual 306.6

#### react temp

This command reports the current reaction chamber temperature. The example below reports that the current reaction temperature is 49.0 °C.

Send:	react	temp			
Receive:	react	temp	49.0	deg	С

#### flags

This reports 8 hexadecimal digits (or flags) that represent the status of the ozonator, PMT, pressure and temperature compensation status, gas units, gas mode, and alarms. To decode the flags, each hexadecimal digit is converted to binary as shown in the Figure B–1. It is the binary digits that define the status of each parameter. In the example below, the instrument is reporting that the ozonator and PMT are both on, and that the instrument is in the span gas mode.

Send:	†⊥ags	
Receive:	flags	80028000



Figure B-1. Flags

# Alarms alarm chamber temp min alarm chamber temp max

These commands report the chamber temperature alarm minimum and maximum value current settings. The example below reports that the chamber temperature alarm minimum value is 47.0 °C.

Send:alarm chamber temp minReceive:alarm chamber temp min 47.0 deg C

# set alarm chamber temp min *value* set alarm chamber temp max *value*

These commands set the chamber temperature alarm minimum and maximum values to *value*, where *value* is a floating-point number representing chamber temperature alarm limits in degrees C. The example below sets the chamber temperature alarm maximum value to 50.0 °C.

Send: set alarm chamber temp max 50.0 Receive: set alarm chamber temp max 50.0 ok alarm conc no min alarm conc no2 min alarm conc nox min alarm conc no max alarm conc no2 max alarm conc nox max These commands report the NO, NO<sub>2</sub>, and NO<sub>x</sub> concentration alarm minimum and maximum values current setting. The example below reports that the NO concentration minimum is 5.2 ppb. alarm conc no min Send: Receive: alarm conc no min 5.2 ppb set alarm conc no min value set alarm conc no2 min value set alarm conc nox min value set alarm conc no max value set alarm conc no2 max value

set alarm conc noz max value

These commands set the NO, NO<sub>2</sub>, and NO<sub>x</sub> concentration alarm minimum and maximum values to *value*, where *value* is a floating-point representation of the concentration alarm limits. Values must be in the units that are currently set for use. The example below sets the NO concentration alarm maximum value to 215.

Send: set alarm conc no max 215 Receive: set alarm conc no max 215 ok

### alarm converter temp min alarm converter temp max

These commands report the converter temperature alarm minimum and maximum value current settings. The example below reports that the converter temperature alarm minimum value is 300.0 °C.

Send: alarm chamber temp min Receive: alarm chamber temp min 300.0 deg C

set alarm converter temp min *value* set alarm converter temp max *value* 

These commands set the converter temperature alarm minimum and maximum values to *value*, where *value* is a floating-point number representing converter temperature alarm limits in degrees C. The example below sets the converter temperature alarm maximum value to 340.0 °C.

Send: set alarm converter temp max 340 Receive: set alarm converter temp max 340 ok

### alarm cooler temp min alarm cooler temp max

These commands report the cooler temperature alarm minimum and maximum value current settings. The example below reports that the cooler temperature alarm minimum value is -10.0 °C.

Send: alarm cooler temp min Receive: alarm cooler temp min -10.0 deg C

### set alarm cooler temp min *value* set alarm cooler temp max *value*

These commands set the cooler temperature alarm minimum and maximum values to *value*, where *value* is a floating-point number representing cooler temperature alarm limits in degrees C. The example below sets the cooler temperature alarm maximum value to -2.0 °C.

Send: set alarm cooler temp max -2.0 Receive: set alarm cooler temp max -2.0 ok

### alarm internal temp min alarm internal temp max

These commands report the internal temperature alarm minimum and maximum value current settings. The example below reports that the internal temperature alarm minimum value is 15.0 °C.

Send: internal temp alarm min Receive: internal temp alarm min 15.0 deg C

# set internal temp alarm min *value* set internal temp alarm max *value*

These commands set the internal temperature alarm minimum and maximum values to *value*, where *value* is a floating-point number representing internal temperature alarm limits in degrees C. The example below sets the internal temperature alarm maximum value to 35.0 °C.

Send: set internal temp alarm max 35 Receive: set internal temp alarm max 35 ok

### alarm pressure min

### alarm pressure max

These commands report the pressure alarm minimum and maximum value current settings. The example below reports that the pressure alarm minimum value is 150 mmHg.

Send:	alarm	pressure	min		
Receive:	alarm	pressure	min	150	mmHg

### set alarm pressure min value

#### set alarm pressure max value

These commands set the pressure alarm minimum and maximum values to *value*, where *value* is a floating-point number representing pressure alarm limits in millimeters of mercury. The example below sets the pressure alarm maximum value to 290 mmHg.

Send: set alarm pressure max 290 Receive: set alarm pressure max 290 ok

### alarm sample flow min alarm sample flow max

These commands report the sample flow alarm minimum and maximum value current settings. The example below reports that the sample flow alarm minimum value is 0.300 LPM.

Send:	alarm	sample	flow	min		
Receive:	alarm	sample	flow	min	0.3	l/min

# set alarm sample flow min *value* set alarm sample flow max *value*

These commands set the sample flow alarm minimum and maximum values to *value*, where *value* is a floating-point number representing sample flow alarm limits in liters per minute. The example below sets the sample flow alarm maximum value to 1 LPM.

Send: set alarm sample flow max 1 Receive: set alarm sample flow max 1 ok

### alarm trig conc no alarm trig conc no2 alarm trig conc nox

This command reports the NO,  $NO_2$ , and  $NO_x$  concentration alarm trigger action for minimum alarm, current setting, to either floor or ceiling. The example below shows the NO concentration minimum alarm trigger to ceiling, according to Table B–3.

Send:	alarm	trig	conc	no	
Receive:	alarm	trig	conc	no	1

set alarm trig conc no *value* set alarm trig conc no2 *value* set alarm trig conc nox *value* These commands set the NO, NO<sub>2</sub>, and NO<sub>x</sub> concentration alarm minimum *value*, where *value* is set to either floor or ceiling, according to Table B–3. The example below sets the NO concentration minimum alarm trigger to ceiling.

Send: set alarm trig conc no 1 Receive: set alarm trig conc no 1 ok

#### Table B–3. Alarm Trigger Values

Value	Alarm Trigger
00	Floor
01	Ceiling

# Diagnostics

### diag volt mb

This command reports the diagnostic voltage measurements on the motherboard. The sequence of voltages is: Positive 24, positive 15, positive 5, positive 3.3, and negative 3.3. Each voltage value is separated by a space.

Send:diag volt mbReceive:diag volt mb 24.1 14.9 4.9 3.2 -3.2

### diag volt mib

This command reports the diagnostic voltage measurements on the measurement interface board. The sequence of voltages is: Positive 24, positive 15, negative 15, positive 5, positive 3.3, and positive 15. Each voltage value is separated by a space.

Send: diag volt mib Receive: diag volt mib 24.1 14.9 -14.9 4.9 3.2 14.9

### diag volt iob

This command reports the diagnostic voltage measurements on the I/O expansion board. The sequence of voltages is: Positive 24, positive 5, positive 3.3, and negative 3.3. Each voltage value is separated by a space.

Send:	diag	volt	iob				
Receive:	diag	volt	iob	24.1	4.9	3.2	-3.2

### Datalogging

### clr records

This command will clear all long and short records that have been saved.

```
Send: clear records
Receive: clear records ok
```

set clr lrecs set clr srecs These commands will clear only the long records or only the short records that have been saved. The example below clears short records.

Send:	set c	lr srecs	
Receive:	set c	lr srecs	ok

### data treatment lrec

### data treatment srec

These commands report the current selection of data treatment for concentrations in the long records (lrecs) or short records (srecs). The example below reports the data treatment for concentrations in lrec is minimum.

Send:	data	treatment	lrec	
Receive:	data	treatment	lrec	min

set data treatment lrec *string* set data treatment srec *string string* = | cur | avg | min | max |

These commands set the data treatment to current, average, minimum, or maximum for the concentration values recorded in the long records (lrecs) or short records (srecs). The example below sets the data treatment for concentrations in lrec to minimum.

Send: set data treatment lrec min Receive: set data treatment lrec min ok

### list din

### list dout

These commands report the current selection for the digital outputs in the format. Output no Index number variable name active state. The active state for digital outputs is open or closed. The active state for digital inputs is high or low.

Send: list dout Receive: list dout output index variable state 1 35 CONC ALARM open 3 4 UNITS open 4 11 GEN ALARM closed 7 7 NO MODE open 8 8 NOX MODE open

list lrec list srec list stream list sp These commands report the list of current selections for long record logging data, short record logging data, streaming data output, or the scratch pad (sp) list. The example below shows the list for streaming data output.

Send: Receive:	list stream list stream
	field index variable
	x x time
	1 1 no
	2 2 no2
	3 3 nox
	4 18 intt
	5 25 pres
	6 26 smplf

er xy lr xy	
sr xy	
x =  0  1	: Reply termination format (see "set format format"
command)	
y =   0   1   2	: Output format (see "set erec/lrec/srec format format"
command)	

These commands report the last long and short records stored or the dynamic data record. In the example below, the command requests a long record with no checksum, in ASCII format with text. For details on how to decode the flag fields within these records, see the "flags" command.

Send: lr01 Receive: lr01 12:31 02-22-03 flags 54089100 no -8413E-1 nox -8485E-1 lono -6471E-1 lonox -6527E-1 pres 130.9 pmtt 53.2 intt 80.0 rctt 80.0 convt 61 smplf 0.500 ozonf 0.000 pmtv -115

### erec

This command returns a brief description of the main operating conditions at the time the command is issued (i.e. dynamic data). The example below shows a typical response. The format is defined by the current settings of "format" and "erec format" commands. For details on how to decode the flag fields within these records, see the "flags" command. Send: erec Receive: erec 10:11 04-06-05 flags DD008000 no 0.000 nox 0.000 no2 0.000 1 lono 147.500 lonox 0.000 lono2 0.000 1 pmtv 805.491 tempal 1 pres 172.278 pcal 150.000 smplf 0.000 ozonf 0.050 hiavgtime 10 loavgtime 10 nobkg 0.000 noxbkg 0.000 nocoef 1.000 noxcoef 1.000 no2coef 1.000 lonocoef 1.000 lonoxcoef 1.000 lono2coef 1.000 norange 100000.000 noxrange 100000.000 no2range 100000.000 lonorange 100000.000 lonoxrange 100000.000 lono2range 100000.000

### lrec

srec lrec xxxx yy srec xxxx yy lrec aa:bb oo-pp-qq yy srec aa:bb oo-pp-qq yy xxxx = the number of past records yy = the number of records to return (1 to 10) aa = hours (01 to 24) bb = minutes (01 to 59) oo = month (01 to 12) pp = day (01 to 31) qq = year

These commands output long or short records and dynamic data. The output format is determined by the "set lrec format", and "set srec format" commands. The logging time is determined by the "set lrec per" and "set srec per" commands. In dual range, the long records and short records contain the high and low NO and NO<sub>x</sub> concentrations. In single range the low NO and low NO<sub>x</sub> values are set to 0 and the high NO and high NO<sub>x</sub> are used. In NO or NO<sub>x</sub> only mode, the pertinent high value used, other concentrations are set to 0. Concentrations are stored in either ppb or  $\mu g/m^3$ .

In the following example, there are 740 long records currently stored in memory. When the command lrec 100 5 is sent, the instrument counts back 100 records from the last record collected (record 740), and then returns 5 records: 640, 641, 642, 643, and 644. For details on how to decode the flag fields within these records, see the "flags" command.

Send: lrec 5 Receive: lrec 100 5 11:03 02-22-03 flags 54089100 no 8416E-1 nox 8458E-1 lono 6474E-1 lonox 6506E-1 pres 131.4 pmtt 53.1 intt 80.0 rctt 80.0 convt 61 smplf 0.500 ozonf 0.000 pmtv -116 11:04 02-22-03 flags 54089100 no 8421E-1 nox 8457E-1 lono 6477E-1 lonox 6505E-1 pres 131.5 pmtt 53.1 intt 80.0 rctt 80.0 convt 61 smplf 0.500 ozonf 0.000 pmtv -116 11:05 02-22-03 flags 54089100 no 8440E-1 nox 8456E-1 lono 6492E-1 lonox 6505E-1 pres 131.5 pmtt 53.2 intt 80.0 rctt 80.0 convt 61 smplf 0.500 ozonf 0.000 pmtv -116 11:06 02-22-03 flags 54089100 no 8432E-1 nox 8483E-1 lono 6486E-1 lonox 6525E-1 pres 133.0 pmtt 53.0 intt 80.0 rctt 80.0 convt 61 smplf 0.500 ozonf 0.000 pmtv -116 11:07 02-22-03 flags 54089100 no 8442E-1 nox 8383E-1 lono 6494E-1 lonox 6449E-1 pres 131.5 pmtt 53.1 intt 80.0 rctt 80.0 convt 61 smplf 0.500 ozonf 0.000 pmtv -116

### where:

pmtv = PMT Voltage pmtt = PMT Temperature intt = Internal Temperature rctt = Reaction Chamber Temperature convt = NO<sub>2</sub> Converter Temperature smplf = Sample Flow ozonf = Ozonator Flow pres = Pressure

### erec format

### lrec format

### srec format

These commands report the output format for long and short records, and dynamic data in various formats such as ASCII without text, ASCII with text, or binary. The example below shows the output format for long records is ASCII with text, according to Table B–4.

Send: lrec format Receive: lrec format 01

set erec format *format* set lrec format *format* set srec format *format*  These commands set the output format for long and short records, and dynamic data, according to Table B–4. The example below sets the long record output format to ASCII with text.

Send:	set	lrec	format	1	
Receive:	set	lrec	format	1	ok

 Table B-4. Record Output Formats

Format	Output Format
0	ASCII no text
1	ASCII with text
2	Binary data

### erec layout

### lrec layout

### srec layout

These commands report the layout (string indicating the data formats) for data that is sent out in response to the erec, lrec, srec, and related commands. For details on how to interpret the strings, see "Record Layout Definition" later in this appendix.

Send:	lrec layout
Receive:	<pre>lrec layout %s %s %lx %f %f</pre>
	t D L ffffffffff flags no nox hino hinox pres pmtt intt rctt convt smplf ozonf pmtv

### lrec mem size

### srec mem size

These commands report the long and short records that can be stored with the current settings and the number of blocks reserved for long and short records. To calculate the number of short records per block, add 2 to the number of records, and then divide by the number of blocks. The example below shows that 7 blocks were reserved for long records and the maximum number of long records that can be stored in memory is 1426.

Send:	lrec	mem	size				
Receive:	lrec	mem	size	1426	recs,	7	blocks

### lrec per

### srec per

These commands report the long and short records logging period. The example below shows that the short record logging period is 5 minutes.

Send: srec per Receive: srec per 5 min

set lrec per value set srec per value value = | 1 | 5 | 15 | 30 | 60 |

These commands set the long and short records logging period to *value* in minutes. The example below sets the long record logging period to 15 minutes.

```
Send: set lrec per 15
Receive: set lrec per 15 ok
```

### no of lrec

### no of srec

These commands report the number of long and short records stored in the long and short records memory. The example below shows that 50 long records have been stored in the memory.

Send:	no	of	lrec		
Receive:	no	of	lrec	50	recs

### malloc lrec

malloc srec

These commands report the currently set memory allocation for long and short records in percent of total memory.

Send: malloc lrec Receive: malloc lrec 10%

set malloc lrec *value* set malloc srec *value value* = 0 to 100

These commands set the percent of memory space allocated for long and short records to *value*, where *value* is a floating-point number representing percent. The example below sets the memory allocation for long records to 10.

**Note** Issuing these commands will clear all the logging data memory. All the existing records should be retrieved using appropriate commands, if required. ▲

Send: set malloc lrec 10 Receive: set malloc lrec 10 ok

### set copy sp to lrec set copy sp to srec set copy sp to stream

These commands copy the current selections in scratch pad (sp) into the long record, short record, or streaming data list. The example below copies the current list in scratch pad into the long records list.

Send:	set	сору	sp	to	lrec	
Receive:	set	сору	sp	to	lrec	ok

### set copy lrec to sp set copy srec to sp set copy stream to sp

These commands copy the current contents of the long record, short record, or streaming data list into the scratch pad (sp). These commands are useful in easy modification of current long record, short record, or streaming data lists. The example below copies the current list of long records into the scratch pad.

Send:	set	сору	lrec	to	sp	
Receive:	set	сору	lrec	to	sp	ok

### sp field number

This command reports the variable *number* and name stored at index in the scratch pad list. The example below shows that the field 5 in the scratch pad is set to index number 13, which is for the variable pressure.

Send: sp field 5 Receive: sp field 5 13 pres

### set sp field number value

*number* = 1-32 is the maximum number of fields in long and short record lists.

*number* = 1-18 is for streaming data lists.

This command sets the scratch pad field *number* (item number in scratch pad list) to *value*, where *value* is the index number of a variable in the analog out variable list. Available variables and their corresponding index numbers may be obtained using the command "list var aout". The "set sp field" command is used to create a list of variables which can then be transferred into the long record, short record, or streaming data lists, using the "set copy sp to lrec", "set copy sp to srec", or "set copy sp to stream" commands.

Send: set sp field 1 34 Receive: set sp field 1 34 ok

### stream per

This command reports the currently set time interval in seconds for streaming data.

Send: stream per Receive: stream per 10

#### set stream per number value

number value = | 1 | 2 | 5 | 10 | 20 | 30 | 60 | 90 | 120 | 180 | 240 | 300 |

This command sets the time interval between two consecutive streaming data strings to *number value* in seconds. The example below sets the number value to 10 seconds.

Send:	set	stream	per	10	
Receive:	set	stream	per	10	ok

#### stream time

This command reports if the streaming data string will have a time stamp attached to it or not, according to Table B-5.

Send:	stream	time	
Receive:	stream	time	0

### set stream time value

This command enables *value*, where *value* is to attach or disable time stamp to streaming data string, according to Table B–5. The example below attaches a time stamp to streaming data.

Send:	set	stream	time	0	
Receive:	set	stream	time	0	ok

### Table B–5. Stream Time Values

Value	Stream Time
00	Attaches time stamp to streaming data string
01	Disables time stamp to streaming data string

# Calibration

### set cal no bkg set cal nox bkg

These commands will auto-calibrate the NO, and NO<sub>x</sub> backgrounds. If the instrument is set to manual  $NO_x$  mode, the response to "set cal no bkg" will be "can't, wrong settings". The example below shows a successful auto-calibration of the NO background.

Send: set cal no bkg Receive: set cal no bkg ok

set cal no coef set cal no2 coef set cal nox coef set cal high no coef set cal high no2 coef set cal high nox coef set cal low no coef set cal low no2 coef set cal low nox coef These commands will auto-calibrate NO, NO<sub>2</sub>, and NO<sub>x</sub> coefficients based on NO, NO<sub>2</sub>, and NO<sub>x</sub> span gas concentrations. The high and low commands are only available in dual and auto range mode. If the mode is incorrect, the instrument responds with "can't, wrong settings". The example below shows a successful auto-calibration of the low NO coefficient. Send: set cal low no coef set cal low no coef ok Receive: no coef no2 coef nox coef high no coef high no2 coef high nox coef low no coef low no2 coef low nox coef These commands report NO, NO<sub>2</sub>, and NO<sub>x</sub> coefficients in single range mode, or the high and low range coefficients in dual or auto range mode. If the mode is incorrect, the instrument responds with "can't, wrong settings". The example below reports that the NO coefficient is 1.000. Send: no coef no coef 1.000 Receive: set no coef value set no2 coef value set nox coef value set high no coef value set high no2 coef value set high nox coef value set low no coef value set low no2 coef value set low nox coef value
These commands set the NO, NO<sub>2</sub>, and NO<sub>x</sub> coefficients to user-defined values to *value*, where *value* is a floating-point representation of the coefficient. The example below sets the NO coefficient to 1.005.

Send: set no coef 1.005 set no coef 1.005 ok Receive: no gas no2 gas nox gas high no gas high no2 gas high nox gas low no gas low no2 gas low nox gas These commands report NO, NO<sub>2</sub>, and NO<sub>x</sub> span gas concentrations used to auto-calibrate low NO, NO<sub>2</sub>, and NO<sub>x</sub> coefficients. The high and low commands are only available in dual and auto range mode. If the mode is incorrect, the instrument responds with "can't, wrong settings". The example below reports that the NO low span gas concentration is 240.0 ppb. Send: low no gas Receive: low no gas 2400E-1 ppb set no gas value set no2 gas value set nox gas value set high no gas value set high no2 gas value set high nox gas value set low no gas value set low no2 gas value set low nox coef value These commands set the NO, NO<sub>2</sub>, and NO<sub>x</sub> span gas concentrations used by the auto-calibration routine to *value*, where *value* is a floating-point representation of the gas concentration in current selected units. The gas units are the same as those chosen by the user. The example below sets the NO span gas concentration to 123.4 ppb.

Send: set no gas 123.4 Receive: set no gas 123.4 ok no bkg nox bkg bkg no bkg nox These commands report the current NO and NO<sub>x</sub> backgrounds. The example below reports that the NO background is 5.5 ppb. Send: no bkg no bkg 5.5 ppb Receive: set no bkg value set nox bkg value set bkg no value set bkg nox value These commands are used to set NO and NO<sub>x</sub> backgrounds to userdefined values to *value*, where *value* is a floating-point representation of the background in current selected units. The example below sets the NO background to 5.5 ppb.

Send:	set	no	bkg	5.5	
Receive:	set	no	bkg	5.5	ok

#### pres cal

This command reports the pressure recorded at the time of calibration. The example below shows that the pressure at calibration is 85.5 mmHg.

Send: pres cal Receive: pres cal 85.5 mmHg

#### set pres cal

This command automatically sets the current pressure as the calibration pressure. The example below successfully sets the calibration pressure to 120.5 mmHg.

Send: set pres cal 120.5 Receive: set pres cal 120.5 ok

#### set cal perm gas offset res res

This command calibrates the permeation gas temperature sensor offset using a calibrating resistor of value *res* in ohms.

Send: set cal perm gas offset res 5000 Receive: set cal perm gas offset res 5000 ok

#### set cal perm gas offset temp temp

This command calibrates the permeation gas temperature sensor offset to a temperature of *temp* in degrees C.

Send: set cal perm gas offset temp 34.5 Receive: set cal perm gas offset temp 34.5 ok

#### set cal perm oven offset res res

This command calibrates the permeation oven temperature sensor offset using a calibrating resistor of value *res* in ohms.

Send:	set	cal	perm	oven	offset	res	5000	
Receive:	set	cal	perm	oven	offset	res	5000	ok

#### set cal pres

This command automatically sets the current pressure as the calibration pressure. The example below successfully sets the calibration pressure.

	I	I
	Send:	set cal pres
	Receive:	set cal pres ok
Keys/Display	push button	
	do	
	down	
	en	
	enter	
	he	
	help	
	le	
	left	
	me	
	menu	
	ri	
	right	
	ru	
	run	
	up	
	1	
	2	
	3	
	4	
		down   en   enter   he   help   le   left   me   menu   ri   right     1   2   3   4
		ands simulate pressing the front panel pushbuttons. The resent the front-panel soft keys, from left to right.

Send:	push	enter	
Receive:	push	enter	ok

isc iscreen This command retrieves the framebuffer data used for the display on the *i*Series instrument. It is 19200 bytes in size, 2-bits per pixel, 4 pixels per byte arranged as 320 by 240 characters. The data is sent in RLE encoded form to save time in transmission. It is sent as a type '5' binary C-Link response with no checksum.

The RLE encoding consists of a 0 followed by an 8-bit count of consecutive 0xFF bytes. The following 'c' code will expand the incoming data.

```
unpackDisplay (void far* tdib, unsigned char far* rlescreen )
void
{
int i,j,k;
unsigned char far *sc4bpp, *sc2bpp, *screen, *ptr;
       ptr = screen = (unsigned char far *)malloc(19200);
       //RLE decode the screen
          for (i=0; i<19200 && (ptr - screen) < 19200; i++)
          ł
                (ptr++) = (rlescreen + i);
                if (*(rlescreen + i) == 0)
                unsigned char rlecount = *(unsigned char *)(rlescreen + ++i);
                        while (rlecount)
                        {
                                *(ptr++) = 0;
                                rlecount--;
                        }
                }
                else if (*(rlescreen + i) == 0xff)
                unsigned char rlecount = *(unsigned char *)(rlescreen + ++i);
                while (rlecount)
                {
                        (ptr++) = 0xff;
                        rlecount--;
                }
            }
       }
```

To convert this data into a BMP for use with windows, it needs to be turned into a 4BPP as that is the smallest windows can display. Also note that BMP files are upside down relative to this data, i.e. the top display line is the last line in the BMP.

#### sc screen

This command is meant for backward compatibility on the C series. Screen information is reported using the "iscreen" command above.

screen
screen
This is an I series
Instrument. Screen
Information not
available

## Measurement Configuration

range no range no2 range nox high range no high range no2 high range nox low range no low range no2 low range nox These commands report NO, NO<sub>2</sub>, and NO<sub>x</sub> range in single range mode, or the high and low ranges in dual or auto range mode. If the mode is incorrect, the instrument responds with "can't, wrong settings". The example below reports that the NO full-scale range is set to 50 ppb, according to Table B-6 and Table B-7. Send: range no Receive: range no 0: 5000E-2 ppb set range Selection set high range Selection set low range Selection These commands select the NO, NO<sub>2</sub>, and NO<sub>x</sub> full-scale ranges, according to Table B-6 and Table B-7. The example below sets the NO

Send:	set	range	5	
Receive:	set	range	5	ok

full-scale range to 2,000 ppb.

Table	<b>B–6</b> .	Standard	Ranges
-------	--------------	----------	--------

Selection	ppb	ppm	μgm³	mgm <sup>3</sup>
0	50	0.05	100	0.1
1	100	0.10	200	0.2
2	200	0.20	500	0.5
3	500	0.50	1,000	1.0
4	1,000	1.00	2,000	2.0
5	2,000	2.00	5,000	5.0
6	5,000	5.00	10,000	10.0
7	10,000	10.00	20,000	20.0
8	20,000	20.00	30,000	30.0
9	C1	C1	C1	C1
10	C2	C2	C2	C2
11	C3	C3	C3	C3

#### Table B-7. Extended Ranges

Selection	ppb	ppm	μgm³	mgm <sup>3</sup>
0	200	0.2	500	0.5
1	500	0.5	1,000	1
2	1,000	1	2,000	2
3	2,000	2	5,000	5
4	5,000	5	10,000	10
5	10,000	10	20,000	20
6	20,000	20	50,000	50
7	50,000	50	100,000	100
8	100,000	100	150,000	150
9	C1	C1	C1	C1
10	C2	C2	C2	C2
11	C3	С3	С3	C3

custom range

range = | 1 | 2 | 3 |

This command reports the user-defined value of custom range 1, 2, or 3. The example below reports that custom range 1 is defined to 5.50 ppb.

Send: custom 1 Receive: custom 1 550E-2 ppb set custom range range value set custom 1 value set custom 2 value set custom 3 value set custom 1 range value set custom 2 range value set custom 3 range value set custom 3 range value set custom 3 range value

three custom *ranges* 1, 2, or 3 to range *value*, where *value* is a floating-point number representing concentration in ppb ppm,  $\mu$ g/m<sup>3</sup> or mg/m<sup>3</sup>. The example below sets the custom 1 range to 55.5 ppb.

Send:set custom 1 range 55.5Receive:set custom 1 range 55.5 ok

#### range mode

This command reports the current range mode.

Send:	range	mode	
Receive:	range	mode	single

#### set range mode mode

This command sets the current range mode to single, dual, or auto. The example below sets the range mode to single.

Send: set range mode single Receive: set range mode single ok

#### gas mode

This command reports the current mode of sample, zero, or span. The example below reports that the gas mode is sample.

Send: gas mode Receive: gas mode sample

#### set sample

#### set sample gas

These commands set the zero/span valves to the sample mode. The example below sets the instrument to sample mode, that is, the instrument is reading the sample gas.

Send:	set	sample	
Receive:	set	sample	ok

#### set zero

#### set zero gas

These commands set the zero/span valves to the zero mode. The example below sets the instrument to zero mode that is, the instrument is reading the sample gas.

Send: set zero Receive: set zero ok

#### set span

#### set span gas

These commands set the zero/span valves to the span mode. The example below sets the instrument to span mode that is, the instrument is sampling span gas.

Send: set span Receive: set span ok

#### gas unit

This command reports the current gas units (ppb, ppm,  $\mu g/m^3$ , or  $mg/m^3$ ). The example reports that the gas unit is set to ppb.

Send:	gas	unit	
Receive:	gas	unit	ppb

#### set gas unit

 $unit = |ppb|ppm|\mu g/m^3|\mu g/m^3|$ 

This command sets the gas units to ppb, ppm,  $\mu$ g/m<sup>3</sup>, or mg/m<sup>3</sup>. The example below sets the gas units to mg/m<sup>3</sup>.

Send:	set	gas	unit	mg/m3	
Receive:	set	gas	unit	mg/m3	ok

#### meas mode

This command reports which measurement mode  $(NO/NO_x, NO, or NO_x)$  is active. The example below reports that the measurement mode is set to NO.

Send:	meas	mode	
Receive:	meas	mode	no

set meas mode mode

mode = | no/nox | no | nox | pre |

This command sets the instrument to  $NO/NO_x$  (auto) mode, manual NO mode, or manual  $NO_x$  mode. The example below sets the instrument to the manual NO mode.

Send:	set	meas	mode	no	
Receive:	set	meas	mode	no	ok

#### pres comp

This command reports whether pressure compensation is on or off. The example below shows that pressure compensation is on.

Send: pres comp Receive: pres comp on

#### set pres comp onoff

These commands turn the pressure compensation *on* or *off*. The example below turns pressure compensation off.

Send:	set	pres	comp	off	
Receive:	set	pres	comp	off	ok

#### temp comp

This command reports whether temperature compensation is on or off. The example below shows the temperature compensation is off.

Send:	temp	comp	
Receive:	temp	comp	off

#### set temp comp onoff

These commands turn the temperature compensation *on* or *off*. The example below turns temperature compensation off.

Send:	set ten	np comp	off
Receive:	set ten	пр сотр	off ok

## Hardware Configuration

#### contrast

This command reports the screen's level of contrast. The example below shows the screen contrast is 50%, according to Table B–8.

Send: contrast Receive: contrast 5:50%

#### set contrast level

This command sets the screen's *level* of contrast, according to Table B–8. The example below sets the contrast level to 50%.

Send:	set	contrast	5	
Receive:	set	contrast	5	ok

Level	Contrast Level
0	0%
1	10%
2	20%
3	30%
4	40%
5	50%
6	60%
7	70%
8	80%
9	90%
10	100%

#### Table B-8. Contrast Levels

#### conv set temp

This command reports the temperature that the  $NO_2$  converter is set to. The example below reports that the converter temperature is set to 625 °C.

Send:	conv	set	temp			
Receive:	conv	set	temp	625	deg	С

#### set conv set temp value

This command sets the temperature that the  $NO_2$  converter is set to, where *value* is an integer representing dwgrees C. The example below sets the converter temperature to 625 °C.

Send:	set	conv	set	temp				
Receive:	set	conv	set	temp	625	deg	С	ok

#### date

This command reports the current date. The example below reports the date as December 1, 2004.

Send:	date
Receive:	date 12-01-04

set date *mm-dd-yy mm* = month *dd* = day *yy* = year

This command sets the date of the analyzer's internal clock. The example below sets the date to December 1, 2004.

Send: set date 12-01-04 Receive: set date 12-01-04 ok

#### set default params

This command sets all the parameters to their default values. This does not affect the factory-calibrated parameters.

```
Send: set default params
Receive: set default params ok
```

#### ozonator

This command reports the ozonator is on or off. The example below reports that the ozonator is on.

Send:	ozonator	
Receive:	ozonator	on

#### set ozonator onoff

These commands set the ozonator *on* or *off*. The example below sets the ozonator off.

Send: set ozonator off Receive: set ozonator off ok

#### ozonator flow

This command reports the current ozonator flow. The example below reports that the current ozonator flow is 0.050 LPM.

Send: ozonator flow Receive: ozonator flow 0.050 l/m

#### ozonator safety

This command reports the status of the ozonator safety on or off. The example below reports that the ozonator safety is on.

```
Send: ozonator safety
Receive: ozonator safety on
```

#### set ozonator safety onoff

These commands set the ozonator safety *on* or *off*. The example below sets the ozonator safety off.

Send:	set	ozonator	safety	off	
Receive:	set	ozonator	safety	off	ok

#### ozonator status

This command reports the status of the ozonator and safety. The example below reports that the ozonator is off.

Send:	ozonator	status	
Receive:	ozonator	status	off

#### pmt status

This command reports the status of the PMT on or off. The example below reports that the PMT is on.

Send:	pmt	status	
Receive:	pmt	status	on

#### set pmt onoff

These commands set the PMT *on* or *off*. The example below turns the PMT off.

Send:	set	pmt	off	
Receive:	set	pmt	off	ok

#### save

#### set save params

This command stores all current parameters in FLASH memory. It is important that each time instrument parameters are changed, that this command be sent. If changes are not saved, they will be lost in the event of a power failure. The example below saves the parameters to FLASH memory.

Send: set save params Receive: set save params ok

#### time

This command reports the current time (24-hour time). The example below reports that the internal time is 2:15:30 pm.

Send: time Receive: time 14:15:30

set time hh:mm:ss
hh = hours
mm = minutes
ss = seconds

This command sets the internal clock (24-hour time). The example below sets the internal time to 2:15 pm.

**Note** If seconds are omitted, the seconds default to 00.

```
Send: set time 14:15
Receive: set time 14:15 ok
```

## Communications Configuration

#### addr dns

This command reports the TCP/IP address for the domain name server.

Send: addr dns Receive: addr dns 192.168.1.1

#### set addr dns address

This command sets the dns *address*, where *address* consists of four numbers ranging from 0-255 inclusive, separated by ".".

 Send:
 set addr dns 192.168.1.1

 Receive:
 set addr dns 192.168.1.1 ok

#### addr gw

This command reports the default TCP/IP gateway address.

Send:	addr	gw	
Receive:	addr	gw	192.168.1.1

#### set addr gw address

This command sets the default gateway *address*, where *address* consists of four numbers ranging from 0-255 inclusive, separated by ".".

Send: set addr gw 192.168.1.1 Receive: set addr gw 192.168.1.1 ok

#### addr ip

This command reports the IP address of the analyzer.

Send: addr ip Receive: addr ip 192.168.1.15

#### set addr ip address

This command sets the analyzer's IP *address*, where *address* consists of four numbers ranging from 0-255 inclusive, separated by ".".

Send:	set	addr	ip	192.168.1.15	
Receive:	set	addr	ip	192.168.1.15	ok

#### addr nm

This command reports the IP netmask.

Send:	addr	nm	
Receive:	addr	nm	255.255.255.0

#### set addr nm address

This command sets the nm *address*, where *address* consists of four numbers ranging from 0-255 inclusive, separated by ".".

 Send:
 set addr nm 255.255.255.0

 Receive:
 set addr nm 255.255.255.0 ok

#### baud

This command reports the current baud rate for the serial port (RS232/RS485). The example below reports that the current baud rate is 9600 baud.

Send:	baud	
Receive:	baud	9600

#### set baud rate

rate = | 1200 | 2400 | 4800 | 9600 | 19200 | 38400 | 57600 | 115200 |

This command sets the instrument baud rate. The example below sets the instrument's baud rate to 9600.

**Note** After the command is sent, the baud rate of the sending device must be changed to agree with the instrument. ▲

```
Send: set baud 9600
Receive: set baud 9600 ok
```

#### dhcp

This command reports the current state of use of DHCP on or off. DHCP is used to assign an IP address to the analyzer automatically. The example below shows that DHCP is on.

Send:	dhcp
Receive:	dhcp on

#### set dhcp onoff

These commands enables and disables the DHCP service by either *on* or *off*. Changes to this parameter will only take effect when the analyzer is powered up. The example below sets the DHCP service on.

**Note** When DHCP is set to on, the user-supplied addr gw, addr dns, addr ip, and addr nm parameters are not used. ▲

Send: set dhcp on Receive: set dhcp on ok

#### format

This command reports the current reply termination format. The example below shows that the reply format is 00, which means reply with no checksum, according to Table B–9.

Send: format Receive: format 00

#### set format format

This command sets the reply termination *format*, where *format* is set according to Table B–9. The example below sets the reply termination format to checksum.

Send:	set	format	01	
Receive:	set	format	01	ok

#### Table B–9. Reply Termination Formats

Format	Reply Termination		
00	<cr></cr>		
01	<nl> sum xxxx <cr></cr></nl>		

where xxxx = 4 hexadecimal digits that represent the sum of all the characters (bytes) in the message

#### host name

This command reports the host name string.

Send:	host	name	
Receive:	host	name	analyzer01

#### set host name string

This command sets the host name *string*, where *string* is 1-13 alphanumeric characters.

Send: set host name analyzer01 Receive: set host name analyzer01 ok

#### instr name

This command reports the instrument name.

Send:	instr name
Receive:	instr name
	NO-NO2-NOx Analyzer
	NO-NO2-NOx Analyzer

#### instrument id

This command reports the instrument id.

Send:	instrument	id	
Receive:	instrument	id	42

set instrument id value

This command sets the instrument id to *value*, where *value* is a decimal number between 0 and 127 inclusive.

**Note** Sending this command via RS-232 or RS-485 will require the host to use the new id for subsequent commands. ▲

Send:	set	instrument	id	50	
Receive:	set	instrument	id	50	ok

#### mode

This command reports what operating mode the instrument is in: local, service, or remote. The example below shows that the instrument is in the remote mode.

Send: mode Receive: mode remote

#### set mode local

#### set mode remote

These commands set the instrument to local or remote mode. The example below sets the instrument to the local mode.

Send:	set	mode	local	
Receive:	set	mode	local	ok

#### program no

This command reports the analyzer's model information and program version number, which will be dependent on the current version.

```
Send: program no
Receive: program no iSeries 42i 01.00.01.074
```

#### set layout ack

This command disables the stale layout/layout change indicator ('\*') that is attached to each response if the layout has changed.

Send:	set	layout	ack	
Receive:	set	layout	ack	ok

## I/O Configuration

#### analog iout range *channel*

This command reports the analog current output range setting for *channels*, where *channel* must be between 1 and 6, inclusive. The example below reports current output channel 4 to the 4-20 mA range, according to Table

B-10. This command responds with "feature not enabled" if the I/O expansion board is not detected.

Send:	analog	iout	range	4	
Receive:	analog	iout	range	4	2

#### set analog iout range channel range

This command sets analog current output *channel* to the *channel range* where *channel* is between 1 and 6 inclusive, and *range* is set according to Table B–10. The example below sets current output channel 4 to the 0-20 mA range. This command responds with "feature not enabled" if the I/O expansion board is not detected.

Send:	set	analog	iout	range	4	1	
Receive:	set	analog	iout	range	4	1	ok

#### Table B–10. Analog Current Output Range Values

Range	Output Range
1	0-20 mA
2	4-20 mA
0 [cannot be set to this, but may report]	Undefined

#### analog vin *channel*

This command retrieves the analog voltage input *channel* data, both the calculated value and the actual voltage. In the example below, the "calculated" value of channel 1 is 75.325 degrees F, volts are 2.796. This command responds with "feature not enabled" if the I/O expansion board is not detected.

Send:	analog	vin	1		
Receive:	analog	vin	1	75.325	2.796

#### analog vout range channel

This command reports the analog voltage output *channel* range, where *channel* is between 1 and 6 inclusive, according to Table B–11.

```
Send: analog vout range 2
Receive: analog vout range 2 3
```

#### set analog vout range channel range

This command sets analog voltage output *channel* to the range, where *channel* is between 1 and 6 inclusive, and *range* is set according to Table B–11. The example below sets channel 2 to the 0-10 V range.

Send:	set	analog	vout	range	2	3		
Receive:	set	analog	vout	range	2	3	ok	

Table B–11. Analog Voltage	Output Range Values
----------------------------	---------------------

Range	Output Range
1	0-1 V
2	0-100 mV
3	0-10 V
4	0-5 V
0 [cannot be set to this, but may report]	Undefined

#### dig in

This command reports the status of the digital inputs as a 4-digit hexadecimal string with the most significant bit (MSB) being input 16.

Send:	dig	in	
Receive:	dig	in	0xff7f

#### din channel

This command reports the action assigned to input *channel* and the corresponding active state. The example below reports the input 5 to be assigned an index number 9 corresponding to action of "analog outputs to zero" with the active state being high.

Send: din 5 Receive: din 5 9 AOUTS TO ZERO high

#### set din channel index state

This command assigns digital input *channel* (1-16) to activate the action indicated by *index* (1-35), when the input transitions to the designated *state* (high or low). Use "list din var" command to obtain the list of supported *index* values and corresponding actions.

```
Send: set din 1 3 high
Receive: set din 1 3 high ok
```

#### dout channel

This command reports the index number and output variable and the active state assigned to output *channel*. The example below reports the input 2 to be assigned an index number 2 corresponding to "local/remote" with the active state being open.

Send:	dout	4				
Receive:	dout	4	11	GEN	ALARM	open

#### set dout *channel index state*

This command assigns digital output *channel* to be assigned to the action associated with *index*, and assigns it an active state of *state* (open or closed).

Send: set dout 4 11 open Receive: set dout 4 11 open ok

#### dtoa channel

This reports the outputs of the 6 or 12 Digital to Analog converters, according to Table B–12. The example below shows that the D/A #1 is 97.7% full-scale.

Send:	dtoa 1
Receive:	dtoa 1 97.7%

**Note** If the instrument is in a mode which does not provide a particular output, and that output is selected, the value will be 0.0.  $\blacktriangle$ 

All channel ranges are user definable. If any customization has been made to the analog output configuration, the default selections may not apply.

D to A	Function	Single Range	Dual Range	Auto Range
1	Voltage Output	NO	High NO	High/Low NO
2	Voltage Output	NO <sub>2</sub>	$High NO_2$	High/Low $NO_2$
3	Voltage Output	NO <sub>x</sub>	$High NO_x$	High/Low NO <sub>x</sub>
4	Voltage Output	Not Used	Low NO	Range (NO <sub>x</sub> )
5	Voltage Output	Not Used	Low $NO_2$	Not Used
6	Voltage Output	Not Used	Low NO <sub>x</sub>	Not Used
7	Current Output	NO	High NO	High/Low NO
8	Current Output	NO <sub>2</sub>	$High NO_2$	High/Low $NO_2$
9	Current Output	NO <sub>x</sub>	$High NO_x$	$High/Low NO_x$
10	Current Output	Not Used	Low NO	Range (NO <sub>x</sub> )
11	Current Output	Not Used	Low $NO_2$	Not Used
12	Current Output	Not Used	Low NO <sub>x</sub>	Not Used

 Table B–12.
 Default Output Assignment

list var aou	t
list var dou	t
list var din	
	mands report the list of index numbers, and the variables
(associated	with that index number) available for selection in the current
mode (dete	rmined by single/dual/auto, gas mode) for analog output, digital
output and	digital inputs. The index number is used to insert the variable
in a field lo	cation in a list using "set sp <i>field index</i> ". The example below
reports the	list of analog output, index numbers, and variables.
Send:	list var aout

Send:	list var aout
Receive:	list var aout
	index variable
	0 none
	1 no
	2 no2
	3 nox
	18 intt
	19 rctt
	20 pmtt
	21 convt
	25 pres
	26 smplf
	27 pmtv
	28 ain1
	29 ain2
	30 ain3
	31 ain4
	32 ain5
	33 ain6
	34 ain7
	35 ain8

#### relay stat

This command reports the current relay logic normally "open" or normally "closed," if all the relays are set to same state, that is all open or all closed. The example below shows that the status when all the relays logic is set to normally "open".

Send:	relay	stat	
Receive:	relay	stat	open

**Note** If individual relays have been assigned different logic then the response would be a 4-digit hexadecimal string with the least significant byte (LSB) being relay no 1. ▲

For example:

Receive: relay stat 0x0001 (indicates relay no 1 is set to normally open logic, all others are normally closed) Receive: relay stat 0x0005 (indicates relay no 1 and 3 are set to be normally open logic, all others are normally closed)

set relay open set relay open value set relay closed set relay closed value These commands set the relay logic to normally open or closed for relay number value, where value is the relay between 1 and 16. The example below sets the relay no 1 logic to normally open.

**Note** If the command is sent without an appended relay number then all the relays are assigned the set logic of normally open/closed. ▲

Send: set relay open 1 Receive: set relay open 1 ok

## Record Layout Definition

The Erec, Lrec Srec layouts contain the following:

- A format specifier for parsing ASCII responses
- A format specifier for parsing binary responses

In addition to these the Erec Layout contains:

• A format specifier for producing the front-panel displays

Values are read in using either the ASCII or binary format specifiers and converted to uniform internal representations (32-bit floats or 32-bit integers). These values are converted into text for display on the screen using the format specifier for the front-panel display. Normally, the specifier used to parse a particular datum from the input stream will be strongly related to the specifier used to display it (such as, all of the floating point inputs will be displayed with an 'f' output specifier, and all of the integer inputs will be displayed with a 'd' specifier).

## Format Specifier for ASCII Responses

The first line of the Layout response is the scanf-like parameter list for parsing the fields from an ASCII ERec response. Parameters are separated by spaces and the line is terminated by a \n (the normal line separator character). Valid fields are:

%s - parse a string %d - parse a decimal number %ld - parse a long (32-bit) decimal number %f - parse a floating point number %x - parse a hexadecimal number %lx - parse a long (32-bit) hex number %\* - ignore the field

**Note** Signed versus unsigned for the integer values does not matter; it is handled automatically. ▲

fier for<br/>ponsesThe second line of the Layout response is the binary parameter list for<br/>parsing the fields from a binary response. Parameters MUST be separated<br/>by spaces, and the line is terminated by a '\n'. Valid fields are:

t - parse a time specifier (2 bytes)
D - parse a date specifier (3 bytes)
i - ignore one 8-bit character (1 byte)
e - parse a 24-bit floating point number (3 bytes: n/x)
E - parse a 24-bit floating point number (3 bytes: N/x)
f - parse a 32-bit floating point number (4 bytes)
c - parse an 8-bit signed number (1 byte)
C - parse an 8-bit unsigned number (1 byte)
n - parse a 16-bit signed number (2 bytes)
N - parse a 16-bit unsigned number (2 bytes)
m - parse a 24-bit signed number (3 bytes)
M - parse a 24-bit unsigned number (3 bytes)
I - parse a 32-bit unsigned number (4 bytes)
L - parse a 32-bit unsigned number (4 bytes)

There is an optional single digit d which may follow any of the numeric fields which indicates that after the field has been parsed out, the resulting value is to be divided by 10<sup>d</sup>. Thus the 16-bit field 0xFFC6 would be interpreted with the format specifier 'n3' as the number -0.058.

### Format Specifier for Binary Responses

## Format Specifier for EREC Layout

The subsequent lines in the ERec Layout response describe the appearance of the full panel. The full instrument panel as it appears on the screen has two columns of lines. Each line is composed of three major components: (1) a text field, (2) a value field, and (3) a button. None of these three components is required. The text field contains statically displayed text.

The value field displays values which are parsed out of the response to a DATA/ERec command. It also displays, though background changes, alarm status. The button, when pressed, triggers input from either a dialog box or a selection list. There are five kinds of buttons, B, I, L, T, and N.

Each line in the layout string corresponds to one line on the display. The layout string describes each of the three major fields as well as translation mechanisms and corresponding commands.

- **Text** The first field in the layout string is the text. It is delimited by a ':'. The string up to the first ':' will be read and inserted in the text field of the line.
- **Value String** This is followed by a possible string enclosed in quotes that is used to place a string into the value field.

Value Source The value source, which is the item (or word) number in the DATA/ERec response, appears next. This is followed by an optional bitfield designator. The datum identified by the value source can be printed as a string 's', hexadecimal 'x', decimal 'd', or floating point 'f', or binary 'b' number. Typically, bitfield extractions are only done for decimal or hexadecimal numbers.

Floating-point numbers can be followed with an optional precision specifier which will be used as an argument to printf's %f format (e.g., a field of '4' would be translated into the printf command of '%.3f'). Alternately, the special character '\*' can precede the precision specifier; this causes an indirection on the precision specifier (which now becomes a field number).

This is useful when formatting, for example, numbers which have varying precision depending on the mode of the instrument.

Binary numbers can also have an optional precision specifier which is used to determine how many bits to print. For example, the specifier 'b4' will print the lowest four bits of the parsed number.

There are serious restrictions on where an 's' field may appear: currently sources 1 and 2 must be 's', and no others may be 's'.

Alarm Information	The value source is followed by optional alarm information, indicated by a commercial at sign '@' with a source indicator and a starting bit indicator. All alarm information is presumed to be two bits long (low and high). The bitfield extraction is performed on the integer part of the source. Typical alarm information would appear as '@6.4'.
Translation Table	Then, there appears an optional translation table within braces '{}'. This is a string of words separated by spaces. An example translation table would be '{Code_0 Code_1 Code_2 Code_3}'. The value, once extracted is used as a zero-based index into the translation table to determine the string to display.
Selection Table	Then there appears an optional selection table within parentheses '()'. This is a string of numbers separated by spaces '(0 1)'. The selection table lists the translation table entries which the user may select from when setting the parameter. This is not necessarily the same as the entries which may be displayed.
Button Designator	Then there appears an optional button designator. This will be one of 'B', 'I', 'L', 'T', or 'N'.
	B- Indicates a button which pops up an input dialog prompting the user for a new value using the designated input format. The input format is specified from the 'B' through the subsequent semicolon.
	I—Indicates a button which pops up a selection list with input translation. That is, the values read are translated before they are compared to the selection list options.
	L—Indicates a button which pops up a selection list without any translation. The output value is number of the selected option.
	T—Indicates a button which pops up a selection list with output translation. The number of the option selected is used as an index into the translation table to generate an output string.
	N—Indicates a button which only sends the subsequent command to the instrument. No user-prompting happens.
	The following string through an optional ' ' or the end of the line is the command which is to be sent to the instrument upon the completion of the button selection. The command string should normally contain print-style formatting to include the user input. If a ' ' is present, it indicates a

command which is sent to the instrument upon successful completion of the button command to update the value field.

This is not currently used.

**Examples** Some examples ('\n' is the C syntax for an end-of-line character):

'Concentrations\n'

This is a single text-only line.

'\n'

This is a single blank line.

' NO:3s\n'

This is a line which appears slightly indented. The text field is 'NO', the value is taken from the third element of the data response, and interpreted as a string.

' NO:18sBd.ddd;set no coef %s\n'

This is a line which also appears slightly indented. The next field is also 'NO', but the value is taken from the eighteenth element of the data response, again interpreted as a string. A button appears on this line which, when pressed, pops up an input dialog which will state "Please enter a new value for NO using a d.ddd format." The string entered by the user is used to construct the output command. If the user enters, for example, '1.234', the constructed command will be 'set no coef 1.234'.

 ' N0:21f{Code\_0 Code\_1 Code\_2 Code\_3 Code\_4 Code\_5 Code\_6 Code\_7 Code\_8 Code\_9 Code\_10 Code\_11}Lset range no %d\n'

This is a line which appears slightly indented, the title is again 'NO', and the value the twenty-first element of the data response, interpreted as a floating-point number. There is a no-translation button which creates a selection list of twelve "Code nn" options. The number of the user selection is used to create the output command. 'Mode:6.12-13x{local remote service service}(0 1)Tset mode
%s\n'

This is a line which has a title of 'Mode', and value taken from the sixth field of the data response. There is a bitfield extraction of bits 12 through 13 from the source (the value type is not important here because the value is being translated to an output string). Once the bits have been extracted, they are shifted down to the bit-zero position. Thus, the possible values of this example will be 0 through 3. The translation list shows the words which correspond to each input value, the zeroth value appearing first (0 -> local, 1 -> remote, etc.). The selection list shows that only the first two values, in this case, are to be shown to the user when the button is pressed. The 'T' button indicates full translation, input code to string, and user selection number to output string.

'\xC'

This is a line that starts a new column (the \xC or ^L),

' Comp:6.11x{off on}Tset temp comp %s\n'

This shows that the bitfield end (the second part of a bitfield specification) is optional. The bitfield will be one bit long, starting in this case at the eleventh bit.

'Background:7f\*8Bd.ddd;set o3 bkg %s\n'

This shows the use of indirect precision specifiers for floating point displays. The background value is taken from the 7th element, and the precision specifier is taken from the 8th. If the asterisk were not present, it would indicate instead that 8 digits after the decimal point should be displayed.

# Appendix C MODBUS Protocol

This appendix provides a description of the MODBUS Protocol Interface and is supported both over RS-232/485 (RTU protocol) as well as TCP/IP over Ethernet.

The MODBUS Commands that are implemented are explained in detail in this document. The MODBUS protocol support for the *i*Series enables the user to perform the functions of reading the various concentrations and other analog values or variables, read the status of the digital outputs of the analyzer, and to trigger or simulate the activation of a digital input to the instrument. This is achieved by using the supported MODBUS parameters listed below.

For details of the Model 42*i* MODBUS Protocol specification, see the following topics:

- "Serial Communication Parameters" on page C-1
- "TCP Communication Parameters" on page C-2
- "Application Data Unit Definition" on page C-2
- "Function Codes" on page C-3
- "MODBUS Parameters Supported" on page C-8

Additional information on the MODBUS protocol can be obtained at <u>http://www.modbus.org</u>. References are from MODBUS Application Protocol Specification V1.1a MODBUS-IDA June 4, 2004.

## Serial Communication Parameters

The following are the communication parameters that are used to configure the serial port of the *i*Series to support MODBUS RTU protocol.

Data rate	: from 1200-115200 Baud (9600 is default)
Parity	: None
Number of Stop bits	: 1
Number of Data bits	: 8

## TCP Communication Parameters

## Application Data Unit Definition

*i*Series Instruments support the MODBUS/TCP protocol. The register definition is the same as for the serial interface.

TCP connection port for MODBUS : 502

Here are the MODBUS ADU (Application Data Unit) formats over serial and TCP/IP:

Serial:	Slave Address	Function Code	Data	Error Check
TCP/IP:	MBAP Header	Function Code	Data	

**Slave Address** The MODBUS save address is a single byte in length. This is the same as the instrument ID used for C-Link commands and can be between 1 and 127 decimal (i.e. 0x01 hex to 0x7F hex). This address is only used for MODBUS RTU over serial connections.

**Note** Device ID '0' used for broadcast MODBUS commands, is not supported. Device IDs 128 through 247 (i.e. 0x80 hex to 0xF7 hex) are not supported because of limitations imposed by C-Link. ▲

**MBAP Header** In MODBUS over TCP/IP, a MODBUS Application Protocol Header (MBAP) is used to identify the message. This header consists of the following components:

Transaction Identifier	2 Bytes	0x0000 to 0xFFFF (Passed back in response)
Protocol Identifier	2 Bytes	0x00 (MODBUS protocol)
Length	2 Bytes	0x0000 to 0xFFFF (Number of following bytes)
Unit Identifier	1 Byte	0x00 to 0xFF (Passed back in response)

A Slave address is not required in MODBUS over TCP/IP because the higher-level protocols include device addressing. The unit identifier is not used by the instrument.

**Function Code** The function code is a single byte in length. The following function codes are supported by the instrument:

Read Coils	:	0x01
Read Inputs	:	0x02
Read Holding Registers	:	0x03
Read Input Registers	:	0x04
Force (Write) Single Coil	:	0x05
Read Exception Status	:	0x06

If a function code is received that is not in this list, an invalid function exception is returned.

**Data** The data field varies depending on the function. For more description of these data fields, see "Function Codes" below.

**Error Check** In MODBUS over Serial an error check is included in the message. This is not necessary in MODBUS over TCP/IP because the higher-level protocols ensure error-free transmission. The error check is a two-byte (16 bit) CRC value.

# **Function Codes** This section describes the various function codes that are supported by the Model 42*i*.

# (0x01/0x02) Read Coils / Read Coils / Inputs read the status of the digital outputs (relays) in the instrument. Issuing either of these function codes will generate the same response.

These requests specify the starting address, i.e. the address of the first output specified, and the number of outputs. The outputs are addressed starting at zero. Therefore, outputs numbered 1–16 are addressed as 0–15.

The outputs in the response message are packed as one per bit of the data field. Status is indicated as 1 =Active (on) and 0 - Inactive (off). The LSB of the first data byte contains the output addressed in the query. The other outputs follow toward the high end of this byte, and from low order to high order in subsequent bytes. If the returned output quantity is not a multiple of eight, the remaining bits in the final data byte will be padded with zeros (toward the high order end of the byte). The Byte Count field specifies the quantity of complete bytes of data.

**Note** The values reported may not reflect the state of the actual relays in the instrument, as the user may program these outputs for either active closed or open.  $\blacktriangle$ 

Request		
Function code	1 Byte	0x01 or 0x02
Starting Address	2 Bytes	0x0000 to maximum allowed by instrument
Quantity of outputs	2 Bytes	1 to maximum allowed by instrument
Unit Identifier	1 Byte	0x00 to 0xFF (Passed back in response)

#### Response

Function code	1 Byte	0x01 or 0x02
Byte count	1 Byte	N*
Output Status	n Byte	N = N  or  N+1

\*N = Quantity of Outputs / 8, if the remainder not equal to zero, then N=N+1

#### Error Response

Function code	1 Byte	0x01 or 0x02
Exception code	1 Byte	01=Illegal Function, 02=Illegal Address,
		03=Illegal Data, 04=Slave Device Failure

Here is an example of a request and response to read outputs 2–15:

#### Request

Field Name	(Hex)
Function	0x01
Starting Address Hi	0x00
Starting Address Lo	0x02
Quantity of Outputs Hi	0x00
Quantity of Outputs Lo	0x0D

#### Response

Field Name	(Hex)
Function	0x01
Byte Count	0x03
Output Status 2–10	OxCD
Output Status 11–15	0x0A

The status of outputs 2–10 is shown as the byte value 0xCD, or binary 1100 1101. Output 10 is the MSB of this byte, and output 2 is the LSB. By convention, bits within a byte are shown with the MSB to the left, and the LSB to the right. Thus, the outputs in the first byte are '10 through 2', from left to right. In the last data byte, the status of outputs 15-11 is shown as the byte value 0x0A, or binary 0000 1010. Output 15 is in the fifth bit position from the left, and output 11 is the LSB of this byte. The four remaining high order bits are zero filled.

## (0x03/0x04) Read Holding Registers / Read Input Registers

Read holding / input registers reads the measurement data from the instrument. Issuing either of these function codes will generate the same response. These functions read the contents of one or more contiguous registers.

These registers are 16 bits each and are organized as shown below. All of the values are reported as 32-bit IEEE standard 754 floating point format. This uses 2 sequential registers, least significant 16 bits first.

The request specifies the starting register address and the number of registers. Registers are addressed starting at zero. Therefore, registers numbered 1-16 are addressed as 0-15. The register data in the response message are packed as two bytes per register, with the binary contents right justified within each byte. For each register, the first byte contains the high order bits and the second contains the low order bits.

#### Request

Function code	1 Byte	0x03 or 0x04
Starting Address	2 Bytes	0x0000 to maximum allowed by instrument
Quantity of Registers	2 Bytes	1 to maximum allowed by instrument

#### Response

Function code	1 Byte	0x03 or 0x04
Byte count	1 Byte	2 x N*
Register value	N* x 2 Bytes	N = N  or  N+1

\*N = Quantity of Registers

Error Response		
Function code	1 Byte	Function code + 0x80
Exception code	1 Byte	01=Illegal Function, 02=Illegal Address,
		03=Illegal Data, 04=Slave Device Failure

Here is an example of a request and response to read registers 10-13:

#### Request

Field Name	(Hex)
Function	0x03
Starting Address Hi	0x00
Starting Address Lo	0x09
No. of Registers Hi	0x00
No. of Registers Lo	0x04

#### Response

Field Name	(Hex)
Function	0x03
Byte Count	0x06
Register value Hi (10)	0x02
Register value Lo (10)	0x2B
Register value Hi (11)	0x00

Register value Lo (11)	0x00
Register value Hi (12)	0x00
Register value Lo (12)	0x64
Register value Hi (13)	0x00
Register value Lo (13)	0x64

The contents of register 10 are shown as the two byte values of 0x02 0x2B. Then contents of registers 11–13 are 0x00 0x00, 0x00 0x64 and 0x00 0x64 respectively.

## (0x05) Force (Write) Single Coil

The force (write) single coil function simulates the activation of the digital inputs in the instrument, which triggers the respective action.

This function code is used to set a single action to either ON or OFF. The request specifies the address of the action to be forced. Actions are addressed starting at zero. Therefore, action number 1 is addressed as 0. The requested ON/OFF state is specified by a constant in the request data field. A value of 0xFF00 requests the action to be ON. A value of 0x0000 requests it to be OFF. All other values are illegal and will not affect the output. The normal response is an echo of the request, returned after the state has been written.

#### Request Function code 1 Byte 0x05 Starting Address 2 Bytes 0x0000 to maximum allowed by instrument Output Value 2 Bytes 0x0000 or 0xFF00 Response Function code 1 Byte 0x05 Starting Address 2 Bytes 0x0000 to maximum allowed by instrument 0x0000 or 0xFF00 2 Bytes **Output Value Error Response** Function code 1 Byte Function code + 0x80 Exception code 1 Byte 01=Illegal Function, 02=Illegal Address, 03=Illegal Data, 04=Slave Device Failure

Here is an example of a request to write Coil 5 ON:

#### Request

Field Name	(Hex)
Function	05
Output Address Hi	00
Output Address Lo	05
Output Value Hi	FF
Output Value Lo	00

#### Response

Field Name	(Hex)
Function	05
Output Address Hi	00
Output Address Lo	05
Output Value Hi	FF
Output Value Lo	00

## MODBUS Parameters Supported

The following Table C–1 through Table C–3 lists the MODBUS parameters supported for the Model 42*i*.

Table C–1. Read Coils for 42*i* 

Coil Number	Status
1	AUTORANGE (NOx)
2	LOCAL/REMOTE
3	SERVICE
4	UNITS
5	ZERO MODE
6	SPAN MODE
7	NO MODE
8	NOx MODE
9	NOT USED
10	NOT USED
11	GEN ALARM
12	NO CONC MAX ALARM

Coil Number	Status
13	NO CONC MIN ALARM
14	NO2 CONC MAX ALARM
15	NO2 CONC MIN ALARM
16	NOx CONC MAX ALARM
17	NOx CONC MIN ALARM
18	NOT USED
19	NOT USED
20	NOT USED
21	NOT USED
22	INT TEMP ALARM
23	CHAMB TEMP ALARM
24	COOLER TEMP ALARM
25	NO2 CONVERTER TEMP ALARM
26	NOT USED
27	PERM OVEN GAS TEMP ALARM
28	PRESSURE ALARM
29	FLOW ALARM
30	OZONE FLOW ALARM
31	MOTHERBOARD STATUS ALARM
32	INTERFACE BD STATUS ALARM
33	I/O EXP BD STATUS ALARM
34	NOT USED
35	CONC ALARM
36	SAMPLE MODE
37	PURGE MODE
38	NOT USED
39	ZERO CHECK/CAL ALARM
40	SPAN CHECK/CAL ALARM

## Table C-2. Read Registers for 42i

Register Number	Variable
40001&40002	NO
40003&40004	N02

Register Number	Variable
40005&40006	NOx
40007&40008	NOT USED
40009&40010	NOT USED
40011&40012	LOW NO
40013&40014	LOW NO2
40015&40016	LOW NOx
40017&40018	NOT USED
40019&40020	NOT USED
40021&40022	HIGH NO
40023&40024	HIGH NO2
40025&40026	HIGH NOx
40027&40028	NOT USED
40029&40030	NOT USED
40031&40032	RANGE (NOx)
40033&40034	NOT USED
40035&40036	INTERNAL TEMPERATURE
40037&40038	CHAMBER TEMPERATURE
40039&40040	COOLER TEMPERATURE
40041&40042	NO2 CONVERTER TEMP
40043&40044	NOT USED
40045&40046	PERM OVEN GAS
40047&40048	PERM OVEN HEATER
40049&40050	CHAMBER PRESSURE
40051&40052	SAMPLE FLOW
40053&40054	PMT VOLTS
40055&40056	ANALOG IN 1
40057&40058	ANALOG IN 2
40059&40060	ANALOG IN 3
40061&40062	ANALOG IN 4
40063&40064	ANALOG IN 5
40065&40066	ANALOG IN 6
40067&40068	ANALOG IN 7
40069&40070	ANALOG IN 8
40071&40072	OZONATOR FLOW

Register Number	Variable
40073&40074	NOT USED
40075&40076	NOT USED
40077&40078	NOT USED
40079&40080	NO CORRECTION CONC*
40081&40082	NO2 CORRECTION CONC*
40083&40084	NOx CORRECTION CONC*
40085&40086	NOT USED
40087&40088	NOT USED
40089&40090	LOW NO CORRECTION CONC*
40091&40092	LOW NO2 CORRECTION CONC*
40093&40094	LOW NOX CORRECTION CONC*
40095&40096	NOT USED
40097&40098	NOT USED
40099&40100	HIGH NO CORRECTION CONC*
40101&40102	HIGH NO2 CORRECTION CONC*
40103&40104	HIGH NOX CORRECTION CONC*
40105&40106	NOT USED
40107&40108	NOT USED

\*If  $O_2$  Correction Option is installed.

#### Table C–3. Write Coils for 42*i*

Coil Number	Action Triggered
101	ZERO MODE
102	SPAN MODE
103	NO MODE
104	NOX MODE
105	NOT USED
106	PRE MODE
107	SET BACKGROUND
108	CAL TO LO SPAN
109	AOUTS TO ZERO
110	AOUTS TO FS
111	CAL TO HI SPAN

# Appendix D Geysitech (Bayern-Hessen) Protocol

This appendix provides a description of the Geysitech (Bayern-Hessen or BH) Protocol Interface and is supported both over RS-232/485 as well as TCP/IP over Ethernet.

The Geysitech Commands that are implemented are explained in detail in this document. The Geysitech protocol support for the *i*Series enables the user to perform the functions of reading the various concentrations and to trigger the instrument to be in sample/zero/span mode if valid for that instrument. This is achieved by using the supported Geysitech commands listed below.

For details of the Model 42*i* Geysitech Protocol specification, see the following topics:

"Serial Communication Parameters" on page D-1

"TCP Communication Parameters" on page D-2

"Instrument Address" on page D-2

"Abbreviations Used" on page D-2

"Basic Command Structure" on page D-2

"Block Checksum" on page D-3

"Geysitech Commands" on page D-3

## Serial Communication Parameters

The following are the communication parameters that are used to configure the serial port of the *i*Series to support Geysitech protocol.

Number of Data bits	: 8
Number of Stop bits	: 1
Parity	: None
Data rate	: from 1200-115200 Baud (9600 is default)

TCP Communication Parameters	<i>i</i> Series Instruments support the Geysitech/TCP protocol over TCP/IP. The register definition is the same as for the serial interface.
	TCP connection port for Geysitech: 9882
Instrument Address	The Geysitech instrument address has a value between 0 and 127 and is represented by 3 digit ASCII number with leading zeros or leading spaces if required (e.g. Instrument address of 1 is represented as 001 or <sp><sp>1)</sp></sp>
	The instrument Address is the same as the Instrument ID used for C-Link and MODBUS commands. This can be set via the front panel.
	The Instrument Address is represented by <address> in the examples throughout this document.</address>
	<b>Note</b> Device IDs 128 through 247 are not supported because of limitations imposed by the C-Link protocol. ▲
Abbreviations Used	The following is a list of abbreviations used in this document:
	<cr> is abbreviation for Carriage Return (ASCII code 0x0D)</cr>
	<stx> is abbreviation for Start of Text (ASCII code 0x02)</stx>
	<etx> is abbreviation for End of Text (ASCII code 0x03)</etx>
	<sp> is abbreviation for space (ASCII code 0x20)</sp>
<b>Basic Command</b>	The following is the basic structure of a Geysitech command:
Structure	<stx>Command text<etx><bcc></bcc></etx></stx>
	OR
	<stx>Command text<cr></cr></stx>
	Each Command is framed by control characters, <stx> at the start and terminated with either <etx> or <cr>.</cr></etx></stx>
	If a command is terminated with <etx> then additional two characters <bcc> is attached after <etx>, this is the block checksum.</etx></bcc></etx>

Block Checksum <bcc></bcc>	The block checksum is calculated beginning with a seed value of 00000000, binary (0x00), and bitwise exclusive ORing with each of the characters of the command string (or response) including the framing characters <stx> and <etx>. The checksum works as an error check. The command terminator determines the presence or absence of <bcc>.</bcc></etx></stx>
	If a command is terminated by <etx> then the next two characters are the checksum, if the command is terminated with <cr> no checksum is attached</cr></etx>
	The block checksum is represented by two characters, which represent a 2 digit hex number (1byte). (e.g. 1 byte 0xAB hex checksum will be represented by the two characters 'A' & 'B')
	The checksum is referred to as <bcc> throughout this document.</bcc>
Geysitech Commands	The following commands are supported by the Geysitech protocol:
	• Instrument Control Command (ST)
	• Data Sampling/Data Query Command (DA)
Instrument Control Command	There are three control commands supported by the Geysitech protocol.
(ST)	This <control command=""> is a single letter, which triggers an action in the instrument. These commands are active only when service mode is inactive and the zero/span option is present.</control>
	Command 'N' switches the instrument gas mode to Zero mode.
	Command 'K' switches the instrument gas mode to Span mode.
	Command 'M' switches the instrument gas mode to Sample mode.
	The following are the different acceptable formats of the ST command:
	<stx>ST<address><control command=""><etx><bcc></bcc></etx></control></address></stx>
	OR
	<stx>ST<address><control command=""><cr></cr></control></address></stx>
	OR
	<stx>ST<address><sp><control command=""><cr></cr></control></sp></address></stx>
	OR
	<stx>ST<address><sp><control command=""><etx><bcc></bcc></etx></control></sp></address></stx>

The <address> is optional, which means it can be left out completely. The <address> if present must match the Instrument Address. Additional space can be present after the <address>.

If the received command does not satisfy the above formats or if the <address> does not match the Instrument Address the command is ignored.

This is a sample command to switch the instrument to zero mode, instrument id 5:

<STX>ST005<SP>N<CR>

## Data Sampling/Data Query Command (DA)

This command DA initiates a data transfer from the instrument. The instrument responds with measurement data, which depends on the range mode and is listed in "Measurements reported in response to DA command" below.

The command structure for a data query command is as follows:

<STX>DA<address><ETX><BCC>

The <address> is optional, which means it can be left out completely. The <address> if present must match the Instrument Address. Additional space can be present after the <address>.

If the <address> is left out then no space is allowed in the query string.

A command with no address is also a valid command.

The following are the different acceptable formats of the DA command with Instrument Address 5:

<STX>DA<CR>

<STX>DA005<CR>

<STX>DA<SP><SP>5<ETX><BCC>

<STX>DA<ETX><BCC>

The data query string is valid and will be answered with data transmission only if the command starts with <STX> which is followed by the characters DA, and the <address> (if present) matches the Instrument Address, and the command is terminated with either <CR> with no checksum or <ETX> followed by the correct checksum <BCC>.

#### Sample Data Reply String in response to Data Query Command (DA):

In response to a valid data query command (DA) the instrument responds in the following format:

<STX>MD02<SP><address><SP><measured value1><SP><status><SP><SFKT><SP><address+1><SP><measured value2><SP ><status><SP><SFKT><ETX><BCC>

The response uses the same command terminators as used by the received command i.e. if the received command was terminated with a <CR> the response is terminated with <CR> and if the command was terminated with a <ETX><BCC> the response is terminated with<ETX> and the computed checksum <BCC>.

The 02 after the MD indicates, that two measurements are present in the reply string, (a 03 for three measurements and so on, this will also determine the length of the reply string).

<address> is the Instrument Address. Each subsequent measurement attached to the response will have the <address + X> where X keeps incrementing by 1 for each measurement included.

<measured value> is the concentration value in currently selected gas units represented as exponential representation with 4 characters mantissa and 2 characters exponent, each with sign.

Mantissa: sign and 4 digits. The decimal point is assumed to be after the first digit and is not transmitted.

Exponent: sign and 2 digits.

#### Example:

-5384000.0	is represented as -5384+06
+0.04567	is represented as +4567-02

<status>: is formed by < operating status > and < error status > and separated by a space i.e.

<operating status><SP><error status>

Each of the two (<operating status> and <error status>) are formed by two characters each representing a 2 digit hex number which is one byte (8 Bits) operation status and one byte (8 Bits) error status.

These two bytes contain the information about the main operating conditions of the instrument at that instant. For details on how to interpret the status bytes refer to Table D-1 and Table D-2 below.

<SFKT>: is the space provided for future use for special function, it currently contains a string of ten 0's i.e. <0000000000>.

	Example:
	Geysitech Protocol with transmission of three concentrations (Instrument ID is 1, Operation Status is 03, Error Status is 04):
	Data Query String: <stx>DA<cr></cr></stx>
	Reply String: <stx>MD03<sp>001<sp>+2578+01<sp>03         <sp>004<sp>0000000000         <sp>002         <sp>           ↑         ↑         ↑         ↑         ↑</sp></sp></sp></sp></sp></sp></sp></stx>
	Address First Concentration(E-format)=25.78 Address+1
	+5681+00 <sp>03<sp>04<sp>000000000<sp>003<sp>+1175+01<sp>03<sp>04<sp th="" ↑="" ↑<=""></sp></sp></sp></sp></sp></sp></sp></sp>
	Second Concentration = 5.681 Address+2 Third Concentration=11.75
	00000000 <sp><cr></cr></sp>
	The attached concentrations are in the selected gas units. The measurements that are attached to the response if not valid in a particular mode then a value of 0.0 will be reported.
Measurements reported in response to DA command	The following measurements reported in response to DA command are for the Model 42 <i>i</i> .
Single Range Mode	The 3 measurements reported in single range mode include:
	• NO
	• NO <sub>2</sub>
	• NO <sub>x</sub>
Dual/Auto Range Mode	The 6 measurements reported in dual or auto range modes include:
	• low NO
	• low NO <sub>2</sub>
	• low NO <sub>x</sub>
	• high NO
	• high NO <sub>2</sub>
	• high NO <sub>x</sub>
Operating and Error	See Table $D-1$ for operating status and Table $D-2$ for error status for the

See Table D–1 for operating status and Table D–2 for error status for the Model 42i.

	D7	D6	D5	D4	D3	D2	D1	DO	
→ Bit	8	7	6	5	4	3	2	1	
$\rightarrow$ Hex-value	80	40	20	10	08	04	02	01	
	MSB				LSB				
Operating status:									
Service Mode (On)	0	0	0	0	0	0	0	1	
Maintenance (Local)	0	0	0	0	0	0	1	0	
Zero gas (On)	0	0	0	0	0	1	0	0	
Span gas (On)	0	0	0	0	1	0	0	0	
Gas Unit Indication (ppm OR ppb)	0	0	0	1	0	0	0	0	
Ozonator (Off)	0	0	1	0	0	0	0	0	
PMT (Off)	0	1	0	0	0	0	0	0	
Not used	1	0	0	0	0	0	0	0	

Table D–1.	Operating	Status	for Mode	el 42 <i>i</i>
	oporating	otutuo	101 WIOUC	1 121

 Table D–2.
 Error Status for Model 42i

	D7	D6	D5	D4	D3	D2	D1	DO	
→ Bit	8	7	6	5	4	3	2	1	
$\rightarrow$ Hex-value	80	40	20	10	08	04	02	01	
	MSB				LSB				
Error status:									
Not Used	0	0	0	0	0	0	0	1	
Not Used	0	0	0	0	0	0	1	0	
Not Used	0	0	0	0	0	1	0	0	
Any Temperature Alarm	0	0	0	0	1	0	0	0	
Pressure Alarm	0	0	0	1	0	0	0	0	
Sample Flow Alarm	0	0	1	0	0	0	0	0	
Ozonator Flow Alarm	0	1	0	0	0	0	0	0	
Not used	1	0	0	0	0	0	0	0	