


TIMER Easy is a remote control with built-in clock enabling the automation of the opening and closing of the shutters of his house

FOR A QUICK START: ESSENTIAL TO KNOW ABOUT YOUR REMOTE CONTROL TIMER EASY

TIMER EASY PRESENTATION:

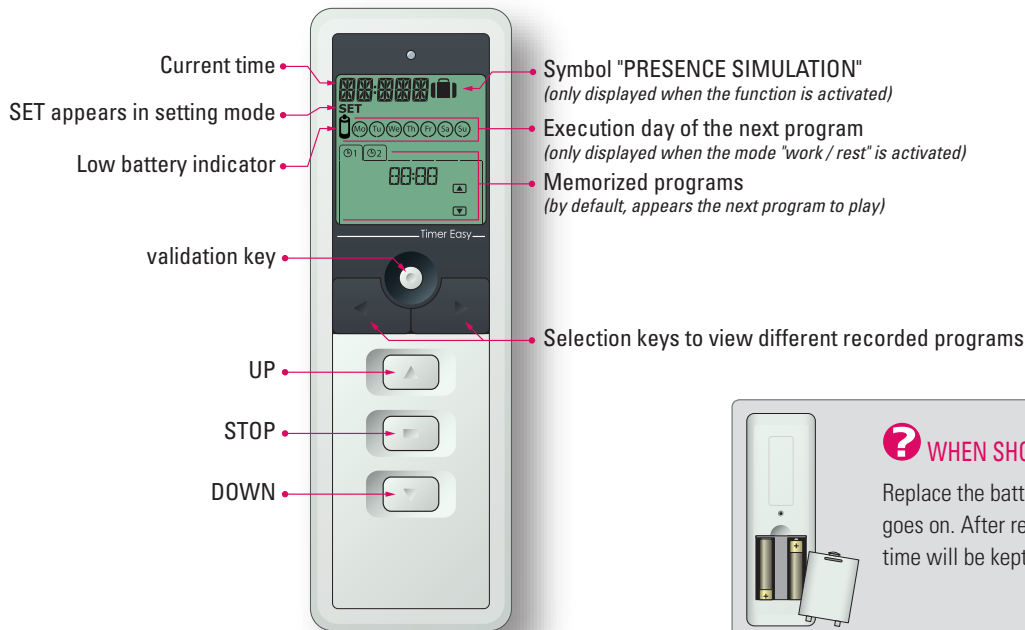

? WHEN SHOULD YOU REPLACE THE BATTERIES ?


Replace the batteries when the low battery indicator goes on. After removal of used batteries, the current time will be kept for 2 minutes.

Your remote control requires 2 x LR03 - AAA - 1.5V.

OPERATING PRINCIPLE :

Timer Easy offers two possible modes: manual mode and automatic mode.


IN MANUAL MODE...

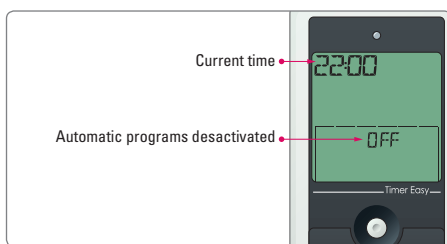

The programmings of the automatic mode are de-activated.

The shutters can be controlled manually by pressing the control keys (▲, ■ or ▼).

IN AUTOMATIC MODE...

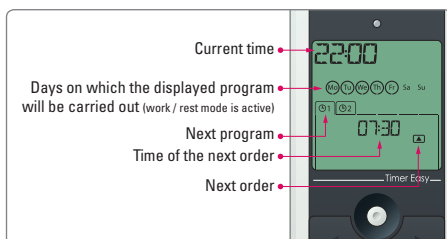

The movement of shutters is controlled by the built-in clock.

the built-in clock enables one opening (☀️) and one closing (🌙) per day.

- The programmed times can be:

- **Daily mode:** Every day the same program.
- **Work / Rest mode:** One program on work days and another one on rest days.

- The selection keys (◀️, ▶️) enable you to display the clock programming: 2 programs in « **daily mode** » and 4 programs in « **work / rest** » mode.


- The « **presence simulation** » function (🏠) offsets randomly the programmed hour by 0 to +30 minutes to simulate presence in your home.

- The control keys (▲, ■ or ▼) enables to issue manual commands.

Example on screen:

The next movement will be the opening of shutters at 7.30 am. This order will be carried out on Monday to Friday at the same time.

? HOW TO SWITCH FROM MANUAL MODE TO AUTOMATIC MODE ?

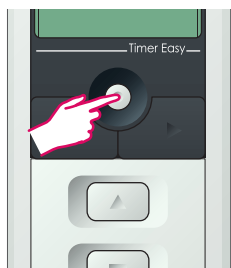

Press **briefly** the validation key




Manual mode




Automatic mode

? HOW TO ACTIVATE AND DEACTIVATE THE SIMULATION OF PRESENCE?


! To do this, the automatic mode must be activated

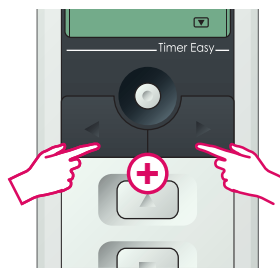

press **both** selection keys **briefly** at the same time

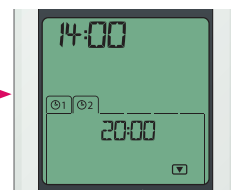

Presence simulation deactivated ✓

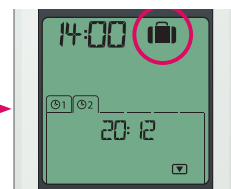

Presence simulation activated ✓

NOTE: This operation can be performed in automatic mode « daily » and in automatic mode « work / rest ».

? HOW TO CHANGE THE EXISTING PROGRAM ?


Thanks to the «memory» function, simply pressing the up or down button for 8 seconds saves the current time for the opening or closing of the roller shutters every day.

! To do this, the **automatic mode** must be activated.
If you release the key **before 8 seconds**, the time change will not be saved.

*Example shown:
Now you want the shutters open at 9:00 am and close at 21:00.*



Initial programming.

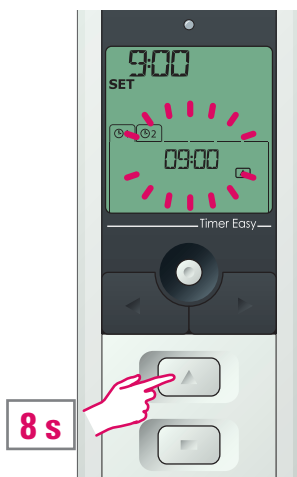

At 9:00 am,
press the up key for **8 seconds**.



The time of your program is now modified. ✓

Do the same operation on pressing the down key at 21.00 and your new schedule is ready. ✓

NOTE: This operation can be performed in « **daily** » automatic mode and in « **work / rest** » automatic mode . In the «Work / Rest», first select the program to modify.

TO KNOW

You can manually open and close the shutters from the up and down keys at any time, even when the automatic mode is on.

After a few seconds without operation, the remote screen switch off. Before performing an operation, a press on any key of the remote control is necessary to enable it.

FOR A MORE PERSONALIZED USE: MORE OPPORTUNITIES OFFERED BY EASY TIMER

? HOW TO ACCESS THE SETTING MODE (SET) TO CHANGE THE PARAMETERS OF DATE, CURRENT TIME AND TYPE OF PROGRAMMING (daily or work / rest)?

! Steps YEAR / MONTH / DAY / TIME / AREA / WORK are successive.
To move from one stage to another, without any modification, just press the validation key.

SETTING THE DATE:

7 s

Press for more than **7 seconds** on the validation key: «YEAR» is displayed.

1. Set the year with selection keys.
2. Briefly press the validation key to confirm the setting.

«MONTH» is displayed.
1. Set the month with selection keys.
2. Briefly press the validation key to confirm the setting.

«DAY» is displayed.
1. Set the day with selection keys.
2. Briefly press the validation key to confirm the setting.

SETTING THE CURRENT TIME:

«TIME» is displayed.
1. Set the time with selection keys.
2. Briefly press the validation key to confirm the setting.

Adjust the minutes with selection keys.
2. Briefly press the validation key to confirm the setting.

SETTING THE GEOGRAPHIC AREA:

«AREA» is displayed.
to set the automatic winter / summer time change:
1. Choose the area where you stand with selection keys: **EU** for Europe, **U.S** for USA. and **OFF** for other countries (no summer / winter automatic change)
2. Briefly press the validation key to confirm the setting.

SETTING THE MODE DAILY OR WORK / REST:

«WORK» is displayed.
- If you want to make a programming with work and rest Days:
Select (circle) only your work days with the selection keys (1) and the validation key (2).
- If you want to make a daily programming, select (circle) all the days of the week.

After setting the last day of the week (**Su** for sunday), press once the right selection key to record changes and exit the setting mode.

The settings on your remote control are updated. ✓


TO KNOW

At any time you can save and exit setting mode by pressing the validation key for 3 seconds.


? HOW TO CHANGE THE EXISTING PROGRAMMING FROM SETTING MODE (SET) ?

⚠ To do this, the **automatic mode** must be activated.
Entering the setting mode, you will have the opportunity to: **OPTION A** modifying program or **OPTION B** to remove it.

ENTER THE SETTING MODE:

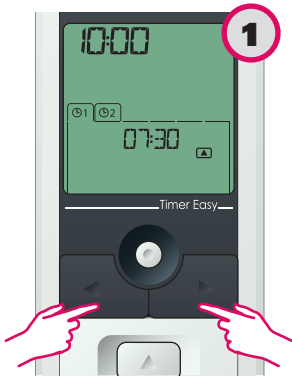


Using the selection keys (◀▶), select the program (⌚1 or ⌚2) to be changed

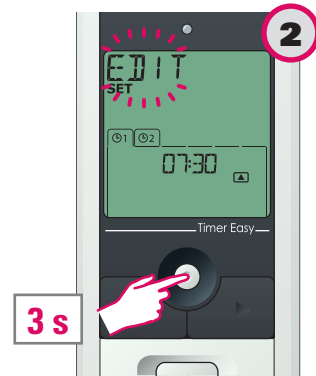


Press the validation key for **3 seconds**.
«EDIT» is displayed.
Setting mode is activated. ✓


OPTION A ...CHANGE THE TIME OF THE PROGRAM:

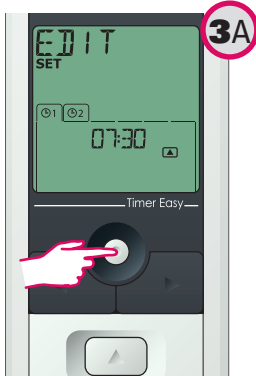

Press briefly on the validation key.

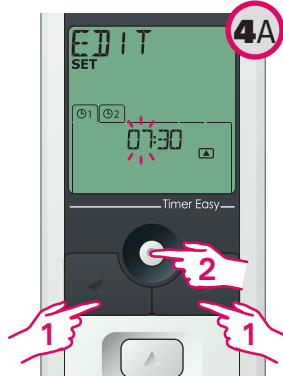


1. Set the time with selection keys.
2. Briefly press the validation key to confirm the setting.

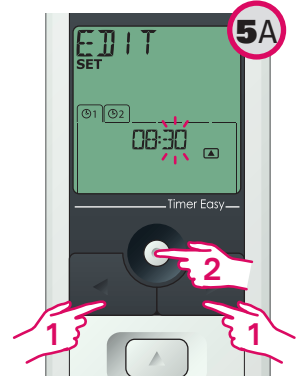

1. Adjust the minutes with selection keys.
2. Briefly press the validation key to confirm the setting.

The time of your program now is modified. ✓

OPTION B ...OR REMOVE THE PROGRAM:

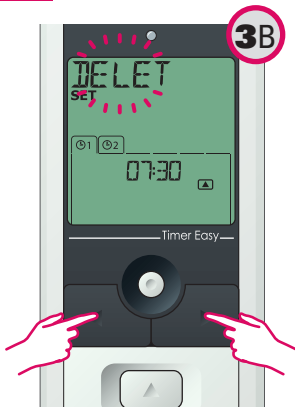

Select «DELET» with selection keys.



Briefly press the validation key to complete the program deletion.

Your program is removed. ✓

