

Holmes®

Remote Control 1 Touch Stand Fan

HASF1796RC

Owner's Guide



PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1) Read all instructions before using the appliance.
- 2) To avoid fire or shock hazard, plug the appliance directly into a 120 V AC electrical outlet.
- 3) Keep the cord out of heavy traffic areas. DO NOT let the cord hang over the edge of a table or counter. To avoid fire hazard, NEVER put the cord under rugs, near heat registers, radiator, stoves, or heaters.
- 4) To protect against electrical hazards, DO NOT immerse in water or other liquids. Do not use near water.
- 5) Close supervision is necessary when any appliance is used by or near children, or by disabled people.
- 6) Always unplug the fan before moving it, putting on or taking off parts, cleaning, or whenever the fan is not in use. Be sure to pull by the plug and not the cord.
- 7) Avoid contact with moving parts. DO NOT operate without fan grills properly in place.
- 8) DO NOT operate any appliance with a damaged cord or plug, if motor fan fails to rotate, after the appliance malfunctions, or if it has been dropped or damaged in any manner. Return appliance to manufacturer for examination, electrical or mechanical adjustment, or repair.
- 9) DO NOT operate in the presence of explosive and/or flammable fumes.
- 10) Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by The Holmes Group may cause hazards.
- 11) DO NOT use outdoors.
- 12) Always use on a dry, level surface.
- 13) Keep unit away from heated surfaces and open flames.
- 14) **WARNING:** To reduce the risk of fire or electric shock, DO NOT use this fan with any solid-state speed control device.
- 15) DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS



THIS PRODUCT IS EQUIPPED WITH A POLARIZED AC (Alternating Current) PLUG (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact qualified personnel to install the proper outlet.

DO NOT DEFEAT THE SAFETY PURPOSE OF THIS POLARIZED PLUG IN ANY WAY

ASSEMBLY INSTRUCTIONS

Base / Pole Assembly

- Step 1: Push in the small tab on each foot extension and snap into base
- Step 2: Remove the base collar from the base by turning counter-clockwise.
- Step 3: Take the pole, with the solid end down, and insert it into the base. The hollow end of the pole (with the screw hole) will be facing up.
- Step 4: Replace the height adjustment knob over the pole, slide it down the pole, and secure it to the base by turning clockwise.

Fan Head Assembly

- Step 1: Position the rear grill over the motor shaft, making certain the 2 notches at the top and bottom of the rear grill fit over the 2 prongs on the motor housing. Please make sure the rear grill fits securely against the motor housing.
- Step 2: Secure the rear grill in its place using the rear grill mounting-ring. Turn this ring clockwise and tighten firmly.
- Step 3: Slide the fan blade; with the hollowed interior of the blade facing towards the rear grill firmly onto the motor shaft. Make sure the shaft protrudes from the front of the blade.
- Step 4: Secure the fan blade onto the motor shaft by turning the fan blade cap in a counter-clockwise direction until it is firmly in place.
- Step 5: Prepare the front grill by simply snapping the circular front grill logo plate in place.
- Step 6: Center the front grill by aligning the Holmes logo so it is horizontal and parallel to the floor. Place the front grill on to the rear grill and snap into place. Tighten the securing screw at the bottom of the front grill.

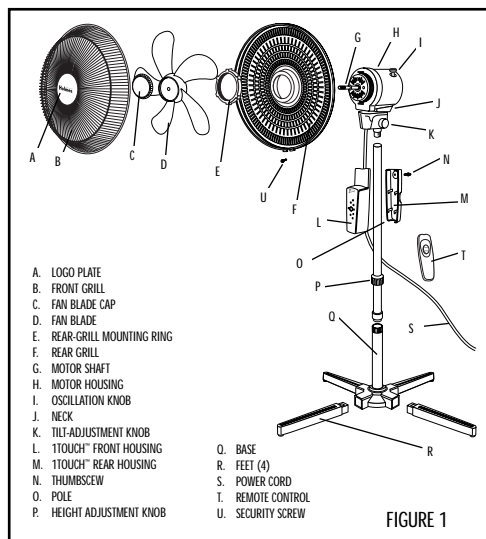


FIGURE 1

Final Assembly

- Step 1: Insert the neck of the fan head into the hollow end of the pole and turn the neck clockwise to lock into place.
- Step 2: Attach the front of the 1 Touch™ control module by sliding the 2 tabs into the corresponding holes on the pole.
- Step 3: Attach the rear of the 1 Touch™ control module to the front by inserting the 4 clips into the corresponding holes.
- Step 4: For additional security, insert and tighten the thumbscrew into the top rear of the 1 Touch™ control module.

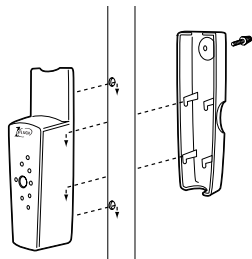


FIGURE 2

OPERATING INSTRUCTIONS

Your fan is equipped with the technologically advanced 1Touch™ thermostat. You can set the fan from either the main housing or the remote control to run continuously in manual mode or set the 1Touch™ thermostat to your desired temperature setting. The 1Touch™ thermostat will automatically turn the fan ON or OFF depending on the preset comfort level. The comfort level ranges between 60° and 80° Fahrenheit.

- Set the fan base on a dry, level surface.
- Plug the fan into a 120V AC electrical outlet
- To start the unit and run continuously, push the button on the fan housing or on the remote control once for the High setting and press either button twice for the Low setting
- To stop the unit, press and hold the button on the fan housing or on the remote control for two seconds or keep pressing the button until all the speed and temperature indicators are OFF
- The OSCILLATION control knob is located on the top of the fan motor housing. To start oscillation, push knob down. To stop oscillation, pull knob up

1 Touch™ Thermostat Instructions

To take advantage of the 1Touch™ Thermostat, continue to press the button until the desired temperature is reached. When ambient temperature drops below the set temperature, the fan will stop. When the room temperature rises above the set point, the fan will turn on automatically.

Note: It is normal for the fan to cycle ON and OFF as it maintains the preset temperature. To prevent the unit from cycling, you need to raise the thermostat setting.

1Touch™ has memory. The 1Touch™ thermostat will remember the previous temperature setting after the unit has been turned off. However if the unit is unplugged, the 1Touch™ thermostat will be reset and will no longer remember the previous temperature setting.

Remote Control Handheld Unit



Your remote control requires 2 AAA batteries for operation. To install the batteries, simply depress the back of the remote with your thumb on the spot marked OPEN. Insert batteries according to the diagram shown inside. Replace Cover.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

ADJUSTMENT INSTRUCTIONS

Tilt Adjustment:

Your fan is equipped with the Total Flex™ tilt adjustment mechanism. Total Flex™ allows you to angle the fan head to a straight up position. This position allows for whole room air circulation. Follow these instructions to tilt the fan head for upward angled air movement or whole-room air circulation. You may use the oscillation feature in this position.

- Step 1: To change the tilting angle of the fan head; simply loosen the Tilt Adjustment Knob (see figure 1).
- Step 2: Move the fan head to the desired angle, and firmly tighten the knob to lock in place.

Height Adjustment

- Step 1: Turn the base collar counter-clockwise to loosen the extension pole.
- Step 2: Adjust the extension pole to the desired height, and firmly tighten the base collar in a clockwise direction.

CLEANING/MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your Holmes stand fan. Please remember:

- Always unplug the fan before cleaning or disassembling.
- Do not allow water to drip on or into the fan motor housing.
- Do not use any of the following as a cleaner: gasoline, thinner, benzine (See instructions for fan head assembly)

Step 1: To access the fan blade, remove the front grill and the fan blade nut.

Step 2: Clean the fan blade, both front and rear grills with a soft cloth moistened with a mild soap solution.

Step 3: Replace blade, tighten the blade nut, and securely fasten the front grill.

Fan Head, Base, and Pole Cleaning

Using a soft, moist cloth, with or without a mild soap solution, carefully clean the fan base, pole, and head. Please use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water.

FAN STORAGE

Your fan can be stored in the off-season either partially disassembled or assembled. It is important to keep it in a safe, dry location.

- If stored disassembled, we recommend using the original (or appropriately sized) box.
- If stored assembled or partially assembled, remember to protect the fan head from dust.

SERVICE INSTRUCTIONS

1. Do NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
2. If you have any questions regarding this unit's operation or believe any repair is necessary, please write to our consumer service department.
3. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed warranty.
4. If you have any other questions or comments, please write:

The Holmes Group, Inc.
CONSUMER SERVICE DEPARTMENT
P.O. Box 769,
Milford, MA 01757-0769

or visit our website at www.holmesproducts.com

For your own records, staple or attach your sales receipt to this manual. Also, please take a moment to write the store name/location and date purchase below.

STORE NAME: _____

LOCATION: _____

DATE PURCHASED: _____

(STAPLE RECEIPT HERE)

THREE (3) YEAR LIMITED WARRANTY

SAVE THIS WARRANTY INFORMATION

- A. The quality controls used in the manufacture of this Holmes product are to ensure your satisfaction.
- B. This Warranty applies only to the original purchaser of this product.
- C. This Warranty applies ONLY to repair or replacement of any supplied or manufactured parts of this product that, upon inspection by Holmes authorized personnel, proves to have failed in normal use due to defects in material or workmanship. Holmes will determine whether to repair or replace the unit. This Warranty does not apply to installation expenses.
- D. Operating this unit under conditions other than those recommended or at voltages other than the voltage indicated on the unit, or attempting to service or modify the unit, will render this WARRANTY VOID.
- E. **Unless otherwise proscribed by law, Holmes shall not be liable for any personal injury, property or any incidental or consequential damages of any kind (including water damage) resulting from malfunctions, defects, misuse, improper installation or alteration of this product.**
- F. All parts of this Holmes product are guaranteed for a period of 3 years as follows:
 1. Within the first 30 days from date of purchase, the store from which you purchased your Holmes product should replace this product if it is defective in material or workmanship (provided the store has in-stock replacement.)
 2. Within the first 3 years from date of purchase, subject to the conditions in paragraph H, Holmes will repair or replace the product if it is defective in material or workmanship providing it is returned to Holmes, freight prepaid, with PROOF OF PURCHASE date, together with \$7.50 for handling and return packing/shipping charges.
- G. If you have any problem with this product, please write or call our Consumer Service Dept.
- H. **IMPORTANT Return INSTRUCTIONS.** Your warranty depends on your following these instructions if you are returning the unit more than 30 days after the date of purchase:
 1. Carefully pack the item in its original carton or other suitable box to avoid damage in shipping.
 2. Before packing your unit for return; be sure to enclose:
 - a) your name, full address with zip code and telephone number,
 - b) a dated sales receipt or PROOF OF PURCHASE,
 - c) your \$7.50 check for return packaging, and
 - d) the model number of the unit and the problem you are having. (Enclose in an envelope and tape directly to the unit before the box is sealed.)
 3. Holmes recommends you insure the package (as damage in shipment is not covered by your warranty).
 4. All shipping charges must be prepaid by you (as noted in paragraph F).
 5. Mark the outside of your package:

HOLMES
THE HOLMES GROUP, INC.
CONSUMER RETURNS
32 B SPUR DRIVE
EL PASO, TX 79906
SHIPPING AND HANDLING CHARGES: \$7.50

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. The provisions of this warranty are in addition to, and not a modification of, or subtraction from, the statutory warranties and other rights and remedies contained in any applicable legislation. To the extent that any provision of this warranty is inconsistent with any applicable law, such provision shall be deemed voided or amended, as necessary, to comply with such law.