

Holmes®

16" Remote Control Stand Fan

HASF1750RC

Owner's Guide



PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1) Read all instructions before using the appliance.
- 2) To avoid fire or shock hazard, plug the appliance directly into a 120 V AC electrical outlet.
- 3) Keep the cord out of heavy traffic areas. DO NOT let the cord hang over the edge of a table or counter. To avoid fire hazard, NEVER put the cord under rugs, near heat registers, radiator, stoves, or heaters.
- 4) To protect against electrical hazards, DO NOT immerse in water or other liquids. Do not use near water.
- 5) Close supervision is necessary when any appliance is used by or near children, or by disabled people.
- 6) Always unplug the fan before moving it, putting on or taking off parts, cleaning, or whenever the fan is not in use. Be sure to pull by the plug and not the cord.
- 7) Avoid contact with moving parts. DO NOT operate without fan grills properly in place.
- 8) DO NOT operate any appliance with a damaged cord or plug, if motor fan fails to rotate, after the appliance malfunctions, or if it has been dropped or damaged in any manner. Return appliance to manufacturer for examination, electrical or mechanical adjustment, or repair.

- 9) DO NOT operate in the presence of explosive and/or flammable fumes.
- 10) Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by The Holmes Group may cause hazards.
- 11) DO NOT use outdoors.
- 12) Always use on a dry, level surface.
- 13) Keep unit away from heated surfaces and open flames.
- 14) WARNING: To reduce the risk of fire or electric shock, DO NOT use this fan with any solid-state speed control device.
- 15) DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS



THIS PRODUCT IS EQUIPPED WITH A POLARIZED AC (Alternating Current) PLUG (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact qualified personnel to install the proper outlet.

DO NOT DEFEAT THE SAFETY PURPOSE OF THIS
POLARIZED PLUG IN ANY WAY

OPERATING INSTRUCTIONS

- Step 1: Set the fan on a dry level surface.
- Step 2: Plug cord into any standard 120V AC outlet.
- Step 3: To turn the fan on press the **POWER** button on the remote control or on the touch-key pad.
- Step 4: The speed is adjustable by pushing either the speed button on the remote control, or on the **On/Speed** button on the touch-key pad. Push this button first for **LOW**, again for **MEDIUM**, and a third time for **HIGH**. Push a fourth time for repeat the sequence. To turn the fan **OFF**, push the **OFF** button on the remote control, or on the touch-key pad.
- Step 5: To oscillate the fan head, push the button marked **OSCILLATE** on the remote, or **OSCILLATE** on the touch-key pad. Push a second time to stop oscillation.
- Step 6: This fan is equipped with 4-setting stop timer. (1hr, 2hrs, 4 hrs, 8hrs) To activate the timer, push the **TIMER** button on the remote control, or the **TIMER** button on the touch-key pad. One push will set the 1 hr, the 2nd push sets the 2 hrs, the 3rd push sets the 4 hrs, and the 4th push sets the 8 hour timer. Push again to begin repeating this sequence.
- Step 7: For a natural breeze movement, push the button marked **Mode** on the remote control or **Mode** on the touch-key pad. This will vary the fan speeds faster and slower. By pressing the **Mode** button a second time, you activate the **SLEEP** setting. This function slows the fan speed down, and when used in conjunction with the timer settings, will ultimately turn the fan off. Press the **Mode** button a 3rd time for **BREEZE** and **SLEEP** combined.
- NOTE:** Timer can be used in conjunction with several other functions. For example: **Sleep + 4hr. TIMER** causes the fan to gradually slow down over 4 hours and eventually turn off.

ADJUSTMENT INSTRUCTIONS

Height Adjustment

This fan is equipped with two poles, which allow you to adjust the height of the fan for three height settings.

Tilt Adjustment

Follow these instructions to tilt the fan head for upward angle air movement.

To change the tilting angle of the fan head, move the fan head to the desired angle.

CLEANING / MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your Holmes stand fan. Please remember:

- Always unplug the fan before cleaning or disassembling.
- Do not allow water to drip on or into the fan motor housing.
- Do not use any of the following as a cleaner: gasoline, thinner, benzene

(See instructions for fan head assembly)

Step 1: To access the fan blade, remove the front grill and the fan blade nut.


Step 2: Clean the fan blade, both front and rear grills with a soft cloth moistened with a mild soap solution.

Step 3: Replace blade, tighten the fan blade nut, and securely fasten the front grill.

FAN STORAGE

Your fan can be stored in the off-season either partially disassembled or assembled. It is important to keep it in a safe, dry location.

- If stored disassembled, we recommend using the original (or appropriately sized) box.
- If stored assembled or partially assembled, remember to protect the fan head from dust.

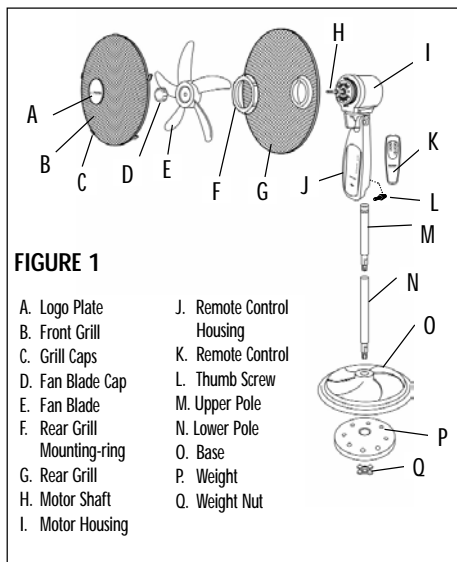

ASSEMBLY INSTRUCTIONS:

Base / Pole Assembly

Step 1: Insert the lower pole (longer of the 2 poles) through the base cover and twist the pole clockwise to lock in position. Be careful to align the cut-away grooves on the threaded joint (male end) with the two protruding raised pieces inside the hollow end of the base cover.

Step 2: Turn the base cover upside down (with the lower pole facing the floor) and place the weighted insert into the base cover. The pole threads will be exposed as they protrude through the insert.

NOTE: HOLD THE POLE, BASE COVER AND WEIGHTED INSERT IN ONE HAND WHILE TIGHTENING THE BASE NUT WITH THE OTHER HAND.

Step 3: Place the base nut on the threaded section and hand-tighten the base nut to securely fasten the lower extension pole to the base.

Step 4: Insert the upper pole (shorter of the two poles) with the threaded joint (male end) into the hollow end of the lower pole (female end), until both poles meet. Be careful to align the cutaway / grooves on the threaded joint (male end) with the two protruding pieces inside the hollow end of the lower pole (female end).

Step 5: Turn the upper pole clockwise to lock it securely in place.

Fan Head Assembly

- Step 1: Position the rear grill over the motor shaft, making certain the 2 notches at the top and bottom of the rear grill fit over the 2 protruding notches on the motor housing. Please make sure the rear grill fits securely against the motor housing.
- Step 2: Fasten the rear grill in place using the rear grill mounting-ring. Turn the ring clockwise and tighten firmly.
- Step 3: Slide the fan blade; with the hollowed interior of the fan blade facing toward the rear grill firmly onto the motor shaft. Make sure that the motor shaft protrudes from the front of the blade.
- Step 4: Secure the fan blade onto the motor shaft by turning the fan blade cap counter-clockwise. Tighten until secure.
- Step 5: Snap the logo plate on to the front grill, making sure the clips on the logo plate, fit into the openings on the front grill.
- Step 6: On the front grill, lift the grill clips up so that there is no interference when placing the front grill onto the rear grill. Center the front grill, aligning the Holmes logo so it is horizontal and parallel to the floor. Hang the front grill onto the rear grill and close all of the clips until the two grills are secured.

Final Assembly

- Step 1: Place the hollow end of the remote control housing on to the upper pole until it will not go down any further.
- Step 2: Tighten the locking nut on the back of the remote control housing by turning it clockwise until the fan head assembly is secure.



Remote Control Handheld Unit:

Your remote control requires 2 AAA batteries for operation. To install the batteries, simply depress the back of the remote with your thumb on the spot marked OPEN. Insert batteries according to the diagram shown inside. Replace cover.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

SERVICE INSTRUCTIONS

1. Do NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
2. If you have any questions regarding this unit's operation or believe any repair is necessary, please write to our consumer service department.
3. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed warranty.
4. If you have any other questions or comments, please write:

The Holmes Group, Inc.
CONSUMER SERVICE DEPARTMENT
P.O. Box 769,
Milford, MA 01757-0769

or visit our website at www.holmesproducts.com

For your own records, staple or attach your sales receipt to this manual. Also, please take a moment to write the store name/location and date purchase below.

STORE NAME:

LOCATION:

DATE PURCHASED:

(STAPLE RECEIPT HERE)

FIVE (5) YEAR LIMITED WARRANTY

SAVE THIS WARRANTY INFORMATION

- A. The quality controls used in the manufacture of this Holmes product are to ensure your satisfaction.
- B. This Warranty applies only to the original purchaser of this product.
- C. This Warranty applies ONLY to repair or replacement of any supplied or manufactured parts of this product that, upon inspection by Holmes authorized personnel, proves to have failed in normal use due to defects in material or workmanship. Holmes will determine whether to repair or replace the unit. This Warranty does not apply to installation expenses.
- D. Operating this unit under conditions other than those recommended or at voltages other than the voltage indicated on the unit, or attempting to service or modify the unit, will render this WARRANTY VOID.
- E. Unless otherwise proscribed by law, Holmes shall not be liable for any personal injury, property or any incidental or consequential damages of any kind (including water damage) resulting from malfunctions, defects, misuse, improper installation or alteration of this product.
- F. All parts of this Holmes product are guaranteed for a period of 5 years as follows:
 1. Within the first 30 days from date of purchase, the store from which you purchased your Holmes product should replace this product if it is defective in material or workmanship (provided the store has in-stock replacement.)
 2. Within the first 5 years from date of purchase, subject to the conditions in paragraph H, Holmes will repair or replace the product if it is defective in material or workmanship providing it is returned to Holmes, freight prepaid, with PROOF OF PURCHASE date, together with \$10.00 for handling and return packing/shipping charges.
- G. If you have any problem with this product, please write our Consumer Service Dept.
- H. IMPORTANT Return INSTRUCTIONS Your warranty depends on your following these instructions if you are returning the unit more than 30 days after the date of purchase:
 1. Carefully pack the item in its original carton or other suitable box to avoid damage in shipping.
 2. Before packing your unit for return; be sure to enclose:
 - a) your name, full address with zip code and telephone number,
 - b) a dated sales receipt or PROOF OF PURCHASE,
 - c) your \$10.00 check for return packaging, and
 - d) The model number of the unit and the problem you are having. (Enclose in an envelope and tape directly to the unit before the box is sealed.)
 3. Holmes recommends you insure the package (as damage in shipment is not covered by your warranty).
 4. All shipping charges must be prepaid by you (as noted in paragraph F).
 5. Mark the outside of your package:

HOLMES
THE HOLMES GROUP, INC.
CONSUMER RETURNS
32 B SPUR DRIVE
EL PASO, TX 79906
SHIPPING AND HANDLING CHARGES: \$10.00

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. The provisions of this warranty are in addition to, and not a modification of, or subtraction from, the statutory warranties and other rights and remedies contained in any applicable legislation. To the extent that any provision of this warranty is inconsistent with any applicable law, such provision shall be deemed voided or amended, as necessary, to comply with such law.