

# Holmes®

1 Touch™

HCH4126

## Twin Oscillating Heater

Owner's Guide



PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

# PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. To avoid fire or shock hazard, plug the appliance directly into a 120V AC electrical outlet.
3. The heater is hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 ft (0.9 m) from the front of the heater and keep them away from the sides and rear.
4. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
5. This heater is not intended for use in bathrooms, laundry areas and similar indoor location. NEVER locate heater where it may fall into a bathtub or other water container.
6. Extreme caution is necessary when any heater is used by, or near children or invalids, and whenever the heater is left operating and unattended.
7. Always unplug the heater when not in use.
8. When unplugging, be sure to pull by the plug and not the cord.
9. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
10. DO NOT operate heater with a damaged cord or plug, or after the heater malfunctions, has been dropped or damaged in any manner. Return appliance to manufacturer for examination, electrical or mechanical adjustment, or repair.
11. A heater has hot and arcing or sparking parts inside.  
DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored.
12. Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by The Holmes Group may cause hazards.
13. DO NOT use outdoors.

14. To prevent a possible fire, DO NOT block air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
15. To disconnect heater, press and hold the MODE/OFF button for 2 seconds, then remove plug from outlet.
16. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875 watts.
17. If the heater will not operate, see specific instructions on Auto Safety Shut-off.
18. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.

## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

### AUTO SAFETY SHUT-OFF WITH CERAMIC CONTROL

This heater is equipped with a patented, technologically-advanced, safety system that requires the user to reset the heater if there is a potential overheat situation. When a potential overheat temperature is reached, the system will automatically shut the heater off. It can only resume operation when the user resets the unit.

To Reset the Heater:

1. Unplug the unit.
2. Wait 10 minutes for the unit to cool down.
3. After the 10 minutes, plug the unit in again and operate normally.

### PRE-OPERATING INSTRUCTIONS

1. Carefully remove your heater from the box. (please save the carton for off-season storage).
2. Place heater on firm level surface.
3. Avoid overloading your circuit by not using other high wattage appliances in the same outlet. At 1500 watts this unit draws 12.5 amps.



THIS PRODUCT IS EQUIPPED WITH A POLARIZED AC (Alternating Current) PLUG (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact qualified personnel to install the proper outlet.

DO NOT DEFEAT THE SAFETY PURPOSE OF THIS  
POLARIZED PLUG IN ANY WAY.

## OPERATING INSTRUCTIONS

Your heater is equipped with a technologically advanced 1 Touch™ electronic thermostat. You can set the heater to run continuously in manual mode or set the 1 Touch™ Thermostat to your desired temperature setting. The 1 Touch™ thermostat will automatically turn the heater ON or OFF depending on the preset comfort level. The comfort level ranges between 60° and 80° Fahrenheit.

### Manual Mode Instructions:

1. Plug the heater into a 120V AC electrical outlet.
2. To start the unit, push the MODE/OFF button once for the HIGH (1500 Watts) manual setting. (See fig. #1 and #2)
3. Press the button again for the LOW (1000 Watts) manual setting. (See fig. #1 and #2)
4. To stop the unit, press and hold the button for two seconds or keep pressing the button until all the temperature indicators are OFF.

Note: The Power Light will remain lit during operation. In Manual Mode, only the LOW or HIGH power light will be lit.

## 1 TOUCH™ THERMOSTAT INSTRUCTIONS

To take advantage of the 1 Touch™ Thermostat continue to press the MODE/OFF button until the desired temperature is set in either the HIGH (1500 Watt) or LOW (1000 Watt) setting. When ambient temperature rises above the set temperature, the heater will stop. When the ambient temperature drops below the set temperature, the heater will turn on automatically.

Note: When the 1 Touch™ thermostat is set, either the HIGH or LOW power light, and the set temperature light will remain lit during operation. (See fig. #1 and #2)


Note: It is normal for the heater to cycle ON and OFF as it maintains the preset temperature. To prevent the unit from cycling, you need to raise the thermostat setting.

Note: 1 Touch™ has memory. The 1 Touch™ thermostat will remember the previous temperature setting after the unit has been turned off. However, if the unit is unplugged, the 1 Touch™ thermostat will be reset and will no longer remember the previous temperature setting.

## ILLUSTRATIONS

Figure 1

- A. Power Lights
- B. MODE/OFF Control
- C. Temperature Set Lights
- D. Carry Handle (not visible)
- E. Oscillation Switch
- F. Oscillation Base

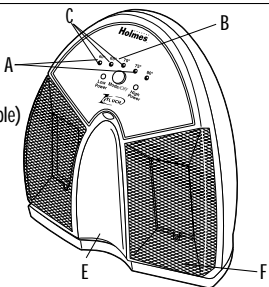

## OSCILLATION INSTRUCTIONS

1. Select the desired control setting and press the oscillation button ON.
2. To stop oscillation, press the oscillation button OFF.
3. Please do not manually turn the unit; it is designed to turn only by motorized oscillation.

## CLEANING/MAINTENANCE

### During Season Care:

Always unplug the heater, before moving or cleaning.

1. Carefully wipe the unit with a soft, damp cloth. Please be very cautious near the motor and heating elements.
2. NEVER use abrasive or flammable solvents to clean the unit.
3. After cleaning, be sure to completely dry the unit with a cloth or towel.

### After Season Care:

1. Store heater in a cool, dry location.
2. Holmes recommends that you store the unit in its original carton.

## TROUBLESHOOTING

### If your heater fails to operate:

- Make sure the electrical outlet or circuit breaker is working.
- Check for obstructions. If you find an obstruction turn the heater OFF, and UNPLUG THE UNIT. Carefully remove the obstruction and follow the reset instructions.
- The thermostat might be set too low. Press the MODE/OFF button until the heater restarts.

### If your heater fails to oscillate:

- Make sure the oscillation button is pressed to the ON position.


Please **DO NOT** attempt to open or repair the heater.

Please see the Warranty for Service Instructions.

Figure 2

- A. Set Temperature Light
- B. Low Power (1000 watts)
- C. High Power (1500 watts)
- D. MODE/OFF Control

CONTROL PANEL CLOSE-UP

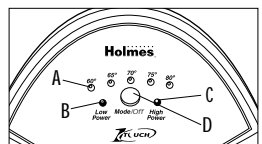

## SERVICE INSTRUCTIONS

1. Do NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
2. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed warranty.
3. If you have any other questions or comments, feel free to write us:

The Holmes Group, Inc.  
P.O. Box 769,  
Milford, MA 01757-0769

For your own records, staple or attach your sales receipt to this manual. Also, please take a moment to write the store name/location and date purchased below.

STORE NAME \_\_\_\_\_

LOCATION: \_\_\_\_\_

DATE PURCHASED: \_\_\_\_\_

(STAPLE RECEIPT HERE)

## FIVE (5) YEAR LIMITED WARRANTY

### SAVE THIS WARRANTY INFORMATION

- A. The quality controls used in the manufacture of this Holmes product are to ensure your satisfaction.
- B. This Warranty applies only to the original purchaser of this product.
- C. This Warranty applies ONLY to repair or replacement of any supplied or manufactured parts of this product that, upon inspection by Holmes authorized personnel, proves to have failed in normal use due to defects in material or workmanship. Holmes will determine whether to repair or replace the unit. This Warranty does not apply to installation expenses.
- D. Operating this unit under conditions other than those recommended or at voltages other than the voltage indicated on the unit, or attempting to service or modify the unit, will render this WARRANTY VOID.
- E. Unless otherwise proscribed by law, Holmes shall not be liable for any personal injury, property or any incidental or consequential damages of any kind including water damage. SOME STATES DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.
- F. All parts of this Holmes product are guaranteed for a period of 5 years as follows:
  1. Within the first 30 days from date of purchase, the store from which you purchased your Holmes product should replace this product if it is defective in material or workmanship (provided the store has in-stock replacement.)
  2. Within the first sixty months from date of purchase, subject to the conditions in paragraph H, Holmes will repair or replace the product if it is defective in material or workmanship providing it is returned to Holmes, freight prepaid, with PROOF OF PURCHASE date, together with \$7.00 for handling and return packing/shipping charges.
- G. If you have any problem with this product, please write our Consumer Service Department.
- H. IMPORTANT RETURN INSTRUCTIONS Your warranty depends on your following these instructions if you are returning the unit more than 30 days after the date of purchase:
  1. Carefully pack the item in its original carton or other suitable box to avoid damage in shipping.
  2. Before packing your unit for return; be sure to enclose:
    - a) Your name, full address with zip code and telephone number,
    - b) A dated sales receipt or PROOF OF PURCHASE,
    - c) Your \$7.00 check for return packaging, and
    - d) The model number of the unit and the problem you are having. (Enclose in an envelope and tape directly to the unit before the box is sealed.)
  3. Holmes recommends you insure the package (as damage in shipment is not covered by your warranty).
  4. All shipping charges must be prepaid by you (as noted in paragraph F).
  5. Mark the outside of your package:

CONSUMER SERVICE DEPARTMENT  
THE HOLMES GROUP, INC.  
2 PULLMAN STREET  
WORCESTER, MA 01606

SHIPPING AND HANDLING CHARGES: \$7.00

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. The provisions of this warranty are in addition to, and not a modification of, or subtraction from, the statutory warranties and other rights and remedies contained in any applicable legislation. To the extent that any provision of this warranty is inconsistent with any applicable law, such provision shall be deemed voided or amended, as necessary, to comply with such law.

HCH412601UM1

Printed in China