

WARRANTY INFORMATION

SERVICE INSTRUCTIONS

1. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
2. If you have any questions regarding this unit's operation or believe any repair is necessary, please write to our Consumer Service Department.
3. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed warranty.
4. If you have any other questions or comments, see our correspondence below or visit our website at www.holmesproducts.com.

SUNBEAM PRODUCTS, INC. D/B/A JARDEN CONSUMER SOLUTIONS
303 NELSON AVENUE
NEOSHO, MO 64850

For your own records, staple or attach your sales receipt to this manual. Also, please take a moment to write the store name/location and date purchase below.

STORE NAME: _____

LOCA _____

WARRANTY INFORMATION

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-546-5637 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-546-5637 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc d/b/a Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 5975 Falbourne Street, Mississauga, Ontario L5R 3V8. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

9100020008150

HFH298607EM1

Printed In China

Holmes

Owner's Guide
HFH2986



1Touch® Whisper Quiet Power Heater Fan

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS


Thank you for purchasing this Holmes® product. We understand the value of quality and are committed to making superior products that stand the test of time. We trust this product will exceed your expectations of quality and reliability. We hope that you enjoy this product and will consider purchasing another Holmes® product in the future.

To see our full product line or if you have any questions or comments about this product, please visit our website at: www.holmesproducts.com.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. To avoid fire or shock hazard, plug the appliance directly into a 120V AC electrical outlet.
3. The heater is hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 ft (0.9 m) from the front of the heater and keep them away from the sides and rear.
4. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
5. This heater is not intended for use in bathrooms, laundry areas and similar indoor location. NEVER locate heater where it may fall into a bathtub or other water container.
6. Extreme caution is necessary when any heater is used by, or near children or invalids, and whenever the heater is left operating and unattended.

7. Always unplug the heater when not in use.
8. When unplugging, be sure to pull by the plug and not the cord.
9. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
10. DO NOT operate heater with a damaged cord or plug, or after the heater malfunctions, has been dropped or damaged in any manner. Return appliance to manufacturer for examination, electrical or mechanical adjustment, or repair.
11. A heater has hot and arcing or sparking parts inside. DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored.
12. Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by the manufacturer cause hazards.
13. DO NOT use outdoors.
14. To prevent a possible fire, DO NOT block air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet.
16. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875 watts.
17. If the heater will not operate, see specific instructions on Auto Safety Shut-off.

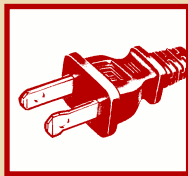

THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.

FEATURES - OPERATIONS

18. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
19. Discontinue use if plug or outlet is hot. It is recommended that the outlet be replaced if plug or outlet is hot to touch.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

TECHNICAL SPECIFICATIONS

- Wattage: 1500W (+5% -15%)
- Working voltage: 120V AC/60Hz

AUTO SAFETY SHUT-OFF WITH CERAMIC CONTROL

This heater is equipped with a patented, technologically advanced, safety system that requires the user to reset the heater if there is a potential overheat situation. When a potential overheat temperature is reached, the system will automatically shut the heater off. It can only resume operation when the user resets the unit. For specific reset instructions please refer to the unit.

To Reset the Heater

If the unit shuts down:

1. Unplug unit.
2. Wait 10 minutes for unit to cool down.
3. Plug in and operate normally.

NOTE: To shut unit OFF, hold Mode/Off button down for 2 seconds.


PRE-OPERATING INSTRUCTIONS

1. Carefully remove your heater from the box. Please save the carton for off-season storage.
2. Place heater on firm level surface.
3. Avoid overloading your circuit by not using other high wattage appliances in the same outlet. At 1500 Watts, this unit draws 12.5 Amps.

OPERATING INSTRUCTIONS

Your heater is equipped with a technologically advanced 1Touch® electronic thermostat. You can set the heater to run continuously in manual mode or set the 1Touch® thermostat to your desired temperature setting. The 1Touch® thermostat will automatically turn the heater ON or OFF depending on the preset comfort level. The comfort level ranges between 60°F and 80°F.

Figure 1

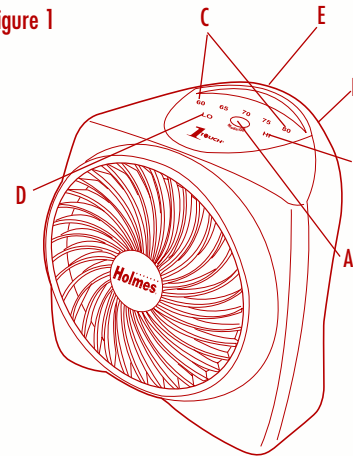

- A. 1Touch® Mode/Off Button
B. Carry Handle (Not Visible)
C. Temperature Set Lights
D. HI/LO Power Lights
E. Power Light

FEATURES - OPERATIONS CLEANING / MAINTENANCE

Manual Mode Instructions:

1. Plug the heater into a 120V AC electrical outlet.
2. To start the unit, push the MODE/OFF button once for the HIGH (HI) manual setting. (See Figure 1 and 2)
3. Press the button again for the LOW (LO) manual setting. (See Figure 1 and 2)
4. To stop the unit, press and hold the button for two seconds or keep pressing the button until all the temperature indicators are OFF.

NOTE: The Power Light will remain lit as long as unit is plugged in.


1TOUCH® THERMOSTAT INSTRUCTIONS

To take advantage of the 1Touch® Thermostat continue to press the MODE/OFF button until the desired temperature is set in either the HIGH or LOW setting. When ambient temperature rises above the set temperature, the heater will stop. When the ambient temperature drops below the set temperature, the heater will turn on automatically.

NOTE: When the 1Touch® thermostat is set, either the HIGH or LOW power light, and the set temperature light will remain lit during operation. (See Figure 1 and 2)

Figure 2

- A. 1Touch® Mode/Off Button
B. Temperature Set Lights
C. HI/LO Power Lights
D. Power Light

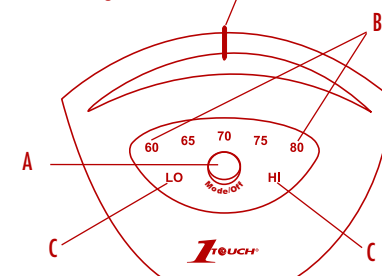

NOTE: It is normal for the heater to cycle ON and OFF as it maintains the preset temperature. To prevent the unit from cycling, you need to raise the thermostat setting.

NOTE: 1Touch® has memory. The 1Touch® thermostat will remember the previous temperature setting after the unit has been turned off. However, if the unit is unplugged, or the unit is turned off at low power - 80°F setting, the 1Touch® thermostat will be reset and will no longer remember the previous temperature setting.

CLEANING/MAINTENANCE

- Always unplug the heater before cleaning.
- Lightly run a vacuum cleaner nozzle over the heater grill to remove any dust or dirt that may have accumulated.
- Carefully wipe the heater with a soft, damp cloth. Please be very cautious near the motor and heating elements.
- NEVER use abrasive or flammable solvents to clean the heater.
- After cleaning, be sure to completely dry the heater with a cloth or towel.
- Store your heater in its original carton in a cool, dry location.

TROUBLESHOOTING

If your heater fails to operate, unplug the heater and:

- Make sure the electrical outlet and circuit breaker are working.
- Check for obstructions. If you find an obstruction, turn OFF and UNPLUG the heater. Carefully remove the obstruction and follow the reset instructions.
- Make sure the Mode Control is on the Lo or Hi setting.

Please DO NOT attempt to open or repair the heater.

Please see the Warranty for Service Instructions or call our Consumer Service Department at 1-800-546-5637.