

# SHARPER IMAGE®

wireless music & phone  
**SHOWER HEAD**  
with high-quality speaker

- The blue LED Play/Pause button will flash while the speaker attempts to sync with your device.
- Your device should automatically pair with the Bluetooth speaker. If not, search for "MSH00" in your device's menu. If "Not Paired", "Not Connected" or similar message appears on your device, select "MSH008" on the device to connect it.
- Play music from your device as you normally would. The blue LED will remain on.
- Your device must be within 30 ft of the Bluetooth speaker.
- Press the blue LED Play/Pause button ►|| at any time to stop and start the music.

### Telephone Function

- When someone calls you, the music will stop playing and your ring tone will be heard through the speaker. The blue LED will flash slowly.
- Press the ►|| blue LED button to answer the phone. Speak normally and in the direction of the showerhead.
- When finished, push the ►|| blue LED button to end the phone call and return to listening to music. The blue LED button will return to solid blue.

### CLEANING AND MAINTENANCE

- Periodically wipe the outside of the speaker unit with a damp cloth and mild cleanser. Dry with soft cloth.
- DO NOT use detergents, excess water, treated cloths, harsh cleaning agents to clean the plastic housing.

### WARNING:

- The Bluetooth speaker is water resistant. If it falls in the shower or gets completely submerged in water, quickly dry it off with a towel. Shake the speaker to get as much water out as possible. Blow into the speaker with a few quick bursts of air to clear the water out of the speaker holes.
- DO NOT attempt to disassemble or open the speaker housing as this will void the warranty.

### FCC Information

Model No: 01266

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

### ONE YEAR LIMITED WARRANTY

Ginsey Home Solutions sells its products with the intent that they are free of defects in manufacture and workmanship for a period of one year from the date of original purchase. Ginsey Home Solutions warrants that its products will be free of defects in material and workmanship under normal use and service.

#### For warranty service call:

Customer Service is available  
8:30am - 5:00pm (EST)  
Monday - Friday

Ginsey Home Solutions  
2078 Center Square Road  
Swedesboro, NJ 08085  
1-800-257-7844  
service@ginsey.com

#### Made in China

For more information on  
Sharper Image products, please  
visit: [www.sharperimage.com](http://www.sharperimage.com)


SHARPER IMAGE® name and logo are  
registered trademarks. Manufactured  
and Marketed by Ginsey Home Solutions  
under license. © Sharper Image.  
All Rights Reserved.



## 1 YEAR LIMITED WARRANTY

Thank you for purchasing the Sharper Image® Wireless Music & Phone Shower Head. The water-resistant speaker and easy voice control make it possible to listen to music, news or answer your phone while showering.

- Read all instructions carefully before use.
- Carefully remove all contents from the packaging and inspect the product to make sure all components have been received.
- Tools Required: Teflon tape

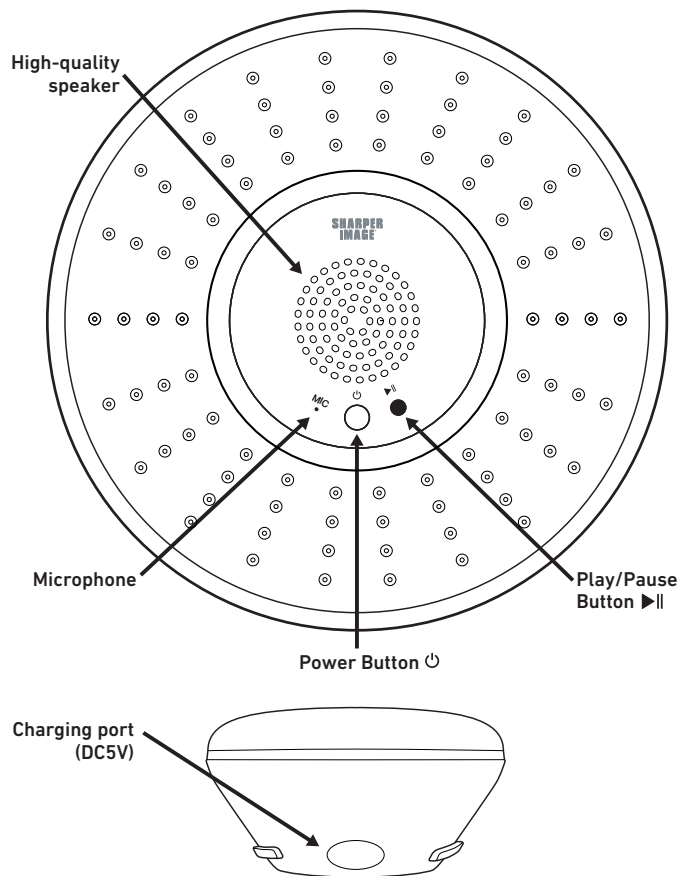

Register your product at: [www.ginsey.com/registration](http://www.ginsey.com/registration)

## GETTING STARTED

### Shower head Installation


- 1) Remove old shower head.
- 2) Clean the threads on the exposed shower pipe with steel wool or a wire brush to remove dirt and old thread seal, if necessary.
- 3) Wrap the pipe threads with Teflon tape (not supplied)
- 4) Carefully screw the showerhead onto the pipe by hand.  
Hand tighten only, do not use tools.
- 5) Turn water on and check for leaks.

### Charging the Bluetooth Speaker

- The speaker has a 5V DC, 1100mA non-removable, rechargeable Lithium Ion battery.
- Charge the battery for at least 4 hours before initial use.
- Plug the USB cable into a phone charger, laptop or other suitable 5V USB port and the male end of the cable into the 5V DC charging port on the side of the speaker. Make sure you close the water tight door on the charging port when finished charging.
- The speaker will emit 3 quick beeps when the battery needs to be recharged again.
- The speaker will last approximately 10 hours on one charge, depending upon usage.

### Speaker Mount

- Place the speaker in the center of the showerhead and turn it ¼ clockwise to lock in place.
- Twist the speaker ¼ turn counterclockwise to remove it from the showerhead for charging or cleaning.

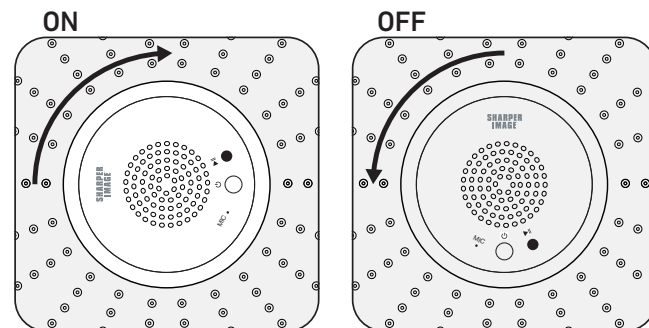

### Setting Up the Bluetooth: Pairing Your Device

- Turn on your Bluetooth-enabled device and turn on the Bluetooth capability as described in your device's user manual.  
(continue to next page)