



# ICARUS Omnia (M700BK)

## User Manual

# Table of contents

Disclaimer	5
Introduction	5
Inside the box	5
Parts and controls	6
Turning on/and off	7
Charging	7
Inserting a memory card	8
The Home menu	9
Importing and transferring content	11
Importing content	11
Importing DRM content	11
Authorization	12
Transferring DRM ebooks	12
Reading books	14
Opening books	14
Book page interface	14
Turning a page	15

Adjusting font size	15
Zooming in/out	15
Using the Option menu while reading	16
Adding bookmarks	16
Deleting bookmarks	17
Opening bookmarks in the Home menu	17
Opening bookmarks in the current book	18
Go to page	18
Auto flip	18
Book information	19
Screen rotation	19
Display settings	20
Add to favorites	20

## **Playing music** **21**

Music player	21
--------------	----

## **Playing video** **23**

Using the Option menu during video playback	23
---	----

## **Viewing pictures** **24**

Zooming in/out	24
Slideshow	25
Thumbnail view	25

File explorer	25
Copy-paste files	26
Deleting files	26
Settings	27
Time and date	27
Standby	27
Format memory	27
About product	27
Power management	28
Restore factory defaults	28
Language	28
Screen rotation	28
Manual	29
Troubleshooting	29
Precaution and maintenance	30
Technical specifications	32

## Disclaimer

All the information, design and specifications contained in this manual were correct at the time of publication. However, as the product is under development and upgrading, the final device may have a slightly difference in appearance or modified functionality than presented in this manual.

 
## Introduction

The ICARUS Omnia is an ebook reader with full color display screen. It supports many ebook formats, including content encrypted with Adobe DRM. The Omnia is more than an e-reader though! You can also use it to listen to music, view your pictures or watch movies.

### Inside the box

1. **ICARUS Omnia M700BK LCD e-reader**
2. **USB cable**
3. **Quick start guide**

## Parts and Controls

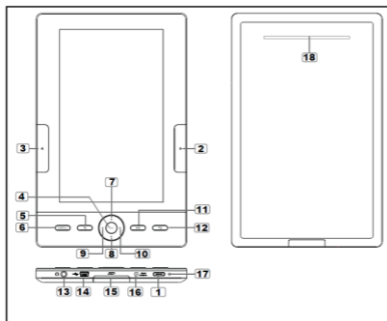

- 1 Power button** – press and hold for 3 second to turn on/off, press and hold 6 seconds to reset
- 2 Next page button** – press to turn to next page
- 3 Previous page button** – press to turn to previous page
- 4 OK / Enter Button**
- 5 Zoom button** – press to adjust font size or to zoom in/out
- 6 Menu button** – press to display the Option Menu
- 7 8 9 10** Directional buttons – to move cursor
- 11 Music button** – to enter into music playing menu
- 12 Return button** – press once to return to previous menu, press and hold to return to Home menu
- 13 Earphone jack**
- 14 Mini USB jack** – for data transfer and emergency charging
- 15 SD card slot** – supports SD/SDHC/MMC card
- 17 LED indicator**
- 18 Speaker** – do not block this area during music playing

## Turning on and off

Press and hold the [Power] button for 2 seconds to turn on the Omnia.

- It may take a few moments for the Omnia to turn on and loading the content.
- If the Omnia does not turn on, charging is required.
- To turn off the Omnia, press and hold [Power] button for 2 seconds.

## Charging

You need to charge the the Omnia prior to using it for the first time or when battery power is low.

- Charge the Omnia using the USB cable by connecting it to a computer or the optional ICARUS AC USB charger.
- Please turn the Omnia to standby mode to shorten the charging process.
- It will take about 6 hours to fully charger the Omnia in standby mode (LCD off)
- When the Omnia is charging, it will enter into standby mode after remains idle for 60 s. Press the [Power] button to wake up the Omnia.
- The battery status is displayed at the bottom left corner.

 


## Inserting a Memory Card

The Omnia supports SD/SDHC/MMC card in both FAT and NTFS file system. NTFS is needed to copy file with size larger than 4GB.

To insert a Memory card:

- Open the SD cover.
- Check that the SD card is in the correct position with the contact pin facing upwards as illustrated below. You may damage the card and the Omnia if SD card is not inserted in correct position.

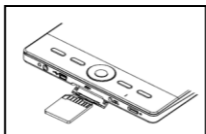

- Push the SD card into the card slot until it clicks.
- To remove the SD card, push the SD card once again until it clicks.
- When a SD card is inserted in or ejected from the Omnia, it may take few seconds for the Omnia to update the content.
- Please avoid inserting or ejecting an SD card when other operations are running as this may cause the system to hang.
- Do Not remove the card if the content inside the card is being played. This will halt the operation of the Omnia and cause the Omnia to restart.
- If the system is not responding, press and hold the <Power> button for 6 seconds to reset and turn it off.


Limitations of the NTFS file system:

- Books in the card are not recognized by ADE when connected to PC.
- Direct copying of files from the internal memory to the memory card is not supported.



## The Home menu

 When the Omnia is turned on, you will enter into the Home Menu.

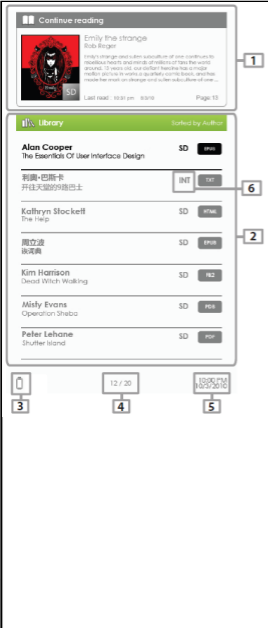

The screenshot shows the Home menu interface with the following elements and callouts:

- 1. Continue Reading:** A section at the top showing the last read book, "Emily the strange" by Rob Finger, with a book cover and a "Continue reading" button.
- 2. Library:** A section below "Continue Reading" showing a list of books. The first book is "Alan Cooper: The Essentials Of User Interface Design" (SD). Other books include "利奥·巴斯卡 开往天堂的9路巴士" (INT/TXT), "Kathryn Stockett: The Help" (SD), "周立波 谈笑录" (SD), "Kim Harrison: Dead Witch Walking" (SD), "Misty Evans: Operation Sheba" (SD), and "Peter Lehane: Shutter Island" (SD).
- 3. Directional Key:** A small icon of a directional key at the bottom left.
- 4. Page Number:** A display showing "12 / 20".
- 5. Time & Date:** A display showing "10:00 PM 10/31/2010".
- 6. File Directory:** A small icon of a file directory symbol at the bottom left.

**1. Continue Reading**  
-displays the page of the last read book. Press <OK> button to open the last read page.

**2. Library**  
-displays the list of books available. Move the cursor to desired book and press <OK> to open it.


**3. Battery Indicator**  
-displays battery status during operation

**4. Page Number**  
-displays current page number and total available pages.

**5. Time & Date**  
-display current time and date, you can set this from the [Settings]

**6. File Directory**  
- indicates the location where the file is stored. SD – SD card, INT – internal memory

Press the directional key to move cursor to desired item. Selected item will be highlighted in dark. Press <OK> to enter.

To exit from Option menu, move cursor to  and press <OK> to confirm.

Alternatively, press the <Return> button to exit.

The other options available in the Option menu are:



To sort books by different categories: Title, Author, Date, Format



To jump to a specific page



To read from previously added bookmarks



 
To adjust the brightness of the display screen




To open the Video Player



To open the Music Player



To open the Photo Viewer

 

To open the File Explorer for advanced file management



To adjust System settings and to read the user manual



To open your favorite book list.

# Importing and transferring content

## Importing Content

 
- The Omnia supports the USB Mass Storage Device function.
- To import contents (ebooks, video, audio, photo etc) into the Omnia, connect the Omnia to PC via the supplied USB cable.
- Upon successful connection to PC, the Omnia will enter USB mode and all operation will be halted.
- Go to [My Computer], double click on the Omnia's disk to open.
- Perform normal file management operation like other USB device.

## Importing DRM Content

The Omnia supports Adobe DRM contents. Adobe Digital Editions (ADE) is required.

## Installing Adobe Digital Editions (ADE)


- ADE is a free program by Adobe that is necessary for transferring DRM protected content from your computer to an e-reader
- You can download the installer from <http://www.adobe.com/products/digitaleditions/#fp>.
- For first time user, you will need to get a free adobe ID from adobe website. Click on the [get an Adobe ID online] link as illustrated:

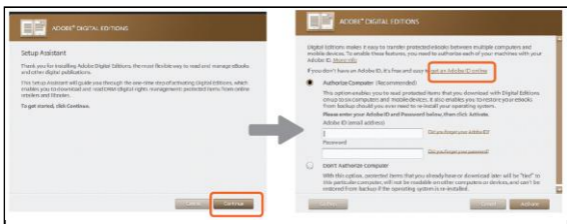

- Enter your email address and complete the online form as per instructed.

## Authorization

 - Upon registration, return to the ADE window. Enter the username and password to activate your Adobe account.
- After activation, connect the Omnia to PC. ADE will detect the Omnia and you are prompted to authorize device.
- After authorization, you will be able to find the Omnia recognized in ADE as below. Contents inside the Omnia will be displayed on the right hand windows.

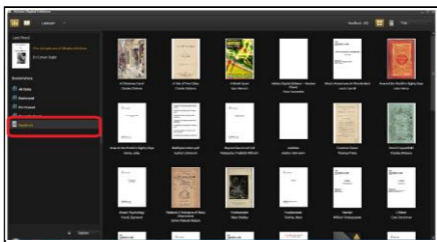

- You can now start downloading or buying ebooks from online Ebook stores supporting Adobe DRM.
- Purchased or downloaded ebooks will be stored in [My Digital Editions] in [My Documents].

## Transferring DRM ebooks

- From ADE menu, click on [All Items] on the left hand column
- Items in [My Digital Editions] will be listed down in right window.
- Select the desired item(s) to be transferred, <Shift> + <Left Click> to select multiple files.
- Drag and drop the selected item(s) into the Omnia's Drive located on the last row of the left side column as illustrated below.

 


## Notes on using Adobe Digital Editions (ADE)

Each ADE ID supports only 6 devices, this includes the master device (the Omnia) and the slave device (SD card).

When the Omnia is restored to default settings, ALL DRM activation record and data (including DRM books purchased) will be erased from the Omnia. You are required to authorize the device with your ADE ID again.

When the number of authorized device has exceeded the allowable amount, you will come across the following error message:

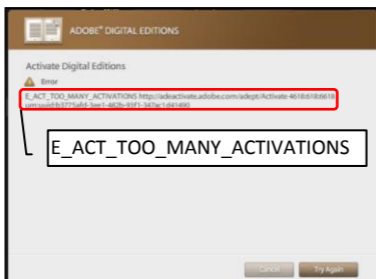


To request for extension and reset of your ADE ID, go to <http://www.adobe.com/support/digitaleditions/> → [Submit a web case]. You are required to key in your ADE ID info.

## Reading books
 
### Opening Books

- Books transferred to Omnia will be listed in Home Menu.
- Omnia supports ebooks in epub, pdf, and txt format.
- Use the <Directional> buttons to move the cursor to select book and press <OK> to open.

### Book Page Interface

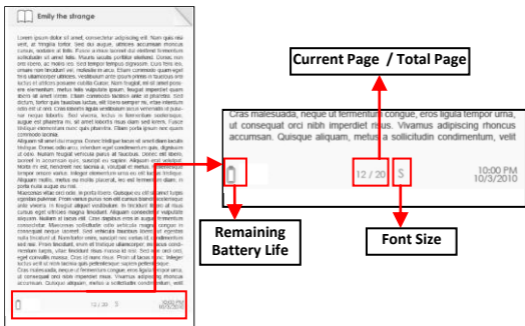

## Turning a page

While reading a book, press the <Next Page> or <Directional-Right> button to turn to next page. To turn to previous page, press <Previous Page> or <Directional-Left> button.

 
## Adjusting Font Size

- While reading, press the <Zoom> button to enter the font size menu.
- There are 5 font sizes available: Small, Medium, Large, XLarge, XXLarge.
- Move the cursor to the desired font size then press <OK> to confirm.
- It may take some time for the fonts to be resized.



## Zooming In/Out

- You will need to use zooming function to enlarge images available in the ebook (epub & pdf file)
- From the size menu, select [Enlarge]
- The Zoom menu will appear.

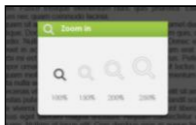

- Move the cursor to the desired zoom level and press <OK>.
- In zoom mode, use <Directional> buttons to pan across the zoomed page.

- Page turning is disabled in zoom mode.
- Press <Return> to exit the zoom mode and return to the original size and resume normal book reading functions.

## Using the Option Menu while Reading

While reading, press the <Menu> button to enter the Option Menu.

Options available:

1. Add / Delete Bookmark
2. Bookmarks
3. Go to Page
4. Music
5. Auto flip
6. Book Information
7. Rotate
8. Display Settings
9. Add to Favorite



## Adding a Bookmark

When reading, turn to the desired page that you would like to bookmark. Press the <Menu> button, move the cursor to [Add Bookmark] and then press <OK>.



## Deleting a Bookmark

 
- Turn to the bookmarked page that needs to be deleted. Press <Menu> and move the cursor to <Delete Bookmark>. Press <OK> to confirm.
- Alternatively, you can delete a bookmark from the Bookmark List.
- In the Bookmark list, press <Menu> and select [Delete] to delete selected bookmark.

## Opening bookmarks in the Home Menu

- From Home Menu, press <Menu> and select [Bookmarks] to enter Bookmark List.

Upper window displays a quick preview of the selected book.

Lower window displays the list of books with bookmarks. Press <OK> on the desired book to view the available bookmark list.

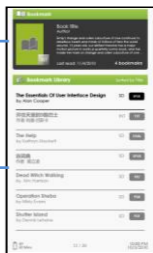


- In the Bookmark List, move the cursor to the desired bookmark, press <OK> to open.
- To delete a bookmark from the Bookmark List, press <Menu> to display the [Option Menu] and select [Delete] to confirm.

## Opening a bookmark in the Current Book

 - While reading the book, press <Menu> and select [Bookmarks] to enter into Bookmark List.
- In the Bookmark List, move the cursor to the desired page and press <OK> to open.
- To delete a bookmark from the Bookmark List, Press <Menu> to display the Option Menu and select [Delete] to confirm.

## Go to Page

You can jump to pages using the [Go to Page] option. In the Option Menu, select [Go to Page].



In Go to Page menu, move the cursor by the <Directional-Left/Right> button. Input the page number by <Directional –Up/Down> button. Move the cursor to [Apply] then <OK> to apply settings.

## Auto Flip

You can set the Omnia to [Auto Flip] mode. In this mode the book automatically turns pages in set time intervals. The auto flip duration available are: 10s, 20s, 30s, 40s, 50s, 1 min.

## Book Information

You can check the information of the current book from the [Book Information] option. This will show (when saved in the original content of the book by the publisher):

Title, Author, Publisher, File Type, Date added, File size, Publisher and Expiration.

Depending on the source of ebook that you download/purchase, some of the information may not be available.

## Screen Rotation

 
The [Rotate] option allows you to rotate the display orientation 90° in clock wise direction to landscape orientation.

- To return to original orientation, press <Menu> and enter <Rotate> once again.
- The Omnia contains a G sensor, simply rotate the Omnia in clock wise direction to rotate the viewing orientation.

In landscape view, the button layout is as below:



- In landscape view, the Option Menu is divided into 2 pages. To access options in the second page, move the cursor to [More>] icon at the top right corner of the Option Menu and then enter
- To return to previous page, move the cursor to [< Back] and then enter

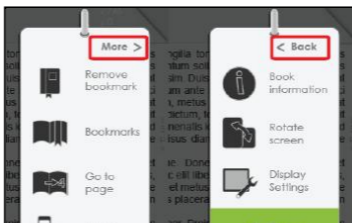

## Display Settings

- To adjust font color, background color, brightness during reading.
- Change of font color and background color are only applicable to txt and epub documents.

## Add to Favorite

- You can add books to your Favorite List. In Option menu, move the cursor to [Add to Favorite] to add current book into Favorite List.
- To view books in Favorite List, from Home Menu, press <Menu> button and select [Favorite].

- To remove books from the Favorites:
  1. Enter the Favorite List from the Home menu. Move the cursor to the desired book title. Press <Menu> button and select [Delete] from the dropdown list.
  2. While reading a book, press the <Menu> button and select [Remove from Favorite] from the Option Menu.

## Playing music



 



### Music Player

- In the Home Menu, press <Menu> to display the Option Menu.
- Move the cursor to [Music] and press <OK> to confirm.



- In the Music player, press <OK> to play/pause music playing
- Press <Directional Right> to play next song, press and hold to Fast Forward
- Press <Directional Left> to play previous song, Press and hold to Fast Rewind
- Press <Directional Up> to increase volume
- Press <Directional Down> to decrease volume

## Using the Option Menu in the Music Player

 Normal	EQ settings – move the cursor to [EQ Settings] , press [Left] or [Right] button to select desired EQ mode.
 Loop	Play Mode - move the cursor to [Play Mode] , press [Left] or [Right] button to select desired Play mode
 Sort by all song	To view all stored audio files
 Sort by genre	To sort audio files by genre
 Sort by album	To sort audio files by album
 Sort by artist	To sort audio files by artist

## Playing video

- From the Home Menu, open the Option menu and select 'Video' to enter into the video library.
- In the video library move the cursor to your desired video file and press <OK> to start playing.
- During video playback, the button definition is as below:

	1	Enter / Exit Full Screen mode
	2	Increase Volume
	3	Decrease Volume
	4	Previous video / Fast Rewind
	5	Next Video / Fast Forward
	6	Play / Pause

 
## Using the Option Menu during Video Playback

During video playback, press <Menu> button to display Option Menu.

Press <Left>/<Right> button to switch between [Loop] & [Repeat]  
**Loop:** to play all video files available in the list.

**Repeat:** repeats the current video

Press <OK> button to enter [Full Screen] or [Fit to screen]

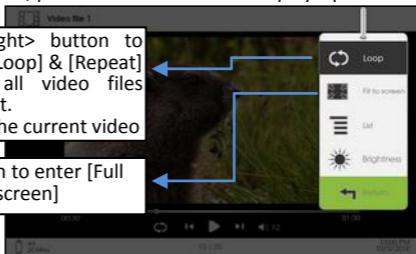

## To Display Subtitles during Video Playback

- The Omnia supports subtitle of sub, ssa, srt, lrc format.
- The file name of the subtitle must be identical to that of the video file. The subtitle will be loaded automatically during video playback.

## Viewing pictures

**Gentle Reminder:** Please organize the pictures into a specific folder for the ease of navigation.

- From the Home Menu, press <Menu> to display Option Menu.
- Move the cursor to [Photo] and press <OK> to confirm.

Upper window displays a quick preview of the selected photo

Lower window displays the file list in the reader.



- Use the <Directional> buttons to navigate through the files/folders.
- Press <OK> on the selected photo to view a full screen display.
- In full screen mode, press <Directional Left/Right> to view previous and next picture.



## Zoom In/Out Picture

- There are 3 zoom levels available. To zoom in while in full screen mode, press the <Zoom> button to change different zoom level.
- To return to original size, press the <Return> button to resume normal operation.

## Slideshow

- In full screen mode, press <Menu> → [Slideshow] to start.
- To stop slideshow, press <Menu> button once.
- From the drop down menu, select [Slide Time] to adjust slideshow duration.

## Thumbnail view

- In full screen mode, press <Menu> → [Thumbnail] to view pictures in thumbnail mode.
- To exit thumbnail view, press <Menu> once to return to full screen mode.

## File explorer

- From the Home menu, press <Menu> → [Explorer]
- Press <Left> / <Right> to select Internal / SD card memory and press [OK] to enter.
- Press <Return> to exit from current directory and the cursor will move to the top for memory selection.

## **Copy / Paste files**

- You can copy files/folders from SD card to the internal memory and vice versa.
- From the file list, move the cursor to the desired file to copy. Click <Menu> and select [Copy].
- From the explorer, go to the desired directory to store the copied file. Click <Menu> and select [Paste] to start copying files into the new directory/folder.

Note: it may take longer time to paste files/folder with big file size.

## **Deleting Files**

From the explorer, move the cursor to desired file to delete. Press [Menu] and select [Delete] to start deleting file.

Note: it may take longer time to delete files/folder with big file size and quantity.

# Settings

## Time & Date

To set the clock and date, press the <Directional Left/Right> buttons to move the cursor.

Press the <Directional Up/Down> buttons to input value.

**Time zone setting** is needed to calculate the expiry duration for book borrowing / returning.

## Device Standby

- To enable / disable auto standby mode.
- Press the <Power> button to manually set the Omnia to standby mode
- Press the <Power> button once to wake up the Omnia from standby mode.

## Format Memory

To format internal memory and memory card.

All data will be lost. Please backup your data before performing this.

## **About Product**

Displays product information of the Omnia.

## **Power Management**

Displays real time battery status of the Omnia.

## **Restore Factory Defaults**

To restore the Omnia's settings to defaults.

All settings will be restored. All DRM contents and activation will be deleted. You are required to authorize the Omnia again through ADE (Adobe Digital Editions) after the system is restored.

## **Language**

To set the system language of the Omnia.

## **Screen Rotation**

To set screen rotation mode to auto or manual mode.

## User's Manual

Opens the user manual on the Omnia.

## Troubleshooting

If the Omnia does not function as it is expected, please try the following steps.

### **The Omnia is not responding or can't be turned on.**

- Reset the Omnia by pressing and holding the power button for 6 seconds. The Omnia will be forced to shutdown if it is on and you are required to restart the Omnia again.
- Battery has been fully depleted. Please charge the Omnia via USB or the (optional) USB AC Adapter.

### **Battery Life seems short**

- The operating temperature is below 5°C. this is due to the characteristics of battery and not a malfunction
- The battery is not used for prolonged period. Please recharge the battery of the Omnia again
- The battery is not fully charged. Please charge the Omnia for at least 4 hours.
- The battery needs to be replaced. Please consult the authorized dealer for service.

### **A Book cannot be read**

- Copyright protected books cannot be read on any device other than the authorized one.
- Check if the book has expired.
- Check if the book format is supported by the Omnia.

### **The Omnia cannot be operated during USB connection**

- The Omnia cannot be operated while it is connected to PC.

- Eject the Omnia from computer to resume operation.
- To use the Omnia while charging, click on the [Safely Remove Hardware] icon located on the left lower corner to disconnect data connection with computer. After the Omnia is safely removed, computer will only charge the Omnia and you can now resume normal operation.

## Precautions and maintenance

### On Battery

- Charge the battery only in temperature that ranges from 0 to 35 degree Celsius.
- Do not charge Omnia if the battery is found damaged or leaking.

### On Operation

- Never subject the Omnia to extremes of light, temperature, moisture or vibration.
- Never wrap the Omnia in anything when it is being used or charged. Heat may build up in the Omnia while charging or if it used for an extended period of time.
- Do not use or store the Omnia in a location subject to:
  - A. Extreme high temperature, such as in a sun-heated car
  - B. Direct sunlight
  - C. High humidity or places with corrosive substances
  - D. Sub-zero condition, especially during winter

### On the Headphone

- Listening to audio at high volume for extended periods of time can cause hearing damage. To avoid damage to your hearing, keep the volume at moderate level.
- Do not use headphones while driving, cycling or operating any motorized vehicles. It can also be potentially dangerous to play at a high volume while walking, especially at pedestrian crossings.

## **On Cleaning and Maintenance**

- If the Omnia does get wet, turn it off immediately. Wait for it to dry completely before turning on again.
- Clean the screen with a soft cloth; be careful not to wipe it with anything abrasive. When carrying your Omnia in a bag, keep it in the protecting case supplied to avoid scratches
- If the Omnia needs service, please consult the authorized dealer through the contact information provided in the warranty card. Faulty service may void the warranty.

## **On the SD card**

- After inserting a SD card, if the Omnia does not respond, please take out and insert again.
- Do not remove a SD card or turn off the Omnia during data writing or reading to prevent damage to data and to the Omnia.
- Make sure the SD card is unlocked before writing or deleting data in the SD card.
- Backup your files and data before formatting the SD card. Please format the SD card in FAT.

## Technical specifications

### Display

7 inch TFT-LCD Display, 800x480 pixels

Brightness: 200cd/m<sup>2</sup>

### Storage memory

Built in memory: 2GB (FAT format)

Supports SD/SDHC/MMC up to 16GB (FAT/NTFS format)

### Media File Format supported

Ebook: epub, pdf, txt, fb2

Audio: mp3, wma, wav, ogg, aac

Photo: jpg, bmp, gif, png

Video: wmv, flv, rm/rmvb, mov, avi, mpeg 1, mpeg 2, mpeg 4, xvid, divx, h.263, h.264, up to HD 720p resolution

### Connectivity

Data transfer: USB 2.0 High Speed

Audio: 3.5mm audio jack

Power: DC jack, USB jack

### Miscellaneous

Built in stereo speaker

Clock / Date

Real time battery indication

### Battery life

Reading – up to 8 hours

Music – up to 30 hours (with backlight off)

### Charging

Power: DC 5.0V, 1.2A (via USB)

Duration: 6 hours (approx)

### Minimum system requirement (USB Mass Storage)

Windows 2K, ME, XP, Vista, Win 7, Mac OS 10x



## Physical properties

Dimension: 206.4 x 133 x 12.9 mm (approx)

Weight: 347g (approx)

***\*\*Design and specifications are subject to change without prior notice***

## Copyrights and Trademark Notice

Copyright laws prohibit copying the data of this product or the contents of this manual (illustrations, related documents, etc.) in whole or in part without the permission of the copyright holder. Additionally, use of the data of this product or the contents of this manual is not allowed without ICARUS' permission except for personal use.

Microsoft, Windows, Windows Vista and Windows Media are trademarks or registered trademarks of Microsoft Corporation in the United States and / or other countries.

Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.

Adobe, the Adobe logo, Omnia and PDF are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

The Omnia contains Adobe® Reader® Mobile software under license from Adobe Systems Incorporated, Copyright © 1995-2009 Adobe Systems Incorporated. All rights reserved. Adobe and Reader are trademarks of Adobe Systems Incorporated.

© 2011 ICARUS Reader

