

Waterproof Bluetooth Speaker

User Manual



SY-001

Thank you for choosing our bluetooth speaker. We hope you will enjoy it very much. Please read this instruction carefully before use and keep this manual for future reference.

Table of Contents

- Specification
- Charging the Speaker
- Pairing Your Device
- Speaker Operation
- Troubleshooting

1

- Safety and Maintenance

Specification

- IP Grade: IP67
- Bluetooth Version: V3.0+EDR
- Frequency Range: 2.4GHz
- Power Rating: 3W
- SNR: >85dB
- Operating Voltage: 3.7V
- Charging Voltage: DC 5V
- Charge Time: Approx. 5hours
- Operation Time: Approx. 8 hours
- Operating Distance: 10 Meters

Charging the Speaker

1. Insert the charging cable into DC 5V port on the speaker.
2. Connect the standard USB plug end of the cable to a power USB port on a computer or other USB charging device. For first time use, a fully charge is

2

recommended.

3. A red LED is on while the unit is charging and off when the speaker is fully charged.

Remark: can only be charged with 5V DC charger adaptor or USB.

Pairing Your Device

Please make sure your cell phone (or portable device) is Bluetooth-enabled. Specific pairing steps may vary with different devices. Please refer to your device's user's manual for further information.

1. Turn on your cell phone's Bluetooth function and search for Bluetooth devices. After the search is completed, select "MY SPEAKER" from the Bluetooth device list.

3

2. According to the indication, enter password or PIN No: "0000" or "1234": some cell phones do not need input any password or PIN to pair the speaker, simply press "Pair".

3. After successful pairing, a beep sound will be played.

Remark: Once this speaker is paired and connected to your mobile phone successfully, next time when you switch on this speaker, it will connect to your mobile phone automatically as long as the Bluetooth is on in your mobile. If you need to cut off this pairing please long press the PHONE button.

4

Speaker Operation

- **POWER** button: To switch ON/OFF the unit.
- **VOLUMN/NEXT SONG/LAST SONG** button: Long hold to volumn up/down; short press to play next/last song.
- **PLAY/PAUSE** button: Press to play or pause playing music
- **PHONE** button: Press to answer or hang up the phone calls when incoming calls are indicating.

Remark: 1. You can press the **PHONE** button twice quickly to redial the last phone call.
2. Long press the **PHONE** button to cut off the bluetooth pairing that connecting to your mobile phone in the memory.

Troubleshooting

The speaker doesn't play

- Make sure the speaker is charged.
- Make sure the speaker and cell phone are connected. Please refer to your cell phone's Bluetooth menu and "Paring Your Device" section.

Cannot pair my cell phone to the speaker

- Make sure the speaker is charged.
- Make sure the speaker and cell phone are in paring mode.
- Make sure the Bluetooth of your cell phone is on; please refer to the cell phone's users' manual.
- Make sure the speaker and your cell phone are within controllable

range.

If the problem remains, please do as follows

1. Re-charge the speaker.
2. Turn off your cell phone and take out the battery, and put it back after.
3. Turn on Bluetooth of your cell phone and delete all the paring histories.
4. Re-pair your cell phone and the speaker.

Safety and Maintenance

- Do not use this device near any heat sources, such as, rsdiators, heaters, stoves, or other heat-producing machinery.
- Do not leave it in direct sunlight.
- Keep the speaker out of children's reach to avoid a

choking hazard.

- Clean with soft cloth. Do not use harsh chemicals to clean.
- Do not clean this device when it is charging. Always unplug from the power source before cleaning tht device.
- Do not insert any metal object into the device. Risk of short circuit.
- Do not try to repair or open this device yourself.

