



 
TwinTAB

T102D1

TABLET PC



10.1" Tablet PC Touch Screen

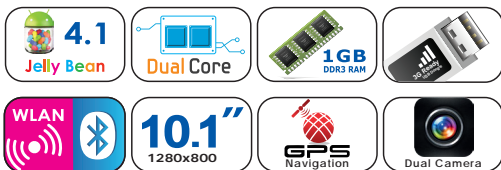

User Guide

TwinTAB-T102D1

CONTENTS

 
SPECIFICATION.....	2
QUICK GUIDE	3
ICON INDICATOR.....	4
GETTING STARTED.....	5
POWER BUTTON USAGE.....	7
DESKTOP.....	8
LOADED APPLICATIONS.....	9
STATUS AND NOTIFICATION AREA.....	11
CAMERA.....	12
FILE BROWSER.....	13
WI-FI & 3G NETWORK.....	14
IMPORTANT SAFETY PRECAUTIONS.....	16
TROUBLE SHOOTING.....	16

1.SPECIFICATION

Product Module	TwinTAB-T102D1
Brief Introduction	10.1" Tablet PC
Chipset	Dual-core ARM Cortex-A9 up to 1.6GHz
Built-In OS	Android 4.1
RAM Density	1GB DDR3
Memory	8GB/16GB
LCM	1280*800
Touch Panel	Multi Capacitive Touch (5 Points)
Support	Wi-Fi、GPS、 Bluetooth
Camera	Front: 0.3M Pixel ; Rear: 2.0M Pixel
Battery	Li-Polymer 6000mAh/3.7V
Connection Slot	Micro SD Card、 Micro USB、 Mini HDMI、 DC IN、 Earphone Jack




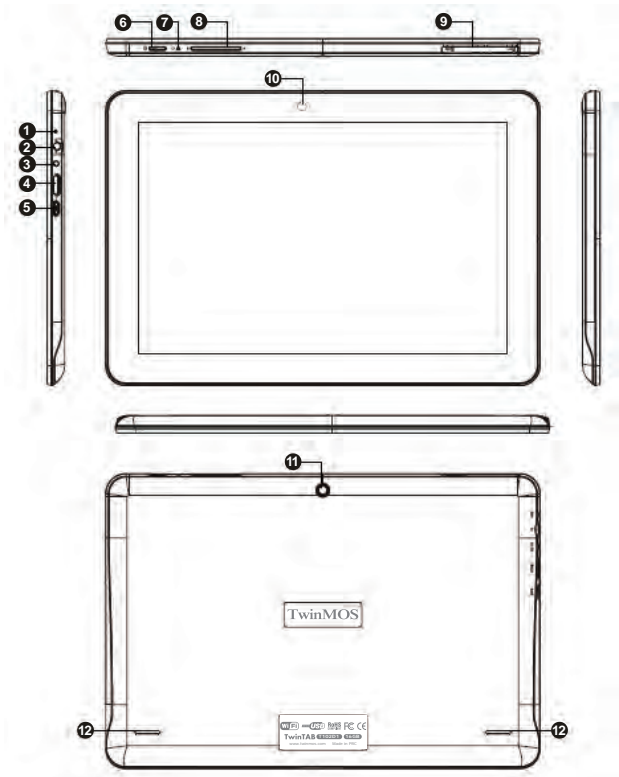

2 QUICK GUIDE





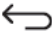




INTERFACE INTRODUITION



1. MIC: Used for recording
2. Earphone Jack: The built-in speaker will shut down automatically when plug in the earphone.
3. DC IN: Connect to power adapter provided by TwinMOS.
4. Mini HDMI: Connect to external display device.
5. Micro USB: Connect to external USB device or other mobile device.
6. Power Button: Press power button for 3 seconds to power on/off your tablet.
7. Reset: Poke the reset hole to reset the system.
8. Volume Button: To control the volume for +/-.
9. Card slot: use for TF-card.
10. Front Camera: 0.3 MP.
11. Rear Camera: 2.0 MP.
12. Speaker: Left speaker and right speaker

3 ICON INDICATOR

ICON	FUNCTION
	Return
	Go to the opening screen
	Check the running applications
	WLAN connected
	Auto-rotate screen

	Adjust screen brightness
	Notification
	Setting up
	Bluetooth activated
	New text or multimedia message
	Alarm activated
	Error occurred or caution required
	Battery power level
	Connected to PC

4 GETTING STARTED

Charge the device

☆ It is not recommended to use the device while charging.

Plug the power adapter into an electrical outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

Turn the device on

Press the power button briefly.

Wi-Fi Network Setup


Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network before exploring your device.

1. Tap on  → Settings.

2. Slide Wi-Fi switch to turn on.

The device automatically scans and lists all available local Wi-Fi Networks found. A lock sign indicates a secured Wi-Fi network that requires a password to connect.

3. Tap on the desired network to which you want to connect to → enter the Network Password if applicable → tap Connect.

4. Tap on  to return to the Desktop screen.

☆ If your Wi-Fi network is set as “Hidden”, it won't be found by the auto scan. Tap on Add Wi-Fi network option and follow the prompts to add your desired network.

HDMI video play

This feature is supported through a Mini HDMI cable which connects and synchronizes your device to a TV, for using this feature, insert the Mini HDMI cable into the HDMI slot located on the right side of the device and connect the other end to your TV.

5 POWER BUTTON USAGE

Turn On: Press the power button and hold for 2 seconds.

Turn Off: Press the power button and hold for 2 seconds → tap Power off → tap OK.

Reboot: Press the power button and hold for 2 seconds → Tap reboot.

Quickly Hibernate/wake-up: Press the power button and hold for 2 seconds → tap Hibernate enable the device to hibernate, or press the power button briefly again to make the hibernated device to wake-up.

Force Off: If device does not respond, press and hold the power button for 5 seconds.


(Warning: Force off could lead to unpredictable system errors!)

Reset: Press the reset button could be reset the device. It's will clear the all data, Please careful with the function. (Note: After the current reset function can't restart, can only be turned off, so you need to press the power button restart the device after reset.)

9 DESKTOP



1. Back
2. Home
3. Recent Apps
4. Current time
5. Wireless network
6. Battery Status








Through add icon  you can personalized some of the operations, such as, adding widgets, creating application shortcuts, set wallpaper, add bookmarks, set-up email accounts and etc...











☆ *Tap on any application icon to launch it.*




☆ *Touch, hold and then slide any icon to reposition it on the screen.*

☆ *Touch, hold and slide any icon onto  to remove it from the Desktop screen.*

-LOADED APPLICATIONS

	Clock	Set the time and/or alarm
	App Market	Download applications quickly & easily.
	Browser	Access internet.
	Calendar	Calendar. Organize your daily schedule
	Camera	Take normal photos, panoramic photos and record videos.
	Calculator	Calculate simple math equations.
	Email	Send/Receive emails using your existing email addresses.

	File Browser	View and manage files, folders and Apps such as: Installing Apps, backing up files to a SD Card and etc.
	My Music	Play and manage audio files.
	My Video	Play and manage video files.
	My Photo	View and manage photo files.
	Gallery	Play, view, and manage both video and photo files.
	Picture Capture	Capture screen image.
	Task Manager	Manage applications and processes.
	Voice search	Search through the voice recognition technology.
	Flash player settings	Manage the Flash Player's settings.
	Downloads	View the downloaded/downloading files/Apps/Programs/etc. and their download progress.

	Play Store	Download android games and Apps.
	Search	Local and online searches.
	Settings	Settings for personalizing and enhancing your Device.

☆ To move an icon to the Desktop screen, touch & hold the icon, and release it when it appears on the Desktop screen.

☆ Touch, hold and then slide any icon to reposition it on the screen.

☆ Touch, hold and slide any icon onto  to remove it from the Desktop screen.

10 STATUS AND NOTIFICATION AREA

On the Desktop screen, tap on any of the icons located on the Status bar to view the notifications and updates.







Wi-Fi	Access the Wi-Fi setting
Auto-rotate screen	Automatically rotate screen with gravity induction.
Brightness	Screen brightness setting.
Notifications	View all notifications.
Settings	Access the general settings.



11 CAMERA


Tap on the  Camera application icon.

Take Pictures

1. Tap on  switch to camera
 2. Tap on  to take a picture.
 3. The pictures will be automatically saved.
 4. Tap on the picture thumbnail  to enter My Photo to view the pictures.
 5. Press Back to return to the Camera.
 6. Tap on  to exit the Camera and return back to the Desktop.
-



12 FILE BROWSER

Tap on the  File Browser application icon, to view the files on all storage devices (Internal memory, SD card, USB device), or install Android application on your axpad.

The icons across the top of the screen:



Internal Flash (ROM)



USB Storage



SD Card



Paste



Back to the previous folder



Menu




Switch folder display mode.

Copy Media between Computer and Tablet

You can use the File Browser to copy files between external storage devices and your computer. You can first copy the desired files onto a SD card or a USB device.


☆ *The internal device storage is titled “ROM”, a memory card “SD”, and a USB storage device is titled “USB”.*

☆ *The instructions below are about copying files from a SD card or a USB storage device into your device. You can use the same method to copy from your device to a SD card or a USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.*

1. Tap on GoTo, select **SD** or **USB** to display the contents of your storage device.
2. Tap and hold a folder/file and enter into the multi-select mode, select the desired folder/file → tap on Copy.
3. Tap on GoTo, select **ROM** Internal Memory → tap on the folder into which you want to copy the file → tap on .

Connected to the local area network shared folders

You can view all of the LAN shared folders.

1. Connect to LAN.
2. Tap on  Net share → Add new sharing point → Choose the mode used of sharing → Editor of network folder sharing.
3. After you are connected successfully enter the network sharing settings and open the list of shared folder directly.

Delete files

Tap and hold a folder/file and enter into the multi-select mode, select the folder/file you wish to delete → tap on Delete → OK to confirm the deletion. → tap on Delete → Tap OK to confirm the deletion.

13 WI-FI

Tap on Settings → Wi-Fi to enter into the Wi-Fi Settings.

1. Slide the Wi-Fi switch to turn on Wi-Fi.
2. All the available AP within the vicinity will be listed, select the desired network
3. If the AP is not encrypted, select Connect to start. Once you are connected successfully the AP information will be saved on your device. You may choose "Forget" to remove the AP's information;

- 4.If the AP is encrypted, you must enter the network's password in the pop-up window, and click "Connect" Start Connection;
 - 5.Once you are successfully connected, the wireless connection icon will appear on the bottom status bar.
-

14 3G NETWORK

This only for 3G model

you need to purchase a 3G dongle which is compatible to your country of residence in order to be able to use the 3G network.

15 BATTERY MANAGEMENT

It is highly recommended that you charge the battery for at least 6 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

Charge battery

Plug the power adapter into an electrical outlet, and connect it to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

☆ You cannot charge the battery using the USB cable.

When fully charged, the battery icon will be displayed on the status bar



32 IMPORTANT SAFETY PRECAUTIONS

Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Do not remove the back cover.

Cleaning your device

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend to using supplied cleaning cloth or a soft, non-abrasive cloth such as a camera lens cloth.

33 Trouble Shooting

Android

Q: What Android OS version is on my Device?

A: 4.1

Basic Device Functionary

Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 6 hours, but you can use the device while it's charging. Please use the power adapter which is included in the box to charge your device; this device cannot be charged via the USB cable.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts. Check with your email provider to see if your account is supported.

Media Cards

Q: Which media cards are compatible with my Device?

A: micro SD / microSDHC cards

Music

Q: What type of music files can I play on my device?

A: MP2, MP3, WAV, AAC, WMA

Q: How do I add music files to my device?

A: Copy the music files from your computer onto a SD card or USB storage device, and use the File Browser application to copy the files into the device.

Photos

Q: What type of photo files can I view on my device?

A: JPG, JPEG, BMP and PNG.

Q: How do I add photo files to my device?

A: Copy the photo files from your computer onto a SD card or USB storage device, and use the File Browser application to copy the files into the device.

Video

Q: What type of video files can I play on my device?

A: Video file formats supported: MPEG1/2/4、H263、H264、VC1、Real Video、Motion JPEG.. The largest supported video format is 1080P (1920×1080) resolution.

Q: What type of video files can I play on my device?

A: Video file formats supported: MPEG1/2/4、H263、H264、VC1、Real Video、Motion JPEG.. The largest supported video format is 1080P (1920×1080) resolution.

Q: How do I add video files to my device?

A: Copy the video files from your computer onto a SD card or USB storage device, and use the File Browser application to copy the files into the device.
Wi-Fi

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

TwinTAB

T102D1



Technical Support

e-mail: support@twinmos.com

Join With us and WIN Exciting Prizes:

More Details Log on to www.twinmos.com

All products are subjected to change without notice.

All brand and product names are trademarks of their respective holders.



Like us on:

www.facebook.com/twinmos.tech



Watch us on:

www.youtube.com/twinmostech



Follow us on:

www.twitter.com/twinmostech

