 
SPECIFICATION

Bass boost	4dB
Output power	120mW x2 (16Ω Load)
	13mW x2 (300Ω Load)
Headphone impedance	16Ω ~ 300Ω
Signal to noise ratio	≥97dB
Frequency response	10Hz ~ 100KHz
Battery life	4 hours
Weight	18g
Size	57(L) x 27.6(W) x 9.10mm(D)

Push 1 and 2



ACCESSORIES



Audio cable



USB cable (For battery charge only)



Clip cover



Owner's quide

5Lars & Ivan


HA-1

Mini Headamp with Bass Boost **USER MANUAL**





Release the clip or cover

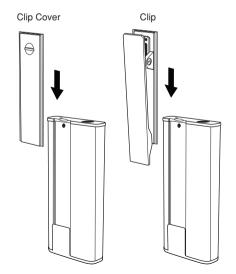

FFATURES & OPERATING

Preparation

Charge up unit before use. Connect USB cable to charge up unit at least 2 hours if battery low. Connect audio cable to your device and HA-1 input 6. Connect your headphone to HA-1 2.

Power On

Press and hold power button 6 for 2 seconds to turn on unit, the power indicator
will turn to Red color.

Another press and hold for 2 seconds will turn unit OFF.

 
- (1) When the unit can't switch on, recharging is needed.
- (2) Suggest to recharge the unit after 4 hours continuous usage, if you are not using your headamp often, be sure to complete a full charge cycle at least every three months.
- (3) LED will flash when there is battery low condition. It is advised to recharge the HA-1 immediately.


Select Mode

 
You can select different vocal mode by a short press at power button 3 when unit is operating. Blue LED indicator is bass boost mode. Red LED indicator is normal mode.

Adjust Volume

You can adjust the volume output by a press on "+" 4 or "-" 2 button. Press and hold the volume button will change volume continuously.



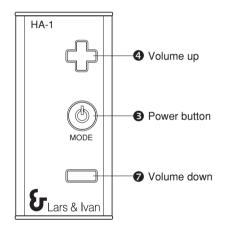



Remarks

The volume and vocal mode you selected will be memorized by HA-1 even unit is power OFF. Next time when you power up the unit. the last settings will be restored.

There is a clip 3 on HA-1 that you can clip on vour bag or clothes to free your hand. HA-1 is a sophisticated device for smart phones, if you are using other music device that cannot match HA-1 due to different wiring configuration. You need to insert a conversion cable between HA-1 and to your music device and headphone. The reason is due to different pin configuration among models. (Conversion cables need to be purchased separately)

Lars & Ivan www.lars-ivan.com









20150127R1