

Oster®

User Manual **Automatic Citrus Juicer**

Manual de Instrucciones **Exprimidor de Cítricos Automático**

Manuel d'Instructions **Presse-Agrumes Automatique**

MODEL/MODÈLE
MODELO **3186**



Visit us at www.oster.com

P.N. 111877

IMPORTANT SAFEGUARDS

When using your juicer, basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS BEFORE USE

- To protect against electric shock, do not put appliance in water or other liquid.
- Before use, check that your voltage corresponds to the voltage indicated on the rating plate of the appliance.
- Do not operate or place the juicer:
 - On non-heat-resistant or flammable surfaces.
 - Near a hot gas stove flame or electric element or in a heated oven or microwave oven.
- Do not use the appliances if:
 - The appliance or the cord is damaged.
 - The appliance has been dropped and is visibly damaged or functions abnormally.
- The appliance is intended for domestic use only and no liability can be accepted for any damage caused by non-compliance.
- Do not run juicer continuously for longer than 4 minutes. Turn off switch and let it rest for at least 2 minutes to cool down the motor.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent.
- Do not leave packaging components (*plastic bags, cardboard, polystyrene, etc.*) within reach of children, as they could be dangerous.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Disconnect the plug from the socket when not using the appliance.
- To protect against electrical hazards, do not immerse cord, plug or juicer in water or other liquids.
- Never leave appliance unattended when in use.
- Close supervision is necessary when any appliance is used by or near children or incapacitated persons.
- Do not operate any appliance with a damaged cord or plug or after the appliance has malfunctioned or has been damaged in any manner. Return the juicer to the nearest Sunbeam Appliance Authorized Service Center for examination, repair or electrical or mechanical adjustment.
- Do not use with an extension cord.
- Do not use the juicer outdoors or for commercial purposes; this appliance is for household use only.
- Use this appliance only for its intended use as described in this manual. Do not use attachments that are not recommended by the manufacturer; they may cause injury.
- Unplug juicer from outlet when not in use, before putting on or taking off parts and before cleaning.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.

SAVE THESE INSTRUCTIONS


POLARIZED PLUG INFORMATION

This appliance has a polarized plug (*one blade is wider than the other*). To reduce the risk of electric shock this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse it. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

THE JUICER IS DESIGNED FOR HOUSEHOLD USE ONLY WELCOME

Congratulations on your purchase of an OSTER® Juicer! To learn more about OSTER® products, please visit us at www.oster.com.

LEARNING ABOUT YOUR OSTER® CITRUS JUICER

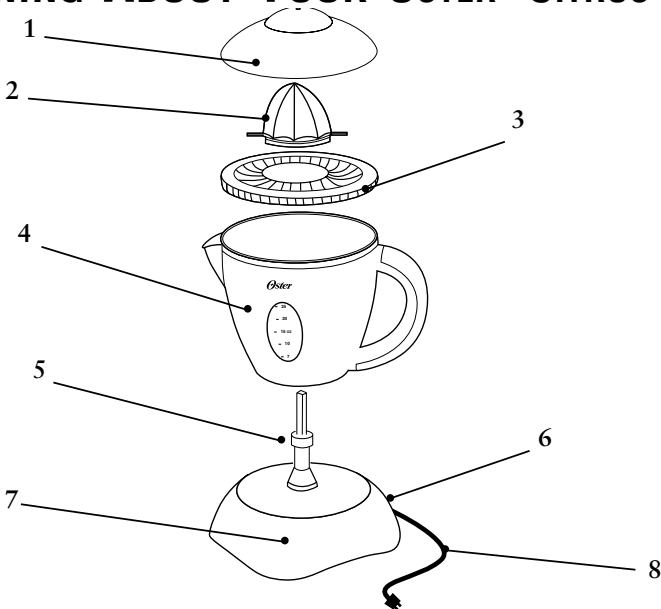

- | | |
|--------------------------------------|---------------------------------|
| 1. Lid | 5. Spindle |
| 2. Reamer with Pulp and Pulp Scraper | 6. Power Unit with Cord Storage |
| 3. Strainer Dish | 7. Base |
| 4. Juicer Pitcher | 8. Cord |

PREPARING TO USE YOUR JUICER FOR THE FIRST TIME

If you are using your juicer for the first time, please be sure to:

1. Remove any stickers from the surface of the juicer and wipe the outside of your juicer with a damp cloth.
2. Wash interior of pitcher, strainer dish and reamers in warm soapy water, rinse and wipe dry.

OPERATING INSTRUCTIONS

For better extraction, it is recommended to first roll the whole fruit on a work surface by pressing it with the palm of the hand on the kitchen counter.

1. Place the juicer pitcher over the spindle on the power unit. Note that the pitcher locks into place by twisting it counter clockwise until it locks. There should be no gap between the juicer pitcher and the power base when properly locked in place.
2. Snap the reamer into the center of the strainer dish, place the assembled strainer dish and pulp reamer onto the spindle.

NOTE: Do not run juicer continuously for longer than 4 minutes. Turn off switch and let it rest for at least 2 minutes to cool down the motor.

JUICING TIPS

For easier juicing and increased juice yield:

1. Let fruit reach room temperature before juicing.
2. Loosen the fibers of the fruit by rolling it between the palm of your hand and the countertop before cutting.
3. Press half a fruit on the reamer with a firm and even pressure. This will start the appliance. Lift up on the fruit and the appliance will stop. Note that when pressing down again with the fruit, the reamer may reverse direction. This is to better release the juice from the fibers. When juice extraction is complete, remove the fruit, unplug and remove the reamer from strainer dish. Discard pulp and seed residue.
4. Press fruit firmly on the reamer but not too hard. Let the motor do the work.
5. Move fruit from side to side while reaming and lift up and press down a few times to reverse the direction of the reamer to get all the juice.
6. Gently squeeze the sides of the fruit when juicing to make better contact with the reamer.

Cleaning Your Juicer:

DO NOT WASH ANY PARTS IN AUTOMATIC DISHWASHER

1. Unplug unit and remove all parts from drive shaft.
2. To clean motor base, wipe with a damp cloth. DO NOT immerse in water or any other liquid.
3. To clean all other juicing parts, wash in warm, soapy water. Rinse and dry well.
4. A cord storage compartment is located on the bottom of the unit.

One-Year Limited Warranty

Sunbeam Products, Inc., or if in Canada, Sunbeam Corporation (Canada) Limited (collectively “Sunbeam”) warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What Are the Limits on Sunbeam’s Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A. –

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.334.0759 and a convenient service center address will be provided to you.

In Canada –

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.667.8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc., located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, located at 5975 Falbourn Street, Mississauga, Ontario L5R 3V8.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.



For product questions contact:
Sunbeam Consumer Service

USA : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

©2003 Sunbeam Products, Inc. All rights reserved.
OSTER® is a registered trademark of Sunbeam Products, Inc.
Distributed by Sunbeam Products, Inc., Boca Raton, FL 33431

Pour les questions de produit:
Sunbeam Consumer Service

États-Unis : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

©2003 Sunbeam Products, Inc. Tous droits réservés.
OSTER® est une marque déposée de Sunbeam Products, Inc.
Distribué par Sunbeam Products, Inc., Boca Raton, Florida 33431

Para preguntas sobre los productos llame:
Sunbeam Consumer Service

EE.UU. : 1.800.334.0759
Canadá : 1.800.667.8623
www.oster.com

©2003 Sunbeam Products, Inc. Todos los derechos reservados.
OSTER® es una marca registrada de Sunbeam Products, Inc.
Distribuido por Sunbeam Products, Inc., Boca Raton, FL 33431