DURALOGIC CORDLESS HEATED JACKET

ITEM #SUN Group MODEL # Heat jacket DURALOGIC

| ATTACH YOUR | RECEIPT HERE | |
|---------------|--------------|---------------|
| Serial Number | | Purchase Date |
| | | |



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at PACKAGE CONTENT



| PART | DESCRIPTION | QUANTITY |
|------|---|----------|
| А | Cordless Heated Jacket | 1 |
| В | Cordless Heated Jacket Battery | 1 |
| С | Cordless Heated Jacket Battery Wall Charger | 1 |

A

SAFETY INFORMATION



Work Area Safety

- Keep work area clean and well lit. Cluttered or dark areas will invite accidents. Electrical
 Safety
- Do not expose Cordless Heated Jacket to rain or wet conditions. Water will increase the risk of electric shock.
- Do not abuse the power cable. Never use the cord for carrying, pulling or unplugging the Cordless

Heated Jacket. Keep cord away from heat, oil, sharp edges or moving parts.

Personal Safety

 Stay alert, watch what you are doing use common sense when using the Cordless Heated Jacket. Do not use while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention may result in serious person injury.

Power Tool Usage

- Do not use the Heated Jacket if the power button does not turn it on or off. Any Cordless Heated
- Jacket that cannot be controlled with the power button is dangerous and must be repaired.
- Disconnect the battery pack from the Heated Jacket before storing. Such preventive safety measures reduce the risk of starting the Cordless Heated Jacket accidentally.
- Store out of the reach of children and do not allow persons unfamiliar with these instructions to operate the Cordless Heated Jacket. Cordless Heated Jacket can be dangerous in the hands of the untrained users.
- Maintain Cordless Heated Jacket. Check for breakage of parts and any other condition that may af- fect the Cordless Heated Jacket's operation. If damaged, have the Cordless Heated Jacket repaired before use.
- Use the Cordless Heated Jacket in accordance with these instructions, taking into account the work- ing conditions and the work to be performed. Use of the Cordless Heated Jacket for operations dif- ferent from those intended could result in a hazardous situation.

Battery Tool Use and Care

www.durangear.com

- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one of battery pack may create a risk of fired when used with another battery pack.
- Use Heated Jacket only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects like paper clips, copins, keys, nails, screws, or other small metal objects tha can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquids may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install this product.



WARNING

Service

 Have your Cordless Heated Jacket serviced by a qualified repair person using only identical replacement

parts. This will ensure that the safety of the Cordless Heated Jacket is maintained.

Specific Safety Rules

Use:

- Do not use this Cordless Heated Jacket with an infant, child, a helpless person, or anyone insensitive to heat, such as a person with poor blood circulation.
- Never use if inner liner is wet.
- Heating elements are not recommended to touch bare skin.
- Shut off power immediately if discomfort occurs.
- Do not allow the cords to be pinched.
- If improper operation of this Cordless Heated Jacket is observed, discontinue its use immediately and con- tact a service facility for repair.
- Do not use pins. They may damage the electric wiring. Care:
- Disconnect and remove battery pack from battery holder pocket before washing.
- Do not dry clean. Do not use dry-cleaning fluid on this Cordless Heated Jacket. Do not bleach. Cleaning solvents may have a deteriorating effect on the insulation of the heating element.
- Hand wash, hang dry. Do not wring. Do not machine wash or machine dry even though the machine may include a hand wash or equivalent cycle as an electric shock or fire may result.
- Do not iron.
- Maintain labels and nameplates. These carry important information. If unreadable or missing, contact a ______Service facility for a free replacement.

ASSEMBLY





R N I N G

Recharge only with the charger specified for the battery. For specific charging instructions, read the operator's manual; supplied with your char- ger and battery.

Inserting and Removing the Battery

- Unzip the battery holder pocket
 (A) located inside the Cordless Heated Jacket on the left front.
- Insert the power cable (from inside the bat- tery holder pocket)
 (B) into the power cable port on the battery. (C)
- 2. Place the connected battery into the holder pocket and zip closed.
- To remove the battery, unzip the battery holder pocket, remove the battery, and disconnect the power cable.

OPERATING INSTRUCTIONS


To turn on, press and hold the heated jacket power button (A) for about 3 seconds. The Cordless Heated Jacket will begin to preheat (5 minutes) and then adjust to the medium setting.

Temperature setting can be adjusted at any time by pressing the Cordless Heated Jacket power button. Each press will cycle through the heated jacket's temperature settings.

- Pre-Heat Red LED fades on and off
- High Red LED continuous
- Medium White LED continuous
- •Low Blue LED continuous

To turn off the Cordless Heated Jacket, press and hold the Heated Jacket power button until the LEDs turn off (about 3 seconds).

If the Cordless Heated Jacket turns off unexpectedly, check the connections and charge the battery pack.

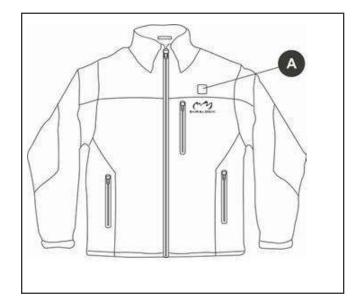

CLEANING INSTRUCTIONS

- 1. Remove the battery pack.
- 2. Hand wash the Cordless Heated Jacket in cold water. Do not use bleach. Do not wring. Do not machine wash even though the washing machine may include a hand wash or equivalent cycle.
- 3. Hang dry. Do not machine dry. Do not iron.

WARRANTY

REPLACEMENT PARTS

| PAR | T DESCRIPTION | PART # |
|-----|----------------------|---------|
| Α | Battery | 0123456 |
| В | Battery Wall Charger | 0123456 |



