

Table of Contents

1 • Getting Ready ..... 2

2 • Installing the Ceiling Mounting Plate .....5

3 • Assembling and Hanging the Fan .....7

4 • Setting the Remote Transmitter and Receiver .....9

5 • Wiring the Fan ..... 11

6 • Installing the Ceiling Plate Cover..... 13

7 • Assembling the Blades ..... 14

8 • Activating Auto Balance™ ..... 15

9 • Completing Your Installation With or  
Without a Bowl Light Fixture ..... 16

10 • Operation & Maintenance.....20

## 1 • Getting Ready

### Congratulations!

Your new Hunter ceiling fan is an addition to your home or office that will provide comfort and reliable performance for many years. We are proud to supply you with the best ceiling fan available anywhere in the world.

### Before Installation

Before installing your fan, be sure you can do the following:

- Locate the ceiling joist or other suitable support in the ceiling.
- Drill holes and install wood screws or expansion anchors.
- If you have a concrete ceiling, you will need M5 x 30 mm expansion anchors and screws. (Sold separately)
- Identify and connect electrical wires.
- Lift 16 kg (40 lbs). Levantar 16 Kg. (40 lb).

### Checking Your Fan Parts

Carefully unpack your fan to avoid damage to the fan parts. Refer to the included Parts Guide. Check for any shipping damage to the motor or fan blades. If any parts are missing or damaged, contact your Hunter dealer or call Hunter Technical Support Department at 888-830-1326. If you are installing more than one fan, keep the fan blades and blade irons (if applicable) in sets, as they were shipped.

### Optional Accessories

Consider using Hunter's optional accessories, including a wall-mounted or remote speed control. To install and use the accessories, follow the instructions included with each product. For ceilings higher than 8 feet, you can purchase Hunter extension downrods. All Hunter fans use sturdy 3/4" diameter pipe to assure stability and wobble-free performance.

For quiet and optimum performance of your Hunter fan, use only Hunter speed controls and accessories.

### How to Use This Manual:

Be sure to read the entire manual before beginning installation and save any extra parts for future use. This manual will help you install, operate, and maintain your new fan. These instructions are designed to make installation and assembly as simple and efficient as possible. Each step has four components:

1. Each step is illustrated at the top of the page. The steps are numbered on the side of each illustration.
2. Text instructions beneath each illustration describe the procedure for each step.
3. On the right side of each image, you will find a life-sized illustration of necessary hardware. At the bottom of each illustration, there is a small image that depicts the tools needed for each step. Each image correlates to the following legend:



Screwdriver, Phillips-head



Screwdriver, Flat-head



Drill with 3,5 mm bit or masonry bit (used only for concrete ceilings)



Allen Wrench



Wrench



Hammer



Tape Measure



## WARNING!



- **READ THIS ENTIRE MANUAL CAREFULLY BEFORE BEGINNING INSTALLATION. SAVE THESE INSTRUCTIONS.**
- Use only Hunter replacement parts.
- To reduce the risk of personal injury, attach the fan directly to the support structure of the building according to these instructions, and use only the hardware supplied.
- To avoid possible electrical shock, before installing your fan, disconnect the power by turning off the circuit breakers to the outlet box and associated wall switch location. If you cannot lock the circuit breakers in the off position, securely fasten a prominent warning device, such as a tag, to the service panel.
- All wiring must be in accordance with national and local electrical codes and ANSI/NFPA 70. If you are unfamiliar with wiring, use a qualified electrician.
- To reduce the risk of personal injury, do not bend the blade attachment system when installing, balancing, or cleaning the fan. Never insert foreign objects between rotating fan blades.
- To reduce the risk of fire, electrical shock, or motor damage, do not use a solid-state speed control with this fan. Use only Hunter speed controls.


## I • Getting Ready (continued)

### Step 1 - Choose the Fan Site

Proper ceiling fan location and attachment to the building structure are essential for safety, reliable operation, maximum efficiency, and energy savings.

#### Choose a fan site where:

- No object can come in contact with the rotating fan blades during normal operation.
- The fan blades are at least 7 feet above the floor and the ceiling is at least 8 feet high.
- The fan blades have no obstructions to airflow, such as walls or posts, within 30 inches of the fan blade tips.
- The fan is directly below a joist or support brace that will hold the outlet box and the full weight of the fan.

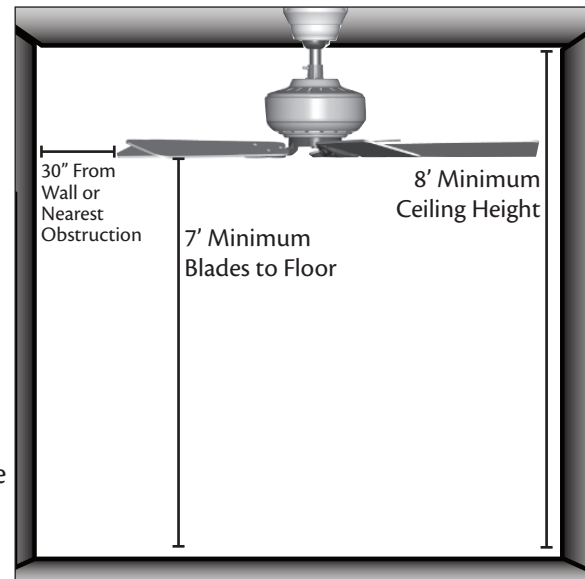

### Checklist for Existing Fan Site

If you want to use an existing fan site, complete the following checklist to determine if the site is acceptable and safe for your new Hunter fan. If you cannot check off every item, prepare a new fan site as described on this page.

#### Fan Support System

- Fan attaches directly to building structure.
- Fan support system will hold full weight of the fan and light kit.

#### Ceiling Hole

- The outlet box clearance hole is directly below the joist or support brace.


#### Outlet Box

- The outlet box is an UL-approved octagonal 4" x 1-1/2" outlet box (or as specified by the support brace manufacturer.).)
- The outlet box is secured to the joist or support brace by wood screws and washers through the inner holes of outlet box.
- The outer holes of the outlet box are aligned with joist or support brace.
- The bottom of the outlet box is recessed a minimum of 1/16" into ceiling.

#### Wiring

- The electrical cable is secured to outlet box by an approved connector.
- Six inches of lead wires extend from outlet box.

If your existing fan site is suitable, skip ahead to Section 2 • Installing the Ceiling Plate.

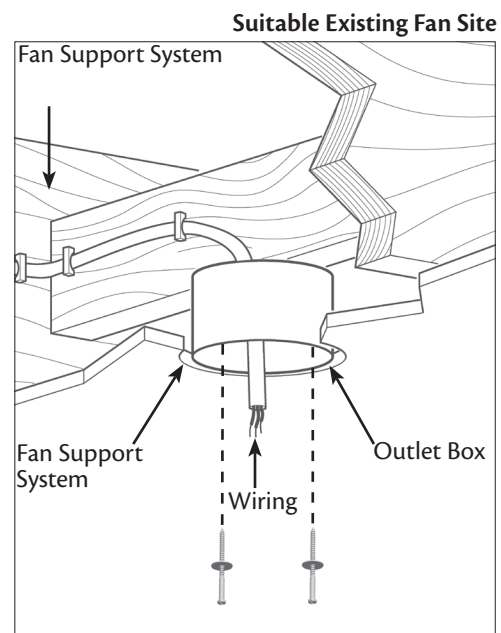

## I • Getting Ready (continued)

### Step 2 - Cut the Ceiling Hole

- 2-1. Locate the site for the ceiling hole directly below the joist or support brace that will hold the outlet box and fan.
- 2-2. Cut a 4" diameter hole through the drywall or plaster of the ceiling. You will use the hole to install the support brace and outlet box.

### Step 3 - Install a Support Brace, If Necessary

Determine if there is a ceiling joist directly above the ceiling hole. If the joist is there, determine if it is positioned to allow you to recess the outlet box a minimum of 1/16" into the ceiling. If NOT, install a support brace as follows:


- 3-1. Attach a 2" x 4" support brace between two joists. Position it to allow you to recess the bottom of the outlet box a minimum of 1/16" into the ceiling.
- 3-2. Check the support brace to ensure it will support the full weight of the fan and light kit.

### Step 4 - Install the Outlet Box


- 4-1. Obtain a UL-approved octagonal 4" x 1-1/2" outlet box, plus two #8 x 1-1/2" wood screws and washers, available from any hardware store or electrical supply house.
- 4-2. Orient the outlet box so that both the inner and outer holes in the box align with the joist or support brace.
- 4-3. Drill pilot holes no larger than the minor diameter of the wood screws (5/64") through the inner holes of the outlet box.
- 4-4. Attach the outlet box directly to the support brace or joist with two #8 x 1-1/2" wood screws and washers. The bottom of the outlet box must be recessed a minimum of 1/16" into the ceiling.

### Step 5 - Prepare the Wiring


- 5-1. Make sure the circuit breakers to the fan supply line leads and associated wall switch location are turned off. If you cannot lock the circuit breakers in the off position, securely fasten a prominent warning device, such as a tag, to the service panel.
- 5-2. Thread the fan supply line through the outlet box so that the fan supply line extends at least 6" beyond the box.
- 5-3. Attach the fan supply line to the outlet box with an approved connector, available at any hardware store or electrical supply house.
- 5-4. Make certain the wiring meets all national and local standards and ANSI/NFPA 70. You have now successfully prepared your ceiling fan site. For instructions to install your ceiling fan, go to your fan manual and continue with Section 2 • Installing the Ceiling Plate.

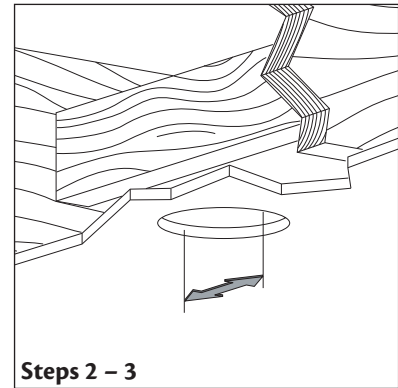

Steps 2 – 3

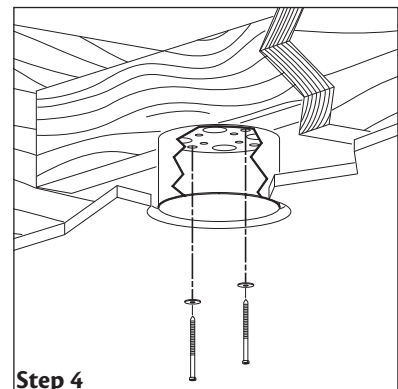

Step 4

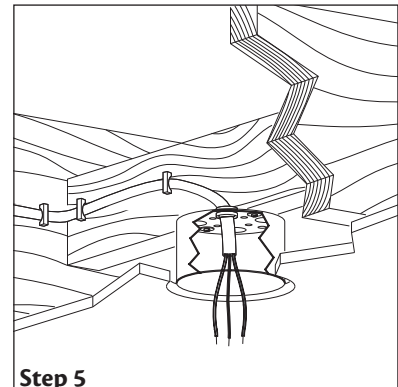


Step 5

**⚠ CAUTION:** All wiring must be in accordance with national and local electrical codes and ANSI/NFPA 70. If you are unfamiliar with wiring, use a qualified electrician.


## 2 • Installing the Ceiling Mounting Plate

21

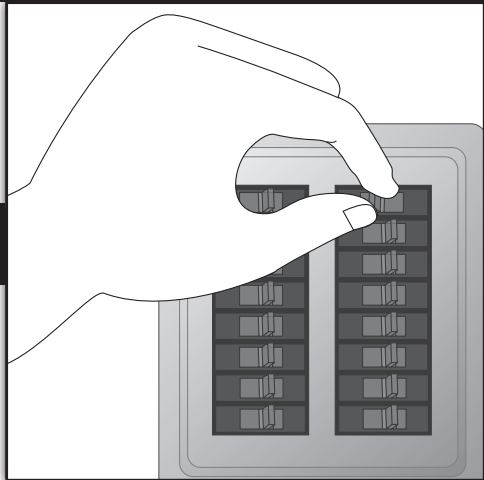


**⚠ CAUTION:** To avoid possible electrical shock, before installing your fan, disconnect the power by turning off the circuit breakers to the outlet box and associated wall switch location. If you cannot lock the circuit breakers in the off position, securely fasten a prominent warning device, such as a tag, to the service panel.

22

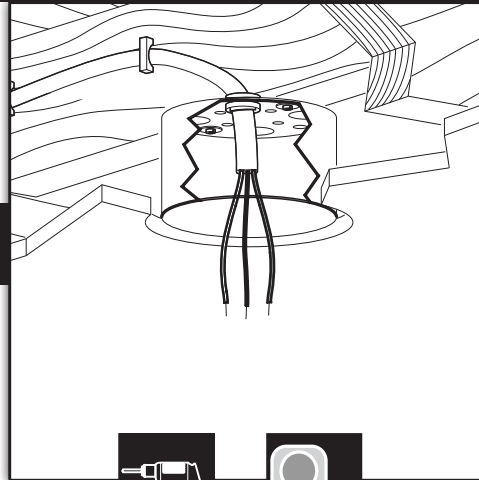


Drill two 9/64" pilot holes into the wood support structure through the outermost holes in the outlet box.

23

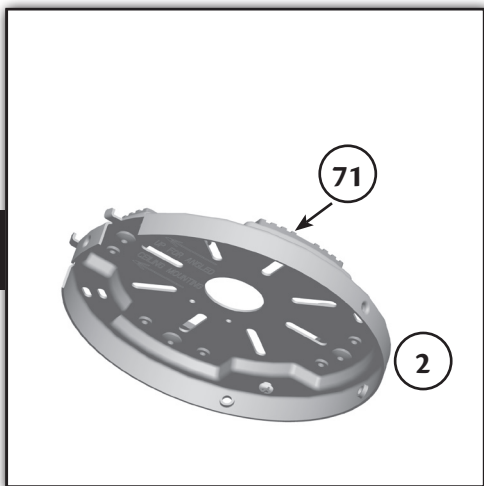

Your ceiling mounting plate (2) comes with four pre-installed noise isolators (71). Check to make sure all four isolators are in place and were not removed during shipment.


24

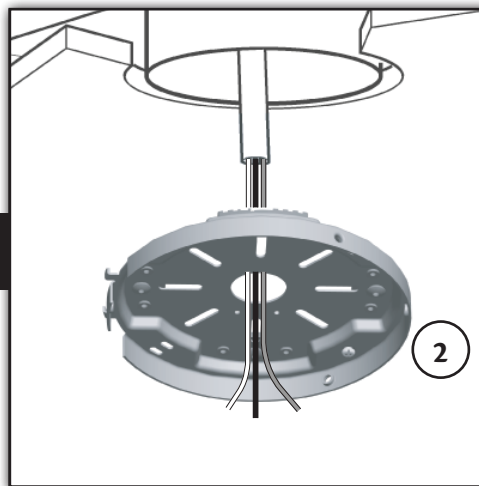

Thread the lead wires from the outlet box down through the hole in the middle of the ceiling mounting plate (2).


## 2 • Installing the Ceiling Mounting Plate (continued)

25

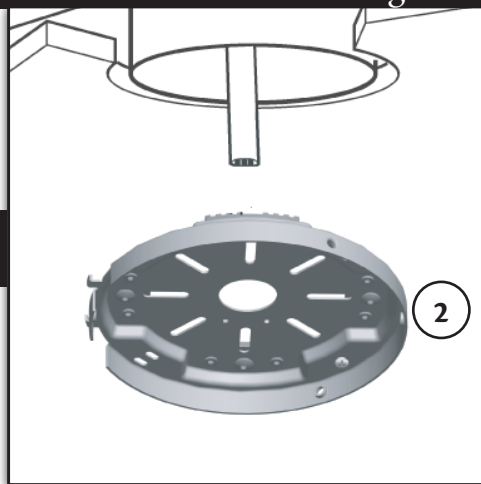

**Note:** The isolators must be flush against the ceiling. A loose ceiling mounting plate will result in improper operation of the Auto Balance™ system.


26

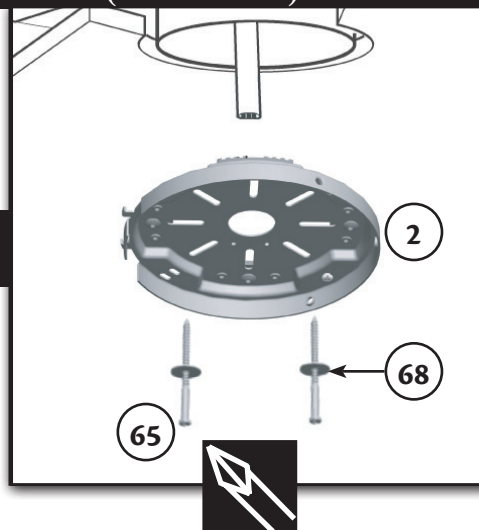

Align the slotted holes in the ceiling mounting plate (2) with the pilot holes you drilled in the wood support structure. For proper alignment, use slotted holes directly across from each other.


Place a flat washer (68) on each of the two 3" wood screws (65). Insert the screws into the slotted holes in the ceiling mounting plate (2) into the pilot holes you drilled. Tighten the screws (65) into the 9/64" pilot holes; do not use lubricants on the screws. Do not over tighten.

27

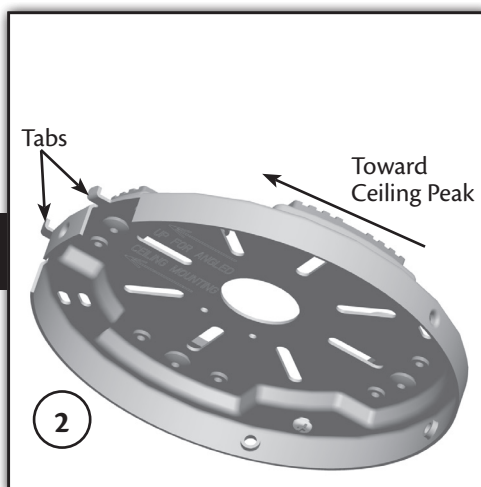

**For Angled Ceilings:** Be sure to orient the ceiling mounting plate (2) so that the two tabs are pointing toward the ceiling peak.

28

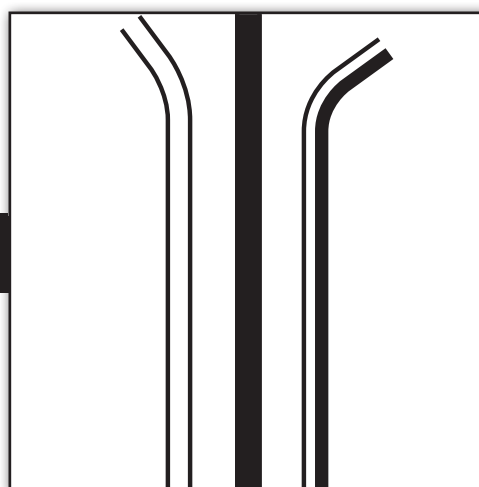


Unbundle the wires from the fan.

**Note:** Your Hunter fan comes with an optional pipe/ball assembly extension pipe. If you are hanging the fan on a ceiling higher than 10 feet tall and you would like to use the enclosed optional pipe/ball assembly, follow Steps 3.5 – 3.9.

### 3 • Assembling and Hanging the Fan


3.1

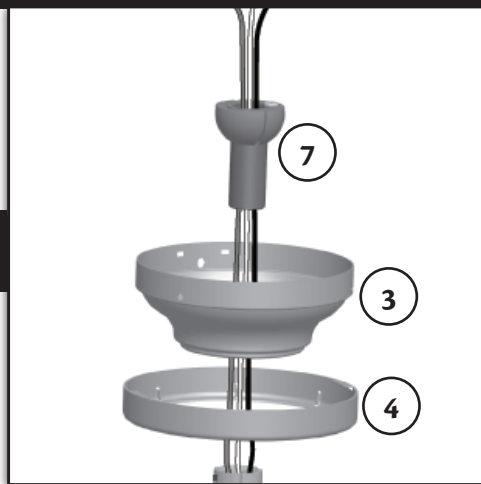

Insert the pipe/ball assembly (7) through the ceiling mounting plate cover (3) and ceiling mounting plate cover trim ring (4). Feed the wires from the fan through the pipe/ball assembly (7).


**⚠ CAUTION:**  
The motor cover adapter has a special coating on the threads. Do not remove this coating; the coating prevents the pipe/ball assembly from unscrewing. Once assembled, do not remove the pipe/ball assembly.

3.2

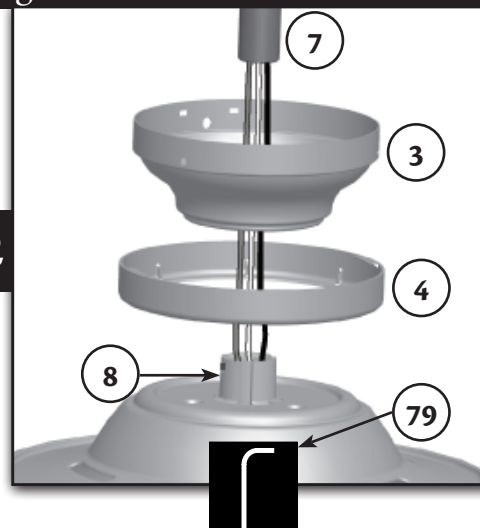


Using the provided Allen wrench (79), loosen the setscrew (8) on the motor cover adapter to install the pipe and ball assembly (7). When the pipe and ball assembly (7) is fully installed, 2-3 threads on the pipe will still be visible; this is normal.

3.3

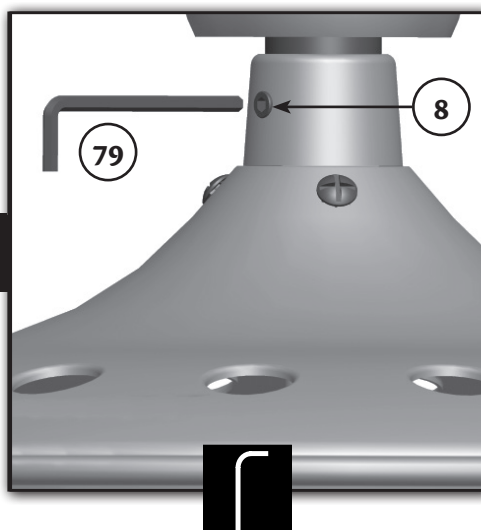

Use the Allen wrench (79) to securely retighten the setscrew (8).

3.4

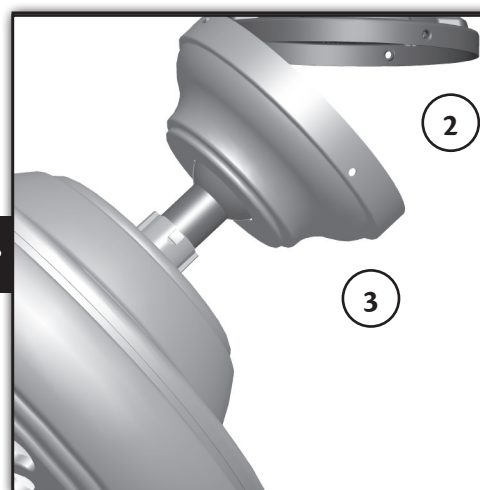

Raise the fan and align the slots in the ceiling mounting plate cover (3) with the hooks on the ceiling mounting plate (2). **Note:** To hang the fan, you must tilt the ceiling mounting plate cover (3) to an almost vertical position so that the ceiling mounting plate cover (3) slots sit on the ceiling mounting plate hooks.


### 3 • Assembling and Hanging the Fan (continued)

3.5



Place the slots over the hooks to hang the fan.


3.6

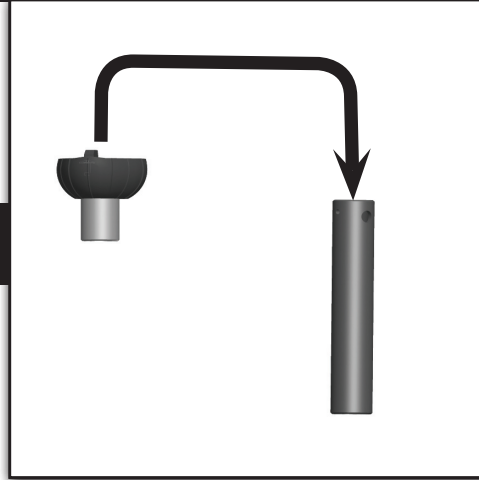

#### Optional Pipe/Ball Instructions:

Your Hunter fan comes with an optional pipe/ball assembly extension pipe. If you would like to use the enclosed optional 6 inch pipe/ball assembly, follow Steps 3.6-3.9. **Note:** The Auto Balance™ system is designed for pipe/ball assemblies that are 6" and shorter. If you use a pipe/ball assembly longer than 6 inches, do not activate the Auto Balance™ system.


3.7

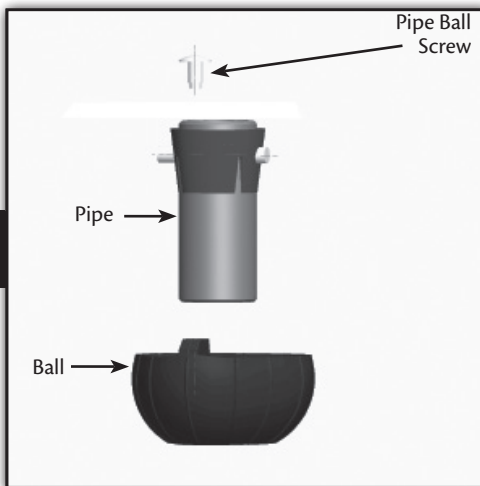

#### Optional Pipe/Ball Instructions:

Remove the pipe ball screw from the standard pipe/ball assembly, then slide the ball off the pipe

3.8

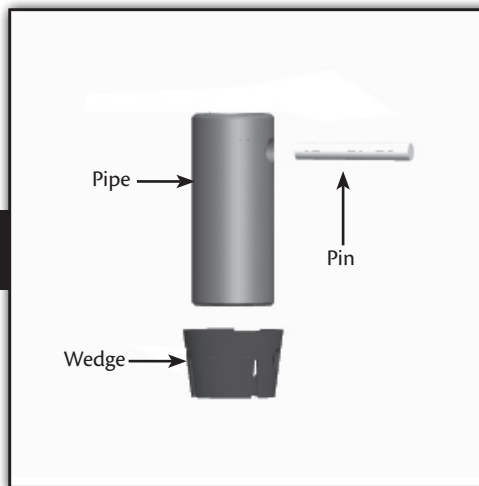


#### Optional Pipe/Ball Instructions:

Remove the pin from the pipe, then slide the wedge off the pipe.



### 3 • Assembling and Hanging the Fan (continued)


3.9

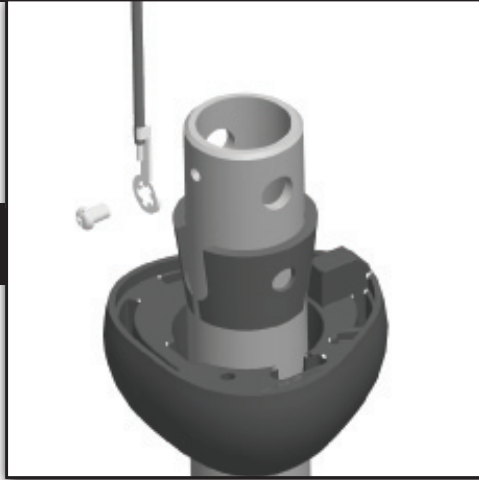

#### Optional Pipe/Ball Instructions:

Remove the screw and ground wire from the pipe.

3.10

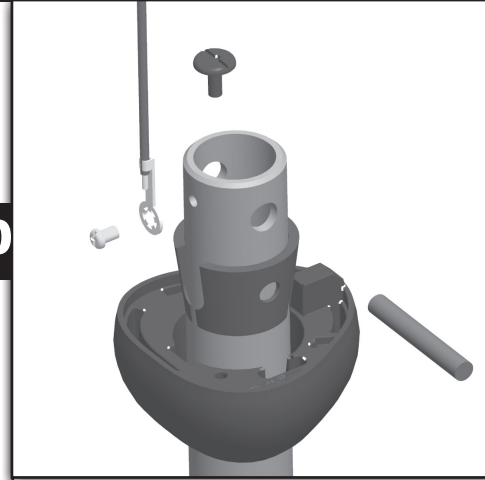

#### Optional Pipe/Ball Instructions:


Reassemble the ground wire, wedge, pin, ball, and pipe ball screw, in that order, onto the long pipe/ball assembly. **Go back to Step 3.2.**

### 4 • Setting the Remote Transmitter and Receiver



*When two or more fans are located near each other, you may want to have the receiver/transmitter for each fan set to a different code, so that the operation of one fan does not affect the operation of the other fans.*

4.1

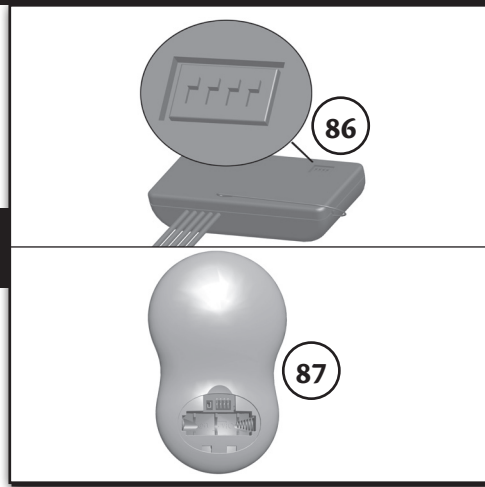


**IMPORTANT!** Before you change the DIP switch settings, make sure the battery is not connected to the transmitter.

The DIP switches for the receiver (86) are located on the flat surface of the receiver. The DIP switches for the transmitter (87) are in the battery compartment.


## 4 • Setting the Remote Transmitter and Receiver(cont.)

4.2

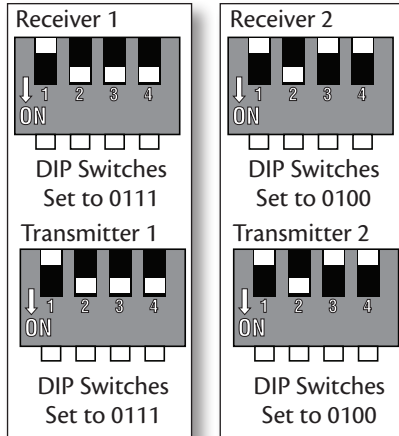


Change the position of the DIP switches in the remote transmitter (87) and the receiver (86). Make sure that the DIP switches match in the remote receiver (86) and transmitter (87). If they don't match, the transmitter will not function.

4.3

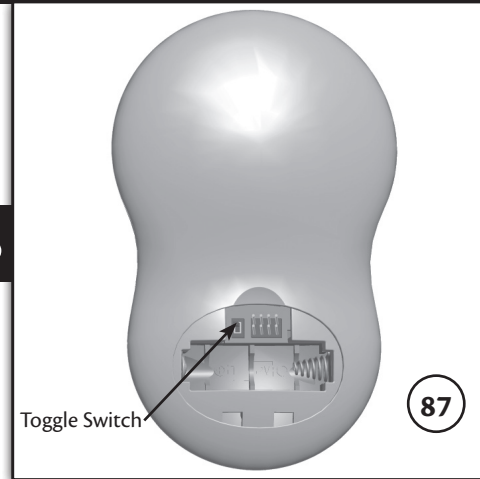

There is a toggle switch beside the DIP switches on the transmitter (87). Move the toggle switch toward the side that reads "CFL" if you are going to operate the fan with the included CFL bulbs. Move the switch to the "INC" side if you are going to use incandescent bulbs.

4.4

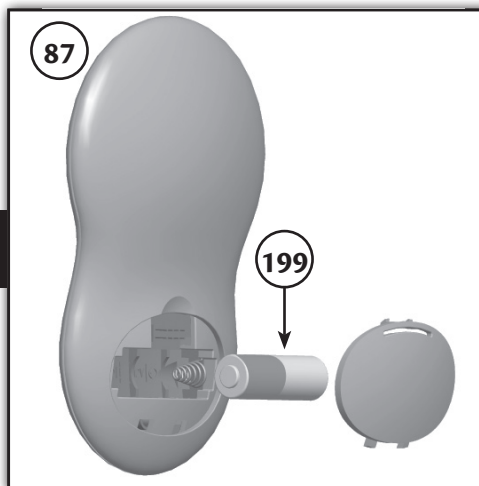

**Note:** Remove the battery from the remote control transmitter if the product is to remain unused for an extended period of time. To remove the battery, remove the back cover of the remote control transmitter. Remove used batteries promptly.

Install the included 12-Volt, type GP23A battery (199) into the transmitter (87). Clean the battery contacts and also those of the device prior to battery installation. Ensure the battery is installed correctly with regard to polarity (+ and -). Please contact your local battery recycling center for proper battery disposal information.




**WARNING:** Use only the Hunter Fan speed control supplied with this fan.

The remote control device complies with part 15 of the FCC rules. Changes or modifications not expressly approved by Hunter Fan Company could void your authority to operate this equipment. Operation is subject to the following two conditions: 1. This device may not cause harmful interference. 2. This device must accept any interference received, including interference that may cause undesired operation.

## 5 • Wiring the Fan




**WARNING!:** All wiring must be in accordance with national and local electrical codes and ANSI/NFPA 70. If you are unfamiliar with wiring, use a qualified electrician. Wall switches are not included. Select an acceptable general-use switch in accordance with national and local electrical codes.

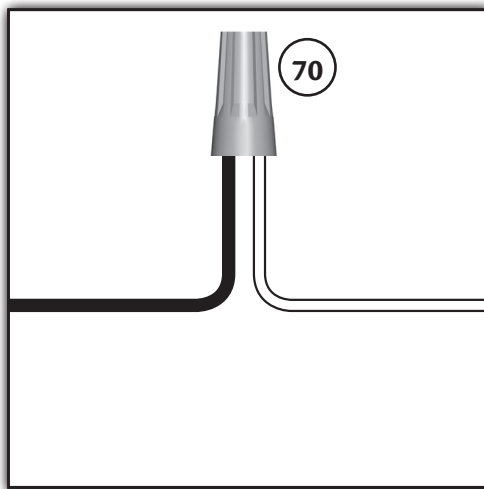

To connect the wires, hold the bare metal leads together and place a wire connector (70) over them, then twist clockwise until tight. For all these connections use the wire connectors provided.


**5.1**

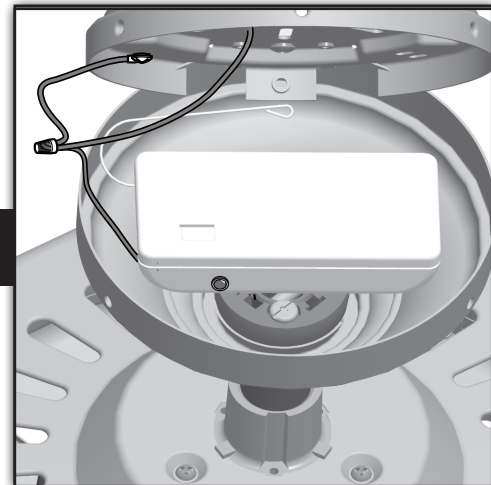

Using a large wire connector (70), connect the ground wire (grounding) from the ceiling to the green ground wire (grounding) from the ceiling mounting plate and the green ground wire from the pipe/ball assembly (7).

## 5 • Wiring the Fan


5.2

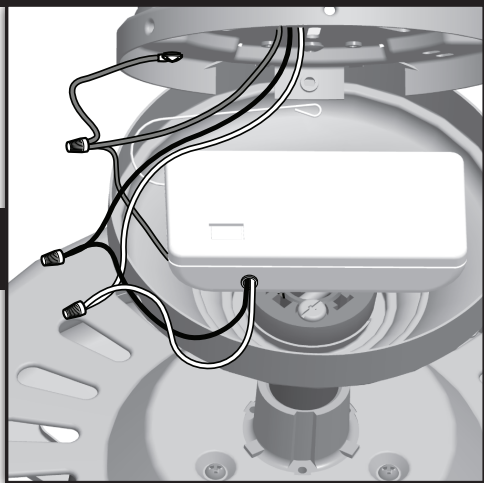

Using the large wire connectors (70), connect the white wire and the black wire from the ceiling as follows:

- The white (common) power wire from the ceiling to the white wire from the receiver (marked on red tag "NEUTRAL IN")
- The black power wire from the ceiling to the black wire from the receiver (marked on red tag "LIVE IN")


5.3

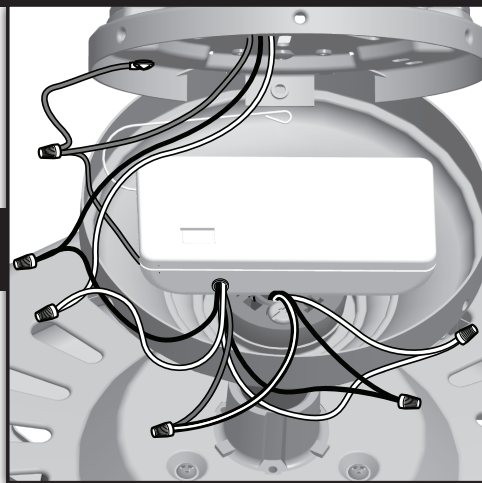

Using the small wire connectors (70), connect the wires from the fan as follows:

- The black wire with a white stripe from the fan to the red wire from the receiver (marked on white tag "LIGHT OUT")
- The black wire from the fan to the black wire from the receiver (marked on white tag "FAN OUT")

5.4

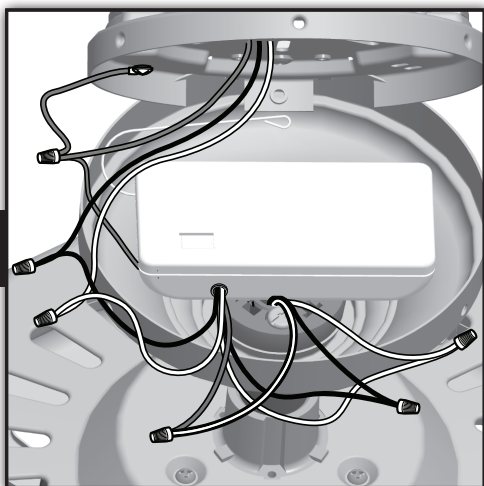

Using the small wire connectors (70), connect the wire from the fan as follows:

- The white wire from the fan to the white wire from the receiver (marked on white tag "COMMON OUT")




**WARNING!** - Be sure no bare wire or wire strands are visible after making connections.

Push all wires and wire connectors (70), except for the white antenna wire from the receiver (86), back through the ceiling mounting plate (2) into the outlet box. Position the receiver (86) in the ceiling mounting plate cover so that the antenna is close to the edge for clear reception.


## 6 • Installing the Ceiling Plate Cover

**6.1**

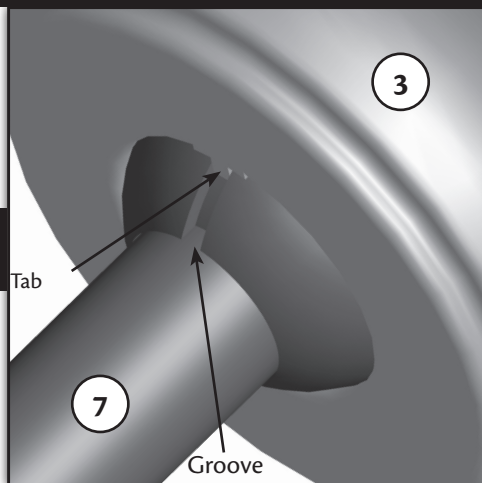


Rotate the pipe/ball assembly (7) so the tab in the ceiling mounting plate cover (3) is secure in the hanger ball groove. **Note:** Your fan may have multiple tabs and grooves that must be aligned.

**6.2**

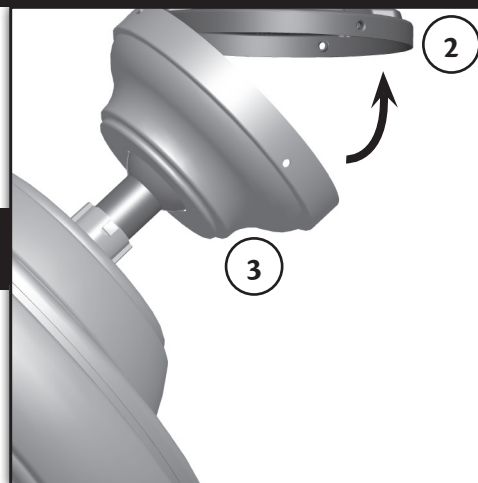


Swing the fan up to align the ceiling mounting plate cover screw holes with the mounting holes on the ceiling mounting plate (2).

**6.3**

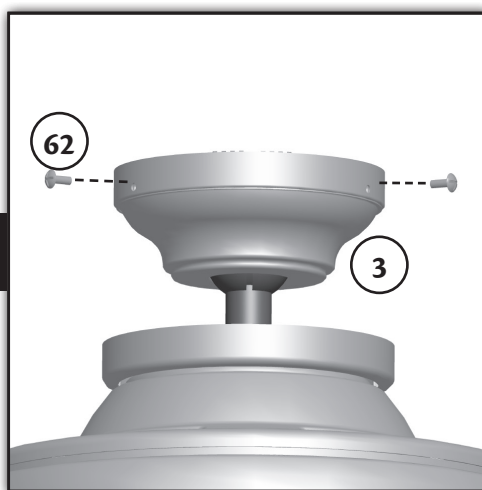

Holding the ceiling mounting plate cover (3) up with the screw holes aligned, partially install two ceiling mounting plate cover screws (62) into the holes opposite the ceiling mounting plate tabs.


**6.4**

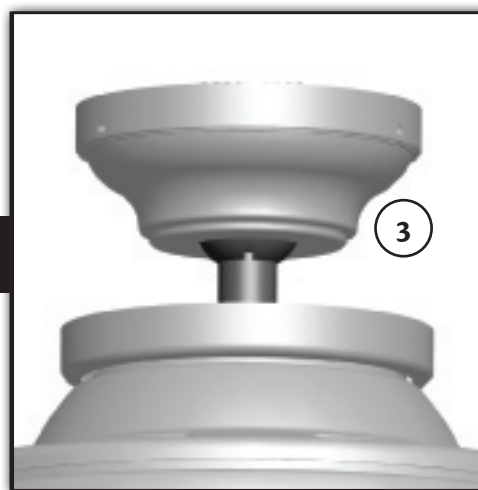

Partially install a ceiling mounting plate cover screw (62) between the slots in the ceiling mounting plate cover (3). When all the holes are properly aligned, securely tighten all three ceiling mounting plate cover screws. Verify that the tabs in the ceiling mounting plate cover are still in the grooves of the hanger ball.


## 6 • Installing the Ceiling Plate Cover(continued)

**6.5**

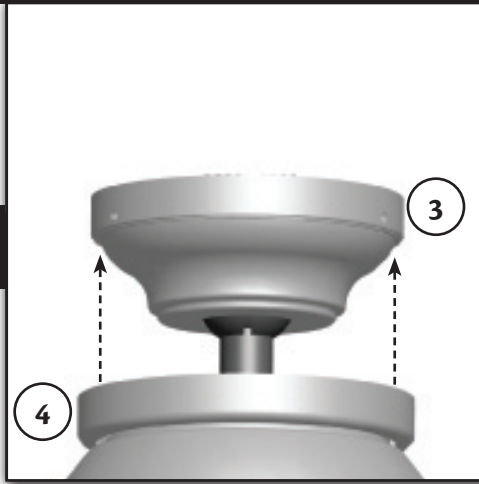

Align the tabs on the trim ring opposite the grooves in the hanger ball. Using both hands, push the ceiling mounting plate cover trim ring (4) up to the top of the ceiling mounting plate cover. The ceiling mounting plate cover trim ring will snap and lock into place.


**6.6**

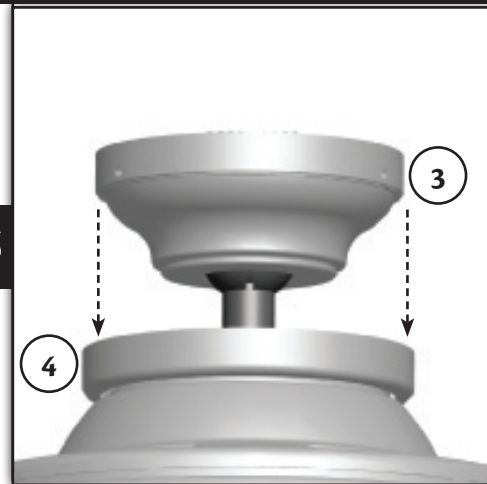

Should you need to remove the trim ring, press firmly on opposite sides of the trim ring (4) directly above the groove in the hanger ball. The tabs will flex out releasing the ceiling mounting plate cover trim ring (4).


## 7 • Assembling the Blades

**7.1**

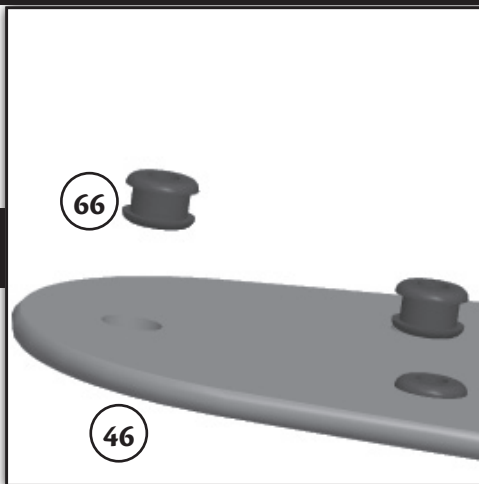

Squeeze the rubber blade grommets (66) into the holes in the blades (46).


**7.2**

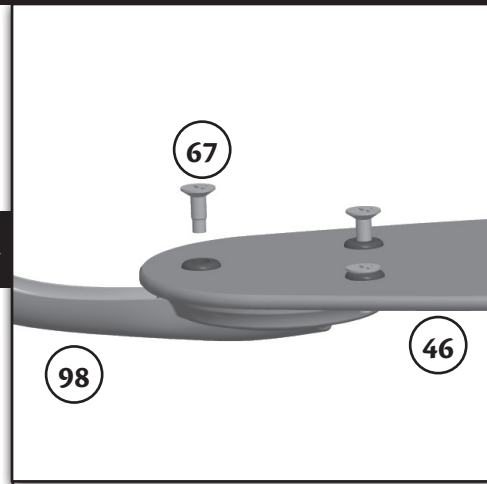

Attach each blade (46) to a blade arm (98) using three blade assembly screws (67). The blades may appear slightly loose after screws are tightened. This is normal.


## 7 • Assembling the Blades (continued)

7.3

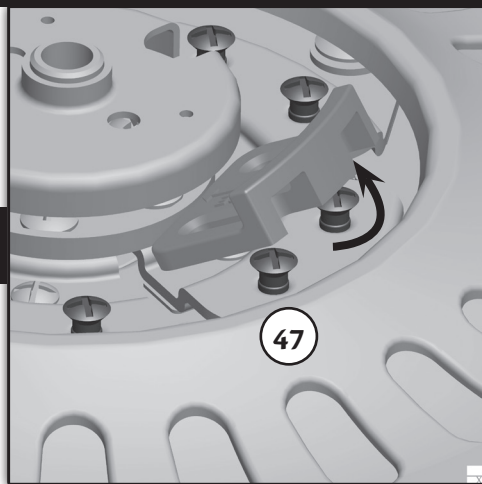

Loosen (DO NOT REMOVE) the blade-to-arm screws (47) that are holding the shipping bumpers in place. Push the shipping bumpers in, then lift them off.


7.4

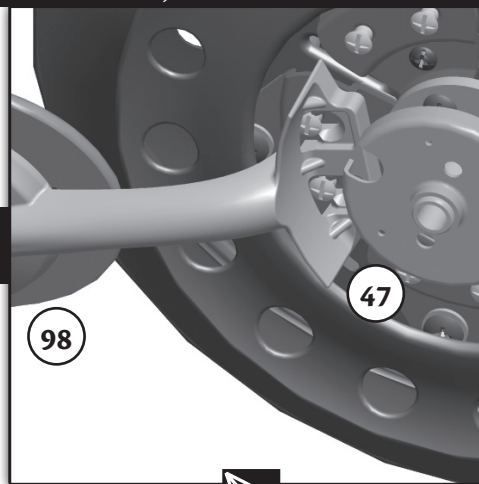

Slide the blade arms (98) onto the blade-to-arm screws (47). Tighten the blade-to-arm screws (47) as tight as possible with a screwdriver.

## 8 • Activating Auto Balance™

8.1

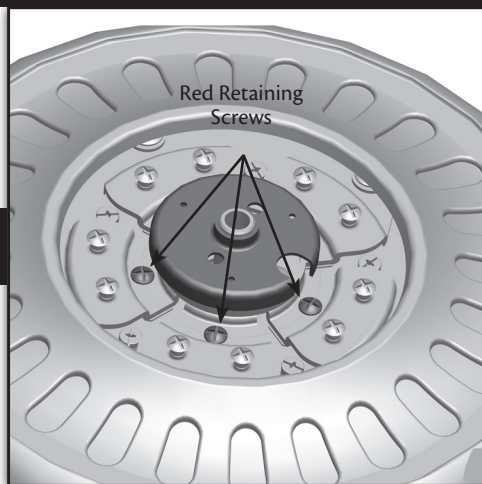

**Note:** After the retaining screws are removed, the blades will feel loose. This is normal, as loose blades are a characteristic of the Auto Balance™ system.

8.2




If you are using one of the enclosed pipe/ball assemblies, it is now time for you to activate the Auto Balance™ system by removing the five red retaining screws. Rotate the blades slowly until one of the red retaining screws is visible through the notch in the mounting plate. Remove the retaining screw from the bottom of the fan housing using a screwdriver. Repeat this process for all 5 retaining screws.

If you are using a pipe/ball assembly longer than 6 inches, leave the retaining screws in their place and continue the installation process.




## 9 • Completing Your Installation With or Without a Bowl Light Fixture

9.1

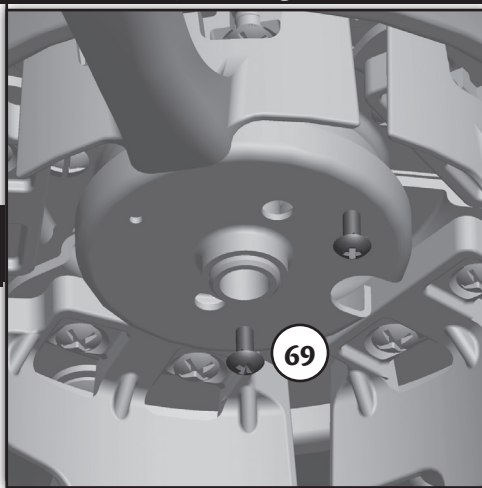


Partially install inner switch housing screws (69) into the switch housing mounting plate.

9.2

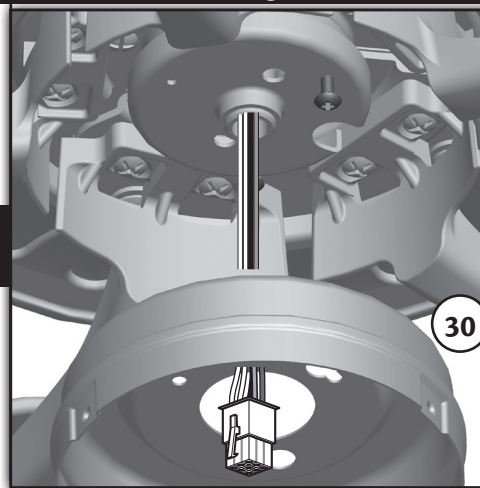


Feed the upper plug connector through the center opening of the upper switch housing (30).

9.3

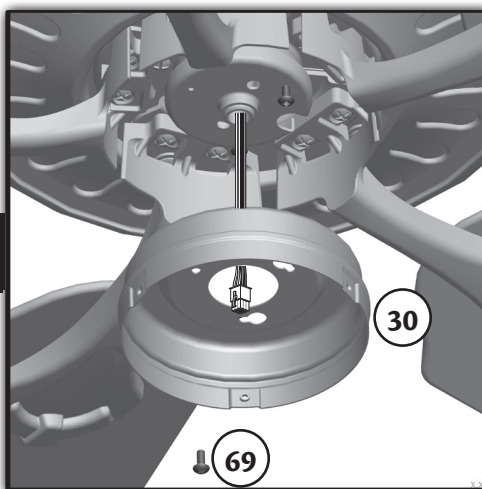

Align the keyhole slots in the upper switch housing with the inner switch housing screws (69). Turn the housing counterclockwise until the inner switch housing screws (69) are firmly situated in the narrow end of the keyhole slots. Install the remaining screw into the housing. Tighten all three screws firmly.

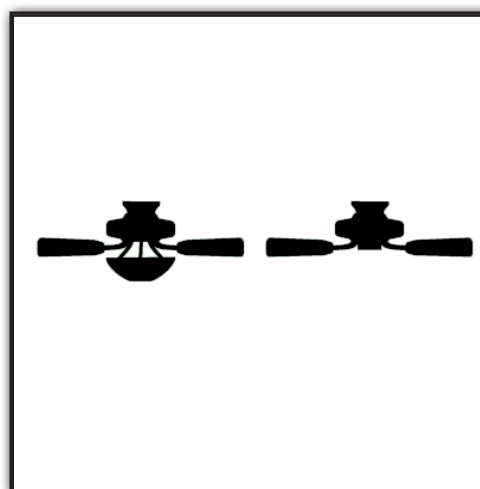


Your Hunter fan comes with an integrated light fixture assembly and an optional switch housing cap and plug button. This feature gives you the option of installing the fan with OR without the included light fixture. **If you want to install the light fixture**, proceed with Step 9.4 now. **If you do not want to install the light fixture**, you need to remove it now. See "Removing the Light Fixture" on Step 9.10. Once you have removed the light fixture, continue with Step 9.4.




## 9 • Completing Your Installation With or Without a Bowl Light Fixture (cont.)

9.4

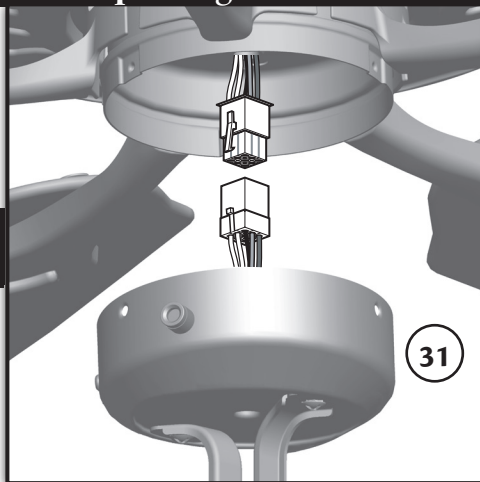

**Note:** Both plug connectors are polarized and will only fit together one way. Make sure the connectors are properly aligned before connecting them. Incorrect connection could cause improper operation and damage to the product.

9.5

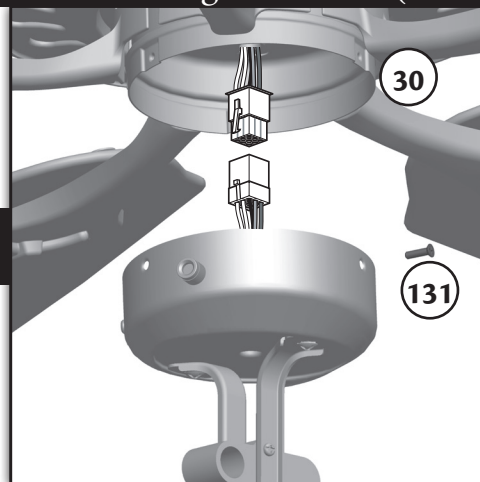

Connect the upper plug connector from the fan body to the lower plug connector in the lower switch housing assembly (31).


Place the lower switch housing assembly (31) over the upper switch housing (30). Align the side screw holes in the upper and lower switch housings. Attach the lower switch housing to the upper switch housing with three outer switch housing screws (131).

9.6



Install the included Pin-Based CFL bulb (259), 26 Watt Maximum, into the socket.


9.7

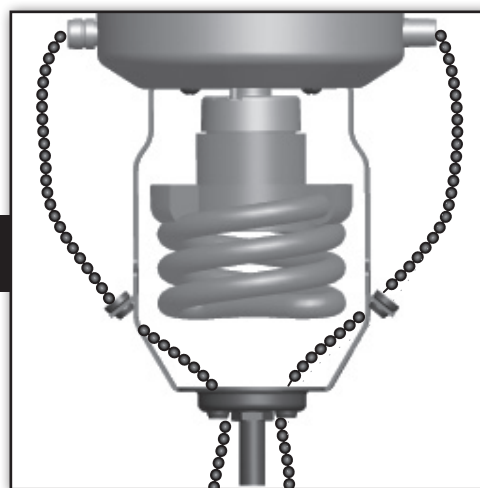

Install the included Pin-Based CFL bulb (259), 26 Watt Maximum, into the socket.


## 9 • Completing Your Installation With or Without a Bowl Light Fixture (cont.)

**9.8**

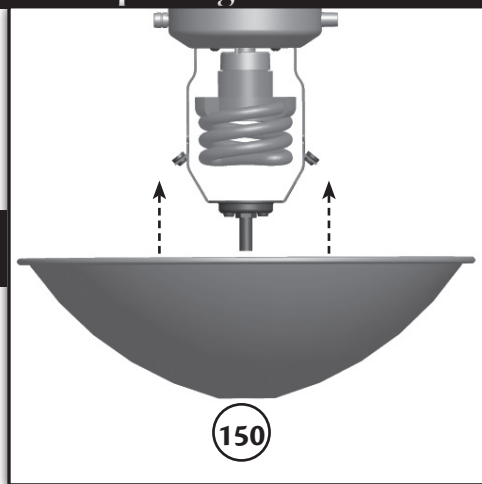


Lift the glass bowl (150) up so the threaded finial rod fits through the hole in the glass bottom.

**9.9**

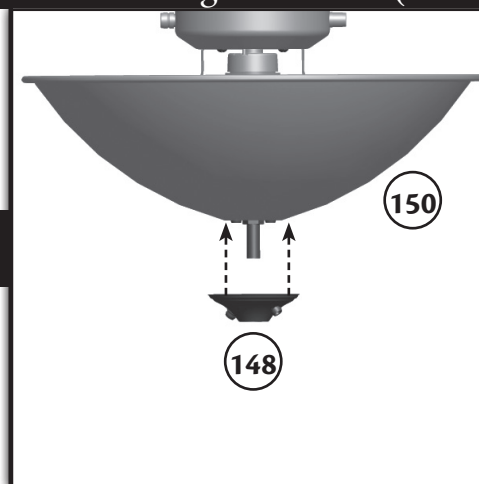


Place the cover plate (148) up against the glass bowl (150). Align the holes in the cover plate (148) with the grommet hole of the metal disc.

**9.10**

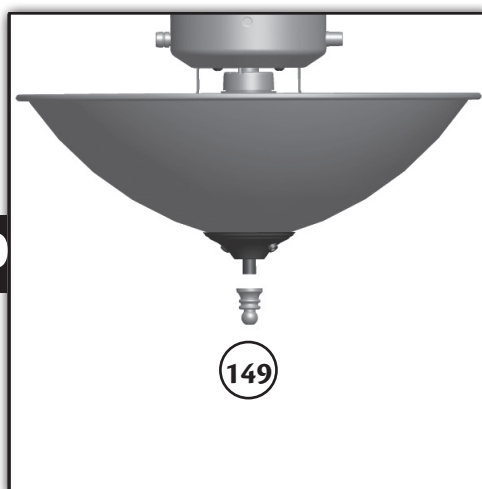

Screw the finial (149) onto the threaded finial rod end until tight.

**9.11**

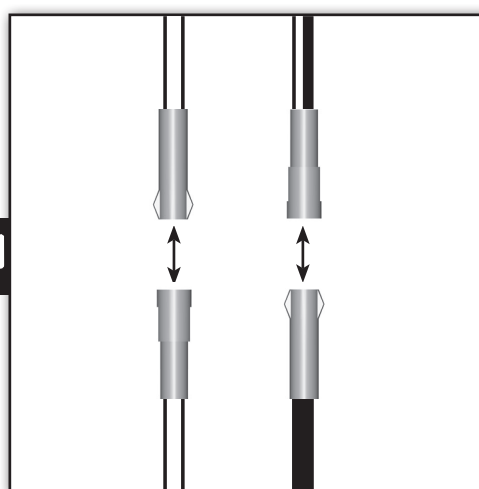

### Removing the Light Fixture

Disconnect the plug connectors between the black wire and the black wire with a white stripe. Disconnect the plug connectors between the two white wires.

## 9 • Completing Your Installation With or Without a Bowl Light Fixture (cont.)


9.11



### Removing the Light Fixture

Remove the nut and washer from inside the center of the lower switch housing.

9.12

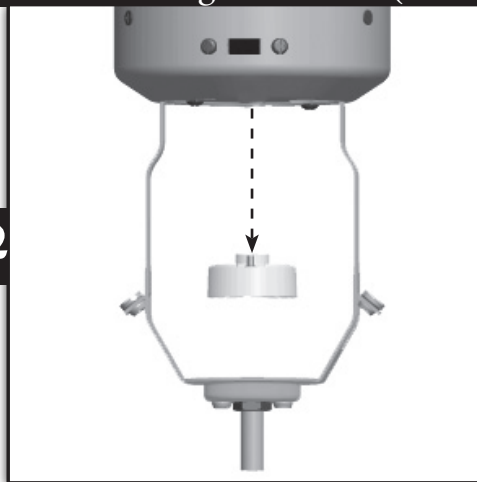

### Removing the Light Fixture

Unscrew the light bulb socket.


9.13



### Removing the Light Fixture

Pull the large (male) plug connector through the hole in the center of the lower switch housing. Then, pull out the small (female) connector.

9.14

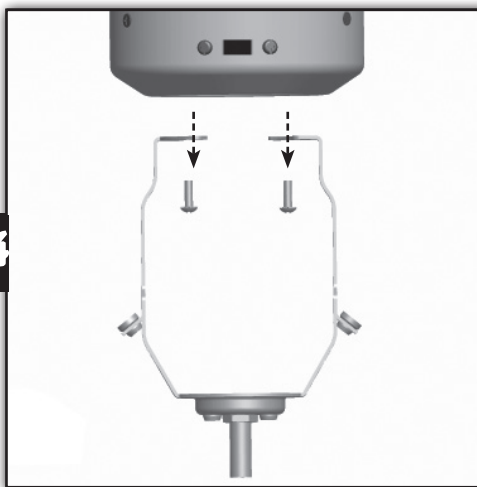


### Removing the Light Fixture

Remove the light fixture bracket by removing the 2 screws attaching the bracket to the lower switch housing.


## 9 • Completing Your Installation With or Without a Bowl Light Fixture (cont.)

9.15

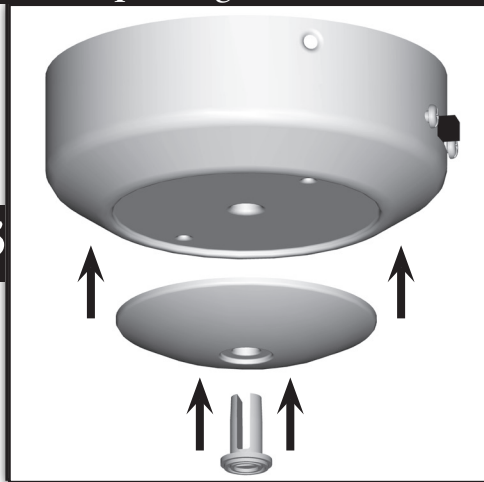


### Removing the Light Fixture

Install the switch housing cap and plug button to the lower switch housing.

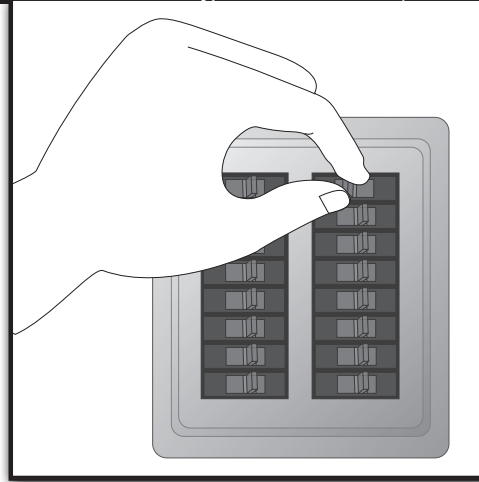

After your installation is complete, restore power to the fan. Wash your hands after installing the fan.

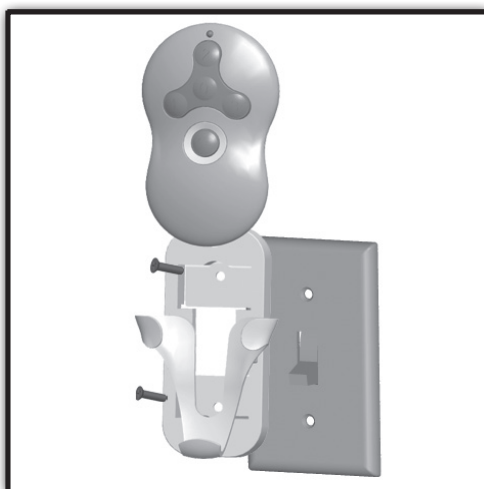

You can mount the remote holder to any toggle switch plate with the screws already in the switch plate. Or, you can simply mount the remote holder on the wall.

## 10 • Operation & Maintenance

### Cleaning and Maintenance

Caring for finishes:

For cleaning finishes, use a soft brush or lint-free cloth to prevent scratching. A vacuum cleaner brush nozzle can remove heavier dust. Remove surface smudges or accumulated dirt and dust using a mild detergent and a slightly dampened cloth. You may use an artistic agent, but never abrasive cleaning agents as they will damage the finish.

Caring for blades:


**Note:** Be careful to not bend the blades when cleaning. Clean wood finish blades with a furniture polishing cloth. Occasionally, apply a light coat of furniture polish for added protection and beauty. Clean painted and high-gloss blades in the same manner as the fan finish.

**If you need parts or service assistance, please call 888-830-1326 or visit us at our Web site at <http://www.hunterfan.com>.**


Hunter Fan Company  
7130 Goodlett Farms Parkway #400  
Memphis, Tennessee 38016

### Airflow Direction

Ceiling fans work best by blowing air downward (counterclockwise blade rotation) in warm weather to cool the room with a direct breeze. In winter, having the fan draw air upward (clockwise blade rotation) will distribute the warmer air trapped at the ceiling around the room without causing a draft.

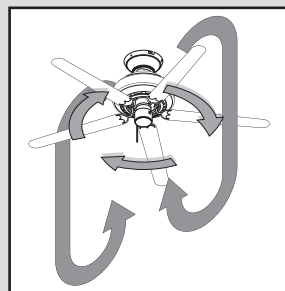

Winter  
Upward Airflow  
Clockwise

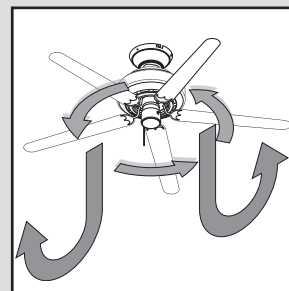

Summer  
Downward Airflow  
Counterclockwise

## 10 • Operation & Maintenance

### Operation

#### The fan pull chain controls power to the fan.

- The pull chain has four settings in sequence: High, Medium, Low, and Off.
- Pull the chain slowly to change settings.
- Release slowly to prevent the chain from recoiling into the blades.
- The chain uses a breakaway connector that separates if the chain is jerked. If this happens, simply reinsert the chain into the connector.

#### The light pull chain controls the power to the light fixture.

- The chain has two settings: ON and OFF.

### Troubleshooting

#### Problem: Nothing happens; fan does not move.

- Turn power on, replace fuse, or reset breaker.
- Loosen canopy, check all connections according to the wiring the fan section.
- Check the plug connection in the switch housing.
- Push motor reversing switch firmly left or right to ensure that the switch is engaged.
- Pull the pull chain to ensure it is on.
- Remove the shipping bumpers.

#### Problem: Noisy operation

- Tighten the blade assembly screws and blade iron armature screws until snug.
- Check to see if a blade is cracked. If so, replace all the blades.

#### Problem: Excessive wobbling

If your fan wobbles when operating, use the enclosed balancing kit and instructions to balance the fan.

Tighten all blade iron screws.

Turn power off, support fan very carefully, and check that the hanger ball is properly seated.

If you have tried these troubleshooting solutions and still have trouble, visit our Web site at:  
<http://www.hunterfan.com>.

Hunter Fan Company  
7130 Goodlett Farms Parkway #400  
Memphis, Tennessee 38016

### Other Hunter Products

 
Oscillating Fans




Humidifiers



Air Purifiers



Bath Fans

 

Thermostats



Ceiling Fans



To learn more about Hunter Fan Company products, please see our Web page at:  
[www.hunterfan.com](http://www.hunterfan.com)