



Portable Universal Charger
User Manual
SY-165

Welcome!

Thank you for purchasing the SY-165 Universal Charger – Stay Charged!. In order to benefit from this product, please read the user manual carefully and store in a safe place for future reference.

More Power to your Devices

The SY-165 keeps your devices working longer by providing an internal battery that lasts up to 15 hours in standby. The battery charge will depend on its capacity. The SY-165 will not charge all devices 100% as it is an emergency charger which provides a 1000mah battery incorporated. Compact, lightweight and portable makes the SY-165 the ideal power accessory for business and travel. Stay Charged at all times.

- Works with USB powered devices, including the iPhone, iPod and Blackberry, and many others (**NOT** compatible with the iPad).
- Includes mobile phone tips for almost all the models (see compatibility chart)
- Includes a retractable USB cable
- Features a test button and LED light to indicate remaining charge.

Note: For certain electronic devices (5V), a USB cable is supplied with the original device (e.g. most MP3 & MP4 players). In this case you can use the original cable to charge your device.

Important Safety Instructions


- Read and observe all warnings on the SY-165 charger and in this user manual.
- Power consumption of the connected device must not exceed 5W.
- Do not expose the charger to rain or excessive moisture
- Only use the charger in environments with temperatures between 0°C and 40°C.
- Keep the SY-165 charger away from children to avoid risk of electric shock.
- Do not damage or replace the internal battery.
- Do not shake, drop or throw the charger.
- Never immerse the unit in water or any other liquids.
- Keep away from places where water is present.
- Do not use near sinks, tubs, bathrooms.
- Never clean the product while it is connected to a wall outlet.

Functions

- Charge the SY-165 fully before use. The approximate charging time 3 hours.

- The SY-165 charger lights up when charging a 5V device. The LED light begins to flash when
 - o There is no device charging
 - o When the battery of the charger is running out of charge,
 - o When the device is fully charged
- Connect 5V devices to the USB port with the USB cable.
- 5V devices can be charged using the SY-165 either portably (when the unit is fully charged) or whilst it is connected to a wall outlet.
- Includes EU plug + Car plug.
- Includes 10 connectors that connect to the retractable USB cable which are compatible with almost all the mobile phones/electrical devices.
(Before charging, always consult the compatibility chart)

Operating Instructions

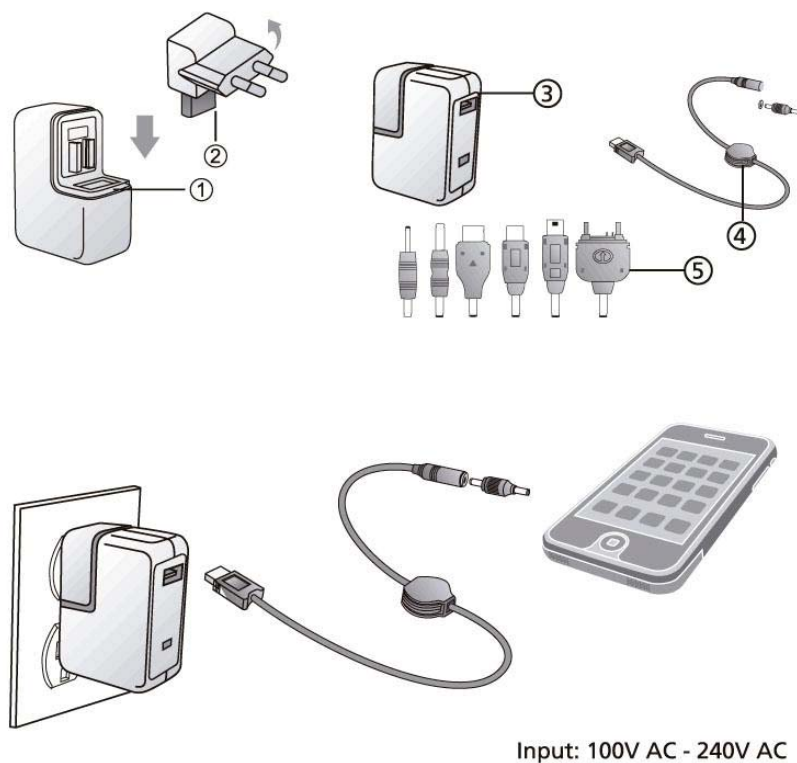

- Insert the plug (2) into the main body (1) and connect to the wall outlet to begin charging.
- Connect the USB cable (4) to the USB port on the device (3)
- Charge the desired device by connecting the compatible pin (5) to the retractable cable (consult the compatibility chart) and then to the device. It is also possible to use the original cable supplied with the device (E.g.

to Charge your iPod, you may use the original cable supplied with it, or the retractable cable with the iPod connector)

Maintenance

- Use a soft, lint-free cloth to clean the exterior of the charger.
- Do not use harsh chemicals or any abrasive solution to clean the charger
- Never immerse the unit in water while cleaning.
- Always clean the unit when it is not connected to a wall outlet

What's in the Box

- 1 x SY-165
- 10 x Connector tips for 5V devices (Mobile phones, MP3, MP4 players, Portable Gaming devices etc...)
- 1x EU plug + 1 Car plug
- 1x retractable cable
- 2x connector tips holder
- 1x travel bag
- 1x user manual.

Technical Specifications

AC input: 100V-240V
DC output: 5V, 800mA
Battery Capacity: 1000mA
Operating temperature: 0°C-40°C
Size: 52.mm x 71mm x 28.5mm

Troubleshooting

USB charger does not charge the device

- Voltage of device does not correspond with that of the USB charger.
- Improper connection between device and Charger. Make sure that the USB cable is properly inserted into the device and the Charger.
- Wrong connector tip has been used. Consult with the compatibility chart and replace if necessary.

USB charger cannot be charged

- Check that the power plug is inserted properly into the wall outlet.

USB charger power does not last long

- Make sure that the USB charger is fully charged before using. (this takes approx 3 to 4 hours to fully charge)

Compatibility Chart

For Use with:

- iPod/iPhone
- Blackberry
- Nokia
- Motorola
- LG
- Samsung
- HTC
- Sony Ericsson
- Nintendo DS/DS Lite/DSi
- PSP
- MP3/MP4/MP5 Players
- Cameras
- And many more!

Note: You may use the cable supplied with the original device or the cable supplied with the SY-165.

Most USB operated devices may be charged using the SY-165.