

# DP 120F

## Instruction manual

Dear Reader.

**Thank you for your interest in a Toshiba Fax machine!**

To allow you to get your fax machine up and running as soon as possible, this manual only covers the most important criteria. Complete operating instructions can be found on the CD-ROM included with the accessories.

All items documented on the CD are highlighted in grey both in the table of contents.

Please refer to the corresponding references on the CD for further information (IBM<sup>®</sup>-compatible format).

**PREPARATION**

Unpacking .....	6
Remove transport fittings: .....	7
Prepare and insert the printer unit .....	7
Change toner .....	8
Replace drum unit .....	9
Connecting your fax machine .....	9
How to insert the recording paper: .....	10
Install exit paper trays: .....	10
Insert memory card (optional) .....	11

**INSTALLATION**

The menu system .....	12
The combination keypad .....	14
Enter user name .....	15
Enter terminal ID .....	17
Connection to PABX, obtaining a public line/Digital PABXs .....	18
Set language .....	20
Set date and time .....	21

**RECEPTION OF DOCUMENTS**

Set standby mode .....	22
Reception reduction .....	23
Memory reception .....	25
Secure RX .....	26
Activate and deactivate Secure Rx .....	29
Correct sequence printout .....	31
Multiple printout .....	32
Delete reception .....	33
Reception protection .....	34
Local copy .....	35

**TRANSMIT DOCUMENTS**

Document format .....	37
Automatic fax messages .....	38
Stack mode .....	39
Useful job management .....	40
Important transmission .....	41
Direct transmission .....	42
Transmission using alpha dial .....	43
Transmission one-touch dial .....	44
Faxing with telephone directory .....	45
Single multi-address transmission .....	46
Stored broadcast .....	47
Monitoring (direkt) .....	48
Monitoring (by job) .....	49
Set resolution .....	50
Set contrast .....	51
Transmission options, ECM on/off .....	52
Transmission options, number of pages .....	53

Transmission options, protected transmission ..	54
Transmission options, reduced speed .....	55
Transmission options, send cover sheet .....	56
Transmission options, send after scan .....	57
Chain dialling .....	58
Call redial .....	59
Resend (retained job) .....	60
Cancel a retained job (with retain job) .....	61
Cancel transmission .....	62

**POLLING**

Reserve polling .....	64
Reserve polling, permanent (general infobox) ..	66
Reserve polling, append documents .....	67
Cancel polling reservation .....	68
Single polling .....	69
Multiple polling .....	70
Cancel polling .....	72
Program Continuous Polling .....	73
Reverse direction .....	75

**STORE NUMBERS**

Alphabet dial memory .....	77
Alphabet dial options .....	79
Modify ABB numbers .....	80
Delete ABB numbers .....	81
One-touch dial keys .....	82
Cancel one-touch dial keys .....	84
Define groups .....	85
Edit groups .....	87
Cancel groups .....	88

**REPORT PRINTS**

Program selection list .....	89
Transmission reports .....	89
Transmission and reception journal .....	95
The function list .....	98
Reservation list .....	98
The dial number lists .....	101
Department list .....	102
Mains failure report .....	102
Delayed fax job .....	103

## ADVANCED SETTINGS

Set transmission header position .....	104
Reception trailer (RTI) .....	105
Permanent monitoring .....	106
Call redial .....	107
Volume of acoustic signals .....	109
Power saver (stand by) .....	110
Cost centre management .....	112
Department code .....	112
Modify or delete a department .....	114
Disable department code .....	115
Divider sheets .....	116
Cover sheet .....	118
Retain jobs .....	120
Query current job status .....	121
Basic setting, document length .....	122
Basic setting, transmission memory .....	123
Basic setting, resolution and contrast .....	124
Basic setting, ECM (error correction mode) ..	125
Basic setting, protected transmission .....	126
Basic setting, reception interval .....	127
Basic setting, Print density (saving toner) ...	128
Basic setting, sort copy .....	129
Basic setting, letter head paper .....	130
Basic setting, send after scan .....	131
Additional features (SUB, SEP, PWD) .....	132
Additional paper cassettes (optional) .....	133
Line 2 Mode (optional) .....	134

## POSSIBLE PROBLEMS


Diagnostic program .....	136
Error messages in the display .....	139
Error codes in journal .....	142
Transmission problems .....	143
Receiving problems .....	145
Cleaning document scanner .....	146
Remove document jam .....	146
How to clear a recording paper jam .....	147
Cleaning the printer unit .....	148
Remote maintenance (COMLINE) .....	149
Supply order .....	150
Download .....	150
Connection to PABX .....	151

## UK CONNECTION INFORMATION


EPA ENERGY STAR .....	152
Declaration of conformity .....	152

## INDEX




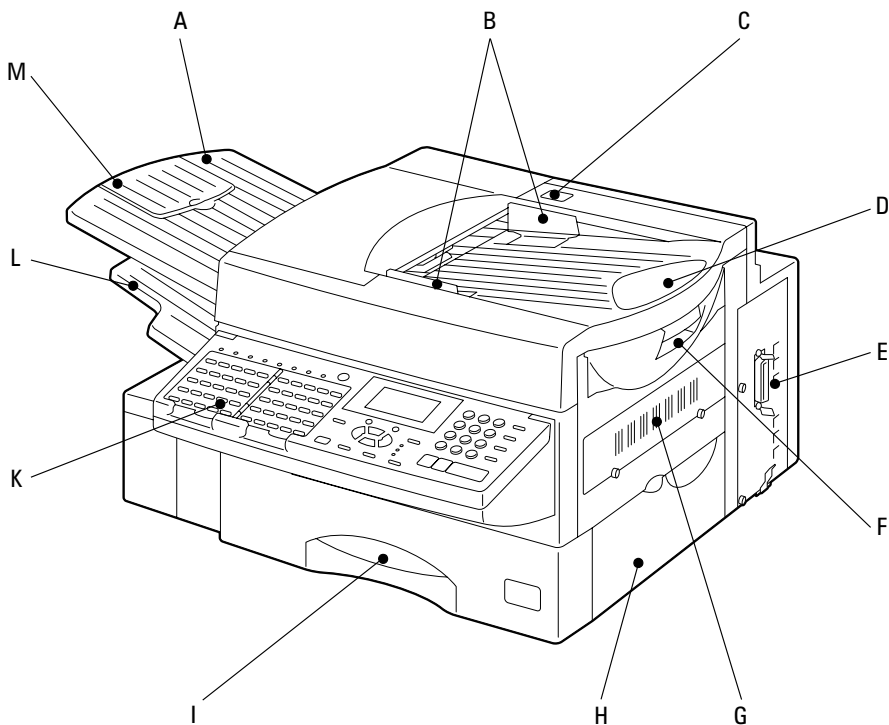

Index .....	153
-------------	-----

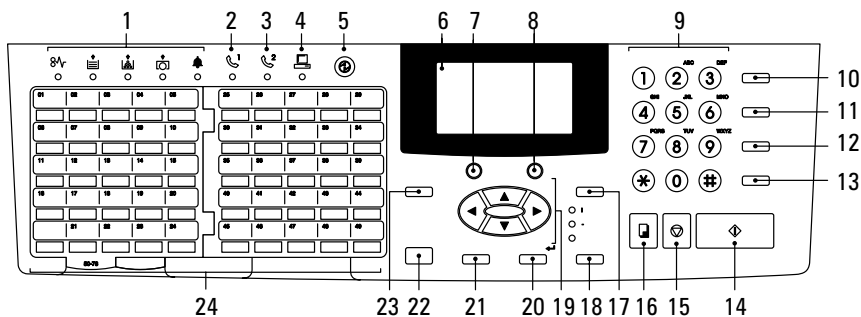

- |  |   |                                       |
|--|---|---------------------------------------|
| <b>A</b> Exit document tray              | <b>E</b> Centronics PC connection         | <b>I</b> Recording paper cassette     |
| <b>B</b> Document guides                 | <b>F</b> Top cover release button         | <b>K</b> Control panel                |
| <b>C</b> Release latch for document feed | <b>G</b> Cover flap for single-sheet feed | <b>L</b> Recording paper tray         |
| <b>D</b> Document tray                   | <b>H</b> Side cover                       | <b>M</b> Exit document extension tray |

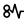




- |  |   |   |
|--|---|---|
| <p><b>1 Warning lamps</b><br/>If there is a malfunction on your fax machine, the lamp under the corresponding symbol will light up.</p> <p> <b>Paper jam:</b><br/>Indicates that there is a document jam or copy paper jam (see <a href="#">page 146 / 148</a>).</p> <p> <b>Paper out:</b><br/>Indicates that the user must replenish the copy paper (see <a href="#">page 10</a>).</p> <p> <b>Toner out:</b><br/>Indicates that the user will use have to replenish the toner (see <a href="#">page 8</a>).</p> <p> <b>Drum operating time:</b><br/>Indicates that the printing unit will soon have to be replaced (see <a href="#">page 9</a>).</p> <p> <b>Alarm lamp:</b><br/>Indicates an operating malfunction which cannot be clearly identified. Please contact service personnel in these cases.</p> <p><b>2 Line lamp 1</b><br/>Indicates transmission on the telephone line.</p> <p><b>3 Line lamp 1</b><br/>Indicates transmission on the telephone line (with optional 2<sup>nd</sup> line).</p> <p><b>4 PC COMM lamp</b><br/>If this lamp flashes, it indicates that data are being transmitted from the PC to the interface.</p> <p><b>5 SUPER POWER SAVER KEY</b><br/>Immediately activates the Super Power Saver features (see <a href="#">page 110</a>).</p> | <p><b>6 DISPLAY</b><br/>Displays indications about the operating modes of your fax machine. Your control monitor for all function settings.</p> <p><b>7 INSERT KEY</b><br/>Inserts one character at the current cursor position.</p> <p><b>8 DELETE KEY</b><br/>Deletes one character in the display.</p> <p><b>9 DIAL KEYPAD</b><br/>Use this keypad to enter dial numbers or to select menu items.</p> <p><b>10 MULTI KEY</b><br/>To create a group consisting of one-touch dial, ABB dial and manual dial numbers. Available for group dialling as well as for group polling.</p> <p><b>11 SPEED DIAL</b><br/>Press this key to select a stored alphabet dial number, a name or a group.</p> <p><b>12 REDIAL / PAUSE</b><br/>Activates the last number dialled, inserts a dialling pause.</p> <p><b>13 MONITOR</b><br/>When you press this key, the fax machine connects to the line and the speaker enabling the user to listen into the call establishment attempt is activated. The subsequent fax connection is handled directly, i.e. without job administration via the memory.</p> <p><b>14 START KEY</b><br/>Activates transmission, reception (off-hook) and selected menu items.</p> <p><b>15 STOP KEY</b><br/>Cancels error messages and terminates menu input.</p> | <p><b>16 COPY KEY</b><br/>The user is able to make copies of documents which have been inserted.</p> <p><b>17 TX-REPORT KEY</b><br/>Switches the TX Report (see <a href="#">page 89</a>) on or off for the current transmission job.</p> <p><b>18 MODE KEY, with status lamps</b><br/>Use this key to select the resolution for the current fax job. The status lamps represent the selected mode. If no status lamp lights up, the STD resolution has been set.</p> <p><b>19 MENU-KEYS</b><br/>Use these keys to select the menu or a specific menu item.</p> <p><b>20 ENTER KEY</b><br/>Activates selected menu items and also used for terminating data input.</p> <p><b>21 JOB CANCEL KEY</b><br/>Use this key if you wish to cancel a job which has been stored or which is due to be handled.</p> <p><b>22 E-MAIL ADDRESS KEY</b><br/>Use this key to enter the E-Mail address for Internet-based fax transmission.</p> <p><b>23 JOB STATUS KEY</b><br/>You can use this key to query the status of individual jobs.</p> <p><b>24 Combination keypad</b><br/>Depending on the position of the function template:</p> <ul style="list-style-type: none"> <li>• <b>One-touch dial keys</b>, for quickly dialling the number of your fax partner</li> <li>• <b>Function keys</b>, for direct access to fax functions</li> <li>• <b>Keypad</b>, for entering text.</li> </ul> |
|--|---|---|


## Unpacking

When unpacking your machine, please check that all parts shown here are present and in perfect condition.


1. Fax machine

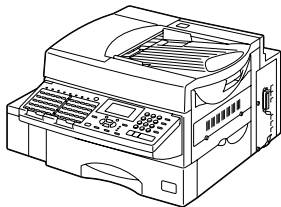


2. Phone line cord

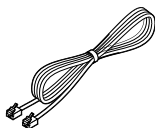


3. Document exit tray

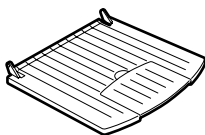


4. Recording paper exit tray

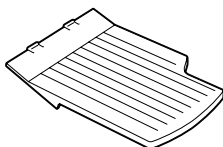

 
5. Fuser cleaner




6. Developer assembly

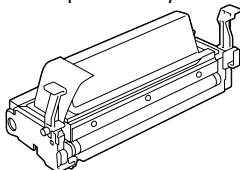


7. Drum unit

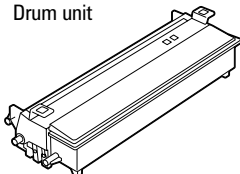

 8. User manual



 9. Overlay



10. AC Power cord



11. Charger cleaner



 
12. Scraper



13. Cotton swab



14. CD-ROM



The correct location for your fax machine is easily found:

near

- a 230 V AC socket\*,
- near a telephone connection, ideally with a single line reserved for your fax machine.

\* No other equipment with high power consumption (such as a photocopier) or equipment which generates electrical noise (such as a radio, computer, radio transmitting and receiving equipment) should be connected to this mains supply.

### AC power

You will find the mains connection on the back of the machine. The ON/OFF switch is situated above the mains jack. Now switch your machine on.

Please protect your machine from:



vibration



 
direct sunlight



dust



humidity



heat

## Remove transport fittings:


Before you start to use your fax machine, please remove all transport fittings.

## Prepare and insert the printer unit


In order to prevent any transport damage, the high-quality printer unit of your new fax machine is supplied with the additional protection of special packaging. Please also follow the enclosed instructions.

The printer unit consists of two separate components, namely the drum unit and the developer assembly. Remove these two parts from their packaging and follow the following instructions.


1. Pull the release button to open the fax machine.

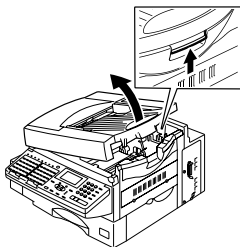


2. Hold the ends of the developer assembly, and shake the assembly several times from side to side. This will loosen the toner.
- Avoid touching the metal roller.

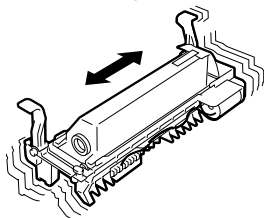


3. Hold the developer assembly securely in one hand, and use your other hand to peel the protective film off from the toner cartridge.
- Avoid touching the protective film, as there may be toner residues on the film.

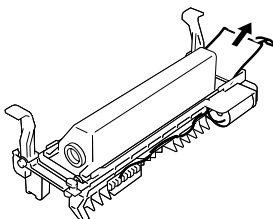

4. Take the drum unit and insert it into the developer assembly as detailed in the drawing.
- Any damage to the printer drum will impair the image quality. You must therefore never touch the green drum surface or expose the drum to direct sunlight for more than three minutes.

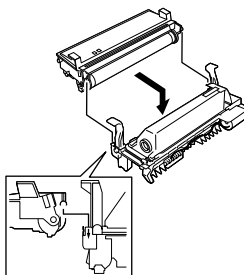


5. Use the green handles to hold the printer unit, and place the unit in the fax machine as detailed in the drawing.

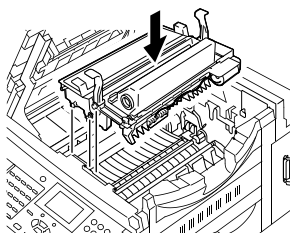


6. Press lightly on the green rectangles on the drum unit so that the unit audibly clicks into position.




The printer unit must be removed before the machine is transported or moved.

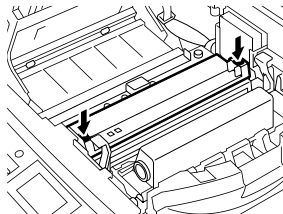


7. Take the fixing roller cleaner out of its packaging and install it as detailed in the drawings.

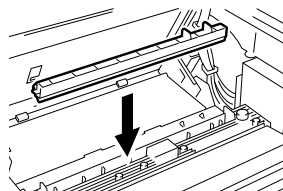

8. Use the ozone filter, if necessary.

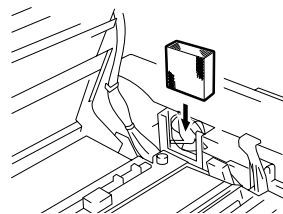


9. Close the cover of the fax machine, which must audibly click into place.

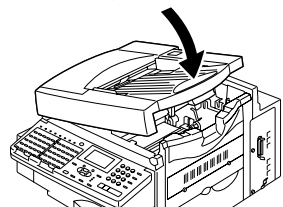


## Change toner

As soon as the "TONER OUT" warning lamp (see [page 5](#)) lights up on your fax machine, you should replace the toner cartridge. The "TONER LOW" message in the display indicates that the machine can only print out approx. 100 more documents (depending on the print density). If you fail to replenish toner during this period, the "TONER EMPTY" message will appear in the display; this message indicates that no further documents will be printed out. If toner is not replenished, incoming fax documents are saved in memory.

1. Pull the release button to open the fax machine.

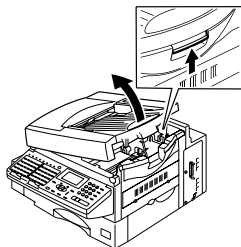


2. Hold the green handles and remove the printer unit.

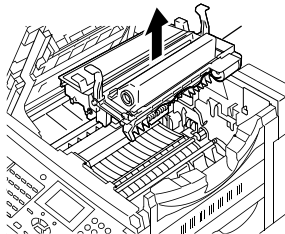


3. Remove the drum unit from the developer assembly.


- Do not touch the developer roller (the black roller with a toner coating).
- Any damage to the printer drum will impair the image quality. You must therefore never touch the green drum surface or expose the drum to direct sunlight for more than three minutes.

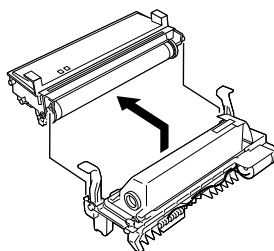


4. Press the green button on the developer assembly, and slide the toner cartridge in the direction of this button. You can then remove the unlocked toner cartridge.

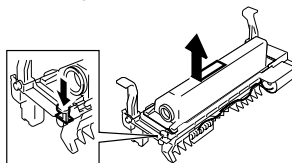

5. Take the new toner cartridge and shake it as detailed in the diagram. This loosens the toner.

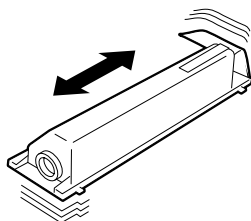

6. Place the toner cartridge on the developer assembly and slide it under the four guides.

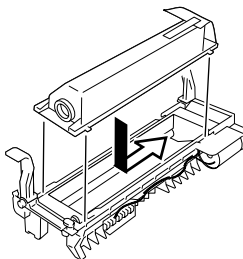

7. Then proceed as detailed on [page 7](#).

### Caution:

In case you come into contact with toner:

- If any toner dust comes into contact with a textile fabric, remove only by tapping the fabric; if necessary, brush out or use a vacuum cleaner. **Never rub.**
- Wash hands in cold water and clean thoroughly with soap.
- Wash eyes with plenty of water.
- If you have inhaled toner, breathe deeply in the open air.
- If toner gets in your mouth, wash it out with plenty of water.
- In an emergency, call a doctor.




Consumables are taken back and recycled by your TOSHIBA dealer.


## Replace drum unit

As soon as the "DRUM OPERATING TIME" warning lamp (see [page 5](#)) lights up on your fax machine, you should ensure that a new drum unit is near to hand. The "DRUM LIFE WARNING" message in the display indicates that the fax machine will only print out a further approx. 300 documents (depending on the print density). If you fail to change the drum in this period, the "REPLACE DRUM" message appears in the display; this indicates that the fax machine will not print out any more documents. If the drum unit is not replaced, incoming fax documents are saved in memory.


1. Pull the release button to open the fax machine.

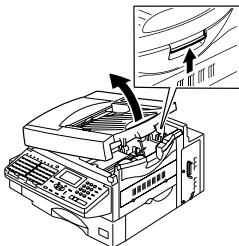

2. Hold the green handles and remove the printer unit.

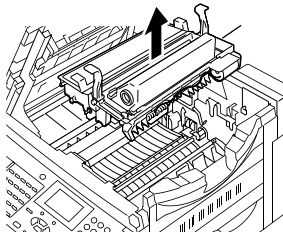


3. Remove the drum unit from the developer assembly.
  - Do not touch the developer roller (the black roller with a toner coating).

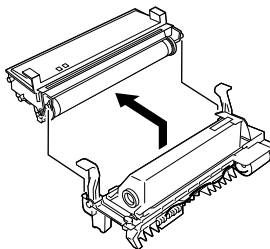

4. Take the new drum unit and insert it into the developer assembly as detailed in the drawing.

- Any damage to the printer drum will impair the image quality. You must therefore never touch the green drum surface or expose the drum to direct sunlight for more than three minutes.

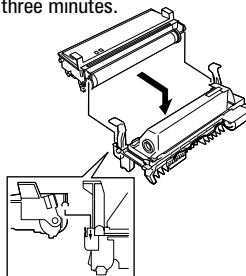

5. Now proceed as described on [page 7](#) (the fixing roller cleaner is **not** replaced).





Consumables are taken back and recycled by your TOSHIBA dealer.

## Connecting your fax machine

### Telephone connection

Connect your fax machine (LINE jack) to the telephone socket, as shown on the right.

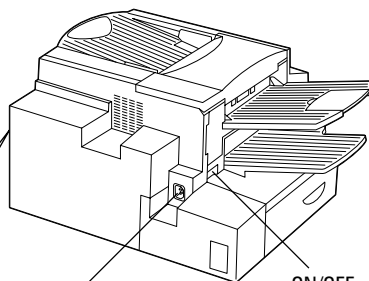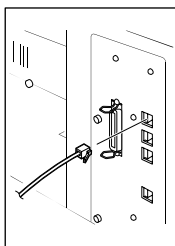


Mains power connection


ON/OFF switch

## How to insert the recording paper:


Remove the paper cassette

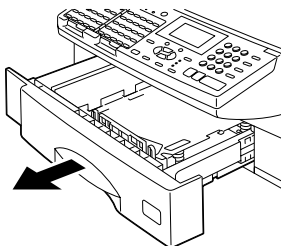


Insert cassette index (A4).

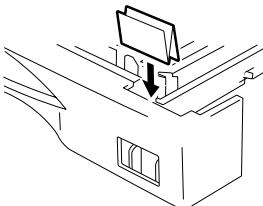

Prepare the recording paper by flexing and fanning out the stack to separate the sheets.

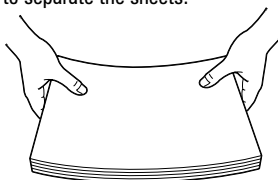


Press down the pressure plate until you hear it lock in place.

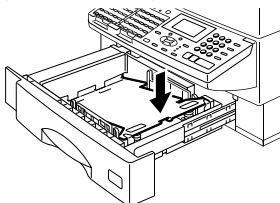



Place the paper so that it lies straight in the cassette with the side to be printed facedown and don't forget:

The paper cassette holds a maximum 550 sheets (80 g/sm).  
The paper is never stacked above the limit mark.

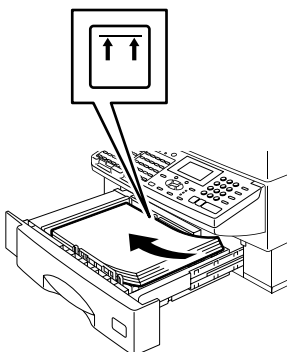


Then: Slide the cassette into the slot until you hear it lock in place.

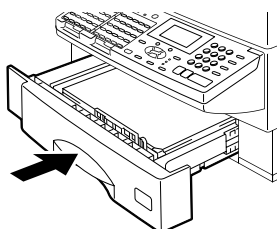


 Do not use damp, wrinkled or torn paper.

## Install exit paper trays:

Install the exit paper tray fits in the slots on the left side of the fax.

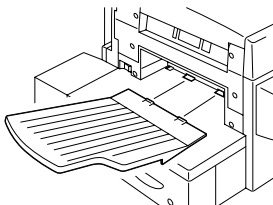


Secure the document tray. Insert the pins of the tray into the corresponding receptacles. Unfold the extension if required.

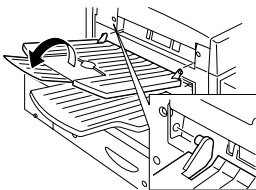

The corona wire cleaner and scraper can be stored inside the fax machine on the rear side.

- The corona wire cleaner and scraper are used to clean components of the printer unit. Please read the instructions on [page 147](#).

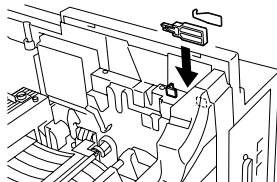

## **Insert memory card (optional)**

For further details on these data, please contact your dealer or contractual partner.

## The menu system

Your fax machine is equipped with a four-line display which provides you with information concerning all operating modes. This display makes it more easy for you to work with the various functions of your fax machine, and everything is set out in a clear menu. Up to four menu items are displayed on each occasion, and a number is assigned to each of these items.

A special group of keys is used for activating the menu as well as for control activities within the various menu levels.

The ▲ key activates the menu and moves the highlight bar up.

The ▼ key moves the highlight bar down.

The ► key selects the appropriate submenu level.


The ◀ key selects the superior menu level.



Once a menu item has been selected with the highlight bar via these control keys, it is activated by pressing the ↵(ENTER) key. Alternatively, you can use the START key for this purpose.

It may well happen that more than four items are displayed in one menu. In this case, press the ▲/▼ control keys several times to display these concealed menu items.

Example: Menu 3, 1 (1. Menu item highlighted)

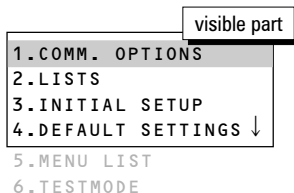

One version of the menu selection procedure is to enter the corresponding number of the particular menu item. It is not necessary to press the INSERT button. As soon as the relevant number has been entered, the menu item is executed. This is also applicable for the concealed menu items.



If no further key is pressed during a minute, the menu is automatically exited.

Consider the following example in order to familiarise yourself with the menu system. The system prints out the program selection list, on which you receive the complete menu structure of your fax machine.



```

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%
  
```

```

1.COMM. OPTIONS
2.LISTS
3.INITIAL SETUP
4.DEFAULT SETTINGS ↓
  
```

Standby mode

### Start the menu

The first 4 menu items are displayed.

**Go to A**

**Go to B**

Continued on next page.



**A**

4x



START

```

1.COMM. OPTIONS
2.LISTS
3.INITIAL SETUP
4.DEFAULT SETTINGS ↓
  
```

```

2.LISTS
3.INITIAL SETUP
4.DEFAULT SETTINGS
5.MENULIST
  
```

```

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%
PRINTING LIST
  
```

### Selecting a menu item with the control keys:

The first 4 menu items are displayed.

### Select a menu item

### confirm with START

The report is printed.

**B**

5

```

1.COMM. OPTIONS
2.LISTS
3.INITIAL SETUP ↓
4.DEFAULT SETTINGS
  
```

```

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%
PRINTING LIST
  
```

### Selecting the menu item via number:

The first 4 menu items are displayed.

### Select a menu item



To select a sub menu, there is no need to see it in the LCD. The only requirement is that this menu item has to be in the same menu level.

The report is printed.

## The combination keypad

The combination keypad of your fax machine fulfils several functions :

- **One-touch dial keys**, for quickly dialling the number of your fax partner
- **Function keys**, for direct access to the menu
- **Computer keypad**, for entering text.



1 2 3...



A B C...

This multiple key assignment is rendered possible by templates, positioned over the combination keypad in a corresponding arrangement. The keypad has a specific function depending on the position of the template.

The **function keys** allow quick access to frequently used functions of the fax machine:

Function	see page	Function	see page
CHAIN DIAL COMM	58	SUB ADDRESS COMM	132
CHARGE CODE	112	PCL PRINT	--
DELAYED COMM	103	JOURNAL	95
DIRECT TX	42	PREV TX RPT.	93
LOW SPEED TX	55	RESERVATION LIST	98
ITU MAILBOX	91	SECURE RX	26
COVER SHEET	56	CHECK E-MAIL	--
PRIORITY TX	41	TEL LINE SELECT	134
RECOVERY TX	120	TEL LIST ENTRY	77
SEND AFTER SCAN	131	TEL LIST PRINT	101
POLLING	64	CONTRAST	51

To use, position the corresponding template (function template) in such a way that the menu designations are visible. All you then need do is press the corresponding key.

## Enter user name

In order to ensure that a transmitted fax document can also be uniquely identified, a transmission header is printed on the top 5 mm of the document. This transmission header contains various items of information, including the user name and the sender ID of the fax machine which transmitted the documents.

### User name:

You can enter any 40 characters (max.) for the user name.

Using the „KEYBOARD“ function template renders a keyboard available that can, in principle, be used just like that of a PC or a typewriter. An alternative character set is made available via the ALTERNATE key, where special characters and accented letters (e.g. Umlaut) can be selected. After pressing the ALTERNATE key, the corresponding character set is displayed by pressing the corresponding letter key. The desired character is selected via the ◀ / ▶ control keys and inserted by pressing the ⏎ (ENTER) key. Pressing the ALTERNATE key again switches the special character mode off. In order to enter numbers, please use the numerical keypad. The following table lists the special characters assigned to the respective keys.

Key	[ALTERNATE] key	[SHIFT] Taste
a	à á â ã ä å æ ç ã	À Á Â Ã Ä Å Æ Ç
c	ç ÿ	Ć Ć Č
d	d'	Đ
e	è é ê ë ì í	È É Ê Ë Ì Í
g	ğ	Ĝ
i	ì í î ï ï	Ì Í Î Ï
l	ł ' í	Ł Ł Í
n	ñ ' ñ	Ñ Ñ Ñ
o	œ °	Ò Ó Ô Õ Ö Ø Õ
r	í ' ř	Ř Ř
s		Š Š Š Š
t	ť ' ť	Ť Ť
u	ù ú û ü ú ú	Ù Ú Û Ü Ú Ú
y	ý	Ý
z		Ž Ž Ž

**Place character:** The character of your choice is placed wherever the flashing cursor is located. Please use the ◀ / ▶ keys to control the highlighted input.

**Cancel characters:** Move the cursor to the corresponding position and press the CANCEL key beneath the display. The character is then deleted and the remaining characters move one place to the left.

**Replace character:** Move the highlighting to the appropriate position and proceed as detailed under the procedure for entering a new character. The character is then overwritten.

**Insert character:** Press the INSERT key beneath the display. To exit this mode, press the INSERT key again.

When the name is completed, press the **START key**.

**Example: Toshiba**

Continued on next page.



START

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

SET TERMINAL ID  
ID NAME = (MAX 40)  
■

ENTER NAME  
ID NAME = (MAX 40)  
TOSHIBA■

### Standby mode

### Start the menu

The first 4 menu items are displayed.

### Select a menu item

Make your selection

### Operate the KEYBOARD function template

#### Enter the name

Example: Toshiba

Name is ready...

### ...confirm with START


Continue with „Enter the terminal ID“

## Enter terminal ID

The terminal ID which is part of the transmitting header contains the number under which your fax machine can be reached. The number should be entered in the international format:

Example:

+44-2131-12345678

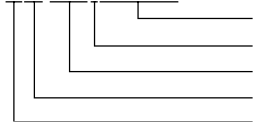

Fax number  
Space (to improve legibility)  
Area code (without initial 0)  
Country code  
Plus symbol (for the international form)



In Germany it is obligatory to enter the terminal ID!

1

1 . . . . . 0



START



STOP

INT CODE?  
1.ADD +  
2.NOT NEEDED

SET TERMINAL ID  
  
TEL NUMBER=(MAX 20)  
+■

SET TERMINAL ID  
  
TEL NUMBER=(MAX 20)  
+44-2131-158-905■

Continued from "Enter user name"

Option for selecting the national or international form.



Please always select the international form.

**Select a menu item**

Make your selection

**Now enter the code**

Insert a pause with pause button

Code is complete...

**...confirm with START**


**Press STOP, return to standby mode**

## Connection to PABX, obtaining a public line/Digital PABXs

The fax unit can be connected not only to the public switched telephone network (public line) but also to a PABX. In this case, additional parameters have to be entered.

With **PABXs**, the public line is obtained in various ways:

- Number      Dial one digit (or several digits) in order to obtain the public line
- Flash key      With this method of obtaining the public line, the connection circuit is interrupted briefly.

 When the method of obtaining a public line has been entered, you must always press the key "※" before the actual number when you dial your fax partner. This is also applicable for saving the fax numbers (see [page 77](#)).



15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

SET EXCHANGE TYPE  
1.PSTN  
2.PABX

Standby mode

**Start the menu**  
The first 4 menu items are displayed.

**Select a menu item**  
The current connection type is highlighted

Continue with "Connection to main line / PABX's"

**Go to A PSTN**

**Go to B PABX**

**A PSTN**



SET EXCHANGE TYPE  
1.PSTN  
2.PABX

**Select a menu item**

**Press STOP, return to standby mode**

Continued on next page.

**B PABX**

②

① ..... ②

① ..... ②



START



STOP

SET EXCHANGE TYPE

1.PSTN

2.PABX

SET ACCESS TYPE

1.FLASH

2.DIGIT

SET ACCESS TYPE

ACCESS DIGIT = (1-3)

SET ACCESS TYPE

ACCESS DIGIT = (1-3)

0

**Select a menu item**

Make your selection

**Select a menu item**

Example: digit

**Enter the digit(s) for obtaining public line**

Example: 0

**...confirm with START****Press STOP, return to standby mode**

## Set language

Your fax machine is set to English. Please carry out the following menu steps if you wish to use another language for the menu and the list prints.



STOP

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

1.ENGLISH  
2.ITALIANO  
3.DEUTSCH  
4.FRANCAIS

Standby mode

### Start the menu

The first 4 menu items are displayed.

Select a menu item

 
Select a menu item

Press **STOP**, return to standby mode



## Set date and time



Enter the current date and time at this point so that all details relating to date and time is correct. The internal clock of your fax machine then runs automatically - even in the event of a power failure.



START



  START



STOP

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

SET TIME FORMAT  
1.24 HOURS  
2.12 HOURS

SET DATE & TIME  
DD-MM-YYYY DAY  
15-03-2000 WED

SET DATE & TIME  
HH:MM  
19:56

SET DATA MODE  
1.MM-DD-YYYY  
2.DD-MM-YYYY  
3.YYYY-MM-DD

SET MONTH MODE  
1.NUMERIC  
2.NAME

Standby mode

### Start the menu

The first 4 menu items are displayed.

### Select a menu item

Make your selection  
for 12- or 24-hour format

### Select a menu item

Example: 24-hour format

### Enter the date

Confirm with START

### Enter the time

### Confirm with START

Make your selection for the date format

### Select a menu item

Make your selection for the month (using  
figures or the name)

### Select a menu item

Press STOP, return to standby mode

## Set standby mode

If your fax machine is connected to the PSTN, there are two different ways of receiving documents.

### Automatic reception

If the line is reserved exclusively for fax operation.

The fax machine switches over to reception as soon as the line rings. The number of rings before the fax machine is activated can be set (see below).



The fax machine is always activated, even if the call is initiated by a voice partner.

 
 
 
### Manual reception

If the line is used primarily for telephone traffic.

The call must be accepted manually; the fax machine is not activated when the line rings. The call must be accepted manually; the fax machine is not activated when the line rings. The call must be accepted by an additional telephone. If you wish to transmit a document, you must press the START key of the fax machine.



Ensure that any fax calls can be accepted by means of the external telephone. Pressing the start key only has an effect if the handset is off-hook.



START



STOP

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

1. COMM. OPTIONS  
2. LISTS  
3. INITIAL SETUP  
4. DEFAULT SETTINGS

AUTO RECEIVE MODE  
1. AUTO RECEIVE  
2. MANUAL RECEIVE

AUTO RECEIVE  
RING DELAY = (01-05)  
02

### Set standby mode

Standby mode

### Start the menu

The first 4 menu items are displayed.

### Select a menu item

Make your selection

1. Automatic reception
2. Manual reception

### Select a menu item

Example: Automatic reception

Make your selection

for the number of ringing signals before the fax machine connects to the line.

### Enter the required number

### Confirm with START

Press STOP, return to standby mode

## Reception reduction

If a fax is received which exceeds the length of the paper for received documents (e.g. due to a transmission header – see [page 104](#)), the copy would not be able to be printed out in full. In this case, the fax machine reduces the size of the document in scale with the original (max. 73%).

In general, this effect is not problematical. However, if the sizes of the documents must be absolutely identical, it is necessary to deactivate the **reception reduction** facility. In this case, that part of the copy which no longer fits on the page is printed out on a second page.

If you are able to do without the „rest“ of the page, activate the **discard** facility to suppress printout on the second page.

 
Original (A4)



Reception reduction: **ON**



Reception reduction: **OFF**  
Discard: **OFF**



Reception reduction: **OFF**  
Discard: **ON**



STOP

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

RX REDUCTION

1.ON  
2.OFF

### Reception reduction ON/OFF

Standby mode

### Start the menu

The first 4 menu items are displayed

### Select a menu item

Make your selection

1. Reception reduction ON
2. Reception reduction OFF

### Select a menu item

Press **STOP** return to standby mode

Continued on next page.



4 / 3 / 0 4

1 ..... 0



STOP

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

DISCARD  
1.ON  
2.OFF

**Discard ON/OFF**

Standby mode

**Enter the menu**

The first 4 menu items are displayed.

**Select a menu item**

Make your selection

1. Discard ON
2. Discard OFF

**Select a menu item**

**Press STOP, return to standby mode**

## Memory reception

Under certain circumstances, the machine cannot print out any further incoming copies:

- If there is no recording paper
- If there is a paper jam

In order to prevent problems with reception, the remaining pages are buffered in the memory of your fax machine. Once the problem has been solved, the document is printed out automatically.

 


In the event of a power failure, the contents of memory are retained for approx. 72 hour.

If the fax machine is to receive documents (in memory) in the event of paper-out or paper jam, the memory reception facility must be activated. This ensures that the fax machine is still able to receive documents outside normal business hours (e.g. at weekend or during the night).



- When the memory capacity is full, no further calls will be accepted.
- If you find that the memory is frequently too small, ask your dealer for a memory expansion!



STOP



15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

SET MEMORY RX  
1.ON  
2.OFF

### Memory reception ON/ OFF

Standby mode

#### Start the menu

The first 4 menu items are displayed.

#### Select a menu item

Make your selection

1. Memory reception ON, further reception possible
2. Memory reception OFF, no further reception possible

#### Select a menu item

Press **STOP**, return to standby mode

15-MAR-00 WED 19:56  
PAPER EMPTY  
RESIDUAL MEMORY 100%  
MEMORY RECEPTION

15-MAR-00 WED 19:56  
PAPER JAM  
RESIDUAL MEMORY 100%  
MEMORY RECEPTION

### Display messages for memory reception


Display in case of paper low.

or

Display in case of paper jam.

# Secure RX

In the **Secure RX** mode, the fax machine is ready to receive documents; however, incoming fax documents are not printed out and are retained in memory for a defined period. This for instance prevents fax documents which are received outside normal office hours from falling into the “wrong hands”. The user is able to set the period during which the **Secure RX** mode is active. The user can also expand specific days in the week. Outside this period, all stored faxes are automatically printed out and further documents are received without any restriction.

 Secure RX can only be activated if memory reception has been activated (see [page 25](#)).



4 / 3 / 0 1

1 ..... 0

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

- 01.SECURITY CODE
- 02.ACTIVATE

Standby mode

**Start the menu**  
The first 4 menu items are displayed.

**Select a menu item**

Make your selection  
1. Enter / edit security code (**see A**)  
2. Activate **Secure RX** (only possible if security code is used - **see B**)

**Select a menu item**

A1

1 ..... 0



START

SECURITY CODE ENTRY  
NEW CODE  
SECURITY CODE =

SECURITY CODE ENTRY  
NEW CODE  
SECURITY CODE = 1234

- 01.SECURITY CODE
- 02.ACTIVATE

**Enter security code (for first time)**  
Make your selection for security code

**Enter the security code**

**...confirm with START**

Make your selection  
1. Enter / edit security code  
2. Activate **Secure RX** (only possible if security code is used)

[Continued on next page.](#)

① ..... ②



START

① ..... ②



START

SECURITY CODE ENTRY  
CURRENT CODE  
SECURITY CODE = ■■■■

SECURITY CODE ENTRY  
NEW CODE  
SECURITY CODE = ■■■■

SECURITY CODE ENTRY  
NEW CODE  
SECURITY CODE = ■■■■

SECURITY CODE ENTRY  
NEW CODE  
SECURITY CODE = 9876

01. SECURITY CODE  
02. ACTIVATE

## Security code edit

Make your selection for (old) security code

Enter the old security code

...confirm with **START**

Make your selection  
for new security code

Enter the new security code

...confirm with **START**

 
Make your selection

1. Enter / edit security code
2. Activate **Secure RX** (only possible if security code is used)

Continued on next page.

B


1 ..... 0



START

1

 1 ..... 0



START

1 ..... 0

1 ..... 0



STOP

SECURE RX  
SECURITY CODE = ■■■■

**Activate/deactivate Secure RX**

Make your selection  
for the current security code

**Enter the current security code**

**confirm with START**

Make your selection  
for configuration of **Secure RX**

- 1. Configure and activate **Secure RX**
- 2. Deactivate **Secure RX**

**Select a menu item**

Make your selection for the period in which **Secure RX** is active. (Move the cursor with the ◀▶ keys)

**Enter the period**

**confirm with START**

Make your selection for **Secure RX**

- 1. Settings for day menu
- 2. Same setting for all days

**Select a menu item**

(Example: Menu item 1)

Make your selection. Is set period  
applicable for Monday?

- 1. YES
- 2. NO

**Select a menu item**

All days of the week (up to Sunday) can be  
set individually.

**Press STOP, return to standby mode**

SECURE RX  
1.ON  
2.OFF

SECURE RX  
TIME PERIOD =  
16:00 - 09:00

SET SECURE RX  
FOR 24 HR OPERATION?  
1.YES  
2.NO

MONDAY  
24 HR SECURE RX?  
1.YES  
2.NO

 


## Activate and deactivate Secure Rx

You can also activate the Secure Rx mode outside the set period, if for in-stance staff leave the office early. If you have the security code, you can likewise temporarily deactivate Privileged RX mode, in order to receive a print-out of the stored documents.



If you wish to activate Secure RX for another period, please follow the steps on [page 26](#).



SECURE RX



2

1 ..... 0



START

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

SECURE RX  
1. START  
2. PRINT

RX MEMORY LOCK  
SECURITY CODE ■■■■

**Temporary deactivation of Privileged RX mode for printing purposes**  
Standby mode

**Operate the Menu function template**

**Press the corresponding function key**

Make your selection

1. Reactivate **Privileged RX** mode
2. Temporary deactivation of Privileged RX mode for printing purposes

**Select a menu item**

Make your selection  
for the current security code

**Enter the current security code**

**confirm with START**

Privileged RX mode is temporarily deactivated. The memory contents are printed out immediately.



This mode can be set only if **Secure Rx** has been configured (see [page 26](#)).

[Continued on next page.](#)



1

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

SECURE RX  
1. START  
2. PRINT

**Reactivate Privileged RX mode**  
Standby mode


**Operate the Menu function template**

**Press the corresponding function key**

- Make your selection
1. Reactivate **Privileged RX** mode
  2. Temporary deactivation of Privileged RX mode for printing purposes

**Select a menu item**

The Secure RX mode is activated for the rest of the day.

 This mode can be set only if **Secure Rx** has been configured (see [page 26](#)).

 
## Correct sequence printout

If more than one document is transmitted, it is normal to start with the first page. As received copies are printed out face-up, this means that the received stack of documents is in reversed order. This would mean that the first page is the last page to be printed.

Please note that the entire reception procedure is first stored in memory before it is subsequently printed out. If the capacity of the memory is not sufficient, there will be a delay in printing out the documents in the correct sequence.



If you find that the memory is frequently too small, ask your dealer for a memory expansion!



STOP

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

REVERSE ORDER PRINT  
1.ON  
2.OFF

Standby mode

### Start the menu

The first 4 menu items are displayed.

### Select a menu item

Make your selection

1. Correct sequence printout ON
2. Correct sequence printout OFF

### Select a menu item

 
Press **STOP** return to standby mode

## Multiple printout

As your fax machine handles all reception jobs via its memory, it is possible for several copies instead of merely one copy to be printed out (up to 99). This means that the operator does not have to go to the photocopier. Please note that great strain is placed on the memory if you increase the number of copies and if several jobs are received simultaneously.



If you find that the memory is frequently too small, ask your dealer for a memory expansion!



START



STOP

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

RX MULTI COPY  
COPY NUMBERS=(01-99)  
01

RX MULTI COPY  
COPY NUMBERS=(01-99)  
08

Standby mode

### Start the menu

The first 4 menu items are displayed.

### Select a menu item

Make your selection  
Number of incoming copies


### Select the required quantity

Example: 8 copies

...confirm with START

Press STOP, return to standby mode

## Delete reception

It is not possible to immediately recognise whether your fax machine is transmitting or receiving a document. The  lamp does not distinguish between these two modes. You can only identify that a document is being received after you press the JOB STATUS key.

  
JOB STATUS

  
JOB CANCEL

  
START


15-MAR-00 WED 19:56

RESIDUAL MEMORY 77%

LINE-1 RECEIVE P 001  
FILE NBR = 122  
EC 14400 BPS  
+49 2131 158901

CANCEL?  
FILE NBR = 123  
1. YES  
2. NO

Standby mode

The  lamp flashes to indicate activity on the line

**Press the JOB STATUS key**

The current status is displayed  
(RECEPTION is displayed)


**Press the JOB CANCEL key**

 
Confirmation prompt

**...confirm with START**  
Current reception is terminated

# Reception protection

The process of receiving documents is not subject to any restriction in principle. However, if reception protection is activated, it is only possible for the machine to receive fax documents from partners whose fax number is stored in the fax machine. The transmitted code of the transmitter is compared against the contents of your alphabet dial memory or one-touch dial keys. If the comparison is not successful, the transmission is rejected.

 Please note that fax reception is limited when the reception protection facility has been activated. **If you have not stored any fax numbers, no further fax documents can be received!**



15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

- SET PRIVILEGED RX
- 1.ON
  - 2.OFF

Standby mode

**Start the menu**  
The first 4 menu items are displayed.

**Select a menu item**  
Make your selection  
1. Reception protection ON  
2. Reception protection OFF (normal)

**Select a menu item**

**Press STOP, return to standby mode**


## Local copy

You can use your fax machine to make one or more copies (up to 99).

You can select a sorter function if several copies of various documents are to be made simultaneously. The copies are sorted and reproduced in the sequence in which the original documents were inserted into the document feed.

### Sorter function ON

- Copies are sorted automatically.
- Requires adequate memory (if memory is full, the copying process is terminated. If you find that the memory is frequently too small, ask your dealer for a memory expansion!
- All documents are scanned into the machine, resulting in a longer copying procedure.

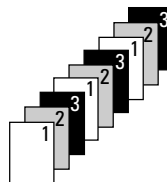


### Sorter function OFF

- Copies are sorted manually.
- Not much memory required.
- The copying procedure is shorter.

In the case of documents that are longer in size than A4, the excess parts are not copied. If, however, all parts are to be copied, the Copy reduction function must be activated.


The **Copy reduction** function can be activated when preparing the copy. It acts in both axes, thus resulting in a true-to-scale reduction. Four fixed scales are available, as well as an automatic reduction option.

If additional (optional) **paper cassettes** are available, a specific cassette can be accessed for each respective copy.

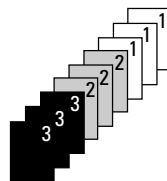


- The copy is always made with „FINE“ resolution ( see [page 50](#)). Resolution „U-FINE“ can be set if required.
- The „HALFTONE“ mode setting is always possible.
- Automatic copy reduction is not possible when the paper cassette selector has been set to AUTO.
- The „LETTER HEAD PAPER“ cassette is not accessed if the cassette selector has been set to AUTO.
- A copy cannot be made when the fax machine is receiving a document.


Continued on next page.

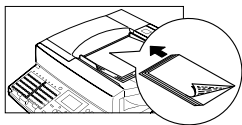

COPIE

 

START

 

START

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

COPIES=(1-99) 1  
PAPER AUTO  
REDUCE 100%  
COLLATE ON OFF

100%  
AUTO  
86%  
75%

COPIES=(1-99) 1  
PAPER AUTO  
REDUCE 75%  
COLLATE ON OFF

### Local copy

Standby mode

### Load original

**Remember: Printed side face down**

Document ready

### Press COPY key

Make your selection

### Select copy parameters

Example: REDUCE

Information on the reduction is displayed

### Adjust reduction

### Confirm with START

Make your selection

### Activating/Deactivating sorted copies

### Enter amount of copies

confirm with START



## TRANSMIT DOCUMENTS

### Document format

The following table gives you an idea of the documents your fax machine can handle.

	Single sheet	2 or more sheets
Document size (max)	216 mm (W) x 1000 mm (L)	
Document size (min)	148 mm (W) x 100 mm (L)	
Effective scanning width	206 mm	
How many sheets can be loaded at one time?		max. 50 sheets A4
Thickness of paper	0,05 ~ 0,15 mm	0,06 ~ 0,12 mm
Quality of paper	Uncoated on both sides	


 
### Please note:

- Documents longer than 420 mm can only be loaded manually.
- If you load several sheets at one time, they should all be of the same size and paper quality.

### Problem documents ...

May not feed. This applies to

- torn, wrinkled or damp pages
- folded pages or pages with holes
- transparent pages or pages with a smooth, shiny finish
- textile or metallic documents

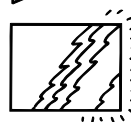

### There are two ways of avoiding this problem:...

...by photocopying or using a carrier sheet.

Your TOSHIBA dealer can supply you with the necessary carrier sheets.

### How to use carrier sheets:


Place your document face-up on the carrier sheet under the transparent cover. Carrier sheets can be used like normal documents except for one restriction: only one carrier sheet can be fed at one time.



### How to load documents correctly


Remove any paper clips, staples and similar objects before transmitting the document. If you intend to load documents which are longer than A4 format, you should pull out the extension of the document support. Push the side paper guide up against the document(s). Now place your document(s) on the document tray - up to 50 at one time - as shown.

All documents must be inserted face down!

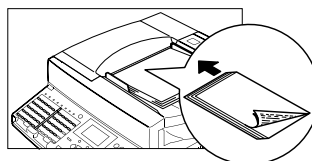

Adjust the document guides to the edges of the sheets.

After 2 seconds, your document will be automatically pulled in by about 2 cm.

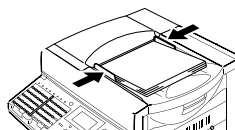


## Automatic fax messages

To send fax messages in the traditional manner: Insert document(s), enter the fax number and the connection is automatically established. The fax machine reads the documents into memory and then transmits them. The advantage for the user: The document feed is only ever used for a brief period of time; irrespective of whether a fax is being transmitted or not. (please also refer to [page 39, Transmission from memory](#)). If you decide to use the listening-in version (see [page 48](#)), you can also acoustically monitor the call establishment process. This is useful whenever you have problems with establishing a connection. The reason is frequently a wrong number, or a fax machine which is not ready to receive.



The free memory display varies depending on the utilisation level of stack memory.

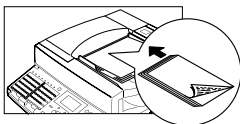

START



15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

ENTER TEL NUMBER

TEL NUMBER=(MAX 128)  
02131158901

SCANNING INTO MEMORY  
FILE NBR. = 01  
RESIDUAL MEMORY 99%

15-MAR-00 WED 19:56

RESIDUAL MEMORY 99%

Standby mode

### Load originalR

**emember: Printed side face down**

Document ready

To remove the document from the document feed, press the STOP key again.

### Enter the fax number

The entered fax number is displayed. Any corrections can be made using the ◀-key, or the complete number can be cleared by pressing the STOP key.

To remove the documents from the document feed before they are processed, press the STOP key again.

### ...confirm with START

While the document is being read into the machine:

The machine displays the job number (file number) and current memory capacity.

The corresponding line lamp blinks as soon as the fax machine goes online.

The display indicates normal transmission or reception mode during this process.

## Stack mode

A frequently encountered problem with fax machines is that the document tray is blocked while a document is being transmitted; no other documents can be transmitted while the fax machine is transmitting or receiving documents.

### This is different with your fax machine:

All documents are read into the memory and are then transmitted from this memory. Incoming documents are also read into the memory before they are printed out. The advantage of this method is that the document tray is virtually always free and that documents can be transmitted almost irrespective of the transmission or receiving status of the fax machine.


Each procedure is known as a job. A job may consist of one or more documents which you can transmit to your partners. A job can also be a multi-address transmission or a delayed transmission. Your fax machine is able to manage 100 such jobs. Each of these jobs is placed on a stack, from where they are processed in sequence. Your fax machine accepts jobs even while it is transmitting or receiving documents; this means that the document tray is always ready.

The fax machine allocates a number to each job, and this number can be viewed via the job list (XX list) (s. [page 98](#)).

The stack memory is protected via an internal battery. This means that no memory loss occurs if the machine is switched off or if there is a power failure. As soon as the fax machine is switched on again or as soon as the power supply is restored, the job is resumed at the point at which it was interrupted. The bridging period depends on the memory status, although it is at least one hour.




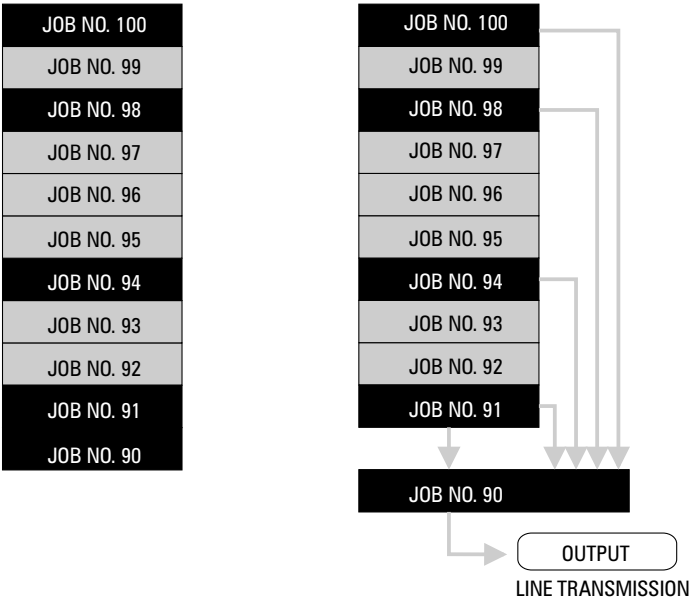
The transmission and reception memory is activated in the basic setting of the fax machine. You can change these basic settings to suit your individual requirements (see [page 25 / 123](#)).

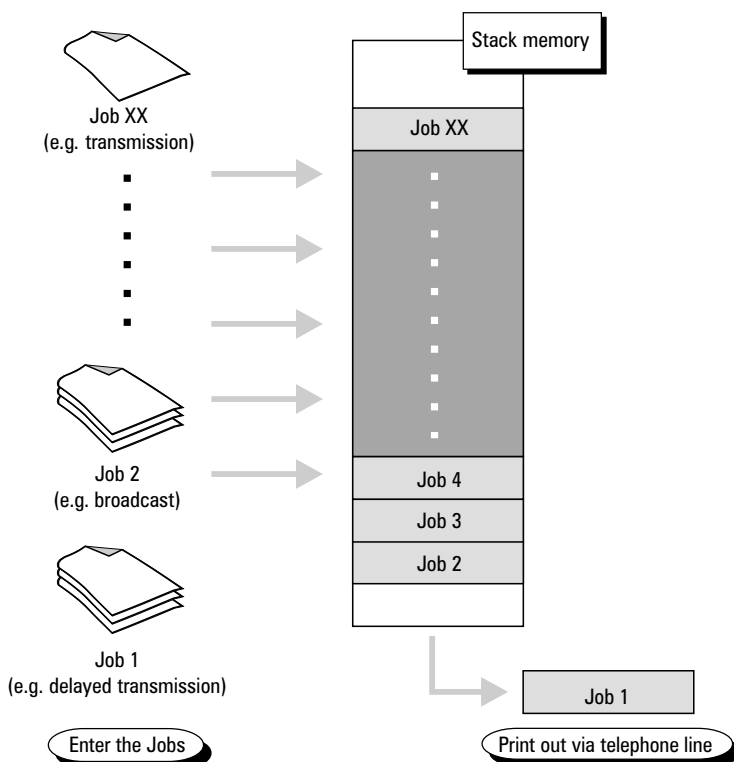

# Useful job management

As the stack memory in your fax machine is so large, it may happen that several jobs have to be transmitted to the same fax number. As a fax connection is used more economically if more data are transmitted, it would make sense to transmit all of these jobs in a single process. Whenever it handles a new job, your fax machine therefore checks the stack to establish whether there are additional jobs with the same fax number. If this is the case, these jobs are handled together irrespective of their position in the stack. The job number of these jobs is retained until stack management encounters the first job of the same fax number. The process is recorded in the transmission journal (see [page 95](#)), with an identical sequential number.

 In case of delayed transmission the jobs are sent together if time and fax number are equal.




Some jobs of the stack have the same fax number (black).

The first job with the same fax number pulls the other jobs together.

## Important transmission

The stack of your fax works according to FIFO (first in - first out). This situation can be compared to a queue: The most recently entered job has to wait the longest. This might be problematical for transmitting a certain document, particularly if stack memory already contains several jobs. The **"important transmission"** function is available for such situations. If this function is selected, the current job is given top priority. This job is carried out immediately after the last action, irrespective of the position in stack memory.

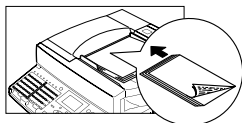

START

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

PRIORITY RESERVE  
ENTER TEL NUMBER  
SPEED DIAL KEY OR  
ONE TOUCH KEY

Standby mode

**Load original**

**Remember: Printed side face down**

Document ready

**Operate the Menu function template**

**Press the corresponding function key**

Make your selection  
for Fax number

**Enter the fax number**


or


select alphabet dial, one-touch dial or  
telephone directory (q.v.)

**...confirm with START**

# Direct transmission


In the normal transmission mode your fax machine reads all documents into the memory before they are transmitted (see [page 39](#)). If the documents are too large for the memory or if you have too many documents, you can also send directly from the document tray without reading the documents into the memory.

 If you find that the memory is frequently too small, ask your dealer for a memory expansion!

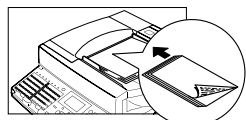

1

 1 . . . . . 0



START

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

DIRECT TRANSMIT  
1.YES  
2.NO

RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

Standby mode

**Load original**  
**Remember: Printed side face down**  
Document ready

**Operate the Menu function template**

**Press the corresponding function key**

Make your selection  
for direct transmission

**Select a menu item**

**Enter the fax number**  
or  
select alphabet dial, one-touch dial or  
telephone directory (q.v.)

**...confirm with START**


The documents are now transmitted  
directly via the document feed

## Transmission using alpha dial

The alphabetic dialling facility enables you to enter a brief "address" instead of the (frequently long) fax number of your partner. The real fax number is then permanently stored under this "address". The alphabetic dialling facility thus enables you to save time with frequently used fax numbers.



Please refer to **page 77** for details of how to save alphabet dialling numbers.

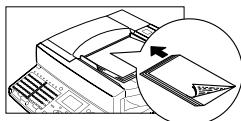

  
SPEED DIAL

1

1 ..... 0



START

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

TELEPHONE NBR LIST  
1. ABB NUMBERS  
2. SEARCH NAME  
3. GROUP NUMBER

COMM RESERVATION  
ABB NUMBER=(1-999)

COMM RESERVATION  
ABB NUMBER=(1-999) 1

COMM RESERVATION  
ABB NUMBER=001  
TOSHIBA EUROPE

Standby mode

### Load original

**Remember: Printed side face down**  
Document ready

### Activate the dialling key

Make your selection  
for type of dialling

1. Dialling with abb. numbers
2. Dialling with telephone directory
3. Group dialling (using group numbers)

### Select a menu item

Make your selection  
for the alphabet dial number

### Enter the alphabet dial number

Example: 1

### ...confirm with START

The fax machine displays the selected  
alphabet dial memory and the fax partner  
allocated to this memory position.

The document is read into memory (see  
**page 38**)

## Transmission one-touch dial

 

One-touch dialling provides you with a very easy method of dialling the number of your partner.

**73 Spaces\*)** can be freely assigned to fax numbers. Simply press a single button to start the dialling procedure.

\*) Some of the one-touch dial keys of your fax machine have double assignments. As soon as you operate the corresponding function template, additional number memory spaces are available.



Please refer to **page 82** for details of how to store one-touch dialling numbers.

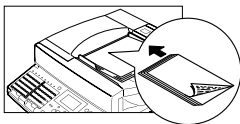

1 2 3...

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

ENTER TEL NUMBER

ONE TOUCH = 35

TOSHIBA EUROPE

Standby mode

**Load original**

**Remember: Printed side face down**

Document ready

**Press the one-touch dial key**

Example: one touch 35


The machine displays the selected one-touch dial key and the fax partner assigned to this one-touch dial key.

The document is read into memory (see **page 38**)




## Faxing with telephone directory

This type of dialling is similar to the process of searching in a telephone directory. If you enter the initial letter of your fax partner, the machine searches for the corresponding fax number in the alphabet dial memory or on a configured one-touch dial key. This procedure is particularly useful when you know the names of specific fax partners.

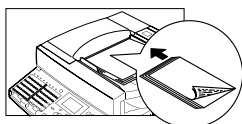

  
SPEED DIAL

 2



A B C...

  
START



  
START

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

TELEPHONE NBR'S LIST  
1. ABB NUMBER  
2. SEARCH LETTER  
3. GROUP NUMBER

ENTER SEARCH NAME:  
ID NAME = (MAX20)  
■

ENTER SEARCH NAME  
BAKER  
[▲▼] 00001/00005

ABB NUMBER = 007  
BROWN

SEARCH LETTER = X  
-----

\*)

Standby mode

### Load original

**Remember: Printed side face down**  
Document ready

### Activate the dialling key

Make your selection

for type of dialling

1. Dialling with abb. numbers
2. Dialling with telephone directory
3. Group dialling (using group numbers)

### Select a menu item

Make your selection  
for the initial letter.

Please refer to **page 15** for entering letters.

### Enter the alphabet dial number

Example: "B" \*)

### ...confirm with START

The first name is displayed

**use the control keys to select the required name**

### confirm with START

The fax machine displays the selected alphabet dial memory and the fax partner allocated to this memory position.

The document is read into memory (see **page 38**)

This display appears if no name is stored under the selected letter.





The search function is case-sensitive!

## Single multi-address transmission

If you intend to send a document to several fax partners as quickly as possible, this function can be used for defining a **single free group**. The group is cancelled after the procedure is completed. Direct-dialling numbers, one-touch dial numbers and freely assignable numbers (max. 100) can be grouped in any desired combination.



Permanently stored groups (see [page 85](#)), can also be integrated into the group in this way.

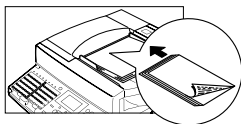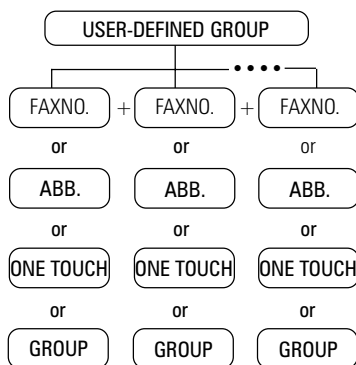

START



START

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

MULTI GROUP 000  
ENTER TEL NUMBER,  
SPEED DIAL KEY OR  
ONE TOUCH KEY

MULTI GROUP  
[▲] TO PREVIOUS  
ENTER MORE OR  
PRESS [START]

Standby mode

**Load original**

**Remember: Printed side face down**

Document ready

**Press the MULTI key**

Make your selection  
for fax number ([page 38](#)),  
Alphabet dialling ([page 43](#)),  
One-touch dialling ([page 44](#)),  
Telephone directory ([page 45](#)),  
group ([page 47](#))

**...confirm with START**  
(depending on selected action)

Make your selection  
for further group elements  
(Previously entered dial numbers can be  
called up and edited or deleted with the  
control key ▲)

-or-

**...confirm with START**



The document is read into memory (see  
[page 38](#))

## Stored broadcast

If you have a fixed group of fax partners to whom you frequently have to send broadcast fax messages, the stored broadcast facility is just what you need. You can store 50 different group of your choice. Additional you can assign each group to a one-touch dial key. Multi-address transmission is then carried out by pressing the appropriate one-touch dial key.




Please refer to **page 85** for details of how to program permanent groups.

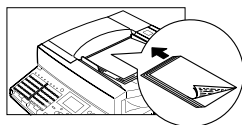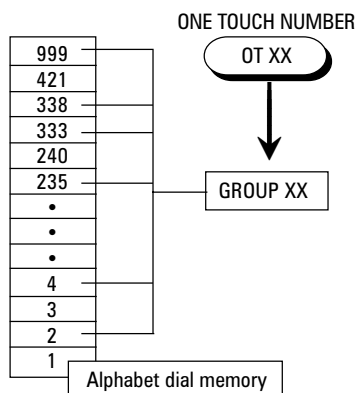

SPEED DIAL

3

 1 . . . . . 0



START

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

ENTER TEL NUMBER

TELEPHONE NBRS LIST

1. ABB NUMBER
2. SEARCH LETTER
3. GROUP NUMBER

GROUP NBR = (1-1999)

GROUP NBR = (1-1999)  
0007

### Broadcast via group number

Standby mode

### Load original

**Remember: Printed side face down**

Document ready

### Activate the dialling key

Make your selection  
for type of dialling

1. Dialling with abb. numbers
2. Dialling with telephone directory
3. Group dialling (using group numbers)


### Select a menu item

Make your selection  
for group number

### Enter group number

### confirm with START

The document is read into memory (see **page 38**)

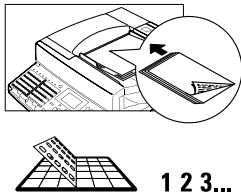

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

### Broadcast via one-touch dial key

Standby mode

### Load original

**Remember: Printed side face down**

Document ready

Press one-touch dial key under which a group is stored


The document is read into memory (see [page 38](#))

## Monitoring (direkt)

When a fax transmission is monitored, the call establishment attempt is played back via the built-in speaker. This means that you have an additional acoustic check for monitoring the call establishment procedure. This facility is useful whenever a connection is not established. This is frequently due to a wrong number or a fax machine that is not ready to receive.



With the listening-in alternative, the document is not read into the memory; it is retained on the tray until the receiving fax machine has been contacted.

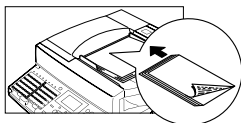

MONITOR

1 ..... 0



START

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

### Standby mode

Load original

**Remember: Printed side face down**

Document ready

### Activate monitoring

Make your selection  
for the fax number

### Enter the fax number

Dialling starts

As soon as you hear the other fax machine  
(constant whistle)

### ...confirm with START

The document is transmitted immediately  
(without being read into memory).

ON HOOK  
  
TEL NUMBER =  
■

ON HOOK  
  
TEL NUMBER =  
12345678


## Monitoring (by job)

When a fax transmission is monitored, the call establishment attempt is played back via the built-in speaker. This means that you have an additional acoustic check for monitoring the call establishment procedure. This facility is useful whenever a connection is not established. This is frequently due to a wrong number or a fax machine that is not ready to receive.



With this listening-in version, the document is read into memory. The listening-in facility is linked to the job as an additional option.

Please follow the descriptions of **page 106** if **all** outgoing fax transmissions are to be played back via the loudspeaker.

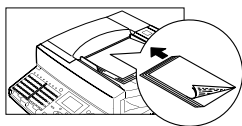

START

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

ENTER TEL NUMBER

1.COMM. OPTIONS

2.LISTS

3.INITIAL SETUP

4.DEFAULT SETTINGS

LINE MONITOR

1.ON

2.OFF

RESIDUAL MEMORY 100%

ENTER TEL NUMBER

Standby mode

**Load original**

**Remember: Printed side face down**

Document ready

**Start the menu**

The first 4 menu items are displayed

**Select a menu item**

**Select a menu item**

Make your selection

for fax number, alphabet dialling, one-touch dial or telephone directory

**...confirm with START**

The document is read into memory (see **page 38**)

## Set resolution

In its basic setting, your fax machine uses high resolution for transmitting or copying your documents. You can also adjust the resolution to suit the particular documents. Use the following as a rough guide:


Use the following as a rough guide:

STD	For hand-written or typewritten documents (basic setting)
FINE	For documents with small type such as newspapers and diagrams
U-FINE	For documents with very small and detailed diagrams
HALFTONE	256 grey stages for photographs or colour documents



- For the grey stages, you can choose between fine and superfine (U-FINE)
- If the resolution is increased or if the grey stage mode is selected, the transmission time is lengthened (this involves additional costs!), as more lines or more information are transmitted.

\*) Please refer to **page 124** if you wish to change the BASIC SETTING for resolution.

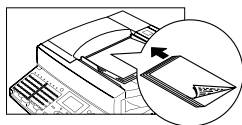

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

ENTER TEL NUMBER



FINE



U-FINE



HALFTONE

Standby mode

**Load original**

**Remember: Printed side face down**

Document ready

**Press „MODE“**

Press the MODE key several times to make the required setting.

Standard resolution = All lamps off

The setting selected in this way is only applicable for the current job. When the document has been read in, the resolution is reset to the default value.\*

**Dialling the fax partners**


## Set contrast

Where the print on documents is weak or where colour character sets are used, it is possible that some characters might not be transmitted. In such cases, you should set the contrast to darker.

On the other hand, some documents contain characters in coloured fields. In such cases, you should set the contrast to lighter.

You can judge the effect of this setting - and thus also the quality of your fax transmission - by using the self-copy facility (see [page 35](#)).

\*) Please refer to [page 124](#) if you wish to change the basic setting of the contrast.

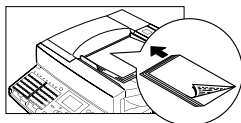

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

ENTER TEL NUMBER

SET CONTRAST

1. NORMAL

2. DARKER

3. LIGHTER

COMM RESERVATION

RESIDUAL MEMORY 100%

ENTER TEL. NUMBER

Standby mode

**Load original**

**Remember: Printed side face down**

Document ready

**Operate the Menu function template**

**Press the corresponding function key**

Make your selection  
for the contrast setting

**Select a menu item**

The setting which has now been selected is applicable only for the current job. When the document has been read in, the contrast is reset to the default value.\*

**Dialling the fax partner**


## Transmission options, ECM on/off

Your fax machine is equipped with an error correction facility (ECM). If your fax partner also has an error correction facility, this permits error-free fax transmission. One effect linked with ECM is that the transmission time increases if there are any problems on the line. This may involve very high costs with overseas calls. For this reason, the error correction facility can be temporarily disabled.



If the error correction mode is disabled in the basic setting (see [page 125](#)), ECM is temporarily enabled using the adjacent method.

\*) Please refer to [page 125](#) if you wish to change the basic setting of the error correction mode.

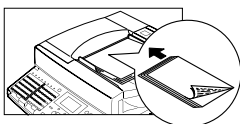

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

ENTER TEL NUMBER

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

SET ECM

1.ON

2.OFF

RESIDUAL MEMORY 100%  
ENTER TEL. NUMBER

Standby mode

**Load original**

**Remember: Printed side face down**  
Document ready

**Start the menu**

The first 4 menu items are displayed

**Select a menu item**

The fax machine displays the current setting

**Select a menu item**

The setting which has now been selected is applicable only for the current job. When the document has been read in, the contrast is reset to the default value.\*

**Dialling the fax partner**




## Transmission options, number of pages

Enter the number of pages to be transmitted before the transmission procedure commences (in the mode: Direct transmission, see [page 42](#)).

Before sending a document, you can use this option to enter the number of pages being sent. The until will compare the number of pages actually sent with the number you entered.

- Because the ratio of transmitted pages is automatically displayed when a document is transmitted from stack memory, the function represents a **feed check** in this mode. If the specified number of pages is not identical with the actual situation, the following message is displayed "PAGE # MISMATCH".

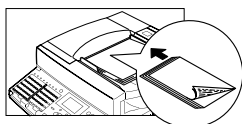

START

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

ENTER TEL NUMBER

1.COMM. OPTIONS

2.LISTS

3.INITIAL SETUP

4.DEFAULT SETTINGS

PAGE NUMBER

PAGE NUMBER =(1-999)

RESIDUAL MEMORY 100%

ENTER TEL. NUMBER

Standby mode

**Load original**

**Remember: Printed side face down**  
Document ready

**Start the menu**

The first 4 menu items are displayed

**Select a menu item**

Make your selection  
for the number of pages

**...confirm with START**


Dialling the fax partner

# Transmission options, protected transmission

The transmission of documents is restricted.

You can now only send documents to fax machines whose ID is identical to the dialled fax number. You can thus only fax your documents to specific fax partners.

\*) Please refer to [page 126](#) if you wish to change the basic setting of transmission protection.

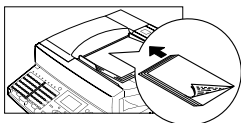

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

SET SECURITY TX  
1.ON  
2.OFF

RESIDUAL MEMORY 100%  
ENTER TEL. NUMBER

Standby mode

**Load original**  
**Remember: Printed side face down**  
Document ready

**Start the menu**  
The first 4 menu items are displayed

**Select a menu item**


The fax machine displays the current setting

**Select a menu item**

The selected setting is applicable only for the current job. When the document has been read in, transmission protection is reset. \*

## Transmission options, reduced speed

When sending documents overseas or if an increased error ratio is encountered, you should lower the transmission speed in order to reduce the number of errors. Similar to a situation in traffic where speed is adjusted to the given conditions!

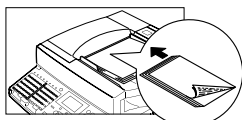

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

ENTER TEL NUMBER

QUALITY TX

1.OFF

2.14400BPS

3.9600BPS

RESIDUAL MEMORY 100%

ENTER TEL. NUMBER

Standby mode

**Load original**

**Remember: Printed side face down**

Document ready

**Operate the Menu function template**

**Press the corresponding function key**

Make your selection  
for transmission speed

1: Maximum speed

**Select a menu item**


The selected setting is applicable only for  
the current job.


**Dialling the fax partner**

# Transmission options, send cover sheet

The cover sheet is a form which is placed at the head of your fax transmission. It is a tool to enable the operator to classify an incoming fax more easily.

The data are entered on the cover sheet via the combination keypad (see [page 14](#)).

 If you wish to use this option, you must first enable the cover sheet function (see [page 118](#)).

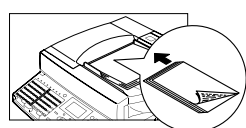

1



START



START

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

COVER SHEET  
1. SEND  
2. PRINT

ENTER REMOTE NAME  
  
■

ENTER YOUR NAME  
  
■

RESIDUAL MEMORY 100%  
ENTER TEL. NUMBER

Standby mode

**Load original**  
**Remember: Printed side face down**  
Document ready

**Operate the Menu function template**

**Press the corresponding function key**

Make your selection  
1. Send cover sheet  
2. Print cover sheet

**Select a menu item**

**Enter the addressee**  
(refer to [page 15](#) for the procedure)

**confirm with START**

**Enter the sender**  
(refer to [page 15](#) for the procedure)

**confirm with START**

**Dialling the fax partner**


## Transmission options, send after scan

The default setting for the fax machine causes the fax machine to commence dialling immediately after pressing the START button for a scan job. In the case of extensive fax jobs, this can result in the page number descriptor in the TX header on the first few pages being incomplete. This in turn results in a memory overflow, the transmission is interrupted and the document part waiting in memory is deleted. This prevents the document feed becoming jammed.

If an extensive document is to be faxed, the basic settings should be adjusted temporarily. In this context, transmission is only commenced after the entire document has been scanned. Furthermore, the way in which the fax machine is to handle a memory overflow can also be set.



The basic setting for this function can be found on [page 131](#).

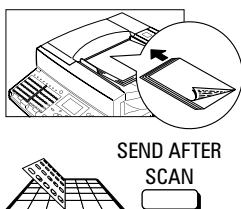

1

1 ..... 0

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

ENTER TEL NUMBER

SEND AFTER SCAN

1. YES

2. NO

WHEN MEMORY FULL

1. DELETE SCAN PAGES

2. SEND SCAN PAGES

RESIDUAL MEMORY 100%

ENTER TEL. NUMBER

Standby mode

**Load original** Remember: Printed side face down

Document ready

**Operate the Menu function template**

**Press the corresponding function key**

Make your selection for SEND AFTER SCAN

1. Send during scanning
2. Send after scanning

**Select a menu item**

In the case of selection 1 (behaviour in the event of a memory overflow)

1. Cancel sending (document feed ready for use)
2. Continue sending (documents remain in the document feed until the memory is free)

 

**Select a menu item**

**Dialling the fax partner**

## Chain dialling

When dialling unabbreviated numbers, the number can be made up of various parts. You are able to combine all forms with each other:

- One-touch dialling (see [page 44](#))
- Dialling with telephone directory function (see [page 45](#))
- Dialling with alphabet number (see [page 43](#))
- Dialling via the numeric keypad
- Dialling pause (using the PAUSE key)

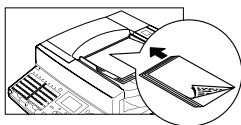

or



SPEED DIAL

or



START

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

ENTER TEL NUMBER

CHAIN DIAL COMM  
ENTER TEL NUMBER,  
ABB NBR OR  
ONE TOUCH KEY

Standby mode

**Load original**

**Remember: Printed side face down**

Document ready

**Operate the Menu function template**

**Press the corresponding function key**

Make your selection  
the fax number can be made up of various  
items of input

**Enter the number(s)**

when you are ready.

**...confirm with START**

**Dialling the fax partner**

## Call redial

### Auto call redial:

If it was not possible for your fax message to be sent, this may be due to various reasons (please read [page 143](#)). One reason may be that the other fax machine is busy. In this case, it would make sense to call your partner again at a later time. This is done automatically by your fax; it attempts to send the fax message again approx. every 3 minutes.



You are able to individually set the period between the call redial attempts and also the number of redial attempts (see [page 107](#)).

### Manual call redial:

 
If the memory contains a job which you wish to redial immediately, you can select this job and manually select the redial procedure (see diagram).

- Manual call redial does not have any influence on the preset number of call redial attempts (see [page 107](#)).

REDIAL



PAUSE



START

15-MAR-00 WED 19:56

RESIDUAL MEMORY 77%

REDIAL:  
[ENTER]: START  
[▲]: PREVIOUS SCREEN  
[▼]: NEXT SCREEN

after 5 seconds

SINGLE TRANSMIT  
TOSHIBA EUROPA  
15-03-00 19:33  
FILE NBR = 008

REDIAL  
  
NUMBER NOT LISTED

### Manual call redial (from memory)

Standby mode

Requirement:

There must be at least one job which has already been dialed and not transmitted.

### Press the REDIAL/PAUSE key

Make your selection  
for selecting the required job\*

The first available job is displayed.  
Please refer to [page 62](#) for details of the job format

### Select the job which you want to redial.

### confirm with START

The job is carried out again.

 
\*) If there is no job available for the redial facility, the machine displays the following message:

## Resend (retained job)

If your fax machine is set to retain a job (see [page 120](#)) you can resend this job by the following procedure. The criteria applicable for a “fresh” job are applicable for the newly activated job. You also have the option of changing the fax numbers assigned to the job.



START



START

15-MAR-00 WED 19:56

RESIDUAL MEMORY 77%

RECOVERY TRANSMIT  
[CENTER]: START  
[CANCEL]: DELETE  
[▲▼]: SEARCH

after 5 seconds

SINGLE TRANSMIT  
TOSHIBA EUROPA  
15-MAR-00 19:56  
FILE NBR = 008

SINGLE TRANSMIT  
DUKE NUKEM  
15-MAR-00 19:45  
FILE NBR = 007

SINGLE TRANSMIT  
1. START  
2. CHANGE

TEL NUMBER = (MAX128)  
1234567

NO ENTRY

NOT ALLOWED NOW

Standby mode

**Operate the Menu function template**  
**Press the corresponding function key**

Make your selection  
for selecting the required job

The first available retained job is displayed.  
Please refer to [page 62](#) for details of the job format

**Select the job which you wish to activate.**

**...confirm with START**

Make your selection  
1: Job is reactivated unchanged  
2: Fax number can be changed (not for direct-dialling numbers / one-touch dial numbers)

**Select a menu item**

Example: Change the fax number

Current fax number is displayed

**Enter new fax number**

**Confirm with START**

The selected job is used again.

\*) If no job is retained, the following error message is display:


\*) If the “retained job” function is not activated, the following error message is display:

 


## Cancel a retained job (with retain job)

If your fax machine is set to retain job (see [page 120](#)), you can use the following steps to cancel the retained job.



  
JOB CANCEL



START

15-MAR-00 WED 19:56

RESIDUAL MEMORY 77%

RECOVERY TRANSMIT  
[ENTER]: START  
[CANCEL]: DELETE  
[▲▼]: SEARCH

after 5 seconds

SINGLE TRANSMIT  
TOSHIBA EUROPA  
15-MAR-00 19:56  
FILE NBR = 008

SINGLE TRANSMIT  
DUKE NUKEM  
15-MAR-00 19:45  
FILE NBR = 007

DELETE ?  
FILE NBR. = 007  
1. YES  
2. NO

Standby mode

**Operate the Menu function template**

**Press the corresponding function key**

Make your selection  
for selecting the required job

The first available retained job is displayed.  
Please refer to [page 62](#) for details of the job  
format

**Select the job which you wish to cancel.**

**Press the JOB CANCEL key**

Confirmation prompt

**...confirm with START**

Selected job is cancelled

## Cancel transmission

If you enter the wrong fax number or if you have dialled the wrong fax partner, the relevant job has to be cancelled. It is important to distinguish between a job which is read into memory (stack mode, [page 39](#)) or transmitted directly (direct transmission, [page 42](#)).

If the job is read into memory, the current action of the fax machine is not related to the momentary operation of the machine. In order to cancel a specific job, it is necessary to select it specifically from other jobs which are waiting to be handled. This is achieved by "paging" through the job stack.

The job is displayed as follows:

SINGLE TRANSMIT


DUKE NUKEM

15-MAR-00 19:45

FILE NBR = 007

- Type of job
- Name of the fax partner  
(if the number is dialled via the numeric keypad or if no name has been entered, the machine displays the fax number).
- Date and time  
when the job was entered
- Job number (1 - 999)

JOB DELETE

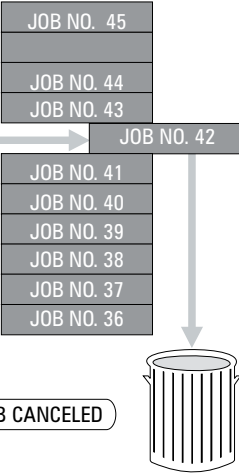

In addition to cancelling a specific job from the stack, you can also cancel the current transmission. For this purpose, please refer to [page 121](#) "query job status".



STOP

1

DIALING

FILE NBR = 008

123456789

CANCEL?

1. 123456789

2. NO

**Cancel job during "direct transmission"**  
Fax machine is dialled in direct mode (transmission)

- Press STOP
- Confirmation prompt
- Select a menu item
- Job is cancelled

  
JOB CANCEL

① ..... ②



  
JOB CANCEL

  
START

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 77%

JOB CANCEL  
1. TRANSMIT  
2. JOB NUMBER

JOB CANCEL  
[ENTER]: CANCEL  
[▲]: PREVIOUS SCREEN  
[▼]: NEXT SCREEN

after 5 seconds

SINGLE TRANSMIT  
TOSHIBA EUROPA  
21-MAR-00 19:33  
FILE NBR = 008

SINGLE TRANSMIT  
DUKE NUKEM  
15-MAR-00 19:45  
FILE NBR = 007

CANCEL?  
FILE NBR. = 007  
1. YES  
2. NO

**Cancel from stack**  
Standby mode

**Press the JOB CANCEL key**

Cancel menu is displayed  
(Display can vary, depending on the outstanding jobs)

**Select a menu item**

Make your selection  
for selecting the required job

The first available job is displayed.

**Select the job which you wish to cancel.**

**Press the JOB CANCEL key**

Confirmation prompt

**...confirm with START**

Selected job is cancelled


## Reserve polling

### General:

The polling procedure is used for receiving a document. The difference between polling and "normal" reception is that the call is established by the person wishing to receive the document, and that the call charges are incurred by the person receiving the document.

More and more companies are using the polling facility as "FAX on DEMAND", for instance for providing information such as weather reports, current price lists, stock exchange news, traffic jam predictions, etc.

For the polling facility to be used, it must be reserved beforehand.

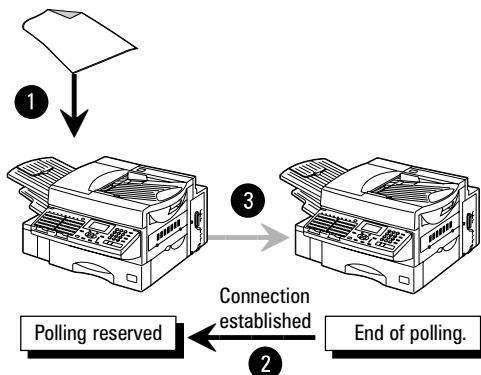

### Reserve polling

Other fax partners can poll information from your fax machine if you set up this facility with this function. Your document which you reserve for polling is read that into the memory of the machine so that the document tray is not blocked.

There are two types of reservation available:

- **single reservation:**

Your stored document is deleted as soon as the document has been polled.

- **permanent reservation:**

Your stored document is permanently available for polling.



Only one document can be reserved for polling.

### Polling protection

Polling reserved in this manner is not protected. I.e. every fax machine which has a polling facility is able to poll documents from your machine. The polling protection facility is activated in order to prevent unauthorised polling (only possible with single reservation).

Two options are available for polling protection:

**1. NUMBER:** With this option, you specify the number of the fax machine which is permitted to poll documents from your machine. However, it is essential that the code of the polling fax machine is identical to the number which you enter as polling protection.

Please enter the **complete** number of the polling fax machine.

Example:

Number of the polling fax machine: +44-2131-1234567890


Entry for polling protection: 4421311234567890

**2. CODE:** If you wish to reserve the polling facility exclusively for TOSHIBA fax machines, you can use the four-digit TOSHIBA code as polling protection. Documents can then only be polled if this code is identical in both fax machines.



- Only one form of polling reservation is possible at any one time.
- Please refer to [page 68](#) for details of how to cancel polling reservation.
- The choice of resolution (see [page 50](#)) also has an effect on memory behaviour. The higher the resolution, the higher is the strain placed on memory volume.


\*) In case of memory overflow, your dealer is able to offer a memory upgrade.

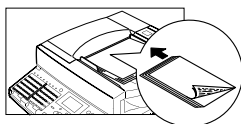

2 / 1

1 ..... 0

 1 ..... 0



START

1 ..... 0



START

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

POLLING  
1.POLLING  
2.POLLING RESERVE  
3.PROG. CONT. POLL.

SECURITY CODE/TEL ?  
1.NO  
2.SECURITY CODE  
3.TEL. NO.

POLLING RESERVE  
SECURITY CODE = ■■■■

POLLING RESERVE  
SECURITY TEL=(MAX20)  
■

## Reserve single polling

Standby mode

## Load original

**Remember: Printed side face down**

Document ready

## Operate the Menu function template

### Press the corresponding function key

Make your selection

for polling modes

### Select a menu item

Polling protection?

1. No polling protection
2. TOSHIBA code
3. Telephone number
4. TOSHIBA code + telephone number (concealed)

### Select a menu item

(Example: 4 = TOSHIBA Code + Telephone number)

Make your selection

for TOSHIBA Code (4-digit number)

### Enter the TOSHIBA code

### confirm with START

Make your selection

For the number (code) of the polling fax machine

### Enter the number

### ...confirm with START

The document will be stored in memory and is ready for polling.


## Reserve polling, permanent (general infobox)

With permanent polling, the document is retained in the memory of the fax machine so that it can be constantly polled. "FAX on DEMAND" can be configured in this way. Items of information such as weather report, current price lists, stock market news, traffic jam forecasts, etc. can thus be constantly maintained for polling.



- Only one form of polling reservation is possible at any one time.
- Please refer to **page 68** for details of how to cancel polling reservation.
- The choice of resolution (see **page 50**) also has an effect on memory behaviour. The higher the resolution, the higher is the strain placed on memory volume.

\*) In case of memory overflow, your dealer is able to offer a memory upgrade.

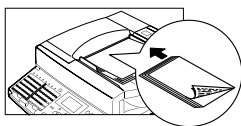

2 / 2

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

POLLING  
1. POLLING  
2. POLLING RESERVE  
3. PROG. CONT. POLL.

### Reserve permanent polling (Infobox)

Standby mode

### Load original

**Remember: Printed side face down**

Document ready

### Operate the Menu function template

### Press the corresponding function key


Make your selection  
for polling modes

### Select a menu item

The document is read into the memory and is kept available for various polling attempts until it is cancelled \*

## Reserve polling, append documents

When a document has already been reserved for polling, you can append additional documents or replace these documents. This means that the operator is able to make additions without previously having to cancel the entire job.

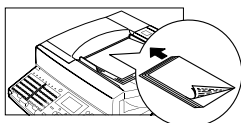

2

1 . . . . . 0

1 . . . . . 0

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56

RESIDUAL MEMORY 77%

ENTER TEL NUMBER

POLLING

1.POLLING

2.POLLING RESERVE

3.PROG. CONT. POLL.

POLLING RESERVE

1.POLLING

2.PUBLIC FAX M-BOX

ALREADY ASSIGNED

1.CANCEL

2.ADD

3.RETAIN

### Adding/Replacing documents

Standby mode

### Load original

**Remember: Printed side face down**

Document ready

### Operate the Menu function template

**Press the corresponding function key**

Make your selection  
for polling modes

### Select a menu item

Make your selection  
for reservation type

### Select a menu item



Documents can be added only if an  
existing reserved document is  
selected


Make your selection

1. Replace the existing contents with the new contents
2. Add the new contents to the existing contents
3. Exit the menu without making any changes

### Select a menu item

## Cancel polling reservation

If you have reserved a document for polling, you can cancel the reservation as follows:

  
JOB CANCEL

1



  
START

1 . . . . . 0

15-MAR-00 WED 19:56  
  
RESIDUAL MEMORY 77%

JOB CANCEL  
1.POLLING RESERVE  
2.JOB NUMBER

JOB CANCEL  
[CENTER]: CANCEL  
[▲]:PREVIOUS SCREEN  
[▼]:NEXT SCREEN

after 5 seconds

POLLING RESERVE  
  
FILE NBR = 007

CANCEL?  
FILE NBR = 007  
1.YES  
2.NO

JOB CANCELLED

Standby mode

**Press the JOB CANCEL key**

Make your selection  
for cancel operation

**Select a menu item**

Make your selection  
for selecting the required job

The first available job is displayed.  
Please refer to [page 62](#) for details of the job  
format

**Select the job which you wish to cancel.**

**confirm with START**

Confirmation prompt

**Select a menu item**

The job is cancelled



## Single polling

 
If your fax partner has reserved a document for polling, you can poll the document using the procedure described in the following.

If you would like to use the **delayed polling facility**, you must first carry out the steps described on [page 103](#) before proceeding as follows.

1 ..... 0



START



START

1 ..... 0

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

LOAD DOCUMENT

IF POLLING  
PRESS [START]

POLLING  
SECURITY CODE ?  
1. YES  
2. NO

Standby mode

**Enter the fax number of the fax machine from which you wish to poll**

**confirm with START**

**...confirm with START**

Make your selection for polling protection  
1. with TOSHIBA code  
2. without polling protection

**Select a menu item**

without protection (A) with TOSHIBA code (B)

**A**

**without protection**

The polling procedure is stored as a job and carried out.

**B**

1 ..... 0



START

POLLING  
SECURITY CODE = ■■■■

**with Toshiba code**

**Enter the TOSHIBA code**

**...confirm with START**

 
The polling procedure is stored as a job and carried out.

## Multiple polling

It is not only possible to poll documents from a *single* fax machine; you are also able to use your fax machine to poll documents from *several* fax machines. Direct-dialling numbers, one-touch dial numbers and freely assignable numbers (max. 100) can be grouped in any combination to form a **polling group**.



If you wish to use the delayed multiple polling facility you must first carry out the steps described on **page 103** before proceeding as described in the following.



POLLING



1



MULTI



START



START

1 . . . . . 0

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

POLLING

1. POLLING  
2. POLLING RESERVE  
3. PROG. CONT. POLL.

MULTI POLLING 000  
ENTER TEL NUMBER,  
SPEED DIAL KEY OR  
ONE TOUCH KEY

MULTI POLLING  
[▲] TO PREVIOUS  
ENTER MORE OR  
PRESS [START]

MULTI POLLING  
SECURITY CODE ?  
1. YES  
2. NO

Standby mode

**Operate the Menu function template**

**Press the corresponding function key**

Make your selection  
for polling modes

**Select a menu item**

**Press the MULTI key**

Make your selection  
for fax number (**page 38**),  
Alphabet dialling (**page 43**),  
One-touch dialling (**page 44**),  
Telephone directory (**page 45**),  
group (**page 47**)

**confirm with START**

(depending on selected action)

Make your selection  
for further group elements  
(Previously entered dial numbers can be  
called up and edited or deleted with the  
control key ▲)  
- or -

**...confirm with START**

Make your selection  
for polling protection  
1. with TOSHIBA code  
2. without polling protection

**Select a menu item**

without protection (A) with TOSHIBA code  
(B)

**Continued on next page.**

**A****without protection (A)**

Multiple polling is stored and carried out as a job.

**B**

① ..... ②



START

MULTI POLLING

SECURITY CODE =

■■■■

**with TOSHIBA code (B)**

Make your selection **Operate the Menu function template**


**Enter the TOSHIBA code**

**Confirm with START**

Multiple polling is stored and carried out as a job.

## Cancel polling

The process of polling a document is also a job. Proceed as follows if you wish to cancel this polling job:

  
JOB CANCEL

1



  
START

  
START

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 77%

JOB CANCEL  
1.POLLING  
2.JOB NUMBER

JOB CANCEL  
[ENTER]: CANCEL  
[▲]:PREVIOUS SCREEN  
[▼]:NEXT SCREEN

after 5 seconds

POLLING  
12345678  
15-MAR-00 19:33  
FILE NBR = 018

POLLING  
998887766  
16-MAR-00 19:45  
FILE NBR = 017

CANCEL?  
FILE NBR. = 017  
1.YES  
2.NO

Standby mode

**Press the JOB CANCEL key**

Cancel menu is displayed

**Select a menu item**

Make your selection  
for selecting the required polling job

The first available polling job is displayed.

**Select the job which you wish to cancel.**

**...confirm with START**

 
Confirmation prompt

**...confirm with START**

Selected polling job is cancelled

## Program Continous Polling

The polling procedure is automated with the program continuous polling. During a defined period, your fax machine calls one or more stations in order to poll a document from the station. It is also possible for several procedures to be carried out during the day.




POLLING



3

 1 ..... 0



START

 
1 ..... 0



START



to



START

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

POLLING

1.POLLING

2.POLLING RESERVE

3.PROG. CONT. POLL.

PROG. CONT. POLL

INTERVAL=(10-70) MIN  
00

PROG. CONT. POLL

TIME PERIOD =  
08:00 - 17:00

PROG. CONT. POLL.  
[▲▼] FOR SETTING  
SCHEDULE

MON - FRI

Standby mode

**Operate the Menu function template**

**Press the corresponding function key**

Make your selection  
for polling modes

**Select a menu item**

Make your selection  
for the period after which the polling  
attempt is to be repeated (enter data in  
steps of 10 minutes)

**Enter the periods**

**confirm with START**

Make your selection for the period during  
which program continuous polling is  
active.  
(Move the cursor using the ◀/▶ keys)

**Enter the period**

**confirm with START**

Make your selection for the period of the  
week in which program continuous polling  
is active (from-to). Use the ◀/▶ keys to  
move the from-to cursor. Use the ▲/▼  
keys to set the day.

 
**Enter the period of the week**

**confirm with START**

Continued on next page.



START



START

PROG. CONT. POLL  
ENTER TEL NUMBER,  
SPEED DIAL OR  
ONE TOUCH KEY

PROG. CONT. POLL  
SECURITY CODE      ■■■■

Make your selection  
for the numbers of fax partners to be served  
with program continuous polling.

**Enter...**

- User-defined numbers (see [page 38](#))
- Alphabet dialling numbers (see [page 43](#))
- Telephone directory function (see [page 44](#))
- One-touch dial keys (see [page 45](#))

**Confirm with START**

Make your selection  
for polling protection


If no polling protection is wished, you can  
skip the prompt with START.

**Enter the TOSHIBA code****Confirm with START**

Program continuous polling is stored and  
carried out as a job.

## Reverse direction

With the reverse direction facility, the machine automatically polls another document after having transmitted a document. For this to be effective, a document must have also been reserved for polling on the receiver side.

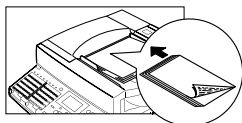

**A**



START

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

TURNAROUND POLL  
SECURITY CODE ?

1.YES  
2.NO

RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

Standby mode

**Load original**

**Remember: Printed side face down**

Document ready

**Start the menu**

The first 4 menu items are displayed.

**Select a menu item**

Make your selection

for polling protection

1. with TOSHIBA code
2. without polling protection

**Select a menu item**

without protection (A) with TOSHIBA code  
(B)

**without protection (A)**

Make your selection

for fax number, alphabet dialling, one-touch  
dial or telephone directory

**...confirm with START**

The document is read into memory (see  
page 38)

When contact is made with the fax partner,  
the document is transmitted and the  
document is subsequently polled.

Continued on next page.

**B**

① ..... ②



START



START

TURNAROUND POLL

SECURITY CODE = ■■■■

RESIDUAL MEMORY 100%  
ENTER TEL NUMBER**with TOSHIBA code (B)**

Make your selection for TOSHIBA Code (4-digit number)

**Enter the TOSHIBA code****confirm with START**

Make your selection  
for fax number, alphabet dialling, one-touch  
dial or telephone directory

**...confirm with START**

The document is read into memory (see  
**page 38**)

When contact is made with the fax partner,  
the document is transmitted and the  
document is subsequently polled.



## STORE NUMBERS

### Alphabet dial memory

The alphabet dial facility enables you to enter a single "address" instead of the fax number of your partner (which is frequently a long number). This "address" can be any number between 1 and 999. The real fax number is stored under this "address". With frequently used fax numbers, the alphabet dial facility enables you to save time.

A further component of the alphabet dial memory is the alternative fax number (second number). It is dialled if no fax connection is established under the normal fax number. Entry of the 2<sup>nd</sup> fax number is not absolutely necessary, but it must differ from the 1<sup>st</sup> fax number.

300 alphabet dial memories are available and the name as well as the number of your partner can be stored in this memory. You can use up to 20 characters of your choice in this memory (see [page 15](#) enter the user name).

 
In addition to numbers and names, it is also possible for additional options to be assigned to an alphabet dial memory position (see [page 79](#), Alphabet dial options).

Example: Alphabet dial 421:

999	Fax number (128)
998	1234567890
...	
422	2. Fax number (128)
421	0987654321
420	
...	
5	Name (20)
4	BBROWN
3	
2	Options
1	2. DELAYED COMM 3. TX REPORT 4. LINE MONITOR 5. TX ADDRESS
	Alphabet dial memory



- Please note that, in order to obtain an outside line (when equipment is connected to a PABX), the "\*" must be saved before the actual fax number.
- An error message is displayed if the user attempts to store an identical fax number in the alphabetic dialling memory. This facility prevents identical fax numbers from being stored (not applicable for alternative numbers).




TEL LIST ENTRY



1

 1 ..... 0



START

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

TEL LIST ENTRY  
1. ABB NUMBERS  
2. GROUP NUMBERS  
3. ONE TOUCH KEYS

ENTER ABB NUMBER  
OR PRESS  
[BACK] : TO PREVIOUS  
[STOP] : TO COMPLETE

**Enter alphabet dial number**  
Standby mode

**Operate the Menu function template**

**Press the corresponding function key**  
The menu items are displayed.

**Select a menu item**

Make your selection  
Enter alphabet dial number(1-999)

 
**Enter the alphabet dial number**  
Example: 7  
Use the ◀ key to correct data input

**...confirm with START**

*Continued on next page.*



1 ..... 0



START

1 ..... 0



START

1 ..... 0



START



STOP

ABB. NBR = 007  
ID NAME = (MAX20)  
■

ABB. NBR = 007  
TEL NUMBER=(MAX 128)  
■

ABB. NBR = 007  
TEL NUMBER=(MAX 128)  
1234567890

ABB. NBR = 007  
2ND TEL NBR=(MAX128)  
■

COMM OPTION?  
1.YES  
2.NO


ABB. NBR = 007  
PRESS ONE TOUCH KEY  
TO ENTER OR  
[ENTER] TO SKIP

ENTER ABB NUMBER  
OR PRESS  
[BACK] : TO PREVIOUS  
[STOP] : TO COMPLETE

Make your selection  
for name

**Enter the name**  
(see [page 15](#) for diagram)

Make your selection  
for first fax number

**Enter the fax number**  
For obtaining the outside line  
 Use the ◀ key to correct data input  
(when equipment is connected to  
PABXs), please enter the “\*” key  
before the actual number.

**...confirm with START**

Make your selection  
for alternative fax number

**Enter the alternative fax number**  
-and / or-  
**skip with START**

Make your selection  
for options  
1. See alphabet dial options [page 79](#)  
2. See below

**Select a menu item**

Assign the alphabet dial number to the one-  
touch dial key (see [page 82](#))

For further procedure, see under “one-touch  
dial keys”  
-or-  
**...confirm with START**

Make your selection  
further alphabet dial numbers  
-or-

**Press STOP, return to standby mode**

## Alphabet dial options

Apart from numbers and names, it is also possible for additional options to be assigned to an alphabet dial memory position:

### Delayed Comm (2)

The fax partner is linked to a specific transmission time with this option, e.g. for fax partners in other time zones; this ensures that the documents always arrive during business hours.

### TX report (3)

Irrespective of the basic setting for printing out the transmission report (see [page 89](#)), the facility for printing out the transmission report can be activated or deactivated in relation to a specific fax partner.

### Line Monitor (4)

If the listening-in option is activated for a fax transmission, the call establishment attempt is played back via the built-in speaker. This provides the operator with an additional acoustic check of the call establishment procedure. This is useful whenever a connection is not established. The cause is frequently an incorrect number or a fax machine which is not ready to receive.

### Quality TX (5)

When sending documents overseas or if an increased error ratio is encountered, you should lower the transmission speed in order to reduce the number of errors. Similar to a situation in traffic where speed is adjusted to the given conditions!



Please note that, when lower transmission speeds are used, the actual transmission time is longer.

### Sub addressing (6)

This operating mode is used for sending fax documents in PC networks. The fax number (the number of the fax server in the network) and also the subaddress of the workstation in the network must be entered to enable the fax document to be forwarded in the network (for further information, see [page 132](#)).

### Line Select (when a 2<sup>nd</sup> line is installed) (7)

Here, the public line (Line 1, Line 2) via which the document is to be transmitted to the assigned fax partner can be preselected.

1

COMM OPTION?

1. YES

2. NO

FAX OPTIONS

1. COMPLETE

2. DELAYED COMM

3. TX REPORT

**Procedure up to this menu item:**

[See page 78](#)

Make your selection  
for options

**Select a menu item**

Display the first options.

1. Quit option menu
2. Link specified delay
3. Activate/deactivate TX Report
4. Activate line monitoring
5. Reduce transmission speed
6. Transfer subaddress
7. Reserve specific line

## Modify ABB numbers

If you wish to modify the contents of an alphabet dial number, all you have to do is simply enter the corresponding alphabet dial number (see under "Alphabet dial number"). If this number has already been used, a further selection option is displayed.

All stored data can be overwritten or skipped with the START key.

(Example: ABB, NBR. 7, name TOSHIBA):



Error message appears if you try to store the same fax number again in the alphabet dial memory. This is to avoid storing equal numbers.

2



START



START



START

1 ..... 0

ABB NUMBER ENTRY  
ALREADY ASSIGNED  
ABB. NBR = 007  
TOSHIBA

after 2 seconds

ABB NUMBER ENTRY  
1. CANCEL  
2. MODIFY  
3. RETAIN

ENTER NAME  
  
ID NAME = (MAX20)  
TOSHIBA

ABB. NBR = 007  
  
TEL NUMBER=(MAX 128)  
1234567890

ABB. NBR = 007  
  
2ND TEL NBR=(MAX128)  
987654321

COMM OPTION?  
1. YES  
2. NO

ABB. NBR = 007  
PRESS ONE TOUCH KEY  
TO ENTER OR  
[ENTER] TO SKIP

### Procedure as described under "Enter alphabet dial number": See page 77

Display message for existing alphabet dial number

Menu displayed when alphabet dial number already exists

1. Delete
2. Modify
3. Retain

### Select a menu item

Option for editing the name  
-and/or-

### ...confirm with START

Option for editing the first fax number  
-and/or-

### ...confirm with START

Option for editing the second fax number  
-and/or-

### ...confirm with START

Option for editing  
for options  
YES: See alphabet dial options  
NO: See below

### Select a menu item

Assign the alphabet dial number to the one-touch dial key (see page 82)

Continued on next page.



START



STOP

```

ENTER ABB NUMBER
OR PRESS
[BACK] : TO PREVIOUS
[STOP] : TO COMPLETE

```

...confirm with **START**

Make your selection  
further alphabet dial numbers

-or-

Press **STOP**, return to standby mode

## Delete ABB numbers

If you want to delete ABB numbers just enter them.

If this number has already been used, a further selection option is displayed.

(Example: ABB, NBR. 7, name TOSHIBA):

```

ABB NUMBER ENTRY
ALREADY ASSIGNED
ABB. NBR = 007
TOSHIBA

```

after 2 seconds

```

ABB NUMBER ENTRY
1. CANCEL
2. MODIFY
3. RETAIN

```

```

ABB NUMBER ENTRY
ABB NUMBER = 007
CANCELLED

```

after 2 seconds

```

ENTER ABB NUMBER
OR PRESS
[BACK] : TO PREVIOUS
[STOP] : TO COMPLETE

```

**Procedure as described under "Enter alphabet dial number":** See page 77

Display message for existing alphabet dial number

Menu displayed when alphabet dial number already exists

1. Delete
2. Modify
3. Retain

**Select a menu item**

Make your selection  
further alphabet dial numbers

-or-

Press **STOP**, return to standby mode

1



STOP

# One-touch dial keys

One-touch dialling provides you with a very easy method of dialling the number of your partner. You can assign any fax numbers to 73 keys \*. Simply press a single button to start the dialling procedure.

\*) The one-touch dial keys of your fax machine have double assignments. As soon as you operate the corresponding one-touch dial function template, additional number memory spaces are available.


Two options are available.

## 1. Direct configuration of one-touch dial keys



- Apart from numbers and names, it is also possible for additional options to be assigned to a one-touch dial key (see [page 79](#), Alphabet dial options).
- If the operator attempts to save an identical fax number under a one-touch dial key, the system displays an error message. This prevents identical fax numbers from being saved.


Criteria which can be assigned to a one-touch dial key:

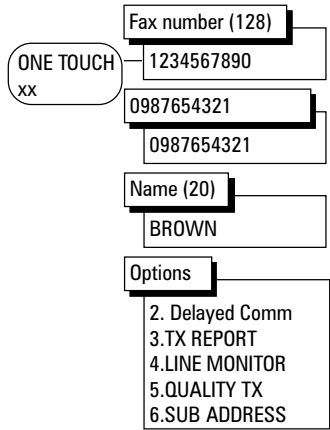

## 2. Assign alphabet dial number to a one-touch dial key

When the fax number has been stored in an alphabet dial memory, it can be additionally assigned to a one-touch dial key. This assignment is not subject to any restrictions, i.e. any one-touch dial key can be used (see [page 82](#)).

User-defined assignment of alphabet dial memories to one-touch dial keys:

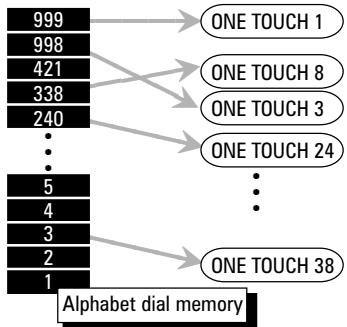

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

TEL LIST ENTRY  
1.ABB NUMBERS  
2.GROUP NUMBERS  
3.ONE TOUCH KEYS

**Save fax number directly on one-touch dial key**  
Standby mode


**Operate the Menu function template**

 **Press the corresponding function key**


The menu items are displayed.

Continued on next page.

3



1 2 3...

 

A B C...



START

1 ..... 0



START

1 ..... 0



START

1 ..... 0



STOP

ENTER ONE TOUCH KEY  
OR PRESS  
[BACK] : TO PREVIOUS  
[STOP] : TO COMPLETE

ONE TOUCH = 40  
ID NAME = (MAX20)  
■

ONE TOUCH = 40  
ID NAME = (MAX20)  
BLUME

ONE TOUCH = 40  
TEL NUMBER=(MAX 128)  
■

ONE TOUCH = 40  
TEL NUMBER=(MAX 128)  
1234567890

ONE TOUCH = 40  
2ND TEL NBR=(MAX128)  
■

COMM OPTION?  
1. YES  
2. NO

ENTER ONE TOUCH KEY  
OR PRESS  
[BACK] : TO PREVIOUS  
[STOP] : TO COMPLETE

**Select a menu item**

Make your selection

**Operate the corresponding function template and press the desired one-touch dial key:**

Example: 40

Make your selection  
for name

**Enter the name**(see [page 15](#) for diagram)**...confirm with START**

Make your selection  
for first fax number

**Enter the fax number****For obtaining the outside line**

Use the ◀ key to correct data input



(when equipment is connected to  
PABXs), please enter the “\*” key  
before the actual number.

**confirm with START**

Make your selection  
for alternative fax number

**Enter the alternative fax number**

-and / or-

**skip with START**

Make your selection  
for options

1. See alphabet dial options [page 79](#)
2. See below

**Select a menu item**

Make your selection  
for further one-touch dial keys

-or-

Press STOP, return to standby mode

## Cancel one-touch dial keys

If you wish you cancel the contents of a one-touch dial key, simply enter the corresponding one-touch dial key in the menu (see under one-touch dial keys). If this one-touch dial key is already being used, a further selection option is displayed (example: one-touch dial key 1, name TOSHIBA):

1



ONE TOUCH = 01  
ALREADY ASSIGNED  
ONE TOUCH = 01  
TOSHIBA

after 2 seconds

ONE TOUCH KEY ENTRY  
1. CANCEL  
2. RETAIN

ONE TOUCH KEY ENTRY  
  
ONE TOUCH = 01  
CANCELLED

after 2 seconds

ENTER ONE TOUCH KEY  
OR PRESS  
[BACK] : TO PREVIOUS  
[STOP] : TO COMPLETE

Refer to **page 82** for procedure as described under “One-touch dial keys”

Display message for existing one-touch dial key

Menu displayed if one-touch dial key already exists

Select a menu item

Programming of one-touch dial key is cancelled

Make your selection for further one-touch dial keys

-or-

Press **STOP**, return to standby mode





Define groups

If you have a fixed number of partner to whom you frequently send broadcast transmissions, the stored broadcast facility is just what you need.

You are permitted to define 50 different groups, whereby each group can be assigned a group number from 1 - 1999 and a name consisting of max. 20 characters.

Each group can contain max. 373 fax partners, and these must be stored either in the alphabet dial memory or under the one-touch dial keys.

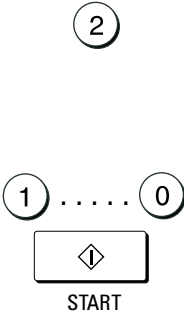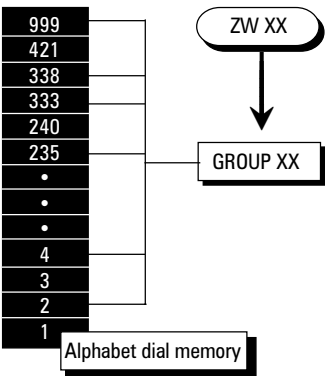

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

TEL LIST ENTRY

1.ABB NUMBERS

2.GROUP NUMBERS

3.ONE TOUCH KEYS

ENTER GROUP NUMBER

OR PRESS

[BACK] : TO PREVIOUS

[STOP] : TO COMPLETE

GROUP NBR = 0444

GROUP NAME=(MAX 20)

■

ENTER NAME

GROUP NAME=(MAX 20)

SUPERGROUP

Define groups

Standby mode

Operate the Menu function template

Press the corresponding function key

The menu items are displayed.

Select a menu item

Make your selection

Group number (1 - 1999)

Enter group number

Example: 444

confirm with START

Make your selection

for group name

Enter group name

(see [page 15](#) for diagram)

...confirm with START

Continued on next page.



START



START



START



STOP

GROUP NBR = 0444  
ENTER ABB NBR OR OT  
[ENTER] TO COMPLETE

GROUP NBR = 0444  
ENTER ABB NBR OR OT  
[ENTER] TO COMPLETE

GROUP NBR = 0444  
PRESS ONE TOUCH KEY  
TO ENTER OR  
[ENTER] TO SKIP

ENTER GROUP NUMBER  
OR PRESS  
[BACK] : TO PREVIOUS  
[STOP] : TO COMPLETE

Make your selection  
for group partner  
alphabet dial number -or-one-touch dial  
key

**confirm with START**

Make your selection  
for further group partner  
-or-

**...confirm with START**

Make your selection  
for one-touch dial key to which the group  
is assigned.  
-or-


**confirm with START**

Make your selection  
for further groups  
-or-

**Press STOP, return to standby mode**

Edit groups

If you wish to edit the contents of a group, simply enter the corresponding group number (see under “Define groups”). If this group number already exists, a further selection option is displayed. All stored data can be overwritten or skipped using the START key.  
(Example: group number: 444, name: Supergroup)

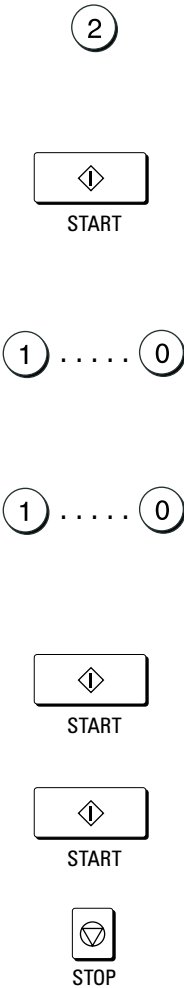

GROUP NUMBER ENTRY  
ALREADY ASSIGNED  
GROUP NBR = 0444  
SUPERGROUP

after 2 seconds

GROUP NUMBER ENTRY  
1.CANCEL  
2.MODIFY  
3.RETAIN

GROUP NBR = 0444  
  
GROUP NAME=(MAX 20)  
SUPERGROUP

GROUP NBR = 0444  
  
ENTER ABB NBR OR OT  
[ENTER] TO COMPLETE

ABB NBR = 007  
CANCEL?  
1.CANCEL  
2.RETAIN

GROUP NBR = 0444  
  
ENTER ABB NBR OR OT  
[ENTER] TO COMPLETE

GROUP NBR = 0444  
PRESS ONE TOUCH KEY  
TO ENTER OR  
[ENTER] TO SKIP

ENTER GROUP NUMBER  
OR PRESS  
[BACK] : TO PREVIOUS  
[STOP] : TO COMPLETE

Refer to **page 85** for procedure as described under “Define groups”  
Display message for existing group number

Menu displayed if group number already exists

Select a menu item

Make your selection  
for new group name  
-or-

...confirm with START

Make your selection  
for group partner  
If the operator enters existing group  
partners, they can be cancelled (see  
following example)

Enter an alphabet dial number

Make your selection  
Cancel the selected group partner  
1: YES  
2: NO

Select a menu item

Make your selection  
for further group partner  
-and/or-

confirm with START

Make your selection  
for one-touch dial key to which the group is  
assigned.  
-or-

Confirm with START

Make your selection  
for further groups  
-or-

Press STOP return to standby mode

## Cancel groups

If you wish to cancel a group, simply enter the corresponding group number (see under "Define groups"). If this group number already exists, a further selection option is displayed.  
(Example: group number: 444, name: Supergroup)

1



GROUP NUMBER ENTRY  
ALREADY ASSIGNED  
GROUP NBR = 0444  
SUPERGROUP

after 2 seconds

GROUP NUMBER ENTRY  
1. CANCEL  
2. MODIFY  
3. RETAIN

GROUP NBR = 0444  
  
CANCELLED

after 2 seconds

ENTER GROUP NUMBER  
OR PRESS  
[BACK] : TO PREVIOUS  
[STOP] : TO COMPLETE

**Refer to page 85 for procedure as described under "Define groups"**

Display message for existing group number

Menu displayed if group number already exists

**Select a menu item**

Group is cancelled

Make your selection  
for further groups

-or-

**Press STOP, return to standby mode**

Program selection list

The program selection list provides you with a complete overview of the menu system for your fax machine. It is the only list which can be selected via the main menu item.



5

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

PRINTING LIST

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

The report is printed.

Transmission reports

The transmission reports provide you with extensive and individual information concerning the various transmission jobs of your fax machine. You can use a special menu to adjust the appearance of these reports to meet your specific requirements.

ALWAYS	The transmission report is always printed after every transmission.
ON ERROR	The transmission report is printed out only if a transmission error occurs.
OFF	The transmission report is never printed out.
PRINT 1ST PG IMAGE?	The first page of the document can be printed in reduced form on the transmission report. This means that the transmission report can easily be allocated to the document.



4 / 4 / 0 2

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Continued on next page.

0 2

1

1 . . . . .

1 . . . . . 0

  
STOP

01.TX REPORT
02.MEMORY-TX REPORT
03.MULTI-ADD REPORT
04.MULTIPOLL REPORT

SET MEMORY TX REPORT
1.ALWAYS
2.ON ERROR

PRINT 1ST PG IMAGE?
1.ON
2.OFF

A5 SIZE PRINT
1.ON
2.OFF

Selection menu for various transmission (TX) reports:  
1. TX report for Direct transmission  
2. TX report for Memory transmission  
3. TX report for Multiple Address transmission  
4. Multipoll report

**Select a menu item**  
(Example: Memory-TX Report)

Selection menu for Memory-TX Report options:  
1. Memory-TX report always  
2. Memory-TX report only in the event of a transmission error

**Select a menu item**  
(Example: TX report - Always)

Selection menu for print-out with image  
1. TX report with image  
2. TX report without image

**Select a menu item**

Selection menu for A5 print-out (only with single-sheet feed installed) \*

**Select a menu item**

**Press STOP, return to standby mode**

\*) Please ensure that the format selector switch of the single-sheet feed is set to "Variable" if you wish to print an A5 TX report from the single-sheet feed. If a different format is selected, the TX report is automatically printed from the top paper cassette.

The various transmission reports and related options:

TX REPORT	<p>Transmission report printed out after every transmission in the “direct transmission mode” (see <a href="#">page 42</a>). Print-out in A5 format also possible with single-sheet feed installed.</p> <p>Setting:</p> <ul style="list-style-type: none"> <li>• Always printed out</li> <li>• Printed out only if transmission is errored</li> </ul>
MEMORY-TX REPORT	<p>Printed out after every memory transmission. Print-out in A5 format also possible with single-sheet feed installed.</p> <p>Setting:</p> <ul style="list-style-type: none"> <li>• Always printed out</li> <li>• Printed only if transmission is errored</li> <li>• Printed with/without image of document</li> </ul>
MULTI-ADD REPORT	<p>Printed out after entire broadcast has been completed. Setting:</p> <ul style="list-style-type: none"> <li>• Always printed out</li> <li>• Printed only if transmission is errored</li> <li>• Printed with/without image of document</li> </ul>
MULTI POLL REPORT	<p>Printed out after entire multiple polling has been completed. Setting:</p> <ul style="list-style-type: none"> <li>• Always printed out</li> <li>• Printed only if transmission is errored</li> <li>• Never printed out</li> </ul>
RELAY ORG. REPORT (Relay TX list of the relay originator)	<p>This list is generated by a relay as soon as the document has been transmitted to the relay machine. The relay settings are based on this list.*</p> <ul style="list-style-type: none"> <li>• Always printed out</li> <li>• Printed only if transmission is errored</li> </ul>
RELAY STN REPORT (Relay TX list of the relay machine)	<p>This list is generated by the <b>relay machine</b> as soon as the document has been transmitted to the end machines. This list is equivalent to a group transmission report.*</p> <ul style="list-style-type: none"> <li>• Always printed out</li> <li>• Printed out only if transmission is errored</li> </ul>
RELAY END REPORT (Relay TX list of the end machine)	<p>This list is a copy of the “Relay TX list of the end machine”. If the relay box is installed accordingly, this list is faxed to the relay originator following completion of the relay transmission. *</p> <ul style="list-style-type: none"> <li>• Always printed out</li> <li>• Printed only if transmission is errored</li> <li>• Never printed out</li> </ul>

\*) For more detailed information, please refer to the brochure: “Mailboxes and Relays”.

## Transmission report, memory TX report

## MEMORY TRANSMISSION REPORT

PAGE : 001  
 TIME : 08.FEB.00 17:11  
 TEL NUMBER1 : +44-1234567890  
 NAME : TOSHIBA MARKETING DP120F

FILE NUMBER : 084  
 DATE : 08.FEB.00 17:11  
 TO- : 541  
 DOCUMENT PAGES : 01  
 START TIME : 08.FEB.00 17:11  
 END TIME : 08.FEB.00 17:11  
 SENT PAGES : 001  
 STATUS : OK  
 FILE NUMBER : 084 \*\*\* SUCCESSFUL TX NOTICE \*\*\*

 


The entries and their meanings:

FILE NUMBER:	Corresponds to the job number. This job number is displayed in the transmission journal (q.v.) and also under the entry "F-xxx" in the transmission header on the inbound copy.
DATE	The date (and the time) when the job was placed in the fax machine.
TO / FROM	Fax number entered on the transmitted fax.
DOCUMENT PAGES	Number of document pages scanned into the machine.
START TIME	Start of connection time.
END TIME	End of connection time.
SEND PAGES	Number of pages actually transmitted.
STATUS	see: error codes <b>page 142</b> .



You can also subsequently request the transmission report for the previous 40 transmissions (first document not illustrated):



PREV.TX RPT.



COPY

15-MAR-00 WED 19:56

RESIDUAL MEMORY 77%

PREVIEW TX REPORT  
[COPY]: PRINT REPORT  
[▲]: PREVIOUS SCREEN  
[▼]: NEXT SCREEN

after 5 seconds

FILE NBR = 091  
+44 123 234567  
21-03 19:33  
OK 01

FILE NBR = 088  
+44 123 234567  
21-03 04:25  
OK 01

Standby mode

**Operate the Menu function template**

**Press the corresponding function key**

Make your selection  
for selecting the required entry

The most recent available entry is  
displayed.

**Select the entry which you wish to print.**

**Press the COPY key**

The required transmission report is printed  
out

## Multi transmission report

After the successful multi-adress transmission your fax will print a list of all fax partys.

### MULTI TRANSMISSION REPORT

PAGE : 001  
TIME : 08.FEB.00 17:11  
TEL NUMBER1 : +44-1234567890  
NAME : TOSHIBA MARKETING DP120F

FILE NUMBER : 085  
DATE : 08.FEB.00 17:11  
DOCUMENT PAGES: 001  
START TIME: 08.FEB.00 17:11  
END TIME: 08.FEB.00 17:17

SUCCESFUL				PAGES SENT	
ONE TOUCH NUMBER					
09	GROUP	0001	OT	03	36 000
				04	33 000
			ABB.	700	33 000

UNSUCCESSFUL

## Multi polling report

When the multi-polling procedure has been completed, the machine lists the fax partners for whom the polling procedure was successful and the fax partners for whom the polling procedure was not successful. This list is always printed out when the multi-polling procedure has been completed.

### GRUPPENABRUF-LISTE

PAGE : 001  
TIME : 08.FEB.00 17:11  
TEL NUMBER1 : +44-1234567890  
NAME : TOSHIBA MARKETING DP120F

FILE NUMBER : 003  
DATE : 08.FEB.00 17:11  
START TIME: 08.FEB.00 17:11  
END TIME: 08.FEB.00 17:17

SUCCESFUL			
ONE TOUCH NUMBER			
09	GROUP	0001	OT
			ABB.


UNSUCCESSFUL

## Transmission and reception journal

Your fax machine will record messages which you transmit or receive in the form of transmission and reception journals. These lists are printed out automatically after every 150 transmissions. You can also manually request the journal at any time.

You should file this list as a record of the document jobs; if your fax machine has to be serviced, this list can provide valuable assistance for to cure the problem.

The journal output can be modified to your specifications with the following steps:

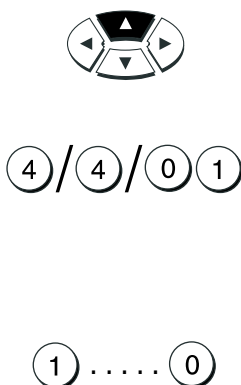

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

JOURNAL  
01.MANUAL  
02.AUTO

Standby mode

### Start the menu

The first 4 menu items are displayed.

### Select a menu item

The journal options are displayed

- 1: Printed out only if the JOURNAL key\* is pressed
- 2: Printed out automatically every 150 jobs

### Select a menu item



MANUAL OUTPUT  
1.TX & RX JOURNAL  
2.TX JOURNAL  
3.RX JOURNAL

### \*) For "manual" output

Output options are displayed

- 1: Output of transmission and reception journal
- 2: Output of transmission journal
- 3: Output of reception journal

### Select a menu item

Continued on next page.



15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

PRINT NUMBER  
1.1-50 (1 PAGE)  
2.1-100 (2 PAGES)  
3.1-150 (3 PAGES)

Manual output of journal:  
Standby mode

Operate the Menu function template

Press the corresponding function key

Selection menu for journal output  
1. Output of the last 50 jobs  
2. Output of the last 100 jobs  
3. Output of the last 150 jobs

Select a menu item  
Output of journal

TRANSMISSION JOURNAL

PAGE : 001  
TIME : 08.FEB.00 17:11  
TEL NUMBER1 : +44-1234567890  
NAME : TOSHIBA MARKETING DP120F  
SCAN COUNT : 619 (0000026B)  
PRINT COUNT : 724 (000002D4)  
DRUM COUNT : 7230 (00001C3E)

NBR.	FILE	NBR	DATE	TIME	DURATION	PGS	TO	DEPT	NBR	ACCOUNT	MODE	STATUS
001	006		02-FEB	10:28	00/14	001	+4421135				EC 603	NG B0

RECEPTIONJOURNAL

PAGE : 001  
TIME : 08.FEB.00 17:11  
TEL NUMBER1 : +44-1234567890  
NAME : TOSHIBA MARKETING DP120F  
SCAN COUNT : 619 (0000026B)  
PRINT COUNT : 724 (000002D4)  
DRUM COUNT : 7230 (00001C3E)

NBR.	FILE	NBR	DATE	TIME	DURATION	PGS	FROM	DEPT	NBR	ACCOUNT	MODE	STATUS
001	006		02-FEB	10:28	00/14	001	+4421135				EC 603	NG B0

Meaning of the items in the journal:

NBR.	Every job in the transmission and reception journal is given a sequential number (001-999). The number in the transmission journal is displayed under the entry: "T- xxx" in the transmission header on the inbound copy. Where transmission jobs are grouped together (see <a href="#">page 40</a> ), these positions are displayed under an identical number.
FILE NBR	Corresponds to the job number. This job number is displayed under the entry: "F- xxx" in the transmission header of the inbound copy.
DATE	Date of the job
TIME	Time of the job
DURATION	Active duration of the job (minutes/seconds)
PGS	Number of transmitted or received pages
TO/FROM	Fax number of the fax partner. A diamond (◆) is displayed in front of the number if an alternative number (see <a href="#">page 77</a> ) has been selected
DEPT. NBR	Department code (see <a href="#">page 112</a> ), only displayed if journal is printed out under the master code.
ACCOUNT	Cost centre code (see <a href="#">page 112</a> )
MODUS	Transmission mode (see <a href="#">page 97</a> )
STATUS	see: error codes <a href="#">page 142</a>

### Additional details relating to the operating data of the fax machine:

Scan count: Number of scanned documents  
 Print count: Total number of printed pages  
 Drum count: Number of printed pages (x10), in relation to the current drum unit

### Codes used for transmission modes:

HS TOSHIBA High Speed mode  
 G3 Group-3 transmission  
 EC ECM error correction  
 EX ECM with abbreviated protocol  
 P Polling  
 | Transmission from PC  
 ◆ Transmission via 2<sup>nd</sup> line (optional)

	1. Digit (Bit/Sec = BPS)	2 <sup>nd</sup> digit (resolution)	3 <sup>rd</sup> digit (Mode)
0	2400	Standard 8 x 3,85	Modified Huffman (MH)
1	4800	Fine 8 x 7.7	Modified READ (MR)
2	7200	Superfine 8 x 15.4	Modified READ (MMR)
3	9600	-	JBIG coding
4	12000	Ultrafine 16 x 15.4	
5	14400		
6	V.34 (Super G3)		

### Example:

Code 522: Transmission with 14400 BPS / U-FINE/ MMR-coding

## Reservation list

This list illustrates the status of stack memory (see [page 39](#)). It contains all jobs which have not yet been completed.



15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

Standby mode

**Operate the Menu function template**

**Press the corresponding function key**  
The reserve list is printed out

### RESERVATION LIST

PAGE : 001  
TIME : 08.FEB.00 17:11  
TEL NUMBER1 : +44-1234567890  
NAME : TOSHIBA MARKETING DP120F

TX/RX	FILE NBR	FUNCTION	PGS	DATE	TIME	TO
	087	POLLING RX		08.FEB.00	17:11	FAX1

POLL/FAX MAILBOX	FILE NBR	FUNCTION	PGS	DATE	TIME	TO
------------------	----------	----------	-----	------	------	----

RECOVERY TX	FILE NBR	FUNCTION	PGS	DATE	TIME	TO
-------------	----------	----------	-----	------	------	----

PC JOB	FILE NBR	FUNCTION	PGS	DATE	TIME	TO
--------	----------	----------	-----	------	------	----

## The function list

This list provides information concerning all settings of the fax machine. They correspond with the settings which you have made. Keep this list for any service work which may be necessary.



2 / 1

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

Standby mode

**Start the menu**  
The first 4 menu items are displayed.

**Select a menu item**  
The function list is printed out

FUNCTION LIST

PAGE	:	001	
TIME	:	08.FEB.00 17:11	
TEL NUMBER1	:	+44-1234567890	
TEL NUMBER2	:	+44-0987654321	
NAME	:	TOSHIBA MARKETING DP120F	
1 EXCHANGE TYPE	:	PABX	RX SETTINGS
ACCESS TYPE	:	DIGIT	36 SECURE RX : OFF
ACCESS DIGIT	:	0	37 MEMORY RX : ON
2 KEYBOARD TYPE	:	QWERTY	38 RX REDUCTION : ON
3 MEMORY SIZE	:	8MB	39 DISCARD : ON
			40 REV. ORDER PRINT : ON
MACHINE SETTING			41 PRIVILEGED RX : ON
4 RINGER VOLUME	:	4	42 RTI : OFF
5 ALARM VOLUME	:	2	43 RX MULTI COPY : 1
6 KEY TOUCH VOLUME	:	4	
7 MONITOR VOLUME	:	4	REPORT & LIST
8 SUPER POWER SAVER	:	MANUAL	JOURNAL
9 PRINTER POWER SAVER	:	ON	44 MANUAL : TX/RX
10 START TIME	:	00:00	45 AUTO : ON
END TIME	:	00:00	FAX/POLL/RELAY REPORTS
11 FAX SEPARATOR PAGE	:	OFF	46 COMMUNICATION REPORT: ALWAYS
12 COPY SEPARATOR PAGE	:	OFF	47 A5 SIZE PRINT : OFF
13 PC SEPARATOR PAGE	:	OFF	48 MEMORY TX : ALWAYS (IMAGE)
14 SEPARATOR PAGE TRAY	:	AUTO	A5 SIZE PRINT : OFF
15 ACCOUNT CODE	:	OFF	49 MULTI TX : ALWAYS (IMAGE)
16 PRINT DENSITY	:	0	50 MULTI POLL : ALWAYS
17 DOCUMENT LENGTH	:	1 M	51 RELAY ORIGINATOR : ALWAYS (IMAGE)
18 LINE MONITOR	:	OFF	52 RELAY STATION : ALWAYS (IMAGE)
19 RECEIVE INTERVAL	:	3 MIN	53 RELAY DESTINATION : ALWAYS (IMAGE)
20 ECM	:	ON	RECEPTION LIST
21 DOCUMENT MODE	:	STD	54 LOKAL MAILBOX : OFF
22 KONTRAST	:	NORMAL	55 REMOTE MAILBOX : ON
23 COLLATED COPY	:	OFF	56 RELAY STATION : ON
24 LETTER HEAD PAPER	:	OFF	
25 REDIAL MODE INTERVAL	:	1 MIN	REMOTE SERVICE
26 REDIAL MODE COUNTER	:	0	57 REMOTE ACCESS : OFF
27 AUTO RECEIVE MODE	:	AUTO	58 DOWNLOAD : NO JOB
28 RING DELAY	:	2	
29 AUTO RECEIVE MODE (LINE2)	:	TX/RX	59 RDC PASSWORD :
			TOTAL PAGE
TX SETTINGS			60 SCAN : 619
30 MEMORY TX	:	ON	61 PRINT : 727
31 SECURITY TX	:	OFF	
32 COVER SHEET	:	OFF	
33 RECOVERY TX	:	OFF	
34 TTI	:	INSIDE	
35 SEND AFTER SCAN	:	OFF	

No.		PAGE	No.		PAGE
1	Type of telephone connection (for PABXs: type of obtaining outside line /when outside line obtained via a digit: digit for obtaining outside line)	18	28	Number of rings before fax machine connects to line	22
			29	RX status of 2 <sup>nd</sup> line	134
			30	Status of transmission memory	123
			31	Status of transmission security	126
2	Type of input of the alphanumeric keypad	--	32	Status of cover sheet function,	118
			33	Status of subsequent transmission	120
3	Size of memory expansion	11	34	Position of transmission header	104
4	Call ringing volume	109	35	Status of dialling when issuing job	131
5	Alarm signal volume (for fault signalling)	109	36	Status of secure RX	26
			37	Status of receive memory	25
6	Key touch volume	109	38	Status of receive reduction	23
7	Monitor volume	109	39	Discard off	23
8	Setting Super Power Saver	110	40	Status of reverse order print	31
9	Setting Printer Power Savers	110	41	Status of reception security	34
10	Time interval for printer Power Saver	110	42	Status of reception trailer	105
			43	Number of incoming copies	32
11	Status of fax separator	116	44	Journal output criteria for manual request	95
12	Status of the copy separator sheet	116	45	Status of automatic journal output	95
13	Status of the printer separator sheet	116	46	Status of TX report output	89
			47	Status of A5 TX report output	89
14	Cassette preset for the separator sheet	116	48	Status of transmission report for "memory transmission"	89
15	Status of cost centre mode	112	49	Status of group transmission report	94
16	Print density preset (toner volume)	128	50	Status of transmission report for "multiple polling"	94
17	Max. document length	122	51	Status of TX report in relay org. mode	89
18	Status of line monitoring	106	52	Status of relay transmission report	89
19	Preset for group dialling	127	53	Status of the TX report to the relay originator	89
20	Basic status of error correction	125			
21	Basic setting of scanning resolution	124	54	Status of mailbox reception report	89
			55	Transmission report for transmission in mailbox	89
22	Basic setting of scanning contrast	124			
23	Status of copy sorting	129	56	Status of reception report for relay reception	89
24	Preset for jammed fax cassette	130			
25	Current time interval of call redial	107	57	Reception status for COMLINE	149
26	Number of call redial attempts per fax partner	107	58	Status for software update	150
			59	Password for COMLINE	149
27	Set reception mode	22	60	Number of scanned documents	95
			61	Number of total printouts	95



## The dial number lists

The dial number lists are made up of the following lists:

- Alphabet dial numbers
- Group numbers
- One-touch dial numbers
- Relay numbers

Select a specific list or all lists in order to obtain an overview of the stored numbers.



15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

TELEPHONE NBR LIST  
1. BY NAME  
2. ABB NUMBERS  
3. GROUP NUMBERS

Standby mode

**Operate the Menu function template**  
**Press the corresponding function key**

**Selection menu for various numbers**

1. All dial numbers, sorted alphabetically
2. Alphabet dial numbers
3. Group numbers
4. One-touch dial numbers
5. ALL REPORTS

**Select a menu item**

The required list(s) are printed out

### ONE TOUCH NUMBER INFORMATION

PAGE : 001  
TIME : 08.FEB.00 17:11  
TEL NUMBER1 : +44-1234567890  
NAME : TOSHIBA MARKETING DP120F

OT NBR. NAME/FUNCTION ABB./FAX NBR. & E-MAIL TIME MONI BPS REPORT LINE MAILMODE

01 GROUP.NBR. 0001

### GROUP NUMBER INFORMATION

PAGE : 001  
TIME : 08.FEB.00 17:11  
TEL NUMBER1 : +44-1234567890  
NAME : TOSHIBA MARKETING DP120F

GROUP NUMBER NAME OT/ABB. NUMBER

0001 ALL ABB. 001

### ABBREVIATED TEL NUMBER LIST

PAGE : 001  
TIME : 08.FEB.00 17:11  
TEL NUMBER1 : +44-1234567890  
NAME : TOSHIBA MARKETING DP120F

ABB NBR. NAME TEL NUMBER/ E-MAIL ADDRESS TIME MONI BPS REPORT LINE MAILMODE

001 DP120F 35

## Department list

This list is useful for controlling costs per department. If a mastercode is stored and entered, a five-digit departement code will appear additionally.




2 / 2

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

Standby mode

Enter the menu  
The first 4 menu items are displayed.

Select a menu item  
The function list is printed out  
 An error message is displayed if no departments are defined.

DEPARTMENT CODE LIST							
PAGE		:	001				
TIME		:	08.FEB.00 17:11				
TEL NUMBER1		:	+44-1234567890				
NAME		:	TOSHIBA MARKETING DP120F				
DEPT NBR	NAME	DEPT CODE	TX PGS	RX PGS	COPY	PGSE	EMAILS SENT
01	MASTER	12345	0	0		0	0
02							

## Mains failure report

This list is printed out in the event of a memory loss (image memory / buffer memory) resulting from an enduring power failure. Depending on the charge status of the internal back-up battery, as well as the size of the image memory, the memory loss can occur within approx. one hour of a power failure.

POWER FAILURE LIST				
PAGE	:	001		
TIME	:	08.FEB.00 17:11		
TEL NUMBER1	:	+44-1234567890		
NAME	:	TOSHIBA MARKETING DP120F		
TX/RX	FILE NBR	FUNCTION		
	007	SINGLE TX		
POLLING/FAX M-BOX/MAILBOX	FILE NBR	FUNCTION	MAIL FROM	DATE/TIME
MEMORY RECEPTION	FILE NBR			FROM DATE/TIME
RECOVERY TX	FILE NBR	FUNCTION		

## ADVANCED SETTINGS

### Delayed fax job

 

You can define a specific start time for your fax jobs in order to compensate for any differences in time zones or in order to take advantage of low-rate charges. Again, it is particularly advantageous that your document or documents are not read into memory, as the document feed is not blocked.

The delay applicable for sending the fax job is not only limited to 24 hours: You can program the fax job up to 30 days in advance.



The setting of the start time relates to the following fax jobs:

- Single transmission
- Broadcast transmission
- Single polling
- Multiple polling

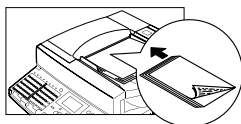

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

DELAYED COMM  
TIME = HH : MM DD  
■ ■ : ■ ■ ■ ■

DELAYED COMM  
TIME = HH : MM DD  
22 : 33 18

RESIDUAL MEMORY 100%  
ENTER TEL NUMBER

Standby mode

**Load original**

**Remember: Printed side face down**

Document ready

**Operate the Menu function template**

**Press the corresponding function key**

Make your selection  
for start time (HH:MM) and day (DD)

**Enter the start time**

Example: 22:33 hours on the 18th



If the delayed fax job (within the next minute!) is to be performed on the same day, please leave "DD" blank

The following fax job is linked to the start time which has just been set.

Any fax job...

- Single transmission
- Broadcast transmission
- Single polling
- Multiple polling

## Set transmission header position

The transmission header contains the code, the name, time of transmission and the current page number. Normally it appears in the top 5 mm of the incoming copy. If this area contains important information this information is overwritten by the transmission header. In order to prevent this from happening, you are able to displace the transmission header. Accordingly, the transmission header is first printed before the copy is printed. The effect is that the length of the incoming copy is extended by approx. 5 mm.



15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

- TTI
- 1.INSIDE
  - 2.OUTSIDE

Standby mode

**Start the menu**  
The first 4 menu items are displayed.

**Select a menu item**

Make your selection  
for transmission header position

**Select a menu item**

**Press STOP, return to standby mode**

## Reception trailer (RTI)

You can activate the reception trailer facility to ensure that reception of a document is precisely documented. The RTI is printed at the bottom of the incoming copy, and contains the current reception data such as time and date of reception as well as the IDs of the transmitter and receiver.



Please note that, when the reception trailer is activated, the inbound fax is always reduced before being printed out.



STOP

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

RTI  
1.ON  
2.OFF

Standby mode

### Start the menu

The first 4 menu items are displayed.

### Select a menu item

Make your selection  
for reception trailer


1. Reception with trailer
2. Reception without trailer

### Select a menu item

Press **STOP**, return to standby mode

## Permanent monitoring

When a fax transmission is monitored, the call establishment attempt is played back via the built-in speaker. This means that you have an additional acoustic check for monitoring the call establishment procedure. This facility is useful whenever a connection is not established. This is frequently due to a wrong number or a fax machine that is not ready to receive.

 In this setting, **all** transmission procedures are played back via the speaker.



4 / 1 / 0 8

1 . . . . . 0



15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

- LINE MONITOR
- 1.ALWAYS
  - 2.OFF

Standby mode

**Start the menu**  
The first 4 menu items are displayed.

**Select a menu item**  
Make your selection for permanent monitoring  
1. ALWAYS  
2. OFF


**Select a menu item**  
  
**Press STOP, return to standby mode**

## Call redial

If the machine is not able to transmit a fax job, the job is retained in memory and the machine attempts to send the fax job again at a later date.

You can set two criteria for this call redial facility:

- Period between the call redial attempts
- Number of redial attempts

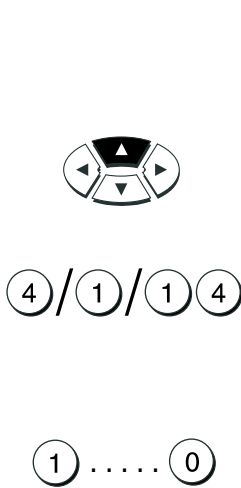

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

REDIAL MODE  
01.INTERVAL  
02.COUNTER

Standby mode

### Enter the menu

The first 4 menu items are displayed.


### Select a menu item

Make your selection

### Select a menu item

1: see part A  
2: see part B

**A**

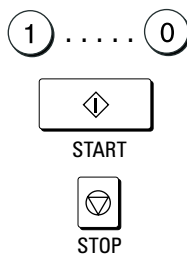

REDIAL MODE  
INTERVAL=(01-15 MIN)  
03

### Period between the call redial attempts

Make your selection  
call redial interval  
(default setting: 3 minutes)

### Enter the required figure

confirm with **START**

Press **STOP**, return to standby mode

Continued on next page.

B

1 ..... 0



START



STOP

REDIAL MODE

COUNTER = (00 - 14)  
03

Number of redial attempts

Make your selection

Number of call redial attempts  
(default setting: 3 times)

Enter the required figure

confirm with START

Press STOP, return to standby mode



## Volume of acoustic signals

The volume of the acoustic signals can be set separately

1.	RINGER VOLUME	Ringer volume.
2.	ALARM VOLUME	Volume of the warning signal indicating a malfunction.
3.	KEY TOUCH VOLUME	Key touch volume
4.	MONITOR VOLUME	Speaker volume.

4

/

/

0

1

1

.....

0

START

STOP

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

1.COMM. OPTIONS

2.LISTS

3.INITIAL SETUP

4.DEFAULT SETTINGS

01.RINGER VOLUME

02.ALARM VOLUME

03.KEY TOUCH VOLUME

04.MONITOR VOLUME

SET KEY TOUCH VOLUME

VOLUME = (0-7)

0 1 2 3 4 5 6 7

Standby mode

Start the menu

The first 4 menu items are displayed.

Select a menu item

Selecting the various acoustic signals

Select a menu item

(Example: Key touch)

Make your selection for ringer volume

0 Tone off

1 Quiet

.....

7 Loud

Enter the required figure

confirm with START

Press STOP, return to standby mode

# Power saver (stand by)

The printer unit of your fax machine requires a heat source of approx. 170° C in order to be able to print out documents immediately. This heat source is heated at specific intervals in order to maintain the temperature at the required level. This consumes electricity, and the fan also has to run constantly. If you wish to save electric current or prevent the fan noise, you are able to deactivate the permanent heating facility. The heater in such cases would only be activated if a fax document is received or printed out. There is a delay of around 20 sec. before documents can be printed out.

Two alternatives are available:

## Super Power Saver:

In this alternative, all components which are not required are switched off (almost the entire electronics) and the display is therefore also switched off. These measures reduce the entire power consumption of the fax machine to below 2 VA (Watt). As soon as a copy is inserted, a call is received or a PC print-out performed, the fax machine resumes its functions.

The Super Power Saver mode is set either with a delay (which can be adjusted between 1 and 60 minutes) after the last action, or it can be activated by the SUPER POWER SAVER key.

- The Super Power Saver mode cannot be activated when the memory is full (memory display < 100%) and when a fault lamp is lit.

## Printer Power Saver:

The printer Power Save mode only switches off the heating facility for the fixing roller and the fan. All other functions are retained. The power consumption in this mode is approx. 15 VA (Watt).

You can use a menu for specifying the period during which the printer Power Saver mode is activated.



15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

- 01.SUPER P. S.
- 02.PRINTER P. S.

Standby mode

## Start the menu

The first 4 menu items are displayed.

## Select a menu item

Make your selection  
für Powersaver Modus  
01: see part A  
02: see part B

Continued on next page.

**A**

1

1 ..... 0



START



STOP

SUPER POWER SAVER  
1. AUTOMATIC  
2. MANUAL  
3. OFF

START TIME  
TIME (01 -60) MIN  
03

**Super Power Saver:**

Make your selection for mode

1. Active after preset delay
2. Active after the SUPER POWER SAVER key is pressed
3. Cannot be activated

**Select a menu item**

Example: Automatic

Make your selection for the delay time

**Enter the delay time**

**confirm with START**

**Press STOP, return to standby mode**

**B**

1

1 ..... 0



START



STOP

PRINTER POWER SAVER  
1. ON  
2. OFF

PRINTER POWER SAVER  
TIME PERIOD =  
00:00 - 00:00

**Printer Power Saver:**

Make your selection for power saver

- 1: Power saver on
- 2: Power saver off

**Select a menu item**

Example: ON

Make your selection period for power saver time



Enter 00:00-00:00 to permanently activate the power saver facility (24 hours)

**Enter the period**

**confirm with START**

**Press STOP, return to standby mode**

## Cost centre management

Transmission jobs can be assigned to any 4-digit number. The number can be used to find the specified job within the transmission report (see [page 95](#)). In this way, special transmission jobs can be linked to specific cost centres.

If this function has been activated, your are able to enter the cost centre number before every transmission. Press the **START** key to skip entry of the cost centre number.



15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

ACCOUNT CODE

1.ON

2.OFF

Standby mode

**Start the menu**

The first 4 menu items are displayed.

**Select a menu item**

Make your selection  
for account code

- 1: Activate cost centre management
- 2: Deactivate mode

**Select a menu item**

**Press STOP, return to standby mode**

## Department code

In order to prevent your fax machine from being used by unauthorised persons, you can lock it using a 5-digit code. 99 such codes are possible, and a separate journal is assigned to each of these codes. It is conceivable that this code can be used for setting up a cost centre management system. The fax machine can now only be enabled by entering the relevant department code. The five-digit code is entered and confirmed with the **START** key.



 
- If a fax is transmitted after being released by the department code, the name of the corresponding department is displayed in the transmission header of the fax partner.
- The code for department number 01 is the master code. This code must be entered for creating further department codes or cancelling existing department codes.
- If the fax machine has been enabled by a department code and if no further action takes place, the code must be entered again after a further approx. 1 minutes.

Continued on next page.



4 / 1 / 0 4

1



A B C...



START

1 ..... 0



START



STOP

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

DEPT CODE ENTRY

1.YES

2.NO

MASTER CODE ENTRY  
DEPT NR. = 01  
DEPT NAME (MAX 20)

ENTER NAME

DEPT NAME (MAX 20)  
GHOSTBUSTERS

MASTER CODE ENTRY  
DEPT NBR = 01  
MASTER CODE=

■■■■

DEPT CODE ENTRY  
DEPT NUMBER (1 - 99)

■

## Activating Department mode

Standby mode

### Enter the menu

The first 4 menu items are displayed.

### Select a menu item

Make your selection

for the department code

1: Enter department code

2: Clear and cancel department codes

### Select a menu item

Make your selection

for the department name (this name appears in the transmission header of the fax partner)

### Enter the department name

(see [page 15](#) for diagram)

### ...confirm with START

Make your selection

for department code

(use master code when first entered)

### Enter the department code

### confirm with START


Make your selection

for further departments (2 - 99)

-or-

Press STOP, return to standby mode

# Modify or delete a department

 Can only be accessed via master code.

1 . . . . . 0



START



4 / 1 / 0 4

1

1 . . . . . 0



START

1 . . . . . 0



STOP

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

DEPT CODE ENTRY  
1.YES  
2.NO

DEPT CODE ENTRY  
DEPT NUMBER (1 - 99)

DEPT CODE ENTRY  
ALREADY ASSIGNED  
DEPT NBR = XX  
FUNNY BONES

after 2 seconds

DEPT CODE ENTRY  
1. CANCEL  
2. MODIFY  
3. RETAIN


Standby mode

**Enter (!) master code**

**...confirm with START**

Start the menu  
The first 4 menu items are displayed.

**Select a menu item**


Make your selection  
for the department code  
 (this menu is available only if the  
master code is entered)

**Select a menu item**

Make your selection  
for required department

**Enter the department number**

**confirm with START**

Make your selection  
1. Delete department  
2. Change department criteria  
3. Retain department  
 Department 1 cannot be cancelled as  
it is permanently linked to the master  
code.

**Select a menu item**

Proceed as indicated in the menu

**Press STOP, return to standby mode**

## Disable department code

If the department code is deactivated, renewed entry of the master code allows access to the previously entered departments.

① . . . . . ②



START



④ / ① / ② ④

②

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

DEPT CODE ENTRY  
1.YES  
2.NO

Standby mode

**Enter (!) master code**

**confirm with START**

**Start the menu**

The first 4 menu items are displayed.

**Select a menu item**

Make your selection  
for the department code



(this menu is available only if the  
master code is entered)


**Select a menu item**

The fax machine is permanently enabled

## Divider sheets

A divider sheet is automatically added after every transmission in order to enable the individual fax documents received to be distinguished more easily. On the same basis, separator pages for copies and PC print-outs can be configured separately.

- If optional cassettes are installed, a paper cassette can also be specified from which the separator page is to be taken.
- If a cassette has already been specified via "LETTER HEAD PAPER" (see [page 130](#)), the cassette selection options are limited, accordingly.

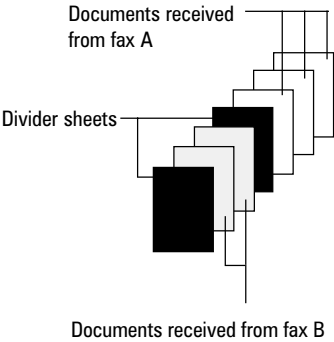

FAX SEPARATOR PAGE

\*\*\*\*\*  
\*#####\*  
\*#####\*  
\*\* FROM +44 211 12345678 \*\*  
\*\* RECEIVED TIME 09-FEB-00 23:01 \*\*  
\*\* PAGES RECEIVED 001 \*\*  
\*#####\*  
\*#####\*  
\*\*\*\*\*

Continued on next page.





4 / 1 / 0 3

1 ..... 0

1 ..... 0

1 ..... 0

1 ..... 0



STOP

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

FAX SEPARATOR PAGE  
1.ON  
2.OFF

COPY SEPARATOR PAGE  
1.ON  
2.OFF

PC SEPARATOR PAGE  
1.ON  
2.OFF

TRAY SELECTION  
1.LOWER TRAY  
2.AUTO SELECT

## Activate separator pages

Standby mode

## Start the menu

The first 4 menu items are displayed.

## Select a menu item

Make your selection  
for Fax separator page

## Select a menu item

Make your selection  
for Copies separator page

## Select a menu item

Make your selection  
for Printer separator page

## Select a menu item

(With optional cassette)

Prompt for paper cassette

1. Access to optional paper cassette
2. Freely selectable access (depending on fill level of the paper cassettes)

## Select a menu item

Press **STOP**, return to standby mode

## Cover sheet


The cover sheet is a form which is placed at the head of your fax transmission. It is a tool to enable the operator to classify an incoming fax more easily. You are able to choose between a “normal” cover sheet which sets out the information in text form and a “personal” cover sheet.

With the personal cover sheet, you can add a diagram to the “normal” information. This diagram is scanned into the machine in the same way as a document and is retained in memory as the cover sheet diagram. The following diagram illustrates the relationship between document and cover sheet.

**Document:**



**Cover sheet**

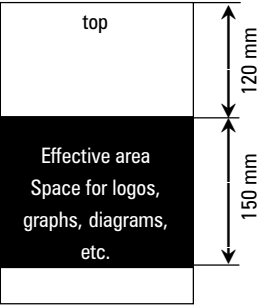

Please refer to [page 56](#) for details of how to send the cover sheet.


Continued on next page.



4 / 2 / 0 3

1

1

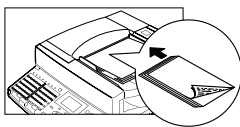

START

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

COVER SHEET  
1.ON  
2.OFF

WITH IMAGE ?  
1.YES  
2.NO

COVER SHEET  
  
LOAD DOCUMENT

## Save cover sheet

Standby mode

## Start the menu

The first 4 menu items are displayed.

## Select a menu item

Make your selection  
for cover sheet function

1. Cover sheet is activated
2. Cover sheet is cancelled

## Select a menu item

Make your selection  
for cover sheet character

1. Cover sheet with diagram and text
2. Cover sheet only with text  
(Example: cover sheet with diagram)

## Select a menu item

## Insert required cover sheet document

## confirm with START


The document is saved as the cover sheet  
diagram


## Retain jobs

If a job cannot be transmitted because for instance the partner fax is busy, your fax machine attempts to redial the number at regular intervals of approx. 3 minutes\*. After the XXth\* redialling, the job will be automatically deleted from the stack and a transmission report (see [page 92](#)) will be printed out. To prevent the deletion of such a job use this procedure. Each job will then be available for a certain time (1-24hours). If this job can not be successfully sent during this period it will be deleted automatically from the memory. Every time you retain a job in memory your fax prints out a transmission report (see [page 92](#)) to inform you how long this job will be retained in memory.

To send retained jobs see [page 60](#).

\*) Depending on setting (see [page 107](#))

 If too many documents are retained in memory, the fax memory will become full since every retained job requires memory.

 If you find that the memory is frequently too small, ask your dealer for a memory expansion!



4 / 2 / 0 4

1 . . . . . 0

1 . . . . . 0



START



STOP

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

RECOVERY TRANSMIT  
1.ON  
2.OFF

RECOVERY TRANSMIT  
STORED TIME=(01-24)  
06

Standby mode

### Start the menu

The first 4 menu items are displayed.

### Select a menu item

Make your selection  
for retain job

### Select a menu item

Make your selection  
for retaining time  
(preset retaining time is displayed)

### Input retaining time

-and/or-

confirm with START

Press STOP, return to standby mode

## Query current job status

The LINE status lamp enables you to recognise whether your fax machine is currently active. If you require more precise information concerning this activity, you can query the current status of the machine. This status query also enables you to cancel the current job.

The status display is made up as follows:

Line 1	TRANSMIT P 001	Indication of activity (transmission, reception, polling, etc.) Indication of current number of pages (P xxx)
Line 2	FILE NBR = 123	Indication of job number
Line 3	EC 14400 BPS	Indication of transmission type (ECM, G3, High Speed) Indication of transmission speed (14400 BPS etc)
Line 4	+44 2131 123456	Indication of the ID of your partner fax



JOB STATUS

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

LINE 1 TRANSMIT P001  
FILE NBR = 123  
EC SUPER G3  
+44 2131 158901

Standby mode

**The BUSY lamp flashes to indicate activity on the line**

**Press the JOB STATUS key**

The current status is displayed

Do you wish to cancel the current status?



JOB LÖSCHEN

LINE 1 TRANSMIT P001  
FILE NBR = 123  
EC SUPER G3  
+44 2131 158901

CANCEL ?  
FILE NBR = 123  
1. YES  
2. NO

**Cancel current status**

The current status is displayed

**Press the JOB CANCEL key**

Confirmation prompt

**...confirm with START**

The current job is interrupted and the job is cancelled



START

## Basic setting, document length

In the basic setting of your fax machine, the document length is limited to one meter. If the document is longer than one meter, the machine displays the error message “document jam” after one meter is exceeded, and the transmitted is interrupted. You are able to disable this restriction to prevent this from happening.



STOP

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

- DOCUMENT LENGTH
- 1.1M
  - 2.UNLIMITED

Standby mode

**Start the menu**  
The first 4 menu items are displayed.

**Select a menu item**


Display the basic setting

**Select a menu item**

**Press STOP, return to standby mode**

# Basic setting, transmission memory

The transmission memory is activated in the basic setting of your fax machine. This enables transmission jobs to be stacked as jobs in this memory (see [page 39](#)). If you disable the transmission memory, the document is retained in the document feed until the transmission procedure is completed.

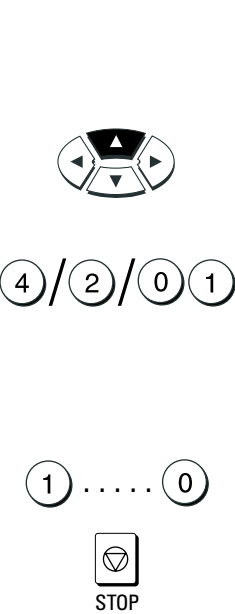

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

SET MEMORY TX  
1.ON  
2.OFF

Standby mode

**Start the menu**  
The first 4 menu items are displayed.

**Select a menu item**

Display the basic setting

**Select a menu item**

**Press STOP, return to standby mode**

# Basic setting, resolution and contrast

The basic setting of contrast and resolution can be changed. Please read [pages 50 et seq.](#) for information concerning contrast and resolution.



STOP

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

SET RESOLUTION

- 1.STANDARD
- 2.FINE
- 3.U-FINE

SET CONTRAST

- 1.NORMAL
- 2.DARKER
- 3.LIGHTER

Standby mode

## Start the menu

The first 4 menu items are displayed.

## Select a menu item

Display the basic setting for resolution

- 1. Standard resolution (100 x 200 dpi)
- 2. Fine resolution (200 x 200 dpi)
- 3. Superfine resolution (400 x 200 dpi)

## Select a menu item

Display the basic setting for contrast

- 1: for normal documents
- 2: for mainly light documents
- 3: for mainly dark documents


## Select a menu item

Press **STOP**, return to standby mode



## Basic setting, ECM (error correction mode)

Your fax machine is equipped with an error correction facility (ECM). If your fax partner also has an error correction facility, this permits error-free fax transmission. One effect linked with ECM is that the transmission time increases if there are any problems on the line. This may involve very high costs with overseas calls. For this reason, you can completely deactivate the ECM facility.

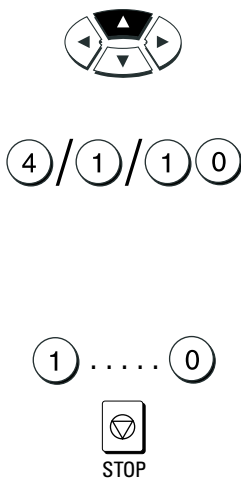

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

SET ECM

1.ON  
2.OFF

Standby mode

### Start the menu

The first 4 menu items are displayed.

### Select a menu item


Display the basic setting

### Select a menu item

Press **STOP**, return to standby mode

# Basic setting, protected transmission

The transmission of documents is restricted.  
You can now only send documents to fax machines whose ID is identical to the dialled fax number. You can thus only fax your documents to specific fax partners.

 Any changes to this basic setting have far-reaching consequences!



4 / 2 / 0 2

1 ..... 0



STOP

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

SET SECURITY TX  
1.ON  
2.OFF

Standby mode

**Start the menu**  
The first 4 menu items are displayed.

**Select a menu item**

Display the basic setting

**Select a menu item**


**Press STOP, return to standby mode**

## Basic setting, reception interval

Fax reception may not be possible for an extended period under the following circumstances, as the fax machine is occupied solely with the transmission of documents:

- Extensive group dialling ( see [page 46 et seq.](#))
- Extensive group polling ( see [page 70](#))
- Numerous send jobs in the buffer memory

In order to ensure the possibility of receiving incoming faxes in such situations, a variable interval can be configured for in between the respective transmission and/or polling jobs.

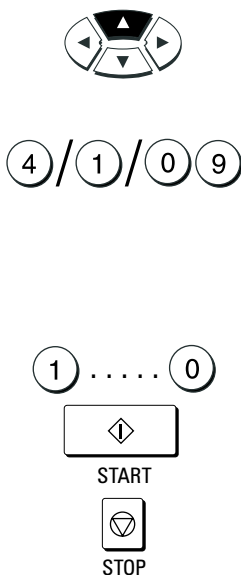

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

RECEIVE INTERVAL  
INTERVAL (0-15) MIN  
03

Standby mode

### Start the menu

The first 4 menu items are displayed.

### Select a menu item

Make your selection  
for RECEIVE INTERVAL  
0: no pause

### Enter the required figure

confirm with **START**

Press **STOP**, return to standby mode

# Basic setting, Print density (saving toner)

If documents with a disproportionately high ratio of black are frequently received, this will result in increased toner consumption. The intervals between changing toner will thus be correspondingly shorter. The **print density** of the black regions can be reduced by a differentiated setting, thus reducing toner consumption.



START



STOP

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

SET PRINT DENSITY  
DENSITY(-2 TO +2)  
LIGHTER DARKER  
-2 -1 0 +1 +2

Standby mode

**Start the menu**  
The first 4 menu items are displayed.

**Select a menu item**

Selection menu for print density


**Selection of the desired value**

**...confirm with START**

**Press STOP, return to standby mode**

## Basic setting, sort copy

The default setting for sorting copies (see [page 35](#)) can be changed.

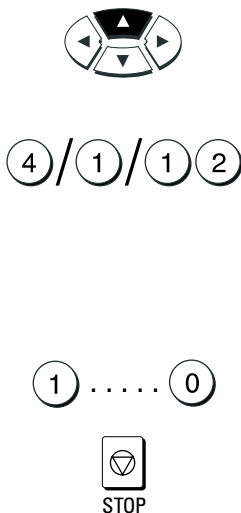

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

COLLATE COPY DEFAULT  
1.ON  
2.OFF

Standby mode

### Start the menu

The first 4 menu items are displayed.

### Select a menu item

Make your selection  
for copy sorting

### Selection of the desired value

Press **STOP** return to standby mode

## Basic setting, letter head paper

If the fax machine is used as a PC printer, it is possible to select other paper trays (when installed). In this context, it is customary to deposit pre-printed (letter head) paper in a specific tray. To ensure that the fax machine does not access this tray under any circumstances (e.g. no paper in the other tray), it can be excluded for the receipt of faxes.



- Function only available when optional paper tray installed.
- If a cassette has already been specified under „Separator page“ (see [page 116](#)), this function is no longer available.



STOP

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

LETTER HEAD PAPER  
1.OFF  
2.BYPASS  
3.UPPER TRAY

Standby mode

### Start the menu

The first 4 menu items are displayed.

### Select a menu item

Selection menu for jammed fax cassette  
(display depends on cassettes installed)

1. No tray exclusion
2. Single-sheet feed
3. Tray 1
4. Tray 2
5. Tray 3


### Select a menu item

Press **STOP**, return to standby mode

## Basic setting, send after scan

The default setting for the fax machine causes the fax machine to commence dialling immediately after pressing the START button for a scan job. In the case of extensive fax jobs, this can result in the page number descriptor in the TX header on the first few pages being incomplete. This in turn results in a memory overflow, the transmission is interrupted and the document part waiting in memory is deleted. This prevents the document feed becoming jammed.

If extensive fax jobs are sent on a frequent basis, the basic setting should be changed accordingly so that the transmission does not commence until the document has been scanned completely. Furthermore, the way in which the fax machine is to handle a memory overflow can also be set.

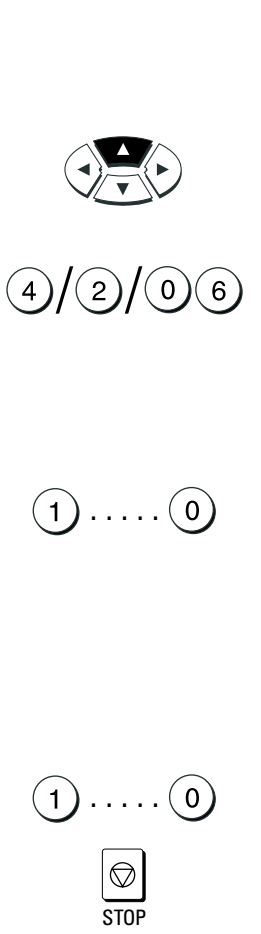	<div>15-MAR-00 WED 19:56</div> <div>RESIDUAL MEMORY 100%</div> <div>1.COMM. OPTIONS 2.LISTS 3.INITIAL SETUP 4.DEFAULT SETTINGS</div> <div>SEND AFTER SCAN 1.DIAL DURING SCAN 2.DIAL AFTER SCAN</div> <div>WHEN MEMORY FULL 1.DELETE SCAN PAGES 2.SEND SCAN PAGES</div>	<p>Standby mode</p> <p><b>Start the menu</b> The first 4 menu items are displayed.</p> <p><b>Select a menu item</b></p> <p>Make your selection for SEND AFTER SCAN</p> <ol style="list-style-type: none"> <li>1. Send during scanning</li> <li>2. Send after scanning</li> </ol> <p><b>Select a menu item</b></p> <p>In the case of selection 2 (behaviour in the event of a memory overflow)</p> <ol style="list-style-type: none"> <li>1. Cancel sending (document feed ready for use)</li> <li>2. Continue sending (documents remain in the document feed until the memory is free)</li> </ol> <p><b>Select a menu item</b></p> <p><b>Press STOP, return to standby mode</b></p>
--	--	---

# Additional features (SUB, SEP, PWD)

Because of the high level of innovation pressure in the telecommunications industry, fax technology is also being continuously improved. The ITU-T (formerly CCITT) operates as an international body and is responsible for ensuring standardisation of new telecommunication options. This ensures that non-proprietary compatibility is guaranteed.

All additional features described at this point are related to **fax networks**, and are added as additional information (digits) to the telefax numbers.

**Please note that the partner fax machine must also support these features. These functions would otherwise not be carried out.**

## SUB:

(Sub-Addressing) This mode is used for faxing documents in PC networks. The fax number (the number of the fax server in the network) and also the sub-address of the workstation in the network must be entered to enable the fax to be forwarded in the network.

The sub-address is entered in the form of a number with max. 20 digits.

## SEP:


(Separation Polling) This mode is used for polling from a PC network. The fax number (the number of the fax server in the network) as well as the polling address of the workstation in the network from which a fax document is to be polled must be entered.

The polling address is entered in the form of a number with max. 20 digits.

## PWD:

(Password) The password is used as additional security for actions in the PC network. This enables transmission and polling procedures in PC networks to be protected. Facilities such as "electronic signature" as well as PIN number mode are also possible.

The password is entered in the form of a number with max. 20 digits.

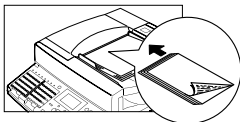

2

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

SUB ADDRESS COMM  
1. COMPLETE  
2. SUB  
3. SEP

Standby mode

## Load original

**Remember: Printed side face down**  
Document ready

## Operate the Menu function template

## Press the corresponding function key

Make your selection  
for additional parameters

- 1: complete
- 2: SUB
- 3: SEP
- 4: PWD

## Select a menu item

Example: Sub-address (SUB)

Continued on next page.



1 . . . . . 0



START

1

SUB ADDRESS COMM.

SUB = (MAX. 20)



SUB ADDRESS COMM

1. COMPLETE

2. SUB

3. SEP

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

ENTER TEL NUMBER

Make your selection  
for the sub-address

**Entering the subaddress**

**confirm with START**

Prompt for further parameters

-or-

**Quit menu**

Make your selection  
the fax number

## Additional paper cassettes (optional)

If the capacity of the paper tray (550 sheets) is inadequate, you have the option of mounting an additional paper tray (with a capacity of 550 sheets).

Furthermore, a single-sheet feed can be used, which offers both a greater store of paper and the additional possibility of printing out **TX reports on A5** paper.


If you use your fax machine as a printer, the functionality can be expanded, accordingly.

Please contact your TOSHIBA dealer for ordering a new printer unit.

## Line 2 Mode (optional)

If the second line (optional) is installed in your fax machine, you can configure this 2<sup>nd</sup> line in numerous ways:

Setting:	Effect:	Practical note:
TX/RX	The second line has the same priority as Line 1.	The second line is also used by the fax machine as a transmission line. If you have a lot of faxes to transmit (e.g. in the case of extensive multiple-address transmissions) and value the fastest possible fax transmission, you should choose this setting.
RX ONLY (24HR)	The second line is used exclusively as a receiving line.	If you wish your fax machine to always be available, you can reserve the second line exclusively for receiving faxes. In this case, transmissions are handled via Line 1 only.
RX ONLY (TIMER)	The second line can be limited to serve solely as a receiving line within a configurable time period.	This setting represents a combination mode for the second line. Outside the specified time period, the second line has the same priority as Line 1 (see first setting). Within the specified time period, Line 2 is used exclusively for receiving faxes (see second setting).

 These settings can be temporarily circumvented via the fax function “TEL LINE SELECT” (see [page 14](#)).



4 / 1 / 1 6

15-MAR-00 WED 19:56
RESIDUAL MEMORY 100%
ENTER TEL NUMBER
1.COMM. OPTIONS
2.LISTS
3.INITIAL SETUP
4.DEFAULT SETTINGS
LINE - 2 MODE
1.TX / RX
2.RX ONLY (24 HR)
3.RX ONLY (TIMER)

Standby mode

**Enter the menu**  
The first 4 menu items are displayed.

**Select a menu item**

 
Make your selection  
For Line 2 mode

(Example: TIMER)

Continued on next page.

① ..... ②

① ..... ②



START



STOP

RX ONLY (TIMER)

TIME PERIOD =  
00:00 - 00:00

### Select a menu item

Make your selection  
For time period "Receiving line only"

### Entering the new time period

Confirm with **START**

Press **STOP**, return to standby mode

Diagnostic program

Your fax machine has an automatic test routine which checks the correct functioning of the most important internal components. The results of such a test are documented in a test report, which can be printed out at any time.

You can also choose to test individual components as you see fit:

01. ADF TEST	Function of the document feed (ADF)
02. KEY TEST	Function of the individual keys on the control panel
03. LED TEST	Function of all LEDs
04. LCD TEST	Function of the LCD display
05. SPEAKER TEST	Function of the speaker
06. SWITCH TEST	Function of the sensor switch
07. TEST PRINT	Function of the printer components in the form of a print test



STOP

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS


AUTO TEST  
■■■■-----

Automatic test routine  
Standby mode

Start the menu  
The first 4 menu items are displayed.

Select a menu item  
Display of the current test procedure  
(continuous movement of the display bar)

Cancel with STOP  
-or-  
A test printout is printed after approx. 6 minutes

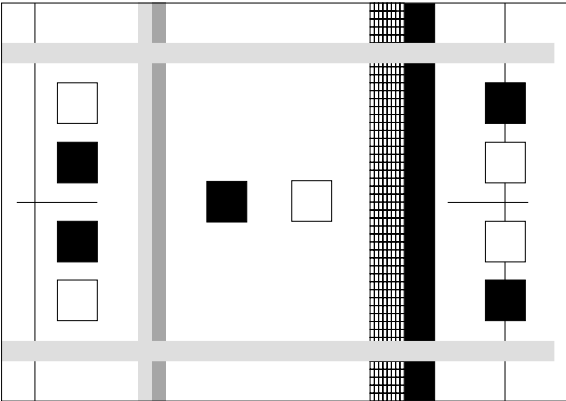



9 / 3

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

1.COMM. OPTIONS

2.LISTS

3.INITIAL SETUP

4.DEFAULT SETTINGS

15-MAR-00 WED 19:56

RESIDUAL MEMORY 100%

PRINTING LIST

## Printout of the test report

Standby mode

## Start the menu

The first 4 menu items are displayed.

## Select a menu item

Printout of the test report

### SELF TEST REPORT

PAGE : 001  
 TIME : 08.FEB.00 17:11  
 TEL NUMBER1 : +44-1234567890  
 NAME : TOSHIBA MARKETING DP120F

TEST CONTENTS	RESULT	NOTE	DATE
AUTO TEST			
FLASH ROM			
PROGRAM	OK	C692	08-02-2000 13:11
FUNCTION	OK	AA3A	08-02-2000 14:22
LANGUAGE	OK	3621	08-02-2000 15:36
SRAM			
ADDRESS BUS			
DATA BUS			
DRAM			
ADDRESS BUS			
DATA BUS	NG	57A	08-02-2000 15:42
MODEM			
LINE (#1)			
SCANNER			
RAM			
SHADING			
CODEC			
PRINTER			
PHONEBOOK			
INDIVIDUAL TEST			
ADF TEST			
KEY TEST			
LED TEST			
LCD TEST			
SPEAKER TEST			
SWITCH TEST			



STOP

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

- 1.COMM. OPTIONS
- 2.LISTS
- 3.INITIAL SETUP
- 4.DEFAULT SETTINGS

- 01.ADF TEST
- 02.KEY TEST
- 03.LED TEST
- 04.LCD TEST

**Test of individual components:**  
Standby mode

**Start the menu**  
The first 4 menu items are displayed.

**Select a menu item**  
The first 4 components are displayed

**Select a menu item**

**Press STOP, return to standby mode**

## Error messages in the display

Your fax machine indicates operating errors or does not carry out a function in accordance with your requirements. Before you contact customer service, consider a moment and identify the error message in the following list. You will probably then be able to remedy the fault yourself.

### General procedure to be followed for error messages in the display

1. Analyse error message.
2. Rectify cause of error.
3. Press STOP key to cancel error message in display.
4. If necessary, switch off fax machine for 10 seconds and press STOP key again.



**All error messages are retained in the display until they are acknowledged with the STOP key. If this error message does not disappear, the cause of the error has still not been rectified.**

Display	Cause	How to correct
BROKEN REGISTRATION	Alphabet memory and internal settings have been lost due to a lengthy power failure	Press the STOP key. If the error message does not disappear, activate the installation procedure (see <a href="#">page 12</a> ) and confirm all settings. The internal lithium battery is possibly depleted.
POWER FAILURE	Contents of the image memory have been lost following a power failure.	The mains error report (see <a href="#">page 102</a> ) is printed out in order to provide you with a list of lost criteria.
SCANNER COVER OPEN	The copy flap is not locked in place.	Allow this cover to snap carefully into position.
TOP COVER OPEN	The upper part of your fax machine housing has not snapped into position.	Close the housing cover carefully.
ENTRY MEMORY FULL	The fax number entry memory (one-touch/direct dial number memory) is full.	Delete fax numbers you no longer need, in order to free up memory.
MEMORY OVERFLOW	The transmission / reception memory is full.	Send your document(s) with a lower resolution, or send them using the direct mode (see <a href="#">page 42</a> ). If this error persists, please contact your dealer for a memory expansion.
DOKUMENT JAM	Documents have jammed in the document feeder.	Follow the instructions on <a href="#">page 146</a> to rectify the document jam.
UPPER PAPER EMPTY	(Only in conjunction with additional paper cassettes) No more paper in the upper cassette.	Load new recording paper (see <a href="#">page 10</a> ).

Display	Cause	How to correct
MIDDLE PAPER EMPTY	(Only in conjunction with additional paper cassettes) No more paper in the middle cassette.	Load new recording paper (see <a href="#">page 10</a> ).
LOWER PAPER EMPTY	(Only in conjunction with additional paper cassettes) No more paper in the bottom cassette.	Load new recording paper (see <a href="#">page 10</a> ).
PAPER EMPTY	The recording paper is empty	Load new recording paper (see <a href="#">page 10</a> ).
TONER LOW	The toner is almost out. Only enough toner for approx. 100 more copies.	Install a new cartridge (see <a href="#">page 8</a> ).
TONER EMPTY	There is not enough toner for printing.	Install a new cartridge (see <a href="#">page 8</a> ).
DRUM UNIT WARNING	The printer unit is almost spent. About 100 sheets can be printed after this is displayed.	Please contact your TOSHIBA dealer to order a new drum unit.
REPLACE DRUM UNIT	The drum unit is expended.	Replace the drum unit (see <a href="#">page 8</a> ).
CONFIRM DEV. UNIT	The printer unit is missing or has not been installed correctly.	Install the process unit correctly. Activate the lock facility.
DEVICE ERROR XX	Indicates a fault in the printer unit.	Contact your TOSHIBA dealer and notify him of the code in the display message.
NETWORK DISABLED	The optional network interface card (NIC) is faulty; network-specific components are not working correctly.	Check that the network interface card is installed correctly.
NETWORK ERROR	The network cable is not connected correctly (only in the case of an optional network interface card)	Check the network connection and re-establish the connection correctly.
PCL DISABLED	The optional PCL card is faulty; PCL printer components are not working correctly.	Check that the printer card is installed correctly.



Display	Cause	How to correct
CHECK LINE-1	Line 1 has no connection to the telephone network / PBX	Check the line connection at the telephone socket. If the line is connected correctly, report the fault.
CHECK LINE-2 (Only if optional second line is installed)	see "Check Line-1"	see "Check Line-1"
SORRY NOT POSSIBLE	Selected function not possible at present.	Read the operating instructions for any restrictions concerning your selected action.

## Error codes in journal

If "TRANSMISSION ERROR" appears in the display of your fax machine, the error code describes the specific error. The same code is shown also in the journal and transmission report.

Code	Cause	How to correct
10	No recording paper	Put more paper in the paper cassette.
11	Paper jam	Remove the jammed paper (see <a href="#">page 147</a> ).
12	Documents have jammed in the document feed.	Follow the instructions on <a href="#">page 146</a> to rectify the document jam.
13	Open the upper covers	Allow these covers to snap carefully into position.
20	Power failure	A power failure has occurred.
22	Memory error	If this error occurs frequently, please notify the customer service of your TOSHIBA dealer.
30	Transmission interrupted by the transmitter/receiver.	Start the transmission process again or request your fax partner to repeat the transmission process.
32	Page error	A specific number of pages has been set, but a different number of pages has been sent (see <a href="#">page 63</a> ).
33	Polling error	Polling was not reserved, or the password was incorrect, or polling protection did not meet the specified criteria (see <a href="#">page 69</a> ).
42	Memory overflow	Send your document(s) with a lower resolution, or send them using the direct mode (see <a href="#">page 42</a> ). If this error occurs frequently, please contact your dealer for a memory extension.
50	Line busy	Test the connection using the listening-in option (see <a href="#">page 48</a> ). Have you pressed "*" on the extension for obtaining an outside line (see <a href="#">page 18</a> )?
53	Wrong codeword	A document has been retrieved with the wrong codeword (see <a href="#">page 69</a> ).
60	Line busy	Send the document again.
B0-B5 C0-C4 D0-D2 F0, F1	Communication error	Bad line.  The document has probably not been transmitted. You should transmit your document again to be safe.
E0-E6	Printer fault	A printer error occurred during reception, causing a memory overflow.
87	Image cannot be saved	Memory overflow on the other machine. Transmit your document again later.

## Transmission problems

Your fax machine reports an operating error or fails to perform the required function. Before you make an unnecessary call on your service technician, take your time and see if you can help yourself. This checklist will help you recognise and eliminate errors.

Problem	Possible causes ...	... and solutions
Your document is not automatically pulled into the feeder.	Your machine displays an error.	If the display gives an error message, clear the fault and delete the display with STOP.
	The display is blank.	Check there is power on the machine. The machine must be switched on (see <a href="#">page 9</a> ).
	Document size or thickness of paper are not acceptable.	Use acceptable documents only (see <a href="#">page 37</a> ).
	The operator control panel is not firmly locked.	Close the cover. It should be firmly locked in place on both sides.
The text "transmission" is not displayed when you press the START key.	You replaced the receiver before pressing START.	Try again. Replace the receiver only when you have pressed START.
The document is damaged during sending or copying.	Document format or paper thickness not as specified.	Use acceptable documents only (see <a href="#">page 37</a> ).
	The document guides are not properly adjusted to the paper size.	Adjust the document guides accordingly.
Your fax machine performed transmission correctly but the message was not received by the receiver.	The other machine is out of paper.	Ask the receiver to put paper in his machine.
The receiver received a blank sheet instead of the document sent.	You loaded your document in the machine with the image face-up.	Send your document again: the image must be face-down on your document feeder.
The receiver reports: The document transmitted is difficult to read.	Your machine's document reader is dirty or damaged.	Make a copy of your document on your fax machine (see <a href="#">page 35</a> ). If your copy is also difficult to read, clean the document reader.

Problem	Possible causes ...	... and solutions
The receiver reports: The document transmitted is difficult to read.	RESOLUTION and CONTRAST are not set correctly.	Make a copy on your fax machine (see <a href="#">page 35</a> ) and adjust the settings to your document. You can also improve document quality: By making the print on the photocopy darker, enlarging or reducing. (see <a href="#">page 50 / 51</a> ). Then send again.
	The telephone connection is poor.	Redial. You may get a better connection.
Abbreviated or one-touch dialling do not work.	Abbreviated or one-touch dialling number is not correctly stored.	Check and correct stored numbers (see <a href="#">page 77 / 82</a> ).
Your call does not arrive although you have dialled the correct number.	If you are connected to a PABX: You have set the wrong line type.	Set the line types to EXTENSION (see <a href="#">page 18</a> ).
	Your fax machine is not connected to the PSTN.	Plug the connecting cable of your fax machine into the socket (see <a href="#">page 9</a> ).

## Receiving problems


Your fax machine reports an operating error or fails to perform the required function. Before you make an unnecessary call on your service technician, take your time and see if you can help yourself. This checklist will help you recognise and eliminate errors.

Problem	Possible causes ...	... and solutions
You press START to receive a document. But you receive nothing.	Your machine displays an error.	If the display gives an error message, clear the fault and delete the display with STOP.
	The fax machine is not correctly connected.	Check the wiring. See <a href="#">page 9</a> .
	The display is blank.	Check there is power on the machine. The machine must be switched on (see <a href="#">page 9</a> ).
	There is still a document in the feeder.	Press STOP and remove the document.
	Your fax machine is set in manual receiving mode and you replaced the handset before pressing START.	When receiving the next fax, be sure to replace the handset only after you have pressed START.
	The operator control panel is not closed.	Close the cover. Both sides of the cover must be firmly locked in place.
Your recording paper is not fed out.	The recording paper in your machine is jammed.	Remove the jammed paper (see <a href="#">page 147</a> ).
The document received is difficult to read.	Document quality is poor.	Ask the sender to reset the resolution and contrast or improve the quality of the document e.g. by making the print on the photocopy darker, enlarging or reducing. Then have it send again.
	The recording paper quality is poor.	Use acceptable recording paper (see <a href="#">page 10</a> ).
You receive a completely blank document.	The sender made a mistake when loading the document.	Check whether the sender loaded in the correct manner.
The document received is partially printed.	The operator control panel of your fax machine is not closed properly on both sides.	Close the cover. Both sides of the cover must be firmly locked in place.
You can send fax messages without any problem, although you cannot receive any.	Receiving protection is activated.	Switch off receiving protection (see <a href="#">page 34</a> ).

## Cleaning document scanner

Never use abrasive materials to clean your fax machine - they could cause damage. If documents transmitted are difficult to read, the document scanner must be cleaned. You can easily tell when: Make a test copy of the document on your fax machine and compare the copy with the original.


Open the document feed by pressing the corresponding release button.

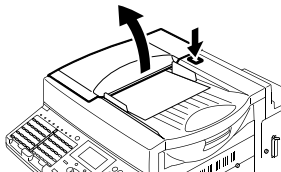


Wipe the white metal strips and the opposing document window with a soft cloth.



If these parts are very dirty, you can also use a slightly moist cloth and then wipe off with a dry cloth.

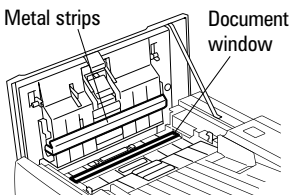


Return the document feed to its original position. Ensure that the covers on both sides lock into place correctly.

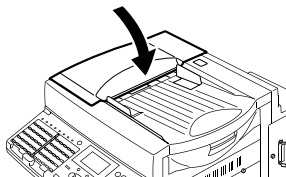


## Remove document jam


Leave the fax machine switched on. Remove the remaining documents from the document feed.

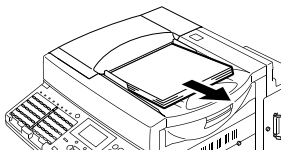


Open the document feed by pressing the corresponding release button.

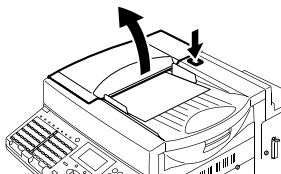

Remove the copy that caused the document jam. Check the document feed for residual scraps of paper.

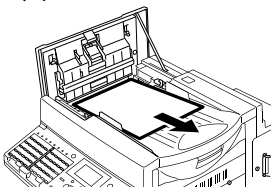

Return the document feed to its original position. Ensure that the covers on both sides lock into place correctly.

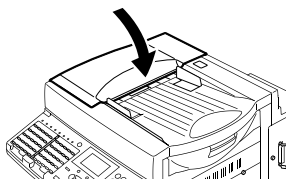


## How to clear a recording paper jam


In the event of a paper jam in the receiving paper tray, the PAPER JAM XX" message is displayed. The two numbers indicate the location of the paper jam in the fax machine.

Code	Jam position
10	Paper cassette. In the case of additional cassettes: Top cassette
20	Optional paper cassette: Middle cassette
30	Optional paper cassette: Bottom cassette
50	Single-sheet feed
80	Area of the paper feed (directly downstream of the tray)
90	Area of the paper exit (directly upstream of the paper exit)


Leave the fax machine switched on. Open the side paper feed and, if applicable, pull the page out.

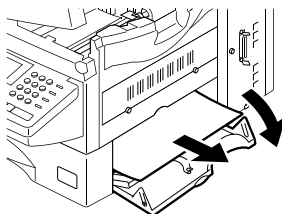


Subsequently open the machine cover by operating the release lever.

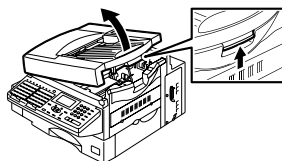

Remove the printer unit from the exposed machine.

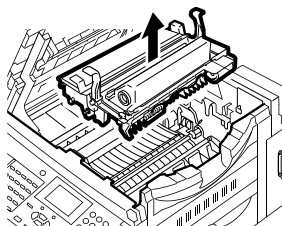


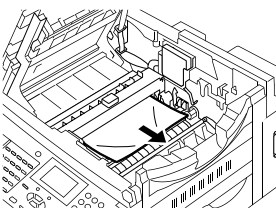
If paper is located beneath the metal transport roller, release the paper by pressing the green lever (as illustrated in the diagram).

 Please take care not to tear the paper in this context.



If part of the paper is already located in the setting unit, it can be pulled out in the direction opposite to the print direction, as illustrated in the diagram.


- 
- Please take care not to tear the paper in this context.
  - Caution! The setting unit may be very hot.  
**DANGER OF BURNING!**
  - Please do not pull the paper towards the paper exit



Once you have ensured that both the jammed paper and any paper scraps have been removed, re-install the printer unit and close the machine and side paper feed cover.

### Note

If a paper jam occurs during fax reception, the remaining pages are stored in the memory. Once the paper jam has been eliminated, the remaining pages are printed out automatically.

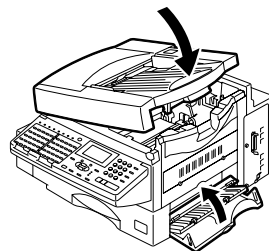

## Cleaning the printer unit

If toner inadvertently ingresses into the fax machine, it may be necessary to clean the loading corona.




The loading corona comprises a very thin, taut wire stretched within a metal cage along the entire length of the image drum.


The supplied special tool enables you to clean the charge corona without any danger.




- Switch of the fax machine
- Pull the release button to open the fax machine (see [page 7](#))

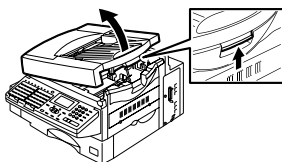

- Holding the printer unit by the green handle, remove it from the fax machine.

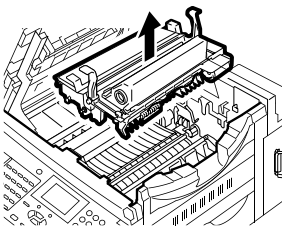


- Remove the developer unit from the drum unit.

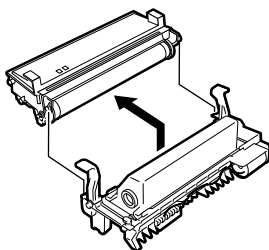

- Place the cleaning tool carefully on the metal cage (as illustrated in the drawing) and then slide it backwards and forwards several times along the entire length of the corona wire.

### NOTE

The other parts of the cleaning kit are reserved for a service call-out. Please store these objects in a safe place.

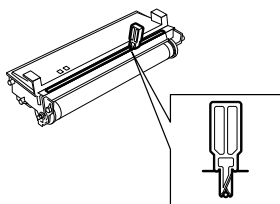




## Remote maintenance (COMLINE)

Your fax machine enables remote diagnosis to be carried out. This means that internal settings can be read and changed via the telephone line. In order to ensure that all requirements of data protection are observed, COMLINE is possible only if you temporarily enable your fax machine for this facility.

Remote maintenance may also be password protected.

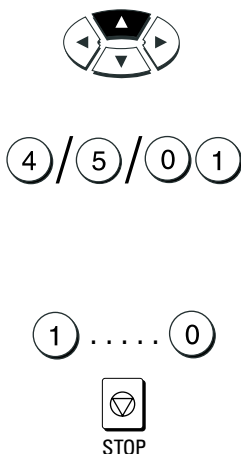

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

REMOTE ACCESS  
1.ON  
2.OFF

### To activate remote access:

Standby mode

### Start the menu

The first 4 menu items are displayed.


### Select a menu item

Make your selection

1: ON  
2: OFF

### Select a menu item

Press **STOP**, return to standby mode

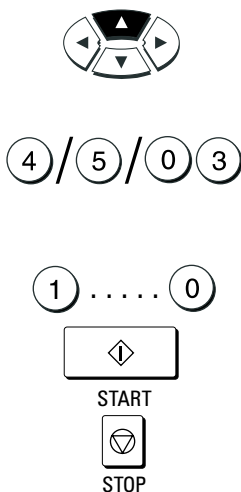

15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

SET RDC PASSWORD  
PASSWORD =(MAX20)  
—

### Configure password for remote access:

Standby mode

### Start the menu

The first 4 menu items are displayed.

### Select a menu item

Make your selection  
for password

### Enter password (digits)

confirm with **START**

Press **STOP**, return to standby mode

## Supply order

As soon as consumables (drum, toner, etc.) are expended, your fax machine can order replacements automatically. Before you configure this setting, it is advised that you contact your dealer to determine the conditions under which this automatic order service is to be performed.



15-MAR-00 WED 19:56  
RESIDUAL MEMORY 100%

1.COMM. OPTIONS  
2.LISTS  
3.INITIAL SETUP  
4.DEFAULT SETTINGS

SUPPLY ORDER SETUP  
1.DESTINATION SETUP  
2.SUPPLIES  
3.OTHER INFORMATION

Standby mode

**Start the menu**  
The first 4 menu items are displayed.

**Select a menu item**

- Make your selection
1. Enter the fax number of the contractual partner
  2. Select the consumption-specific criteria
  3. Further information on the order process
  4. Printout of the order list

**Select a menu item\***

**Press STOP, return to standby mode**

\*) For further details on these data, please contact your dealer or contractual partner.

## Download

This menu item allows additional technical settings that should only ever be performed by your dealer's qualified personnel.

## Connection to PABX

If your fax machine is connected to a PABX, additional sources of errors are possible. In the event of any problems, you should work through the following items and compare them against the current installation of your fax machine. Where necessary consult the person who installed your PABX.

- Does the PABX have public line capability?
- Does the PABX have DDI capability?
- Have you entered the „\*“ key before the actual fax number?
- How is the public line obtained (flash, number)?
- Which dialling mode will be used? \*

\*) The factory default in Germany is MFV (multiple frequency dialling). If impulse dialling (IWW) is to be used, please contact your dealer.

This TOSHIBA Facsimile Transceiver is intended for connection to public telecommunication services as follows:

By using the cable described as TEL LINE CABLE in the packaging list of the instruction manual. This cable plugs into the socket on the left hand side of the DP 120F which is marked LINE and the other end into the standard PSTN analogue socket found in the UK.

This terminal equipment complies with the following requirements:

- Group 3 fax modem
- Automatic call initiation
- Storage of telephone numbers for retrieval by a predetermined code
- Automatic dialling
- Automatic repeat attempts
- Call progress monitor
- Series connection facility
- LD or MF dialling
- Operation with or without dial tone being present.

Any other usage will invalidate the approval of the apparatus if as a result, it then ceases to conform to the standards against which approval was granted.

We declare, that TOSHIBA is using **CE** mark in compliance with EN 50 082-1, EN 55 022/B and EN 60 950

## EPA ENERGY STAR



For more information on the ENERGY STAR

Program, please contact:  
ENERGY STAR Printers/Fax Machines  
US EPA (62021)  
Washington, DC 20460

ENERGY STAR is an U.S. registered mark.

Addendum to the DP 120F Operator's Manual  
The United States Environmental Protection Agency (EPA) has introduced a voluntary program, the ENERGY STAR Program, to encourage the widespread and voluntary use of energy-efficient technologies that enhance the workplace, improve product performance, prevent pollution, and reduce your energy costs. As an ENERGY STAR Partner, to Toshiba Europa (I.G.) GmbH has determined that this facsimile model meets the ENERGY STAR guidelines for energy efficiency. ENERGY STAR guidelines require that all ENERGY STAR facsimiles maintain very low power consumption during idle state or have a „Power Saver“ feature that will automatically stand-down to an idle state after a period of inactivity.

## Declaration of conformity

We herewith declare:                      Manufacturer: Toshiba Europe GmbH  
    Address: Hammfelddamm 8  
    D-41460 Neuss,

that the product: Analog fax machine, Model: DP 80F/85F/120F,

fulfils the fundamental requirements pursuant to Article 3 of EU Directive 1999 / 5 / EC, and that the following harmonised standards apply:

EN 60950 :1992 + A1 :1993 + A2 :1993 + A3 :1995 + A4 :1997 + A11 :1997

EN 60825 - 1 :1994 + A11 :1996

EN 55024 :1998

EN 55022 :1998 Class A

EN 61000-3-2 :1995 + A1 :1998 + A2 :1998

EN 61000-3-3 :1995

Council Decision 1998 / 482 / EC of 20.07.98 (CTR 21)

The device is designed for all analog PBX interfaces in the European Union, as it has been tested pursuant to TBR 21.

## A

A5 Transmission report .... 90, 134  
Alphabet dial memory ..... 75  
Alternative fax number ..... 77

## B

Broadcast transmission ..... 46,  
Buffer memory ..... 39

## C

Call counter ..... 22  
Cancel transmission ..... 62  
Cancel transmission ..... 62  
Chain dialling ..... 58  
Cleaning, scanner ..... 146  
Code ..... 17, 104  
COMLINE ..... 151  
Consumables ..... 7, 150  
Contrast ..... 51, 124  
Copy ..... 35  
Corona ..... 148  
Cost items ..... 112  
Cover sheet ..... 56, 118

## D

Date ..... 21  
Delayed fax job ..... 103  
Delete direct dialling number .... 81  
Delete receipt ..... 33  
Delete, groups ..... 88  
Department code ..... 112  
Developer assembly ..... 7  
Dialling mode ..... 151  
Direct dialling ..... 75  
Direct-dialling keys, delete ..... 84  
Direct-dialling ..... 44, 82  
Document jam ..... 146  
Document length ..... 37, 122  
Documents ..... 37  
Drum unit ..... 9

## E

ECM ..... 52, 125  
Edit direct dialling number ..... 80  
Edit groups ..... 87  
Error codes ..... 142  
Error messages ..... 139  
Extension ..... 18, 151

## F

Fault lamp ..... 5  
Faults, during reception ..... 145  
Faults, during transmission .... 143  
Fine ..... 50, 124  
Flash key ..... 18

## G

Grey ..... 50  
Group dialling ..... 46  
Group ..... 46  
Group, free ..... 46

## I

Important transmission ..... 41  
Impulse dialling ..... 151  
Infobox ..... 66

## J

Job management ..... 40  
Job status ..... 121  
Job ..... 39, 120  
Journal ..... 95, 112

## L

Letterhead paper ..... 130  
Line monitoring ..... 48, 106  
List, departments ..... 102  
List, dial numbers ..... 101  
List, functions ..... 98  
List, reservations ..... 98

## M

Main connection ..... 18  
Memory card ..... 11  
Memory ..... 25, 39, 120  
Memory, send from ..... 39  
Memory, send from ..... 39, 42  
Menu ..... 12  
Multiple frequency dialling ..... 151  
Multiple printout ..... 32

## N

Network error report ..... 102  
New transmission ..... 60  
Number of calls ..... 22  
Number of rings ..... 22

## O

One-touch dial keys ..... 82

## P

Paper cassette ..... 10, 134  
Paper jam ..... 146  
Paper size ..... 37, 134  
PBX ..... 18  
Photo ..... 50  
Poll reservation, cancel ..... 68  
Polling protection ..... 64  
Polling, delete ..... 72  
Polling, multiple ..... 70  
Polling, permanent ..... 73  
Polling, single polling ..... 69  
Power saving ..... 110  
Printer unit ..... 7  
Printout, correct sequence ..... 31  
Private branch exchange .. 18, 150  
Program selection list ..... 89  
Public line ..... 18  
PWD ..... 132

## R

Receiving problems ..... 145  
Receiving, automatic ..... 22  
Receiving, manual ..... 22  
Receiving, memory ..... 25  
Receiving, paper ..... 10  
Receiving, privileged ..... 26  
Reception trailer (RTI) ..... 105  
Redialling ..... 59, 107  
Reduction, copies ..... 35  
Reduction, reception ..... 23  
Remote maintenance ..... 149  
Report, broadcast ..... 94  
Report, group polling ..... 94  
Report, send memory ..... 92  
Report, send ..... 89  
Reserve polling ..... 64, 66  
Resolution ..... 50, 124  
Ringer volume ..... 109  
RTI ..... 105

## S

Secure receiving ..... 34  
Secured transmission ..... 54, 126  
SEP ..... 132  
Separator ..... 116  
Single-sheet feed ..... 133  
Standby ..... 110  
STD ..... 50, 124  
SUB ..... 132  
Sub-addressing ..... 132  
Subscriber terminal connection . 9  
Superfine ..... 50, 124

**T**

Telephone book function .....	45
Telephone jack .....	9
Telephone network, connection to .....	9
Time .....	21
Toner .....	8
Toner, changing .....	8
TOSHIBA Code .....	64, 69
Transmission header .....	17, 104
Transmission report on A5 .....	90, 134
Transmission report: .....	89
Transmission security .....	54, 126
Transmission speed .....	55
Transmission, delayed .....	102
TTI .....	17, 104

**U**

Ultra-fine .....	50, 124
Unabbreviated dialling (chain dialling).....	58
User name .....	15

**V**

Voice .....	20
Volume .....	109