

The moment keeps going

Jackie on holidays  
- Great ocean road, Melbourne



7" Disco Series

*Bringing memories to life!*

Product User Manual (Model No's: DF-F7010b, DF-F7011s & DF-F7012t)

**DigiFrame**  
digital photo frame

## Precautions

- Do not subject the device to severe impact
- Do not use the device in extreme hot or cold, dusty or damp conditions. Do not expose it to direct sunshine.
- Keep the device away from water or other liquids. In the event that water or other liquids enter the device, power off the product immediately, and clean the device with soft cloth.
- Do not use a chemical solution to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- We are not responsible for the damages or lost data caused by malfunction, misusing, repairing the device or battery replacement
- Do not attempt to disassemble, repair or modify the product, or it will void the warranty
- To prevent overheating, never block vents on the back of the digital photo frame
- This manual is subject to change without prior notification. Functions or display of the actual product may be different from what is described in this manual. Please refer to the actual product.

## Clean the LCD Screen

- Do not apply cleaning liquid to the LCD screen. The screen may be easily scratched or broken. Wipe the screen with a soft, non-abrasive cloth.

## TABLE OF CONTENTS

1	PRODUCT OVERVIEW.....	4
2	FEATURES & SPECIFICATIONS.....	4
3	PACKAGE CONTENTS.....	4
4	BUTTONS & PORTS.....	5
5	REMOTE CONTROL .....	6
6	GETTING STARTED.....	7
7	TURN THE SCREEN ON or OFF .....	7
8	MAIN MENU.....	8
9	MODE SELECTION .....	8
10	MEMORY DEVICE MENU.....	8
11	THUMBNAIL VIEW.....	9
12	CALENDAR.....	9
13	SETTINGS MENU.....	10
14	TROUBLESHOOTING .....	13
15	TECHNICAL SPECIFICATIONS.....	14

## **1 PRODUCT OVERVIEW**

The DigiFrame 7inch “Disco Series” Digital Photo Frame enables you to view your photos on its high-resolution LCD screen. Simply insert a USB flash drive or SD memory card into the appropriate slot located on the back of the frame and your pictures will be displayed on the screen.


## **2 FEATURES & SPECIFICATIONS**

- 7inch TFT Digital LCD screen
- Screen Resolution - 800 x 480 pixels
- Aspect Ratio – 16:9
- View Photos, Listen to Music and Watch Videos files
- Changeable Frames INCLUDED
- Supports: SD / MMC / MS & XD memory cards
- USB Flash Drive Support
- Automatic Photo Slideshow
- Multi Languages
- Split Screen Function
- Picture Preview, Zoom and Rotate Functions
- Calendar with Time Clock and Alarms

## **3 PACKAGE CONTENTS**





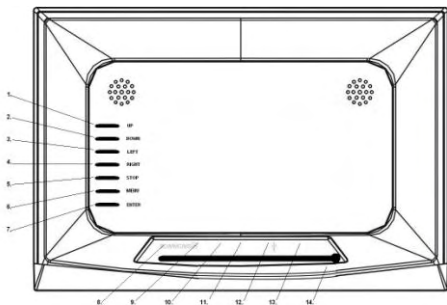






- 7" Digital Photo Frame
- Changeable Frames
- Remote Control
- Power Adaptor
- Warranty Card
- Operating Guide

## 4 BUTTONS & PORTS




1	<b>UP</b>	Move cursor Up
2	<b>DOWN</b>	Move cursor Down
3	<b>LEFT</b>	Move cursor Left / Previous
4	<b>RIGHT</b>	Move cursor Right / Next
5	<b>STOP</b>	EXIT and move "BACK" through menu options
6	<b>MENU</b>	Display Menu options
7	<b>ENTER</b>	Confirm Sections
8	<b>MEMORY CARD SLOT</b>	SD / MMC / MS / XD
9	<b>EARPHONE</b>	Connect to earphones ( <i>not supplied</i> )
10	<b>MIN-USB</b>	Connect to Mini USB
11	<b>USB port</b>	Connect to a USB flash drive
12	<b>DC IN port</b>	Connect to the AC adaptor
13	<b>ON/OFF</b>	Power On / Off switch
14	<b>UNIT STAND</b>	

## 5 REMOTE CONTROL

Key	Function
	Mute – No Sound
	Turn Power On or Off (on screen)
<b>PHOTO</b>	To Play Photo files
<b>MUSIC</b>	To Listen to Music files
<b>MOVIE</b>	To View Movie files
	Play or Pause files
<b>EXIT</b>	Move back through Menu options
 <b>UP</b>	Move cursor up / Rotate Anticlockwise
 <b>DOWN</b>	Move cursor down / Rotate Clockwise
 <b>LEFT/ PREVIOUS</b>	Move cursor left / Show previous photo
 <b>RIGHT/ NEXT</b>	Move cursor right / Show next photo
<b>ENTER</b>	Confirm a selection
<b>SETUP</b>	Enter or Exit main menu
<b>CALENDAR</b>	Display the calendar / clock
<b>VOL + and VOL -</b>	Adjust Volume levels up or down
	Forward
	Backward
	Previous
	Next



## 6 GETTING STARTED

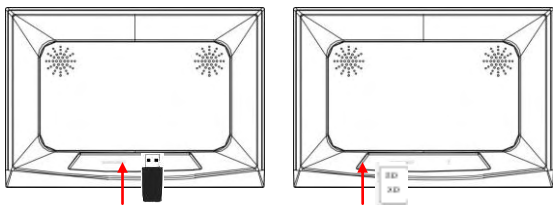- Step 1:** Adjust the stand outwards so the unit will rest in position
- Step 2:** Connect the device to a wall outlet and switch Power On using the switch located near the USB port
- Step 3:** Insert a USB flash drive into the USB port or a memory card into the card slot.




Memory cards should be inserted with the sticker facing toward you

## 7 TURN THE SCREEN ON or OFF

When you do not want to view the photos momentarily, you can press the  button on your remote control to turn off the screen for power saving. To turn on the screen, press the  button on the remote control again. To completely power down the unit, use the switch located on the back of the unit near the USB port.

## 8 MAIN MENU

Select from the following  
Menu options:

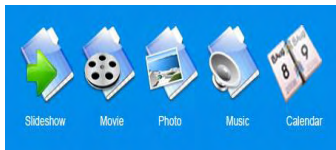

- \* **Slideshow** – Play Photos and Music together
- \* **Movie** Select & Play Video files (MPEG1/2/4, AVI, DIVX)
- \* **Photos** Select & Play Photo files (JPEG)
- \* **Music** Select & Play Music files (MP3 & WMA)
- \* **Calendar** Access Calendar & Clock

## 9 MODE SELECTION

Press the **LEFT / RIGHT** buttons to choose the desired mode.

Use the “**ENTER**” button to confirm all selections.


Press **EXIT / STOP** to move backwards through the sub menus

## 10 MEMORY DEVICE MENU

After mode selection, use the  
**LEFT / RIGHT** buttons to select  
the desired Media Storage  
Device (location of desired files)

To select press “**ENTER**”

(NOTE: “Favourite” drive contains system files only)

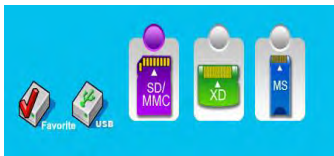

### **Previous/Next**

Press the **LEFT** button to display the previous photo.

Press the **RIGHT** button to display the next photo.



## 11 THUMBNAIL VIEW

Press the **“ARROW Buttons”** to select photo from the thumbnail view. Press the **“ENTER”** button to confirm and start viewing the photos.



## 12 CALENDAR

Your DigiFrame can also be used as a tabletop calendar with time and an alarm clock.

To enter the calendar view mode, navigate to **“CALENDAR”** from the main menu and then press the **“ENTER”** button to confirm. The calendar & clock page will also display your photos in a slide show.



Press the **LEFT, RIGHT, UP** and **DOWN** button to select the date.  
Press the **“ENTER”** button to confirm your selections  
Press the **EXIT/STOP** button to return to the main menu.

## 13 SETTINGS MENU

Press the “**Setup**” key on the remote control (or Menu button on the unit) and a popup menu will appear (invalid during Auto slideshow and whilst in CALENDAR mode)

Use **UP** and **DOWN** keys to select the desired settings and use the “**ENTER**” button to enter the sub menu settings.

Use the “**ARROW Keys**” to navigate and adjust and then press the “**ENTER**” button to confirm the settings changes.

Press **EXIT** to move backwards through the menus and return to the Main Menu.

### 1. Image Size

Select this option to set the view mode of the screen.

Three options - Auto Fit, Optimal and Full

### 2. Slide Show Effects

Select this option to set the transition effect of the slide show.

### 3. Slide Show Interval

Set the interval time between slides. From 1 second to 3 hours  
(Default time is 7 seconds – large files may take longer to load)

### 4. Split Slide Show

Turn On/Off split screen slide show (4 photos will display at once)

### 5. Music play mode

Single Repeat, Circular, No Repeat and Single mode options

## 6. Start Slideshow

## 7. Rotate

Use “**ENTER**” key to rotate the picture clockwise from 90° - 360° (in slideshow mode, press STOP/PAUSE first) – Available in full screen display.

## 8. ZOOM

Use “**ENTER**” key to zoom in on the picture up to 10X. When the photo is enlarged, you can press the “**ARROW Keys**” to roam on the photo. When the picture zooms to 10X, press “**ENTER**” to restore the picture to original size - Available in full screen display.

## 9. Save Picture

Available in picture playback mode

## 10. Reset Settings

Select this option to restore the system settings to the default factory settings.

## 11. Languages

Select this option to set the Menu Language. If the wrong language is selected by accident - Choose the 11th option from the top (this is the Languages option) From Top to bottom they are

- |            |               |
|------------|---------------|
| 1. English | 5. Spanish    |
| 2. French  | 5. Portuguese |
| 3. Italian | 6.            |
| 4. German  | 8. Dutch      |

## 12. Brightness – Contrast – Color & Tint

Use these options to adjust the image display properties

## 13. Alarm

To enable the alarm,

- (1) Press **SETUP** button to select “SetTime/Set Alarm” and then press the “**ENTER**” button to confirm.
- (2) Press **UP** and **DOWN** button to select “Set Alarm”.
- (3) Press the **LEFT** and **RIGHT** button to select “OFF” and then press the **UP / DOWN** button to change “OFF” to “ON”.
- (4) Press the **LEFT** and **RIGHT** button to select among the time setting items – hour, minute, second. Press the **UP** and **DOWN** button to set the time item.
- (5) press the “**ENTER**” to confirm the alarm time. The alarm should ring at the specified time every day.

NOTE: The frame must be on for the alarm to go off

## 16. Time

To setup and Save the Time and Date Settings

- (1) Press the **UP** and **DOWN** buttons to select among the time setting items – Year, Month, Day, Hour, Minute, Second.
- (2) Use the **LEFT** and **RIGHT** buttons to adjust
- (3) Then move down to “Save Time” to confirm these settings

## 14 TROUBLESHOOTING

The digital photo frame will not power on.	Make sure that the AC adapter is connected securely to the frame and the power source.
Remote control does not work	Ensure that a working battery is inserted
The images can not be displayed.	Make sure the image file is in a supported format
The image is distorted or blurred.	Resolution of the image is too low. Try using a file with a higher resolution.
The device responds very slowly to commands.	There are too many files on the memory device.

## 15 TECHNICAL SPECIFICATIONS

Item	Description
Display	7.0-inch TFT LCD screen
LCD Resolution	800 x 480
Photo Formats	JPEG
Music Formats	MP3, WMA
Video Formats	MPEG1/2/4, AVI, DIVX
Supports Memory Card	SD / MMC / MS / XD
USB Interface	USB 2.0 Host (High Speed)
Other	Calendar, Clock and Alarm
Supports Languages	English / French / Italian / German Spanish & Portuguese
Memory Card Capacity	Up to 8GB
USB Flash Drive	Up to 8GB
Power Supply	AC Adapter, Input 100 ~ 240V, DC 12V 1A
Storage Temp*	-20% ~ +55%
Ambient Temp*	0°C ~ +55%
Operation Humidity*	20% ~ 80%
Storage Humidity*	20% ~ 80%



# Thankyou!

We hope you enjoy your DigiFrame  
and all your special memories.

For additional hints & tips – visit us at [www.digiframe.com.au](http://www.digiframe.com.au)  
For Repairs & Service please contact CUSTOMER SERVICE on 1300 559 881  
or email [support@digiframe.com.au](mailto:support@digiframe.com.au)

**DigiFrame**  
digital photo frame