

USER MANUAL



BREAD **TOASTER**

SY•TS100

WELCOME

Welcome to Sytech! Thank you for purchasing the bread toaster SY-TS100. Please read this manual carefully before operating your product and pay close attention to the precautions which are mentioned below. Store this user manual in a safe place for future reference

IMPORTANT SAFEGUARDS

The following safety precautions should always be followed when using domestic electrical products to reduce the risk of electric shock, personal injury or fire. It is important to keep these instructions for future reference after you have read and understood them and before attempting to use the product.



This symbol warns you of
Dangers to your health and
Indicates possible injury risks



This symbol warns you of Hot
surfaces.



This symbol refers
to possible hazards
to the machine or
other objects

When using this and other electrical appliances, the basic safety precautions listed should always be followed:

- Read all instructions before using the appliance.



Do not touch hot surfaces. Use handles or knobs. Chrome surfaces become extremely hot.

CAUTION

To prevent against electrical hazards, do not immerse the cord, plug or toaster in water or other liquid.



Close supervision is necessary when any appliance is used by or near children.

- Always unplug the appliance from the outlet when not in use and before cleaning. Allow to cool before cleaning and handling.

CAUTION

Do not operate any appliance with a damaged cord or plug, after appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to an authorized service facility. For examination, repair or electrical or mechanical adjustment.

- Do not use any unauthorized attachments. This will void the warranty and may cause fire, electric shock or injury.
- Do not use outdoors.



Do not let cord hang over edge of table or counter or touch hot surfaces.

- Do not place toaster on or near a hot gas or electric burner or a heated oven.
- To disconnect, grasp plug and remove from outlet. Never unplug by pulling the cord.
- Do not use toaster for other than intended use.

CAUTION

Oversized foods. Metal foil packages or utensils must not be inserted in the toaster as they may involve a risk of fire or electric shock.

- Do not operate toaster near flammable materials such as curtains, wall fabric, etc. to prevent fire.
- Do not attempt to dislodge food when the toaster is plugged into electrical outlet.


- To avoid possibility of fire, do not leave toaster unattended during use.
 - Clean out accumulated crumbs frequently to avoid risk of fire or toaster malfunction. Do not use foods that will drip coatings or fillings when heated. Such accumulations inside the toaster create unsanitary conditions and the possibility of fire or toaster malfunction. Unplug when not in use and before cleaning.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- ⚠ This appliance is not intended for use by persons (include children) with reduce physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
- ⚠ Children should be supervised to ensure that they do not play with the appliance.

CAUTION

To reduce the risk of fire or electrical shock, do not remove the bottom cover of the toaster. There are no user serviceable parts inside.

A short power-supply cord is provided to reduce the risks resulting from the cord being entangled or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the countertop or table top where it can be pulled by children or tripped over.

PARTS OF THE SY-TS100

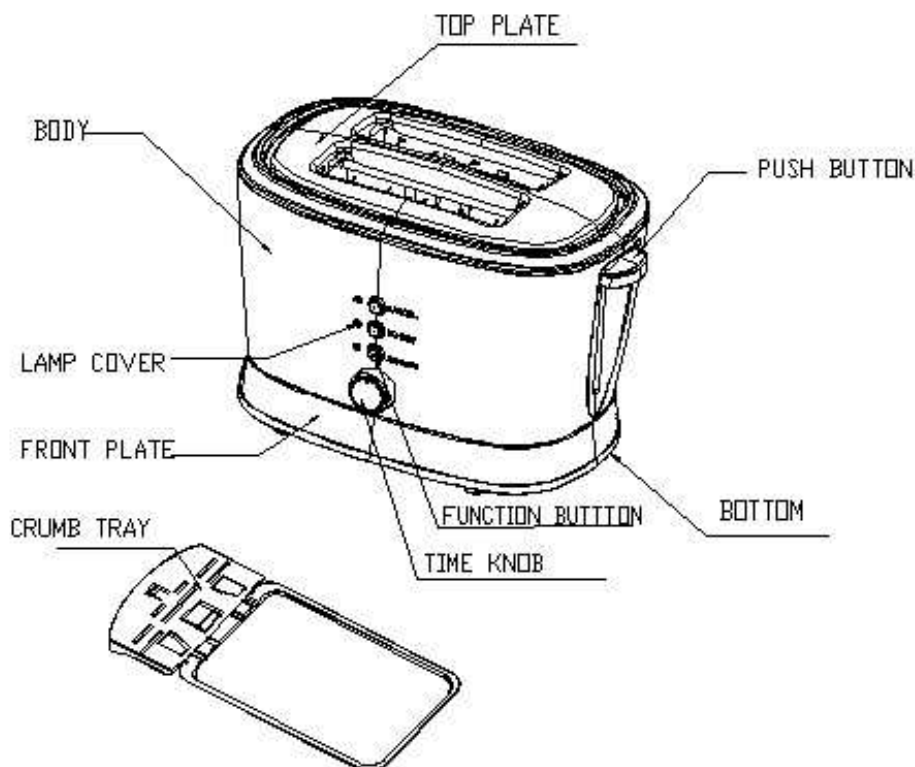

USE & CARE

Before first use, remove all packaging from toaster. Check inside toaster slots for packaging and remove.

Note: Do not place any bread in the toaster during the first toasting to allow the new elements to preheat and burn off any dust that may have accumulated during assembly.

1. Make sure the crumb tray is in place and the bread compartment lever is on the UP position.
2. Set the toaster on a flat, stable countertop surface away from the edge and at least 3 inches away from the wall or rear of a counter.
3. Unwind the power cord and plug it into a nearby outlet.
4. Insert the slices of bread. Be sure the bread compartment lever is on UP position.
5. Turn the browning selector to the desired position. The higher the number (1-7), the darker the toast color.
6. Press the bread compartment lever down until it locks into position.
7. When the toasting cycle is completed the toast is automatically ejected up. To terminate the toasting cycle before it is completed, simply press the cancel button.
8. After use, unplug the toaster from electrical outlet and store in a safe place.

TOASTING GUIDE

Preheating is not necessary before using toaster. When using it for the first time, use the toaster with no bread inside to release the smoke and gas that electrical appliances usually emit when they are new.

- For slightly dry bread, use a lower light/dark setting than normal.
- For fresh bread or whole wheat, use a higher setting than normal.
- Breads with very uneven surfaces (such as English muffins) will require a higher light/dark setting.
- Thick pieces of bread will take longer to toast
- Very thick pieces may require two cycles.
- When toasting raisin or other fruit breads, remove any loose raisins from the surface of the bread before placing into the toaster. This will help prevent pieces from falling into the toaster or sticking on the heating elements on the sides of the slots.
- Single slice toasting: If you are toasting as single slice of bread, set the light/dark selector lighter than normal. The toaster is designed to heat both the toasting compartments at once. By reducing the toasting time for a single slice it will not be over toasted.
- Frozen breads: Frozen waffles, pancakes, French toast and frozen bagels should be warmed using the defrost button.
- Pastries: Exercise caution when toasting pastries. The filling can become quite hot long before the surface of the pastry becomes brown.

DEFROST BUTTON

The defrost button is designed to firstly defrost and then toast the bread, which extends the toasting cycle slightly.

1. Insert slices of bread into the bread slots.
2. Turn the light/dark selector onto the desired position:
 - Setting 1-2: for refrigerated breads and thinner frozen items such as frozen pancakes.
 - Setting 3-4: for pastries, frozen waffles, thin French toast and refrigerated bagels.
 - Setting 5-7: for thicker frozen items such as bagels, hand cut bread and thick French toast.
3. Press the lever down until it locks into position.
4. When the cycle is completed the lever will automatically raise the toast up. To terminate the cycle before it is completed, simply press the cancel button.

REHEAT BUTTON

1. Insert slices of bread into the bread slots.
2. Press the bread lever down until it locks into position.
3. Press the reheat button.
4. When the cycle is completed the lever will raise the toast up.
5. If you wish to stop the toasting before it is finished, simply press the cancel button.

CLEANING AND MAINTENANCE

1. Always unplug the toaster from the electrical outlet and allow it to cool before cleaning.
2. Do not use abrasive cleaners. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply any cleaning agent to cloth, not directly onto the toaster.
3. To remove the crumbs, slide out the crumb tray and wash away the crumbs. Then wipe it, clean it and store it away. Never operate the toaster without the crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and shake gently. Never insert any hard or sharp instrument into the slots as this could damage the toaster and cause a safety hazard.
5. Never wrap the cord around the outsides of the toaster, use the cord storage cleats on the bottom of the toaster.

TOASTER FEATURES

1. Wide toasting slots: 2 slots
2. Crumb tray: Removes easily to clean crumbs from the bottom of the toaster.
3. Bread compartment lever: start the toasting process when pressed down.
4. Browning selector: Sets desired toast color from light to dark.
5. Defrost function: Defrosts and toasts frozen bread. Indicator lights when selected.
6. Cancel function: Interrupts toasting process when pressed.
7. Reheat function: Reheats without browning. Indicator lights when selected.
8. Cord storage: Wrap the cord below the unit to store it safely.

SPECIFICATIONS

2 slice wide slot toaster
Plastic Tri-wall cool touch housing
3 main functions: defrost, reheat and cancel
Anti-jam system
Indicator functioning light
Power: 680-820W
Power Source: 220-240 50/60Hz

DECLARATION OF CONFORMITY

Manufacturer Name: Satyatrade S. L.
Address: Pol.Ind.La Raya. C/ Guadalquivir, 2.
Camarma de Esteruelas, 28816 Madrid
Tel: 902 430 967
Fax: 91 8864285
NIF: B83254763
Manufacturing country: China
Description: Toaster
Sytech® SY-TS100 complies with the following directives:

CE Standard: Directive 2004/108/CE

LVD Standard: Low Voltage Directive 2006/95/EC

ROHS Standard: 2011/65/EU Restriction of Hazardous Substances

Signed: Ajeet Nebhwani Utamchandani
Sole Administrator

