

# CHEETAH<sup>®</sup>

## GADGET



**A185A**

Plasma Rocket Lamp

**User Manual**

Please retain for future reference



### **IMPORTANT**

**Installer and Users please note:**

These instructions should be read carefully and left with the user of the product for future reference. Before use please inspect the product for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

## OPERATING INSTRUCTIONS

1. Place the rocket lamp on a clean, level surface.
2. Connect the power plug (A) to the power socket (B) on the base of the unit (see fig.1)
3. Connect the mains plug to a mains socket.
4. Move the power switch (C) to the right to switch the unit on.

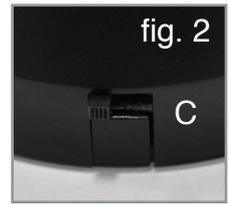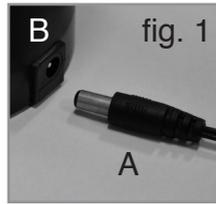

## CLEANING AND MAINTENANCE

Ensure that the power lead has been removed and the power switches (C) is set to the off position. The unit should be cleaned with a soft, dry brush. Do not use water or immerse in water. Do not use any chemical or abrasive cleaners to clean the lamp.

## SAFETY PRECAUTIONS

- This is not a toy. Keep out of the reach of children.
- Do not attempt to open the casing of the lamp, there are no user serviceable parts inside.
- Do not attempt to remove the glass vessel from the base. **Risk of electric shock!**
- Use only with the supplied adaptor.
- Do not allow metal objects to touch the glass vessel.
- Do not expose the lamp to rain or moisture. For indoor use only.
- Allow adequate ventilation around the lamp when in use and do not place near radiators, heaters or fires.
- Do not use the lamp if parts, including the power cable, are damaged.
- Always unplug the lamp when not in use.



## SPECIFICATIONS

Material.....	Plastic and Glass
Power.....	12V~
Product Weight.....	750g
Product Dimensions.....	95 x 95 x 358mm

## POWER SUPPLY

Power .....	230V~, 50Hz
Output.....	12V~, 500mA, max 6VA

## SERVICE WARRANTY

Electrovision guarantees the product free from defects in materials and workmanship for a period of twelve months. Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts are made to service or modify the appliance, then the warranty will be rendered void. The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights. Our guarantee is administered by our retailers. If your product arrives damaged, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. Do not contact Electrovision, only your retailer can arrange a replacement. If the product needs to be repaired or replaced, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. If you have just received your product and require technical help in using it, please call our Help Desk on (0845) 459 4816. If you have any other technical queries about the product, please call our Help Desk on (0845) 459 4816.

Electrovision Ltd., Lancots Lane, Sutton, St. Helens, Merseyside. WA9 3EX