





OneRemote RMB4 Converter for Beo4

Type 35105003

Controls

Samsung

Samsung Flat Panel TV
All Models



Bose

1SR Sound system



Lava

TV Wallmount

User Manual



List of Contents

Getting Started	page	2
The OneRemote Converter for Beo4	page	3
Controlling with OneRemote.	page	4
Coloured Function Keys	page	4
Go, Joystick or Stop Shifted Operation	page	4
Programme Stepping, Up/ Down Manoeuvring in menus	page	5
Setting the Zap Mode Option	page	5
Disabling and Dual TV Option	page	6
Control Table for Beo4 with a 🏻 Key	page	7
Lava TV motorized wall mount option	page	8
Control Table for Beo4 without a 💩 Key. (Beo4 Navi)	page	8
Setting the OneRemote Volume Option	page	9
The VMEM/ VTAPE Key Option	page	10
The DTV/ SATELLITE Key Option	page	11
The DVD Key Option	page	12
The VAUX Key Option	page	13



Getting Started

With the OneRemote converter installed in your Bang & Olufsen Beo4 remote control terminal you may control your Samsung TV with this terminal. This guide explains how.

If your Beo4 has a experiment key, and the OneRemote converter has been optimized for your equipment setup then.....



>> continue to the control table on page 7.

If your Beo4 does **not** have a key, it is a Beo4 Navi type. In the Beo4 Navi the key has been replaced by a small joy-stick that adds further functionality, when enabled.

If your Beo4 is the Navi type and the OneRemote converter has been optimized

for your equipment setup then....




>> continue to the control table on page 8.

If the OneRemote converter has not yet been optimized for your setup, you might want to refer to the installation section below about the initial setup and option programming. No programming is needed during everyday use.

The OneRemote converter installed in your Beo4 remote control may be used in any Beo4 generation, in the Beo4 Navi with extra functionality.

To get the most of your modified Beo4 the OneRemote converter must be programmed according to the Beo4 model and the equipment setup that your TV is a part of. Refer to page 5 and onwards for the initial programming.

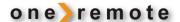


The OneRemote Converter for the Beo4 Remote Control

The OneRemote converter is a small microcomputer module specifically designed to be installed in a Bang & Olufsen Beo4 remote control terminal.

The microcomputer is converting commands meant for Bang & Olufsen equipment to commands for third party equipment of various types.

Each OneRemote converter type is programmed to control a specific product like an Apple iPod docking station, a flat panel TV, a curtain controller etc.

The converter enables the Beo4 to control a third party device, while still being able to control any other Bang & Olufsen product.

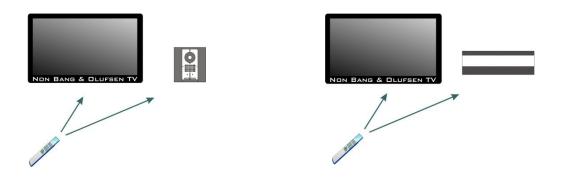

With a Bang & Olufsen audio master in the room it may be used for handling the TV sound. Speakers connected to an audio master are usually of a much better quality than the speakers in a flat panel TV. In a B&O link room setup with BeoLink Active you may also use the active speakers to improve sound from most TVs.

Only a simple audio cable is needed between the TV and the audio master. See the option programming section about AAUX and PC modes on page 9.



Controlling with OneRemote

Controlling a non-B&O TV using the OneRemote RMB4 modified Beo4 requires the user to be familiar with the original remote control as described in the TV's user manual.

A Beo4 remote control is not equipped with as many keys as found in most other remotes. But by combining specific key entries on the OneRemote RMB4 a suitable control layout has been developed.


The Beo4 Navi model introduces new keys, making it easier to create a control layout closer to the TV's original one. Thus there are two different control layouts for the OneRemote modified Beo4.

Coloured Function Keys

To ease the access to more important control functions the control priority for the coloured function keys has been changed to a lower level, i.e. a level where one command requires dual successive key entries. Thus an original "colour" command requires the key to be pressed prior to the coloured key itself. The key has been "shifted" with a

This change of priority is used in all modified Beo4 except for the Beo4 Navi, where it is not necessary.

New functions have been assigned to the coloured keys in the direct mode. Most often as follows:

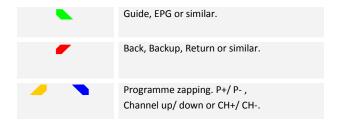

When in Beo4 Navi mode, the coloured keys are not shifted. Refer to the conversion tables on page 7 and 8.

GO, Joystick or STOP Shifted Controls

Some of the OneRemote RMB4 keys are found in two or three control sequences and shifted by pressing a • , • or stop key prior to the key itself.

In case of Beo4 Navi a PLAY key, not found on older generations of Beo4, replaces the wey, when in 'mode 2'. In mode 2 the OneRemote RMB4 converter uses the Joystick key for shifting instead of . Refer to page 8.

Keys that have been assigned secondary functions are listed in the control tables on page 7 and 8.



Programme Stepping, Up/ Down Manoeuvring in Menus.

Most set top boxes and TVs have 4 arrow keys for manoeuvring in on-screen menus, up, down, left and right. In addition to these keys they are also equipped with separate programme stepping keys for zapping through the programmes. Often these keys are named P+, P-, CH+ or CH-. This is also the case for a Samsung TV.

OneRemote convertes often use the and the keys for programme zapping. This way the four up, down, left and right keys are free for manoeuvring in on-screen menus.

Note.

With a Beo4 Navi in mode 2, manoeuvring in on-screen menus is carried out by the 'joy-stick', not available on previous Beo4 models.

Thus the coloured keys on a Beo4 Navi in 'mode 2' have NOT been shifted.

Setting the Zap Mode Option

If the OneRemote converter is installed in a Beo4 with a

key, the keys

and


are used for programme stepping. The

A and

keys are used to manoeuvre up and down in on-screen menus.

This is the default factory setting, as described above.

If you prefer this control layout changed enter the options listed below.

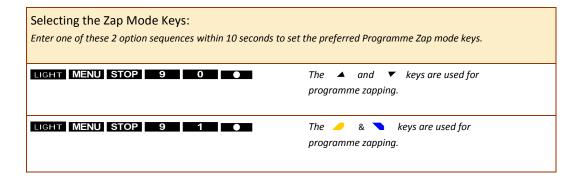



Disabling and Dual TV Options

The OneRemote RMB4 converter in the modified Beo4 remote control can be enabled or disabled using below options. When disabled the Beo4 remote control operates as a non-modified Beo4.

In DUAL TV-mode the OneRemote RMB4 converter allows for control of both a Bang & Olufsen TV and the Samsung tv for which it was designed.

Disabling and Dual TV Modes: Enter one of these 3 option sequences within 10 seconds to set the preferred mode.	
LIGHT MENU STOP 2 0 •	Disables the OneRemote converter.
LIGHT MENU STOP 2 1 •	Enables the OneRemote converter.
LIGHT MENU STOP 2 2 •	Enables the OneRemote converter in Dual TV mode.
	In this mode: TV + 1 starts control of a B&O TV.
	TV + 2 starts control of the Samsung TV



Control Table for Beo4 with a





- or Beo4 Type 1710 in mode 2.



Everyday Control

TV	Turns on the TV
	Turns off the TV

Enter

Manoeuvring in on-screen menus. Manoeuvring in on-screen menus.

*1*2 Prog + TTV page+ Prog -TTV page -*1*2 Guide *1*2 Return *1*2 TTV Hold

EXIT Exit MENU Menu TTV Index MENU Source

^{*2} As the direct function of the coloured function keys has been assigned to other functions, these have to be preceded with a retrieve the actual coloured function.





Green function Yellow function Red function

Text TV Control

TEXT Text TV On/ Mix TV Text TV Off

Playback Controls

©	Play press 1 sec.
STOP STOP	Stop
© STOP	Pause
◎ ↔ / →	Rew/ FF
RECORD	Record

Other Controls

60 1 60 2 60 3 60 4 60 5 5 60 60 60 60 60 60 60 60 60 60 60 60 60	Tools Mediaplay Info CH list Content	TTV Show TTV Size
© 6 © 7 © 9 STOP EXIT	Subtitle Internet 3D AD	

Special/ Alternative Controls

<u>oo</u> 0	Play
60 8	Record
© EXIT	Options

www.oneremote.dk

^{*1} The up/down arrow controls may be exchanged with the blue and yellow keys. See page 6.



Control Table for Beo4 with a Joystick type 1710 without a



Key in mode 1 or 3



This table shows the converted keys for a OneRemote RMB4 converter installed in a Beo4 Navi type remote control. Beo4 Navi has a joystick (🔸) instead of the 🐵 key. This joystik adds 8 extra control possibilities, as it can be moved forward, backwards and to the sides.

In the table these functions are shown like this:

Joystick operations:

- Pressing the Joystick down once.
- Pressing the Joystick down twice.
- Pushing the Joystick upwards.

If your Beo4 has a expression key, refer to the table on page 7.

If your Beo4 is a Navi type and the Navi key has **not** been enabled (mode2), refer to the table on page 7.

Everyday Control

TV

Turns on the TV Turns off the TV

Enter

BACK **BACK** - short press: Return

- long press: Exit

MENU

Menu TTV Index Source listing

MENU

CH+/CH-

Prev. channel Guide

Tools TTV Size

- CH list TTV Hide
- **FAV**

Options

Internet

info

TTV Show



3D

Yellow key Blue key Green key Red key

Text TV Control

TEXT TV Text TV On/Mix Text TV Off

Playback Controls

PLAY

STOP STOP

Pause

Play

Stop

STOP

Rew FF

Other Controls

Content Subtitle

Media Play

Special/ Alternative Controls

EXIT STOP EXIT

Record 3D AD

Navi keys are used for manoeuvring in

on-screen menus.



Setting the OneRemote Volume Option

When the **TV** key is pressed, the Samsung TV is powered up automatically and turned on in the TV mode.

If a Bang & Olufsen audio master is in the room, it is possible to use it for handling the sound. Below options determine how the One Remote RMB4 handles volume in the TV mode.

This option also allows for the power up other B&O devices than the TV, when is selected. The audio signal from the TV is wired to the audio master using a Line to Datalink cable. Moving the TV sound to the speakers of the audio master improves the sound quality significantly.







Volume Options Enter one of these option sequences within 10 seconds:	Sound Destination Alternative speakers.	Volume Control Volume data format emitted from Beo4.
LIGHT MENU STOP 0 0	Volume disabled	No volume control
LIGHT MENU STOP 0 1 •	The Samsung TV	Samsung format
LIGHT MENU STOP 0 2 •	*1	AAUX in B&O format
LIGHT MENU STOP 0 3	PC *2	PC in B&O format
LIGHT MENU STOP 0 4 •	AAUX + 6 *3	AAUX in B&O format
LIGHT MENU STOP 0 5	AAUX + 7 *3	AAUX in B&O format
LIGHT MENU STOP 0 6	TV *4	TV in B&O format
LIGHT MENU STOP 0 7 •	Bose 1SR *5	Samsung/ Bose 1SR

^{*1} When TV is pressed the Beo4 it sends a Power On command to the TV. At the same time the Beo4 sends a AAUX command to a Bang & Olufsen audio master. Until another source is selected, volume commands will be directed to the B&O audio master.

When ITV is pressed the Beo4 sends a Power On command to the TV.

When spressed the Beo4 sends a Power On/ off command to a Bose 1SR Speaker system.

Until another source is selected, volume commands will be formatted for a Bose 1SR Speaker system. The speakers in the Samsung TV can be disabled in the setup menu of the TV.

www.oneremote.dk

^{*2} When TV is pressed the Beo4 sends a Power On command to the TV. At the same the Beo4 sends a PC command to a Bang & Olufsen system. Until another source is selected, volume commands will be directed to the B&O system. Via a BeoLink Active sound may be moved from the TV to PowerLink speakers.

^{*3} When TV is pressed the Beo4 it sends a Power On command to the TV. At the same the Beo4 sends a AAUX + 6 or 7 command to a Bang & Olufsen linksystem. Until another source is selected, volume commands will be directed to the B&O linksystem.

^{*4} When TV is pressed the Beo4 sends a Power On command to the TV. At the same the Beo4 sends a TV command to a Bang & Olufsen linksystem. Until another source is selected, volume commands will be directed to the B&O linksystem. Via a BeoLink Converter sound may be moved from & Olufsen audio master via its MasterLink input.

^{*5} Bose 1SR option.



The Lava Wallmount Option

A OneRemote converter **30012644** for Lava TV moterized wallmount, operates on the TV and Standby command of a Bang & Olufsen remote control. As this converter converts these commands to operate a Samsung TV, it is nessesary to send both the unconverted B&O data for these operations and the converted for the TV.

Lava TV Wallmount option Enter one of these option sequences within 10 seconds:		
LIGHT MENU STOP 4 0 •	Lava TV Wallmount mode disabled	
LIGHT MENU STOP 4 1	Lava TVWallmount enabled.	

The VMEM / VTAPE Key Option

On the OneRemote modified Beo4 remote control the VMEM key can be programmed to open a specific source on the Samsung TV.

VMEM/ VTAPE Options Enter one of these option sequences within 10 seconds to select the source on the Samsung TV that shall be selected with the VMEM or VTAPE key.		
LIGHT MENU VMEM 0 1	No new source selected.	
LIGHT MENU VMEM 1 1 •	The AV1 socket on the TV is opened.	
LIGHT MENU VMEM 2 1 •	The AV2 socket on the TV is opened.	
LIGHT MENU VMEM 3 1 ●	The DTV tuner on the TV is opened.	
LIGHT MENU VMEM 4 1 •	The Component 1 socket is shifted to.	
LIGHT MENU VMEM 5 1	The Component 2 socket is accessed.	
LIGHT MENU VMEM 6 1 ●	The HDMI 1 socket is accessed.	
LIGHT MENU VMEM 7 1 ●	The HDMI 2 socket is accessed.	
LIGHT MENU VMEM 8 1 ●	S-VHS 1	
LIGHT MENU VMEM 9 1 •	USB Wiselink	

As the OneRemote RMB4 converter is able to operate many different TV models, some sources in above table might not be available on your TV. The only way to find out, if the TV accepts these codes, is testing each of the options.

If a source is not accessible using one of these options, it must be accessed as when using the TV's original remote control. Using the source key.

Note. If the digit 1 is replaced by a 2 , all control commands are transmitted in the Bang & Olufsen format.



The DTV/ SAT Key Option

On the OneRemote modified Beo4 remote control the DTV/SAT key can be programmed to open a specific source on the Samsung TV.

DTV/ SAT Options Enter one of these option sequences within 10 seconds to select the source on the Samsung TV that shall be selected with the DTV/ SAT key.		
LIGHT MENU DTV 0 1 •	No new source selected.	
LIGHT MENU DTV 1 1 0	The AV1 socket on the TV is opened.	
LIGHT MENU DTV 2 1 •	The AV2 socket on the TV is opened.	
LIGHT MENU DTV 3 1 •	The DTV tuner on the TV is opened.	
LIGHT MENU DTV 4 1 •	The Component 1 socket is shifted to.	
LIGHT MENU DTV 5 1 •	The Component 2 socket is accessed.	
LIGHT MENU DTV 6 1 •	The HDMI 1 socket is accessed.	
LIGHT MENU DTV 7 1 ●	The HDMI 2 socket is accessed.	
LIGHT MENU DTV 8 1 •	S-VHS 1	
LIGHT MENU DTV 9 1 •	USB Wiselink	

As the OneRemote RMB4 converter is able to operate many different TV models, some sources in above table might not be available on your TV. The only way to find out, if the TV accepts these codes, is testing each of the options.

If a source is not accessible using one of these options, it must be accessed as when using the TV's original remote control. Using the source key.

Note. If the digit 11 is replaced by a 21, all control commands are transmitted in the Bang & Olufsen format.



The DVD Key Option

On the OneRemote modified Beo4 remote control the DVD key can be programmed to open a specific source on the Samsung TV.

DVD Options Enter one of these option sequences within 10 seconds to select the source on the Samsung TV that shall be selected with the DVD key.		
LIGHT MENU DVD 0 1	No new source selected.	
LIGHT MENU DVD 1 1 0	The AV1 socket on the TV is opened.	
LIGHT MENU DVD 2 1 ●	The AV2 socket on the TV is opened.	
LIGHT MENU DVD 3 1 ●	The DTV tuner on the TV is opened.	
LIGHT MENU DVD 4 1 ●	The Component 1 socket is shifted to.	
LIGHT MENU DVD 5 1 ●	The Component 2 socket is accessed.	
LIGHT MENU DVD 6 1 ●	The HDMI 1 socket is accessed.	
LIGHT MENU DVD 7 1 ●	The HDMI 2 socket is accessed.	
LIGHT MENU DVD 8 1 ●	S-VHS 1	
LIGHT MENU DVD 9 1 •	USB Wiselink	

As the OneRemote RMB4 converter is able to operate many different TV models, some sources in above table might not be available on your TV. The only way to find out, if the TV accepts these codes, is testing each of the options.

If a source is not accessible using one of these options, it must be accessed as when using the TV's original remote control. Using the source key.

Note. If the digit 1 is replaced by a 2 , all control commands are transmitted in the Bang & Olufsen format.



The Beo4 VAUX Key Option

On the OneRemote modified Beo4 remote control the VAUX key in the List-menu can be programmed to open a specific source on the Samsung TV.

VAUX Options Enter one of these option sequences within 10 seconds to select the source on the Samsung TV that shall be selected with the VAUX key.		
LIGHT MENU VAUX 0 1 •	No new source selected.	
LIGHT MENU VAUX 1 1 0	The AV1 socket on the TV is opened.	
LIGHT MENU VAUX 2 1 ●	The AV2 socket on the TV is opened.	
LIGHT MENU VAUX 3 1 ●	The DTV tuner on the TV is opened.	
LIGHT MENU VAUX 4 1 ●	The Component 1 socket is shifted to.	
LIGHT MENU VAUX 5 1 ●	The Component 2 socket is accessed.	
LIGHT MENU VAUX 6 1 ●	The HDMI 1 socket is accessed.	
LIGHT MENU VAUX 7 1 ●	The HDMI 2 socket is accessed.	
LIGHT MENU VAUX 8 1 ●	S-VHS 1	
LIGHT MENU VAUX 9 1 ●	USB Wiselink	

As the OneRemote RMB4 converter is able to operate many different TV models, some sources in above table might not be available on your TV. The only way to find out, if the TV accepts these codes, is testing each of the options.

If a source is not accessible using one of these options, it must be accessed as when using the TV's original remote control. Using the source key.

Note. If the digit are replaced by a a londrol commands are transmitted in the Bang & Olufsen format.