

PROFESSIONAL KOD SYSTEM

USER'S MANUAL



Table of contents

I . Accessory.....	1
II . Feature.....	1
III. Structure.....	2
IV. Real panel connection.....	3
V . How to operate remote control.....	4
VI. How to record song in disc (DVD/VCD/MP3).....	5
VII. How to operate on TV screen.....	6~7
VIII. How to play DVD/ VCD/ SVCD/ CD disc.....	8~12
IX. Play MP3 disc.....	13
X . Performance requirement.....	14
XI. Caution for operation and connection.....	14
XII. Trouble shooting.....	14

I . Accessory

- 1.User manual 2.Remote control 3.AV cable


KOD Machine



Remote control



AV cable

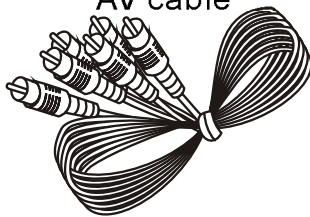


II . Feature

- **The multi-function professional Karaoke On Demand System supports Midii song, VCD (MTV), MP3, and allows easy update of new song through the disk loader and PC's USB.**
- **Background**
Background quality is DVD format and plays about 8 hours.
- **Song library**
Update new songs to KOD by USB.
- **Download user's favorite songs**
The user can download VCD(MTV) songs and MP3 songs to KOD removable HDD by USB .
- **Method of select song**
Chorus, singer's name, random,language,word count, Song number, POP.list.
- **Display and give score**
The machine give score after each song and display the average score,highest score
- Of all previous songs.
- **Other download function**
Update service file and software download by USB.
- **KOD network**
One computer organizes more than 10pcs KOD by USB to send songs and information and
- capable of searching all kinds of service information.
- **Help**
In any mode of machine, the user choose "Help" , the current help information
- will be displayed.

III. Structure

1.FRONT PANEL

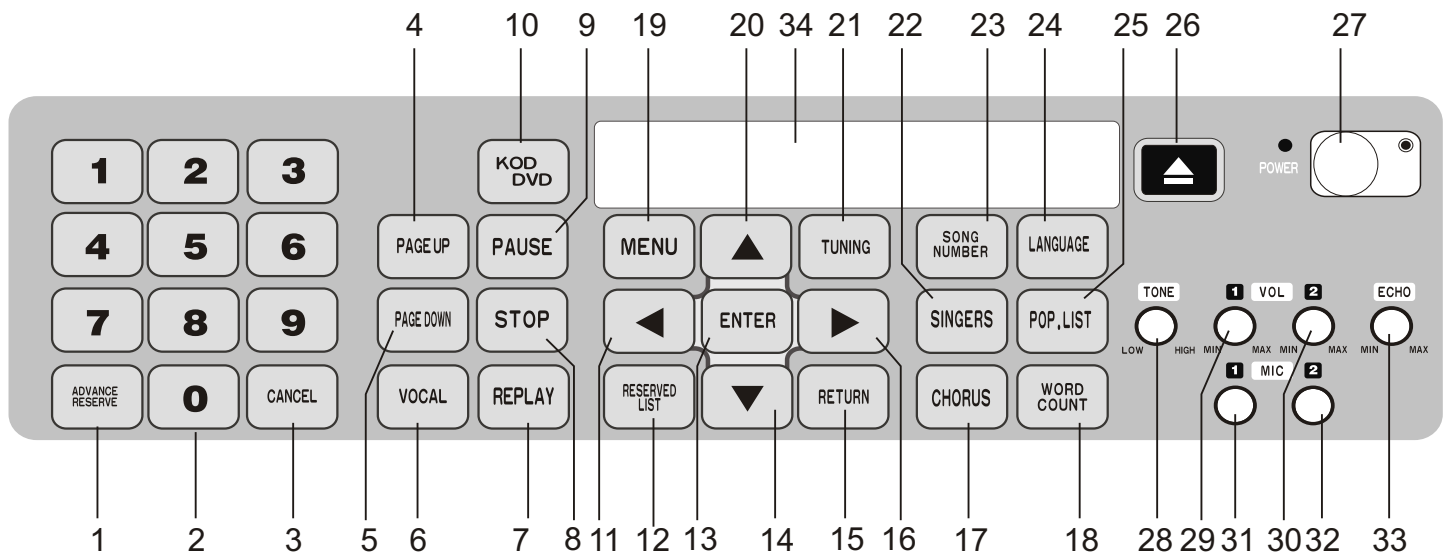

1.ADVANCE RESERVE

2.NUMBER

3.CANCEL

4.PAGE UP

5.PAGE DOWN

6.VOCAL

7.REPLAY

8.STOP

9.PAUSE

10.KOD/DVD SWITCH

11.LEFT

12.RESERVED LIST

13.ENTER

14.DOWN

15.RETURN

16.RIGHT

17.CHORUS

18.WORD COUNT

19.MENU

20.UP

21.TUNING

22.SINGERS

23.SONG NUMBER

24.LANGUGE

25.POP.LIST

26.OPEN/CLOSE

27.REMOTE RECEIVER

28.TONE

29.MIC 1 VOLUME

30.MIC 2 VOLUME

31.MIC 1 JACK


32.MIC 2 JACK

33.ECHO


34.DISC TRAY

IV. Real panel connection

2.Connection plan

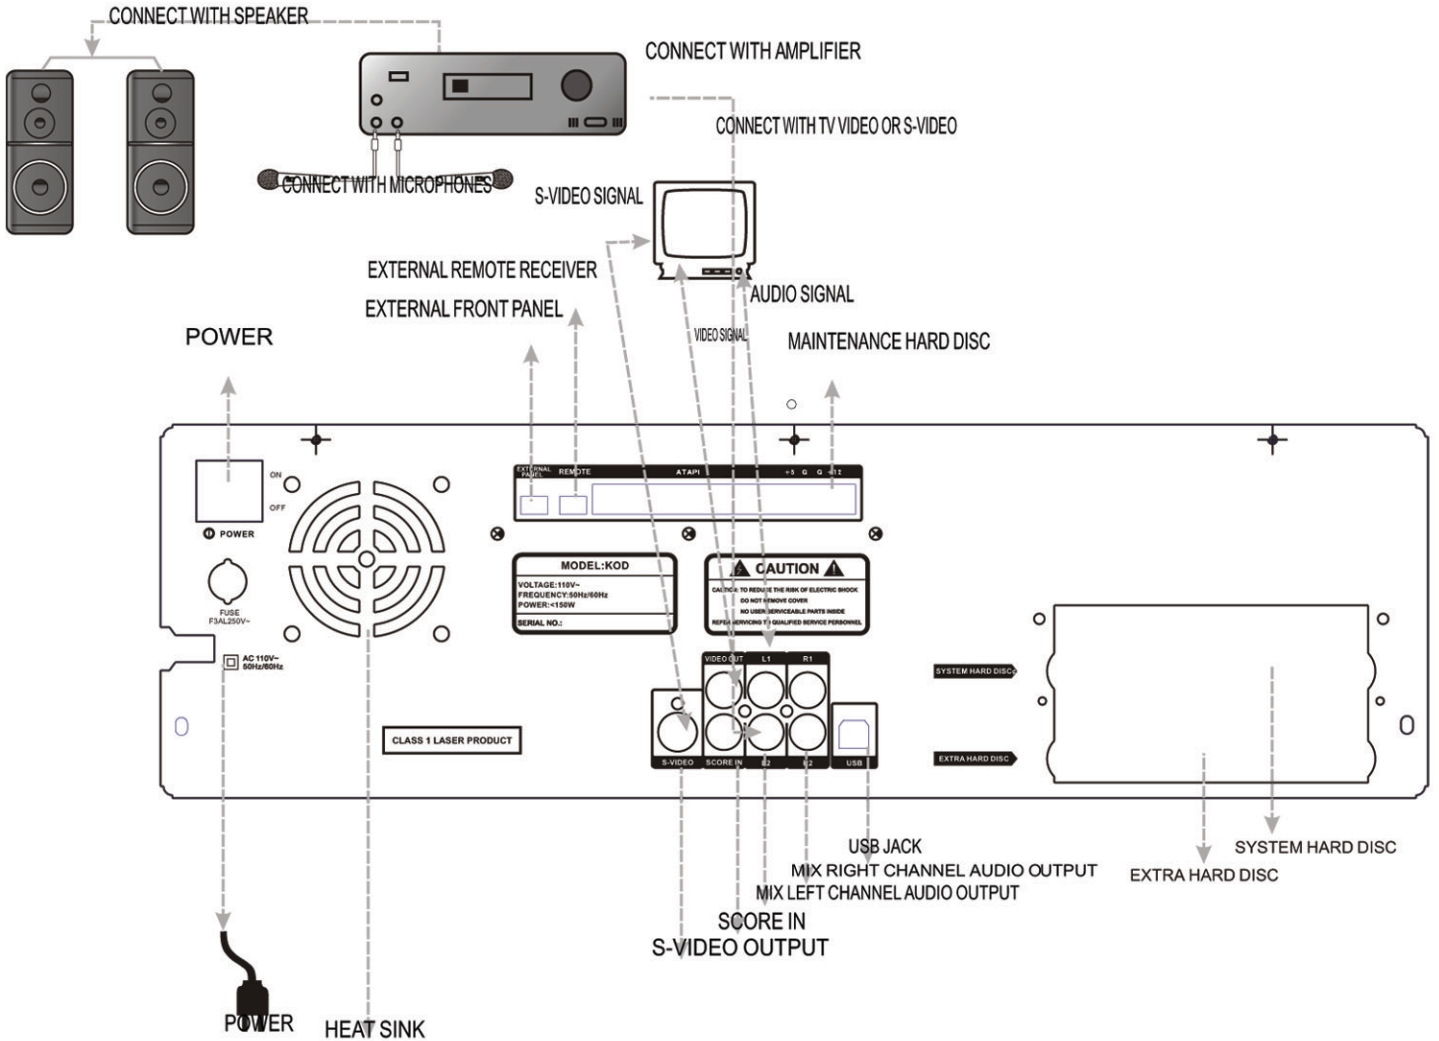

V. How to operate remote control

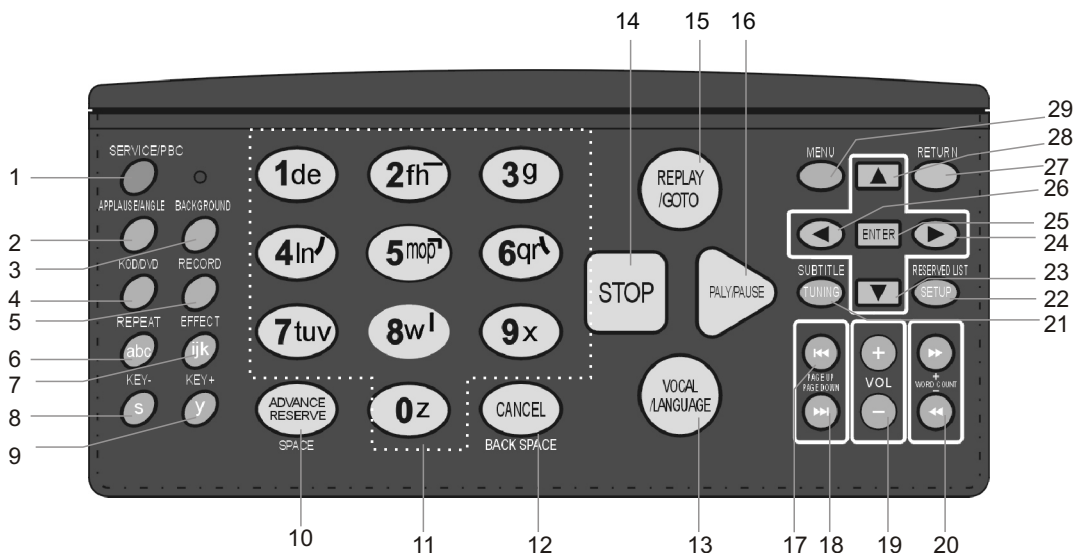

Operate TV screen display by remote

1. **SERVICE/ PBC**: refer to the (2) of page 7 .
2. **APPLAUSE/ ANGLE**: if you press this button, applause will be sounded automatically.
3. **BACKGROUND**: shift different background.
4. **KOD/DVD**: switch KOD/DVD mode.
5. **RECORD**: record song from disc.
6. **REPEAT**: repeat one song.
7. **EFFECT** : 7 kinds of effect mode : standard , rock , classic, centre(theater), disco, square, Jazz.
8. **KEY-**: falling key.
9. **KEY+**: rising key.
10. **ADVANCE RESERVE/SPACE** : put the selected song in the first place from reserve list
11. **NUMBER BUTTON** : press number button to select song then press [Enter] button to play.
12. **CANCEL/BACK SPACE** : delete the selected song from reserve list.
13. **VOCAL/LANGUAGE**: shift vocal on, vocal off, vocal auto ...
14. **STOP**: stop the playing song and play the next reserved song.
15. **REPLAY/GOTO**: in playing mode ,It will play previous songs (10 songs at most)by press this button in display song name;it will replay the playing song by press this button after display song name.
16. **PLAY/PAUSE**
17. **PAGE UP**
18. **PAGE DOWN**
19. **VOLUME+/-**: press “volume+”to increase volume ;press“volume-” to reduce volume.
20. **WORD COUNT+/-**: use this function to enter Word count select song.the machine must enter in word count,Language,Chorus user’s song,Dance mode.Operate on TV screen display by remote In Language , Couple song, user's song, dancing music mode only.
21. **TUNING**: refer to the details (3) of page 7.
22. **RESERVED LIST**: reserver list. You can adjust the sequence of the reserved song list and cancel the song freely.
23. **DOWN**: move down.
24. **RIGHT**: move right.
25. **Enter button**: to enter the item the user chosen.
26. **LEFT**: move left.
27. **RETURN**: return to the previous catalogue.
28. **UP**: move up.
29. **MENU** : press this button to enter main menu and choose according to the user's requirement.

VI. How to record song in disc (DVD, VCD, MP3)

Record: Press " Record " button in DVD mode.

1. Song type

(1)Karaoke song

(2)Non karaoke song

If it is MTV , please choose(1); If it is MP3 , please choose(2)

Note: DVD disc, this step needn' t act.

2. Display song list in the disc . To choose the songs the user want to download and then press [Enter] button.

3. According to the function of the following button , press[Reserved List] button to pop-up song information menu . Input song information and save it , then exit the menu.

4. Press [Record] button after choose songs and put the song information.

5. According to the indication on TV screen, press [Enter] button and download songs from disc to KOD player. Wait for finishing download or press [Return] button to exit. After download and press [Return]button ,restart the machine (For copying songs from loader to HDD, make sure that the copying disk is in good condition with no scratch or dirt).

Fill in song information :

Song name : As for MTV song , it should be " 5 digitals song number+song name" in song information item.

Initial letter : The initial letter of word (doesn't include number and symbol)	SONG AREA: Chinese mainland song , Cantonese song , foreign song, etc..
Singer PY: Initial letter of singer's name (doesn't include number and symbol)	Full : Song name spell (doesn't include number and symbol and 7 digital number at most)
Category : Man singer , Woman singer, Band	Location : Mainland, HK, TW, etc..

Repeat button : " abc" button

1 button: "d,e" button

2 button: " f,h" button

3 button: "g"button

Effect button : "i,j,k" button

4 button: "l,n"button

5 button: "m,o,p"button

6 button: "q,r"button

Key- button: "S"button

7 button: "t,u,v" button

8 button: "w"button

9 button: "x"button

Key+ button : "y"button

0 button: "z"button

Cancel button : " back " button

Advance reserve button : "Space" button

Function button for input song information :

[Reserve List]button : pop-on song information menu

[Return] button : Exit song information menu

[Up/Down] button : shift input frame.

[Tuning] button : shift Chinese/English input method

For example :

Input English word " girl "

Shift Chinese input method to English input method by press [Tuning] button .


Input [3] and choose "g" , input [Effect] and choose "i"

Input [6] and choose "r" , input [4] and choose "l"

VII. How to operate on TV screen


1. Display menu

Use remote control or press the menu in front panel, TV screen display.

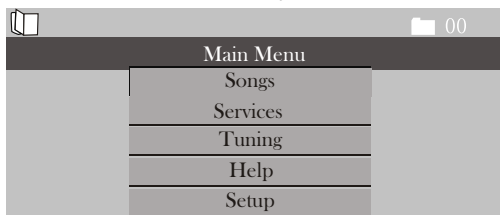

(1) select song

Enter “song”, it will display the below image and press “Up, Down, Left, Right” button to choose.

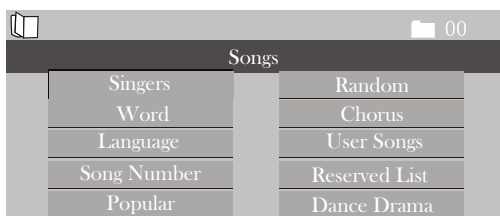

Singers: All stars ,HK TW men, HK TW men, HK TW women, Inland men ,Inland women,Band, Foreign.

Random : MTV, KSC , MIDI , ALL.

Word : Choose 1 to above 10 word count and display songs that pointed song name number.

Language : Mandarin, Cantones , Minnanhua, English , Korean, Thai, Vietnam, Japanese, Tagalog song.

Chorus song : Display couple songs.

User song : ALL MTV, ALL MP3, MTV Random, MP3 Random

Reserved list : Display the selected songs.

POP.List : Display the most popular songs with high click frequency.


Dance Drama : Drama, Dance, Congratulations, Classic.

Press “Menu” on the remote control and enter “Menu”, then press “Up, Down” button to choose “Service”, TV screen display :

T:0	Name	Number	Unit Price
	Creen tea	0	15.00
	Sugar Coffee	0	20.00
	Uneak Coffee	0	18.00
	Apple		

(2) Service


Communicates with the sever, and order wine and drink etc . Server will change the quantity in service mode by pressing Left or Right button . Then press “Enter “button to confirm the user's requirement .

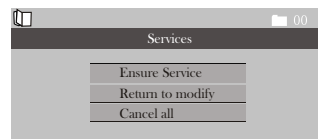


Press “Menu ” on the remote control and enter “Menu ”, then press “Up, Down” button to choose “Tuning”, TV screen display:

(3) Tuning

Enter tuning and display the following image:

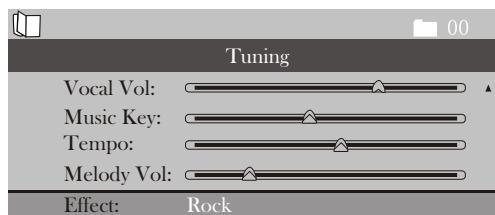


Press “Menu” on the remote control and enter “Menu”, then press “Up, Down” button to choose “Help”, TV screen display :

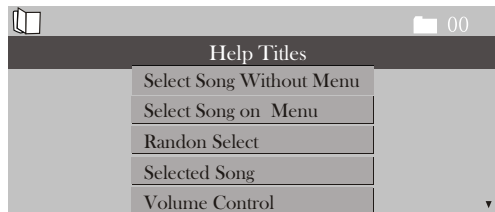


(4) Help

Enter Help menu and display the following items “select song without menu, Select song on Menu, Random select , selected song , volume control , system setup, service , Help , Display setup , Input method on/off , Machine setting ,Hiding function . Press “ Up / Down” button to choose. Press “Menu ” on the remote control and enter “Menu “, then press “Up, Down” button to choose “SETUP” , TV screen display :

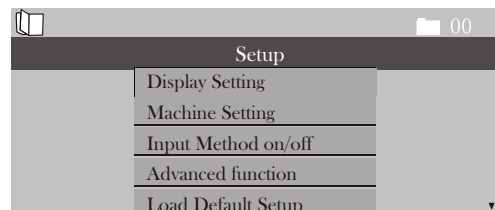

5) Setup

Enter setup menu and pop-up dialog "input password", Input 888888 and display "Display setting, machine setting, input method on/off, Advance function, load default setup" items and press Up or Down button to choose.

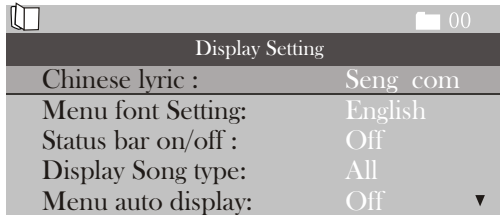

Display Setting	
Chinese lyric :	Seng com
Menu font Setting:	English
Status bar on/off :	Off
Display Song type:	All
Menu auto display:	Off

(a) Display setup

Chinese lyric font : seng sim , kai sim , seng com

Menu font setting : English, seng sim , seng com

Status Bar: ON/OFF

- **Display next program song name and quantity of program songs.**

Display song type : KSC + MIDI, MTV , KSC , MIDI, KSC+MTV, MIDI+MTV , All

Menu auto display : ON/OFF

VGA small AD : OFF

(This KOD does not support VGA output)

TV Text AD : ON/OFF

Menu transparence : 0-15

Lyric display: ON/OFF

Lyric background : ON/OFF

Score display : ON/OFF

Score level : Easiest , Easy , Medium, Hard , Hardest

Score from : Mic In, Random

Minimum Score : 00, 20 , 40 , 60 , 80

Maximum Score: 96 97 98 99 100

Play mode movie : Scene, No Scene, User

Normal mode movie : Reserve, Use


Video start position : Random , Beijing

- **Power on random play**: ON/OFF

If setup on, and no people select song within one minute, the machine will play random.

Select region color: Blue , Orange, Green

(b) Machine setting

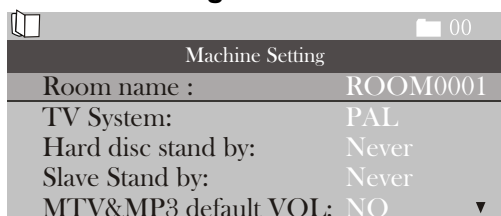

Machine Setting	
Room name :	ROOM0001
TV System:	PAL
Hard disc stand by:	Never
Slave Stand by:	Never
MTV&MP3 default VOL:	NO

- **Room name** : ROOM000X

Input password : 123456 . To change Room number by number button.

TV system : PAL, NTSC.

Hard disc stand by : 30 min , 1 hour , 3 hours , Never , 10 min

- **If the user didn't use within the setting time, it will close background and back to logo of TV screen to save hard disc.**

Slave stand by : Never

MTV&MP3 default Vol: No , Modify, Save.

- **Adjust volume of the playing MTV/MP3 and choose "Modify for ever" , volume of MTV/MP3 will keep Modify for ever even if power off ; It can choose " modify temporary " and it is effective only during power on; It don't change without modify.**

MTV&MP3 default memory disc : main hard disc, data disc

- **Change the place memory of record or download MTV&MP3.**

Serial No : FFFFFFFF, FFFFFFFF

Software Version : 330108

(c) Input method on/off : Mandarin , Cantones, Minanhua, English , Korean , Thai , Vietnam , Japanese , Tagalog.

(d) Advance function

Moving background of start playing : choose your favorite MTV as Moving background of start playing and the machine will play it after restart .

(e) Recover default setting : Recover default password 666666 .

- **Note** : Press Left/Right button to change function setting after enter menu.

VIII. How to play DVD, VCD, SVCD, CD disc

Put the disc in the disc tray and then press shift button of KOD/DVD on the remote control.

1. Search image you want (For DVD, VCD, SVCD disc)

► Fast forward search

- a. Press [word count "+"] button in the first time , TV screen display "▶▶X02"
Play forwards with double normal speed.(no sound)
- b. Press [word count "+"] button in the second time , TV screen display "▶▶X04"
Play forwards with fourfold normal speed.(no sound)
- c. Press [word count "+"] button in the third time , TV screen display "▶▶X08"
Play forwards with eightfold normal speed.(no sound)
- d. Press [word count "+"] button in the fourth time , TV screen display "▶▶X16"
Play forwards with sixteenfold normal speed.(no sound)
- e. Press [word count "+"] button in the fifth time , TV screen display "▶▶X32"
Play forwards with thirty-twofold normal speed.(no sound)
- f. Press [word count "+"] button in the sixth time , TV screen display "▶▶X64"
Play forwards with sixty-fourfold normal speed.(no sound)
- g. Press [word count "+"] button in the seventh time , TV screen display "PLAY"
Recover normal speed.

In CD playing mode

Press [word count "+"] button in the first time , TV screen display "▶▶ X01 "
Press [word count "+"] button in the second time , TV screen display "▶▶ X02"
Press [word count "+"] button in the third time , Recover normal speed.

► Fast backward search

- a. Press [word count "-"] button in the first time , TV screen display "◀◀X02"
Play backward with double normal speed . (no sound)
- b. Press [word count "-"] button in the second time , TV screen display "◀◀X04"
Play backward with fourfold normal speed.(no sound)
- c. Press [word count "-"] button in the third time , TV screen display "◀◀X08"
Play backward with eightfold normal speed.(no sound)
- d. Press [word count "-"] button in the fourth time , TV screen display "◀◀X16"
Play backward with sixteenfold normal speed.(no sound)
- e. Press [word count "-"] button in the fifth time , TV screen display "◀◀X32"
Play backward with thirty-twofold normal speed.(no sound)
- f. Press [word count "-"] button in the sixth time , TV screen display "◀◀X64"
Play backward with sixty-fourfold normal speed.(no sound)
- g. Press [word count "-"] button in the seventh time , TV screen display "PLAY"
Recover normal speed.

In CD playing mode

Press [word count "-"] button in the first time , TV screen display "◀◀X01 "
Press [word count "-"] button in the second time , TV screen display "◀◀X02 "
Press [word count "-"] button in the third time , Recover normal speed.

2.To search image you want (For DVD, VCD, SVCD disc)

In PBC off mode and during play VCD , SVCD disc ,

a.Press [Replay/GOTO]in the first timeTV screen display “00 :00:00”

Input time by press number button and press[Enter] button, TV screen display[PLAY]

In playing DVD disc mode

A.Press[Replay/GOTO]in the first time, TV screen display " title01/01 chapter 004/025"

Input number by press number button and press[Enter] button ,TV screen display the selected chapter.

B.Press[Replay/GOTO]in the second time , TV screen display “ Time 00: 00: 00"

Input time by press number button and press[Enter] button, TV screen display[PLAY]

► **Note : With different title and chapter according to the different disc.**

3.Previous song, next song (For DVD, VCD, SVCD, CD, MP3 disc)

a.Press[Page up] button and page back to previous song.

b.Press[Page down] button and page forward to next song.

4.Play /Pause button (For DVD, VCD, SVCD, CD, MP3 disc)

a.Press [Play/Pause] button during playing disc , TV screen “ Pause”

b.Press [Play/Pause] button during pause playing disc , TV screen “ Play”

5.Repeat (For DVD, VCD, SVCD, CD disc)

In playing DVD disc mode

a.Press [Repeat] in the first time, TV screen display “ REPEAT TITLE ”

Replay the playing title.

b.Press [Repeat] in the second time, TV screen display “REPEAT CHAPTER”

Replay the playing chapter.

c.Press [Repeat] in the third time , TV screen display “ REPEAT OFF”

Cancel replay and recover the normal playing mode.

In playing VCD、SVCD、CD mode

a.Press [Repeat] in the first time ,TV screen display: “REPEAT TRACK”

b.Press [Repeat] in the second time , TV screen display: “REPEAT DISC ”

c.Press [Repeat] in the third time , TV screen display: “ REPEAT OFF”

► **Note : In playing VCD、SVCD disc and during PBC Off, “ All disc Replay” function work.**

6.PBC function (For VCD, SVCD disc)

Press [Service/PBC] button on the remote control

a.Press [Service/PBC] button in the first time to open PBC and press number button to play according to the menu . press[Menu]button and back to menu during playing.

b.Press [Service/PBC] button in the second time to close PBC and press number button to play .

7.Title menu (For DVD disc)

Press [Menu] button on the remote control and display content of title.

Press direction button to choose the item you need.

8. Change angle (For DVD disc)

Press [Applause/Angle] button on the remote control

The user can enjoy image from different angel , but this function only for DVD disc with supporting to angel function .

9.Change Language (For DVD, SVCD disc)

For [DVD] disc , Press [Vocal/Language] button on the remote control to shift .
 For [SVCD] disc , Press [Tuning] button on the remote control to shift.
 To choose different dialogue language , this function is only for the disc with recording multi-dialogue language.

10.Change language of caption.(For DVD disc)

Press [Tuning] button on the remote control
 To choose language of caption during playing , this function is only for the disc with recording multi-dialogue language.
 Press[Effect] button on the remote control and open or close caption.

11.Change Key (For DVD, VCD, SVCD disc)

key + 、 key -
 a.Press [key +] button , move Right ; TV screen display “----#-----”
 b.Press [key -]button, move Left ; TV screen display “----b-----”

12.Change volume (For DVD, VCD, SVCD, CD, Mp3 disc)

Volume+、 Volume -
 a.Press[Volume+]on the remote control , TV screen display“ ||||| VOL32”
 b.Press[Volume-]on the remote control , TV screen display“ ||||| VOL31”

13.Setting channel (For VCD, SVCD, CD disc)

a.Press [Vocal/Language]button in the first time ,TV screen display “Left channel”
 b.Press [Vocal/Language]button in the second time ,TV screen display “Right channel”
 c.Press [Vocal/Language]button in the third time ,TV screen display “ Stereo”

14.Setting (For VCD, SVCD, CD, MP3 disc)

Press [Reserve List] button on the remote control and enter setup menu
 TV screen display :

MAIN MENU	LANGUAGE
▶ LANGUAGE	OSD
TV SYSTEM	AUDIO
DISPLAY MODE	SUB TITLE
AUDIO SETUP	MENU
VIDEO SETUP	RETURN
PREFERENCES	
EXIT	

▶ **Note : “preferences” can display in stop mode only.**

a.Enter system language ,
 Enter each item setting in system language ,TV screen display

LANGUAGE	
▶ OSD	ENGLISH
AUDIO	S CHINESE
SUB TITLE	T CHINESE
MENU	
RETURN	

LANGUAGE	
OSD	* ENGLISH
▶ AUDIO	CHINESE
SUB TITLE	SPANISH
MENU	ITALIAN
RETURN	RUSSIAN

LANGUAGE	
OSD	OFF
AUDIO	ENGLISH
▶ SUB TITLE	* CHINESE
MENU	SPANISH
RETURN	ITALIAN
	RUSSIAN

LANGUAGE	
OSD	* ENGLISH
AUDIO	CHINESE
SUB TITLE	SPANISH
▶ MENU	ITALIAN
RETURN	RUSSIAN

b. Enter TV system , TV screen display

MAIN MENU	TV SYSTEM
LANGUAGE	AUTO
▶ TV SYSTEM	NTSC OUTPUT
DISPLAY MODE	PAL OUTPUT
AUDIO SETUP	PSCAN NTSC
VIDEO SETUP	PSCAN PAL
PREFERENCES	
EXIT	

c. Enter display mode , TV screen display

MAIN MENU	DISPLAY MODE
LANGUAGE	* 4 : 3 LB
TV SYSTEM	4 : 3 PS
▶ DISPLAY MODE	16 : 9
AUDIO SETUP	
VIDEO SETUP	
PREFERENCES	
EXIT	

d. Enter audio setup , TV screen display

MAIN MENU	AUDIO SETUP
LANGUAGE	ANALOG
TV SYSTEM	DIGIAL RATE
DISPLAY MODE	SAMPLE RATE
▶ AUDIO SETUP	KARAOKE
VIDEO SETUP	RETURN
PREFERENCES	
EXIT	

Enter each item of audio setup ,TV screen display

AUDIO SETUP	
▶ ANALOG	5.1 CHANNEL
DIGIAL	* DOWNMIX STEREO
SAMPLE RATE	RETURN
KARAOKE	
RETURN	

AUDIO SETUP
▶ ANALOG
DIGIAL
SAMPLE RATE
KARAOKE
RETURN

*PCM BITSTREAM

AUDIO SETUP
▶ ANALOG
DIGIAL
▶ SAMPLE RATE
KARAOKE
RETURN

* 48 KHZ 96KHZ

AUDIO SETUP
▶ ANALOG
DIGIAL
SAMPLE RATE
▶ KARAOKE
RETURN

* ON OFF

e. Enter Video setup,TV screen display

MAIN MENU	VIDE SETUP
LANGUAGE	COMPONENT
TV SYSTEM	S-VIDEO
DISPLAY MODE	RETURN
AUDIO SETUP	
▶ VIDEO SETUP	
PREFERENCES	
EXIT	

Enter each item of Video setup ,TV screen display


VIDE SETUP	
▶ COMPONENT	ON
S-VIDEO	* OFF
RETURN	

f. Enter preferences , TV screen display

MAIN MENU	PREFERENCES
LANGUAGE	DEFAULT DARAR
TV SYSTEM	CLOSED CAPIION
DISPLAY MODE	PARENTAL CTL
AUDIO SETUP	SCREEN SAVER
VIDEO SETUP	RETURN
▶ PREFERENCES	
EXIT	


IX. Play MP3 disc

- 1.** Press [Play\Pause] button in the first time, TV screen display

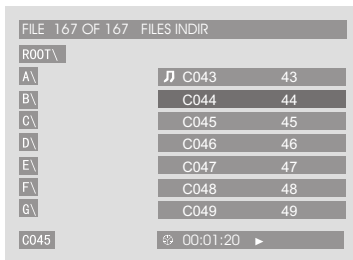


The song is in playing mode.

- Press [Play\Pause] button in the second time, TV screen display

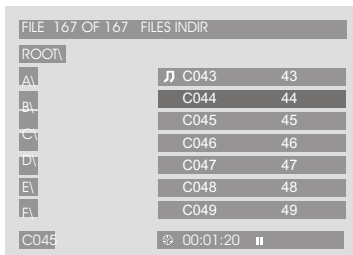


The song is in pausing mode.

- 2.** Press [Volume "+, -"] button to increase or reduce volume, TV screen display

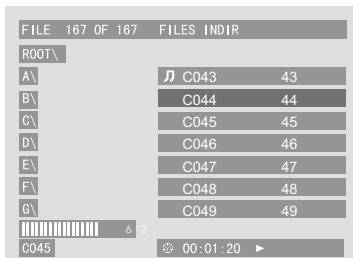


- 3.** Fast forward search


Press [word count+] on the remote control in the first time , TV screen display

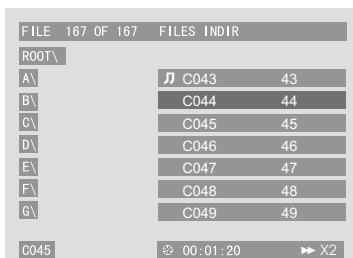

 Press [word count+] on the remote control in the second time , TV screen display

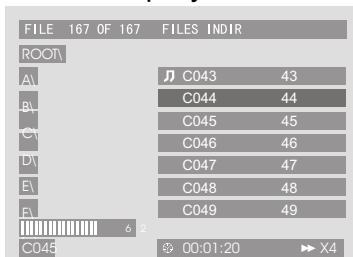


 Press [word count+] on the remote control in the third time , TV screen display

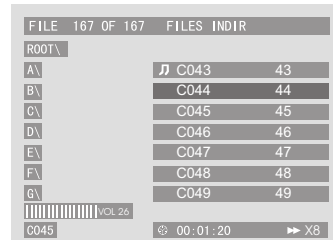


Press [word count+] on the remote control in the fourth time , recover play.

- 4.** Search songs by pressing number button
The user can press number button (0-9) on the remote control to search song and press [Enter] button to play the selected song.
In all disc , press song number in the disc and press [Enter]button to play.(A)
In chapter , press song number in the chapter and press [Enter] button to play.(B)

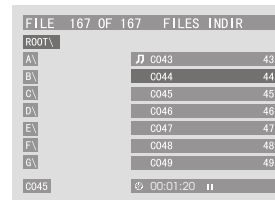


(A)

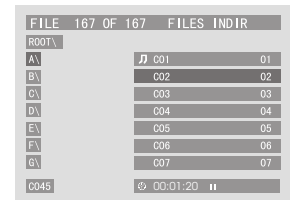

(B)

- 5.** Repeat song


Press [Repeat] button on the remote control, TV screen display :

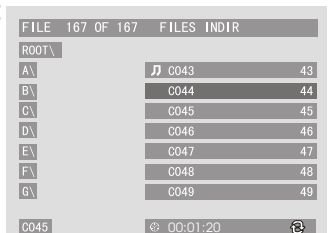


► **Note: press this button in the second time to cancel repeat.**

- 6.** To search the song by “ previous, next “ funtion (It is noneffective by press Up/Down funtion In Repeat mode .)

 Press [Page up] button to search the previous song.

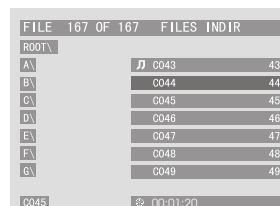


Before press [Page up] button

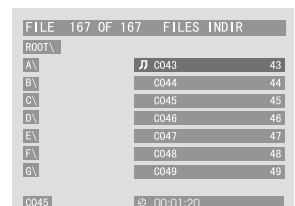 


After press [Page up] button

Press [Page down] button to search the next song.

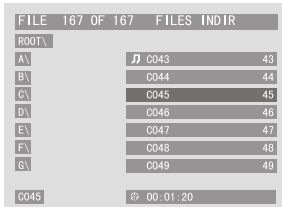

Before press [Page down] button

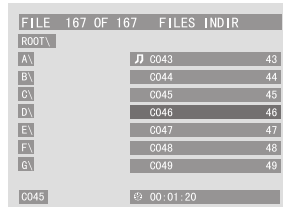

After press [Page down] button

X. Performance requirement

- | | |
|--|---|
| <ol style="list-style-type: none"> 1. Power input : ~90V-240V ;
power : measure exactly 2. Audio/Video : Refer to VCD normal standard 3. Microphone effect : Not lower than midi
player standard 4. Reliability : No problem to play random within
8 hours . | <ol style="list-style-type: none"> 5. High temperature : 40 degree 4 hours 6. Low temperature : -5 degree 1 hour 7. Storage : 55 degree 2 hours
-25 degree 2 hours 8. Packing fall off: 60cm 6 side |
|--|---|

XI. Caution for operation and connection

- 1.** Please power off the machine when the user don't use it (pull out plugs)
- 2.** Please power off when the machine get problem ,then restart it after several minutes.
- 3.** Make sure fastness when connect with external remote control receiver. hard disc, TV etc. system, Or it may destroy the machine.
- 4.** To keep proper aeration of the machine when use it for a long time.
- 5.** Please connect with other device before connect with the machine and power on lastly.
- 6.** To power off after Power on the machine and wait for entering system , Or it might destroy the data .

XII. Troubleshooting

Symptoms	Action
? the remote has no function	<ul style="list-style-type: none"> * Remove the obstacles in the path of the remote and the player. * Point the remote at the remote sensor on the player. * Replace all the batteries in the remote with new ones if they are weak.
? there is no image ,no color the image is rolling vertically	<ul style="list-style-type: none"> * Check the TV mode whether or not right. * Check that the player is connected securely. * Press the [SETUP] button change the player mode to right.
? there is no sound	<ul style="list-style-type: none"> * Check the audio output whether or not connected securely to the TV or amplifier. * Check the power of TV whether or not turn on. * Whether or not turn on the tv or amplifier volume
? there is no sound from the microphone	<ul style="list-style-type: none"> * Check the power of the microphone whether or not turn on. * Check the audio output whether or not connected securely. * The volume of microphone whether or not in minimum mode.
? there is whistle when insert the microphone	<ul style="list-style-type: none"> * The volume of the microphone. (MIC1 LEVEL, MIC2 LEVEL) * Make sure you turn on the volume of TV or Amplifier.

DESIGN AND SPECIFICATION ARE SUBJECT TO CHANGE WITHOUT NOTICE!