

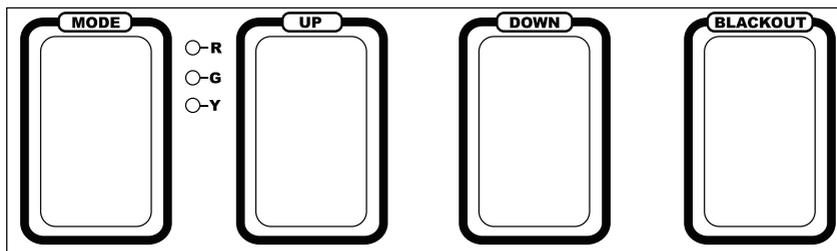


www.prolight.co.uk

MB-2

Foot controller

Order code: LEDJ124



user manual

WARNING

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY
BEFORE YOUR INITIAL START-UP!**

**SAFETY INSTRUCTIONS**

Every person involved with the installation, operation & maintenance of this equipment should:

- Be competent
- Follow the instructions of this manual

Before your initial start-up, please make sure that there is no damage caused during transportation. Should there be any, consult your dealer and do not use the equipment.

To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.

Please note that damages caused by user modifications to this equipment are not subject to warranty.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorised modification to the equipment.

- Never remove warning or informative labels from the equipment.
- Do not open the equipment and do not modify the equipment.
- Do not connect this equipment to a dimmer-pack.
- Only use the equipment indoors.
- Do not expose to flammable sources, liquids or gases.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- If your product fails to function correctly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Prolight dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.
- WARRANTY; One year from date of purchase.

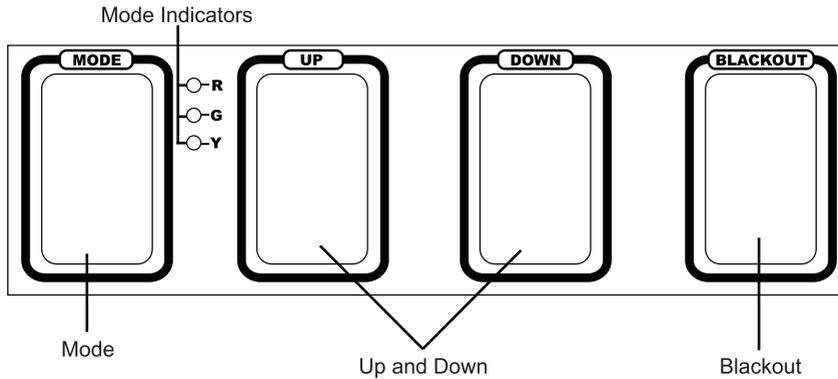
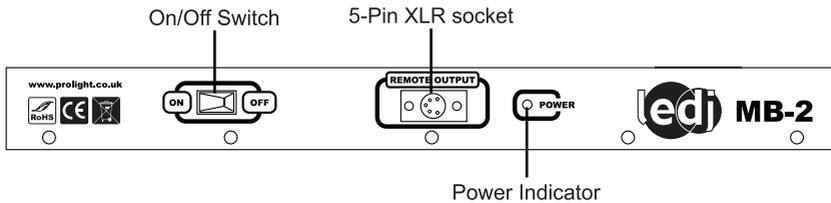
OPERATING DETERMINATIONS

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void.

Incorrect operation may lead to danger e.g.: short-circuit, burns, electric shocks, lamp failure etc.

Do not endanger your own safety and the safety of others!

Incorrect installation or use can cause serious damage to people and property.

Overview (top)**Overview (back)****Operations**

If the MB-2 Foot Controller is being used in conjunction with the HBR-1D controller ensure the On/Off switch on the rear panel of the foot controller is set to the “OFF” position.

Static colour selection mode:

To activate this mode, press the “MODE” foot switch so the “R” LED indicator is lit, now use the “UP” and “DOWN” foot switches to select the desired colour. To blackout the unit, press the “BLACKOUT” foot switch and press it again to return it to the previous setting.

Sound active mode:

To activate this mode, press the “MODE” foot switch so the “G” LED indicator is lit, now the unit will work to the music. If you require to blackout the unit at any point, press the “BLACKOUT” foot switch and press it again to return it to the previous setting.

If the Foot Controller is being used in conjunction with the HBR-1D controller use the Speed/Dim/Sens slider to adjust the sound sensitivity level.

Built-in programmes:

To activate this mode, press the “MODE” foot switch so the “Y” LED indicator is lit, now use the “UP” and “DOWN” foot switches to select the desired built-in programme. To blackout the unit, press the “BLACKOUT” foot switch and press it again to return it to the previous setting.

If the Foot Controller is being used in conjunction with the HBR-1D controller use the Speed/Dim/Sens slider to adjust the chase speed.

Full on mode:

To set the unit to Full On you can press and hold down for 3 seconds any of the four foot switches, this will give Full ON “WHITE”. To return to the previous setting press the “MODE” foot switch. When Full On is activated you can still use the “BLACKOUT” foot switch.