

Power Case For SONY XL39h

User Manual



*Please read this manual carefully before use


Specifications

Item	Spec
Dimension	180X96X12mm
Input	DC5V-800mA
Output	DC5V-1000mA
Weight	122g
Charging time	5.5hours
Operationg	0°C-45°C
Cell type	Polymer Lithium Battery

Product Details :

- ▶ Designed for SONY XL39h, Make your phone special style.
- ▶ Cell Capacity: Original Polymer Lithium battery, Power your phone standby time twice.
- ▶ Creative Design, Enjoy your phone without removing the power case.
- ▶ High class material to protect your phone, Charging and protecting 2in1.
- ▶ Integrated circuit design, effectively avoid short circuit or overtime charge even under extreme condltions of wrong operating.
- ▶ With smart switching and precise power display, to extend the life of the built-in battery

Instructions

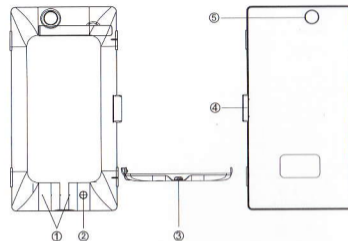

- ④ 4 LED indicators
- ③ Micro USB input
- ② On/OFF key
- ④ Output
- ① Camera aperture

How to use



- ① Filt your phone connect with the Power case
- ② Then put your phone into the Power case

Accessories

- 1. Power Case X1
- 2. User manual X1

Operating Guide

▶ Charging the power case

Connect the phone Micro USB cable with the power case, then plug the USB to power adapter to charge the power case, when charging, the LED will flashing to indicate the capacity.

▶ Charging the Phone

Put the Phone into the power case, press the switch key on the back, When charging, the LED indicators are flashing, press again the switch key to stop charging.

▶ Charging both the Phone and power case

1. When charging the power case, put your Phone into the case, press the switch key on the back, the Phone will be charged firstly, Press the switch key again to stop the Phone charging priority.

LEDIndicators

Capacity	Charging the power case			
	LED1	LED2	LED3	LED4
< 25%	Flashing	OFF	OFF	OFF
25% -50%	ON	Flashing	OFF	OFF
50% -75%	ON	ON	Flashing	OFF
75% -100%	ON	ON	ON	Flashing
Charging the SONY L39				
Capacity	LED1	LED2	LED3	LED4
< 25%	Flashing	OFF	OFF	OFF
25% -50%	ON	Flashing	OFF	OFF
50% -75%	ON	ON	Flashing	OFF
75% -100%	ON	ON	ON	Flashing
Not Charging				
Capacity	LED1	LED2	LED3	LED4
< 25%	ON	OFF	OFF	OFF
25% -50%	ON	ON	OFF	OFF
50% -75%	ON	ON	ON	OFF
75% -100%	ON	ON	ON	ON
Charging both				
Capacity	LED1	LED2	LED3	LED4
XI39h priority	ON	OFF	OFF	OFF

⚠ [Caution]



- Do not drop or bump, do not put it put in into the fire, hot temperature and water.
- Please use the proper charger or adapter for it, if have any deformities or corrosion, please stop using!

Warning: improper use may cause product damage and may harm yourself! keep it away from the child!