




DIGITAL PHOTO FRAME

USER MANUAL

Thanks for purchasing this product.
Please read this Manual carefully before using Digital photo Frame.
Please keep it in a safe place and refer to it when necessary



Content

Content.....	1
Description.....	2
Controller/connetor operation.....	2
Remote.....	4
Setup.....	5
Basic play function.....	10
Reference.....	14

A. DESCRIPTION


The digital photo frame support multi media playing. With it, you can enjoy the best entertainment which the high tech digital product brings you.

- It can play not only the memoried photos but also the short movie slip about your pleasant trip. It really realize I proform I show.
- Except playing digital pictures, you can download music and movie from Internet. Then you can play them from mobile storage device conveniently.

SPECIFICATION:

- Support file format: *.mp3, *.avi, *.mpg1, *.mpg2, *.mp4, *.Jpg
Support connection device: CF, SD / MMC / MS card, USB interface.
System control: User control and remote control.
Display type: 7inch 16:9 TFTLCD screen
Display area: 142.4mm x 91.44mm
Definition: 480*234 (RGB) dot.
▲ AV Output: CVBS and L/R Audio.
▲ Built - in stereo speaker: 1W+1W @ THD= 10%
Power input: DC 12V 1.2A
AC adapter: AC110-240V, 47-63Hz input, 12V ,1.2A output.

CAUTION:

- Input voltage : DC 12V, 1.2A 
Avoid sunshine
Keep far away from the hot equipment
Be careful about the SD card's salient part
Unplug the apparatus when unused for a long time


APPROVED INFORMATION:




B. CONTROLLER/CONNECTOR OPERATION

Appearance Buttons and and Port Instructions


The slots on the right side are: USB port
DC IN. Please see the below picture:

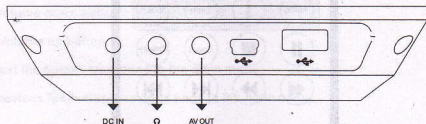

 
The buttons on the top side are : POWER/STOP/PLAY/PAUSE /UP /DOWN/LEFT/RIGHT

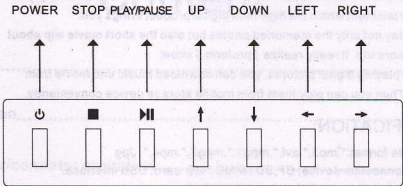



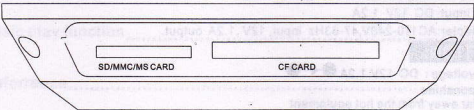



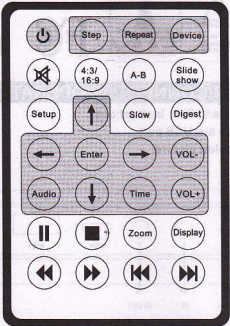








 






 
 

 


The slots on the left side are: CF card slot,SD/ MMC/ MS card slot.



Lnstructions for Remote controller:



REMOTE CONTROL BUTTONS FUNCTIONS

-  : Power turn on or off button.
-  : Press 'step', display one image when movie. Press 'Enter' to go back to normal play.
-  : Repeat Key, to choose different repeat modes.
-  : Switch from USB or SD MMC MS
-  ▲ : Press it, no sounds output; Press it a second time to go back to normal play.
-  : Switch the picture from 16:9 to 4:3.
-  ▲ : Repeat from A-B when movie.
-  : To choose images scroll modes when images browsing.
-  : System setting up button.
-  ▲ : Slow effect in movie playing
-  : 9 picture thumbnail then could press NO.1-9.
-  : Direction button. Move left.
-  : Move Right.
-  : Confirm button.
-  : Move upward.
-  : Direction button. Move downward.
-  ▲ : Press it, switchover to input signals from external frequency.
-  : Images display speed set button.
-  : Stop button.
-  : Pause button.
-  : Speedy Review button.
-  : Speedy play.
-  : Zoom in or out the image.
-  : Play time check.
-  ▲ : Volume down button.
-  ▲ : Volume up button.
-  : Next file button; next page in the main menu;
-  : Previous file button; previous page in the main menu.

C. SETUP

User can set up the player's items in menu so that the connected device can work well.


Press "setup" button to open the menu,

And press it again to close.

When opening the "setup" menu, it will open a window as below:

Language, Video

Highlight the item by pressing "up/down" button and setup.

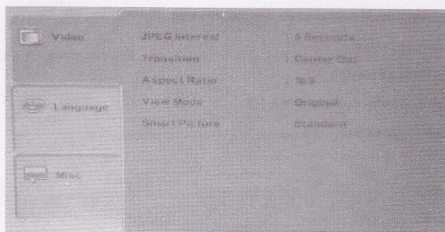

VEDIO SETUP


Press "up/down" to video option and press "enter".

Use "up/down" to select

Press "enter" to open the list

Press "up/down" to select

Press "enter" to set up.

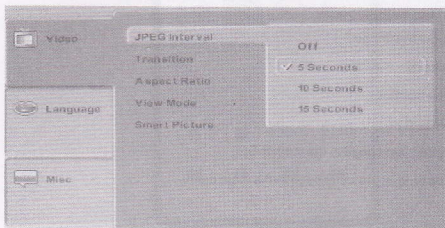


JPEG Interval

Off

5 Seconds

10 Seconds

15 Seconds

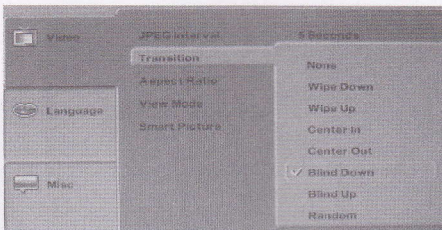

TRANSITION

None

Wipe Down

Wipe Up


Center In

Center Out

Blind Down

Blind Up

Random

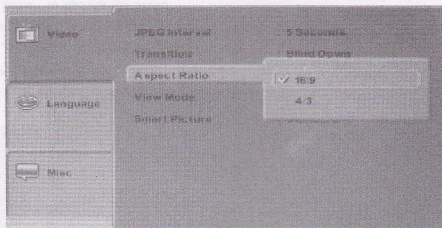

ASPECT RATIO

User can select the picture rate according to the TV screen rate as below

4:3, Pan & Scan wide screen (factory default)


16:9 = screen rate 16:9, wide screen and 4:3, full screen.

Remark:

Most files cannot be switched by pan & Scan.

If the default format is 4:3, will replaced the output formation automatically.

If the default format is 16:9 but the TV format is 4:3, then the video will be twisty and looks slim.

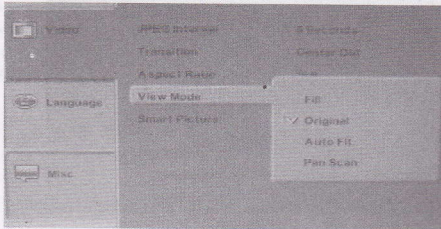

VIEW MODE


User can set up the display mode in this menu.

Fill = Full screen mode

Original = Original size mode

Auto fit = Automatically full screen mode

Pan scan = Pan mode

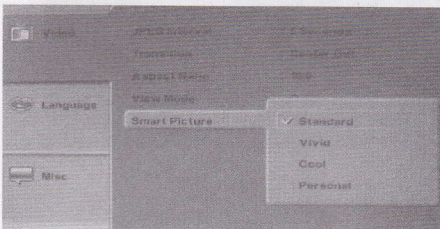

SMART PICTURE

User can adjust the picture brightness.


Four selections as following:

Standard

Bright

Soft

Dynamic

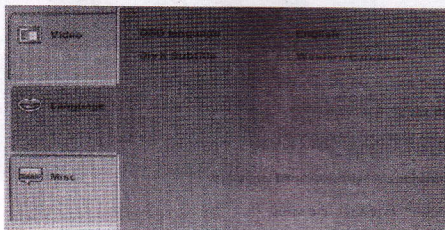

SETUP LANGUAGE

Press "up/down" button to "language", then press

"Left" button to choose the desired language.

Press "up/down" to change the setup.

Press "enter" button to open a list,


and press "up/down" to change the highlight item.


Press "enter" again to setup.

Press "enter" button and change another setup.

OSD LANGUAGE

English
Francais
Español
Italian
Русский

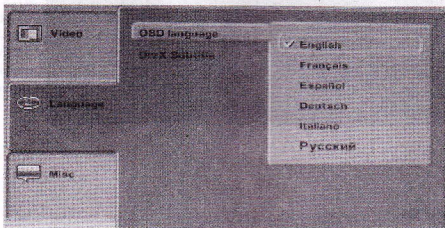

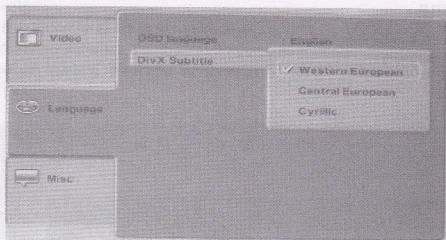

DivX SUBTITLE:


Press “ up/down ” button to “ DivX subtitle ” , then press

“ enter ” button to choose the desired language.

Press “ up/down ” to change the setup.

Press “ enter ” button to open a list, and press “ up/down ”

to change the highlight item.

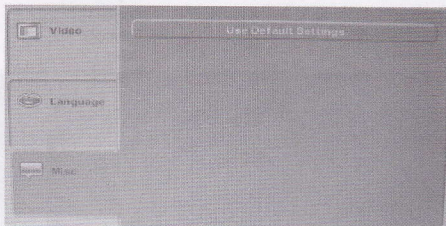

MISC

Use default settings

D. BASIC PLAY FUNCTION


POWER ON AND INSERT CARD PLAY

Power on, and insert your card, all files will be played automatically.

Remark:

There are some cards or file which are not supported by this player.

Please refer to compatible card and file format in page2.

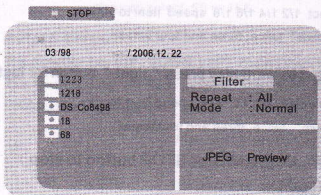

Filter : audio, photo, video

Repeat : single, all, off

Mode : normal, shuffle on

Filter: press left or right button, the press
Up or down button to select filter,
You will select audio, photo, video.

Repeat: press Repeat or left / right button to
Select Repeat item.

Mode: press left or right button to select
This item.

PLAY/PAUSE

1. Press "PLAY/PAUSE" button to pause. It is silent in standby mode.

Then press "PLAY/PAUSE" button to replay.

STOP

Stop playing by pressing "STOP", and it will enter holding on mode. The player can
Remember the position where it stopped.

2. Press "PLAY/PAUSE" button and continue to play from where it stopped.

CARD SELECTION GUIDE/SELECTION OF OUTER STORAGE DEVICE

Press "STOP" button, then pressing "device" button to select the priority of the
connected card or device. The player will play your selected device/card first.

This operation is valid by connecting with compatible storage device.

NEXT/PREVIOUS

Play next item by pressing "NEXT" button.

Play previous item by pressing "Previous" button.

REPEAT PLAYING THE FILE

First press " REPEAT " button to repeat the single music item.

Press " REPEAT " again to repeat the whole folder.

Press " REPEAT " once again to cancel the repeat operation.

Repeat folder can't be operated in " digest " mode.

SLOW PLAY, FAST PLAY (MOVIE ONLY)

Use the direction button up/down/left/right button to control the player.

SLOW PLAY: press " up " button for slow backward, press " down " button for slow forward. you can select 1/2 1/4 1/6 1/8 speed item to play by pressing " up " or " down " twice, three and four times.

FAST PLAY: press " left " button for fast backward play press " right " button for fast Backward play. you can select x2, X4, X8, X16 speed item to play by pressing " up " or " down " twice, three and four times.

STOP SLOW/FAST PLAY: press PLAY/PAUSE or STOP button to stop slow/fast play.

 
REMARK : you must press " up " or " down " button first, then press " left " or " right " button to select fast play mode

ROTATE PICTURE BY DIRECTION KEYS (UP, DOWN, LEFT, RIGHT)

Rotate picture 90° as following



Rotate picture 180° as following:



Rotate picture 270° as following:



Remark: The rotation is valid only for picture file

ZOOM (VALID FOR PICTURE / VIDEO FILE)

Press zoom button to enlarge when playing / slow playing / still picture.

Press zoom button again to enlarge the picture once more, it has three degrees for zoom . When you press zoom button every time, it will display OSD as followin: Q1, Q2, Q3, Q off.

You can shift the zoomed picture by pressing direction buttons.

REMARK: There are some file formats can't be zoomed.

The zoom degree and zoom extent is related with TV setup.

PICTURE MENU

READ AND PLAY

The player will search and find suitable format file when memory card inserted

(JPG, Mp3, WMA). OSD will display " search", The file will be displayed LOGO

Background. After finished searching, the photo will be played in slide show mode per 5 seconds. pause, previous, next, digit selection and other guide is the same.

REMARK: You can press " time " button to change the time of refreshing.

You can select 5S or 15S.

ROTATE EFFECT

The direction key (UP, DOWN, LEFT, RIGHT) can make the photo rotated.

The first rotation will keep original. Then it will rotate 90 degree every time.

Photo displayed as below:

Original (same position)

90 DEG CW (turn right 90)

180 DEG CW (turn right 180)

90 DEG CCW (turn left 90)

DIGEST

Press digest button and it appears 9 picture (3x3).

Press up/down/left/right button to select the picture to play.


Press next/prev button to select to play next or previous picture.

VIEW FOLDER

Press " stop " button to return to the folder and all files will be displayed

Press up/down button and highlight the optional item.

Press enter button to select a file to play.

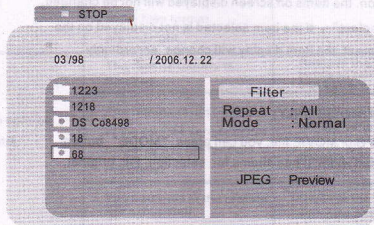

SMART PICTURE

When playing file, press "setup" button, then, press "up/down" button to select Video item, press "left/right" button and "up/down" to select "smart picture" item. Press "enter" button to open this item: standard, Bright, soft, dynamic.

The menu will be closed after pressing "setup" button again.

VOLUME CONTROL

Press **VOL+ / VOL-** button, the volume control bar will be displayed and changed.

The default volume is Max volume. You can use left/right button on the player unit to adjust the volume when playing movie.

SELECT SONGS TO PLAY

Press "up/down/left/right" button to select different items.

When highlight item is on the right, press right button, the upper 3 items will be displayed.

When highlight item is on the left, then press left button, the previous 3 items will be displayed.

Press "enter" to play your selected item.

Use number to select an item No. And press "enter" to play.

When pressing number keys, the number keys, the number will be displayed in the information bar.

Under this condition, the items on screen displayed will not be changed.

After pressing "select", if the item selected is not displayed on the Screen for the moment, the item display will change accordingly.

VIEW MODE (JPG .MOVIE ONLY)

When playing JPG or MOVIE file, you can press "MODE" button to change the screen width. It has 4 items for selection. Fill, original, Auto fit, pan scan.

REFERENCE

Check the following guide for the possible cause of a problem.

Symptom	Cause	Correction
No power	The power plug is disconnected	Connect the power plug securely into the outlet
	The player is not turned on	Turn on the player. Push the button on the back of the unit to "ON"
The player does not start playback	The player start to Play only after the card Inserted or the USB device connected	Insert the cards into card slot or connect USB device with this player
Display " bad card "	This card is not supported	Change another supported card
	This is a damaged cards	Repair this card or use another card
Could not play or download music	The file format can not be supported USB line is broken or not connected well; there may be Something wrong with you USB storage	Confirm the file format could be supported by the player and all connections are well. no wrong area in your USB storage
Cannot display some files from Flash card	Some unpopular Flash cards could not be compatible with the player; some files format are not right	Change a card which matches with the machine; files with right format
The remote control does not work Properly	The remote battery is Blocked	Remove the plastic slip between remote and battery
	The remote is not pointed at the remote sensor of the player or it is too far from the player	Point the remote at the remote sensor of the player. Operate the Remote within about 5m
	The batteries in the remote are exhausted	Replace the batteries with new ones