


mellerware®

C O N T E M P O R A R Y

H o r i z o n t a l F a n H e a t e r

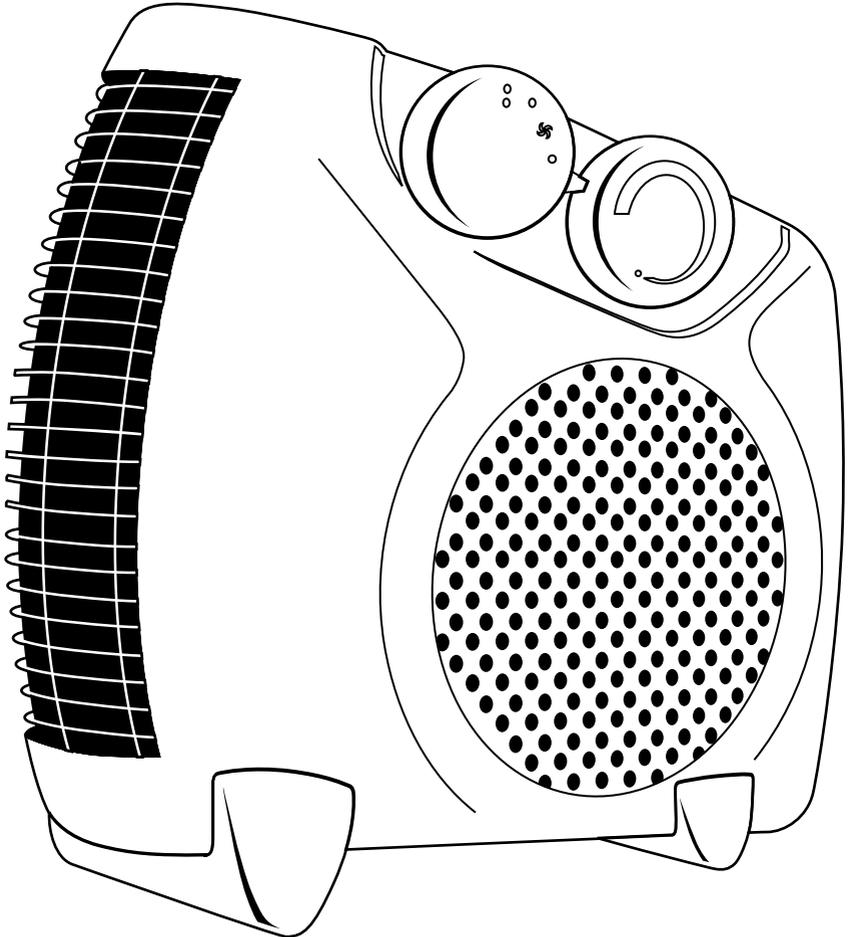

complies with
SABS
IEC60355
SAFETY STANDARDS


1200W


2 YEAR
GUARANTEE


Model:
3 5 1 0 0

PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year guarantee

KEY AND CHARACTERISTICS:

- 1 – Thermostat
- 2 – Switch
- 3 – Pilot Light
- 4 – Handle

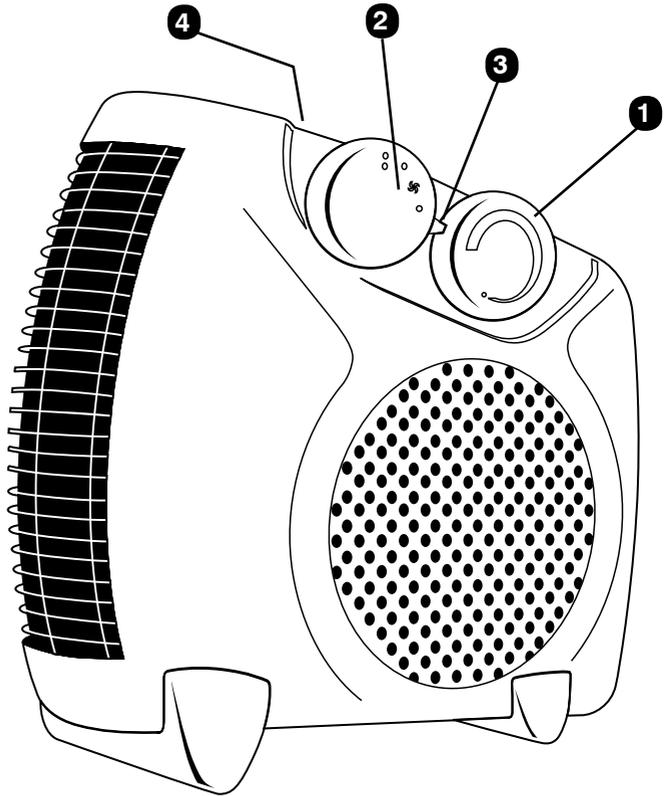

IMPORTANT SAFETY INSTRUCTIONS:

When using electrical appliances, the following safety precautions should always be followed to reduce the risk of electric shock, personal injury or fire. Read all these instructions carefully before using, and save for future reference or new users.

1. Keep all electrical appliances out of reach of children, in a secure place.
2. This appliance is not designed for children to use.
3. Close supervision is required when any appliance is used near children.
4. To protect against electric shock, never immerse any appliance, the mains lead or plug in water or any other liquid.
5. Never reach for any appliance that has fallen into water. Switch off the power at the mains immediately and unplug. Do not re-use.
6. Avoid placing the appliance where the power cord might be accidentally caught, or the appliance may be knocked into a sink.
7. Ensure hands are dry before operating the switch or turning off at the mains.
8. Ensure the appliance is switched OFF before connecting to the mains power supply.
9. Do not touch hot surfaces, use handles or knobs
10. Do not carry the appliance by the cord or pull the cord to remove the plug from the socket.
11. Do not operate this appliance with a damaged cord or plug. An authorized repair agent should carry out repairs.
12. If the appliance stops unexpectedly or appears to malfunction, unplug from the mains and discontinue use immediately.
13. Never leave the appliance unattended when connected to the mains power supply.
14. Unplug from the mains socket when not in use and before cleaning or changing accessories.
15. Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
16. Keep all ventilation slots clear of debris and do not cover. Never drop or insert objects into the openings
17. Do not use outdoors. This appliance is designed for domestic household use only.
18. Only use the appliance as described in this booklet.

CAUTION

- 1 Read all instructions before using the fan heater.
- 2 Only connect the fan heater to a single-phase socket with main voltage as specified on the rating plate.
- 3 This appliance meets the electromagnetic compatibility requirements specified in EN 55104/95 with regard to interference with radio and TV sets.
- 4 Do not leave your home while the appliance is in use. Ensure that the switch is in the OFF (0) position and that the thermostat is in the minimum position. Always unplug the appliance.
- 5 Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 100cm away from the fan heater.
- 6 If wall mounted do not fix to combustible material such as wooden, synthetic or plastic surfaces. Do not hang anything on or in front of the fan heater.
- 7 Always unplug the heater when not in use. Do not pull the cord to unplug the heater.
- 8 Keep the air inlet and outlet free from objects; at least 1m in front and 50cm behind the heater.
- 9 Do not install the heater below an electrical socket.
- 10 Do not let children or animal touch or play with the fan heater. Pay attention! The air outlet gets hot during operation (more than 80°C).
- 11 Do not cover, if covered there is a risk of overheating.
- 12 Do not use the fan heater in the immediate surroundings of a bath, shower or swimming pool.
- 13 Do not use the fan heater in rooms with explosive gas or while using flammable solvents, varnish or glue.
- 14 In case the power cord is damaged send it to the nearest after sale service recommended by the supplier for the replacement.

INSTALLATION

- This appliance requires no installation and should be used solely as a portable device.

OPERATION

- Turn the thermostat knob (right) in a clockwise direction until it reaches the maximum setting.
- **Summer service** (ventilation only): turn the knob to

fan setting

- **Heating at reduced power**; turn the thermostat knob (right) to setting • (1000w)
- **Heating at full power**; turn the thermostat knob (right) to setting •• (2000w)
- **Switching off**; turn the switch knob (left) to setting 0.

Regulating the thermostat:

- When the room has reached the desired temperature, turn the right thermostat knob in an anti-clockwise direction up to where the appliances switches off and not beyond.
- The temperature is “fixed” in this way and will be automatically regulated and kept at a constant level by the thermostat.

CLEANING AND MAINTENANCE

- Before cleaning always remove the plug from the electrical socket.
- Clean the air intake and outlet grilles frequently.
- Never use abrasive solvents or powders.

WARNINGS

- Do not use the heater to dry laundry.
- Never obstruct the intake and outlet grilles (danger of overheating).
- The appliance must be positioned so that the switches and other controls can not be reached by children or persons using the bath tub or shower.
- In case the power cord is damaged send it to the nearest after sale service recommended by the supplier for the replacement.
- Do not use in rooms with less than 4m² floor area.

SAFETY DEVICE

- The heater is fitted with a safety device which will switch the appliance off in case of accidental overheating. (eg: obstruction of air inlet and outlet grilles, motor turning slowly or not at all.)
- To reset, disconnect the plug from the mains power for a few minutes, remove the cause of overheating then plug the appliance in again.

