

naxa

ND-853



INSTRUCTION MANUAL

IMPORTANT
READ THESE INSTRUCTIONS
BEFORE USE AND RETAIN
FOR FUTURE REFERENCE.

PROGRESSIVE SCAN

IMPORTANT SAFETY INSTRUCTIONS



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION:
THIS DIGITAL VIDEO DISC PLAYER EMPLOYS A LASER SYSTEM.
TO ENSURE PROPER USE OF THIS PRODUCT, PLEASE READ THIS OWNER'S MANUAL CAREFULLY AND RETAIN FOR FUTURE REFERENCE. SHOULD THE UNIT REQUIRE MAINTENANCE, CONTACT AN AUTHORIZED SERVICE LOCATION-SEE SERVICE PROCEDURE.
USE CONTROLS, ADJUSTMENTS OR THE PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
TO PREVENT DIRECT EXPOSURE TO LASER BEAM, DO NOT TRY TO OPEN THE ENCLOSURE. VISIBLE LASER RADIATION MAY BE PRESENT WHEN THE ENCLOSURE IS OPENED. DO NOT STARE INTO BEAM.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

SURGE PROTECTORS:
It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance(servicing) instructions in the literature accompanying the appliance.



DANGER:
Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:

To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

WARNING

USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD

This unit has a long AC cord or other long cord that can easily be tripped on or pulled on, causing injury. Please make sure it is arranged so it will not drape over a tabletop, etc. Where it can be pulled on by children or tripped over accidentally.

EXERCISE CAUTION AS UNIT HAS SHARP POINTS.

Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

IMPORTANT SAFETY INSTRUCTIONS

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

- 1) **Read these instructions.**
All the safety and operating instructions should be read before the product is operated.
- 2) **Keep these instructions.**
The safety and operating instructions should be retained for future reference.
- 3) **Heed all warnings.**
All warnings on the product and in the operating instructions should be adhered to.
- 4) **Follow all instructions.**
All operating and use instructions should be followed.
- 5) **Do not use this apparatus near water.**
Do not use this product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.
- 6) **Clean only with dry cloth.**
Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
- 7) **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**
Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 8) **Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
- 9) **Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.**
- 10) **Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
- 11) **Only use attachments/accessories specified by the manufacturer.**
- 12) **Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**



An appliance and cart combination should be moved with care. Quick stop, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.

- 13) **Unplug this apparatus during lightning storms or when unused for long periods of time.**
To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 14) **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.**
- 15) **Power source**
This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.
- 16) **Power lines**
An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

IMPORTANT SAFETY INSTRUCTIONS

17) Overloading

 
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18) Object and liquid entry

Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19) Outdoor antenna grounding

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code ANSI/NFPA 70 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna-discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

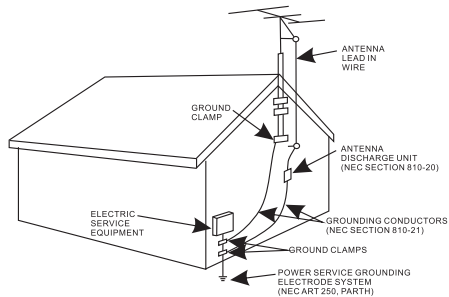

20) Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21) Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

22) Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

23) Wall or ceiling mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24) Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

- When the power-supply cord or plug is damaged.
- If liquid has been spilled or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance—this indicates a need for service.

25) Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

NOTE: Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

IMPORTANT SAFETY INSTRUCTIONS (CONTINUED)

NOTES ON HANDLING:

- When shipping the DVD player, always use the original shipping carton and packing materials. For maximum protection, repack the unit as it was originally packed at the factory.
- Do not use volatile liquids, such as insect spray, near the DVD player. Do not leave rubber or plastic products in contact with the DVD player for a long time. They will leave marks on the finish.
- The top and rear panels of the DVD player may become warm after a long period of use. This is normal and not a malfunction.
- When the DVD player is not in use, be sure to remove the disc and turn off the power.

NOTES ON LOCATING THE DVD PLAYER:

- When you place this DVD player near a TV, radio or VCR, the playback picture may become poor and the sound may be distorted. In this case, move the DVD player away from the TV, radio or VCR.

NOTES ON CLEANING:

Use a soft, dry cloth for cleaning

- For stubborn dirt, soak the cloth in a weak detergent solution, wring well and wipe. Use a dry cloth to wipe it dry. Do not use any type of solvent, such as thinner and benzene, as they may damage the surface of the DVD player.
- If you use a chemical-saturated cloth to clean the unit, follow that product's instructions.

Warning: Cleaning and adjustment of lenses and /or other components of playback mechanism should be performed by a qualified service technician.

NOTES ON MOISTURE CONDENSATION:

Moisture condensation damages the DVD player.

Please read the following carefully.

- Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense on the optical pick-up lens inside this unit, one of the most crucial internal parts of the DVD player.

Moisture condensation occurs during the following cases:

- When you bring the DVD player directly from a cold place to a warm place.
- When you use the DVD player in a room where you just turned on the heater, or a place where the cold wind from the air conditioner directly hits the unit.
- In summer, when you use the DVD player in a hot and humid place just after you moved the unit from an air conditioned room.
- When you use the DVD player in a humid place.

 
Do not use the DVD player when moisture condensation may occur.

- If you use the DVD player in such a situation, it may damage discs and internal parts. Remove the disc, connect the power cord of the DVD player to the wall outlet, turn on the DVD player and leave it ON for two or three hours. After two or three hours, the DVD player will have warmed up and evaporated any moisture. Keep the DVD player connected to the wall outlet and moisture condensation will seldom occur.

POWER SOURCE

Insert the AC plug (with 2 blades) into a conveniently located AC outlet having AC 120V~, 60Hz.

NOTE: The AC plug supplied with the unit is polarized to help minimize the possibility of electric shock. If the AC plug does not fit into a nonpolarized AC outlet, do not file or cut the wide blade. It is the user's responsibility to have an electrician replace the obsolete outlet.

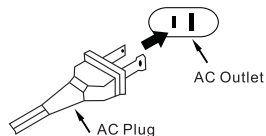

ABOUT DISCS

The region number for this DVD Player is:
See the following page for information regarding region numbers.



PLAYABLE DISCS:

 
The following discs can be played back on this DVD player:



DISC TYPES:


DVD

Data on most DVDs is divided into sections called titles and then into subsections called chapters, each of which is given a title or chapter number. Some features of this DVD player will not operate with some DVD discs as they are preset. If a function you selected does not run as desired, refer to the manual accompanying the DVD disc.

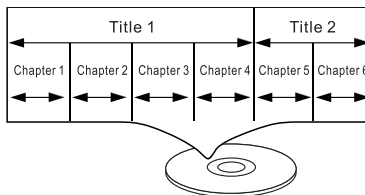

AUDIO CD

 Data on an audio CD is divided into sections called tracks, each of which is given a track number.

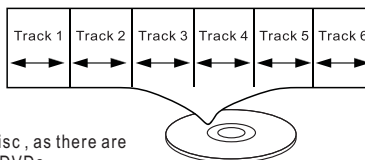

IMPORTANT:

It is important that you read the manual that accompanies the DVD disc, as there are features that are on the DVD player that cannot be used with certain DVDs.

There are also extra features on the DVD disc that are different for each DVD disc, so they are not explained in this owner's manual.

This player conforms to the NTSC and PAL color systems. However, if you are in the USA, Canada or Mexico, leave this setting on NTSC. If incorrectly set to PAL, the TV picture may roll vertically. In this case, set the TV system to NTSC as specified on page 16.

ABOUT DISCS (CONTINUED)

Notes on Copyright:

 
It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public and rent copyrighted material without permission. DVD video discs are copy protected, and any recordings made from these discs will be distorted. This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Region Management Information:

This DVD Player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD player, this DVD player cannot play that disc. You may not be able to play back some DVD video discs on this player if they were purchased from outside your geographic area or made for business purposes. When you try to play back an unauthorized disc, Wrong Region appears on the TV screen.


LOCATION OF CONTROLS

FRONT PANEL INFORMATION

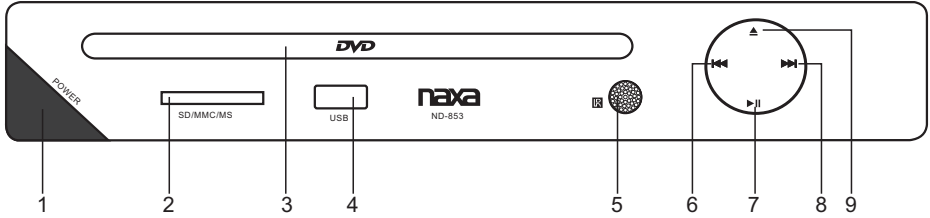


1. POWER Button
2. SD/MMC/MS
3. Disc Tray
4. USB
5. Remote receiver
6. (⏮) Skip backward Button
7. (⏸) Play/Pause Button
8. (⏭) Skip forward Button
9. (▲) Disc Tray Open/Close Button

 REAR PANEL INFORMATION

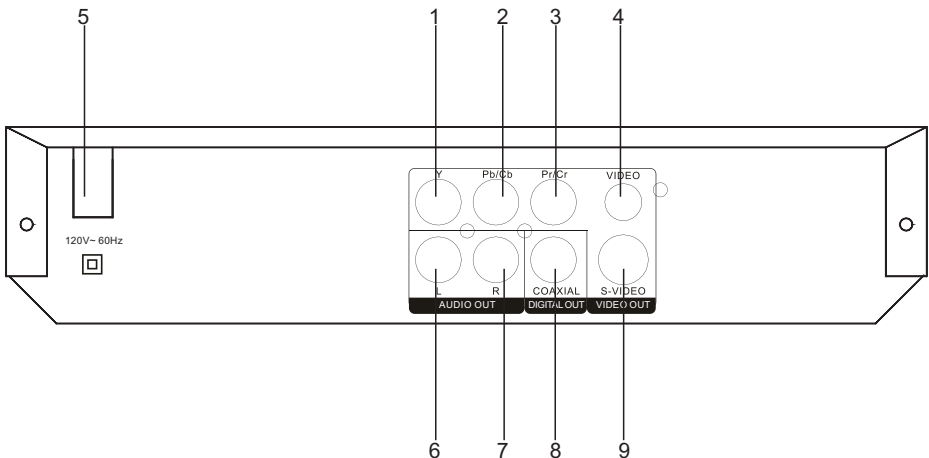

1. Component Y output Jack
2. Component Pb/Cb output Jack
3. Component Pr/Cr output Jack
4. VIDEO (Composite) output Jack
5. AC power cord
6. Left Audio output Jack
7. Right Audio output Jack
8. COAXIAL digital audio output Jack
9. S-VIDEO output Jack

 
LOCATION OF FEATURES

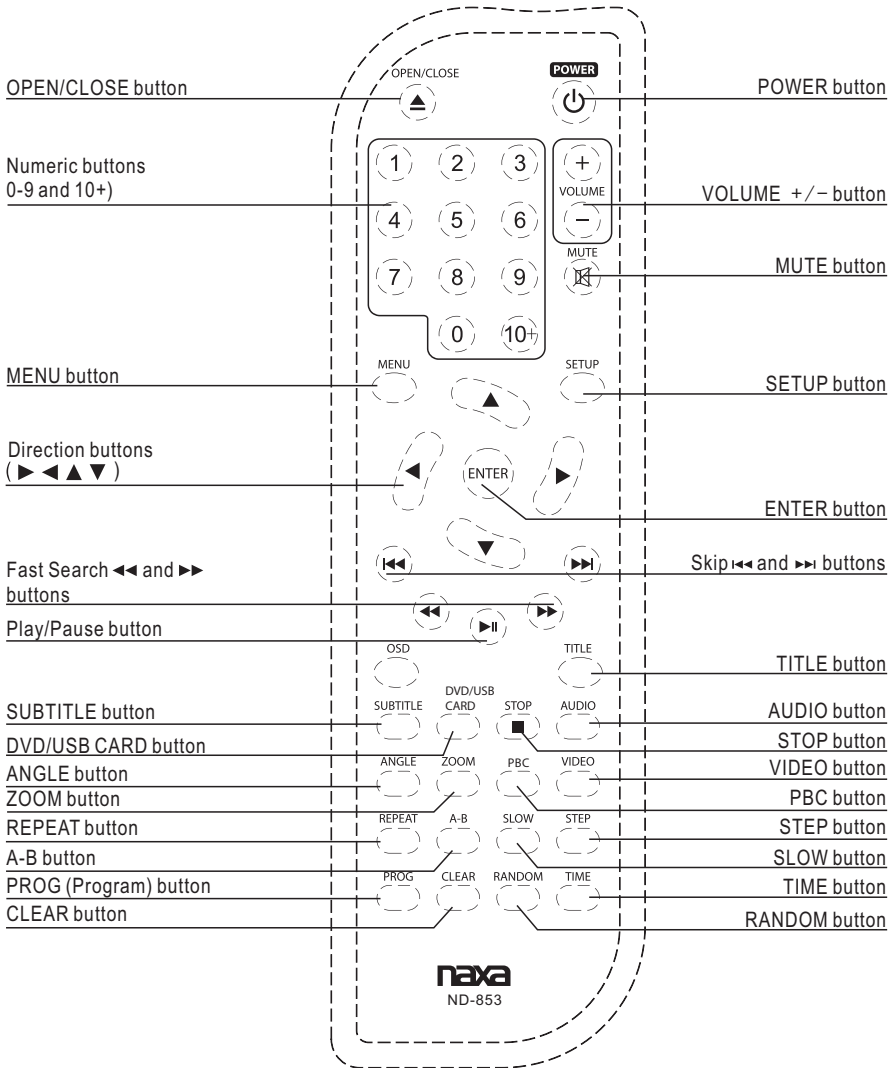

BATTERY INSTALLATION

Battery installation:

 1. Press the tabs on the battery door and lift it off.
2. Install two (2) x AAA size batteries (included) into the battery compartment as the figure below and the polarity markings inside battery compartment.

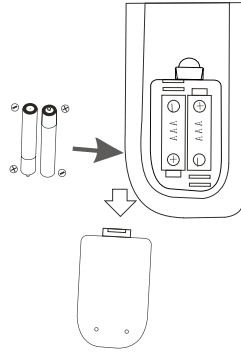

3. Replace the battery door.

 
BATTERY PRECAUTIONS:

Follow these precautions when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's directions.)
6. Do not dispose of battery in fire. Battery may explode or leak.
7. Clean the battery contacts and also those of the device prior to battery installation.

Remote Control

Remote Control distance:

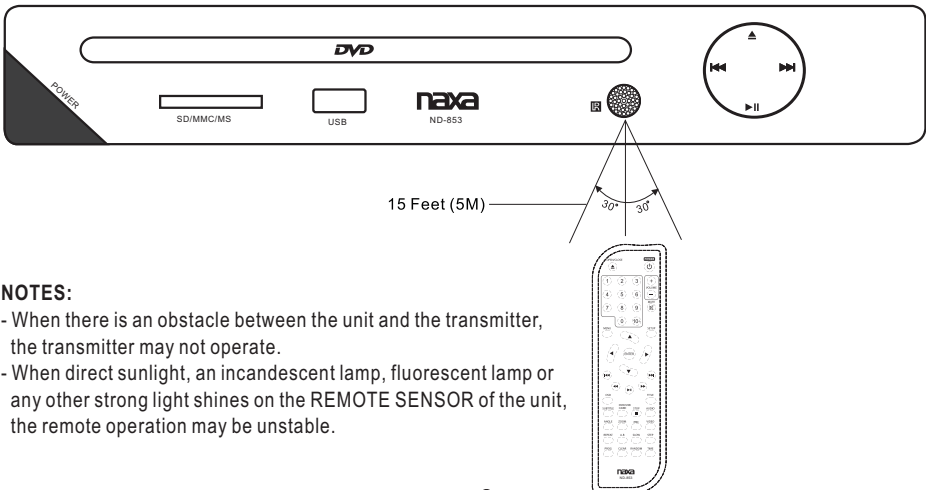


NOTES:


- When there is an obstacle between the unit and the transmitter, the transmitter may not operate.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the remote operation may be unstable.

CONNECTION TO TV THROUGH YUV OUTPUT JACKS:

 
Connection to TV through Video Output Jacks (Video Connection cable included):

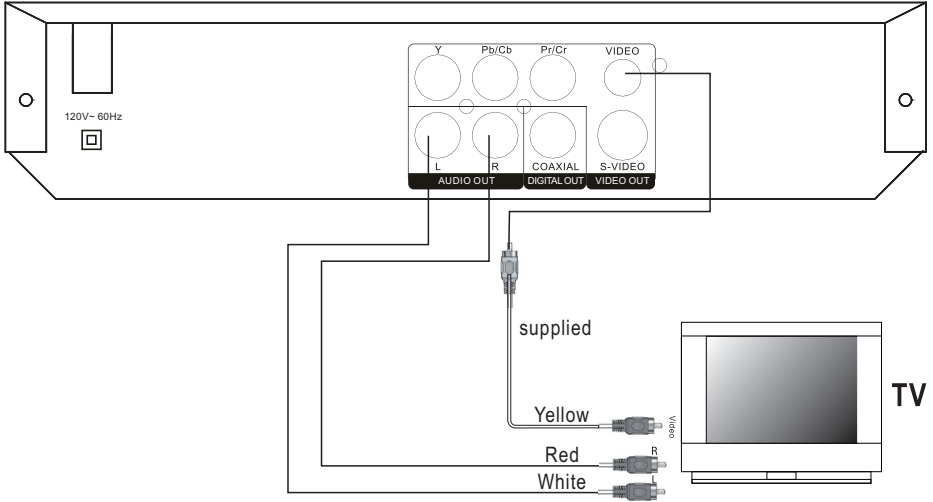

 
Connection to TV through YUV Output Jacks (YUV Connection cable NOT included):

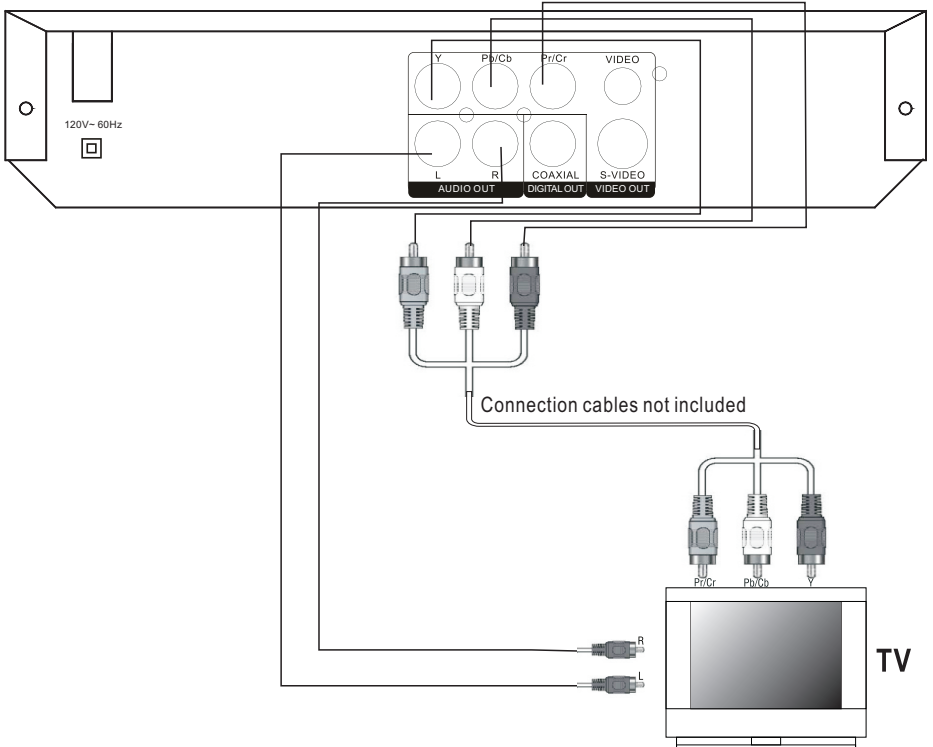

 **CONNECTION TO TV THROUGH S-VIDEO OUTPUT JACKS:
(S-VIDEO CONNECTION CABLE NOT INCLUDED):**

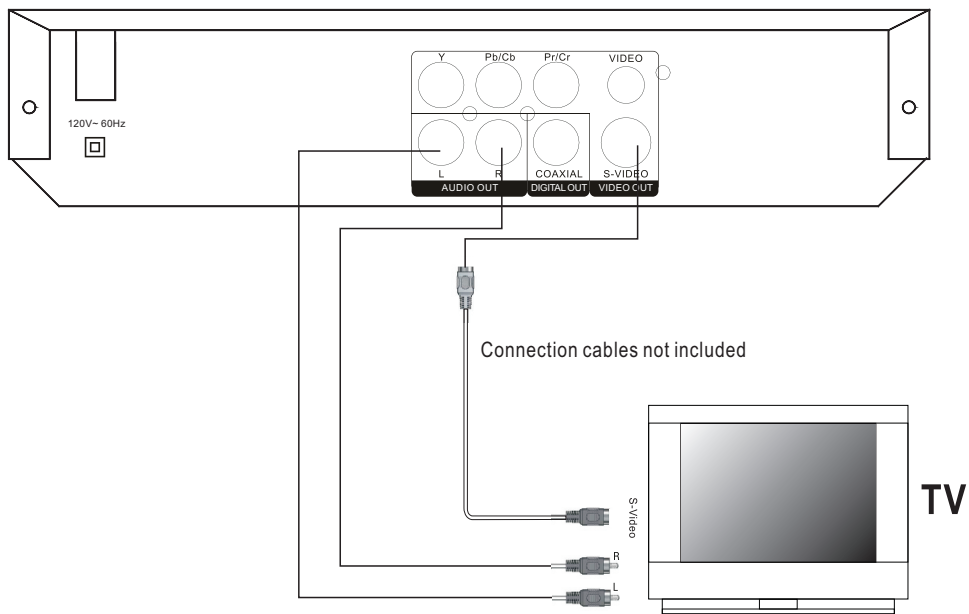

 **CONNECTION TO THE EXTERNAL AUDIO AMPLIFIER
(WITH BUILT-IN DIGITAL AUDIO DECODER):**

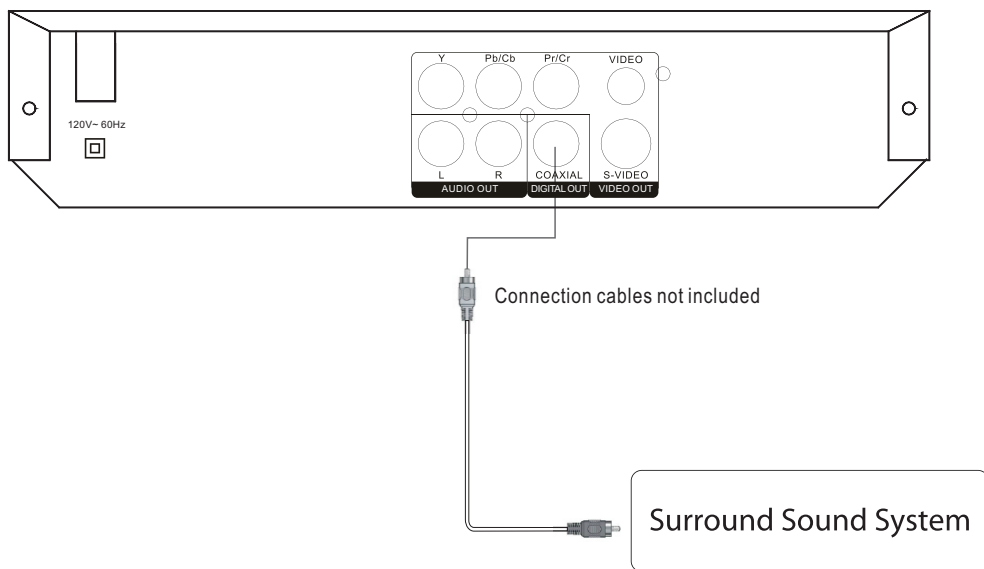

OPERATIONS

Playback of a DVD:

1. Connect the Player to the TV as indicated on previous procedures.
2. Press power (⏻) button to turn on then
3. Press the Open/Close (⏏) button to open the disc tray. Place the disc on the center of tray with label side face up. Close the tray by pressing the Open/Close (⏏) button. The unit will start playback automatically.
4. During playback:
 - ~ Press the ⏩ or ⏪ buttons repeatedly to fast search the specific section forward/backward.
 - Press the Play/Pause ⏮ button to resume normal playback.
 - ~ Press the ⏩ or ⏪ buttons repeatedly to skip tracks/chapters.
 - ~ Press the Play/Pause ⏮ button to pause, press again to resume playback.
5. Press STOP ■ button to stop playback. The player will remember the point where disc was stopped. Press Play/Pause ⏮ button again, playback will start from this point. To stop playback completely or to start again from the beginning, press STOP ■ button twice.

NOTE: If the player will not be used for a long period of time, power off the player by unplugging the AC power cord from the wall outlet.

Slow motion playback:

During playback, press the SLOW button repeatedly to set the slow motion speed. Press the Play/Pause ⏮ button to resume normal playback.

TIME

- Press the TIME button, the Title selection menu will appear on the screen. Use the Direction ▲/▼ or numeric buttons to select or enter the number of the desired Title/Chapter/Time. Press the ENTER button to start playback of the selected chapter or beginning playback time.

Repeat Playback:

- During playback, press the REPEAT button once; "Repeat Chapter" will appear on the screen then the current Chapter will playback repeatedly and continuously.
- Press the REPEAT button twice; "Repeat Title" will appear on the screen then the current Title will playback repeatedly and continuously.
- Press the REPEAT button repeatedly until "Repeat off" appear on the screen to turn off repeat mode.

A-B Repeat Playback:

During Playback, press the A-B button to define where you want the section to start. Press the A-B button again to define where you would like the section to end, the unit will then play the selected section repeatedly and continuously. Press the A-B button again to resume normal playback.

Note: This function is not available on all discs.

OPERATIONS

For DVD program:

During DVD playback, press the PROG (Program) button. The setting menu will appear on the screen as Fig.A.

- Using the Numeric and Direction buttons to enter the desired Chapter and Title number as Fig B.
- Using the direction buttons to select and highlight the **▶** Play/Pause button then press the ENTER button to start programs playback.
- During editing, using the Directions buttons to select and highlight Clear button then press ENTER button to clear the programs.
- During playback, press the STOP **■** button twice to cancel the program playback.

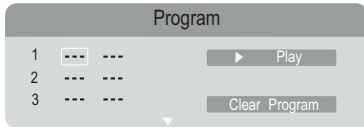 


Fig.A


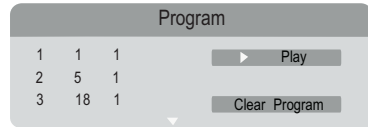 


Fig.B

 During CD or MP3/JPEG. The following menu will appear on the screen:

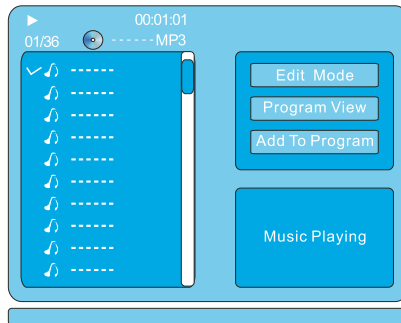

1. In stop mode, press the Direction **▲, ▼, ◀, ▶** button to highlight "Edit Mode" on the screen then press ENTER button to confirmed.
2. Press the Direction **▲, ▼, ◀, ▶** button to highlight the desired tracks then press ENTER button to confirmed. A "✓" will appear on the left side of the selected track.
3. Repeat the same procedures until all the specific tracks were selected.
4. Press the Direction **▲, ▼, ◀, ▶** button to highlight "Add To Program" then press the ENTER button to confirmed.
5. Press the Direction **▲, ▼, ◀, ▶** button to highlight "Program View" then press ENTER button to confirmed. The list of selected tracks will appear on the screen.
6. Press the Play/Pause **▶** button to star playback the selected tracks.
7. To cancel the program: Press the STOP **■** button to stop playback then press the OPEN/CLOSE **▲** button to open the disc tray. The preset program will be deleted.

OPERATIONS

AUDIO:

Press the AUDIO button repeatedly to select the available language/sound channels. This function is not available on all discs.

Press the L/R button to switch the audio output to Left Channel only; Right Channel only, Mixed or Stereo modes. This function is not available on all discs.

Subtitle:

Press the SUBTITLE button repeatedly to select the subtitle language or turn the subtitle menu off. This function is not available on all discs.

DVD Menu:

Press the MENU button, the menu of the current DVD will appear on the screen. Use the Direction buttons to select the desired option, and then press the ENTER button to confirm the selection. This function is not available on all discs.

Title

Press the TITLE button, the title menu of the current DVD will appear on the screen. Use the direction buttons to select the desired option, and then press the ENTER button to confirm the selection. This function is not available on all discs.

OSD (On Screen Display):

During playback, press the OSD button repeatedly to read the information of playback status.

Zoom:

During movies playback, press the ZOOM button repeatedly to zoom in the picture. press the direction buttons to select the parts of the zoomed picture to watch. This function is not available on all discs.

Angle:

If multi-angle scenes are available on the current DVD, press the ANGLE button repeatedly to select the desired scenes. This function is not available on all discs.

Mute

To temporarily mute the playback sound, press the MUTE button. Press again to resume normal playback.

VIDEO:

Press repeatedly to set the Video output modes to S-VIDEO, YUV or Ypbpr as the connection.

Notes:

~ Set to S-Video if you connect the TV via the S-Video jack on the player and S-Video IN jacks on the TV as the figure on page 10.

~ Set to YUV if you connect the TV via the YUV jack on the player and YUV IN jacks on the TV as the figure on page 9.

~ Set to Ypbpr if you connect the TV via the YUV jack on the player and YUV IN jacks on the TV (TV also set to Progressive Video input mode) as the figure on page 9.

Note: If the settings is incorrect, the TV screen will becomes to abnormal. Press the button repeatedly until the screen turn to normal.

N/P (NTSC/PAL):

Press N/P button to change the video output signal to PAL; NTSC or AUTO to match the color system of your Television.

Note: The color system of Television in US, Canada and Mexico is NTSC.

Volume

Press the Volume buttons to increase or decrease the volume of audio output from the unit.

STEP

During movie playback, press STEP button repeatedly to play the movie frame by frame

Press the Play/Pause ►II button to resume normal playback.

DVD/USB CARD

1. Power-on the unit.

2. Make sure no disc has been inserted.

3. Insert a USB or memory card inside the connector.

4. Press USB&Card button the player will read the multimedia files located on the USB key or memory card.

Notice : depending on capacity of the device, the reading can take more then 1 minute before launching the video.

CD PLAYBACK

Playback of a CD:

1. Power on the player and place the disc into the player as previously indicated.
2. During playback:
 - ~ Press the Play/Pause **▶||** button to pause. Press again to resume normal playback.
 - ~ Press the **▶▶** or **◀◀** to fast search the specific section of the current disc.
 - ~ Press the **▶▶** or **◀◀** buttons to skip tracks.
3. Press STOP **■** button to stop playback. The player will remember the point where disc was stopped. Press Play/Pause **▶||** button again, playback will start from this point. To stop playback completely or to start again from the beginning, press STOP **■** button twice.

NOTE: If the player will not be used for a long period of time, power off the player by unplugging the AC power cord from the wall outlet.

MP3 and JPEG (Picture) Discs Operations:

1. Power on the player and place the disc into the player as previously indicated. The player will start playing the first track automatically.
2. To select the desired folder/track, use the Direction buttons to select and highlight the desired folder then press the ENTER button. The file list will appear on the screen.
3. Use the Direction buttons to select and highlight the desired file then press the ENTER button to start playback of the selected track

Repeat:

During playback, press the REPEAT button repeatedly to select:

Repeat off:	Play all the tracks on the disc one by one.
Repeat single:	Play the current track repeatedly.
Repeat Folder:	Play the tracks in the current folder repeatedly.
Repeat all:	Play all the tracks repeatedly.

Notes:

1. Disc loading period of the JPEG/MP3 discs may be longer than loading DVD disc.
2. The operation is similar to DVD disc playing.

 
IMPORTANT NOTES:

- **⊘** will appear on the TV screen during operation if you try to access a function that is not available on the disc.
- Some discs may take a few seconds to load. If a disc is inserted incorrectly, dirty, damaged, or is not present at all, "bad disc" will appear in the display.
- Always hold the disc without touching either of its surfaces. When inserting a disc, position it with the printed title side facing up, align it with the guides and place it in its proper position.
- It is important that you read the manual that accompanies the DVD disc as there are features that are on this DVD player that cannot be used with certain DVDs. There are also extra features that are different for each DVD disc, so they are not explained in this owner's manual.

SYSTEM SETUP

Setup Menus:

Press the SETUP button, the setting menu will appear on the screen as below. Using the Direction buttons to select and highlight the function you need to set. Press the Direction ► button to enter. Press the Direction ▲,▼ buttons to set. Press the ENTER button to confirmed the selection. Press the SETUP button to save the settings and exit.

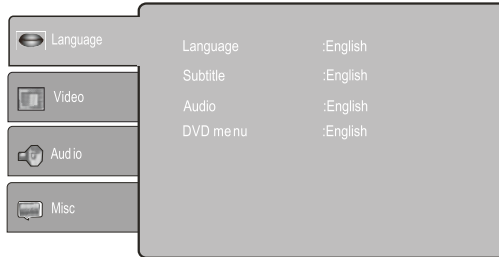

In Language Setup Page:

Press the Direction buttons ▲,▼ to select Language, Subtitle, Audio and DVD menu, as desired then press the Direction button ► to enter.

1. If Language (On Screen Display Language) is selected, press the Direction button ► to enter. Press the Direction buttons ▲,▼ to select the desired language as desired then press the Enter button to confirm your selection. Press the SETUP button to save the setting and exit.
2. If Subtitle, Audio or DVD menu is selected, press the Direction button ► to enter. Press the Direction buttons ▲,▼ to select the desired language as desired. Then press the Enter button to confirm your selections. Press the SETUP button to save the setting and exit. This is not available on all discs.

In Video Setup Page:

Press the Direction buttons ▲,▼ to select Aspect Ratio, TV System, Video Out As desired then press the Direction button ► to enter.

1. If Aspect Ratio is selected, press the Direction button ► to enter. Press the Direction buttons ▲,▼ to select 4:3 or 16:9 to match the aspect ratio of your TV then press the Enter button to confirm your selections. Press the SETUP button to save the setting and exit.

Notes:

- 4 : 3: Select when the unit is connected to an external 4 : 3 TV.
- 16:9: Select when the unit is connected to an external wide-screen TV.

SYSTEM SETUP

2.If TV system is selected, press the Direction button ► to enter. Press the Direction buttons ▲,▼ to select the format of output signals to NTSC,PAL or AUTO. Then press the Enter button to confirm your selections. Press the SETUP button to save the setting and exit.

Notes:

- Set it to NTSC if the color system of your TV is NTSC. (Default setting. The TV signals in US, Canada and Mexico is NTSC).
- Set it to PAL if the color system of your TV is PAL.
- Set it to AUTO if the color system of your TV is multi-system.

3.If Video out is selected, press the Direction button ► to enter. Press the Direction buttons▲,▼to select video output modes to S-VIDEO, YUV or Ypbpr as the connections of the TV.

Notes:

- ~ Set to S-VIDEO if you connect the TV via the AV or S-Video jack on the player and S-Video IN jacks on the TV as the figure on page 10.
- ~ Set to YUV if you connect the TV via the YUV jack on the player and YUV IN jacks on the TV as the figure on page 9.
- ~ Set to Ypbpr if you connect the TV via the YUV jack on the player and YUV IN jacks on the TV (TV also set to Progressive Video input mode) as the figure on page 9.

Digital Out

1. If Digital Output (selection the digital audio output format from the COAXIAL jack) is selected, press the Direction button ► to enter. press the Direction buttons ▲,▼ to select "OFF" "PCM" or "RAW" to matching the decoding system of your connected external audio amplifiers (For details, refer to the instruction manual of your external amplifiers).
2. Press the SETUP button to save the setting and exit.

In Misc (Miscellaneous) Setup Page:

Press the Direction buttons ▲,▼ to select Use Default setting or Screen saver as desire then press the Enter button to enter.

1. If Use Default selection is selected, press the Enter button to confirm,press the Direction button ► to select Yes or NO then press the ENTER button to confirm.

Notes:

 
- ~ If Yes is selected, the settings in the setting menu will be reset to default settings. (Except rating level settings).
- ~ If No is selected, exit without any changes.

2. If the Screen Saver is selected, Press the Direction button ► to enter. Press the Direction buttons ▲,▼ to select On or Off as desire then press the Enter button to confirm your selections.Press the SETUP button to save the setting and exit. When set to On, the screen saver will come on when the unit stops or the image is paused for a few minutes. When the settings is Off, the screen saver will not come on.


CARE AND MAINTENANCE

Caring for Discs

- Treat the disc carefully. Handle the disc only by its edges.
Never allow your fingers to contact with the shiny, unprinted side of the disc.

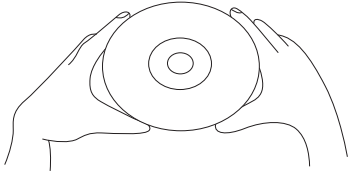

- Do not attach adhesive tape, stickers, etc. to the disc label.
- Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- If a disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched).
- When cleaning the disc, wipe in straight lines from the center of the disc to the outer edge of the disc. Never wipe in circular motions.

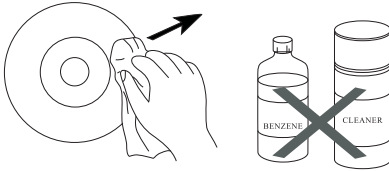 


- Discs should be stored in their cases after each use to avoid damage.
- Do not expose discs to direct sunlight, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the disc.
- Do not stick or write anything on either side of the disc. Sharp writing instruments, or the ink, may damage the surface.

Cleaning the Unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

TROUBLESHOOTING GUIDE

Check the following before requesting service :

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
GENERAL		
No power.	AC cord unplugged.	Plug the AC cord to an AC outlet.
Power on, but unit not functioning properly.	Condensation has formed.	Unplug the unit and wait about one to two hours to wait until the player is dry.
	Wrong type of discs or the disc is corruption.	Try other discs.
	The disc is dirty or inserted incorrectly.	Clean disc and insert with label side-up.
No picture and/or no sound	The connection cables had not installed correctly.	Re-installed the cables as page 9-10 firmly.
	The video output of the player incorrect settings.	Press the VIDEO button repeatedly until correct picture watching on the TV.
	The connected TV power is off.	Turn the TV on.
Playback picture rolling .	Color system of the player wrong settings.	Press the P/N button on the remote control repeatedly until correct picture watching on the TV.
Pictur quality no good	The disc is dirty.	Clean the disc.
The remote control is not working.	The batteries are weak or dead.	Replace fresh batteries.
	The batteries are not installed properly.	Install batteries as the polarity markings inside battery compartment.
	The remote is not aimed at the sensor.	Aim the remote at the sensor.
	Distance is too far.	Operate within 15'
	There is an obstacle in the path of the beam.	Move obstacle.
The unit does not start playback.	Rating level set to block the DVD.	Release the lock with the password .
	DVD not inserted, or inserted upside-down.	Insert DVD correctly.
	A non-playback disc is inserted.	Try other CD, DVD discs.
	The disc is not placed in the guide.	Place the disc on the disc tray correctly inside the guide.
	The disc is dirty.	Clean the disc.
Some functions do not operate as stated.	Some features and functions are not available on all discs.	The function not available on the current disc, try other discs.
Selected language is not being shown in the subtitles, or spoken.	If the audio or subtitle language does not appear on the disc, then the initial setting will not be seen/heard.	The function not available on the current disc, try other discs.
Subtitles are not working properly.	Subtitles appear only when the discs contain them.	The function not available on the current disc, try other discs.
	Subtitles not turned on.	Turn the subtitles on.
Angle cannot be changed.	Angles may not be recorded on the disc (see disc jacket/case),or they may only be recorded on certain section.	~ Try another discs. ~ The multi-angle not attached in whole disc, wait until the multi-angle icon "  " appear on the screen then press the ANGLE button on the remote control to change.

SPECIFICATIONS

Power Source	AC 120V~, 60 Hz
Power Consumption	10W
Power source of the Remote Control	DC \equiv 3V, 2 x AAA size batteries, included
Signal System	NTSC/PAL

Discs Played:

DVD-VIDEO Disc

- 12cm single-sided, single layer
- 12cm single-sided, dual layer
- 12cm double-sided, single layer
- 8cm single-sided, single layer
- 8cm single-sided, dual layer
- 8cm double-sided, single layer

COMPACT DISC (VIDEO CD)

- 12cm disc
- 8cm disc

Video Output Level	1Vp-p
Audio Output Level	2Vrms (1KHz, 0dB)

Audio Signal Output Characteristics:

Frequency Responses:

DVD (Linear Audio)	20Hz-20KHz (48KHz/96KHz sampling)
CD Audio	20Hz-20KHz
S/N Ratio	70dB

Pickup:

Wavelength	655nm
Laser Power	Class 1

Specifications are subject to change without notice.

Accessories:

- 1 x User's manual
- 1 x Remote Control
- 1 x AV connection cable