



**Bryte Tablets**

**From**

**Technology Professionals**

**Limited**

# Content

1	Introduction.....	2
1.1	Acknowledgement.....	4
1.2	Announcements.....	4
1.3	Safety Instruction .....	4
1.4	Abbreviation/Terminology .....	5
2	Getting Started .....	5
2.1	Bryte Tablet Operation and Preparation.....	5
2.2	Bryte Tablet Status and Reminder .....	5
2.3	Inserting SIM Card and Memory Card (Micro SD) .....	6
3	Quick Start Guide.....	9
3.1	Keys Function .....	10
3.2	Startup and Shutdown .....	10
3.3	Open and Close the Screen .....	10
3.4	Usage of Touch Screen.....	11
3.5	Main Interface .....	12
3.6	Visit Application Procedures.....	16
3.7	USB Connection .....	16
3.8	Words Input.....	17
3.9	Application Technique.....	19
4	Basic Setting .....	17
4.1	SIM Card Management Management .....	17
4.2	Wireless and Internet.....	17
4.3	Bluetooth.....	18
4.4	Data Usage Situation.....	19
4.5	More.....	22
4.6	Contextual Model.....	27
4.7	Display.....	29
4.8	Storage .....	33
4.9	Battery.....	35
4.10	Application .....	36
4.11	Account and Sync.....	37
4.12	Location Service .....	39
4.13	Security Setting .....	41
4.14	Language and Input Method.....	43
4.15	Backup and Reset.....	45
4.16	Date and Time.....	46
4.17	Fixed-time Startup and Shutdown.....	47
4.18	Assistance Function.....	48
4.19	Engineer Selection.....	48
4.20	About Tablet.....	49
5	Multi-Media .....	50

5.1 Music.....	50
5.2 Video .....	51
5.3 Photo Gallery .....	51
5.4 Camera .....	52
5.5 FM Radio.....	53
6 Communication Function.....	58
6.1 Phone.....	58
6.2 Text Message.....	58
6.3 Contact List.....	59
7 Internet .....	60
7.1 Browser .....	60
7.2 Email .....	60
8 Other Application Procedures .....	65
8.1 Clock.....	65
8.2 Calculator .....	65
8.3 File Manager .....	66
8.4 Recorder .....	69
9 Installation of Procedures.....	70
9.1 Installation.....	70
9.2 Uninstall .....	70
10 Troubles Shooting .....	74
11 Bryte Warranty .....	75

# 1 Introduction

## 1.1 Acknowledgement

Thanks you for purchasing one of our products. Bryte IPX Tablet is high definition tablet PC with MT8312 MTK8382 CPU, which apply the Cortex-A9 of frequency of 1.7GHZ/2.2 GHz Quad Core or Octa Core Processor (depending on Model) and based on Android 4.2.X Operating System.

The Bryte Tablet is designed with superior technology and functions including WCDMA, WIFI, BT, GPS, FM, Super IPS Technology, High resolution Camera, Retina Display, Dual 2G/3G standard SIMs, voice call powered by 3.7V/6500 mAh high capacity battery. Your Bryte Tablet comes with in-built Bluetooth Radio and WiFi which facilitates wireless communication between devices or connect to the internet anytime and anywhere. It is also built with high-accuracy GPS/GPRS system for navigation and Location based Applications and functions.

This manual systemically introduces the functions, user guide and announcements, please read this manual carefully before using this device.

## 1.2 Caution

### Preventive maintenance

- To avoid failure of device, your Tablet, battery, charger and other accessories should not be kept in extreme temperatures, adverse environmental or working conditions.
- Please always keep the Bryte IPX Tablet dry. This is to avoid the device corrosion of electronic circuits that may lead to short circuit and electric shock.
- Keep the battery, charger and other accessories away from water and moisture.
- Do not operate the device or charger with wet hand.
- Do not knock, throw, bend, drop or shake the device. Rough handling can break it.
- Do not open, disassemble or tamper with the device or accessories arbitrarily, as any physical distortion or defect on the device or accessories nullifies product warranty.

## 1.3 Safety Instruction

Before using your Bryte IPX tablet, please read this chapter. For further instructions, please also refer regular safety tips, materials and announcement at [www.brytestore.com](http://www.brytestore.com).

- Always keep your tablet dry. Precipitation, humidity and all types of liquids or

- moisture can contain minerals that corrode electronic circuit.
- Do not use your Bryte IPX Tablet while driving.
  - Do not use the device in restricted areas such as Hospitals, Petrol Stations or any environment where electromagnetic emission are not allowed.
  - Switch your Bryte IPX to Airplane Mode when boarding an aircraft to avoid interference or interruption of signals.
  - To avoid electronic equipment failure, please shut down your Bryte IPX Tablet when operating in a high frequency environment or near high-accuracy electronic equipment.
  - Please do not open, disassemble or try to repair the device or accessories. Only authorized and qualified agent is allowed to service, repair or disassemble the device. **Unauthorized tampering or physical damage of device may invalidate the product's warranty.**
  - Please keep your tablet away from magnets, magnetic fields and magnetic equipment, as radiation from the device may erase the data stored in the magnetic equipment.
  - Do not use the device in high temperature or low temperature environment, inflammable gas (petrol stations).
  - Protect the Bryte Tablet and accessories from the reach of Children. Children should only be allowed to handle the device under the supervision of parents.
  - Please comply with related rules and regulations, and respect others' privacy, legal rights and relevant laws of the country while using the Bryte Tablet.
  - Please strictly adhere to related instructions in the manual when using USB cable to ensure the safety of the Bryte Tablet or PC.
  - Use only chargers and other accessories supplied with your device or approved by Technology Professionals Limited. Do not connect incompatible products.
  - Ensure you back up your important data in your computer, Micro SD or external memory

## 1.4 Abbreviation/Terminology

Abbreviation/Terminology	Full Name	Description
Bryte IPx8	Bryte 8-inches Tablet PC Device	IPX Air screen model of Android 4.2x
Bryte IPX 9.7	Bryte 9.7-inches Tablet PC Device	IPX Air screen model of Android 4.2x
WIFI	Wireless Fidelity	Base on IEEE 802.11b standard wireless LAN
T F	Trans Flash	Alternative name Micro SD, super miniature memory card

## 2 Getting Started

### 2.1 Bryte Tablet Operation and Preparation

#### Battery Charging

Before using your Bryte Tablet for the first time, charge it using the approved charger for at least 5 hours and ensure it is fully charge it.











NOTE: If the battery is completely discharged, it may take several minutes before charging indicator is displayed.

### 2.2 Bryte Tablet Status and Reminder

#### Notifications/Reminder icons

When reminder message pops up in your reminder window, Swipe the column down to open the reminder list. Choose the menu you need, and confirm the information. You can close the reminder window through clicking the column to slide up.

Please refer to below status icons:


Icon	Meaning	Icon	Meaning
	New email		Airplane Mode on
	USB connected		USB debugging connected
	Return button		Downloading
	Display recently-used application		Home button
	Battery Level		WIFI connected, internet is available

### **Reminder board**

Reminder Notification icons will display when you have an incoming mails, WIFI is switched on , you can slide down the notification to view detailed information.

## **2.3 Inserting SIM Card and Memory Card (Micro SD)**

Your Bryte IPX Tablet is designed to use two Standard SIM cards (Dual SIM), the size of the SIMs depends on the model. But the procedure used in inserting the SIM card are similar.

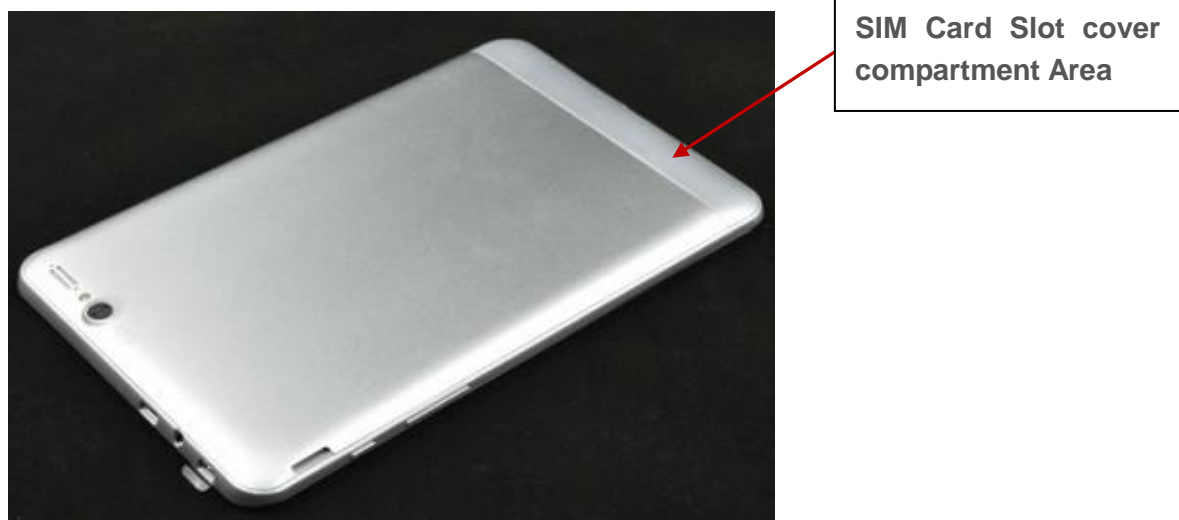


Bryte Tablet

- 2.3.1 Locate the SIM Slot cover compartment Area of your Tablet (In most Models, this is the white Area at the back of the tablet as shown in the figure above).
- 2.3.2 Locate the opening tab at the edge of the SIM slot compartment area as shown in the picture below.



- 2.3.3 Insert your finger into the Opening Tab and gently pull backward as shown below to open the compartment cover.

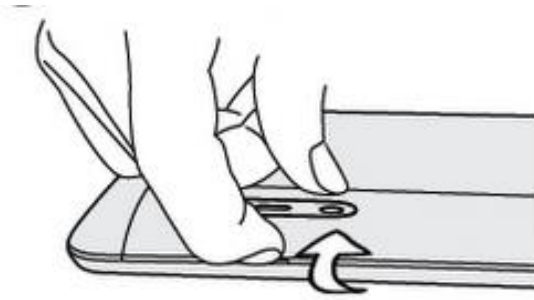

**(Please ensure you don't exert pressure on the Screen, to avoid breakage)**

- 2.3.4 Insert you SIM Card (Either Single or Double depending on Model), you can also install the microSD external memory storage card in the microSD card slot on your tablet.



- 2.3.5 Insert you SIM Card (Either Single or Double depending on Model), you can also install the microSD external memory storage card in the microSD card slot on your tablet.





2.3.6 Replace Back the Cover Compartment and ensure that it grip firmly.







**You can now use your Bryte Tablet to make and receive calls, access the Internet via your 3G SIM card or Wi-Fi network and do much more.**

# 3 Quick Start Guide

## 3.1 Keys Function

### Keys Function Description:

Power button	Short press to sleep/wake up, Long press to Shut-down or Startup Device.
Volume + (up)	Increase Volume
Volume - (down)	Decrease Volume
<b>HOME button</b> (home) 	Click it at any interface to return to the main interface.
<b>Back button</b> (back) 	Click at any interface to return to previous menu
<b>Menu button</b> 	To Display the main menu interface.
<b>Setting button</b> 	display recently browsed history

## 3.2 Startup and Shutdown

### Startup

Press and hold the **POWER Button for about three seconds**, you can select your preferred interface iOS or Android (if available depending on the model). Enter the unlock key or pattern if your device screen is locked.

### Shutdown

1. Press and hold the POWER Button for about three second, a shutdown dialog window will pop up.
2. Shutdown dialog window contains Four Options: Mute mode, Airplane Mode, Reboot and Shutdown.
3. Click Shutdown to shut down your Tablet. (Click any of the other options to switch to the mode).

### 3.3 Switch Screen Sleep Mode

**Screen will go into sleep mode when:**

1. No operation is performed (device is idle) for some time, this help conserve power thereby increasing battery life.
2. You press POWER Button (Short Press).

**Activate Display when in Sleep Mode.**

If the screen is in Sleep Mode, press the POWER Button once to activate screen display. The screen will be locked , swipe to the left or draw unlock pattern to unlock, it will display as shown in picture 3.1 below.



**Picture 3.1**

### 3.4 Using the Touch Screen

**Bryte Tablet operating methods**

You operate or activate any item in either in the main screen, menu or application in your Bryte Tablet using any of the following methods:.

#### **Click**

When you want to use the screen keyboard typing or choose application in the main interface, you only need to touch it (click) with your finger.

#### **Press on**

If you want to open any item( textbox or the link in the webpage), or shortcut press on the item, for options or short- cut menu, press and hold the list (item ) to activate the menu.

#### **Swipe or Slide**

Slide or Swipe is simply to make a quick vertical or horizontal movement across the screen with your finger. You slide to change views, display options etc.

#### **Pull or Drag**

To drag an image or icon, press and hold it and move it to the position you want..

#### **Rotate**

For most pictures, you only need to rotate your Bryte Tablet through 90 degrees to change the screen orientation from horizontal to vertical or vice versa. For instance, when typing or watching movies.

## **3.5 Home Page**


Main interface is as shown in picture 3.2, below, Press and hold (long press) a blank area on screen to activate popup windows to set wallpaper, folder, widgets, and shortcut.

You can also do this through the Setting Tool.



### The extended home page

The home page can be extended beyond the wideness of screen to provide more space, which you can put new-added shortcuts and widgets. Click the blank space in home page then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures as the following picture,

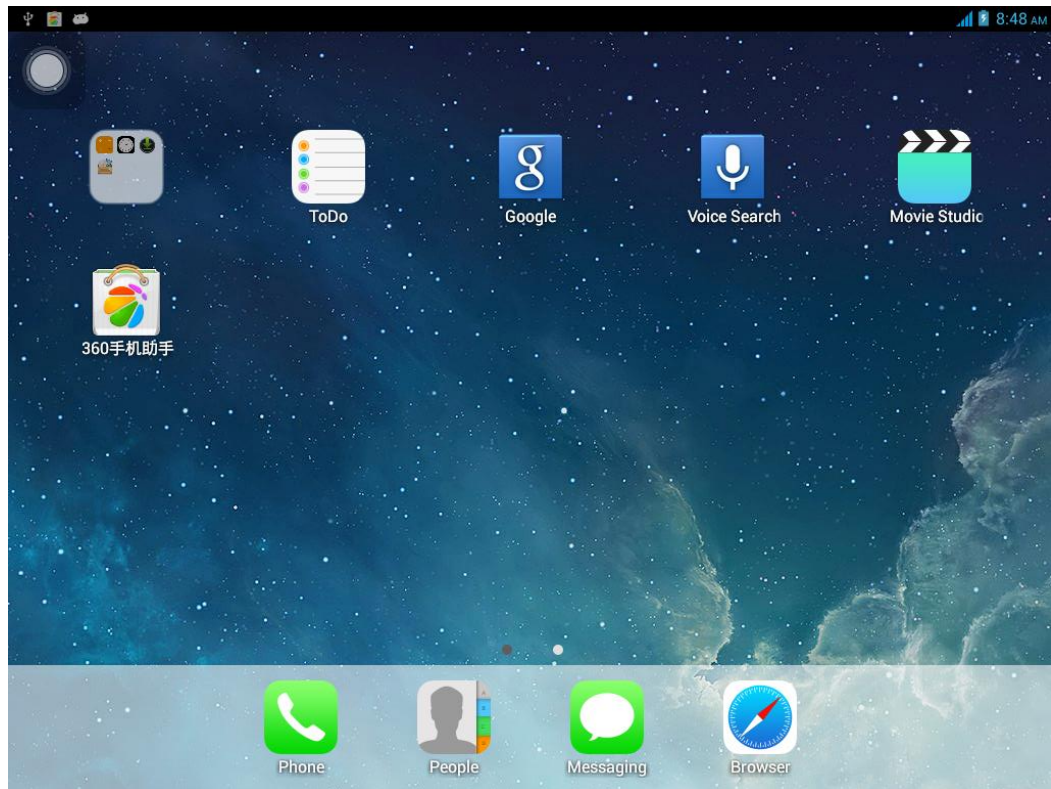

**Picture 3.3**


**The shortcut icons management in desktop (Home/Main View) application.**

**Create folder icon in desktop**

1. Drag the icons need to be put together on one icon(can also overlay several icons) as Picture 3.4.
2. Then click the over layed icons, the applications can be folded

Click the unnamed folder in the black box, it will pop up the hidden keyboard, the folder name can be renamed (this is similar with Apple iOS system), the icons position can be changed through long press.




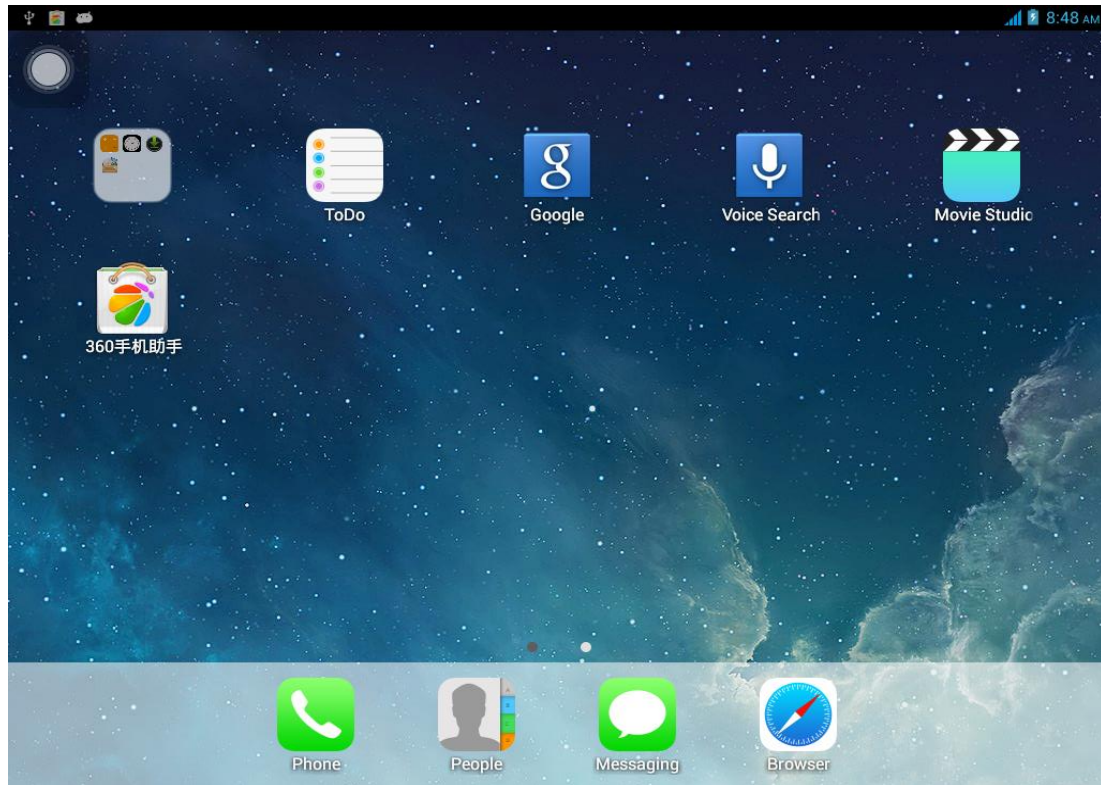

**Picture 3.4**

### **To remove an icons from desktop (Home view)**

1. Press and hold (Long press) the icons you want to remove, this will activate the

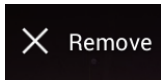
Remove  icons on the top right corner of the screen.

2. Drag the icon to the remove icon above, till the icon become red, then remove your finger to delete the icon.

### **Change the wallpaper of desktop**

1. In home page, long press any blank space in the main screen, it will pop up a window to change the wallpaper.
2. Click the gallery or wallpaper gallery to select the wallpaper.

## 3.6 Choosing/ Running Application

Click Apps Icon  on any view to display all installed Apps as shown in Picture 3.6, choose the application you want to run or activate. Note, you may need to swipe to the left to view other Apps if current View is full.



Picture 3.6

## 3.7 USB Connection

### Bryte Tablet storage configuration

You can transfer documents or files from your Bryte Tablet to your Laptop or Desktop Computer and vice versa. This is necessary especially if you want to back up or restore important files. Before transferring file/documents, you have connect your Bryte Tablet to your Computer using the USB cable:

1. Connect the Bryte Tablet and computer by USB cable, the Notification column will ask you the mode of connection you want.
2. Open the Notification and Accept USB Connection.
3. It will as shown in the Picture 3.4, then click “Turn on USB storage”.
4. Allow the Driver to install USB device, this may take some time and you may be required to be connected to the internet especially if USB Driver have not been previously installed in your computer.
5. You can now copy the files and documents you want from your Tablet to Computer or vice versa.





**Picture 3.7**

#### **To copy files into Tablet's memory card**

1. Connect the Bryte Tablet to computer with USB cable as stated above.
2. Accept USB Connection and allow computer connect.
3. After successful connection, Open "My Computer" in your computer, select "Removable Disc" to access the external Memory (MicroSD Card) of your Bryte Tablet.
4. Copy the files you need into "Removable Disc" or its folders
5. After copying, click "shutdown the USB storage" configuration on your tablet to uninstall. Then disconnect the USB cable.

Notice: When your Bryte Tablet is connected with USB cable and USB Storage is turned ON, you will not be able to view the contents of the memory card through your Tablet. It's only after you detach the USB cable, that you can be able to access memory card through your Bryte Tablet.

## **3.8 Typing and Editing Documents**

#### **Use the screen keyboard**


When you select the text area (either words or numbers) the on-screen keyboard will be activated. The keyboard contains the following typing options:

1. Android keyboard
2. Google Key-in

### Choose the typing method you want

1. Click Setting procedure application.
2. Select Language and Keyboard.
3. In the text setting area will reveal all the installed words-typing methods in your Bryte Tablet.
4. Tick the typing method you want.

### Use and Switch of input method

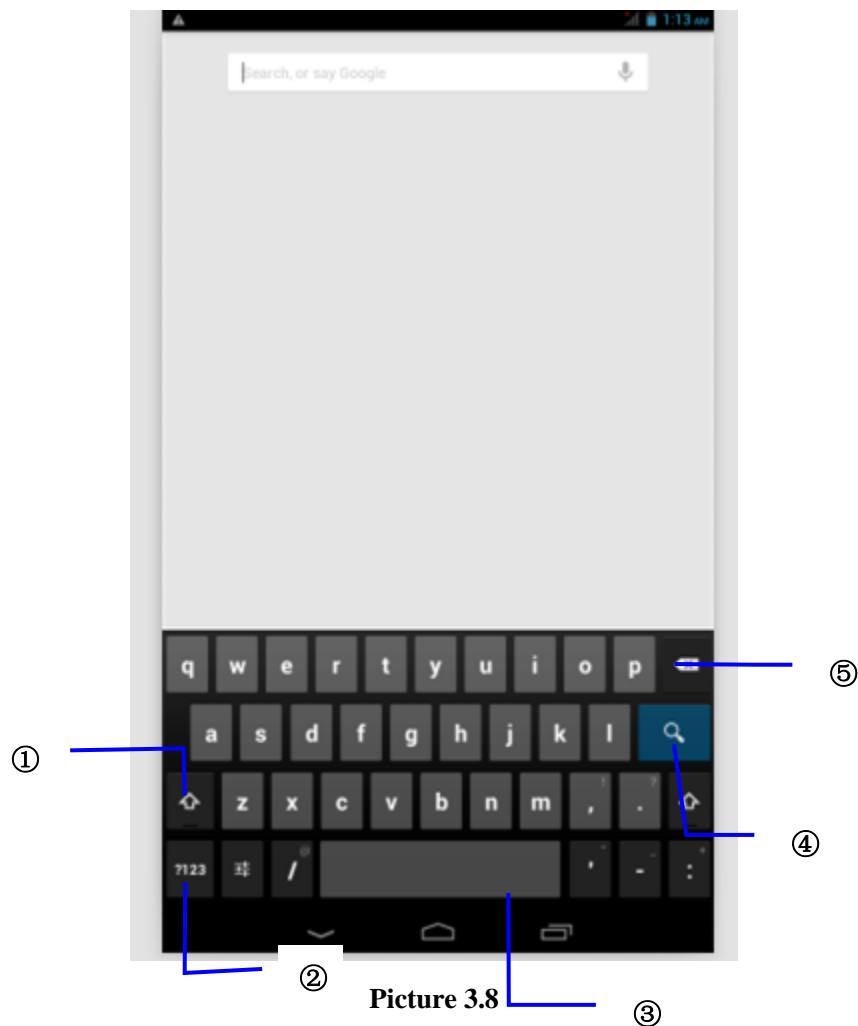

N0	Meaning as in Picture 3.8 above
1	Switch between Capital and Small letter
2	Switch between Word and Number Mode of Text input
3	click to insert the space

4	Click to execute input
5	delete the character in the left of cursor, click and hold to delete all the characters in the left of the cursor.

## 3.9 Operation Technique

### **Enter widgets interface**

In the application interface, click widgets on the above of screen, or slide the screen, it will switch into widgets interface. Long press any widget to create its shortcut, then you can enter into the application through the shortcut icon.

### **Create application shortcut icons in the desktop**

In the application interface or widgets interface, long press any icon to switch into desktop automatically, drag and hold the icon, you can move to any position in the desktop.

Remind: If the target position has no space, the widget won't be add in the main screen.

 
# 4 Basic Setting

## 4.1 SIM Management

Your Bryte Tablet is a Dual SIM device (2 SIM Cards) and you can set a default SIM for Voice call, Video call, Data Connection, Messaging etc.


### 4.1-1 Voice call

Click settings in main menu; choose SIM Management, as Picture 4.1

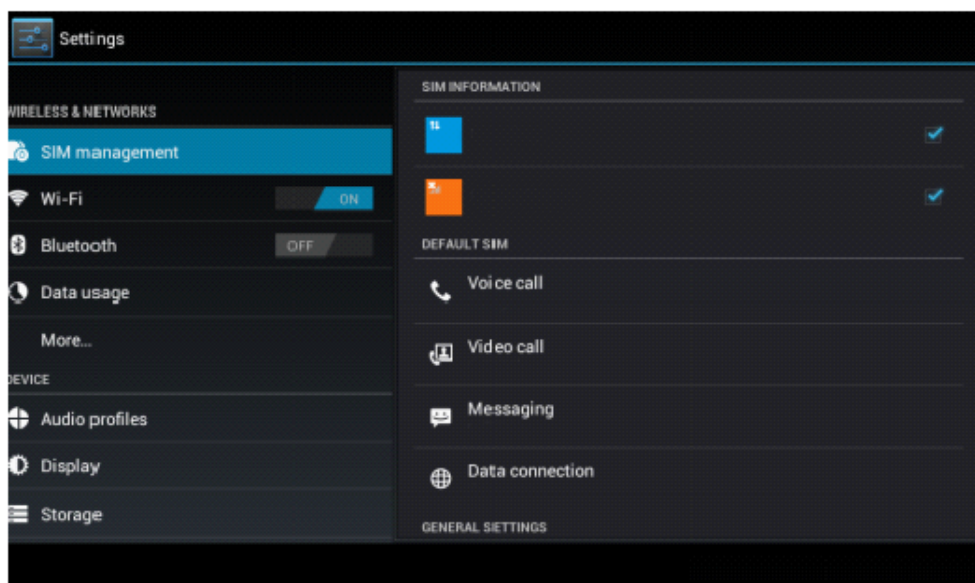

Picture 4.1

 
Click voice call, choose defaulted SIM card, as Picture 4.2

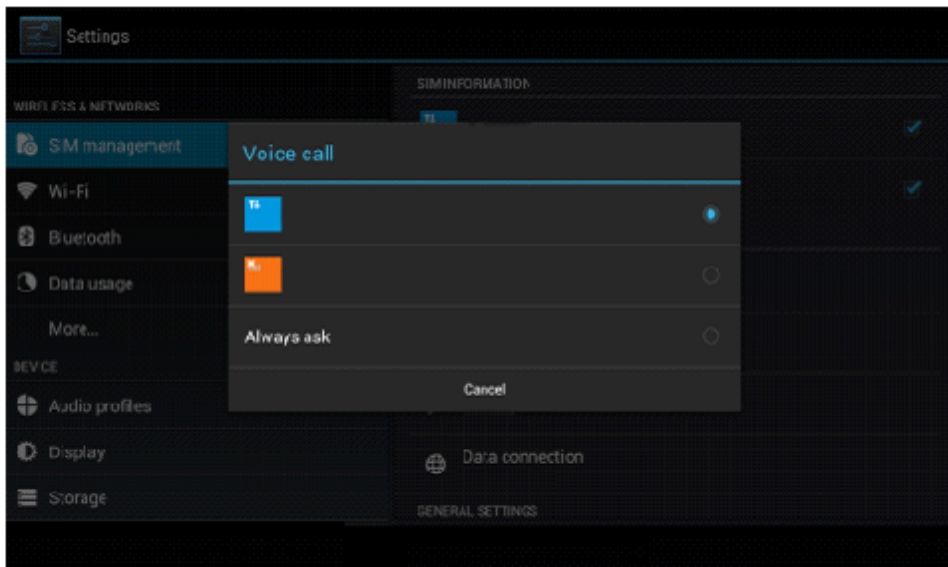

**Picture 4.2**

#### 4.1-2 Video Call

 
Click settings in main menu, choose SIM Management, and click video call, choose default SIM card when makes video call, as Picture 4.3

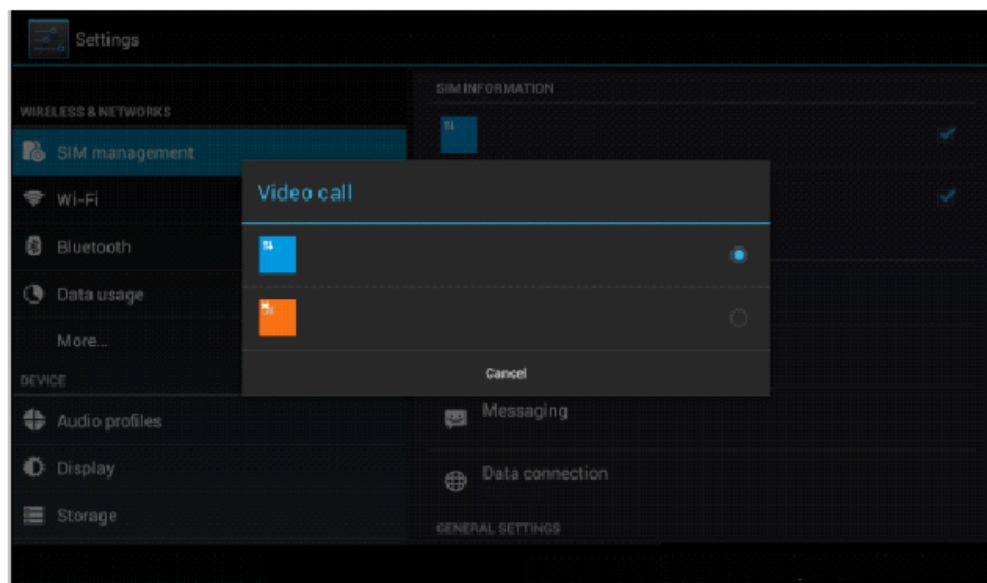

**Picture 4.3**

#### 4.1-3 Message

 
Click settings in main menu, choose SIM Management, click message, and choose the default SIM card when sends message, as Picture 4.4

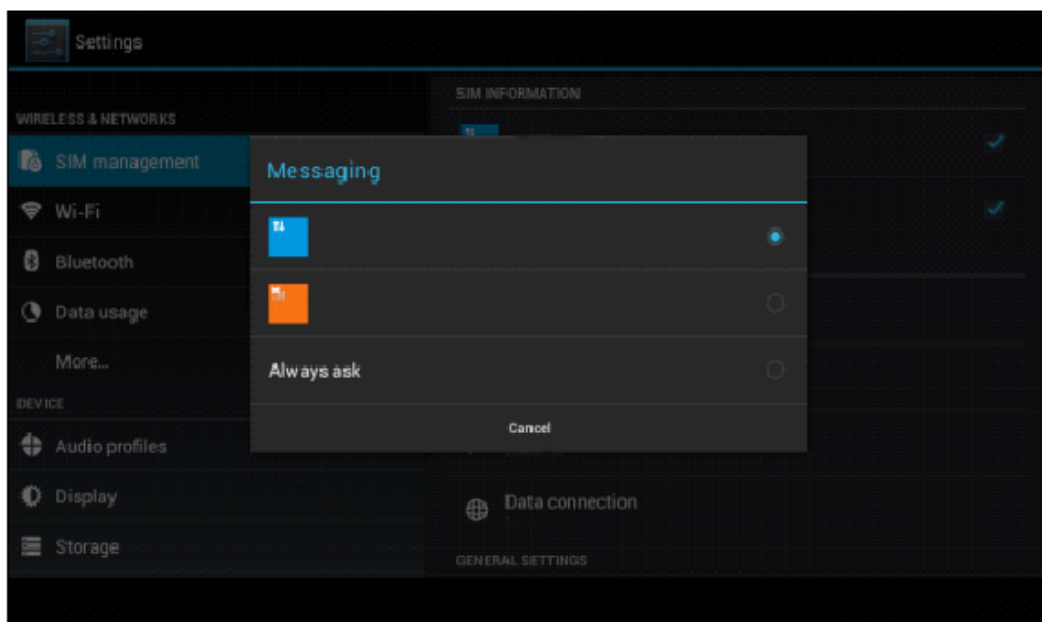

Picture 4.4

#### 4.1-4 Data Connection

 Click setting application in main menu, choose SIM management, click data connection, and choose the defaulted SIM card, as Picture 4.5

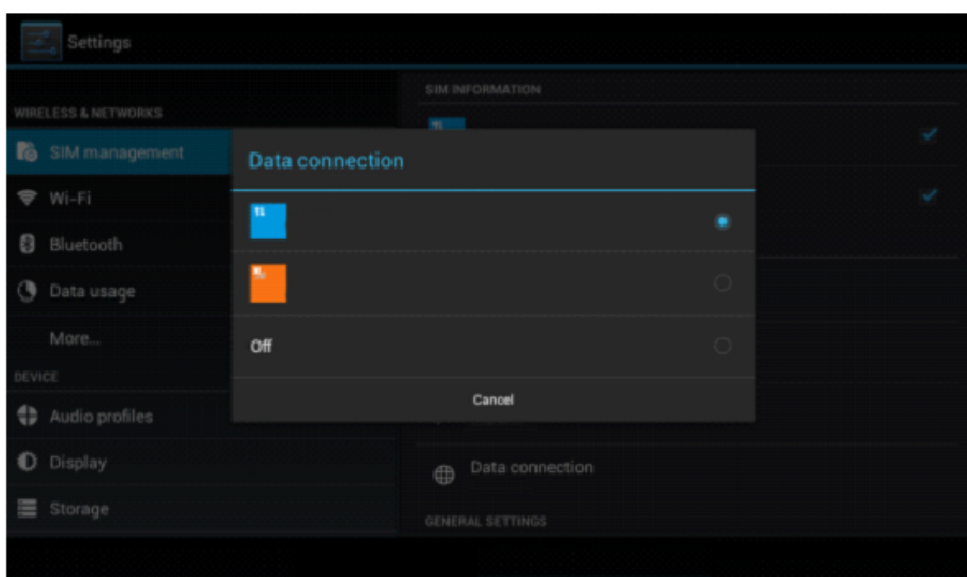

Picture 4.5

## 4.2 Wireless and Internet

### 1. Wi-Fi Connection Setting

- 1) In the main menu (Home View) or interface, click **Setting** icon.


- 2) Select WLAN, Switch ON Wi-Fi, your Tablet will automatically search for available Wi-Fi networks, as shown in Picture 4.6
- 3) Choose the Wi-Fi Network you want to connect, if password is required, supply it and click Connect.



**Picture 4.6**


## 2. Add Network

 - 1) Click **ADD NETWORK** icon in right top, as Picture 4.7

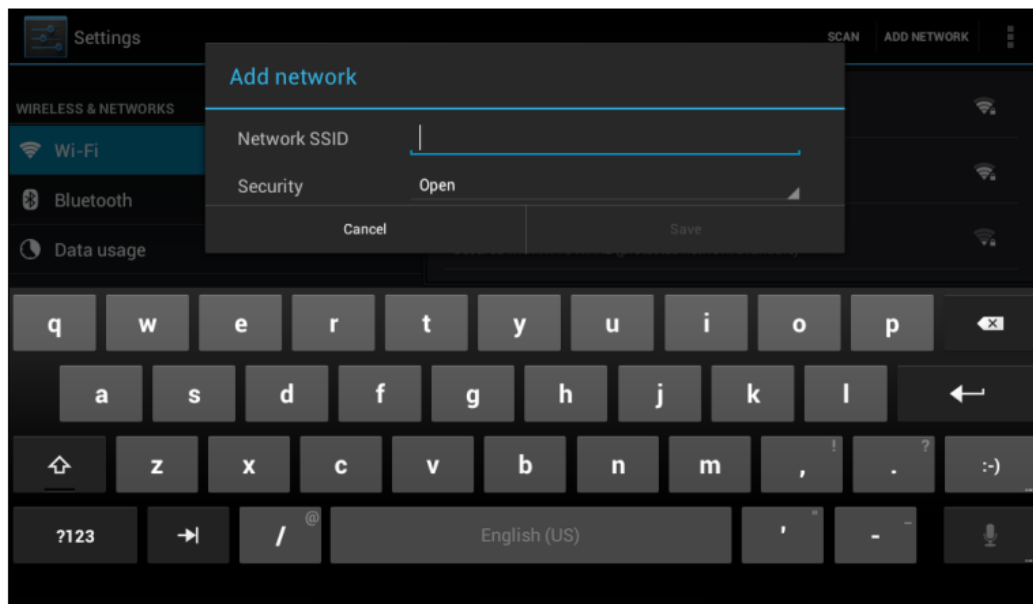

**Picture 4.7**

 - 2) Input network SSID, the wireless network name, click save.
- 3) Click user name already saved, click connect to use network, as Picture 4.8

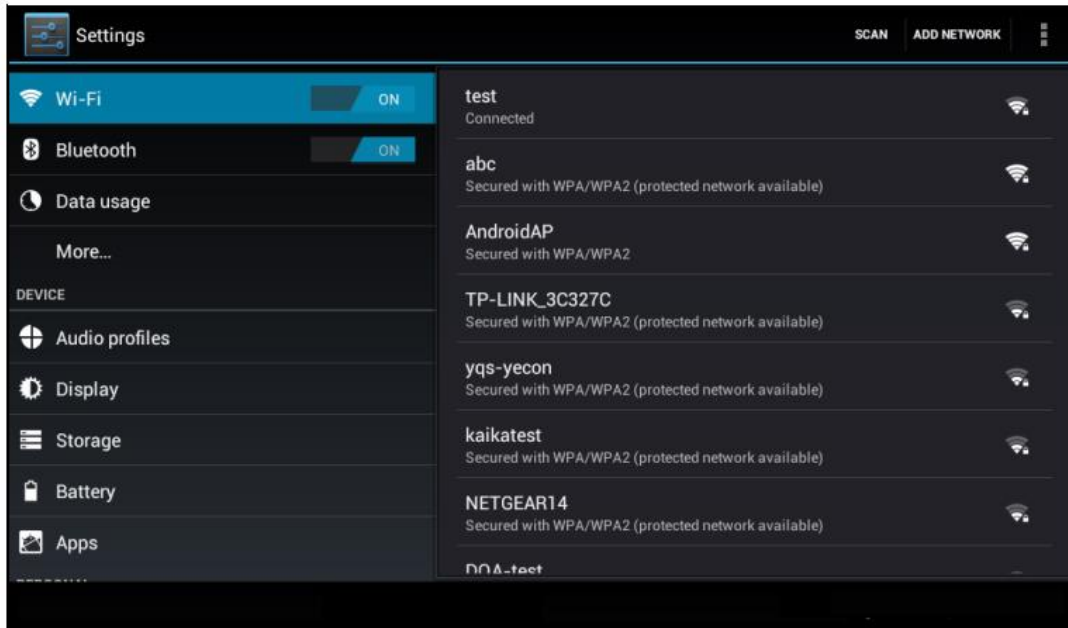


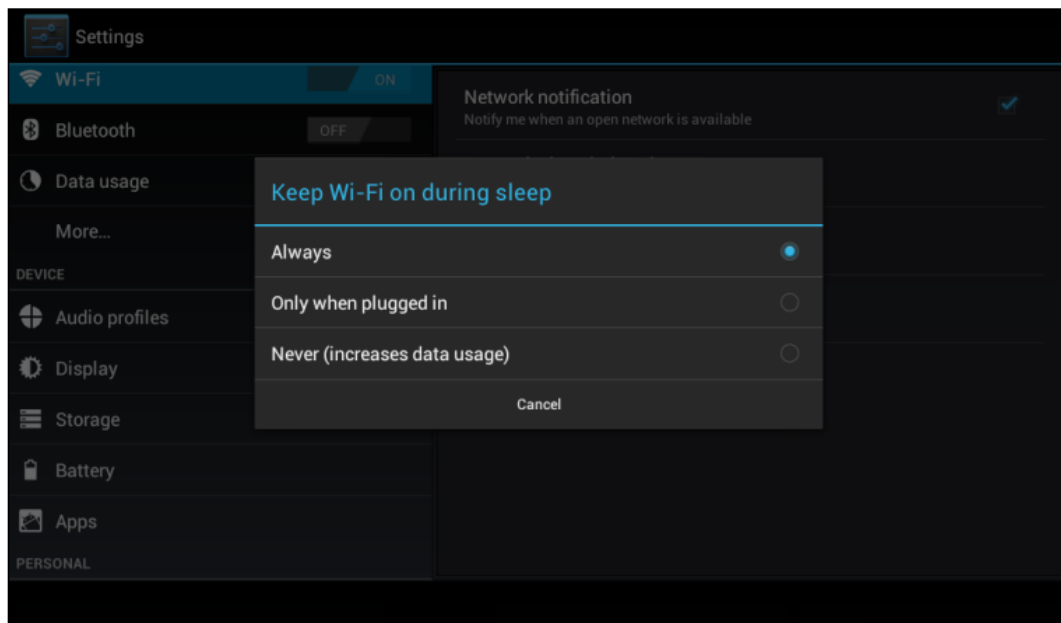 
Picture 4.8

### 3. Network Notice

If you open Network Notice, when WIFI signal appears, the right bottom will remind you available WLAN network, as Picture 4.6

### 4. Keep WI-FI on during sleep.

1. Click  icon on the top right as in Picture 4.8, select **advanced**.
2. Click **Keep WI-FI on during sleep**, as Picture 4.9




Picture 4.9




## 4.3 Bluetooth


### Bluetooth function operation

 1. Click Setting icon in main menu(home) interface
2. Click Bluetooth and Switch ON (if currently off).
3. Your Bryte Tablet will automatically search and display all Bluetooth devices nearby, if the device you want to connect to is not displayed, make sure it's Bluetooth radio is switched on and click Search in your tablet as in picture **4.10**

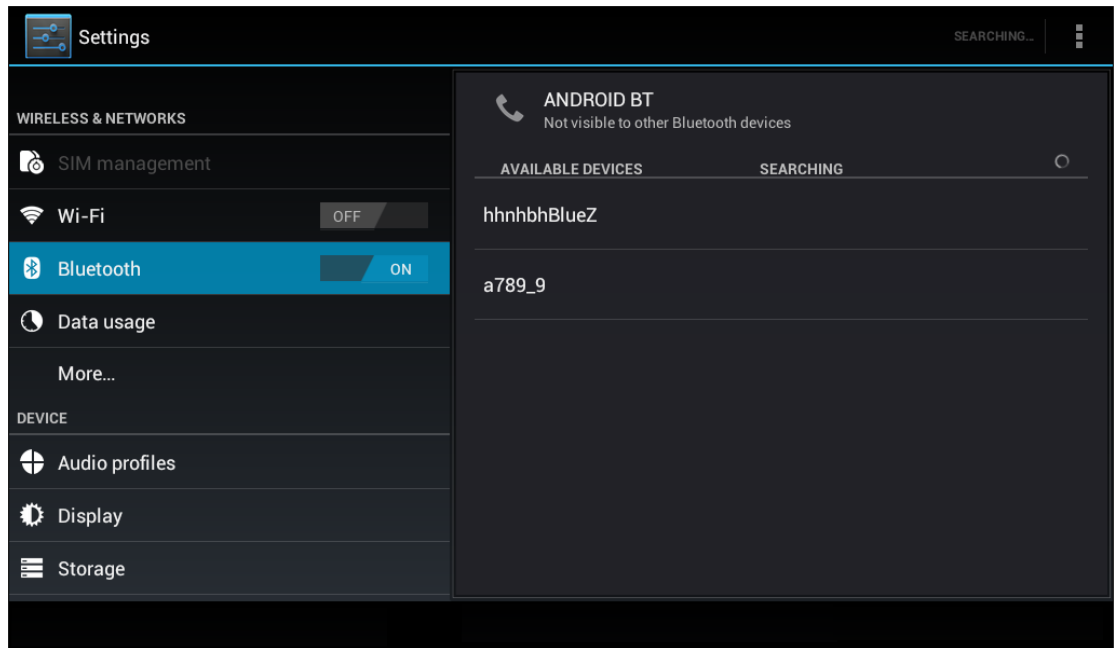

**Picture 4.10**

 
4. To connect to the device click the required Bluetooth device, it will popup request window, enter into related password, and match the device to connect.
5. After match successfully, choose the operation you want to, click  to change setting as in Picture 4.11.

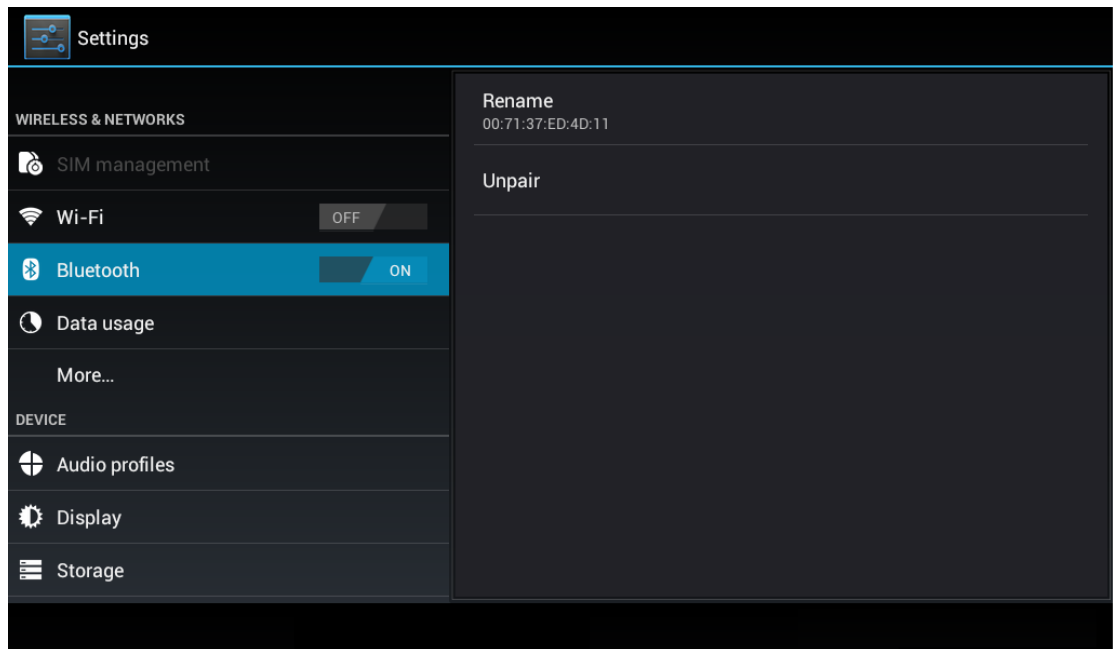


Picture 4.11

### Bluetooth setting
 
#### 1. Rename tablet


Click  icon in right top of Picture 4.10, as Picture 4.12, select rename tablet, you can rename it as you want

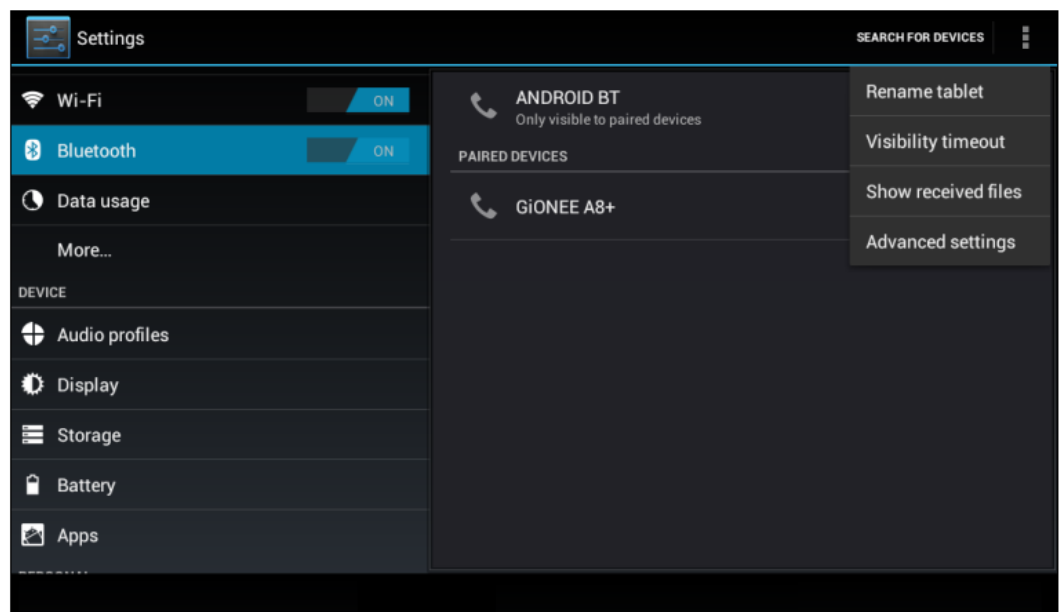

Picture 4.12


#### 2. Check visibility timeout

 Select **visibility timeout setting in Picture 4.12**, choose the time you want to set, as Picture 4.13(Note: check overtime setting is the time setting when Bluetooth is checked)

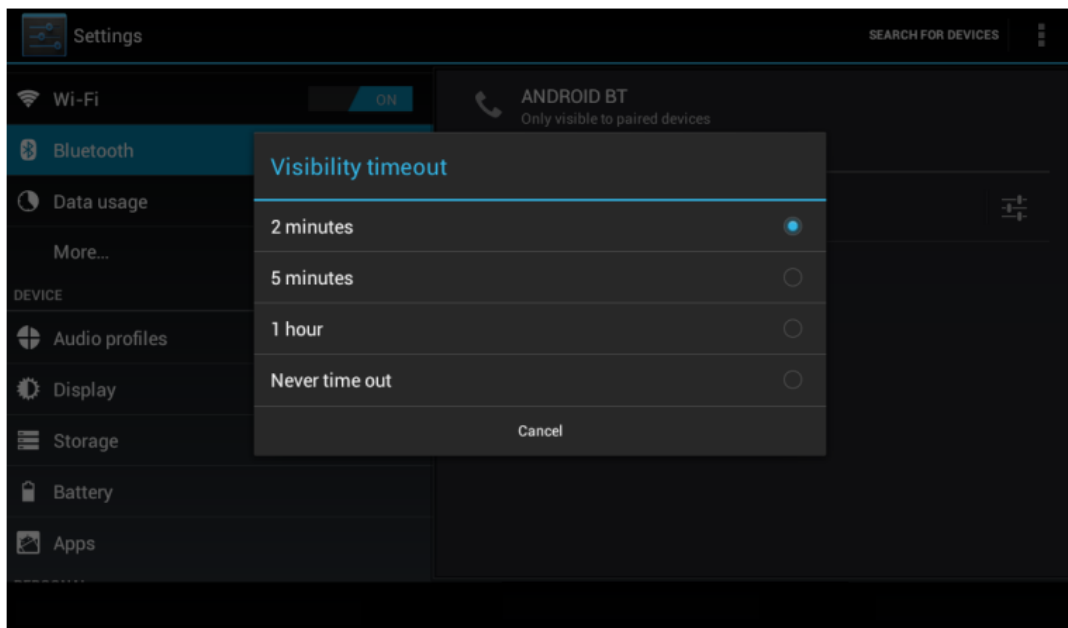

**Picture 4.13**

 3. Display the file you received  
 Choose display the file you received in Picture 4.12, you can view download and upload files.
4. Bluetooth advanced setting  
 Choose Bluetooth advanced setting in Picture 4.12, enter into Picture 4.14

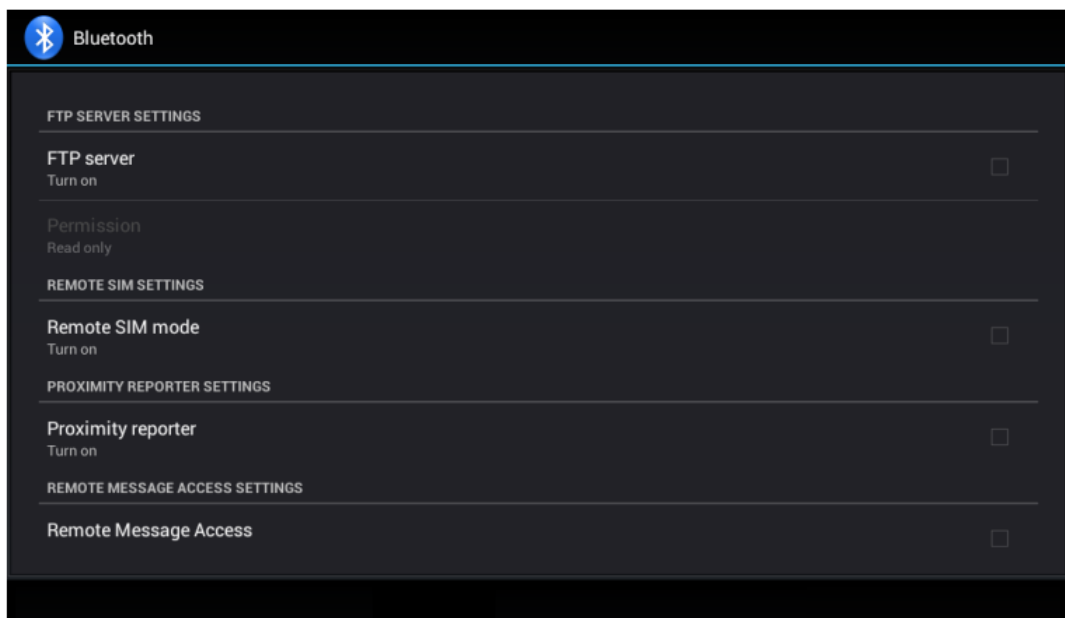

**Picture 4.14**

1. FTP Server

Used to Connect Bluetooth FTP and other device to transmit or operate on files.

2. When two connected Bluetooth devices are far from one another, the connection is cut off, the Bluetooth Proximity Reporter will notify you with a sound.

## 4.4 Data Usage

Check SIM card data usage, as Picture 4.15



Picture 4.15

Check WIFI data usage

Click  icon on top right corner as in Picture 4.15, click **Data Usage**, as Picture 4.16



Picture 4.16

 
## 4.5 More

### 4.5-1 Airplane Mode

Airplane Mode turns off WIFI, Voice, Video connection of your GSM Network. Hence when in Airplane mode is turned on, you cannot receive or make calls, use Bluetooth, WIFI until you return to previous state.


### 4.5-2 VPN

Open VPN, click **add VPN network**, as Picture 4.17. Input **name** and server address, then save.

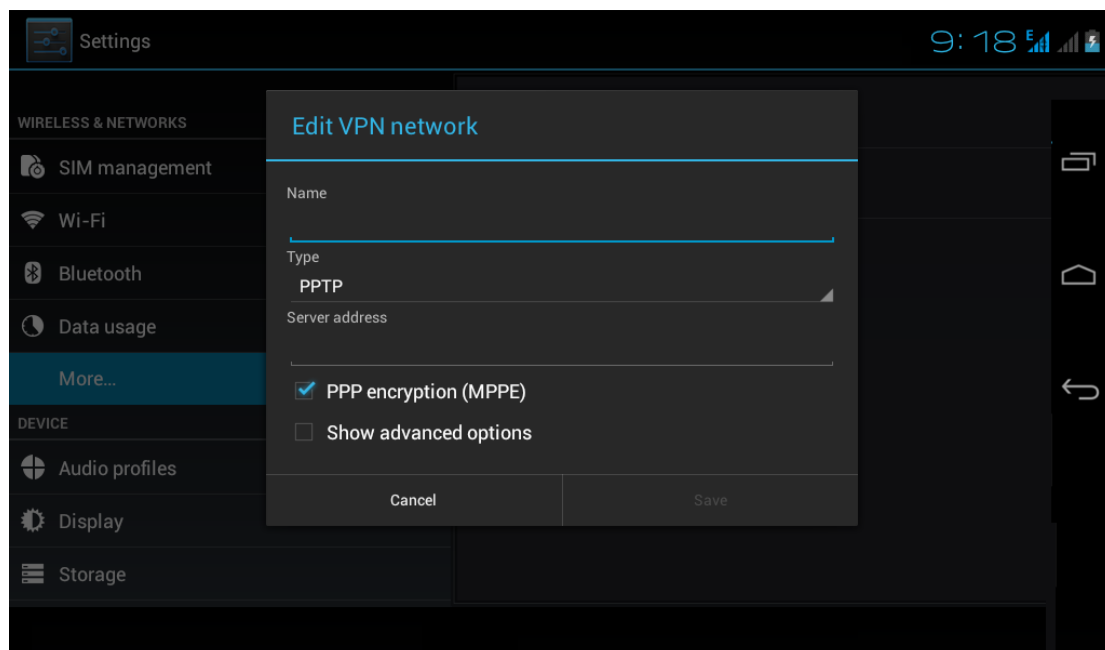

Picture 4.17

 Click VPN, as Picture 4.18, input VPN user name and password, click connect.

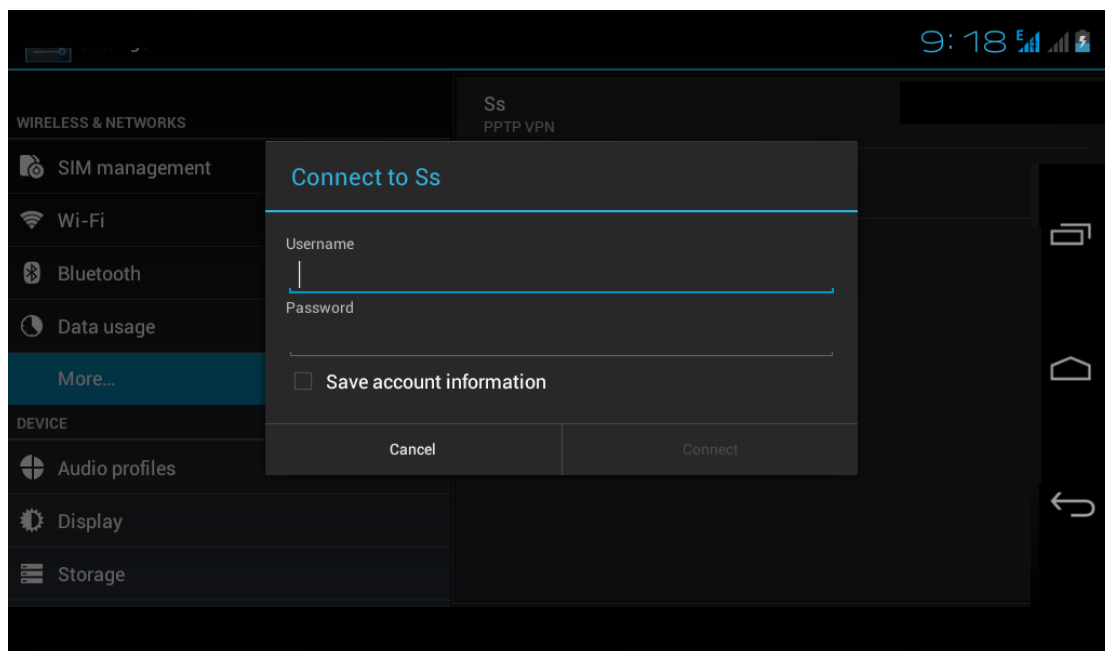


Picture 4.18


### 4.5-3 Network sharing and portable hotspots

 Portable WI-FI hotspots

1. Click Setting in main(home) menu.
2. Click more when Wi-Fi is well connected, open network share and portable hotspot

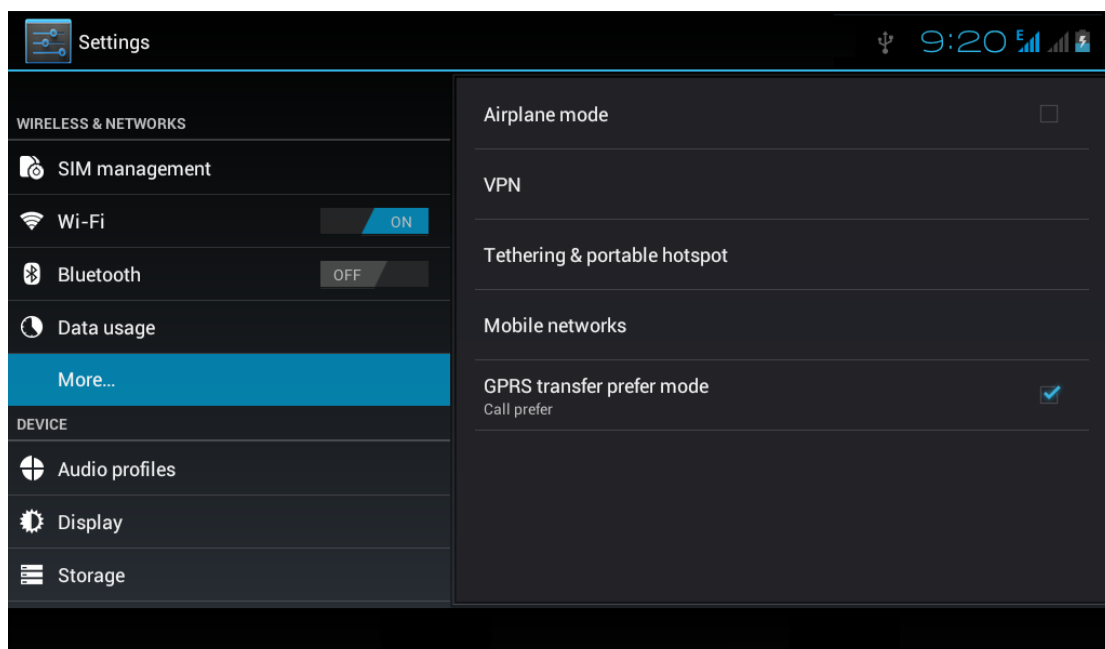


Picture 4.19

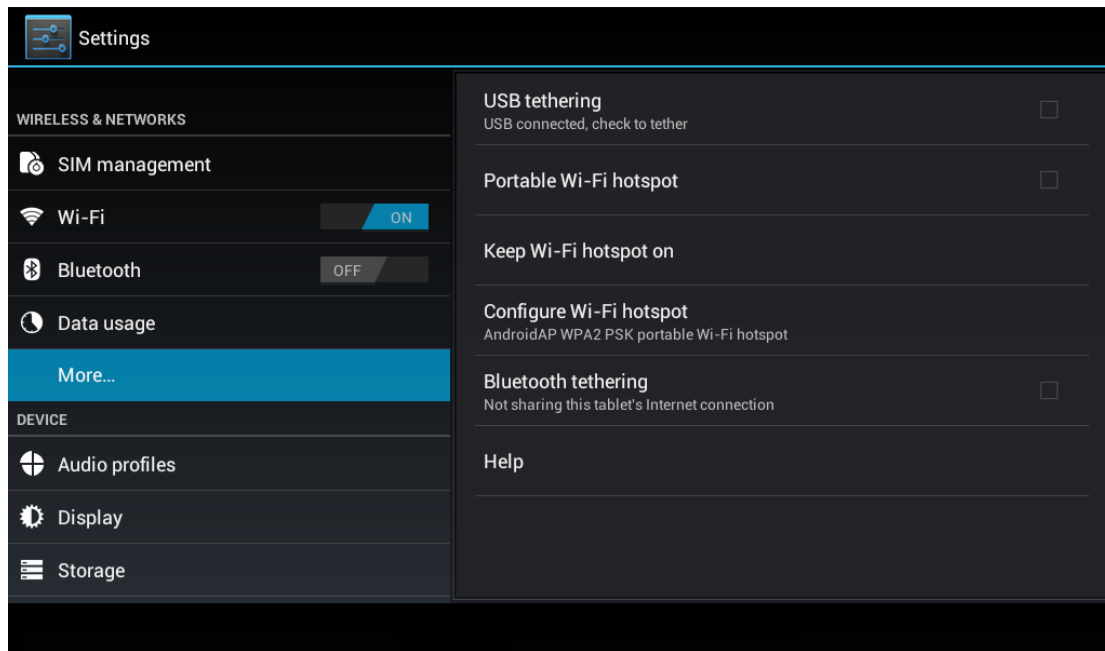 

Picture 4.20

 3. Click **keeps WI-FI hotspots on**, choose open time.
4. Return to previous menu, open portable WLAN hotspots, click configure WI-FI hotspots.

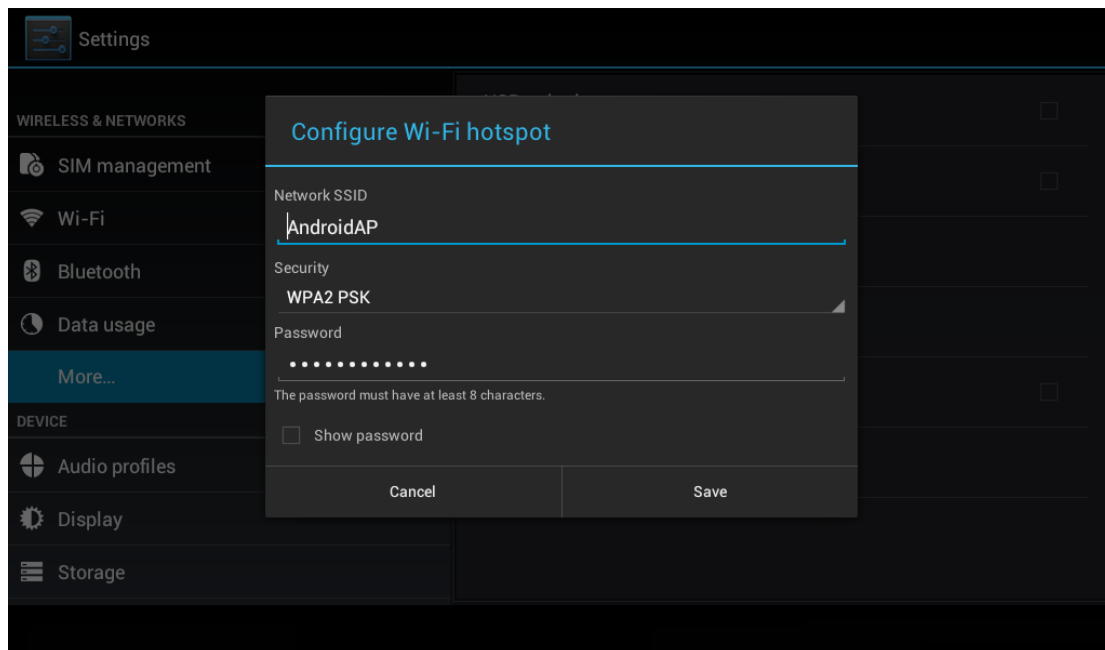


Picture 4.21

5. Set passwords you want to, password should be more than 8 numbers.

#### 4.5-4 Mobile Networks
 
##### 1. 3G service


Click 3G service, as Picture 4.22, choose available defaulted SIM card, GSM is 2G network, and WCDMA is 3G network.

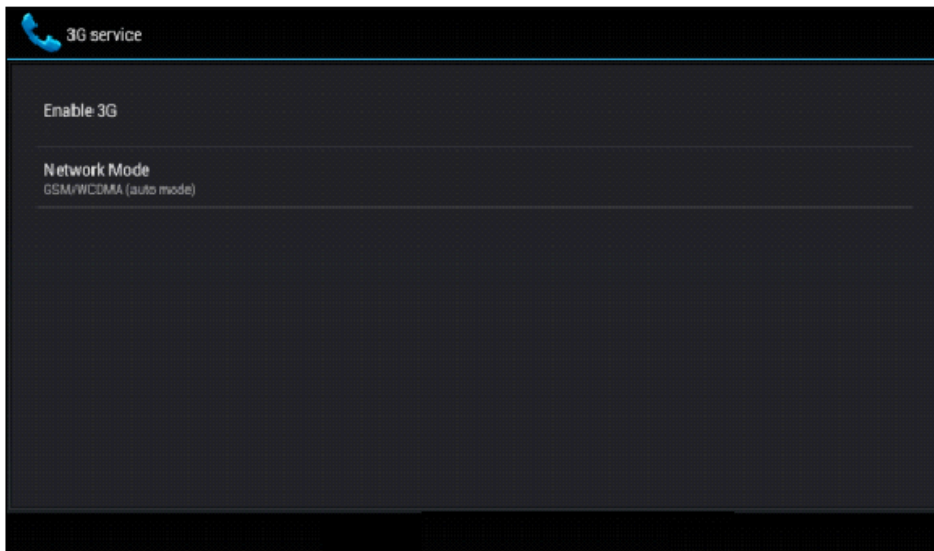

**Picture 4.22**

3. Access Point Name( APN)

 
Click **mobile network**, as **Picture 4.23**

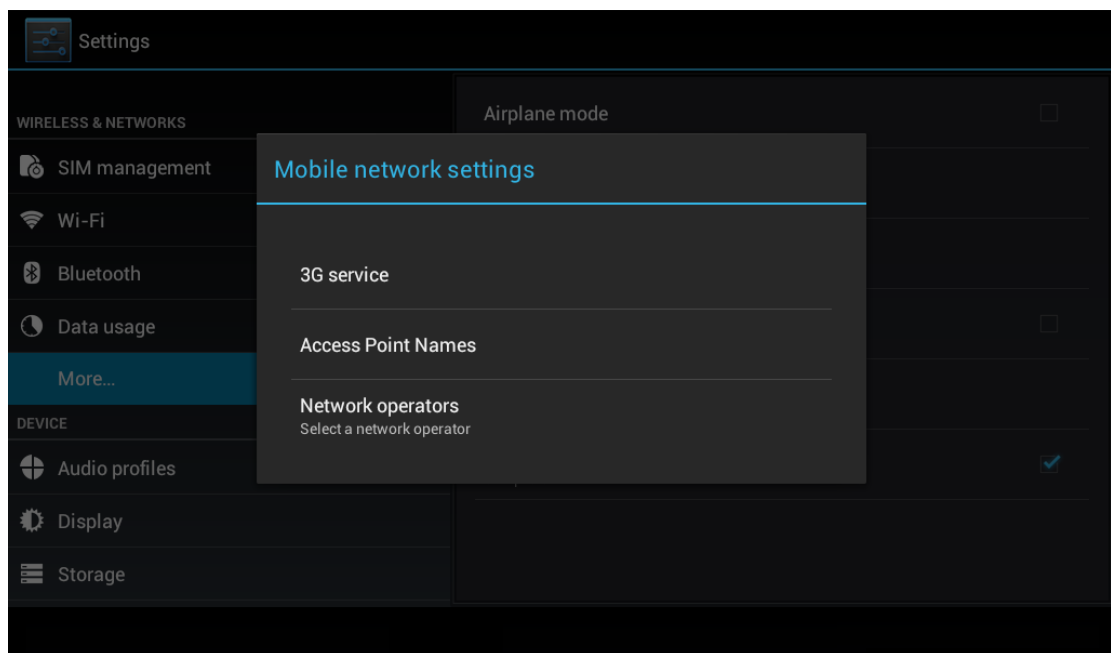

**Picture 4.23**

 Choose access points name (APN), choose SIM card you need to connect,  
Choose connect type, as **Picture 4.24**



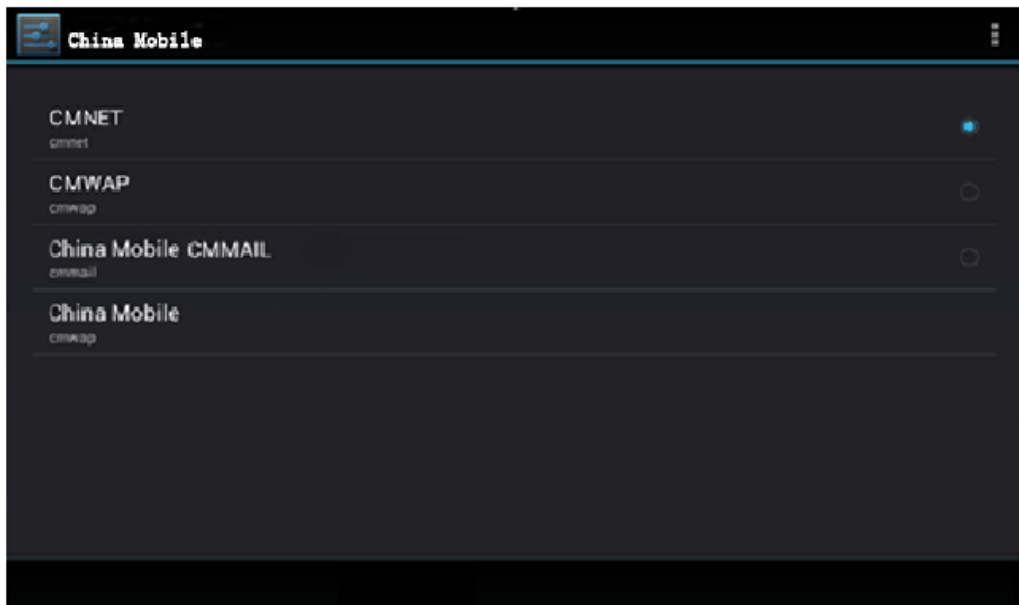


**Picture 4.24**

Note: (CMWAP transmits data through GPRS, the webpage it visit belongs to world wide web, and CMNET support browsing using mobile phone network or computer. Charges may apply depending on your network service provider.)

### **3. Network Operator**

 Click network operator, choose SIM card you need to connect, system will search available GSM and WCDMA network, as **Picture 4.25**

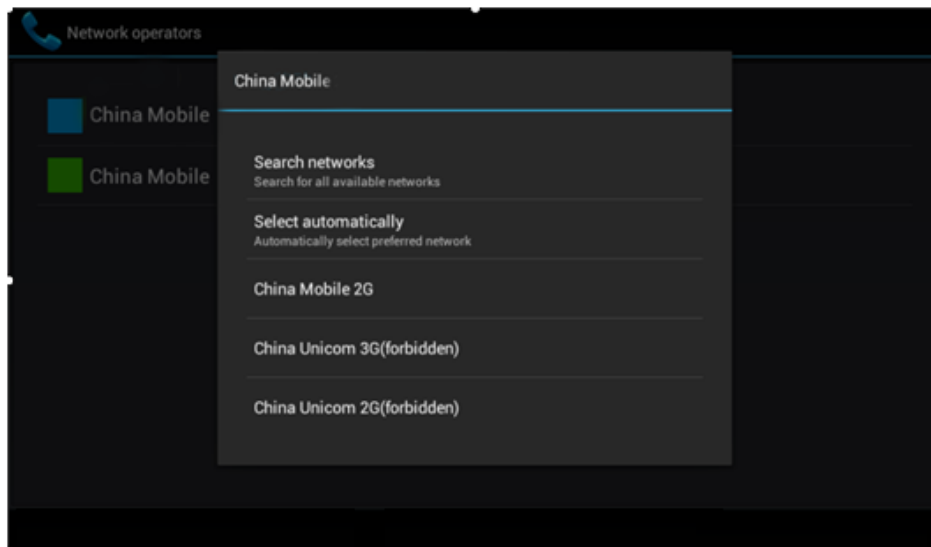


**Picture 4.25**

### **4.5-5 GPRS data prior mode**

After Open GPRS data prior mode, systems will priority chooses your network.


## 4.6 Contextual Model

 1. Open settings, click contextual model, as Picture 4.26,

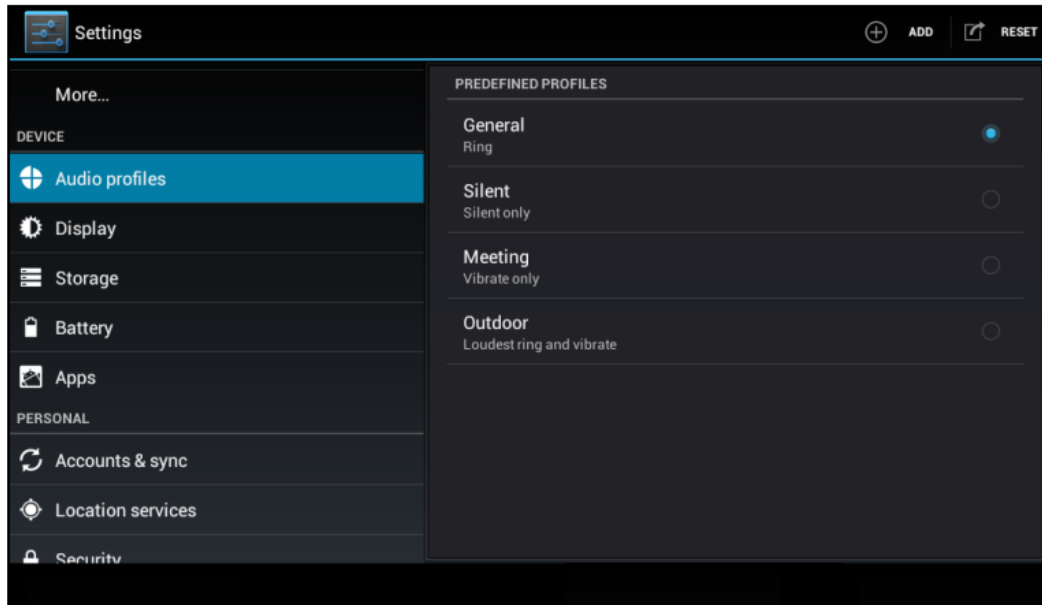

Picture 4.26

 2. Click **standard** to enter into Picture 4.27

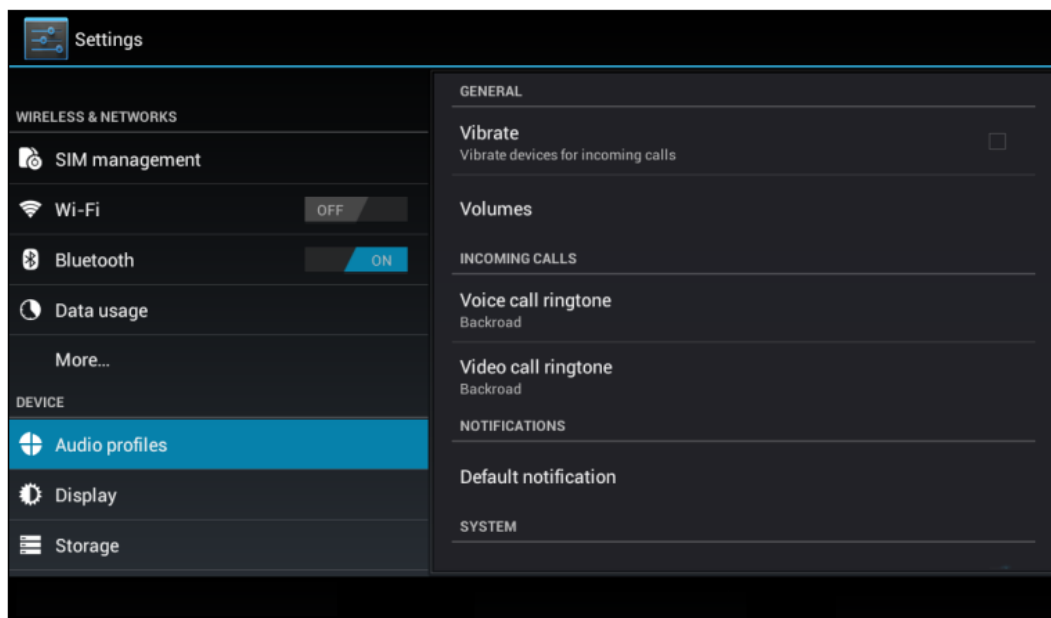


Picture 4.27

1. **Vibrate**

In picture 4.27, click **vibrate**, Bryte Tablet will vibrate when someone calls you.

2. **Volume**

 
In picture 4.27, click volume, you can set ringtone, notice, and alarm volume, as Picture 4.28

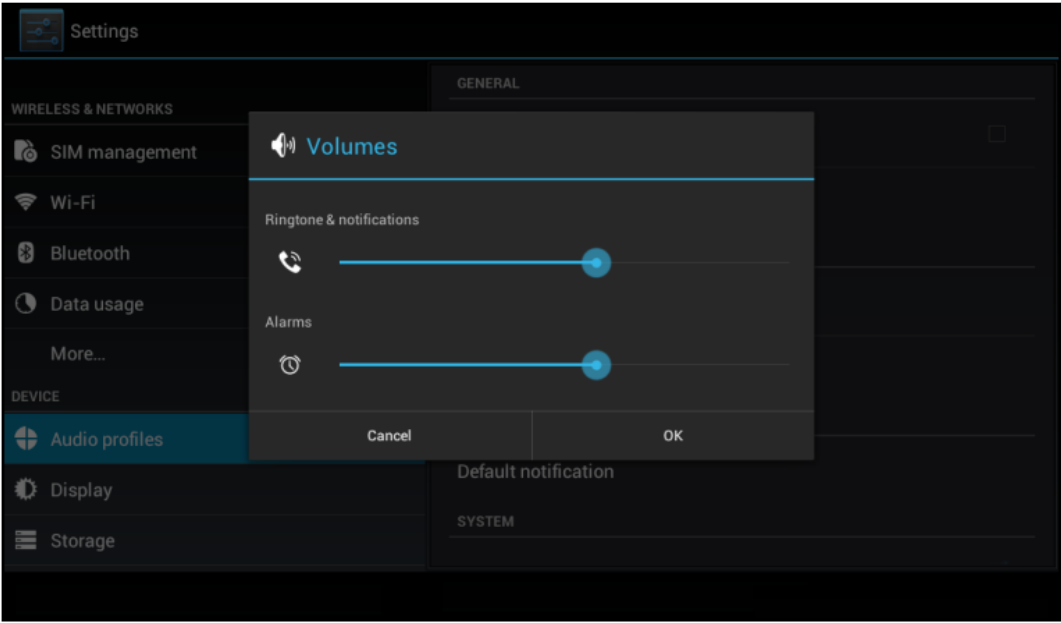

Picture 4.28

3. Voice call Ringtone

 
In picture 4.27, click **voice call ringtone** to choose voice call ringtone, as Picture 4.29

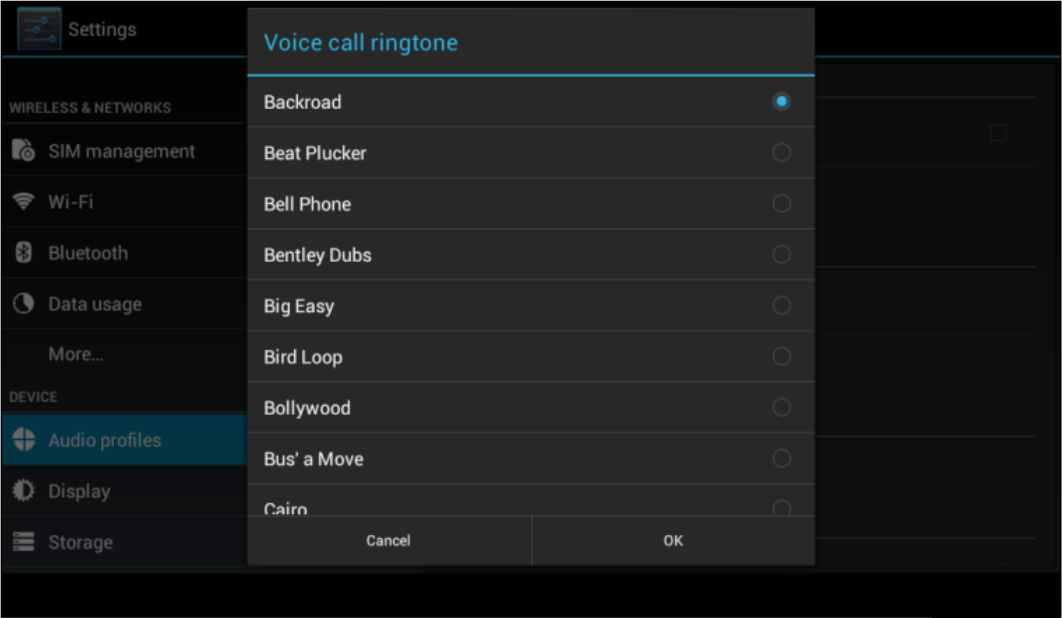

Picture 4.29

4. Video call ringtone

 In Picture 4.27, click video call ringtone to choose video call ringtone, as Picture 4.30

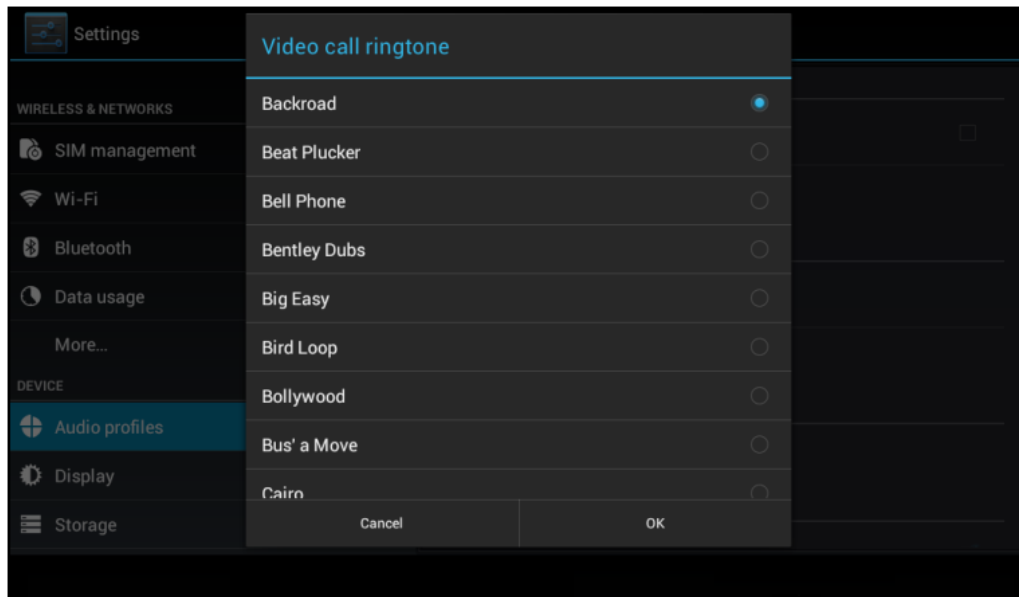


Picture 4.30

(Note: Except standard, silent, meet, outdoor are only for selection, they can't be set.)

## 4.7 Display
 
### 4.7-1 Adjust the screen brightness

1. Click **Setting** application procedure.
2. Click **display**, choose brightness,
3. Drag the portion to adjust the brightness volume. As Picture 4.31

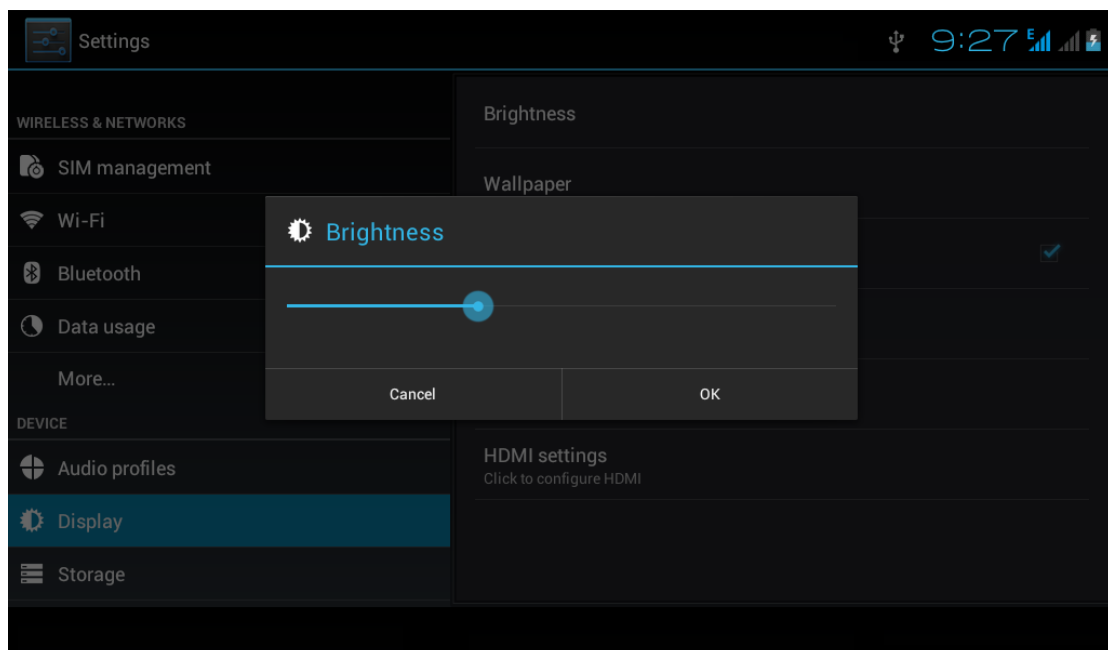


Picture 4.31

4. Click OK after brightness is adjusted.

#### 4.7-2 Wallpapers

 1. Click **setting** application.
2. Click **display**, click **wallpaper**.
3. You can choose different wallpapers as you like—live wallpapers---gallery(user defined)---wallpapers (system defect)---video wallpaper, as **Picture 4.32**

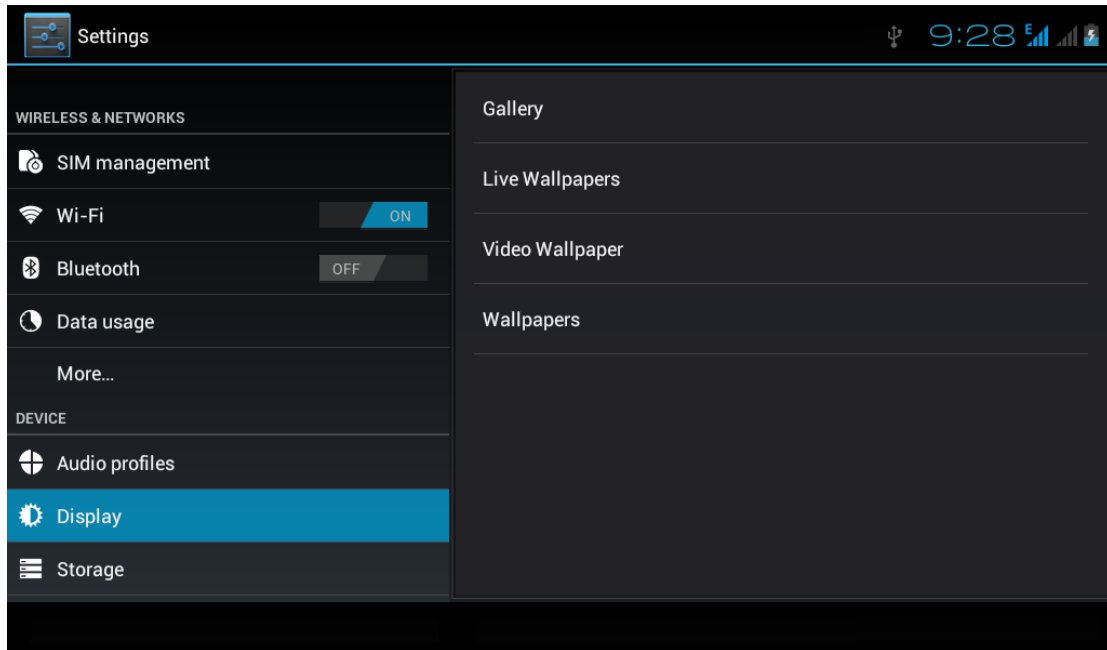


**Picture 4.32**

#### 4.7-3 Auto rotation

Your Bryte Tablet comes with G-sensor, when Auto Rotation is ON your screen orientation changes as you rotate your device. When it is turned off, it would not change.

#### 4.7-4 Sleep Mode Setting

 
1. Click **Setting** on Main Menu.
2. Select Display.
3. Click Sleep.
4. Set the sleep time as you want, as **Picture 4.33**

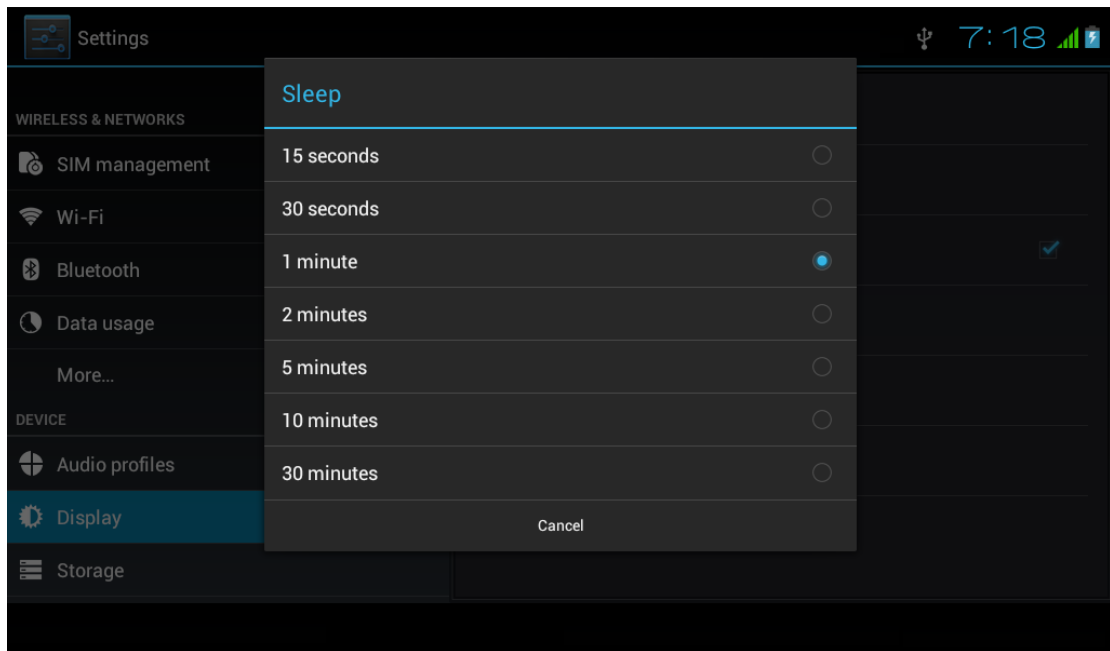

**Picture 4.33**

#### 4.7-5 Font size

 
Click **font size** to adjust the font size, as **Picture 4.34**

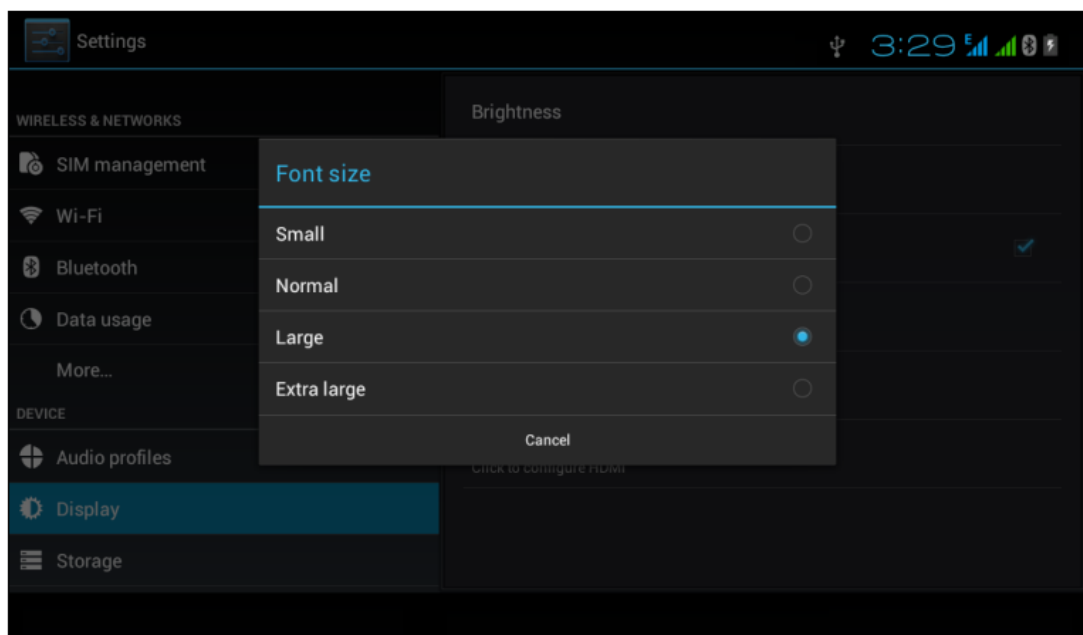

**Picture 4.34**

#### 4.7-6 HDMI setting

 1. Use HDMI connector, in the right bottom of Bryte Tablet , it will remind HDMI connector is connected.
2. Click HDMI setting, as Picture 4.35

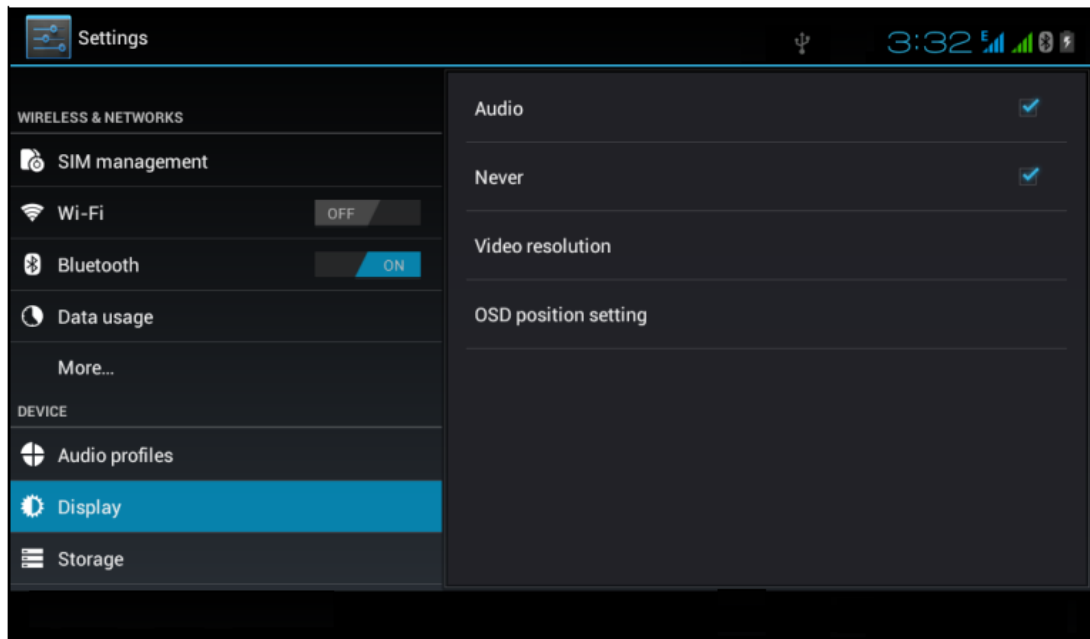

**Picture 4.35**

(1) Audio

 
Open audio to realize HDMI audio output.

(2) Never

Click never, Bryte Tablet will never sleep.

(3) Video Resolution


Click video resolution to adjust resolution, as Picture 4.36

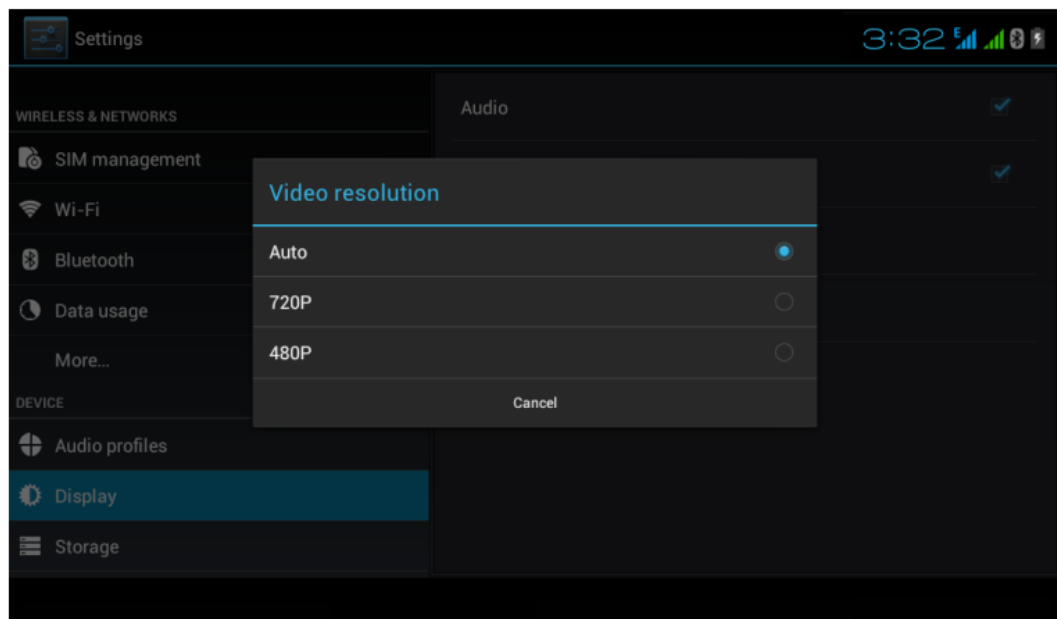

**Picture 4.36**

#### (4) OSD position setting

 Click **OSD position setting**, Bryte Tablet will adjust OSD position setting, as Picture 4.37

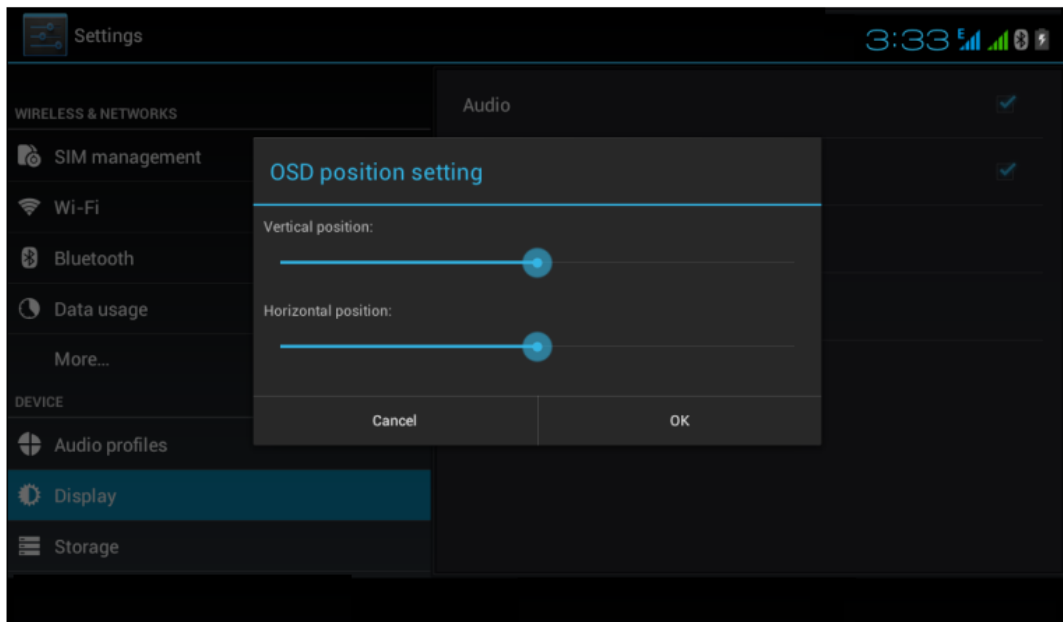

Picture 4.37

## 4.8 Storage

Open setting function, click memory, click **preferred install location**, you can choose install new application to choose preferred install location.

 
Check SD card and tablet storage space.

1. Enter into setting application.
2. Click storage, check storage space.
  1. Internal storage

#### (1) System storage

System storage is the space in your Bryte tablet where system files are saved. Do Not save your file in this location.




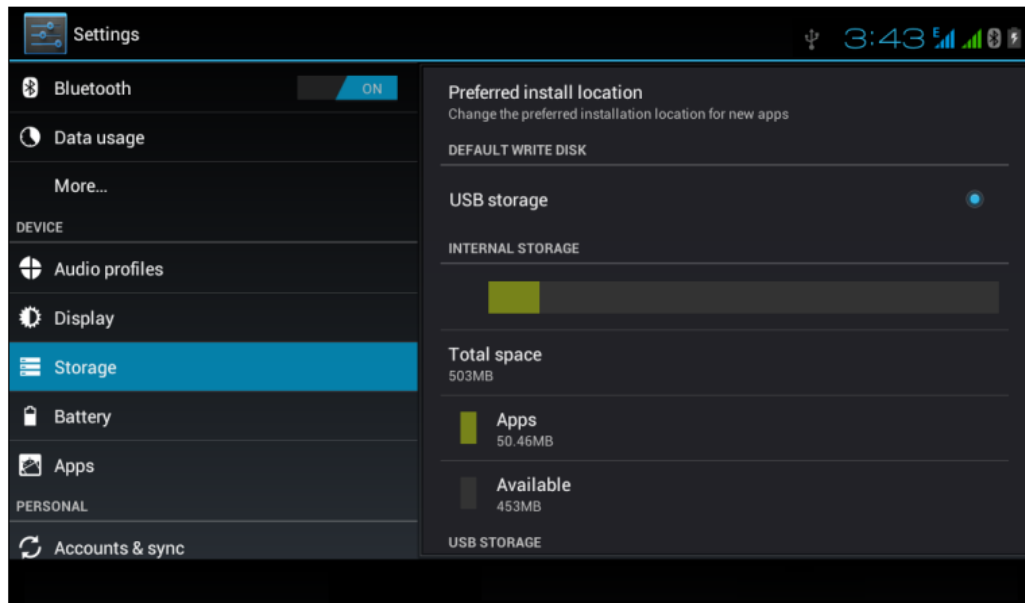

**Picture 4.38**

## (2) Internal storage

 
Internal storage is your Bryte Tablet local NAND storage, as Picture 4.39, if you need to check the storage content, you can check it in main menu.

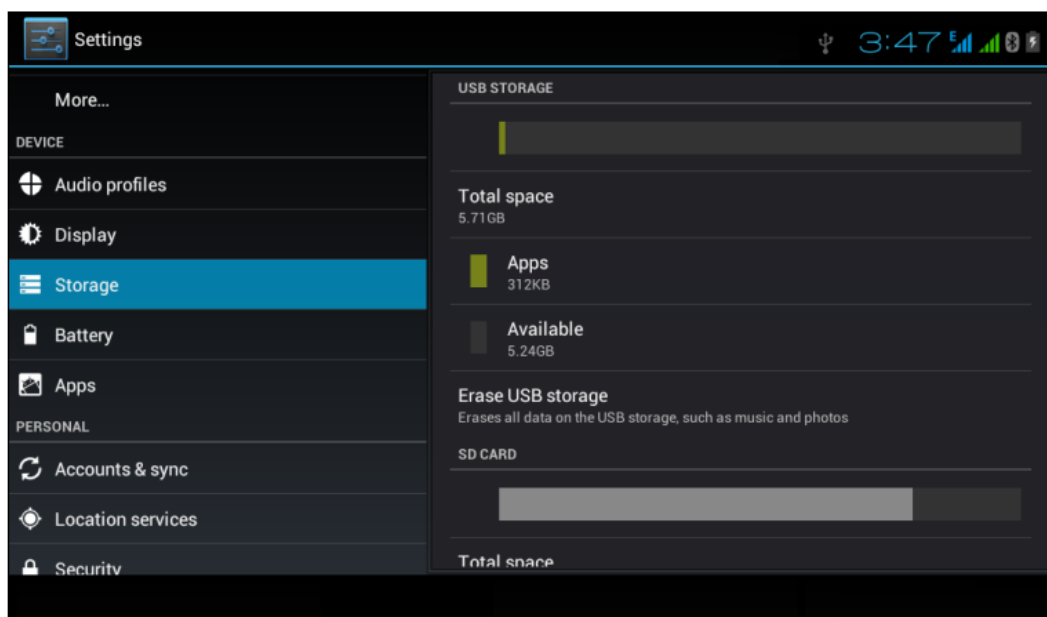

**Picture 4.39**

## 2. SD card

 You can check storage space, SD card available space, remove SD card or format SD card in this area as in Picture 4.40

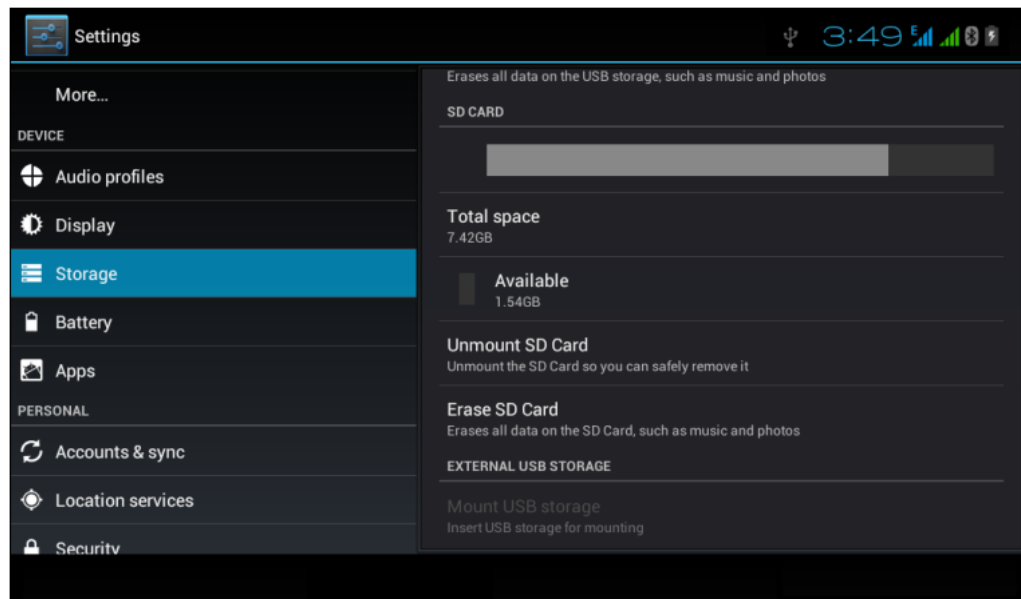

**Picture 4.40**

 
Safely remove SD card

1. Click setting application.
2. Click memory.
3. Click uninstall SD card.
4. Now you can remove SD card safely.

**Note:** Removing SD card safely can protect SD card and increase its lifetime.

## 4.9 Battery Setting


Click setting function, select battery, you can view the battery level and status, as in Picture 4.41

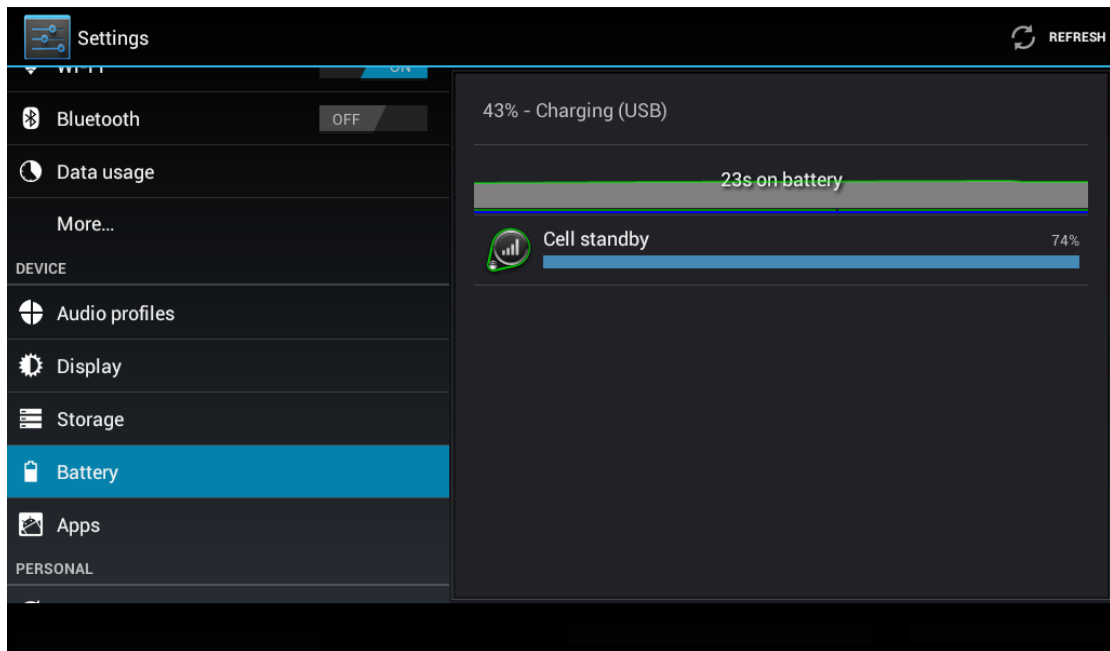

**Picture 4.41**


## 4.10 Application program

 1. Click setting application in Apps.
2. Select application, after enter, you can manage and delete installed application and check system used storage space and left space. (As Picture 4.42)

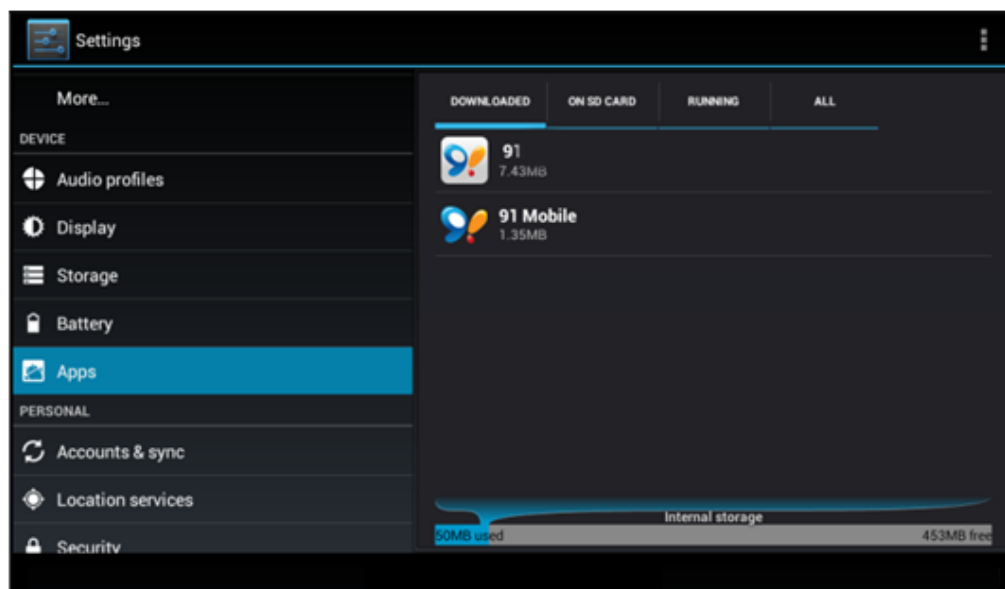

**Picture 4.42**

 3. View internal storage used space and left space, as Picture 4.43

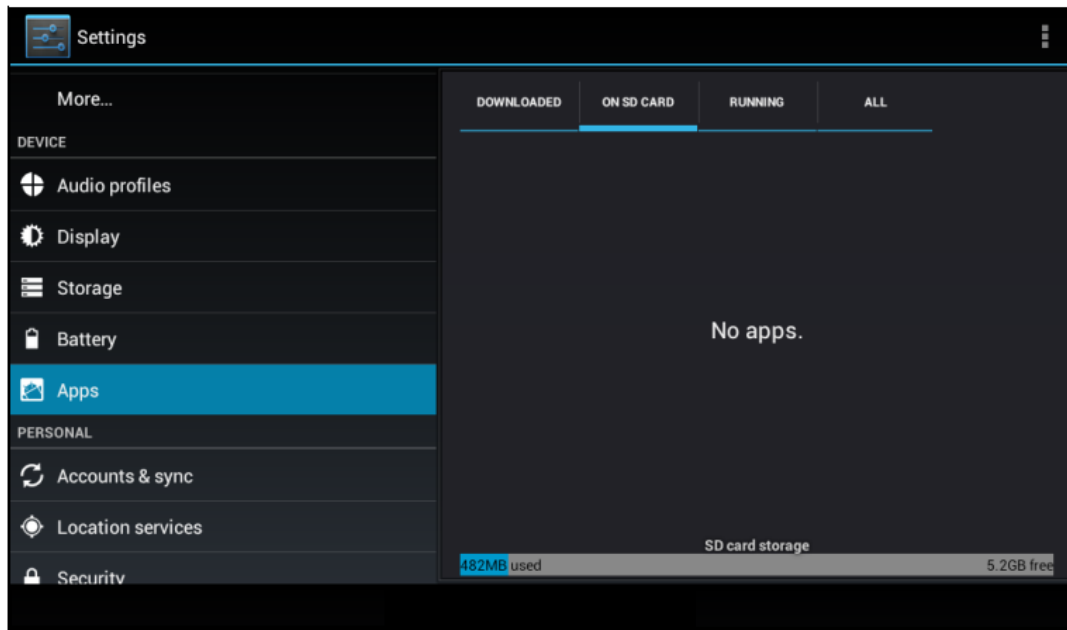

Picture 4.43


4. View the working device, used space and available space, as Picture 4.44



Picture 4.44


## 4.11 Account and Sync

 1. Select setting application
2. Open account and sync, as Picture 4.45

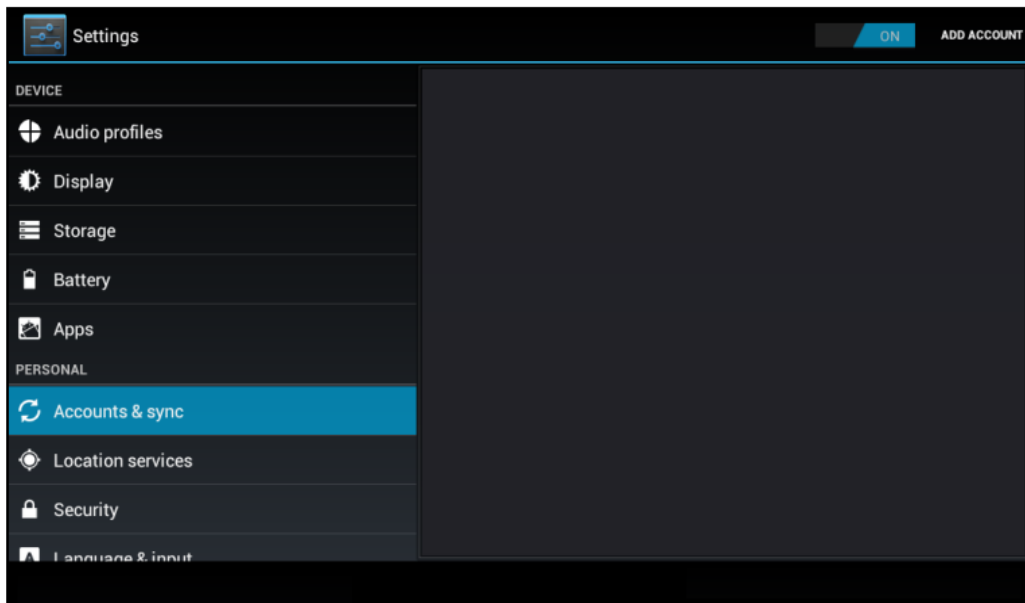


Picture 4.45

 3. Click **add an account**, as Picture 4.46

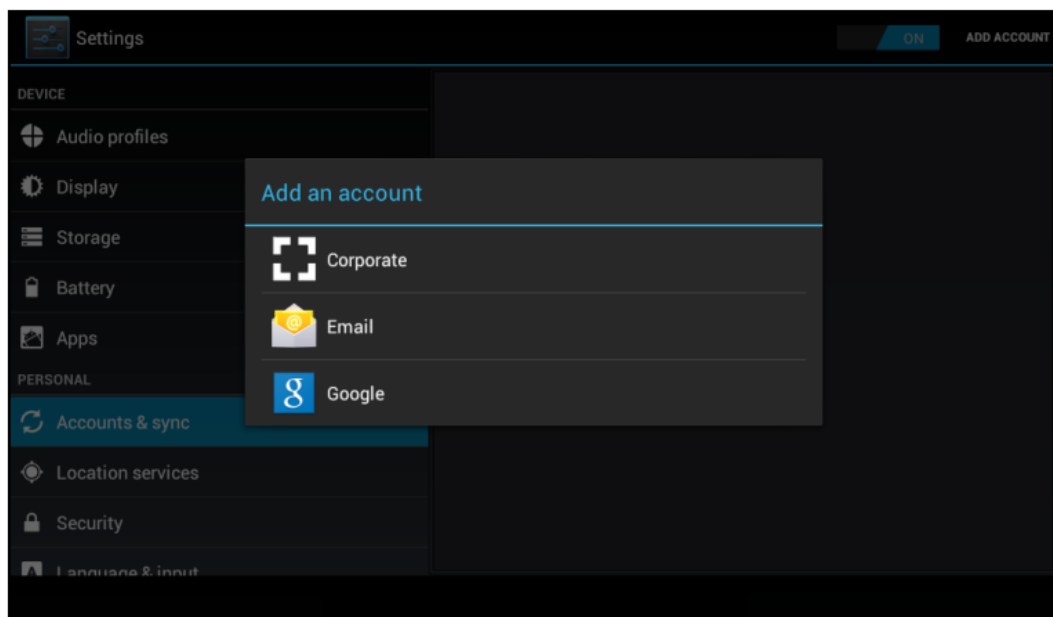

Picture 4.46

 
4. After successfully load, it will open the sync function, as Picture 4.47

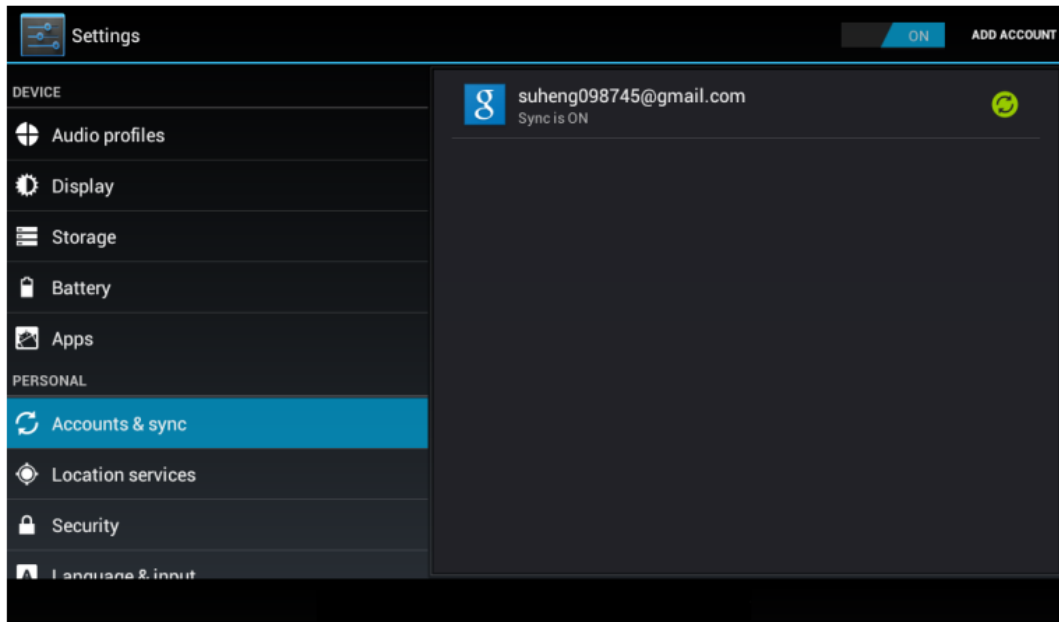

Picture 4.47

## 4.12 Location service

 Click **setting**, select **location service**, as Picture 4.48

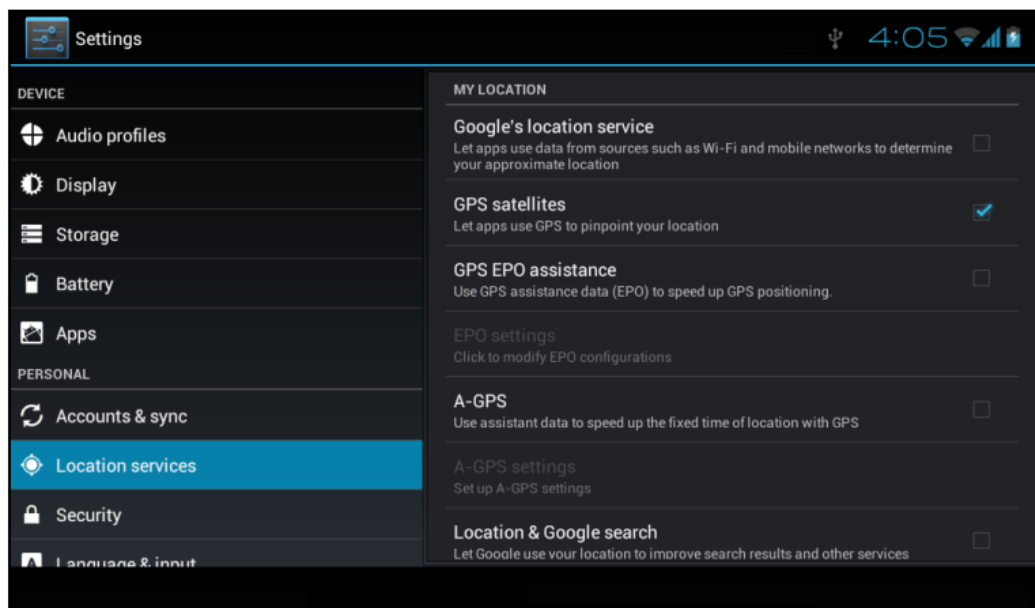

Picture 4.48

### 1. Google's location service

Open Google location service, you can use WIFI to positioning Bryte Tablet .

### 2. GPS satellites

 
Open GPS satellite, you can use GPS to positioning Bryte Tablet.

### 3. GPS Assistance

Open GPS Assistance, it can increase the speed of GPS positioning, but you need to insert SIM card and use data transmission.

### 4. EPO setting

Click EPO setting, enter into Picture 4.46, then check if EPO positioning information and EPO has turned on auto download.

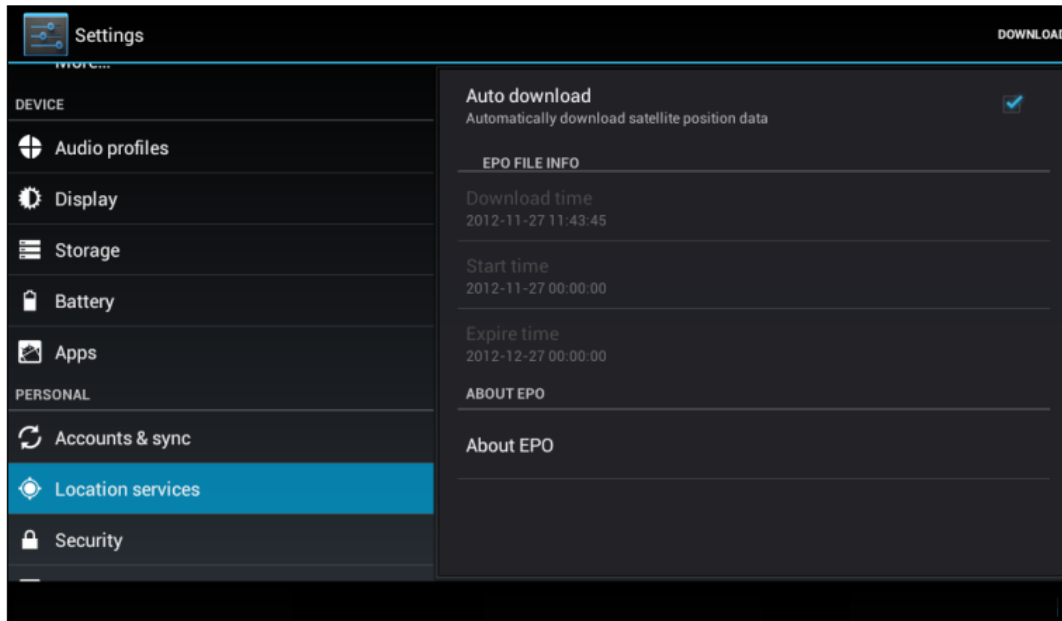


Picture 4.49

### 5. A-GPS

 After opening A-GPS, you can increase positioning speed through network.

### 6. A-GPS settings

Click A-GPS setting, enter into Picture 4.50

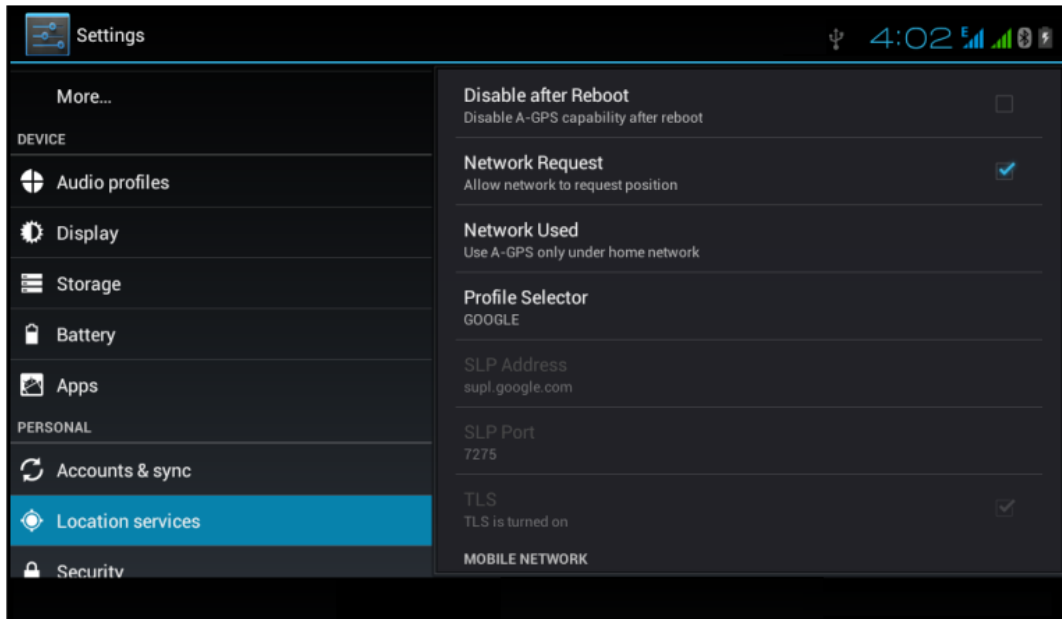

**Picture 4.50**

**1. Disable after reboot**

 
Click disable after reboot, when you reboot your Bryte Tablet, A-GPS will auto turn off.

**2. Network Request**

Click network request, Bryte Tablet can get your location through network.

**3. Network used**

Open network used, you can choose network type, as Picture 4.51

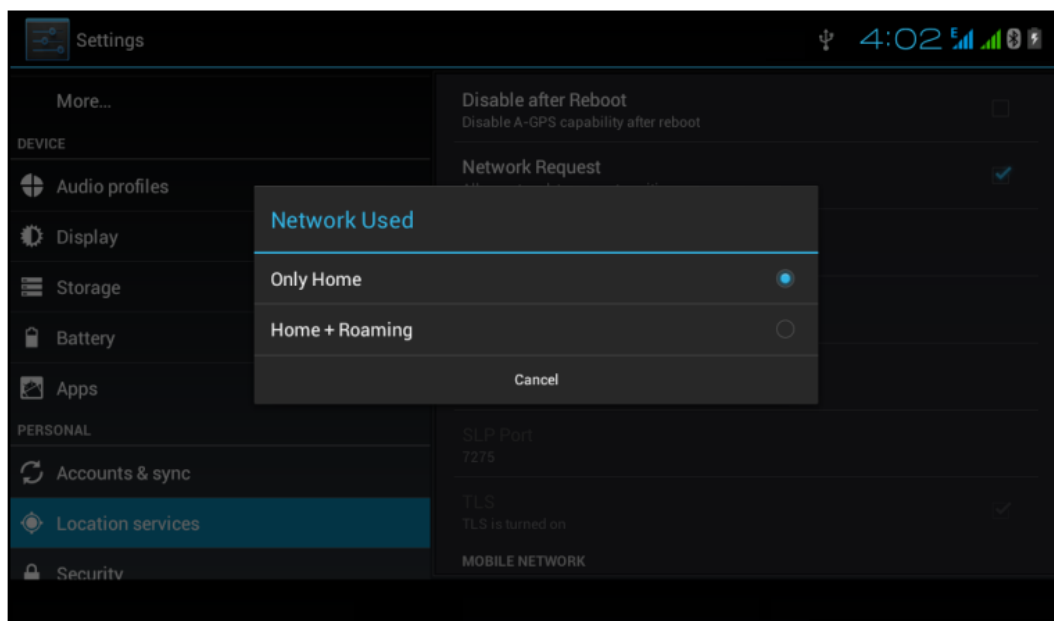




**Picture 4.51**

#### 4. Server

 Click server, it can switch location service, as Picture 4.52

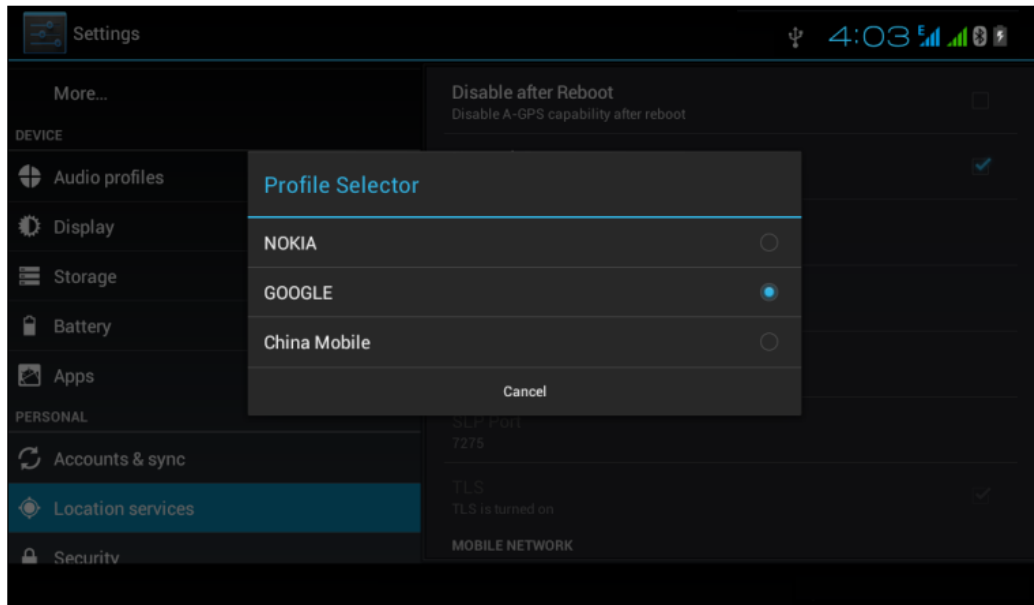

**Picture 4.52**

#### 5. Location and Google search

Open location and allow Google search, you can use your location information to improve search result and other services.

### 4.13 Safety setting

#### Set locked screen

Lock the touch screen by unlock icon or password to protect your Bryte Tablet.

 
Note: After setting screen locked, you should enter the passcode each time when you startup or screen is locked

#### Set unlocked picture

1. Click **Setting** in main interface.
2. Select **Security**.
3. Click **locked the screen**.
4. Choose **picture** in text setting area.
5. Click next following the remind message.
6. The unlocked pattern board pop up, there are nine touch spots, connect 4

points from vertical, horizontal or diagonal direction. As Picture 4.10, move your finger from the screen when finish. The system will record your new unlock pattern.

7. Click **continue**.
8. When you see the reminder, enter the unlock pattern, then click **confirm**.

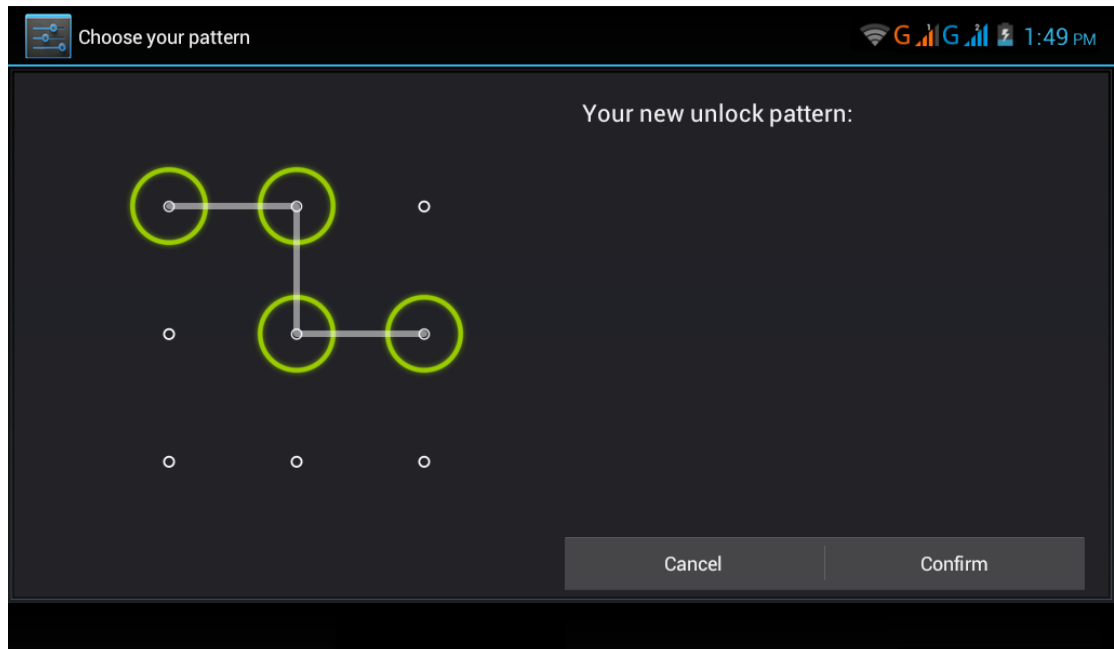

**Picture 4.53**

#### **Set unlock PIN code**

1. Click **setting** application in main interface.
2. Click **safe**.
3. Click **screen locked**.
4. Choose **PIN** in text setting area.
5. Enter new PIN code(numbers) and click **continue**.
6. Enter new PIN code again and click **confirm**.

#### **Set unlock password**

1. Click **setting application** in main interface.
2. Select **Security**.
3. Click screen locked.
4. Set password in text typing area.
5. Set new password(letters and numbers) and then click continue.
6. Enter the password again and the click **confirm**.

#### **Unknown source**

1. In main interface, click setting.

2. Click safety.
3. Click unknown source, as Picture 4.54




Picture 4.54

Note: Manual installing APK files needs to turn on unknown source.


## 4.14 Language and Input Method

 Click setting, select language and input method, choose language to switch language, as

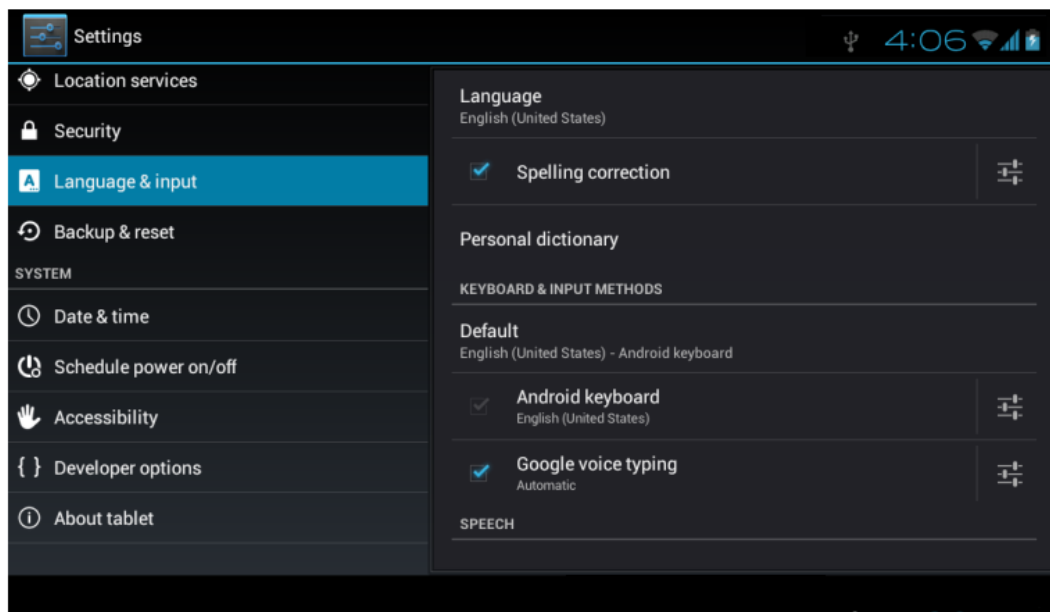

Picture 4.55

 Click **setting**, choose **language and input**, choose **Android keyboard setting**, and click input language, as Picture 4.56

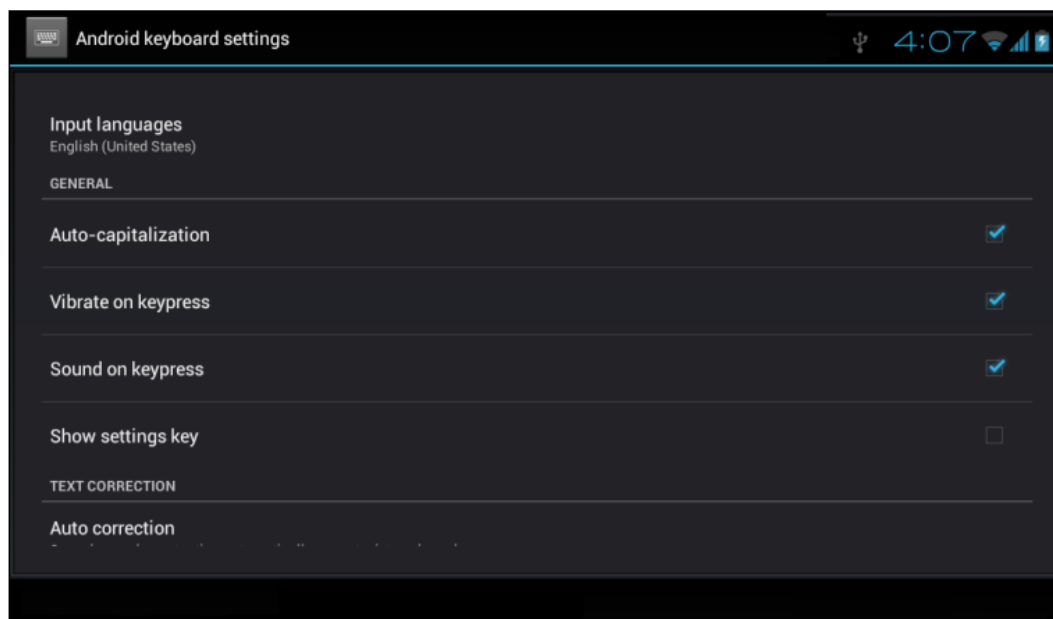


Picture 4.56

Choose the language you want to change in the language list, as Picture 4.57



Picture 4.57

 Return to **language and input method**, click **default**, as Picture 4.58, select input method you want to use

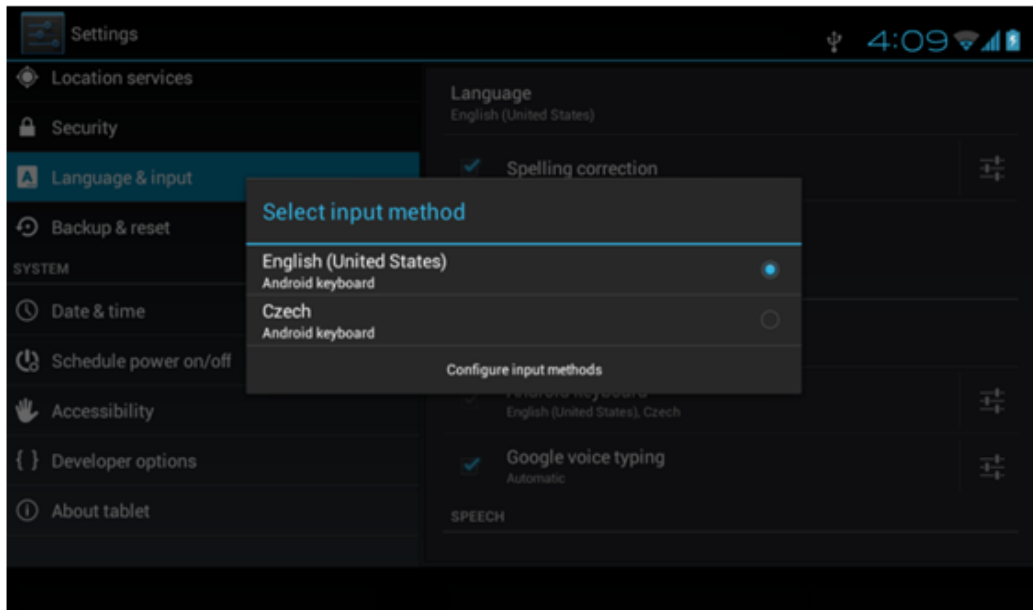


Picture 4.58

## 4.15 Backup and Reset

 Connect WIFI and login your Google account, choose **backup my data**, system will back up your data into Google server.

If you need to recovery factory reset, please click reset, as Picture 4.59, if you need to format NAND, please click **Reset Tablet**.

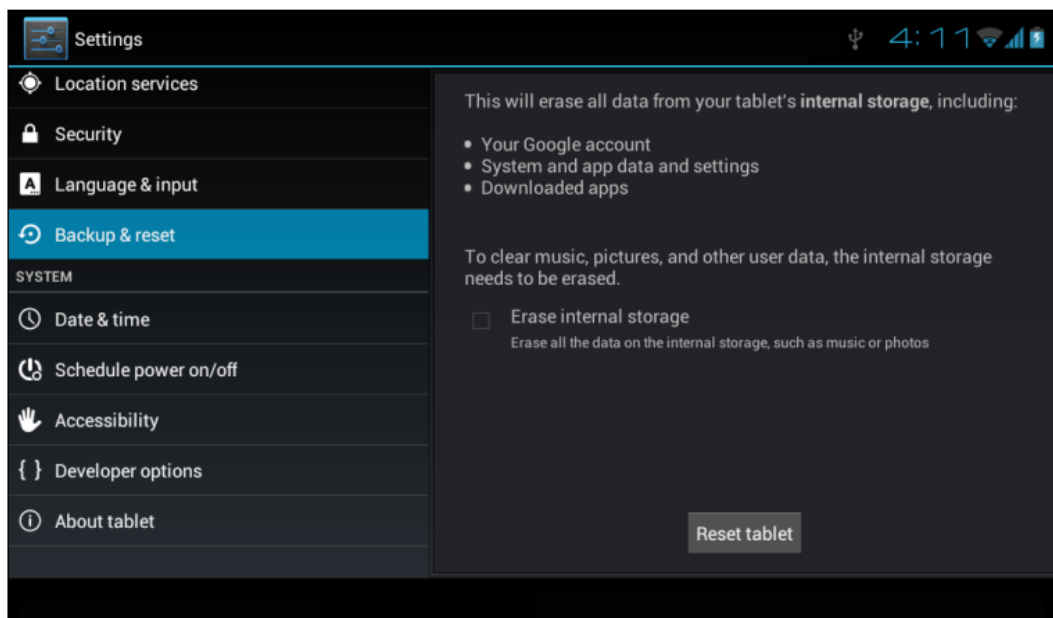


Picture 4.59

## 4.16 Date and Time

 According to the preset, system will automatically apply the date, zone, and time provided by internet.

To set date, time and zone manually

1. Click Setting on Main (home) menu
2. Slide down the screen, then click **date and time**.
3. Turn off “Auto Setting of Date and Time”.
4. Turn off “Auto Setting Zone”.
5. Click Zone Selecting, then choose the zone lists. Slide down the list to view more zones.
6. Click **Date setting**, then click upper or down button to adjust date, month, and year, click **setting** when you finish selection.
7. Click **Time setting**, then click upper or down button to adjust hour and minute, click AM or PM to change morning or afternoon ( there is no such selection when you see 24-hour format). Click **Setting** to finish.
8. Click **24-hour format**, switch between 12-hour or 24-hour format, the time format you choose will be used on the alarm clock.
9. Click date format setting, then choose the time format you want to be displayed on your Bryte Tablet.

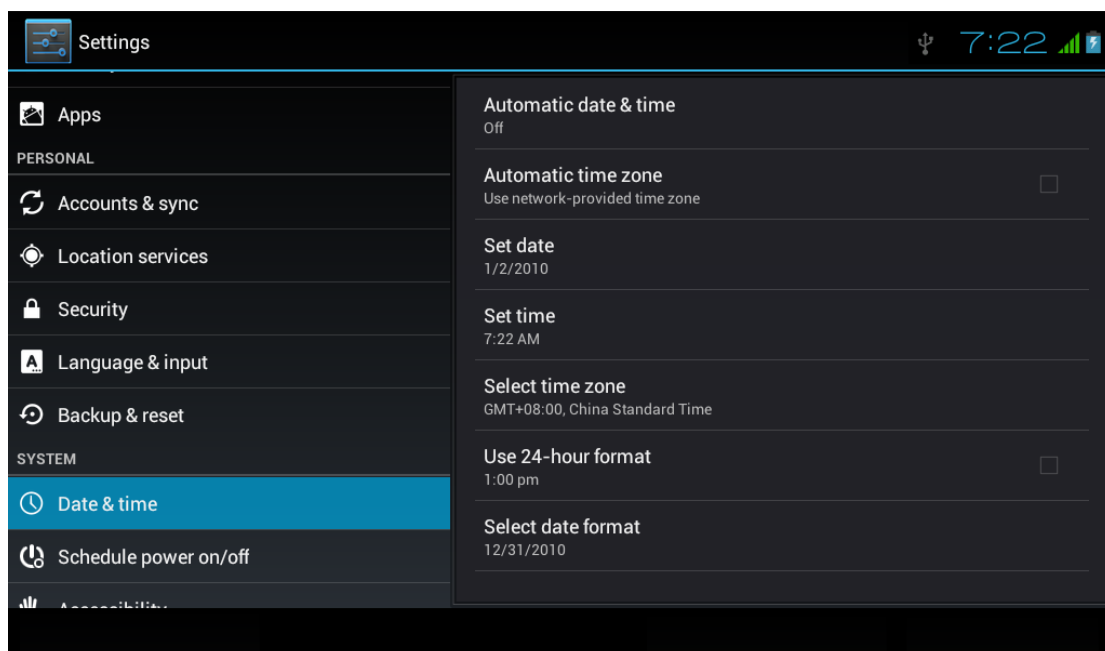


Picture 4.60

Note: If you use the time internet provided, you will not able to set the date, time and time zone.

## 4.17 Fixed-time Startup and Shutdown

 1. Click **Setting** application procedure
2. Click **fixed-time startup and shutdown**.
3. Operate as below Picture 4.61

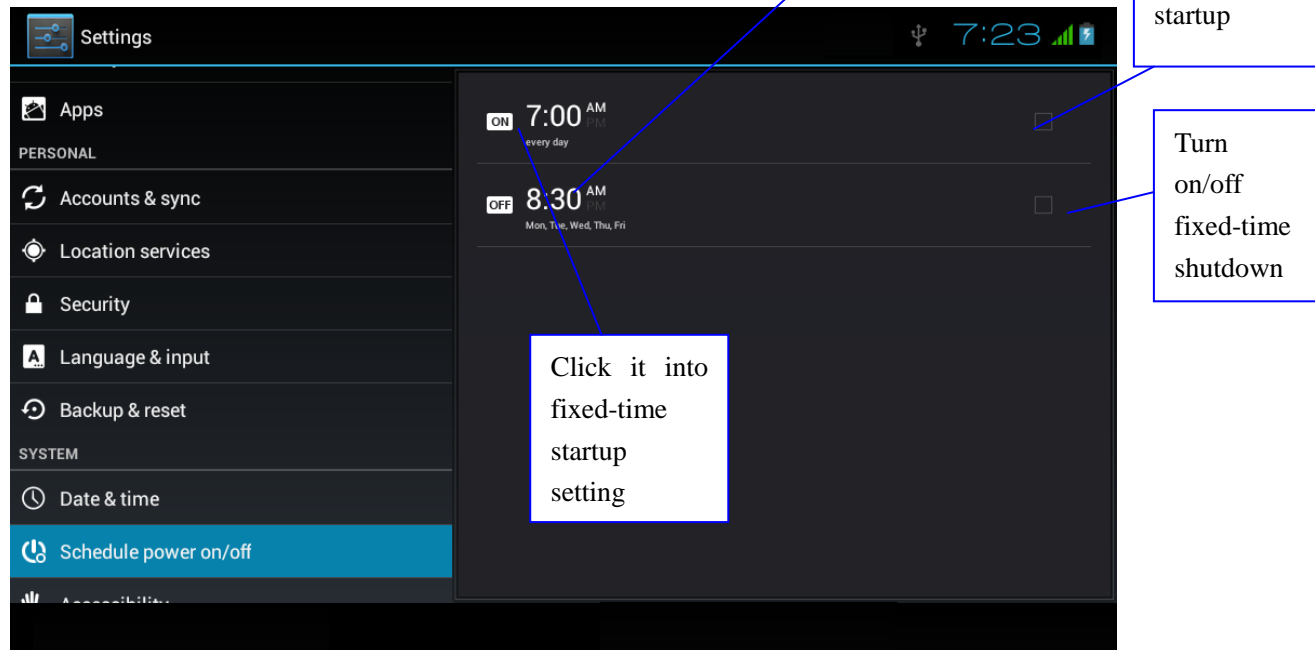

Picture 4.61

## 4.18 Assistance Function

### 4.18-1. Large size

 
Click it to make system font large size

### 4.18-2. Click power button to end calls

When Click call, press “Power” button, call will end but not hold.

### 4.18-3. Touch and hold delay

Click touch and hold delay to increase time, as Picture 4.62

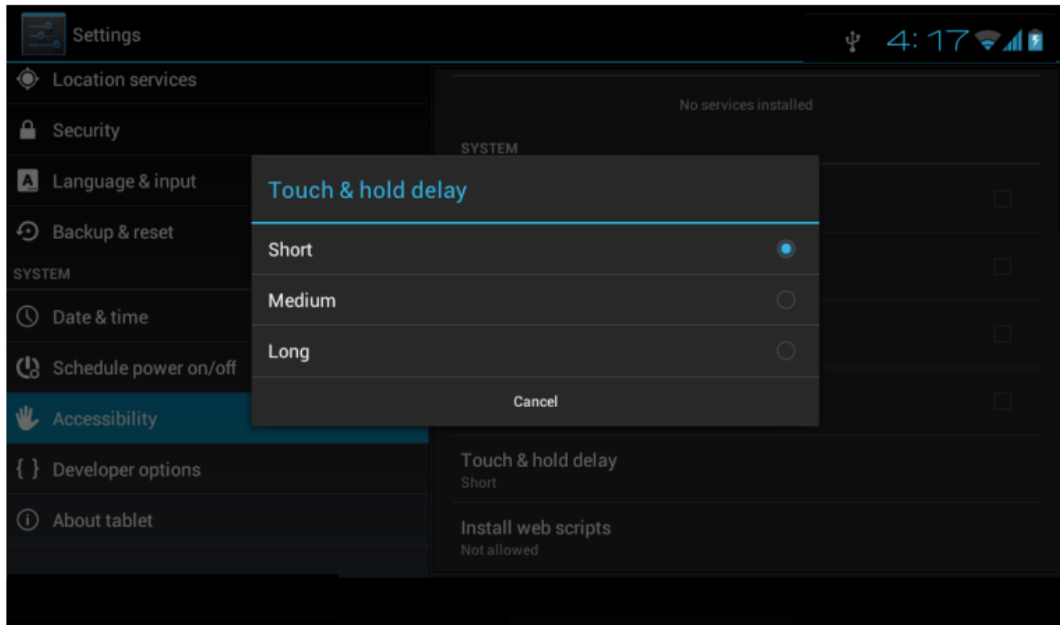

**Picture 4.62**

#### **4.18-4 Install webpage script**

It will allow you install webpage scrip when you open system., but it will increase the risk when you are browsing webpage.

### **4.19 Engineer Selection**

#### **4.19-1 USB adjustment**

After opening USB adjustment, you can use some software to read Bryte Tablet, but when USB adjustment is turned on, USB storage needs to be adjusted manually.

#### **4.19-2 Keep awaken state**

If you switch ON the awaken state, your Bryte Tablet will not automatically go to sleep mode when charging.

#### **4.19-3 Pointer Location**

If you open pointer location, it will display touch vertical and horizontal direction.

#### **4.19-4 Show touches**

If you open display touch screen operation, it will display touch operation on the screen. It is suggested to use with same direction as pointer location.

 
#### **4.19-5 Show screen update**

If you open screen refresh, it will display related area when the area is refreshing.

#### **4.19-6 Show CPU usage**

After open CUP usage, in the right top of your Bryte Tablet will show CPU usage situation as in Picture 4.63



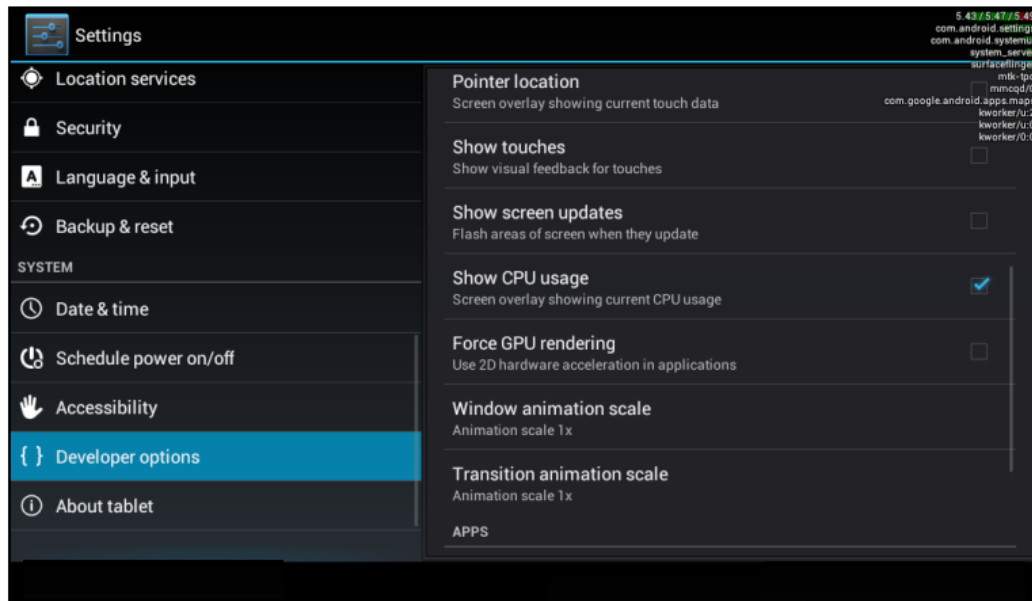

Picture 4.63


## 4.20 About Tablet

 
To Check details of your Bryte Tablet such as Android version, SIM state, IMEI number etc

1. Click **Setting** on Main menu.
2. Click **about tablet**, check **state message**, **model**, **Android version**, **version No** and so on.
3. Click **state message**, check **battery state**, **battery volume**, **SIM state**, **IMEI number**, **IP address**.


# 5 Multi-Media

## 5.1 Music

 Enter into music player: in menu or desktop click music  icon to enter into music player, click the music you want to play, as Picture 5.1:

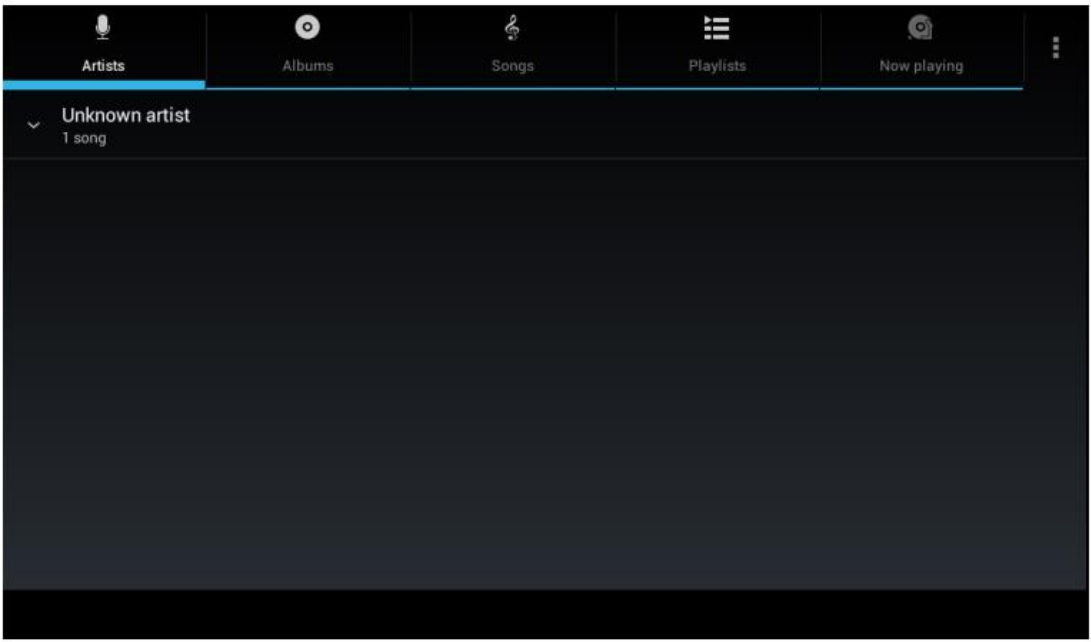


Picture 5.1

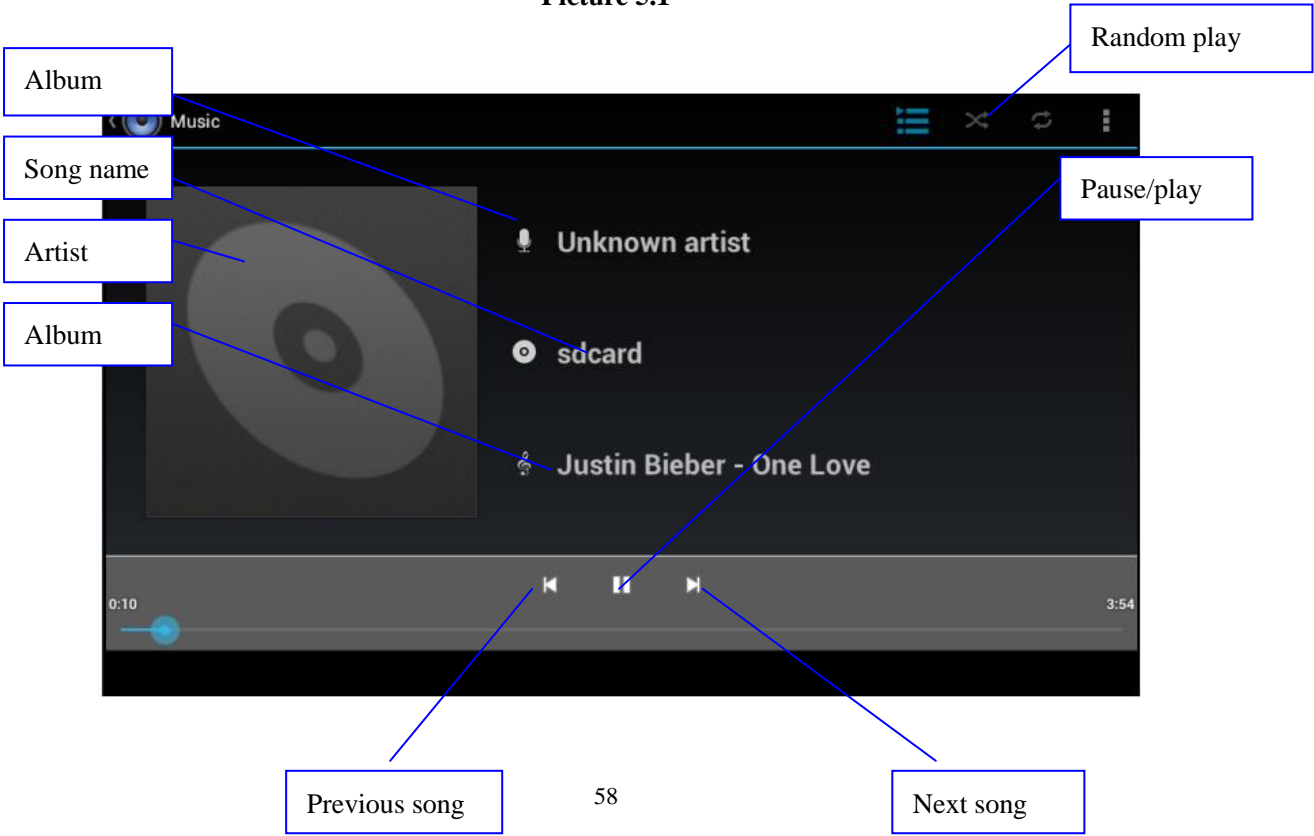 


Picture 5.2

- Drag the progress bar to adjust play progress.
- Operation of music player button as Picture 5.2

## 5.2 Video

 - Enter video player: choose  application in main menu, choose the video you want to play.
- Operation of video player button as Picture 5.3

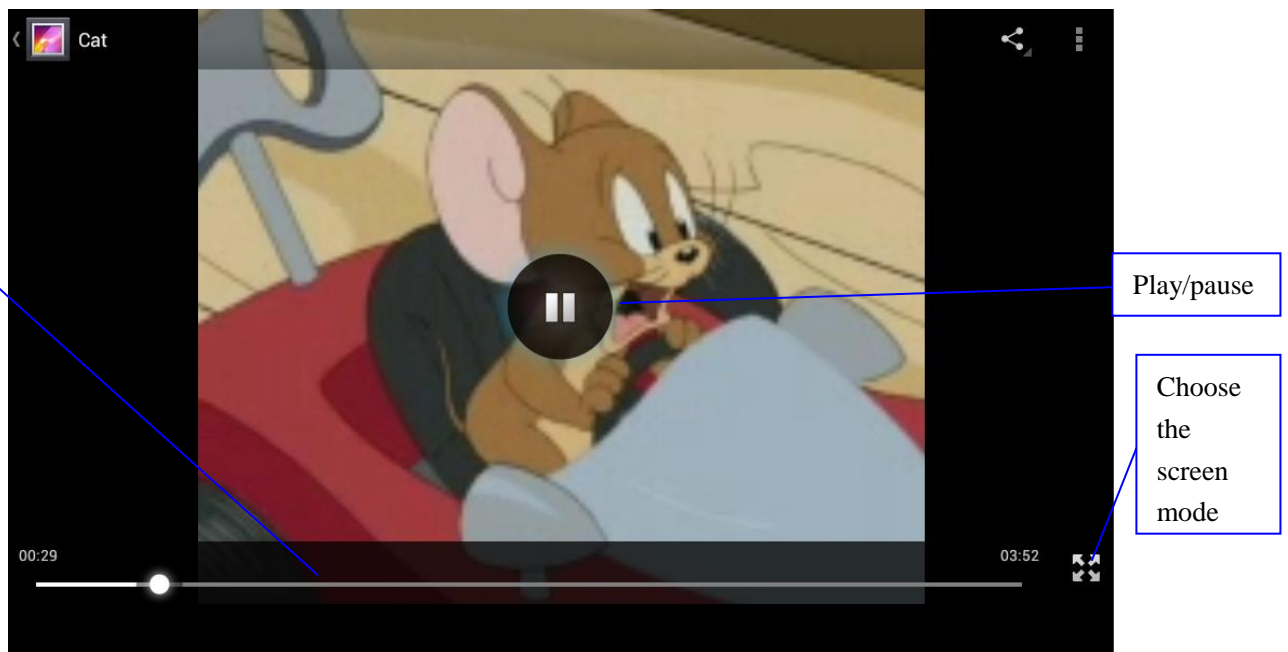

Picture 5.3

## 5.3 Photo Gallery

**Photo gallery** application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

### View pictures

1. Click gallery application in main interface.
2. Enter into gallery, click the folder you want to view.
3. Click the picture you want to view, the system will play it in full screen mode automatically.
4. The pictures can be zoom in and zoom out, put two fingers on the screen, the


separate the fingers(gather up the fingers, the picture will be zoom in) or double click the screen.

Note: when you browse the pictures, slide left or right to view more pictures.

### Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

- **Slide Show**

1. Open a picture, use virtual key to click menu key, display menu selection.
2. Click **slide show**, it will auto loop play(or choose  button in picture folder)


- **Crop**

1. Click **menu** key to display menu selection.
2. Then click crop, click and drag related area to adjust the cropper.
3. Click cropper and drag it inside and outside to adjust the image.
4. After adjust the size you want, click **crop**.
5. If you wish to give up to crop, click **cancel** to return to picture browse.

 
- **Edit**

1. Click **menu** key, display the menu selection.
2. Click **edit**.
3. Adjust the brightness, style, color, antialiasing setting in selection.
4. Click **save**.
5. If you want to give up edit, click **return** key, click **not** to return to picture browse.

## 5.4 Camera


In the main interface or desktop, click camera application procedure , enter into camera

- Operation of camera ,Switch camera: choose **Menu** key, click **switch front/back camera**, as Picture 5.4

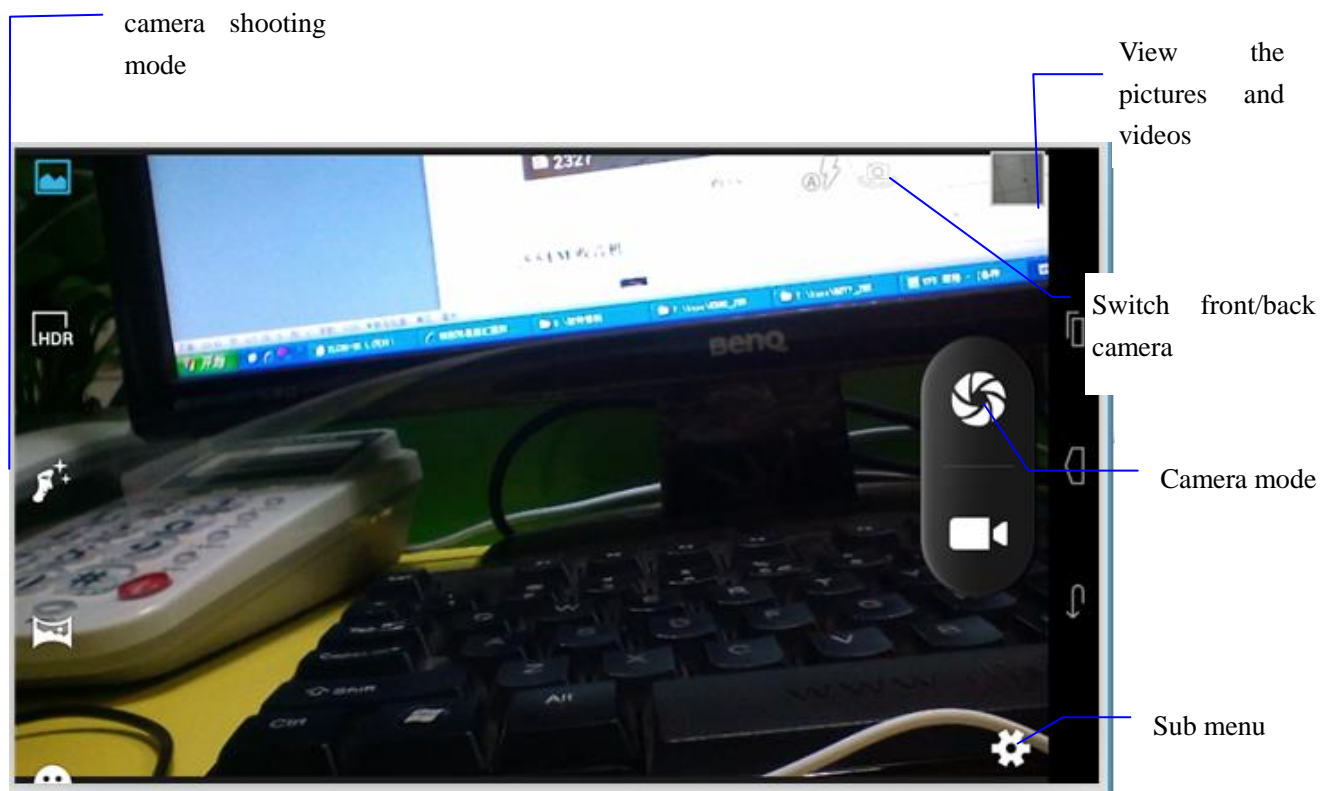


Picture 5.4

## 5.5 FM Radio

 
Click  in the main interface or desktop to enter into FM radio interface:

- Radio button operation instruction as Picture 5.5:
- 

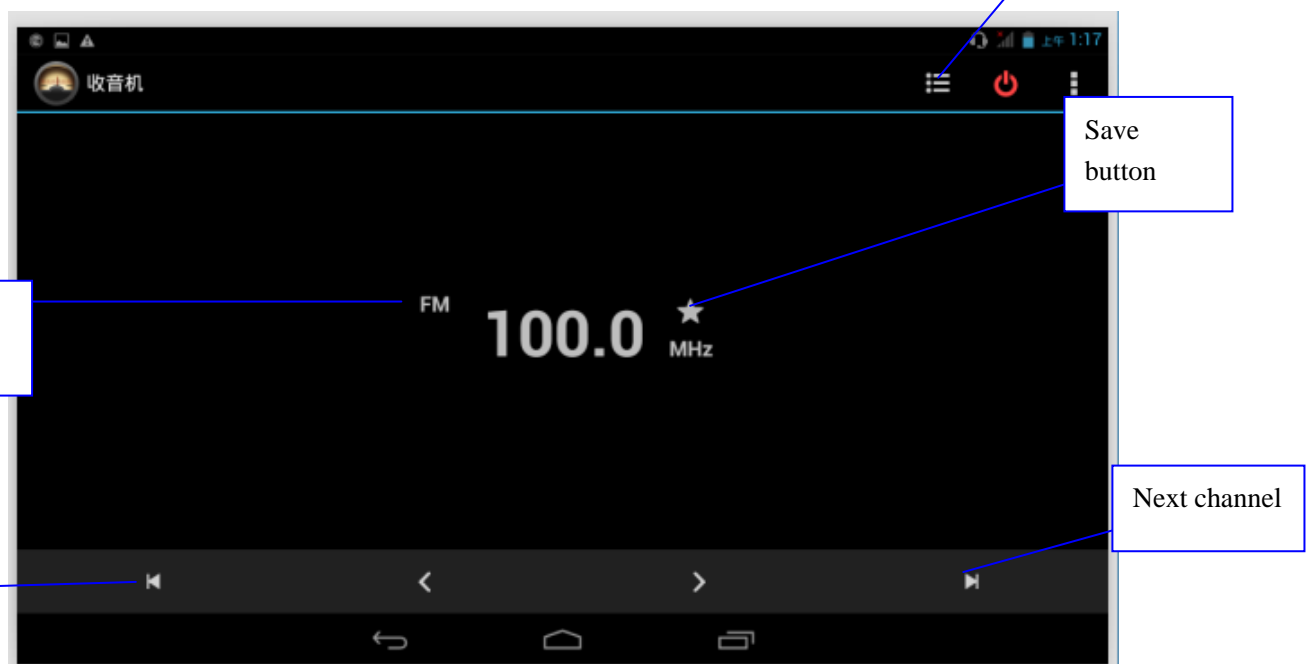


Picture 5.5

 Click search to search FM band, as Picture 5.6

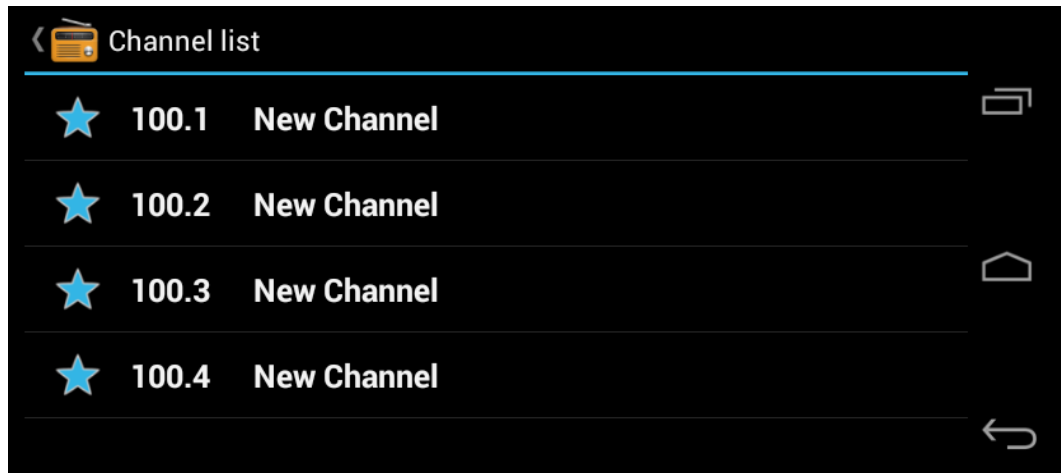

Picture 5.6

- Save channels: Click  button in the main interface to save the channel, and the channel will be saved in channels list.

Note: You need to insert earphone as antenna when using FM radio, if no antenna, your Bryte Tablet can't search any frequency band.

## 6 Communication Function

### 6.1 Phone Calls

- 1 Click **Phone** application procedure
- 2 Operate as Picture 6.1




**Picture 6.1**

## 6.2 Text Message

1 Enter into main menu, choose  application procedure.

 2 Click **“Edit new message”**

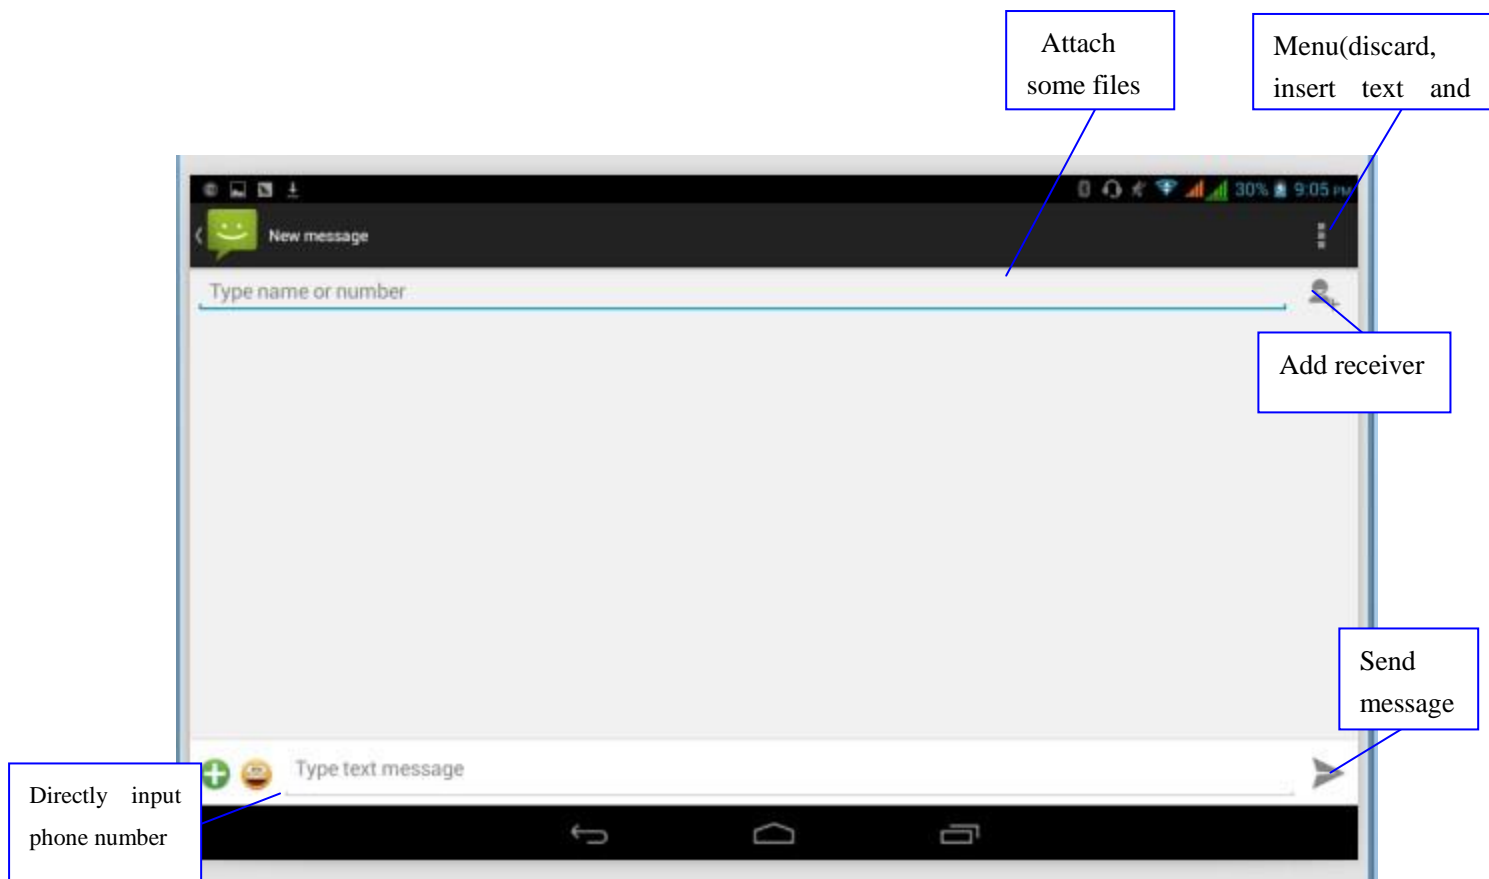


Picture 6.2

## 6.3 Contact List





 Click Contact list in the main interface, enter into the contact list as Picture 6.3

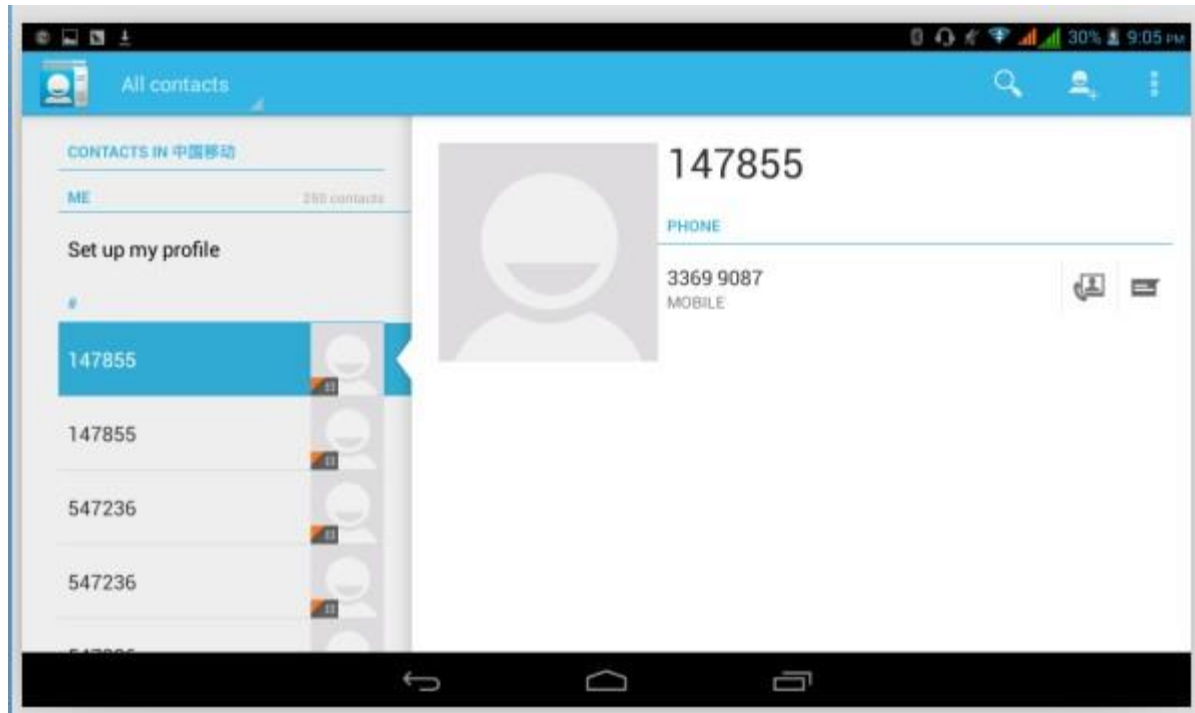




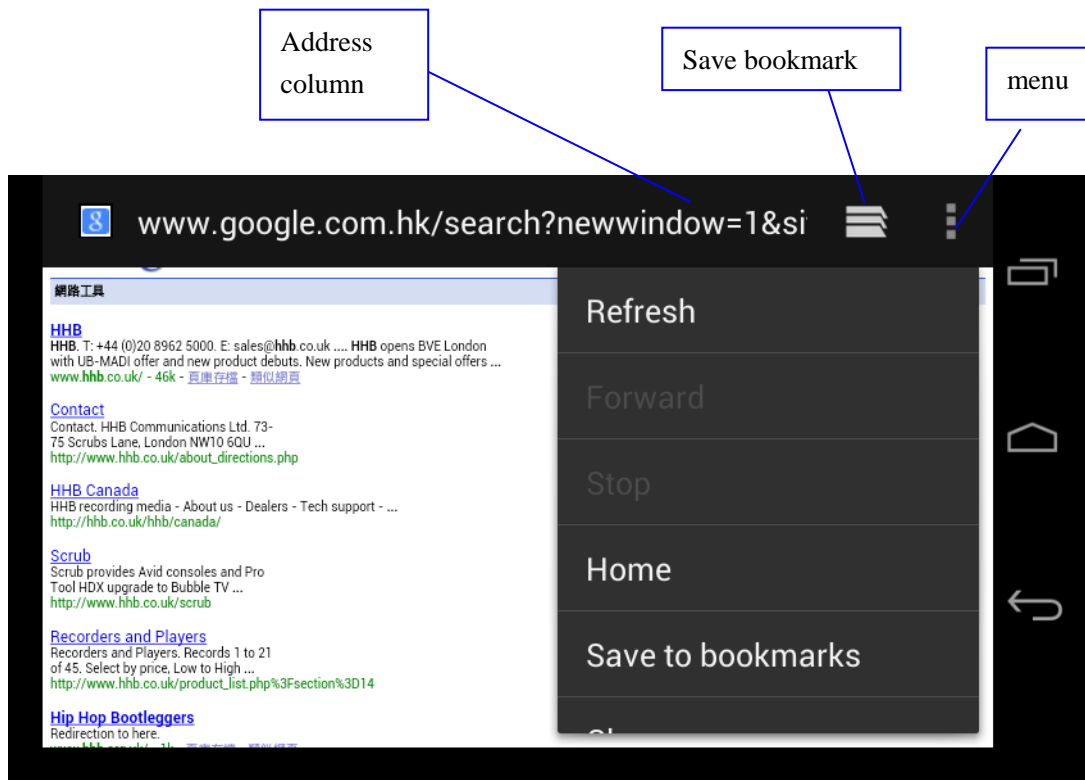 
Picture 6.3

- Search contact: click  button, enter into search function
- Add contact: click  button, enter into add contact interface.

## 7 Internet

### 7.1 Browser

In case of Wi-Fi or mobile internet is connected well (Please refer to Chapter 4.1 for wireless and internet setting), click IE browser  in the main menu or desktop to enter the IE interface, as Picture 7.1



Picture 7.1


Click address bar to input the website url, click start, enter related webpage, then you can browse the website information, as Picture 7.1.2 and you can click the menu you can refresh ,save to bookmarks, share page, bookmarks, history and setting the webpage.



Picture7.1.2


## 7.2 Email

 **Email** application procedure contains email setting guide, you can add the external POP3 OR IMAP email account of normal web email service provider (For instance, Yahoo, Gmail, Hotmail and 163),as Picture 7.2

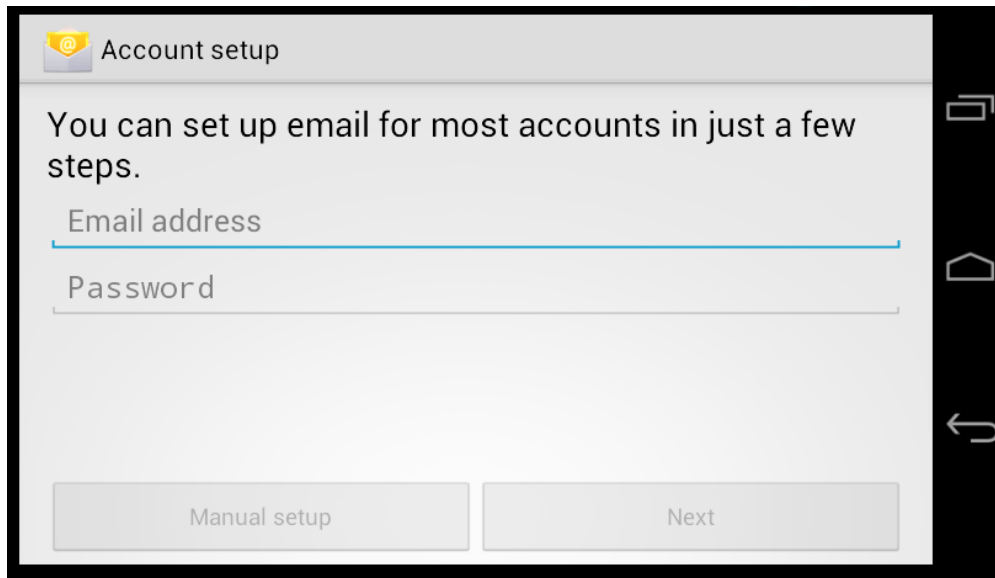

Picture 7.2

### a. Email Setting

1. After you click the sending email icon , you can see the email setting guide, which can help you to set.
2. Input your email address and password.
3. Click “Next step” button, choose your email type is POP3 or IMAP.
4. Click “Next Step” button to check whether the email box servicer can receive or send emails
5. Input the email account and display the email subject, and click **finish**.
6. If the email box is available, you will enter into your mail box automatically.



### b. Delete the email account

 
You can delete POP3 or IMAP email account from your Bryte Tablet.

Click .

1. Enter into your mail box.
2. Press Menu key.
3. Click Account
4. Press the account you want to delete.
5. Click confirms to remove.

### c. Send E-mail

1. Click  to display your mail box.
2. Click the inbox, it will refresh the new emails automatically; click it to read new email.
3. Press Menu key. Menu will popup.
4. Click **Edit**  to enter into new email editing interface.
5. Input the receiver's email address.
6. Input the subject and email content.
7. If you want to add attachment, click menu key, the menu popup.
8. Click "Attach file" (photo, music, video, contacts).
9. Click "send" to send the email out.

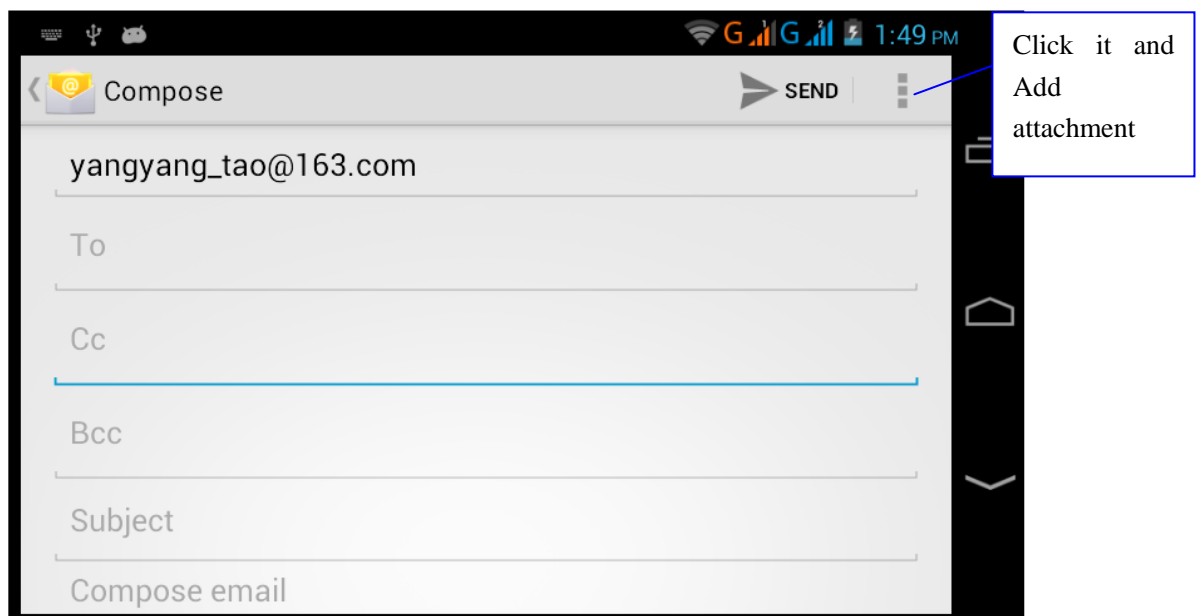

Picture 7.3

## 8 Other Application Procedures

### 8.1 Clock

Click **Clock** procedure, enter into below interface as Picture 9.1.

There are clock, picture, music and homepage buttons.




Picture 9.1

### 8.2 Calculator



 
1. Click **Calculator**.
2. Enter into the basic board of calculator.
3. Soft touch the numbers or operator in calculator to calculate.

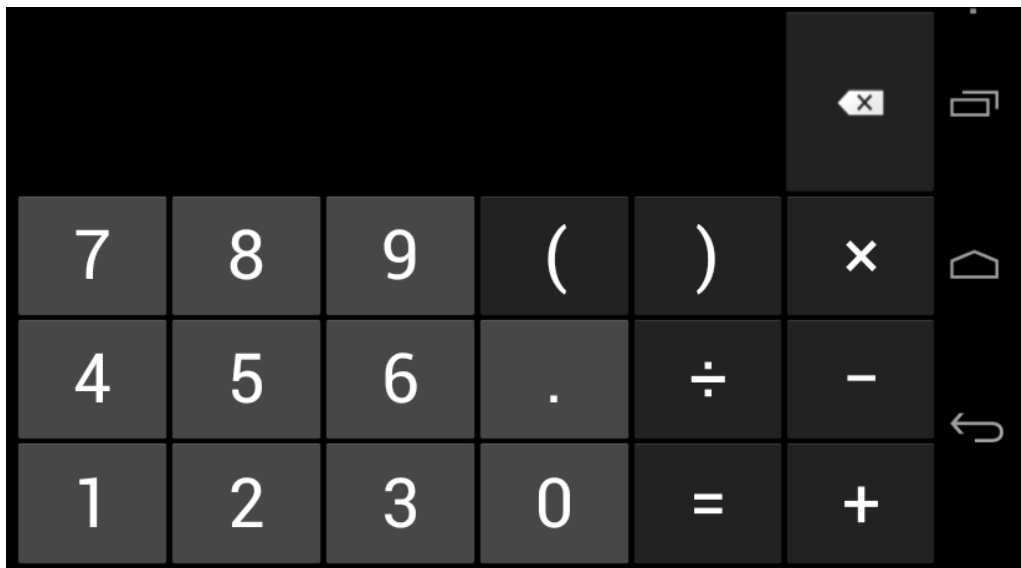


Picture 9.2

## 8.3 File Manager

 File manager will copy, cut, delete, rename the documents or the folder in the TF card, it also will share the files, install apps etc.


In the main menu or desktop, click the document manager icon  to enter into documents manager.

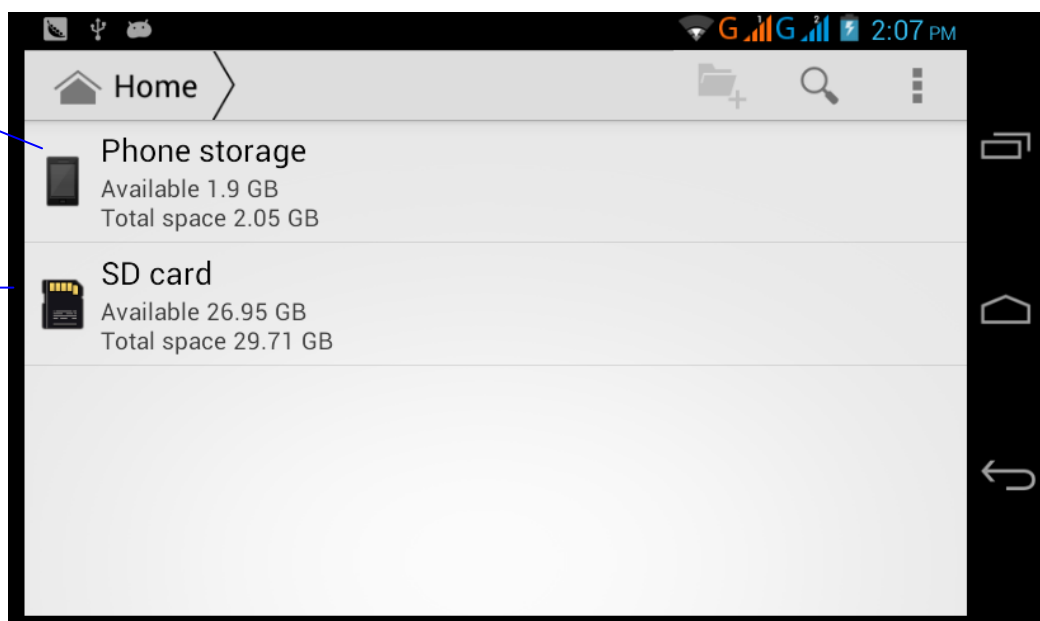



Picture 9.3

 
- Copy, cut, delete, rename the files and folder: choose the file or folder, long press the file or

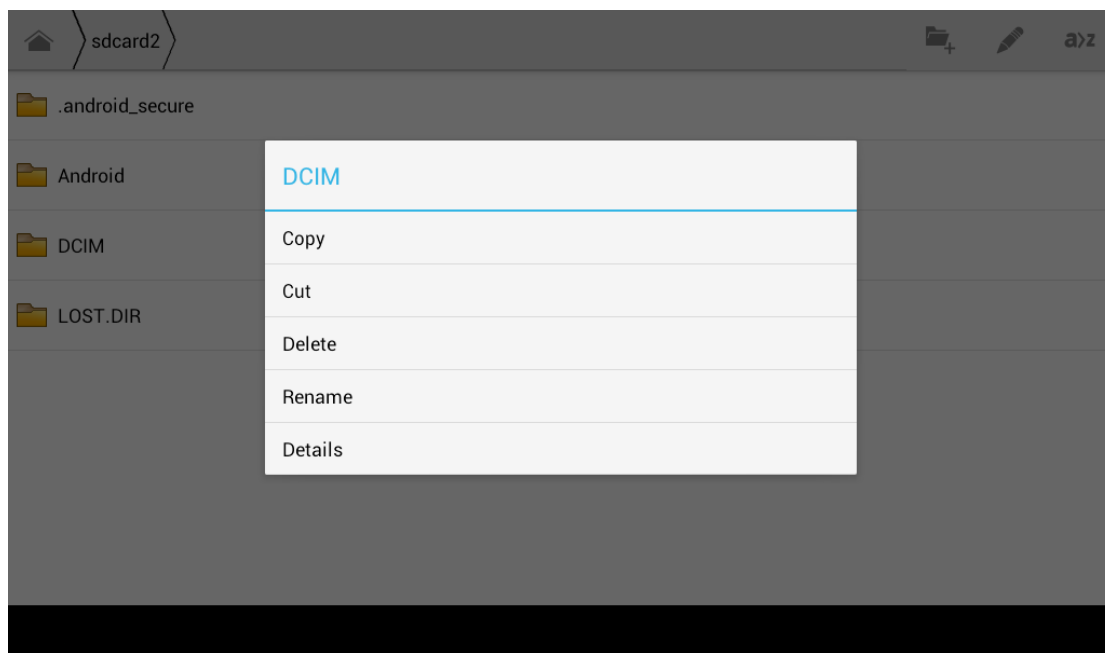folder to enter into the interface as Picture 9.4, you can operate the file or folder.




**Picture 9.4**

 paste the copy or cut file: choose the file you want to paste, choose right top  icon to enter into Picture 9.5, choose right top  icon to enter into Picture 9.6

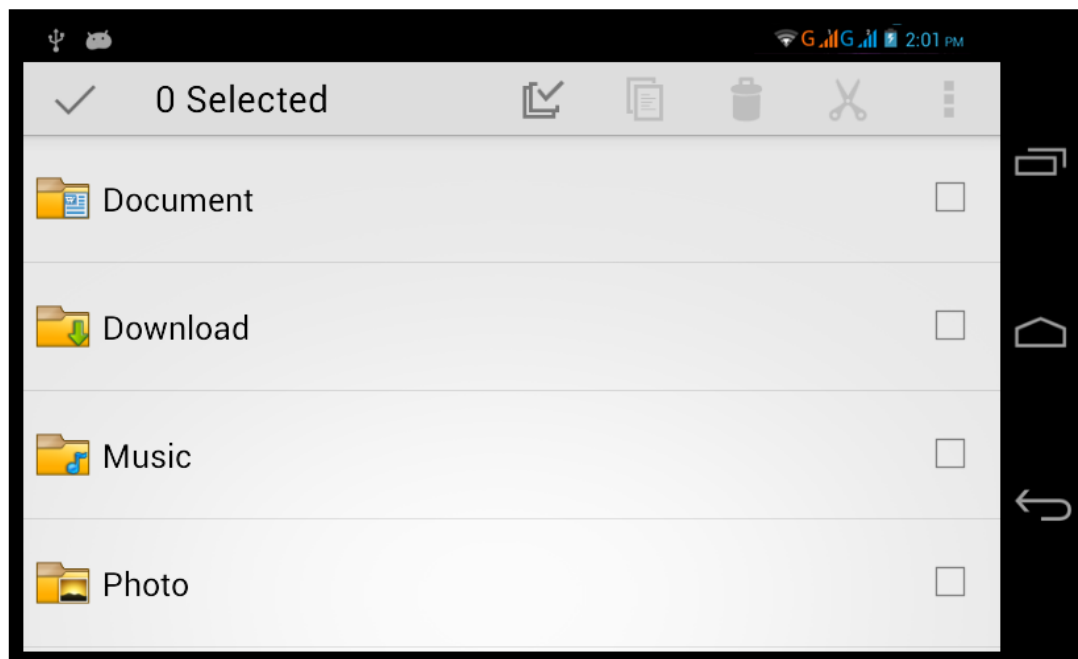


**Picture 9.5**

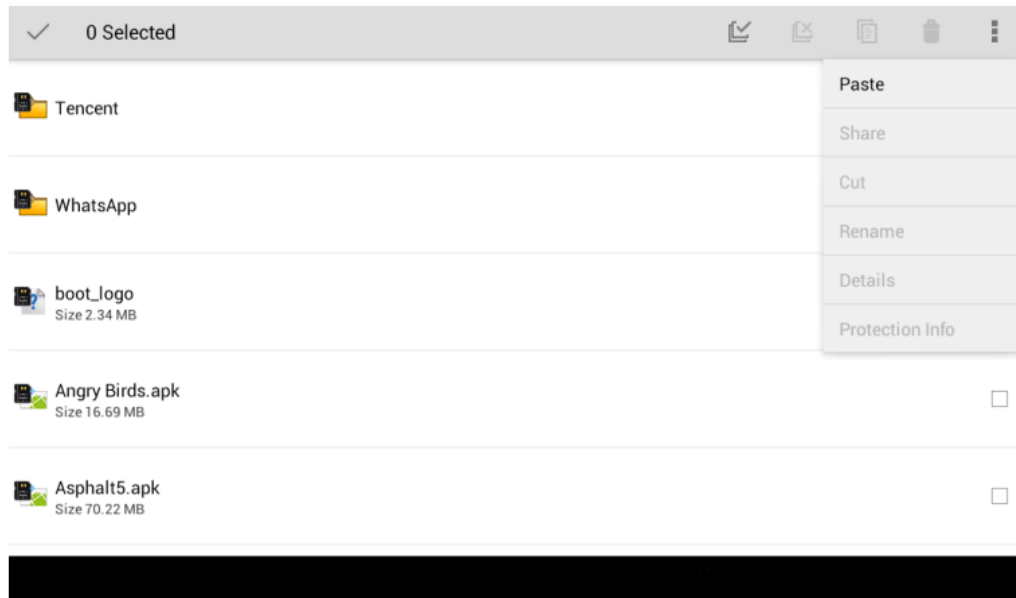 

**Picture 9.6**

 
C. Share file: choose any file, long press it, it will popup “share”, choose the share way you want in the list

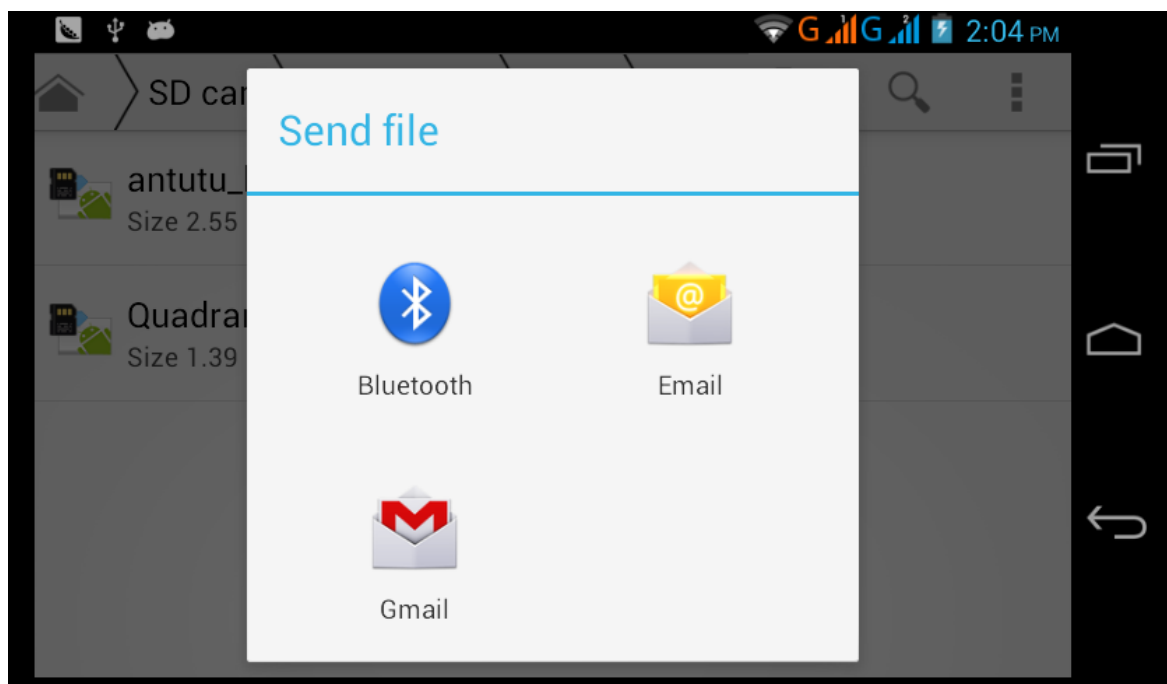


**Picture 9.7**




install apps file: Choose the file suffixed app in the file manager, you can install the third part software as reminder.



 
e、Build new folder: Choose the menu you want to build the file, click  icon in right top, choose new folder, you can build new folder as reminder.

## 8.4 Recorder

In the main interface or desktop, click recorder icon  to enter into record interface,

click record key  to start record. Click Stop key  to stop recording. Click Play key  to play the recorded sound. The system will auto remind you to use or abandon this record, please choose it manually.

Play the record: choose the video player to play the recorded sound, choose the recorded sound in the source manager, and click it to play.

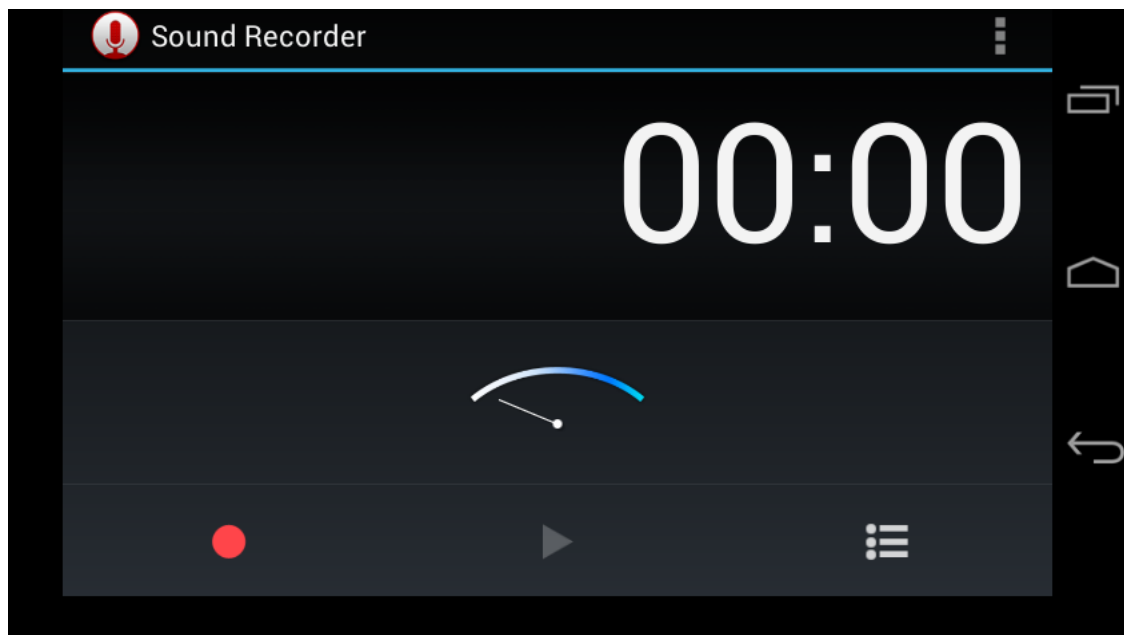

Picture 9.8

# 9 Installation of Procedures

## 9.1 Installation

### Install the third party application procedure

1. Click “file manager” application procedure; choose the application procedure you need to install.
2. Hold the application procedure you need to install.
3. It popup **install**, click **install app**.
4. Finish the installation as guide, it will operate.

Note: The third party procedure searched from internet to use on the system are all suffixed with .app.

## 9.2 Uninstall

### Uninstall application procedure

1. Click setting icon in main interface.
2. Click **manage application procedure**, list all the application procedures installed in the system.
3. Click the APK you want to uninstall, click **uninstall**.
4. Click **confirm** to finish uninstallation.

Skill: The procedure manager installed by system has many convenient methods to uninstall after opening procedure manager, click uninstall, it will list all the application procedures installed by system.

# 10 Troubles Shooting

## 1. The first startup of Bryte Tablet is slow

After your Bryte Tablet is upgraded, the first startup, the system need to install the pre-installed application software, this may take about 2-3 minutes, the startup afterwards will be much quicker.

## 2. Bryte Tablet can't connect Wi-Fi

- Make sure the wireless router for internet service is working properly.
- Ensure your Bryte Tablet and wireless router are at reasonable distance, and no wall or other barrier between them.
- Ensure that the user name and password are both correct.

## 3. Bryte Tablet feels hot

When many application procedures are used in at same time, or the brightness of screen is too high or Tablet is being charged. Your Bryte Tablet may feel hot sometime, it is normal.

## 4. Email can't be set or Registration of application procedure.

- Ensure your internet is well connected.
- Make sure your email setting is correctly configured.
- Keep your system time and local time are consistent.

## 5. The system is abnormal and can't work.

When you install some third party applications with bugs, it may cause your tablet to work abnormally. You can Reset or Format the system pressing the **Reset key**(next to power port) to reset the system.

**Make sure you back up important files from time to time.**

## 6. The webpage can't be opened

- Please keep the router and Bryte Tablet at effective range.
- Restart WIFI and try again.

## 7. Bryte Tablet works terribly slow sometimes

This may be due to too many applications running concurrently, It is normal phenomenon. Please turn off some application you don't need in the **advanced task management**, or uninstall some third party application to release more system resource.

# 11 About Bryte Warranty

## A. GENERAL

Your Bryte Product from Technology Professionals Limited is a sophisticated electronic device, we strongly encourage you to read and follow its user guide. Please also note that your Product may contain parts, which can be damaged if not handled very carefully.

- During the warranty period, Bryte or a Technology Professionals authorized service center will remedy defects in materials and workmanship that result in Product failure during normal usage free of charge in a reasonable time by either repairing or replacing the Product.
- In case of defect or damages caused user during normal or abnormal use of the device, or as stated in Section C of this article (such as Broken Screen, Damaged Charging port etc) Technology Professionals Limited will carry out the repair free of charge but the user will bear the cost of the new part(s).
- Where there is established factory defect of the device, Technology Professionals Limited will rectify such defect or replace the device with same or similar model as may be required.

## B. WARRANTY PERIOD

The warranty period starts when the Product is sold to an end-user for the first time. This can be evidenced by the proof of purchase issued by the first retailer. The main device is covered by a 13-Month Manufacturer's Warranty.

No repair or replacement will renew or extend the warranty periods.

## C. WHAT IS NOT COVERED

Technology Professionals Limited does not provide a warranty for the following:

1. User guides;
2. Any third party software, settings, content, data, or links installed or downloaded onto your Product at any time;
3. Third party services or enabling
4. Normal wear and tear;
5. Reduced charging capacity of the battery, which is a result of the natural end of life process of batteries;
6. Defects or damage caused by:
  - Misuse
  - Exposure to abnormal conditions, improper storage, exposure to moisture or dampness
  - Not using your Product in accordance with the user guide
  - Any products combined with your Product by a third party, or
  - Other acts beyond our reasonable control;
7. Damage caused by hacking, cracking, viruses, or other malware, or by unauthorized access to

services, accounts, computer systems or networks;

8. Pixel defects in your Product's display that are within the scope of industry standards.

9. Loss or corruption of, or damage to, data or the recreation or transfer thereof even if such loss was a result of a defect in the Product.

#### **D. WARRANTY INVALIDATION**

This Warranty is not valid if:

- Your Device has been (a) opened, modified, or repaired without Technology Professionals' authorization, or  
(b) repaired with unauthorized spare parts. Unauthorized repair or replacement of any Parts in the Product will, void this Warranty and any of your rights set forth herein.
- Your Product has been exposed to moisture, to dampness or to extreme thermal or environmental conditions or to rapid changes in such conditions, to corrosion, to oxidation, to spillage of food or liquid or to influence from chemical products.
- The Operating System (Platform, Model, Version) modified or upgraded without Technology Professionals' authorization.
- Rooting, Flashing or Modification of System Files of your device.

#### **OTHER IMPORTANT NOTICES**

An independent operator provides the SIM card and the cellular or other network or system on which your device operates. Therefore, Technology Professionals Limited does not assume any responsibility for the operation, availability, coverage, services, or range of the cellular or other networks or systems.

All parts of your Device that Technology Professionals has replaced become Technology Professionals' property. When repairing or replacing your Product, we may use new or re-conditioned parts or products.

For further information and enquires please visit our website [www.brytestore.com](http://www.brytestore.com), also stay connected via social media.

Like us on Facebook [www.facebook.com/brytestore](http://www.facebook.com/brytestore)

Follow us on Twitter <http://twitter.com/brytestore>

Add us to your circle at [Google Plus](#)

**Technology Professionals Limited**

**15/17 Abimbola Way , Isolo Industrial Estate**

**Banex Building Opp Johnson Wax**

**off Oshodi Apapa Exp Way. Lagos, Nigeria**

**234-803 474 4441, 234-1-4534880**

**[info@brytestore.com](mailto:info@brytestore.com)**