

Setting Up Remote Control Functions (CZ-RWSK1U)





 
The functions of the wireless remote can be set on site.

(These settings are saved in nonvolatile memory in the remote controller, so even when its batteries are changed, the settings do not revert to the defaults.)

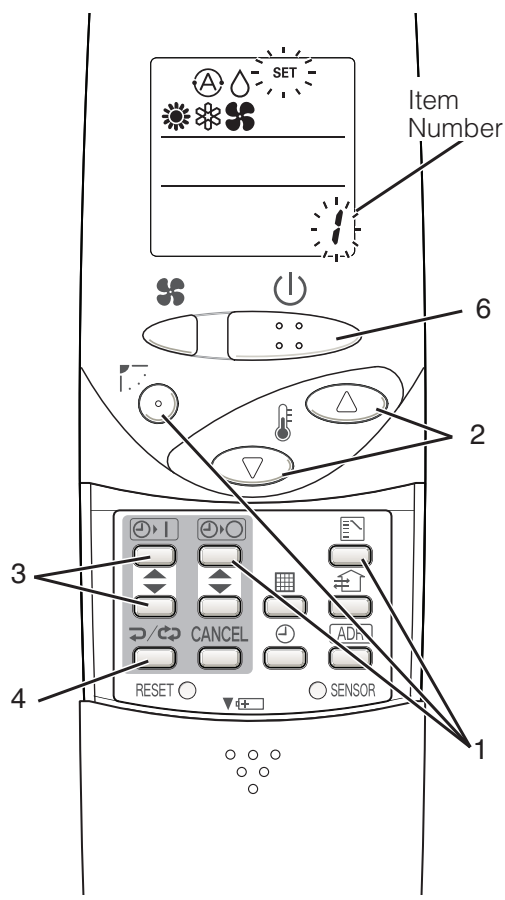
<Note> The operation of the air conditioner can be impacted, depending on the settings made, so only service personnel should make the settings.


 




 



 



 


Furthermore, making changes to these settings may cause actual operation to deviate from what is printed in the Operating Instructions, so be sure to explain this to the customer fully.

Making Settings (Do with unit stopped.)

1. Holding down the Swing/Wind Direction + OFF Timer  + Mode Select buttons at the same time for 4 or more seconds makes the display switch to the setting screen. (See Diagram Below.)
2. Use the Temperature setting buttons,  /  , to select the number of the item to be set.
3. Use the ON Timer buttons,  /  , to change settings.
4. The settings are saved with the Once/Every Day button. When this is done, the settings display of the LCD changes from blinking to light.
5. If other settings are to be changed as well, repeat steps 2 to 4.
6. When all settings have been made, press the Start/Stop button.

Example: Operation mode setting screen



Item Number & Setting Item	Setting Content	Setting when Shipped
1 Operation Mode	 →  →  →  →  →  →  → 	
2 Flap Display	 →  →  → (No Display) (Note 1)	
3 Select Fan Speed	 →  →  → (No Display)	
4 Display of Set Temperature	°F → Setting Off (Note 2) → °C	°F
5 Time Display	AM/PM → 24 Hour (No Display)	AM/PM
6 Ventilation Fan ON/OFF	Off (No Display) → On	OFF (Note 3)
7 Cool temp Max	41 – 95°F	86°F
8 Cool temp Min	41 – 95°F	64°F
9 Heat temp Max	41 – 95°F	78°F (Note 4)
10 Heat temp Min	41 – 95°F	60°F
11 Dry temp Max	41 – 95°F	86°F
12 Dry temp Min	41 – 95°F	64°F
13 Auto temp Max	41 – 95°F	80°F
14 Auto temp Min	41 – 95°F	62°F
16 Address Setting Max Value	00 (ALL only) → 01 – 31	06 (Note 5)
17 Heat temp Max ON/OFF	JP (Heater Max Temp Change Off) → EP (On)	JP

Note 1 While the unit is in the swinging mode (Swing/Wind Direction), the flap cannot be stopped in a desired position.

Note 2 When Setting OFF is selected, "°C" is displayed on the LCD screen.

Note 3 You can toggle between ON and OFF by pressing Ventilation for 4 seconds or more.

Note 4 If the Heater Max ON/OFF setting is not changed to EP (ON), the setting change will not be reflected.

Note 5 This is the number of addresses that can be set in the address change mode. Do not set it to 07 or above.